

Akuvox Smart
Intercom



C315 Series Indoor Monitor User Manual

About This Manual

Thank you for choosing Akuvox's C315 Series indoor monitor. This manual is intended for end users, who need to use and configure the indoor monitor. It provides an overview of the most essential functions and features of the product. The document is suitable for 115.1.2.2xx version. Please visit our forum or consult technical support for any new information or latest firmware.

Note: Please refer to universal abbreviation form in the end of the document when you meet any abbreviation letter in the whole user manual.

FCC Caution:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

For headset, this part has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal.

For baseband, this equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment .This equipment should be installed and operated with minimum distance 20cm between the radiator& your body.

Content

1. Product overview.....	1
1.1. Product Description.....	1
1.2. Power connection.....	2
2. Daily use.....	3
2.1. Making a call.....	3
2.1.1. Calling from digital keypad.....	3
2.1.2. Calling from phonebook.....	4
2.1.3. Calling from call log.....	5
2.2. Receiving a call.....	6
2.2.1. Receiving a incoming call.....	6
2.2.2. During the session.....	6
2.3. Live view.....	7
2.3.1. Checking the monitor.....	8
2.4. Message(s).....	9
2.4.1. Text Message.....	9
2.4.2. Creating a message.....	10
2.5. Arming.....	11

2.5.1. Arming Mode.....	11
2.5.2. Disarm Code.....	12
2.5.3. Alarm Log.....	13
2.5.4. Status.....	14

1. Product overview

1.1. Product Description

C315X is a Android-based IP indoor monitor with a touch screen. It incorporates audio communications, access control sensor arming and obtaining video stream from door phone or IP camera.

Its finely-tuned Android OS allows for better suit the habit of usage of local people. Powered by it, C315X multiple ports, such as I/O and Bell ports, can be used to easily integrate external Arming systems, such as bell controller and fire alarm detector, helping create a holistic control of home safety and access control and giving occupants a great sense of security.

It is applicable to multi-storey residential buildings or villas.

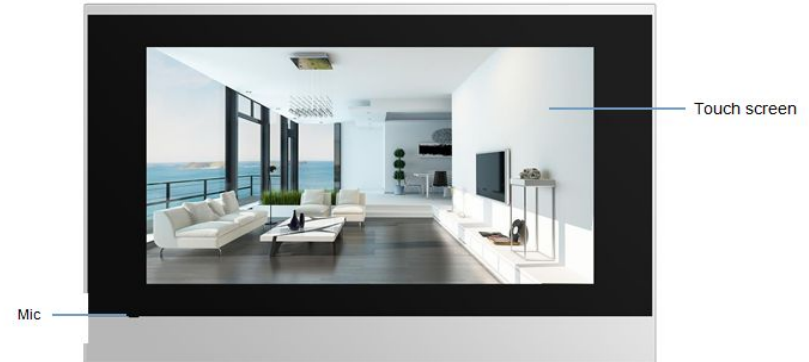


Figure 1.1-1 C315X

1.2. Power connection

Ethernet(POE): Ethernet(POE) connector which can provide both power and network connection.

RJ45(PON): This is a special connector to provide power and network for E10 series.

12V/GND: External power supply terminal if POE is not available.

RS485-A/B: RS485 terminal.

Bell/GND: Connect a simple two-wire door bell.

RelayA/B (NO/COM/NC): Relay control terminal.

IO1-IO8/GND: Connect with different alarm detector for 8 security zones.

Note: The general indoor monitor interface diagram is only for reference.

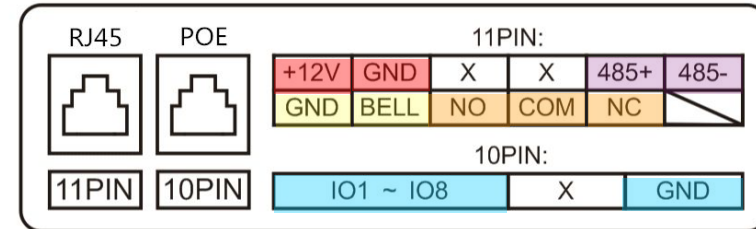


Figure 1.2-1 C315X interface

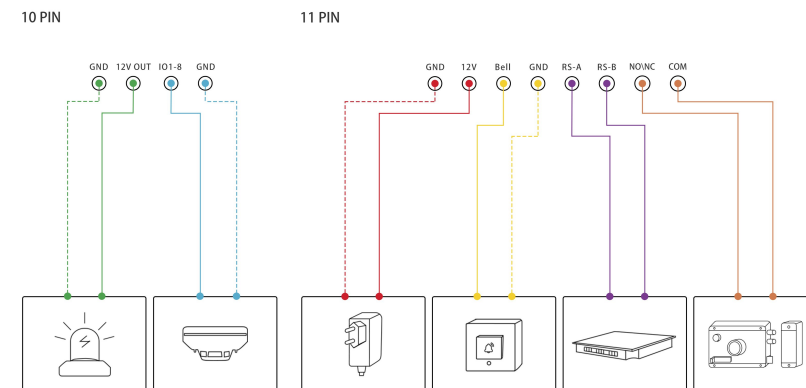


Figure 1.2-2 General interface

2. Daily use

2.1. Making a call

There are two ways to make a call from the indoor monitor to other units. Call from **Intercom**, **Contact** or **Call log**.

2.1.1. Calling from digital keypad

Press **Intercom** in home page to enter the dial interface to dial the number directly.

- Choose a suitable **phone account** ① for the outgoing call.

Note: C315X support 2 accounts. Please refer to chapter 3.6.2 for more account settings.

- Enter the number to call on the digital keypad ②.
- Tap the dial key, users can choose **Audio Call** or **Video Call** ③④ to dial out.

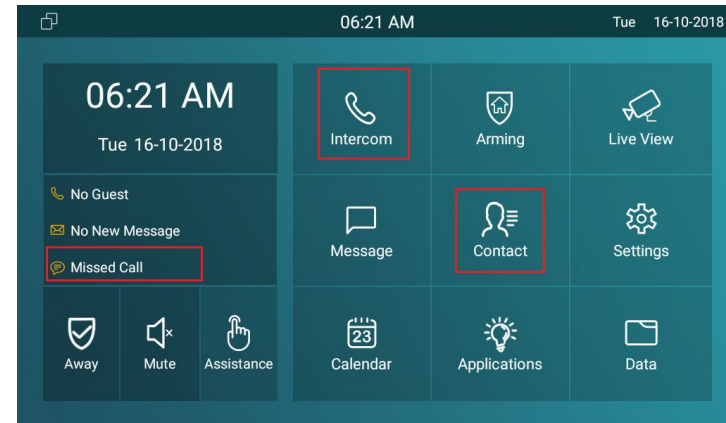


Figure 2.1-1 Call method

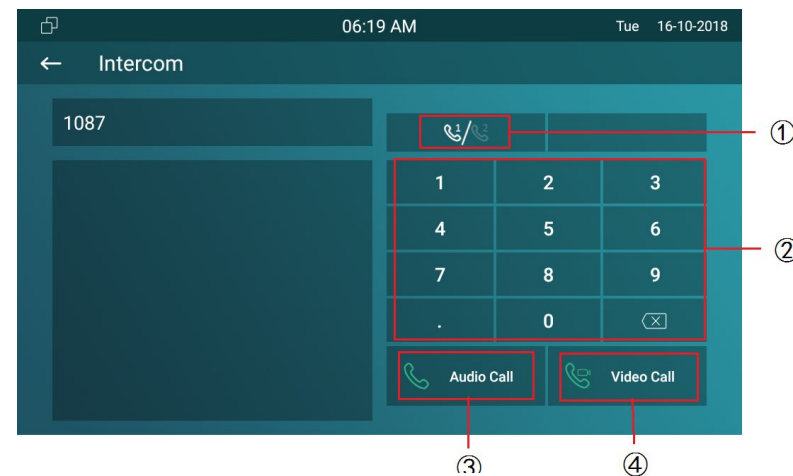


Figure 2.1.1-1 Dial number

2.1.2. Calling from phonebook

Enter the contact interface to make a call.

- C315X supports **fuzzy matching query** ①. To search the list by number or alphabet.
- Scroll up or down the pre-imported **contact list** ② to choose the contact you want to call.
- Select the right **phone number** ③ from the contact.
- Click **Audio** or **Video mode** ④ ⑤ to call out.


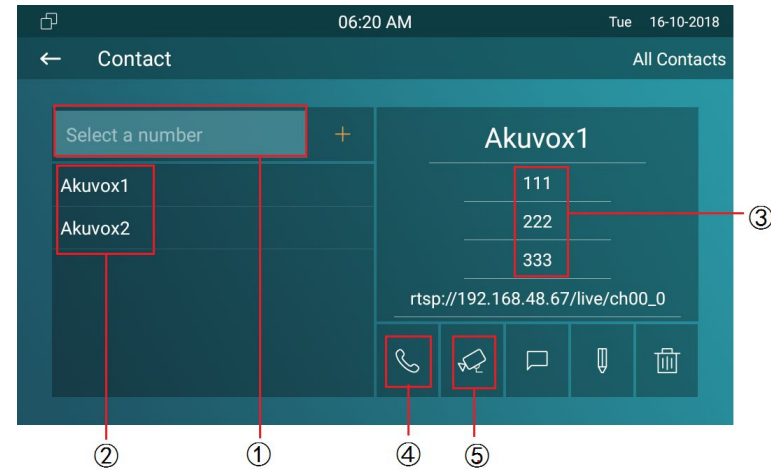


Figure 2.1.1-1 Phonebook


2.1.3. Calling from call log

- Press the **Miss Call note** ① to enter the call log interface.
- You can also enter **Intercom** interface to check **call log** ②. Then choose audio or video call to dial out.

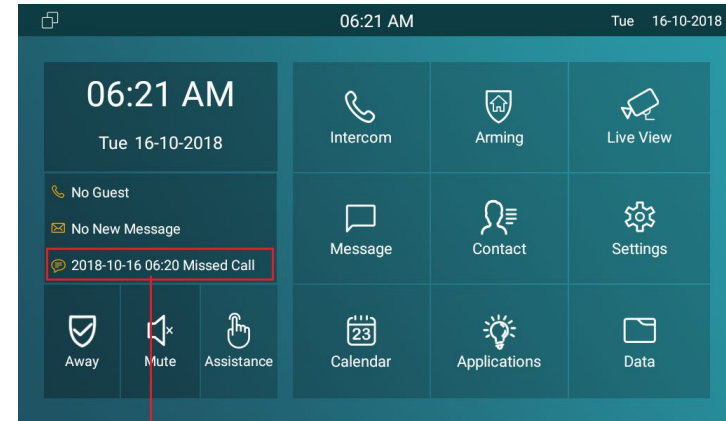

①

Figure 2.1.3-1 Miss call note

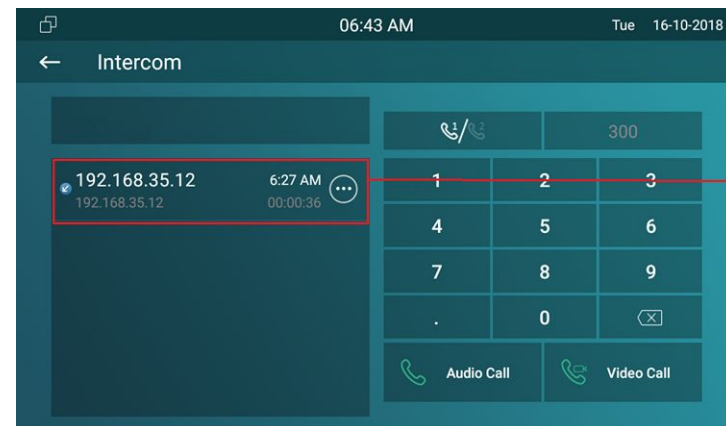

②

Figure 2.1.3-2 Miss log

2.2. Receiving a call

2.2.1. Receiving a incoming call

There will be a video preview in this window, when you receive a incoming call.

- Press **Video** or **Audio** key to pick up the incoming call.
- Press **Cancel** to reject the incoming call.
- Press **+** or **-** to adjust the ring tone volume in the right side.

2.2.2. During the session

The call video will be showed in this window.

- Press **Mute** key to mute the current call.
- Tap **Capture** to capture the screenshot of the visitor.
- Press **Unlock** to unlock the corresponding door phone.
- Tap **Switch** to change the video or audio call.
- Press **Cancel** icon to hang up the current call.



Figure 2.2.1-1 Receive call



Figure2.2.1-1 During session

2.3. Live view

Live view feature is used to monitor the real-time video from the IPC or door phone anytime. Click **Live View** in home page.

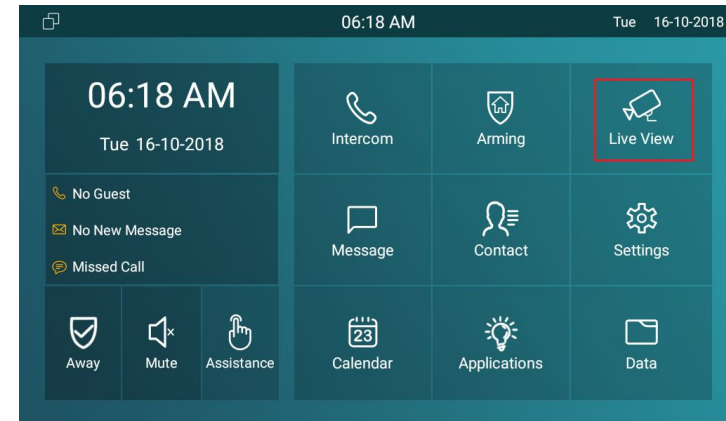


Figure 2.3-1 Live view

2.3.1. Checking the monitor

Choose the outdoor devices from the list .

The real-time video from the door phone or IPC will show in the screen .

- Press **Unlock** to open the door which connected with door phone.
- Press **Capture** to take a photo from the outdoor devices.
- Press **Cancel** to exit the monitor.
- Press **List button** in the bottom right corner to switch the different outdoor videos.
- Press the **Monitor list** in the right side to choose the outdoor videos.

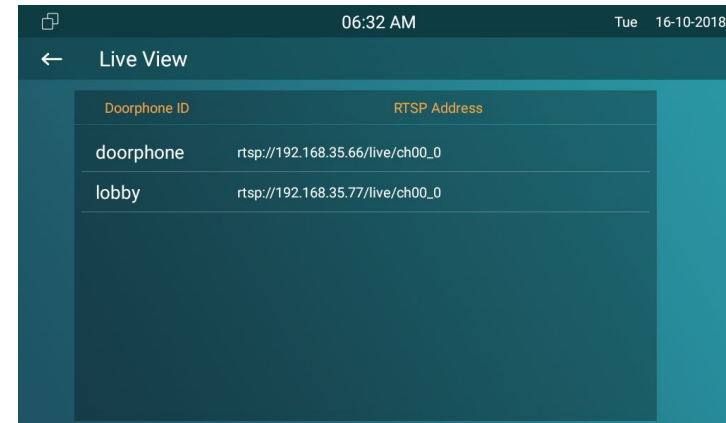


Figure 2.3.1-1 Live view list

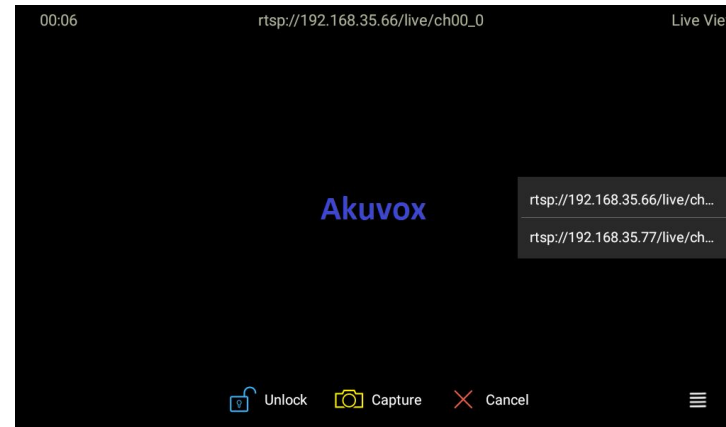


Figure 2.3.1-2 Live view video

2.4. Message(s)

Press **Message** ① to enter the message interface. Or there will be a notification if there is any new message, click the **New Message notification** ② to check directly.

2.4.1. Text Message

By entering the message interface, it is text message list. Users can check the message you received or what you sent here.

- Select a message to check the content.
- Hold the one of existed messages ①, it will show up delete prompt.
- Click **Select All** ② to delete all messages.
- Click **Delete** ③ to remove the message you choose.
- Click **Cancel** key ④ to cancel the deletion.

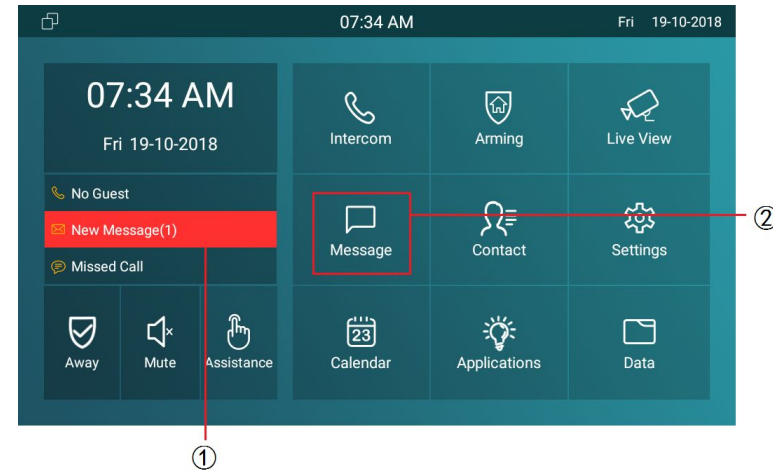


Figure 2.4-1 Message

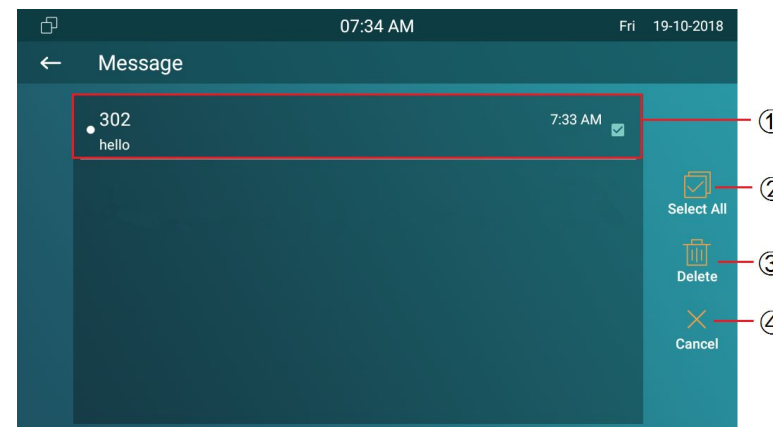


Figure 2.4-1 Edit message

2.4.2. Creating a message

- Press **New** key ① to create a new message.
- Choose the contact from the **contact list** ② or enter the destination number manually ③.
- Choose the **frequently-used message** ④, such as “Hello”, “Help”. Or input the message content you want to send ⑤.
- Select line 1 or line 2 account ⑥ to send out.

Note: C315X support 2 accounts. Please refer to chapter 3.6.2 for more account settings.

- Press **Send** key ⑦ to send.

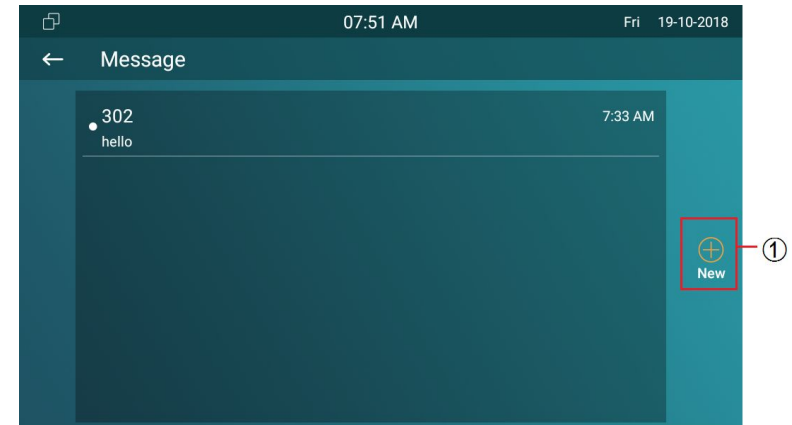


Figure 2.4.2-1 Create message

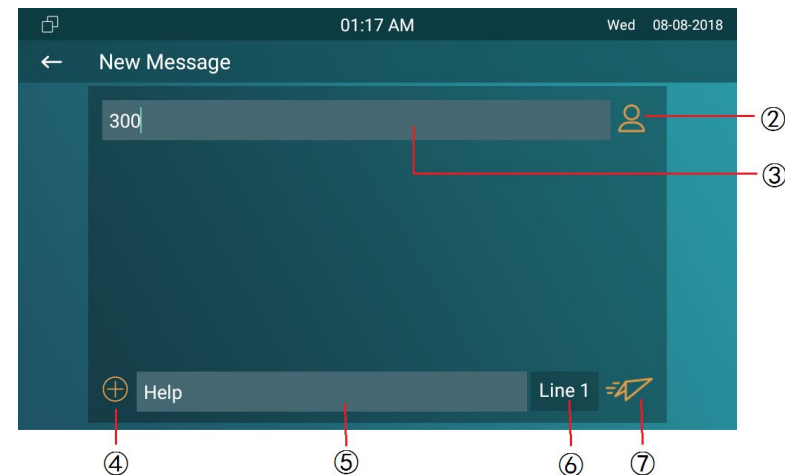


Figure 2.4.2-2 Create message

2.5. Arming

Tap **Arming** to enter the Arming interface.

C315X supports 4 mode, they are Home mode, Night mode, Away mode and disarm mode.

2.5.1. Arming Mode

Go to the path Arming - Arming mode. Users can see all of the 8 zones and corresponding sensor types. Slide down to check more information in this interface.

- Adjust **Defence delay time**. It means when you change to the arming mode from other modes, there will be 30 seconds delay time.
- To setup the **Alarm delay**. It means when the sensor triggered, there will be 90 seconds delay time to announce the notification.

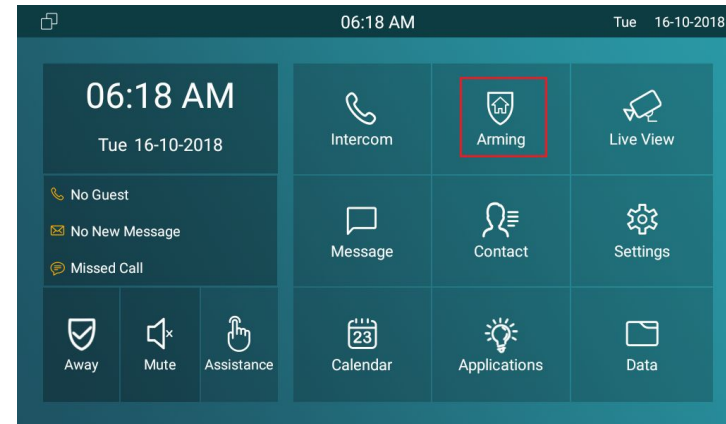


Figure 2.5-1 Arming

A screenshot of the 'Arming Mode' interface. The top status bar shows the time as 09:03 AM and the date as Thu 26-07-2018. Below the status bar, there are three tabs: 'Home', 'Night', and 'Away'. The 'Home' tab is selected. Below the tabs is a table with columns for Zone, Location, Zone Type, Defence delay, Alarm Delay, and Status. The table contains five rows of data for Zone1 through Zone5, all with 'Bedroom' as the location and 'Infrared' as the zone type. The 'Defence delay' and 'Alarm Delay' columns both show '90s delay', and the 'Status' column shows 'Disable' for all zones.

Zone	Location	Zone Type	Defence delay	Alarm Delay	Status
Zone1	Bedroom	Infrared	90s delay	90s delay	Disable
Zone2	Bedroom	Infrared	90s delay	90s delay	Disable
Zone3	Bedroom	Infrared	90s delay	90s delay	Disable
Zone4	Bedroom	Infrared	90s delay	90s delay	Disable
Zone5	Bedroom	Infrared	90s delay	90s delay	Disable

Figure2.5-1 Arming mode

- The **Status** the corresponding zone means whether the zone is available or not.
- Press **Save** in the top right corner to save the modification.

2.5.2. Disarm Code

Go to the path Arming - Disarm Code to enter the disarm code settings interface. Users can modify the disarm code here.

- Enter the **original disarm code** ① first, it is 0000 as default.
- Enter the **new disarm code** ②.
- Enter the new disarm code again ③ for confirming.
- Press **Save** to save the modification.

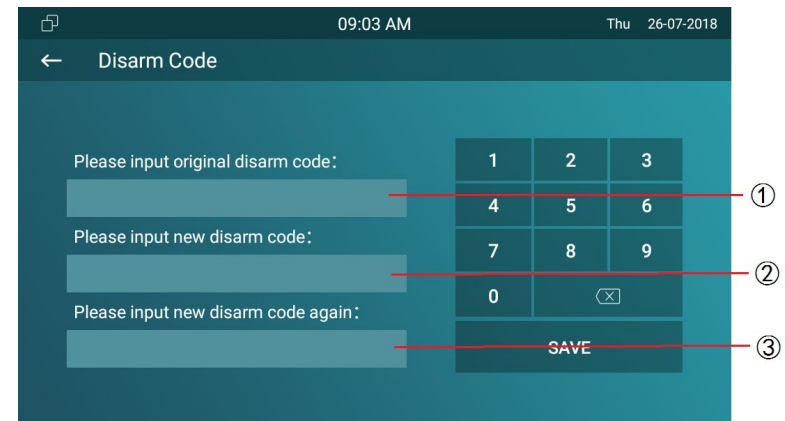


Figure 2.5.2-1 Disarm code

2.5.3. Alarm Log

Go to the path Arming - Alarm Log to enter the alarm log interface. Users can see the alarm log here including location, zone, zone type and alarm time.

- Hold a **alarm log** ①, it will show up delete prompt.
- Press **Select All** ② and click **Delete** ③ to delete all alarm log.
- Press **Cancel** ④ to cancel to delete.

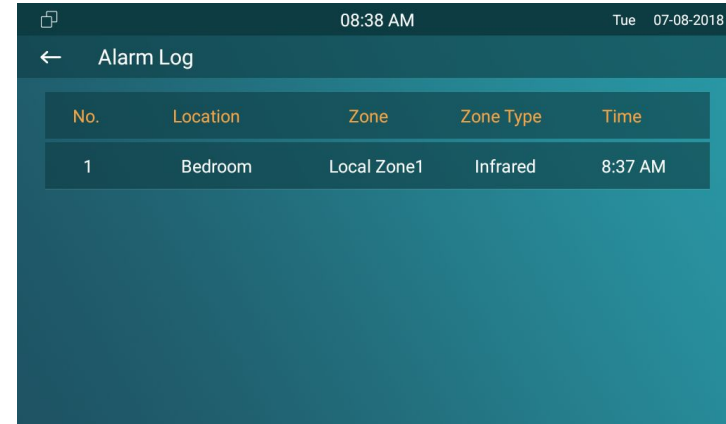


Figure 2.5.3-1 Alarm log

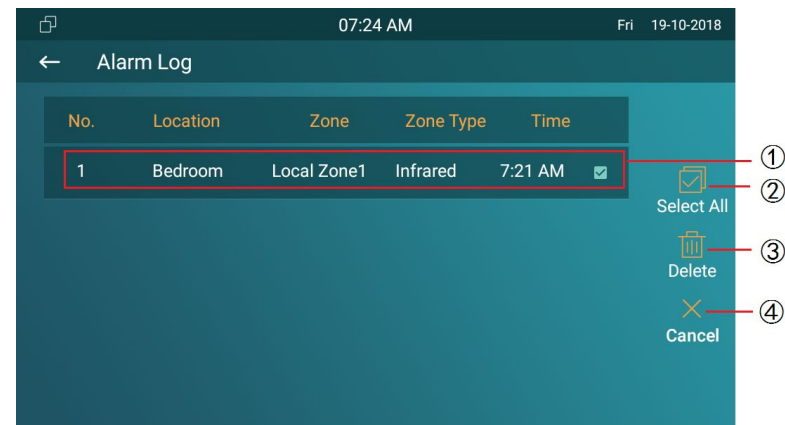



Figure 2.5.3-2 Edit alarm log

2.5.4. Status

Go to the path Arming - Zone status to enter the zone status interface. Users can check the status of every zone, including location, zone type, trigger mode and status.



Zone	Location	Zone Type	Trigger	Status
Zone1	Bedroom	Infrared	NC	Disable
Zone2	Bedroom	Infrared	NC	Disable
Zone3	Bedroom	Infrared	NC	Disable
Zone4	Bedroom	Infrared	NC	Disable
Zone5	Bedroom	Infrared	NC	Disable
Zone6	Bedroom	Infrared	NC	Disable

Figure2.5.3-1 Zone status

Abbreviations

ACS: Auto Configuration Server

Auto: Automatically

AEC: Configurable Acoustic and Line Echo Cancelers

ACD: Automatic Call Distribution

Autop: Automatical Provisioning

AES: Advanced Encryption Standard

BLF: Busy Lamp Field

COM: Common

CPE: Customer Premise Equipment

CWMP: CPE WAN Management Protocol

DTMF: Dual Tone Multi-Frequency

DHCP: Dynamic Host Configuration Protocol

DNS: Domain Name System

DND: Do Not Disturb

DNS-SRV: Service record in the Domain Name System

FTP: File Transfer Protocol

GND: Ground

HTTP: Hypertext Transfer Protocol

HTTPS: Hypertext Transfer Protocol Secure

IP: Internet Protocol

ID: Identification

IR: Infrared

LCD: Liquid Crystal Display

LED: Light Emitting Diode

MAX: Maximum

POE: Power Over Ethernet

PCMA: Pulse Code Modulation A-Law

PCMU: Pulse Code Modulation μ -Law

PCAP: Packet Capture

PNP: Plug and Play

RFID: Radio Frequency Identification

RTP: Real-time Transport Protocol

RTSP: Real Time Streaming Protocol

MPEG: Moving Picture Experts Group

MWI: Message Waiting Indicator

NO: Normal Opened

NC: Normal Connected

NTP: Network Time Protocol

NAT: Network Address Translation

NVR: Network Video Recorder

ONVIF: Open Network Video Interface Forum

SIP: Session Initiation Protocol

SNMP: Simple Network Management Protocol

STUN: Session Traversal Utilities for NAT

SMTP: Simple Mail Transfer Protocol

SDMC: SIP Devices Management Center

TR069: Technical Report069

TCP: Transmission Control Protocol

TLS: Transport Layer Security

TFTP: Trivial File Transfer Protocol

UDP: User Datagram Protocol

URL: Uniform Resource Locator

VLAN: Virtual Local Area Network

WG: Wiegand

Contact us

For more information about the product, please visit us at www.akuvox.com or feel free to contact us by

Sales email: sales@akuvox.com

Technical support email: techsupport@akuvox.com

Telephone: +86-592-2133061 ext.7694/8162

We highly appreciate your feedback about our products.

