



Intercom Function of Akuvox Video Phone

1. Instruction


Intercom allows user to establish a call directly with the callee. It is convenient for the people who works in a small scale. It is used to answer the incoming call automatically after users set up the intercom function.

In this feature guide , we use Akuvox R4X Video Phone and Elastic SIP server as an sample.

2.Enable Intercom function

Please enable Intercom function from the web or phone.

1. Enable from Phone: go to the path: Phone Setting-Call Setting-Intercom. Tick to enable Intercom function;
2. User can set the phone to enable mute mode when picking up the intercom call so that the other will not hear you;

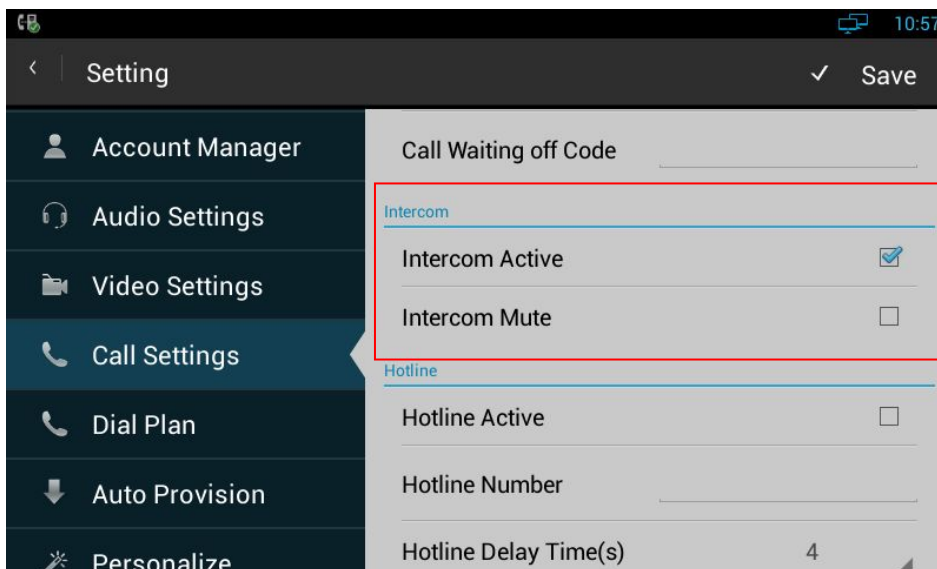

3. Enable from website: go to the path: Phone-Call Feature.



Note: If the user is only a receiver , no need to setup the intercom value as the below steps.

3.Setup Intercom Value

Configure from the website

1. Go to the website Phone-Ext Key;
2. Setup the key type as Intercom;
3. Setup the intercom code+number(*800 is intercom code, 307 is the callee number as below picture)in the value areas;

Note: Different SIP server has different Intercom code, users need to consult the administrator for more information;

4. Select the viable account from Account list;


The screenshot shows the 'Ext Key' configuration page. At the top, there is a 'Current Page' indicator showing '1' with 'Pre' and 'Next' buttons. Below this is a table with the following data:

Key	Type	Label	Value	Account	Extension
Key 1	Intercom	test1	*800307	Account 1	
Key 2	N/A			Account 1	
Key 3	N/A			Account 1	


5. Click Submit to save.

Configure from the Phone


1. Enter the Dial interface;
2. Click Ext Key button to enter Ext setting interface;

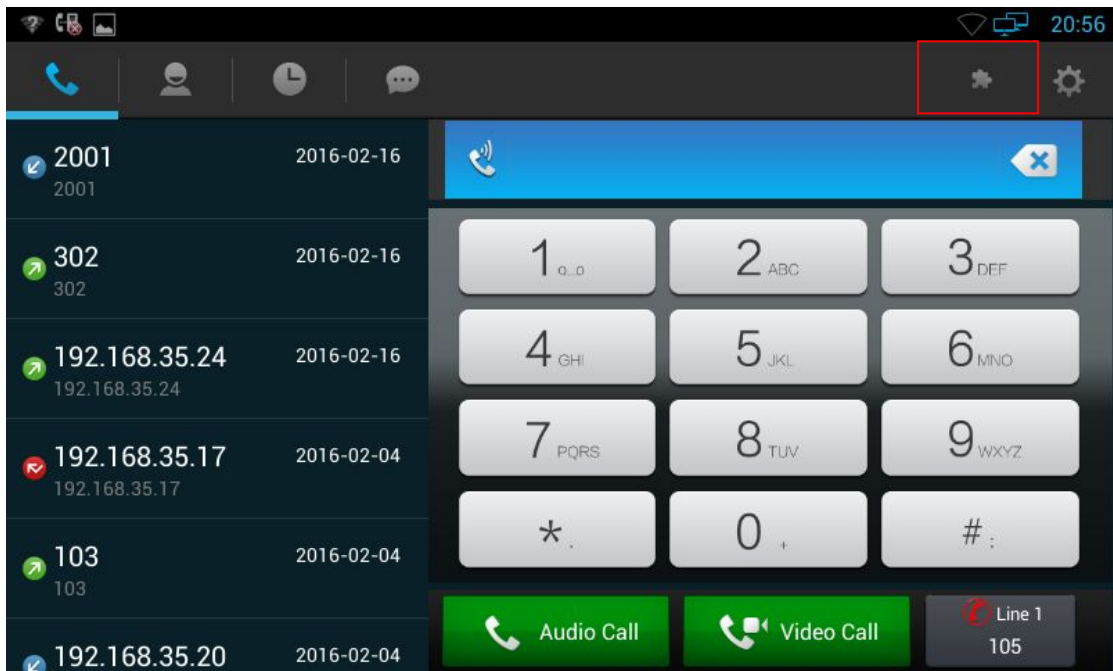


3. Click Add Key;
4. To setup the Type as Intercom;
5. Input the label you need;
6. Setup the intercom code+number(*800 is intercom code, 307 is the callee number as below picture)in the value areas;
7. Select a valid account;
8. Click Confirm to save.

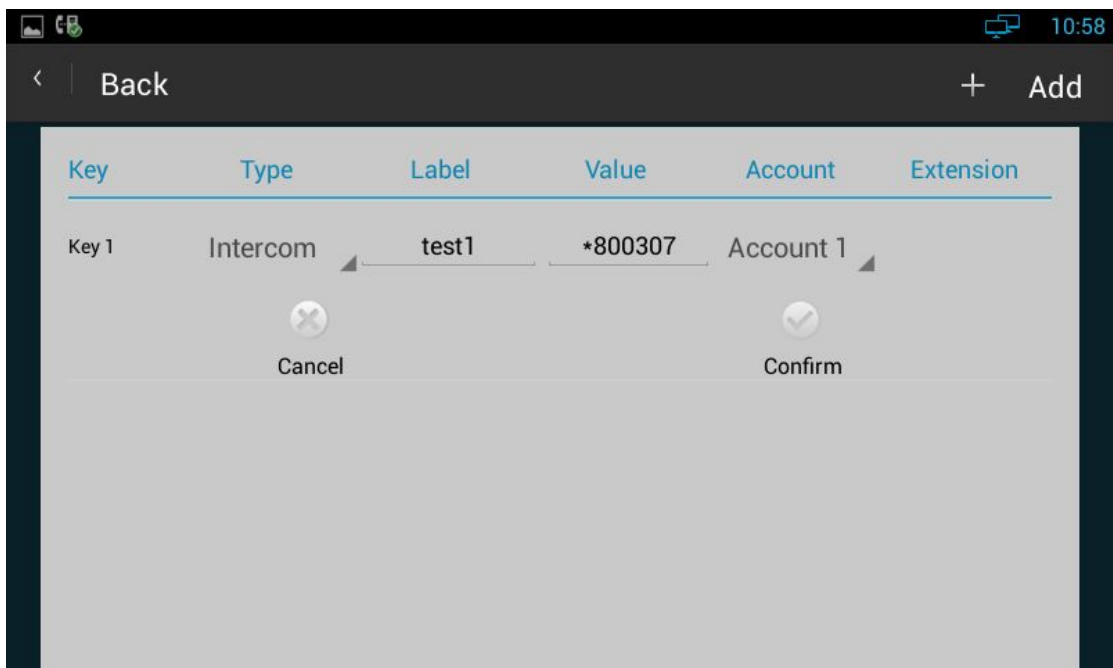


After you finish the intercom value settings.

1. Press Apps Button . Left slide to enter WIDGETS interface, find ExtKey. Drag it to the main interface;

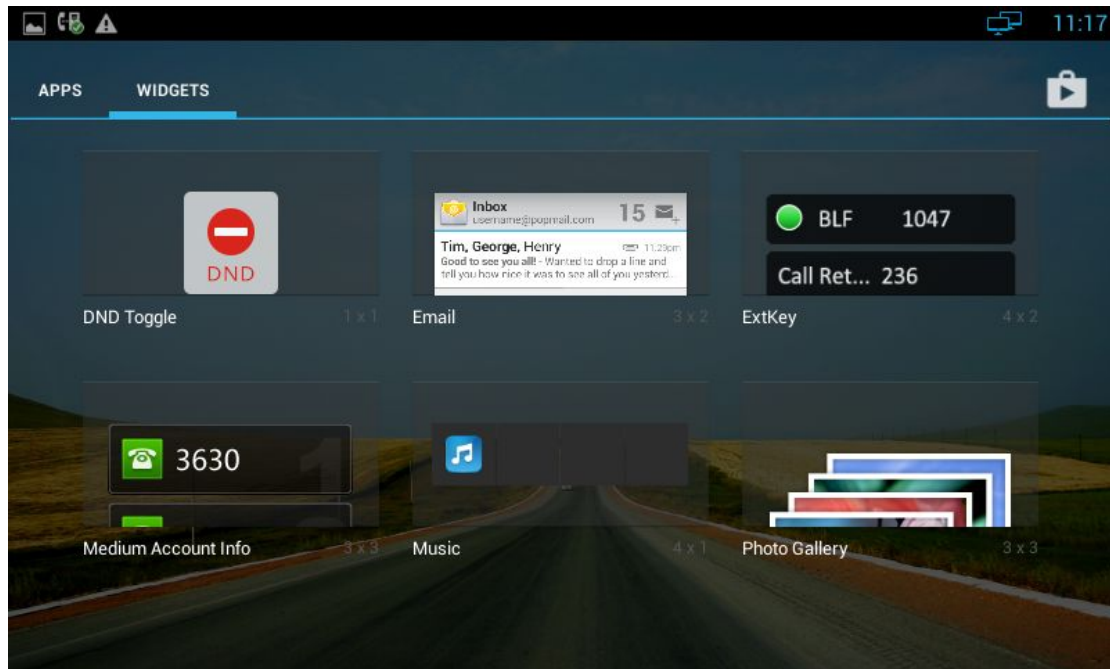


2. Enable the Extkey;

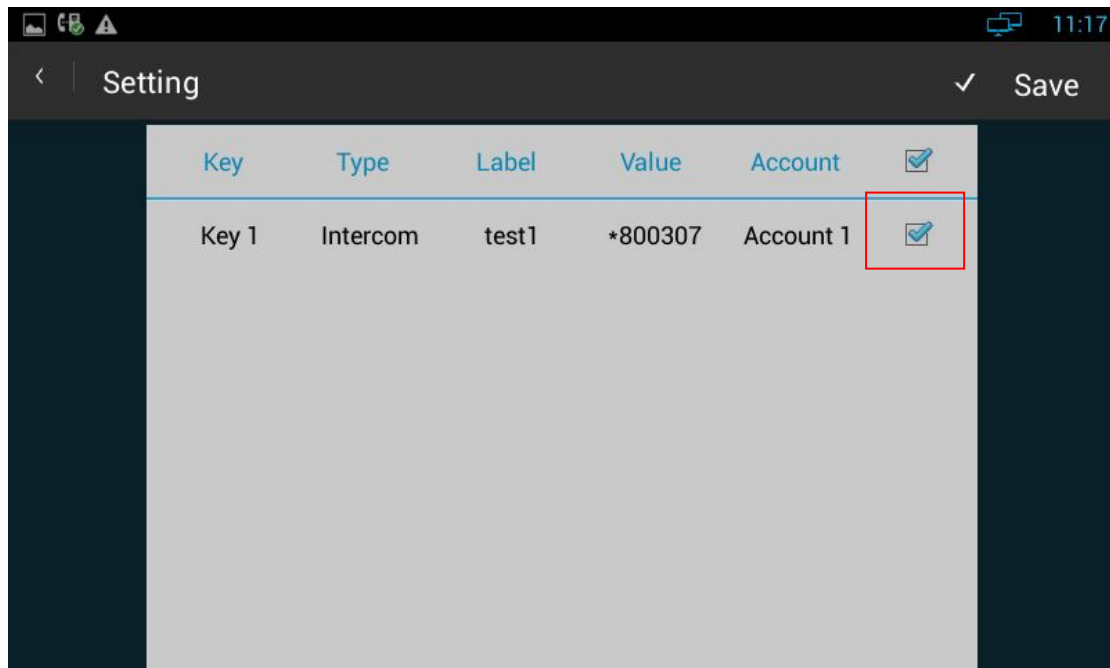

3. Click Save Key to save;

4. Then users just press the Intercom key to call out;

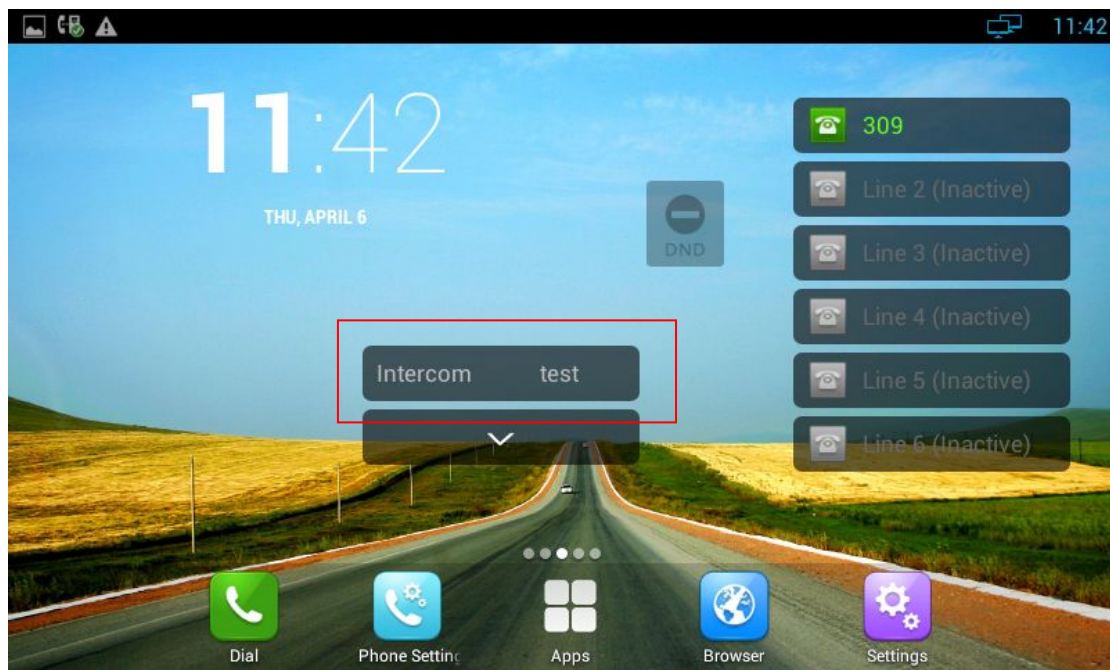

5. The callee part will automatically answer the call.