



Strike Plate Drilling Template

! For Wood Doors Only

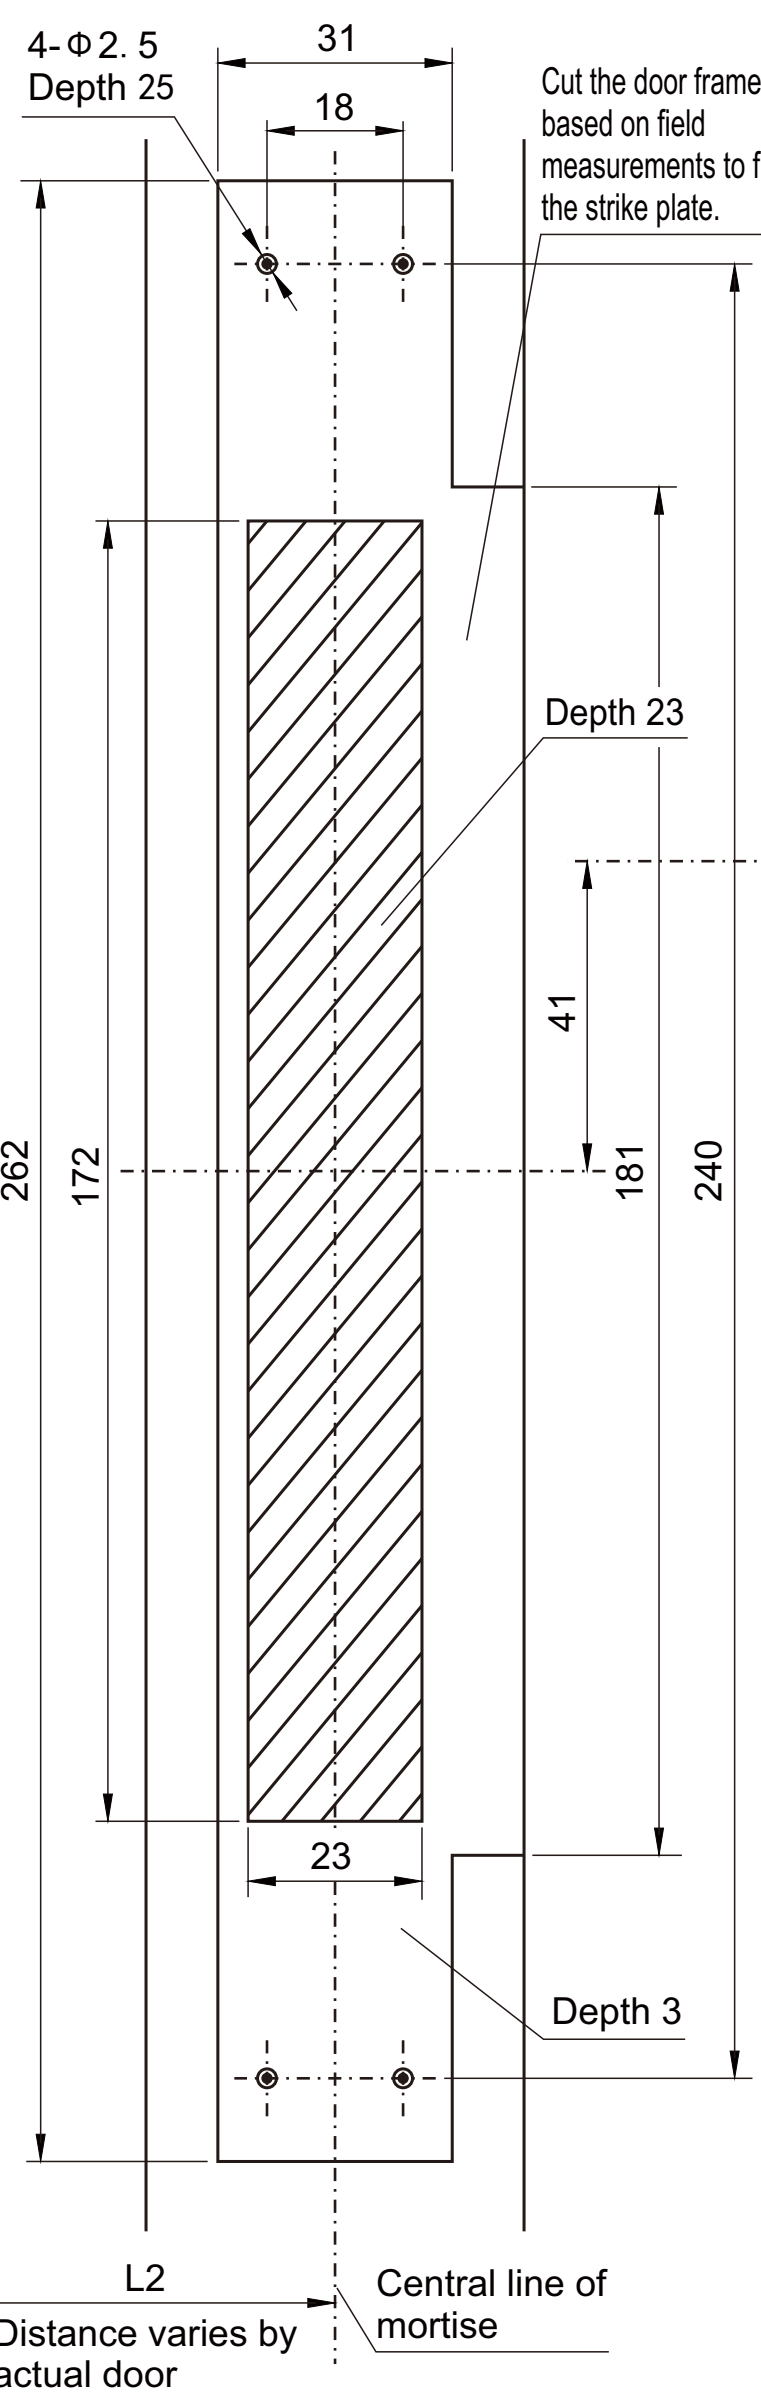

Strike Plate Drilling Template

! For Metal Doors Only

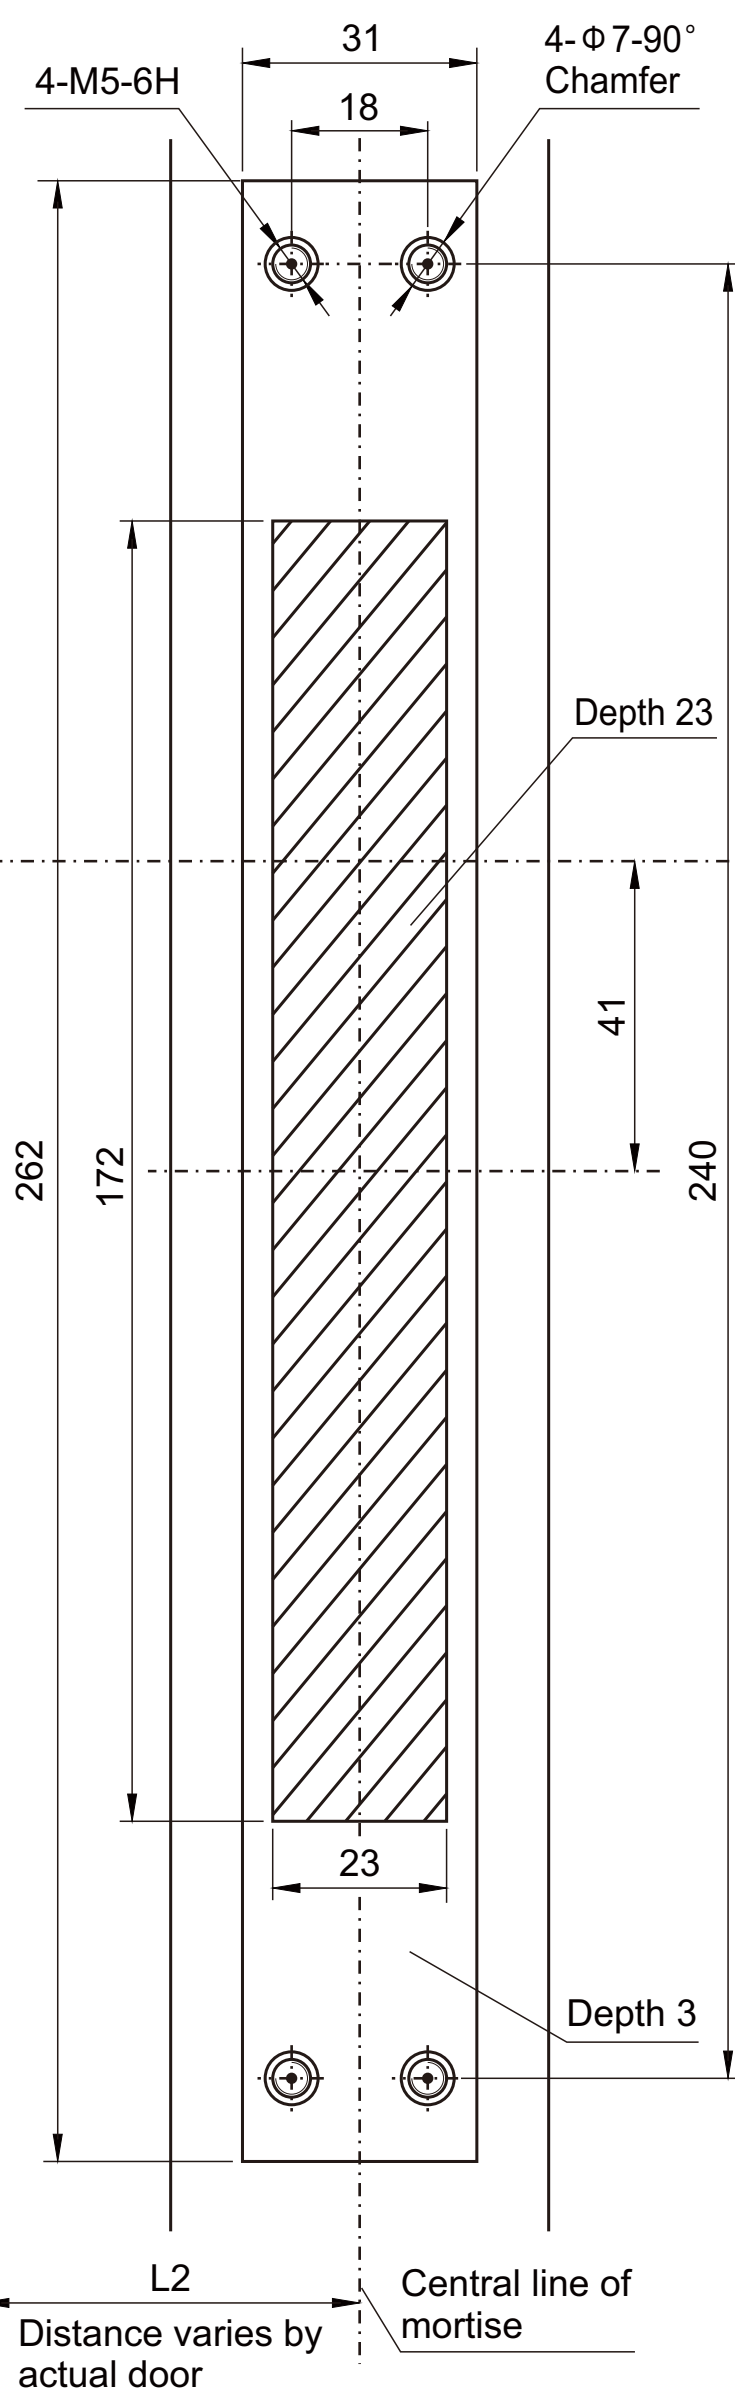


- Drilling Template

【For Model SL60】

Unit: mm

Mortise Drilling Template


! For Wood Doors Only

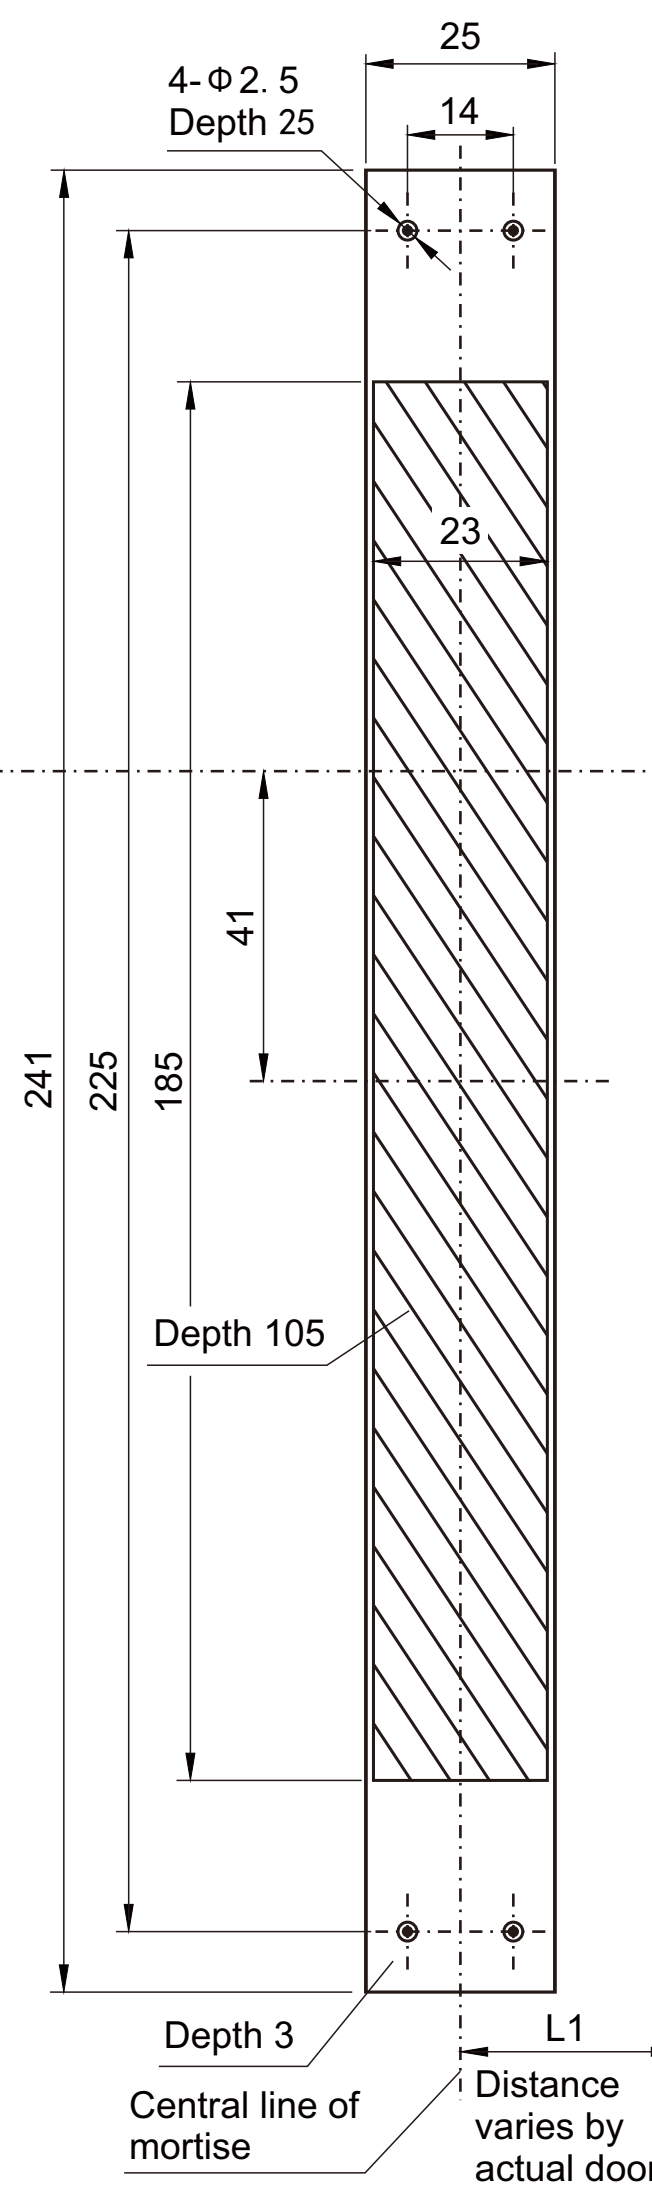

 **L1=L2** (Note: This does not apply to right-hand outswing wooden doors or left-hand inswing wooden doors. In such cases, L1 and L2 must be determined based on actual conditions.)

Mortise Drilling Template

! For Metal Doors Only

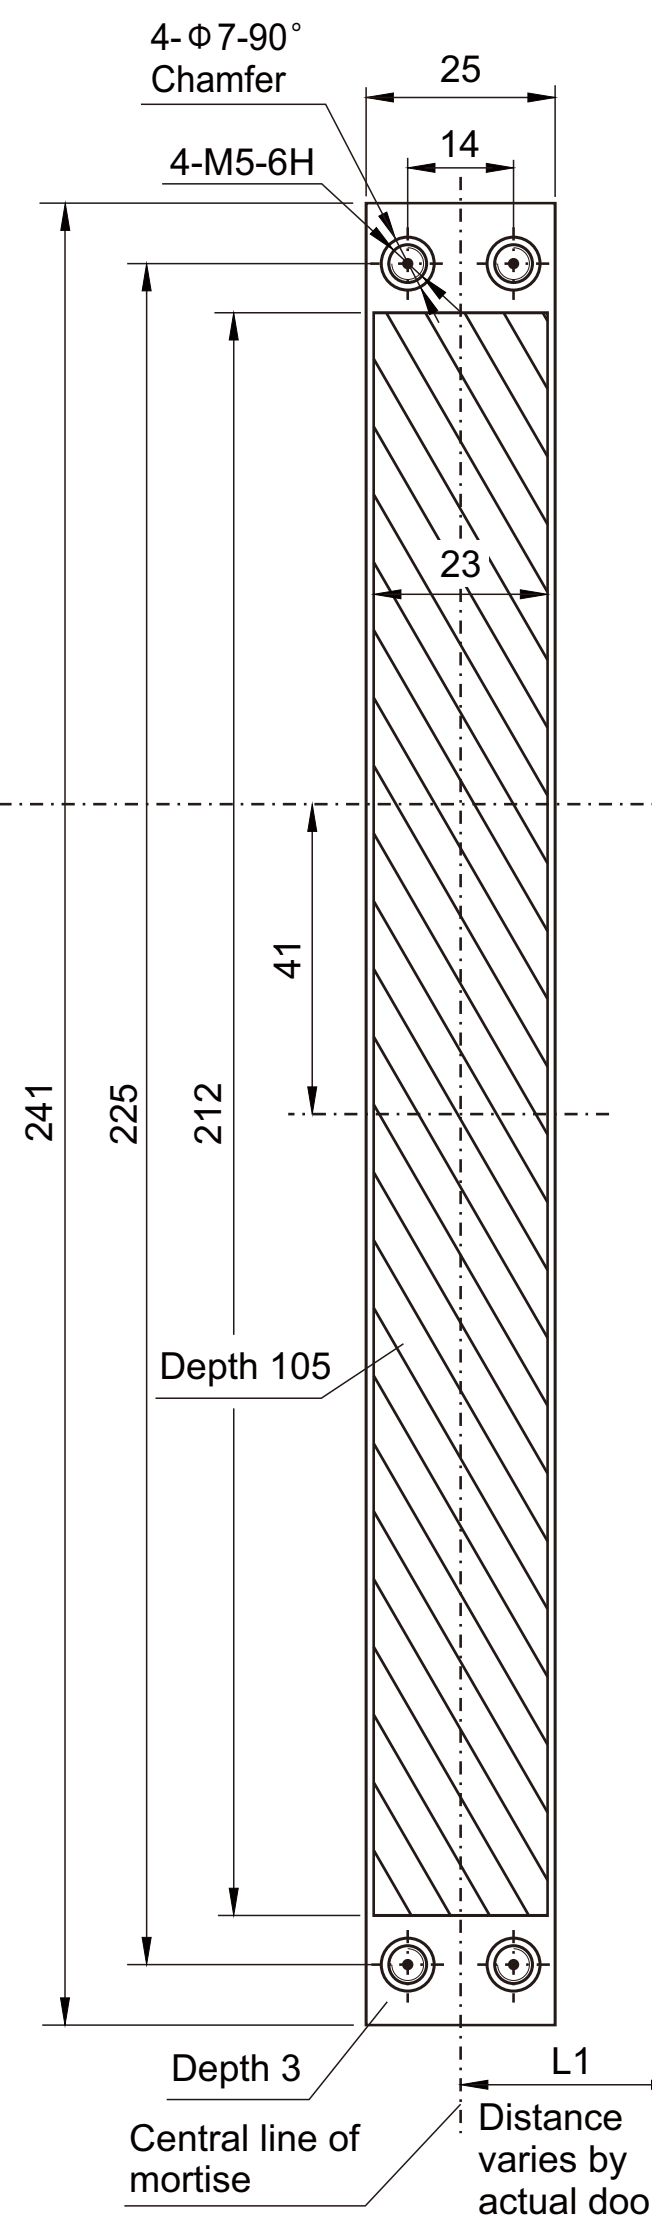

 L1 and L2 are the distances from the mortise centerline to the outer edge of the door. For doors with anti-pry edges, if the mortise centerline does not line up with the middle of the door thickness, adjust the installation accessories based on the L1 and L2 measurements for a proper fit.

Front/Back Body Drilling Template

