



**Ruijie RG-S6120 Series Switches**

**RGOS Command Reference, Release 12.1(2)B0102**

## **Copyright Statement**

Ruijie Networks©2020

Ruijie Networks reserves all copyrights of this document. Any reproduction, excerption, backup, modification, transmission, translation or commercial use of this document or any portion of this document, in any form or by any means, without the prior written consent of Ruijie Networks is prohibited.

## **Exemption Statement**

This document is provided “as is”. The contents of this document are subject to change without any notice. Please obtain the latest information through the Ruijie Networks website. Ruijie Networks endeavors to ensure content accuracy and will not shoulder any responsibility for losses and damages caused due to content omissions, inaccuracies or errors.

## Preface

Thank you for using our products. This manual matches the RGOS Release 12.1(2)B0102.

## Audience

This manual is intended for:

- Network engineers
- Technical support and servicing engineers
- Network administrators

## Obtaining Technical Assistance

- Ruijie Networks Website: <https://www.ruijienetworks.com/>
- Technical Support Website: <https://ruijienetworks.com/support>
- Case Portal: <https://caseportal.ruijienetworks.com>
- Community: <https://community.ruijienetworks.com>
- Technical Support Email: [service\\_rj@ruijienetworks.com](mailto:service_rj@ruijienetworks.com)
- Skype: [service\\_rj@ruijienetworks.com](https://www.ruijienetworks.com)

## Related Documents

Documents	Description
Configuration Guide	Describes network protocols and related mechanisms that supported by the product, with configuration examples.
Hardware Installation and Reference Guide	Describes the functional and physical features and provides the device installation steps, hardware troubleshooting, module technical specifications, and specifications and usage guidelines for cables and connectors.

## Conventions

This manual uses the following conventions:


Convention	Description
<b>boldface font</b>	Commands, command options, and keywords are in <b>boldface</b> .
<i>italic font</i>	Arguments for which you supply values are in <i>italics</i> .
[ ]	Elements in square brackets are optional.
{ x   y   z }	Alternative keywords are grouped in braces and separated by vertical bars.

[ x | y | z ]


Optional alternative keywords are grouped in brackets and separated by vertical bars.

## Symbols

---

 Means reader take note. Notes contain helpful suggestions or references.

---

 Means reader be careful. In this situation, you might do something that could result in equipment damage or loss of data.

---



## System Configuration Commands

---

1. Command Line Interface Commands
2. Basic Configuration Management Commands
3. Line Commands
4. File System Commands
5. SYS Commands
6. Time Range Commands
7. HTTP Service Commands
8. Syslog Commands
9. CWMP Commands
10. Module Hot-plugging/Unplugging Commands
11. Supervisor Module Redundancy Commands
12. UFT Commands
13. Package Management Commands
14. OpenFlow Commands

# 1. Command Line Interface Commands

## 1.1 alias

Use this command to configure a command alias in global configuration mode. Use the **no** or **default** form of this command to restore the default setting.

**alias** *mode command-alias original-command*

**no alias** *mode [command-alias]*

**default alias mode** [*command-alias*]

**Parameter Description**

Parameter	Description
<i>mode</i>	Mode of the command represented by the alias
<i>command-alias</i>	Command alias
<i>original-command</i>	Syntax of the command represented by the alias

**Defaults**

Some commands in user or privileged EXEC mode have default alias.

**Command Mode**

Global configuration mode.

**Usage Guide**

The following table lists the default alias of the commands in privileged EXEC mode.

Alias	Actual Command
h	help
p	ping
s	show
u	undebug
un	undebug

The default alias cannot be removed by the **no alias exec** command.

After configuring the alias, you can use a word to replace a command. For example, you can create an alias to represent the first part of a command, and then type the rest part of the command.

The mode of the command represented by the alias is the command mode existing in the current system. In the global configuration mode, you can use the **alias ?** command to list all the modes under which you can configure alias for commands.

```
Ruijie(config)# alias ?
  aaa-gs          AAA server group mode
  acl             acl configure mode
  bgp            Configure bgp Protocol
```

```
config          globle configure mode
.....
```

The alias also has its help information that is displayed after \* in the following format:

```
*command-alias=original-command
```

For example, in the privileged EXEC mode, the default alias s stands for show. You can enter s? to query the key words beginning with s and the help information of the alias.

```
Ruijie#s?
*s=show show start-chat start-terminal-service
```

If an alias represents more than one word, the command will be displayed in brackets. For example, if you set sv stand for show version in the privileged EXEC mode, then:

```
Ruijie#s?
*s=show *sv="show version" show start-chat
start-terminal-service
```

The alias must begin with the first letter of the command. The first letter of the command cannot be a space. The space before the command cannot be used as a valid alias.

```
Ruijie# s?
show start-chat start-terminal-service
```

The command alias also has its help information. For example, if the alias ia represents ip address in the interface configuration mode, then:

```
Ruijie(config-if)#ia ?
  A.B.C.D IP address
  dhcp    IP Address via DHCP
Ruijie(config-if)# ip address
```

The above help information lists the parameters of **ip address** and shows the actual command name.

You must enter an entire alias; otherwise it cannot be recognized.

Use the **show aliases** command to show the aliases setting in the system.

**Configuration Examples** The following example uses def-route to represent the default route setting of ip route 0.0.0.0 0.0.0.0 192.168.1.1 in the global configuration mode:

```
Ruijie# configure terminal
Ruijie(config)# alias config def-route ip route 0.0.0.0 0.0.0.0
192.168.1.1
Ruijie(config)#def-route?
*def-route="ip route 0.0.0.0 0.0.0.0 192.168.1.1"
Ruijie(config)# end
Ruijie# show aliases config
globle configure mode alias:
def-route          ip route 0.0.0.0 0.0.0.0
192.168.1.1
```

**Related Commands**

Command	Description
<b>show aliases</b>	Displays the aliases settings.

**Platform** N/A  
**Description**

## 1.2 cli-python

Use this command to install and uninstall a python script for CLI.

**cli-python** { **insmod** | **rmmod** } *python-filename*

**Parameter Description**

Parameter	Description
<i>python-filename</i>	Python script filename.

**Defaults** N/A.

**Command Mode** Privileged EXEC mode.

**Usage Guide** Upload a python script to the flash directory and run this command to install the python script.

**Configuration Examples** The following example installs python script ruijie.py.

```
Ruijie# cli-python insmod ruijie.py
% Python script module "ruijie.py" insert success.
```

**Related Commands**

Command	Description
N/A.	N/A.

**Platform Description** N/A.

## 1.3 privilege

Use this command to attribute the execution rights of a command to a command level in global configuration mode. Use the **no** form of this command to restore the default setting.

**privilege** *mode* [ **all** ] [ **level** *level* | **reset** ] *command-string*

**no privilege** *mode* [ **all** ] [ **level** *level* ] *command-string*

**Parameter Description**

Parameter	Description
<i>mode</i>	CLI mode of the command to which the execution rights are attributed.



<b>all</b>	Command alias
<b>level</b> <i>level</i>	Specifies the execution right levels (0–15) of a command or sub-commands
<b>reset</b>	Restores the command execution rights to its default level
<i>command-string:</i>	Command string to be authorized

**Defaults** N/A

**Command Mode** Global configuration mode.

**Usage Guide** The following table lists some key words that can be authorized by the **privilege** command in CLI mode. The number of command modes that can be authorized may vary with different devices. In the global configuration mode, you can use the **privilege ?** command to list all CLI command modes that can be authorized.

Mode	Description
config	Global configuration mode.
exec	Privileged EXEC mode
interface	Interface configuration mode
ip-dhcp-pool	DHCP address pool configuration mode
ip-dhcp-pool	DHCP address pool configuration mode
keychain	KeyChain configuration mode
keychain-key	KeyChain-key configuration mode

**Configuration Examples** The following example sets the password of CLI level 1 as **test** and attribute the **reload** rights to reset the device:

```
Ruijie(config)#privilege exec level 1 reload
```

You can access the CLI window as level-1 user to use the **reload** command:

```
Ruijie>reload ?
```

```
LINE Reason for reload
```

<cr> You can use the key word **all** to attribute all sub-commands of reload to level-1 users:

```
Ruijie(config)# privilege exec all level 1 reload
```

After the above setting, you can access the CLI window as level-1 user to use all sub commands of the **reload** command:

```
Ruijie>reload ?
```

```
LINE Reason for reload
```

```
at reload at a specific time/date
```

```
cancel cancel pending reload scheme
```

```
in reload after a time interval
```

```
<cr>
```

**Related Commands**

Command	Description
---------	-------------

<b>enable secret</b>	Sets the CLI-level password.
----------------------	------------------------------

**Platform** N/A.

**Description**

## 1.4 show aliases

Use this command to show all the command aliases or aliases in special command modes.

**show aliases** [ *mode* ]

Parameter Description	Parameter	Description
	<i>mode</i>	Mode of the command represented by the alias.

**Defaults** N/A.

**Command Mode** Privileged EXEC mode.

**Mode**

**Usage Guide** This command displays the configuration of all aliases if no command mode is input.

**Configuration** The following example displays the command alias in privileged EXEC mode:

**Examples**

```
Ruijie#show aliases exec
exec mode alias:
h          help
p          ping
s          show
u          undebug
un         undebug
```

Related Commands	Command	Description
	<b>alias</b>	Sets a command alias.

**Platform** N/A.

**Description**



## 2. Basic Configuration Management Commands

### 2.1 <1-99>

Use this command to restore the suspended Telnet Client session.

**<1-99>**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command Mode** User EXEC mode

**Usage Guide** This command is used to restore the suspended Telnet Client session. Hot keys (ctrl+shift+6 x) are used to exit the Telnet Client session creation. The **<1-99>** command is used to restore the session. If the session is created, you can use the **show session** command to display the session.

**Configuration** The following example restores the suspended Telnet Client session.

**Examples** Ruijie# 1

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

### 2.2 banner exec

Use this command to configure a message to welcome the user entering user EXEC mode through the line. Use the **no** form of this command to restore the default setting.

**banner exec c message c**

**no banner exec**

Parameter Description	Parameter	Description
-----------------------	-----------	-------------

<i>c</i>	Separator of the message. Delimiters are not allowed in the message.
<i>message</i>	Contents of the message.

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** This command is used to configure the welcome message. The system discards all the characters next to the terminating symbol.  
When you are logging in to the device, the MOTD message is displayed at first, and then the banner login message. After you have logged in, the EXEC message or the incoming message is displayed. If it's a reverse Telnet session, the incoming message is displayed. Otherwise, the EXEC message is displayed.  
The messages are for all lines. If you want to disable display the EXEC message on a specific line, configure the **no exec-banner** command on the line.

**Configuration Examples** The following example configures a welcome message.

```
Ruijie(config)# banner exec $ Welcome $
```

**Related Commands**

Command	Description
N/A	N/A

**Platform Description** N/A

## 2.3 banner incoming

Use this command to configure a prompt message for reverse Telnet session. Use the **no** form of this command to remove the setting.

**banner incoming** *c message c*

**no banner incoming**

**Parameter Description**

Parameter	Description
<i>c</i>	Separator of the message. Delimiters are not allowed in the message.
<i>message</i>	Contents of the message.

**Defaults** N/A

**Command** Global configuration mode  
**Mode**

**Usage Guide** This command is used to configure a prompt message. The system discards all the characters next to the terminating symbol.  
When you are logging in to the device, the MOTD message is displayed at first, and then the banner login message. After you have logged in, the welcome message or the prompt message is displayed. If it's a reverse Telnet session, the prompt message is displayed. Otherwise, the welcome message is displayed.

**Configuration** The following example configures a prompt message for reverse Telnet session.

**Examples** Ruijie(config)# banner incoming \$ Welcome \$

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description** N/A

## 2.4 banner login

Use this command to configure a login banner. Use **no** form of this command to r remove the setting.  
**banner login c message c**  
**no banner login**

**Parameter  
Description**

Parameter	Description
<i>c</i>	Separator of the message contained in the login banner. Delimiters are not allowed in the MOTD.
<i>message</i>	Contents of the login banner

**Defaults** N/A

**Command  
Mode** Global configuration mode

**Usage Guide** This command sets the login banner message, which is displayed at login. The system discards all the characters next to the terminating symbol.

**Configuration** The following example configures a login banner.

**Examples** Ruijie(config)# banner login \$ enter your password \$

Related Commands	Command	Description
	N/A	N/A

**Platform  
Description** N/A

## 2.5 banner motd

Use this command to set the Message-of-the-Day ( MOTD ) . Use the **no** form of this command to remove the setting.

**banner [ motd ] c message c**

**no banner [ motd ]**

Parameter Description	Parameter	Description
	<i>c</i>	Separator of the MOTD. Delimiters are not allowed in the MOTD.
	<i>message</i>	Contents of an MOTD

**Defaults** N/A

**Command  
Mode** Global configuration mode

**Usage Guide** This command sets the MOTD, which is displayed at login. The letters that follow the separator will be discarded.

**Configuration** The following example configures the MOTD.

**Examples** Ruijie(config)# **banner motd \$ hello,world \$**

Related Commands	Command	Description
	N/A	N/A

**Platform  
Description** N/A

## 2.6 banner prompt-timeout

Use this command to configure the prompt-timeout message to notify timeout. Use the **no** form of this command to remove the setting.

**banner prompt-timeout c message c**

**no banner prompt-timeout**

**Parameter Description**

Parameter	Description
<i>c</i>	Separator of the message. Delimiters are not allowed in the message.
<i>message</i>	Contents of the message.

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** The system discards all the characters next to the terminating symbol.  
When authentication times out, the banner prompt-timeout message is displayed.

**Configuration** The following example configures the prompt-timeout message to notify timeout.

**Examples**

```
Ruijie(config)# banner exec $ authentication timeout $
```

**Related Commands**

Command	Description
N/A	N/A

**Platform Description** N/A

## 2.7 banner slip-ppp

Use this command to configure the slip-ppp message for the SLIP/PPP session. Use the **no** form of this command to remove the setting.

**banner slip-ppp c message c**

**no banner slip-pp**

**Parameter Description**

Parameter	Description
<i>c</i>	Separator of the message. Delimiters are not allowed in the message.
<i>message</i>	Contents of the message.

**Defaults** N/A

**Command Mode** Global configuration mode



**Usage Guide** This command is used to configure the slip-ppp message for the SLIP/PPP session. The system discards all the characters next to the terminating symbol.

When the SLIP/PPP session is created, the slip-ppp message is displayed on the corresponding terminal.

**Configuration** The following example configures the banner slip-ppp message for the SLIP/PPP session.

**Examples** Ruijie(config)# banner slip-ppp \$ Welcome \$

**Related Commands**

Command	Description
N/A	N/A

**Platform Description**

N/A

## 2.8 boot config

Use this command to modify the path for saving startup configurations and the corresponding file name.

**boot config { flash:filename | usb0:filename }**

**no boot config**

**Parameter Description**

Parameter	Description
<b>flash</b>	Saves the startup configuration file in the extensible Flash.
<b>usb0</b>	Saves the startup configuration file in USB0 device. The device must have a USB interface into which a USB device is inserted.


**Defaults**


By default, startup configuration file of a device is saved in **Flash:/config.text**


**Command Mode**

Privileged EXEC mode

**Usage Guide**

 The startup configuration file name follows a slash "/", for example, **Flash:/ruijie.text** and **Usb0:/ruijie.text**.

 The startup configuration file name consists of a path and a file name. The path is mandatory. Otherwise, configurations cannot be saved by using the **write** command. Take **Flash:/ruijie/ruijie.text** and **Usb0:/ruijie/ruijie.text** as examples, where the **Flash:/ruijie** and **Usb0:/ruijie** folders must exist. In master-slave mode, all device paths are required.

 To save the startup configuration file to a USB flash drive, the device must provide a USB interface with a USB flash drive inserted. Otherwise, configurations cannot be saved by using the **write** command. In master-slave mode, all devices must have USB flash drives connected.

**Configuration** The following example sets the startup configuration file path to flash:/ruijie.text..

**Examples**

```
Ruijie(config)#boot config flash:/ruijie.text
```

**Related Commands**

Command	Description
N/A	N/A

**Platform Description**

N/A

## 2.9 configure

Use this command to enter global configuration mode.

**configure [ terminal ]**

**Parameter Description**

Parameter	Description
N/A	N/A

**Defaults**

N/A

**Command Mode**

Privileged EXEC mode

**Usage Guide**

N/A

**Configuration** The following example enters global configuration mode.

**Examples**

```
Ruijie# configure
Ruijie(config)#
```

**Related Commands**

Command	Description
N/A	N/A

**Platform Description**

N/A

## 2.10 disable

Use this command to switch from privileged EXEC mode to user EXEC mode or lower the privilege level.

**disable** [ *privilege-level* ]

### Parameter Description

Parameter	Description
privilege-level	Privilege level

### Defaults

N/A

### Command Mode

User EXEC mode

### Usage Guide

Use this command to switch to user EXEC mode from privileged EXEC mode. If a new privilege level is added, the current privilege level will be lowered.

 The privilege level that follows the **disable** command must be lower than the current level.

### Configuration Examples

The following example lowers the current privilege level of the device to level 10.

### Examples

```
Ruijie# disable 10
```

### Related Commands

Command	Description
<b>enable</b>	Moves from user EXEC mode enter to privileged EXEC mode or reaches a higher level of authority.

### Platform Description

N/A

## 2.11 disconnect

Use this command to disconnect the Telnet Client session.

**disconnect** *session-id*

### Parameter Description

Parameter	Description
<i>session-id</i>	Telnet Client session ID.

### Defaults

N/A

**Command** User EXEC mode  
**Mode**

**Usage Guide** This command is used to disconnect the Telnet Client session by setting the session ID.

**Configuration** The following example disconnects the Telnet Client session by setting the session ID.

**Examples**  
Ruijie# disconnect 1

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 2.12 do telnet

Use this command to login to Telnet server.

**do telnet** [ **oob** ] *host* [ *port* ] [ /**source** { **ip** *A.B.C.D* | **ipv6** *X:X:X:X::X* | **interface** *interface-name* } ] [ /**vrf** *vrf-name* ] [ **via** *mgmt-name* ]

Parameter Description	Parameter	Description
	<b>oob</b>	
<i>host</i>		IPv4, IPv6 or host name of Telnet server.
<i>port</i>		Configures TCP port ID. The default is 23.
<b>/source</b>		Specifies source IP or source port for Telnet client.
<b>ip</b> <i>A.B.C.D</i>		Specifies source IPv4 address for Telnet client.
<b>ipv6</b> <i>X:X:X:X::X</i>		Specifies source IPv6 address for Telnet client.
<b>interface</b> <i>interface-name</i>		Specifies source port for Telnet client.
<b>/vrf</b> <i>vrf-name</i>		Specifies VRF table.
<b>via</b> <i>mgmt-name</i>		Specifies MGMT table.

**Defaults** N/A

**Command Mode** User EXEC mode/Privileged EXEC mode/Interface configuration mode

**Usage Guide** N/A

**Configuration** The following example configures destination IPv4 address 192.168.1.1, uses default port ID, and specifies source port Gi 0/1 and VRF table vpn1.

**Examples**

```
Ruijie(config)# do telnet 192.168.1.1 /source interface gigabitEthernet 0/1 /vrf vpn1
```

The following example configures destination IPv6 address 2AAA:BBBB::CCCC.

```
Ruijie(config)# do telnet 2AAA:BBBB::CCCC
```

The following example configures destination IPv4 address 192.168.1.1 and specifies MGMT port Mgmt 0.

```
Ruijie(config)# do telnet oob 192.168.1.1 via mgmt 0
```

**Related Commands**

Command	Description
N/A	N/A

**Platform Description**

N/A

## 2.13 enable

Use this command to enter privileged EXEC mode.

**Enable** [ *privilege-level* ]

**Parameter Description**

Parameter	Description
<i>privilege-level</i>	Privilege level

**Defaults** N/A

**Command Mode** User EXEC mode

**Usage Guide** N/A

**Configuration** The following example enters privileged EXEC mode and lowers the privilege level to 14.

**Examples**

```
Ruijie> enable 14
```

```
Password:
```

**Related Commands**

Command	Description
N/A	N/A

**Platform**  
**Description**

N/A

## 2.14 enable password

Use this command to configure passwords for different privilege levels. Use the **no** form of this command to restore the default setting.

**enable password** [ *level level* ] { [ **0** ] *password* | **7** *encrypted-password* }

**no enable password** [ *level level* ]

**Parameter  
Description**

Parameter	Description
<i>password</i>	Password for the user to enter the EXEC configuration layer
<i>level</i>	User's level.
<b>0</b>	(Optional) The password is in plain text.
<b>7</b> <i>encrypted-password</i>	The password is encrypted.

**Defaults**

N/A


**Command  
Mode**

Global configuration mode

**Usage Guide** No encryption is required in general. The encryption type must be specified for copying and pasting a encrypted password for the device.

A valid password is defined as follows:

- Consists of 1-26 upper/lower case letters and numbers
- Leading spaces are allowed but usually ignored. Spaces in between or at the end are regarded as part of the password.

 If an encryption type is specified and a plaintext password is entered, you cannot enter privileged EXEC mode. A lost password that has been encrypted using any method cannot be restored. In this case, you can only reconfigure the device password.

**Configuration** The following example configures the password as **pw10**.

**Examples**

```
Ruijie(config)# enable password pw10
```

**Related  
Commands**

Command	Description
<b>enable secret</b>	Sets the security password

**Platform** N/A  
**Description**

## 2.15 enable secret

Use this command to configure a security password for different privilege levels. Use the **no** form of this command to restore the default setting.

**enable secret** [ *level level* ] { [ **0** ] *password* | **5 encrypted-secret** }  
**no enable secret** [ *level level* ]

Parameter Description	Parameter	Description
	<b>secret</b>	Password for the user to enter the EXEC configuration layer
	<b>level</b>	User's level.
	<b>0</b>	"0" for no encryption.
	<b>5 encrypted-password</b>	"5" for security encryption.

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** A password comes under two categories: "password" and "security". "Password" indicates a simple password, which can be set only for level 15. "Security" means a security password, which can be set for levels 0-15. If both types of passwords coexist in the system, no "password" type is allowed. If a "password" type password is set for a level other than 15, the system gives an alert and the password is automatically converted into a "security" password. If a "password" type password is set for level 15 and the same as a "security" password, an alert is given. The password must be encrypted, with simple encryption for "password" type passwords and security encryption for "security" type passwords.

**Configuration Examples** The following example configures the security password as **pw10**.

```
Ruijie(config)# enable secret 0 pw10
```

Related Commands	Command	Description
	<b>enable password</b>	Sets passwords for different privilege levels.

**Platform Description** N/A

## 2.16 enable service

Use this command to enable or disable a specified service such as **SSH Server/Telnet Server/Web Server/SNMP Agent**.

**enable service { ssh-sesrver | telnet-server | web-server [ http | https | all ] | snmp-agent }**


**Parameter Description**

Parameter	Description
<b>ssh-server</b>	Enables SSH Server. IPv4 and IPv6 services are enabled at the same time.
<b>telnet-server</b>	Enables Telnet Server. IPv4 and IPv6 services are enabled at the same time.
<b>web-server [ http   https   all ]</b>	Enables HTTP Server. IPv4 and IPv6 services are enabled at the same time.
<b>snmp-agent</b>	Enables SNMP Agent. IPv4 and IPv6 services are enabled at the same time.

**Defaults** telnet-server, snmp-agent and web-server are enabled and ssh-server is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** Use this command to enable or disable a specified service. Use the **no enable service** command to disable the specified service.

 The **enable service web-server** command is followed by three optional keywords: [ **http** | **https** | **all** ]. If the command is followed by no keyword or by **all**, the command enables http and https services. Followed by **http**, the command enables http service only. Followed by **https**, the command enables https service only.

**Configuration Examples** The following example enables the SSH Server.

```
Ruijie(Config)# enable service ssh-sesrver
```

**Related Commands**

Command	Description
<b>show service</b>	Displays the service status in the current system.

**Platform Description** N/A



## 2.17 end

Use this command to return to privileged EXEC mode.

**end**

**Parameter Description**

Parameter	Description
N/A	N/A

**Defaults**

N/A

**Command Mode**

All modes except privileged EXEC mode

**Usage Guide**

N/A

**Configuration**

The following example returns to privileged EXEC mode.

**Examples**

```
Ruijie#con
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#line vty 0
Ruijie(config-line)#end
*May 20 09:49:38: %SYS-5-CONFIG_I: Configured from console by console
Ruijie#
```

**Related Commands**

Command	Description
N/A	N/A

**Platform Description**

N/A

## 2.18 exec-banner

Use this command to enable display of the EXEC message on a specific line. Use the **no** form of this command to restore the default setting.

**exec-banner**

**no exec-banner**


**Parameter Description**

Parameter	Description
N/A	N/A

**Defaults** The EXEC message is displayed on all lines by default.

**Command Mode** LINE configuration mode

**Usage Guide** After you configure the **banner exec** and the **banner motd** commands, the EXEC and the MOTD messages are displayed on all lines by default. If you want to disable display of the EXEC and the MOTD messages on a specific line, configure the **no** form of this command on the line.

 This command does not work for the banner incoming message. If you configure the **banner incoming** command, the banner incoming message is displayed on all reverse Telnet sessions and the display cannot be disabled on a specific line.

**Configuration Examples** The following example disables display of the EXEC message on line VTY 1.

```
Ruijie(config)# line vty 1
Ruijie(config-line)no exec-banner
```

**Related Commands**

Command	Description
N/A	N/A

**Platform Description** N/A

## 2.19 exec-timeout

Use this command to configure connection timeout for this device in LINE mode. Use the **no** form of this command to restore the default setting and the connection never expires.

**exec-timeout** *minutes* [ *seconds* ]

**no exec-timeout**

**Parameter Description**

Parameter	Description
<i>minutes</i>	Timeout in minutes.
<i>seconds</i>	(Optional) Timeout in minutes

**Defaults** The default is 10 minutes.

**Command Mode** Line configuration mode

**Usage Guide** If there is no input or output for this connection within a specified time, this connection will expire, and this LINE will be restored to the free status.

**Configuration** The following example sets the connection timeout to 5'30".

**Examples** Ruijie(config-line)#**exec-timeout** 5 30

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description** N/A

## 2.20 execute

Use this command to execute a command on the file.

**execute** { [ **flash:** ] *filename* }

**Parameter  
Description**

Parameter	Description
<i>filename</i>	Specifies the file path.

**Defaults** N/A

**Command  
Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example executes a command to configure an IP address for the specified interface.

**Examples**

```
Ruijie#execute flash:mybin/config.text
executing script file mybin/config.text .....
executing done
Ruijie#config
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#interface gigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)#ip address 192.168.21.158 24
Ruijie(config-if-GigabitEthernet 0/1)#end
*Sep 29 23:35:49: %SYS-5-CONFIG_I: Configured from console by console
Ruijie#
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform**  
**Description** N/A

## 2.21 exit

Use this command to return to the upper configuration mode.

**exit**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command Mode** All configuration modes

**Usage Guide** N/A

**Configuration Examples** The following example returns to the upper configuration mode.

```
Ruijie#con
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#line vty 0
Ruijie(config-line)#end
*May 20 09:49:38: %SYS-5-CONFIG_I: Configured from console by console
Ruijie#con
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#line vty 0
Ruijie(config-line)#exit
Ruijie(config)#exit
*May 20 09:51:48: %SYS-5-CONFIG_I: Configured from console by console
Ruijie#exit

Press RETURN to get started
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 2.22 help

Use this command to display the help information.

### help

#### Parameter Description

Parameter	Description
N/A	N/A

**Defaults** Any mode

#### Command Mode

**Usage Guide** This command is used to display brief information about the help system. You can use "?" to display all commands or a specified command with its parameters.

**Configuration** The following example displays brief information about the help system.

#### Examples

```
Ruijie#help
Help may be requested at any point in a command by entering
a question mark '?'. If nothing matches, the help list will
be empty and you must backup until entering a '?' shows the
available options.
Two styles of help are provided:
1. Full help is available when you are ready to enter a
   command argument (e.g. 'show ?') and describes each possible
   argument.
2. Partial help is provided when an abbreviated argument is entered
   and you want to know what arguments match the input
   (e.g. 'show pr?'.)
```

The following example displays all available commands in interface configuration mode.

```
Ruijie(config-if-GigabitEthernet 0/0)#?
Interface configuration commands:
  arp          ARP interface subcommands
  bandwidth    Set bandwidth informational parameter
  carrier-delay Specify delay for interface transitions
  dampening    Enable event dampening
  default      Set a command to its defaults
  description  Interface specific description
  dldp        Exec data link detection command
  duplex       Configure duplex operation
  efm          Config efm for an interface
  end          Exit from interface configuration mode
```

exit	Exit from interface configuration mode
expert	Expert extended ACL
flowcontrol	Set the flow-control value for an interface
full-duplex	Force full duplex operation
global	Global ACL
gvrp	GVRP configure command
half-duplex	Force half duplex operation
help	Description of the interactive help system
ip	Interface Internet Protocol config commands
ipv6	Internet Protocol Version 6
isis	Intermediate System - Intermediate System (IS-IS)
l2	Config L2 attribute
label-switching	Enable interface process mpls packet
lACP	LACP interface subcommands
lldp	Link Layer Discovery Protocol
load-interval	Specify interval for load calculation for an interface
mac	Mac extended ACL
mac-address	Set mac-address
mpls	Multi-Protocol Label Switching
mtu	Set the interface Maximum Transmission Unit (MTU)
no	Negate a command or set its defaults
ntp	Configure NTP
port-group	Aggregateport/port bundling configuration
redirect	Redirect packets
rmon	Rmon command
security	Configure the Security
show	Show running system information
shutdown	Shutdown the selected interface
snmp	Modify SNMP interface parameters
speed	Configure speed operation
switchport	Set switching mode characteristics
vrf	Multi-af VPN Routing/Forwarding parameters on the interface
vrrp	VRRP interface subcommands
xconnect	Xconnect commands

The following example displays the parameters of a specified command.

```
Ruijie(config)#access-list 1 permit ?
A.B.C.D Source address
any Any source host
host A single source host
```

**Related  
Commands**

Command	Description
---------	-------------

N/A	N/A
-----	-----

**Platform**  
**Description**

N/A

## 2.23 hostname

Use this command to specify or modify the hostname of a device.

**hostname** *name*

**Parameter**  
**Description**

Parameter	Description
<i>name</i>	Device hostname, string, number or hyphen, up to 63 characters.

**Defaults** The default is Ruijie.

**Command** Global configuration mode  
**Mode**

**Usage Guide** This hostname is mainly used to identify the device and is taken as the username for the local device during dialup and CHAP authentication.

**Configuration** The following example configures the hostname of the device as BeiJingAgenda.

**Examples**

```
Ruijie(config)# hostname BeiJingAgenda
BeiJingAgenda(config)#
```

**Related**  
**Commands**

Command	Description
N/A	N/A

**Platform**  
**Description**

N/A

## 2.24 ip telnet source-interface

Use this command to configure the IP address of an interface as the source address for Telnet connection.

**ip telnet source-interface** *interface-name*

**Parameter**  
**Description**

Parameter	Description
-----------	-------------

<i>interface-name</i>	Configures the IP address of the interface as the source address for Telnet connection.
-----------------------	---

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** This command is used to specify the IP address of an interface as the source address for global Telnet connection. When using the telnet command to log in a Telnet server, apply the global setting if no source interface or source address is specified. Use the **no ip telnet source-interface** command to restore it to the default setting.

**Configuration Examples** The following example configures the IP address of the *Loopback1* interface as the source address for global Telnet connection.

```
Ruijie(Config)# ip telnet source-interface Loopback 1
```

**Related Commands**

Command	Description
telnet	Logs in a Telnet server.

**Platform Description** N/A

## 2.25 language character-set

Use this command to set a language character set.

**language character-set { UTF-8 | GBK | default }**

**Parameter Description**

Parameter	Description
<b>UTF-8</b>	Specifies the UFT-8 character set,
<b>GBK</b>	Specifies the GBK character set.
<b>default</b>	Specifies the default character set.

**Defaults** Default

**Command Mode** Global configuration mode

**Usage Guide** If you want to set a character set in running configuration, please delete the character set configuration different from the target character set first.



**Configuration** The following example specifies the UTF-8 character set.

```
Ruijie(config)#language character-set UTF-8
This may take some time to build configuration, Continue? (yes[no]): y
Ruijie(config)#
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 2.26 lock

Use this command to set a temporary password for the terminal.

**lock**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command Mode** User EXEC mode

**Usage Guide** You can lock the terminal interface and maintain the session continuity to prevent access to the interface by setting a temporary password. Take the following steps to lock the terminal interface:

- Enter the **lock** command, and the system will prompt you for a password:
- Enter the password, which can be any character string. The system will prompt you to confirm the password, clear the screen, and display the "Locked" information.
- To access the terminal, enter the preset temporary password.
- To lock the terminal, run the **lockable** command in line configuration mode and enable terminal locking in the corresponding line.

**Configuration** The following example locks a terminal interface.

```
Ruijie(config-line)# lockable
Ruijie(config-line)# end
Ruijie# lock
Password: <password>
Again: <password>
Locked
Password: <password>
```

Ruijie#

**Related  
Commands**

Command	Description
<b>lockable</b>	Supports terminal locking in the line.

**Platform  
Description**

N/A

## 2.27 lockable

Use this command to support the **lock** command at the terminal. Use the **no** form of this command to restore the default setting.

**lockable**

**no lockable**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults**

This function is disabled by default

**Command  
Mode**

Line configuration mode

**Usage Guide**

This command is used to lock a terminal interface in the corresponding line. To lock the terminal, run the lock command in EXEC mode.

**Configuration**

The following example enables terminal locking at the console port and locks the console.

**Examples**

```
Ruijie(config)# line console 0
Ruijie(config-line)# lockable
Ruijie(config-line)# end
Ruijie# lock
Password: <password>
Again: <password>
Locked
Password: <password>
```

**Related  
Commands**

Command	Description
<b>lock</b>	Locks the terminal.

**Platform**  
**Description**

N/A

## 2.28 login

Use this command to enable simple login password authentication on the interface if AAA is disabled. Use the **no** form of this command to restore the default setting.

**login**  
**no login**

**Parameter**  
**Description**

Parameter	Description
N/A	N/A

**Defaults**

Login is disabled for console and enabled for AUX, TTY and VTY terminals by default.

**Command**  
**Mode**

Line configuration mode

**Usage Guide**

If the AAA security server is inactive, this command enables simple password authentication at login. The password is configured for a VTY or console interface.

**Configuration**

The following example sets a login password authentication on VTY..

**Examples**

```
Ruijie(config)# no aaa new-model
Ruijie(config)# line vty 0
Ruijie(config-line)# password 0 normatest
Ruijie(config-line)# login
```

**Related**  
**Commands**

Command	Description
<b>password</b>	Configures the line login password

**Platform**  
**Description**

N/A

## 2.29 login access non-aaa

Use this command to configure non-AAA authentication on line when AAA is enabled. Use the **no** form of this command to restore the default setting.

**login access non-aaa**  
**no login access non-aaa**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example configures VTY line authentication with AAA enabled.

```
Ruijie(config)#log access non-aaa
Ruijie(config)#aaa new-model
Ruijie(config)#line vty 0 4
Ruijie(config-line)#login local
Ruijie(config-line)#
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 2.30 login authentication

If the AAA is enabled, login authentication must be performed on the AAA server. Use this command to associate login authentication method list. Use the **no** form of this command to remove the configuration.

**login authentication** { **default** | *list-name* }

**no login authentication** { **default** | *list-name* }

Parameter Description	Parameter	Description
	<b>default</b>	Name of the default authentication method list
	<i>list-name</i>	Name of the method list

**Defaults** The default authentication is used when AAA is enabled.

**Command Mode** Line configuration mode

**Usage Guide**

**Configuration** The following example associates the method list on VTY and perform login authentication on a radius server.

**Examples**

```
Ruijie(config)# aaa new-model
Ruijie(config)# aaa authentication login default radius
Ruijie(config)# line vty 0
Ruijie(config-line)# login authentication default
```

**Related Commands**

Command	Description
<b>aaa new-model</b>	Enables the AAA security service.
<b>aaa authentication login</b>	Configures the login authentication method list.

**Platform**

N/A

**Description**

## 2.31 login local

Use this command to enable local user authentication on the interface if AAA is disabled. Use the **no** form of this command to restore the default setting.

**login local**

**no login local**

**Parameter Description**

Parameter	Description
N/A	N/A

**Defaults**

N/A

**Command Mode**

Line configuration mode

**Usage Guide**

If the AAA security server is inactive, this command is used for local user login authentication. The user is allowed to use the **username** command.

**Configuration**

The following example sets local user authentication on VTY.

**Examples**

```
Ruijie(config)# no aaa new-model
Ruijie(config)# username test password 0 test
Ruijie(config)# line vty 0
Ruijie(config-line)# login local
```

Related Commands	Command	Description
		<b>username</b>

**Platform Description** N/A

## 2.32 login privilege log

Use this command to log privilege change. Use the **no** form of this command to restore the default setting.

**login privilege log**

**no login privilege log**

Parameter Description	Parameter	Description
		N/A

**Defaults** This command is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example enables the function of logging privilege change.

```
Ruijie(config)# login privilege log
```

The following example displays the log of privilege change failure.

```
Ruijie>enable 10

Password:
Password:
Password:

% Access denied

Ruijie>

*Sep 10 11:34:19: %SYS-5-PRIV_AUTH_FAIL: Authentication to
privilege level 10 from console failed
```

The following example displays the log of privilege change success.

```
Ruijie>enable 10

Password:

Ruijie#

*Sep 10 11:34:20: %SYS-5-PRIV_AUTH_SUCCESS: Authentication to
privilege level 10 from console success
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description**

N/A

## 2.33 motd-banner

Use this command to enable display of the MOTD message on a specified line. Use the **no** form of this command to restore the default setting.

**motd-banner**  
**no motd-banner**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults**


The MOTD message is displayed on all lines by default.

**Command  
Mode**

Line configuration mode

**Usage Guide**

After you configure the **banner exec** and the **banner motd** commands, the EXEC and the MOTD messages are displayed on all lines by default. If you want to disable display of the EXEC and the MOTD messages on a specific line, configure the **no** form of this command on the line.

 This command does not work for the incoming message. If you configure the **banner incoming** command, the banner incoming message is displayed on all reverse Telnet sessions and the display cannot be disabled on a specific line.

**Configuration**

The following example disables display of the MOTD message on VTY 1.

**Examples**

```
Ruijie(config)# line vty 1
Ruijie(config-line)no motd-banner
```

<b>Related Commands</b>	Command	Description
	N/A	N/A

**Platform Description** N/A

## 2.34 password

Use this command to configure a password for line login, run the **password** command. Use the **no** form of this command to restore the default setting.

**password** { [ **0** ] *password* | **7** *encrypted-password* }  
**no password**

<b>Parameter Description</b>	Parameter	Description
	<i>password</i>	Password for remote line login
	<b>0</b>	(Optional) The password is in plain text by a Ruijie device.
	<b>7</b> <i>encrypted-password</i>	The password is encrypted

**Defaults** N/A

**Command Mode** Line configuration mode

### Usage Guide

**Configuration Examples** The following example configures the line login password as "red".

```
Ruijie(config)# line vty 0
Ruijie(config-line)# password red
```

<b>Related Commands</b>	Command	Description
	<b>login</b>	Moves from user EXEC mode to privileged EXEC mode or enables a higher level of authority.

**Platform Description** N/A



## 2.35 prompt

Use this command to set the **prompt** command. Use the **no** form of this command to restore the default setting.

**prompt** *string*

**no prompt**

**Parameter Description**

Parameter	Description
<i>string</i>	Character string of the <b>prompt</b> command, containing up to 32 letters.

**Defaults**

N/A

**Command Mode**

Global configuration mode

**Usage Guide**

If no prompt string is configured, the system name applies and varies with the system name. The **prompt** command is valid only in EXEC mode.

**Configuration Examples**

The following example sets the prompt string to rgnos.

```
Ruijie(config)# prompt rgnos
Ruijie(config)# end
RGOS
```

**Related Commands**

Command	Description
N/A	N/A

**Platform Description**

N/A

## 2.36 secret

Use this command to set a password encrypted by irreversible MD5 for line login. Use the **no** form of this command to restore the default setting.

**secret** { [ **0** ] *password* | **5** *encrypted-secret* }

**no secret**

**Parameter Description**


Parameter	Description
<b>0</b>	(Optional) sets the plaintext password text and encrypts it with irreversible MD5 after configuration.

<i>password</i>	Sets the password plaintext, a string ranging from 1 to 25 characters.
<b>5</b> <i>encrypted-secret</i>	Sets the password text encrypted by irreversible MD5 and saves it as the encrypted password after configuration.

**Defaults** N/A

**Command mode** Line configuration mode

**Usage Guide** This command is used to set a password encrypted by irreversible MD5 that is authenticated by a remote user through line login.

 If the specified encryption type is 5, the logical length of the cipher text to be entered must be 24 and the 1<sup>st</sup>, 3<sup>rd</sup> and 8<sup>th</sup> characters of the password text must be \$.

In general, the encryption type does not need to be specified as 5 except when the encrypted password is copied and pasted.

Line mode allows configuration of both “password” and “secret” types passwords at the same time. When the two passwords are the same, the system will send alert notification but the configuration will be permitted. When the system is configured with the two passwords, if the user enters a password that does not match the “secret” type password, it will not continue to match the “password” type password and login fails, enhancing security for the system password.

**Configuration** The following example sets the password encrypted by irreversible MD5 for line login to vty0.

**Examples**

```
Ruijie(config)# line vty 0
Ruijie(config-line)# secret vty0
```

The following displays the encryption outcome by running the **show** command.

```
secret 5 $1$X834$wvx6y794uAD8svzD
```

Related Commands	Command	Description
	<b>login</b>	Sets simple password authentication on the interface as the login authentication mode

**Platform Description** N/A

## 2.37 session

Use this command to connect to another device in VSU multiple-device environment (box-type device).

**session { master | device *device-number* }**

<b>Parameter Description</b>	<b>Parameter</b>	<b>Description</b>
	<b>master</b>	Configures the slave host to connect with the master host or the slave management module with the master management module.
	<b>device</b> <i>device-number</i>	Sets the device number.
<b>Defaults</b>	N/A	
<b>Command Mode</b>	User EXEC mode	
<b>Usage Guide</b>	N/A	
<b>Configuration Examples</b>	<p>The following example configures the slave host to connect with the master host in VSU environment.</p> <pre>Ruijie# session master</pre> <p>The following example connects to device1 through session in VSU multiple-device environment (box-type device).</p> <pre>Ruijie# session device 1</pre>	
<b>Related Commands</b>	<b>Command</b>	<b>Description</b>
	N/A	N/A
<b>Platform Description</b>	N/A	

## 2.38 session-timeout

Use this command to configure the session timeout for a remote terminal. Use the **no** form of this command to restore the default setting and the session never expires.

**session-timeout** *minutes* [ **output** ]

**no session-timeout**

<b>Parameter Description</b>	<b>Parameter</b>	<b>Description</b>
	<i>minutes</i>	Timeout in minutes.
	<b>output</b>	Regards data output as the input to determine whether the session expires.

**Defaults** The default timeout is 0.

**Command** LINE configuration mode

**Mode**

**Usage Guide** If no input or output in current LINE mode is found on the remote terminal for the session within a specified time, this connection will expire, and this LINE will be restored to the free status.

**Configuration** The following example specifies the timeout as 5 minutes.

**Examples** Ruijie (config-line) #**exec-timeout 5 output**

**Related  
Commands**

Command	Description
N/A	N/A

**Platform**

**Description**

N/A

## 2.39 show boot config

Use this command to display the path for saving startup configurations and the corresponding file name.

**show boot config**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults**

N/A

**Command**

Privileged EXEC mode

**Mode**

**Usage Guide**

N/A

**Configuration** The following example displays the path for saving startup configurations and the corresponding file name..

**Examples**

```
Ruijie#show boot config
Boot config file: [flash:/ruijie.text]
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform**  
**Description** N/A

## 2.40 show debugging

Use this command to display debugging state.

**show debugging**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration Examples** The following example displays debugging state.

```
Ruijie#show debugging
```

```
debug fw-group detect intf-state
```

Related Commands	Command	Description
	N/A	N/A

**Platform**  
**Description** N/A

## 2.41 show hostname

Use this command to display the hostname of a device.

**show hostname**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command** Privileged EXEC mode  
**Mode**

**Usage Guide** N/A

**Configuration** The following example displays the hostname of a device.

**Examples**

```
Ruijie#show hostname
Ruijie
Ruijie#
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description** N/A

## 2.42 show language character-set

Use this command to display the language character set configuration.

**show language character-set**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** N/A

**Command** Privileged EXEC mode  
**Mode**

**Usage Guide** N/A

**Configuration** The following example displays the language character set configuration.

**Examples**

```
Ruijie#show language character-set
Current language character set encode: UTF-8
Ruijie#
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A  
**Description**

## 2.43 show line

Use this command to display the configuration of a line.

**show line** { **console** *line-num* | **vty** *line-num* | *line-num* }

Parameter Description	Parameter	Description
	<b>console</b>	Displays the configuration of a console line.
	<b>vty</b>	Displays the configuration of a vty line.
	<i>line-num</i>	Number of the line.

**Defaults** N/A

**Command Mode** Privileged EXEC mode

### Usage Guide

**Configuration** The following example displays the configuration of a console port.

```

Examples
Ruijie# show line console 0
CON      Type      speed  Overruns
* 0      CON        9600   45927

Line 0, Location: "", Type: "vt100"
Length: 24 lines, Width: 79 columns
Special Chars: Escape Disconnect Activation
                ^^x      none      ^M
Timeouts:      Idle EXEC   Idle Session
                never      never
History is enabled, history size is 10.
Total input: 53564 bytes
Total output: 395756 bytes
Data overflow: 27697 bytes
stop rx interrupt: 0 times
    
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 2.44 show reload

Use this command to display the system restart settings.

**show reload**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode

### Usage Guide

**Configuration** The following example displays the restart settings of the system.

**Examples**

```
Ruijie# show reload
Reload scheduled in 595 seconds.
At 2003-12-29 11:37:42
Reload reason: test.
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 2.45 show running-config

Use this command to display how the current device system is configured..

**show running-config**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode



**Usage Guide** N/A

**Configuration** N/A

**Examples**

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 2.46 show service

Use this command to display the service status.

**show service**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays whether the service is enabled or disabled.

**Examples**

```
Ruijie# show service
web-server : disabled
web-server(https): disabled
snmp-agent : enabled
ssh-server : enabled
telnet-server : disabled
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 2.47 show sessions

Use this command to display the Telnet Client session information.

**show sessions**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command Mode** User EXEC mode

**Usage Guide** Telnet Client session information includes the VTY number and the server IP address.

**Configuration** The following example displays the Telnet Client session information.

**Examples**

```
Ruijie#show sessions
Conn Address
*1 127.0.0.1
*2 192.168.21.122
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 2.48 show startup-config

Use this command to display the device configuration stored in the Non Volatile Random Access Memory (NVRAM).

**show startup-config**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command** Privileged EXEC mode  
**Mode**

**Usage Guide** The device configuration stored in the NVRAM is executed while the device is starting. On a device that does not support **startup-config** is contained in the default configuration file **/config.text** in the built-in flash memory.

**Configuration Examples** N/A

Related Commands	Command	Description
	<b>boot config</b>	Sets the name of the boot configuration file.

**Platform Description** N/A

## 2.49 show this

Use this command to display effective configuration in the current mode.

### show this

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command Mode** All modes.

**Usage Guide** The configuration in the following range modes cannot be displayed. If the **show this** command is run, the outcome is NULL.

1. Use the **line first-line last-line** command to configure lines in a continuous group and enter LINE configuration mode.
2. Use the **vlan range** command to configure VLANs and enter vlan range configuration mode. Use the **interface range** command to configure interfaces and enter interface range configuration mode.

**Configuration Examples** The following example displays configuration on interface fastEthernet 0/1.

```
Ruijie (config)#interface fastEthernet 0/1
Ruijie (config-if-FastEthernet 0/1)#show this
Building configuration...
```

```

!
spanning-tree link-type point-to-point
spanning-tree mst 0 port-priority 0
!
end
Ruijie (config-if-FastEthernet 0/1)#

```

The following example displays configuration on interface range vlan 1-3.

```

Ruijie(config-if-range)#show this

Building configuration...
!
interface VLAN 1
 ip address dhcp
interface VLAN 2
 ip address 1.1.1.1 255.255.255.0
interface VLAN 3
 ip address 3.3.3.3 255.255.255.0
!
End
Ruijie (config-if-range) #

```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description**

N/A

## 2.50 speed

Use this command to set the speed at which the terminal transmits packets. Use the **no** form of this command to restore the default setting.

**speed** *speed*

**no speed**

**Parameter  
Description**

Parameter	Description
<i>speed</i>	Transmission rate (bps) on the terminal. For serial ports, optional rates include 9600, 19200, 38400, 57600, and 115200 bps. The default rate is 9600 bps.

**Defaults**

The default is 9600.

**Command** Line configuration mode  
**Mode**

**Usage Guide** This command is used to set the speed at which the terminal transmits packets.

**Configuration** The following example sets the rate of the serial port to 57600 bps.

**Examples**

```
Ruijie(config)# line console 0
Ruijie(config-line)# speed 57600
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 2.51 telnet

Use this command to log in a server that supports telnet connection.

**telnet** [ *oob* ] *host* [ *port* ] [ /*source* { **ip** *A.B.C.D* | **ipv6** *X:X:X:X::X* | **interface** *interface-name* } ]

Parameter Description	Parameter	Description
	<b>host</b>	
<b>Port</b>		Selects the TCP port number for login, 23 by default.
<b>/source</b>		Specifies the source IP address or source interface used by the Telnet client.
<b>ip</b> <i>A.B.C.D</i>		Specifies the source IPv4 address used by the Telnet client.
<b>ipv6</b> <i>X:X:X:X::X</i>		Specifies the source IPv6 address used by the Telnet client.
<b>interface</b> <i>interface-name</i>		Specifies the source interface used by the Telnet client.
<b>oob</b>		Connects to Telnet server through oob channel. This parameter is available only when the device has a MGMT port.

**Defaults** N/A

**Command Mode** User EXEC mode

**Usage Guide**

**Configuration Examples** The following example sets telnet to IPv4 address 192.168.1.11. The port number is the default, and the source interface is Gi 0/1. The queried VRF routing table is vpn1.

```
Ruijie# telnet 192.168.1.11 /source-interface gigabitEthernet 0/1 /vrf
vpnl
```

The following example sets telnet to IPv6 address 2AAA:BBBB::CCCC.

```
Ruijie# telnet 2AAA:BBBB::CCCC
```

**Related  
Commands**

Command	Description
<b>ip telnet source-interface</b>	Specifies the IP address of the interface as the source address for Telnet connection.
<b>show sessions</b>	Displays the currently established Telnet sessions.
<b>exit</b>	Exits current connection.

**Platform  
Description**

N/A

## 2.52 username

Use this command to set a local username and optional authorization information.. Use the **no** form of this command to restore the default setting.

```
username name [ login mode { aux | console | ssh | telnet } ] [ online amount number ]
[ permission oper-mode path ] [ privilege privilege-level ] [ reject remote-login ] [ web-auth ]
[ pwd-modify ] [ nopassword | password [ 0 | 7 ] text-string ] [ secret [ 0 | 5 ] text-string ]
no username name
```

**Parameter  
Description**


Parameter	Description
<i>name</i>	Username
<b>login mode</b>	Sets the login mode.
<b>aux</b>	Sets the login mode to aux.
<b>console</b>	Sets the login mode to console.
<b>ssh</b>	Sets the login mode to ssh.
<b>telnet</b>	Sets the login mode to telnet.
<b>online amount</b> <i>number</i>	Sets the amount of users online simultaneously.
<b>permission</b> <i>oper-mode path</i>	Sets the permission on the specified file. <i>oper-mode</i> refers to the operation mode and <i>path</i> to the file or the directory path.
<b>privilege</b> <i>privilege-level</i>	Sets the privilege level, in the range from 0 to 15.
<b>reject remote-login</b>	Confines the account to remote login.
<b>web-auth</b>	Confines the account to web authentication.
<b>pwd-modify</b>	Allows the web authentication user of this account to change the password. It works only when the <b>web-auth</b> command is configured.
<b>nopassword</b>	The account is not configured with a password.

<b>password</b> [ 0   7 ] <i>text-string</i>	If the password type is 0, the password is in plain text. If the type is 7, the password is encrypted. The password is in plain text by default.
<b>secret</b> [ 0   5 ] <i>text-string</i>	If the password type is 0, the password is in plain text. If the type is 5, the password is encrypted. The password is in plain text by default.

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** This command is used to establish a local user database for authentication.

-  If encryption type is 7, the cipher text you enter should contain seven characters to be valid. In general, do not set the encryption type 7. Instead, specify the type of encryption as 7 only when the encrypted password is copied and pasted.

**Configuration Examples** The following example configures a username and password and binds the user to level 15.

```
Ruijie(config)# username test privilege 15 password 0 pw15
```

The following example configures the username and password exclusive to web authentication.

```
Ruijie(config)# username user1 web-auth password 0 pw
```

The following example configures user test with read and write permissions on all files and directories.

```
Ruijie(config)# username test permission rw /
```

The following example configures user test with read, write and execute permissions on all files and directories except the config.text file.

```
Ruijie(config)# username test permission n /config.text
```

```
Ruijie(config)# username test permission rwx /
```

**Related Commands**

Command	Description
<b>login local</b>	Enables local authentication

**Platform Description** N/A

## 2.53 username export

Use this command to export user information to the file.

**username export** *filename*

<b>Parameter Description</b>	Parameter	Description
	<i>filename</i>	The file name.
<b>Defaults</b>	N/A	
<b>Command Mode</b>	Privileged EXEC mode	
<b>Usage Guide</b>	This command is used to export user information to the file.	
<b>Configuration Examples</b>	The following example exports user information to the file.	
	<pre>Ruijie# username export user.csv</pre>	
<b>Related Commands</b>	Command	Description
	N/A	N/A
<b>Platform Description</b>	N/A	

## 2.54 username import

Use this command to import user information from the file.

**username import** *filename*

<b>Parameter Description</b>	Parameter	Description
	<i>filename</i>	The file name.
<b>Defaults</b>	N/A	
<b>Command Mode</b>	Privileged EXEC mode	
<b>Usage Guide</b>	This command is used to import user information from the file.	
<b>Configuration Examples</b>	The following example imports user information from the file.	
	<pre>Ruijie# username import user.csv</pre>	
<b>Related Commands</b>	Command	Description
	N/A	N/A



**Platform**  
**Description** N/A

## 2.55 write

Use this command to save **running-config** at a specified location.

**write [ memory | terminal ]**

Parameter Description	Parameter	Description
	<b>memory</b>	Writes the system configuration (running-config) into NVRAM, which is equivalent to <b>copy running-config startup-config</b> .
	<b>terminal</b>	Displays the system configuration, which is equivalent to <b>show running-config</b> .

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** Despite the presence of alternative commands, these commands are widely used and accepted. Therefore, they are reserved to facilitate user operations.

The system automatically creates the specified file and writes it into system configuration if the device that stores the file exists;

The system will ask you whether to save the current configuration in default boot configuration file /config.text and perform an action as required if the device that stores the file does not exist possibly because the boot configuration file is stored on a removable storage device such as USB or SD disk, and the device has not been loaded when you run the **write [ memory ]** command.

**Configuration** The following example saves **running-config** at a specified location.

```
Examples Ruijie# write
Building configuration...
[OK]
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 3. Line Commands

### 3.1 access-class

Use this command to control login into the terminal through IPv4 ACL. Use the **no** form of this command to restore the default setting.

**access-class** { *access-list-number* | *access-list-name* } { **in** | **out** }

**no access-class** { *access-list-number* | *access-list-name* } { **in** | **out** }

Parameter Description	Parameter	Description
	<i>access-list-number</i>	Specifies the ACL number. Standard IP ACL number is from 1 to 99 and from 1300 to 1999. Extended IP ACL number is from 100 to 199 and from 2000 to 2699.
	<i>access-list-name</i>	Specifies the ACL name.
	<b>in</b>	Filters the incoming connections.
	<b>out</b>	Filters the outgoing connections.

**Defaults** N/A

**Command Mode** Line configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example uses ACL 20 to filter the incoming connections in line VTY 0 5.

```
Ruijie(config)# line vty 0 5
Ruijie(config-line)access-list 20 in
```

The following example uses the ACL named "test" to filter the outgoing connections in line VTY 6 7.

```
Ruijie(config)# line vty 6 7
Ruijie(config-line)access-list test out
```

Related Commands	Command	Description
	<b>show running</b>	Displays status information

**Platform Description** N/A

## 3.2 accounting commands

Use this command to enable command accounting in the line. Use the **no** form of this command to restore the default setting.

**accounting commands** *level* { **default** | *list-name* }

**no accounting commands** *level*

### Parameter Description

Parameter	Description
<i>level</i>	Command level ranging from 0 to 15. The command of this level is accounted when it is executed.
<b>default</b>	Default authorization list name.
<i>list-name</i>	Optional list name.

**Defaults** This function is disabled by default.

**Command Mode** Line configuration mode

**Usage Guide** This function is used together with AAA authorization. Configure AAA command accounting first, and then apply it on the line.

**Configuration Examples** The following example enables command accounting in line VTY 1 and sets the command level to 15.

```
Ruijie(config)# aaa new-model
Ruijie(config)# aaa accounting commands 15 default start-stop group
tacacs+
Ruijie(config)# line vty 1
Ruijie(config-line)# accounting commands 15 default
```

### Related Commands

Command	Description
N/A	N/A

**Platform Description** N/A

## 3.3 accounting exec

Use this command to enable user access accounting in the line. Use the **no** form of this command to restore the default setting.

**accounting commands** *level* { **default** | *list-name* }

**no accounting commands** *level*

Parameter Description	Parameter	Description
	<i>level</i>	Command level ranging from 0 to 15. The command of this level is accounted when it is executed.
	<b>default</b>	Default authorization list name.
	<i>list-name</i>	Optional list name.

**Defaults** This function is disabled by default.

**Command Mode** Line configuration mode

**Usage Guide** This function is used together with AAA authorization. Configure AAA EXEC accounting first, and then apply it on the line.

**Configuration** The following example enables user access accounting in line VTY 1.

**Examples**

```
Ruijie(config)# aaa new-model
Ruijie(config)# aaa accounting exec default start-stop group radius
Ruijie(config)# line vty 1
Ruijie(config-line)# accounting exec default
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 3.4 authorization commands

Use this command to enable authorization on commands, Use the **no** form of this command to restore the default setting.

**authorization commands** *level* { **default** | *list-name* }

**no authorization commands** *level*

Parameter Description	Parameter	Description
	<i>level</i>	Command level ranging from 0 to 15. The command of this level is executed after authorization is performed.
	<b>default</b>	Default authorization list name,
	<i>list-name</i>	Optional list name.

- Defaults** This function is disabled by default.
- Command Mode** Line configuration mode
- Usage Guide** This function is used together with AAA authorization. Configure AAA authorization first, and then apply it on the line.

**Configuration** The following example enables authorization on commands of level 15 in line VTY 1.

**Examples**

```
Ruijie(config)# aaa new-model
Ruijie(config)# aaa authorization commands 15 default group tacacs+
Ruijie(config)# line vty 1
Ruijie(config-line)# authorization commands 15 default
```

**Related Commands**

Command	Description
N/A	N/A

**Platform Description** N/A

## 3.5 authorization exec

Use this command to enable EXEC authorization for the line. Use the **no** form of this command to restore the default setting.

**authorization { default | list-name }**  
**no authorization exec**

**Parameter Description**

Parameter	Description
<b>default</b>	Default authorization list name,
<i>list-name</i>	Optional list name.

- Defaults** This function is disabled by default,
- Command Mode** Line configuration mode
- Usage Guide** This function is used together with AAA authorization. Configure AAA EXEC authorization first, and then apply it on the line.
- Configuration** The following example performs EXEC authorization to line VTY 1.
- Examples**
- ```
Ruijie(config)# aaa new-model
```

```
Ruijie(config)# aaa authorization exec default group radius
Ruijie(config)# line vty 1
Ruijie(config-line)# authorization exec default
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform  
Description**

N/A

### 3.6 clear line

Use this command to clear connection status of the line.

**clear line** { **console** *line-num* | **vtty** *line-num* | *line-num* }

**Parameter  
Description**

| Parameter       | Description                                            |
|-----------------|--------------------------------------------------------|
| <b>console</b>  | Clears connection status of the console line.          |
| <b>vtty</b>     | Clears connection status of the virtual terminal line. |
| <i>line-num</i> | Specifies the line to be cleared.                      |

**Defaults**

N/A

**Command  
Mode**

Privileged EXEC mode

**Usage Guide**

This command is used to clear connection status of the line and restore the line to the unoccupied status to create new connections.

**Configuration  
Examples**

The following example clears connection status of line VTY 13. The connected session on the client (such as Telnet and SSH) in the line is disconnected immediately.

```
Ruijie# clear line vty 13
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform  
Description**

N/A

### 3.7 disconnect-character

Use this command to set the hot key that disconnects the terminal service connection. Use the **no** form of this command to restore the default setting.

**disconnect-character** *ascii-value*

**no disconnect-character**

**Parameter Description**

| Parameter          | Description                                                                                                      |
|--------------------|------------------------------------------------------------------------------------------------------------------|
| <i>ascii-value</i> | ASCII decimal value of the hot key that disconnects the terminal service connection, in the range from 0 to 255. |

**Defaults**

The default hot key is **Ctrl+D** and the ASCII decimal value is 0x04.

**Command Mode**

Line configuration mode

**Usage Guide**

This command is used to set the hot key that disconnects the terminal service connection. The hot key cannot be the commonly used ASCII node such as characters ranging from a to z, from A to Z or numbers ranging from 0 to 9. Otherwise, the terminal service cannot operate properly.

**Configuration Examples**

The following example sets the hot key that disconnects the terminal service connection on line VTY 0 5 to **Ctrl+E** (0x05).

```
Ruijie(config)# line vty 0 5
Ruijie(config-line)# disconnect-character 5
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform**

N/A

**Description**

### 3.8 escape-character

Use this command to set the escape character for the line. Use the **no** form of this command to restore the default setting.

**escape-character** *escape-value*

**no escape-character**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
|-----------|-------------|

|                     |                                                                                                      |
|---------------------|------------------------------------------------------------------------------------------------------|
| <i>escape-value</i> | Sets the ASCII value corresponding to the escape character for the line, in the range from 0 to 255. |
|---------------------|------------------------------------------------------------------------------------------------------|

**Defaults** The default escape character is **Ctrl+^ (Ctrl+Shift+6)** and the ASCII decimal value is 30.

**Command Mode** Line configuration mode

**Usage Guide** After configuring this command, press the key combination of the escape character and then press **x**, the current session is disconnected to return to the original session.

**Configuration** The following example sets the escape character for the line to 23 (**Ctrl+w**).

**Examples**

```
Ruijie(config)# line vty 0
Ruijie(config-line)# escape-character 23
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A

### 3.9 exec

Use this command to enable the line to enter the command line interface. Use the **no** form of this command to disable the function.

**exec**  
**no exec**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** This function is enabled by default.

**Command Mode** Line configuration mode

**Usage Guide** The **no exec** command is used to ban the line from entering the command line interface. You have to enter the command line interface through other lines,

**Configuration** The following example bans line VTY 1 from entering the command line interface.

**Examples**

```
Ruijie(config)# line vty 1
```



```
Ruijie(config-line)# no exec
Ruijie# show users
Line          User          Host(s)          Idle          Location
-----
*  0 con 0    ---          idle            00:00:00    ---
  1 vty 0    ---          idle            00:01:03    20.1.1.2
  3 vty 2    ---          idle            00:00:13    20.1.1.2
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

### 3.10 history

Use this command to enable command history for the line or set the number of commands in the command history. Use the **no history** command to disable command history. Use the **no history size** command to restore the number of commands in the command history to the default setting.

**history [ size size ]**

**no history**

**no history size**

**Parameter  
Description**

| Parameter        | Description                                         |
|------------------|-----------------------------------------------------|
| <b>size size</b> | The number of commands, in the range from 0 to 256. |

**Defaults** This function is enabled by default, The default *size* is 10.

**Command  
Mode** Line configuration mode

**Usage Guide** N/A

**Configuration  
Examples** The following example sets the number of commands in the command history to 20 for line VTY 0 5.

```
Ruijie(config)# line vty 0 5
Ruijie(config-line)# history size 20
```

The following example disables the command history for line VTY 0 5.

```
Ruijie(config)# line vty 0 5
Ruijie(config-line)# no history
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  |         | N/A         |

**Platform** N/A  
**Description**

### 3.11 ipv6 access-class

Use this command to configure access to the terminal through IPv6 ACL. Use the **no** form of this command to restore the default setting.

**ipv6 access-class** *access-list-name* { **in** | **out** }

**no ipv6 access-class** *access-list-name* { **in** | **out** }

| Parameter Description | Parameter  | Description                       |
|-----------------------|------------|-----------------------------------|
|                       |            | <i>access-list-name</i>           |
|                       | <b>in</b>  | Filters the incoming connections. |
|                       | <b>out</b> | Filters the outgoing connections. |

**Defaults** N/A

**Command Mode** Line configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example uses the ACL named “test” to filter the outgoing IPv6 connections in line VTY 0 4.

```
Ruijie(config)# line vty 0 4
Ruijie(config-line)ipv6 access-list test out
```

| Related Commands | Command | Description         |
|------------------|---------|---------------------|
|                  |         | <b>show running</b> |

**Platform** N/A  
**Description**

### 3.12 length

Use this command to set the screen length for the line. Use the **no** form of this command to restore the default setting.

**length** *screen-length***no length****Parameter  
Description**

| Parameter            | Description                                         |
|----------------------|-----------------------------------------------------|
| <i>screen-length</i> | Sets the screen length, in the range from 0 to 512. |

**Defaults**

The default is 24.

**Command  
Mode**

Line configuration mode

**Usage Guide**

N/A

**Configuration**

The following example sets the screen length to 10.

**Examples**

```
Ruijie(config-line)# length 10
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform  
Description**

N/A

### 3.13 line

Use this command to enter the specified LINE mode.

**line** [**console** | **vty**] *first-line* [*last-line*]**Parameter  
Description**

| Parameter         | Description                                                  |
|-------------------|--------------------------------------------------------------|
| <b>console</b>    | Console port                                                 |
| <b>vty</b>        | Virtual terminal line, applicable for telnet/ssh connection. |
| <i>first-line</i> | Number of first-line to enter                                |
| <i>last-line</i>  | Number of last-line to enter                                 |

**Defaults**

N/A

**Command  
Mode**

Global configuration mode

**Usage Guide**

**Configuration** The following example enters the LINE mode from LINE VTY 1 to 3:

**Examples**

```
Ruijie(config)# line vty 1 3
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 3.14 line vty

Use this command to increase the number of VTY connections currently available. Use the **no** form of this command to restore the default setting.

**line vty** *line-number*

**no line vty** *line-number*

**Parameter  
Description**

| Parameter          | Description                                           |
|--------------------|-------------------------------------------------------|
| <i>line-number</i> | Number of VTY connections, in the range from 0 to 35. |

**Defaults**

**Command** Global configuration mode.  
**Mode**

**Usage Guide**

**Configuration** The following example increases the number of available VTY connections to 20. The available VTY connections are numbered 0 to 19.

**Examples**

```
Ruijie(config)# line vty 19
```

The following example decreases the number of available VTY connections to 10. The available VTY connections are numbered 0-9.

```
Ruijie(config)# line vty 10
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 3.15 location

Use this command to configure the line location description. Use the **no** form of this command to restore the default setting.

**location** *location*

**no location**

| Parameter Description | Parameter       | Description               |
|-----------------------|-----------------|---------------------------|
|                       | <i>location</i> | Line location description |

**Defaults** N/A

**Command Mode** Line configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example describes the line location as Swtich's Line VTY 0.

```
Ruijie(config)# line vty 0
Ruijie(config-line)# location Swtich's Line Vty 0
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 3.16 monitor

Use this command to enable log display on the terminal. Use the **no** form of this command to restore the default setting,

**monitor**

**no monitor**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Line configuration mode

**Usage Guide** N/A

**Configuration** The following example enables log display on the terminal in VTY line 0 5.

```
Ruijie(config)# line vty 0 5
Ruijie(config-line)# monitor
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A

### 3.17 privilege level

Use this command to set the privilege level for the line. Use the **no** form of this command to restore the default setting.

**privilege level** *level*

**no privilege level**

**Parameter Description**

| Parameter    | Description                                 |
|--------------|---------------------------------------------|
| <i>level</i> | Privilege level, in the range from 0 to 15. |

**Defaults** The default is 1.

**Command Mode** Line configuration mode

**Usage Guide** N/A

**Configuration** The following example sets the privilege level for the line VTY 0 4 to 14.

```
Ruijie(config)# line vty 0 4
Ruijie(config-line)privilege level 14
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

### 3.18 refuse-message

Use this command to set the login refusal message for the line. Use the **no** form of this command to restore the default setting.

**refuse-message** [ *c message c* ]

**no refuse-message**

**Parameter Description**

| Parameter      | Description                                                                      |
|----------------|----------------------------------------------------------------------------------|
| <i>c</i>       | Delimiter of the login refusal message, which is not allowed within the message. |
| <i>message</i> | Login refusal message.                                                           |

**Defaults** N/A

**Command Mode** Line configuration mode

**Usage Guide** This command is used to set the login refusal message for the line. The characters entered after the ending delimiter are discarded directly, The login refusal message is displayed when the user has been refused to login.

**Configuration Examples** The following example sets the login refusal message for the line to "Unauthorized user cannot login to the ruijie device".

```
Ruijie(config-line)#vacant-message @ Unauthorized user cannot login to the
ruijie device @
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

### 3.19 show history

Use this command to display the command history of the line.

**show history**

| <b>Parameter Description</b> | <table border="1"> <thead> <tr> <th>Parameter</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>N/A</td> <td>N/A</td> </tr> </tbody> </table> | Parameter | Description | N/A | N/A |
|------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|-----------|-------------|-----|-----|
| Parameter                    | Description                                                                                                                                           |           |             |     |     |
| N/A                          | N/A                                                                                                                                                   |           |             |     |     |
| <b>Defaults</b>              | N/A                                                                                                                                                   |           |             |     |     |
| <b>Command Mode</b>          | Privileged EXEC mode                                                                                                                                  |           |             |     |     |
| <b>Usage Guide</b>           | N/A                                                                                                                                                   |           |             |     |     |
| <b>Configuration</b>         | The following example displays the command history of the line.                                                                                       |           |             |     |     |
| <b>Examples</b>              | <pre>Ruijie# show history exec: sh privilege sh run show user sh user all show history</pre>                                                          |           |             |     |     |
| <b>Related Commands</b>      | <table border="1"> <thead> <tr> <th>Command</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>N/A</td> <td>N/A</td> </tr> </tbody> </table>   | Command   | Description | N/A | N/A |
| Command                      | Description                                                                                                                                           |           |             |     |     |
| N/A                          | N/A                                                                                                                                                   |           |             |     |     |
| <b>Platform Description</b>  | N/A                                                                                                                                                   |           |             |     |     |

### 3.20 show line

Use this command to display line configuration.

**show line** { **console** *line-num* | **vty** *line-num* | *line-num* }

| <b>Parameter Description</b> | <table border="1"> <thead> <tr> <th>Parameter</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td><b>console</b></td> <td>Displays configuration for the console line.</td> </tr> <tr> <td><b>vty</b></td> <td>Displays configuration for the virtual terminal line.</td> </tr> <tr> <td><i>line-num</i></td> <td>Displays the line.</td> </tr> </tbody> </table> | Parameter | Description | <b>console</b> | Displays configuration for the console line. | <b>vty</b> | Displays configuration for the virtual terminal line. | <i>line-num</i> | Displays the line. |
|------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------|-------------|----------------|----------------------------------------------|------------|-------------------------------------------------------|-----------------|--------------------|
| Parameter                    | Description                                                                                                                                                                                                                                                                                                                                                             |           |             |                |                                              |            |                                                       |                 |                    |
| <b>console</b>               | Displays configuration for the console line.                                                                                                                                                                                                                                                                                                                            |           |             |                |                                              |            |                                                       |                 |                    |
| <b>vty</b>                   | Displays configuration for the virtual terminal line.                                                                                                                                                                                                                                                                                                                   |           |             |                |                                              |            |                                                       |                 |                    |
| <i>line-num</i>              | Displays the line.                                                                                                                                                                                                                                                                                                                                                      |           |             |                |                                              |            |                                                       |                 |                    |
| <b>Defaults</b>              | N/A                                                                                                                                                                                                                                                                                                                                                                     |           |             |                |                                              |            |                                                       |                 |                    |
| <b>Command Mode</b>          | Privileged EXEC mode                                                                                                                                                                                                                                                                                                                                                    |           |             |                |                                              |            |                                                       |                 |                    |



**Usage Guide** N/A

**Configuration** The following example displays configuration for the console port.

**Examples**

```
Ruijie# show line console 0
CON      Type      speed  Overruns
* 0      CON      9600   45927
Line 0, Location: "", Type: "vt100"
Length: 24 lines, Width: 79 columns
Special Chars: Escape Disconnect Activation
                ^^x      none      ^M
Timeouts:      Idle EXEC      Idle Session
                never      never
History is enabled, history size is 10.
Total input: 53564 bytes
Total output: 395756 bytes
Data overflow: 27697 bytes
stop rx interrupt: 0 times
```

| Field             | Description                                                                                                                         |
|-------------------|-------------------------------------------------------------------------------------------------------------------------------------|
| CON               | Terminal type. CON indicates console; 0 indicates terminal line number and * ahead of the number means that the terminal is in use. |
| Type              | Terminal type, including CON, AUX, TTY, and VTY.                                                                                    |
| speed             | Asynchronous speed.                                                                                                                 |
| Overruns          | The number of overrun errors received by the flash.                                                                                 |
| Line 0            | Terminal line number.                                                                                                               |
| Location: ""      | Line location configuration.                                                                                                        |
| Type: "vt100"     | Compatibility standard.                                                                                                             |
| Special Chars     | Special characters, including Escape, Disconnect, and Activation characters.                                                        |
| Timeouts          | Timeout value; "never" indicates no timeout.                                                                                        |
| History           | Whether to enable command history; the number of commands in the command history.                                                   |
| Total input       | Data volume received from the drive.                                                                                                |
| Total output      | Date volume sent to the drive.                                                                                                      |
| Data overflow     | Overflowing data volume.                                                                                                            |
| stop rx interrupt | Data reception interruption times.                                                                                                  |

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A

## 3.21 show privilege

Use this command to display the privilege level of the line.

**show privilege**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the privilege level of the line.

**Examples**

```
Ruijie# show privilege
Current privilege level is 10
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 3.22 show users

Use this command to display the login user information.

**show users [ all ]**

| Parameter Description | Parameter  | Description                                                                                                |
|-----------------------|------------|------------------------------------------------------------------------------------------------------------|
|                       | <b>all</b> | Displays line user information, including users logging into the line and users not logging into the line. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the information about users logging into the line,

**Examples**

```
Ruijie# show users
Line          User          Host(s)          Idle          Location
-----
0 con 0      ---          idle            00:00:46     ---
1 vty 0      ---          idle            00:00:29     20.1.1.2
* 2 vty 1    ---          idle            00:00:00     20.1.1.2
```

The following example displays all line user information,

```
Ruijie(config)# show users all
Line          User          Host(s)          Idle          Location
-----
0 con 0      ---          idle            00:00:49     ---
1 vty 0      ---          idle            00:00:32     20.1.1.2
* 2 vty 1    ---          idle            00:00:00     20.1.1.2
3 vty 2      ---          idle            00:00:00     ---
4 vty 3      ---          idle            00:00:00     ---
5 vty 4      ---          idle            00:00:00     ---
6 vty 5      ---          idle            00:00:00     ---
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

### 3.23 speed

Use this command to configure the baud rate for the specified line. Use the **no** form of this command to restore the default setting,

**speed** *baudrate*

**no speed**

**Parameter Description**

| Parameter       | Description                                           |
|-----------------|-------------------------------------------------------|
| <i>baudrate</i> | Sets the baud rate, in the range from 9600 to 115200. |

**Defaults** The default is 9600.

**Command Mode** LINE configuration mode

**Usage Guide** N/A

**Configuration** The following example sets the baud rate to 115200,

**Examples** Ruijie(config-line)# speed 115200

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A

## 3.24 terminal escape-character

Use this command to set the escape character for the current terminal. Use the **no** form of this command to restore the default setting.

**terminal escape-character** *escape-value*

**terminal no escape-character**

**Parameter Description**

| Parameter           | Description                                                                                                      |
|---------------------|------------------------------------------------------------------------------------------------------------------|
| <i>escape-value</i> | Sets the ASCII value corresponding to the escape character for the current terminal, in the range from 0 to 255. |

**Defaults** The default escape character is **Ctrl+^ (Ctrl+Shift+6)** and the ASCII decimal value is 30.

**Command Mode** Privileged EXEC mode

**Usage Guide** After configuring this command, press the key combination of the escape character and then press **x**, the current session is disconnected to return to the original session.

**Configuration** The following example sets the escape character for the current terminal to 23 (**Ctrl+w**).

**Examples** Ruijie# terminal escape-character 23

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

### 3.25 terminal history

Use this command to enable command history for the current terminal or set the number of commands in the command history. Use the **no history** command to disable command history. Use the **no history size** command to restore the number of commands in the command history to the default setting.

**terminal history** [ *size size* ]

**terminal no history**

**terminal no history size**

**Parameter Description**

| Parameter               | Description                                              |
|-------------------------|----------------------------------------------------------|
| <b>size</b> <i>size</i> | Sets the number of commands, in the range from 0 to 256. |

**Defaults** This function is enabled by default, The default *size* is 10.

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration Examples** The following example sets the number of commands in the command history to 20 for the current terminal.

```
Ruijie# terminal history size 20
```

The following example disables the command history for the current terminal.

```
Ruijie# terminal no history
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

### 3.26 terminal length

Use this command to set the screen length for the current terminal. Use the **no** form of this command to restore the default setting.

**terminal length** *screen-length*

**terminal no length**

| <b>Parameter Description</b>  | <table border="1"> <thead> <tr> <th>Parameter</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td><i>screen-length</i></td> <td>Sets the screen length, in the range from 0 to 512.</td> </tr> </tbody> </table> | Parameter | Description | <i>screen-length</i> | Sets the screen length, in the range from 0 to 512. |
|-------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------|-------------|----------------------|-----------------------------------------------------|
| Parameter                     | Description                                                                                                                                                                                                            |           |             |                      |                                                     |
| <i>screen-length</i>          | Sets the screen length, in the range from 0 to 512.                                                                                                                                                                    |           |             |                      |                                                     |
| <b>Defaults</b>               | The default is 24.                                                                                                                                                                                                     |           |             |                      |                                                     |
| <b>Command Mode</b>           | Privileged EXEC mode                                                                                                                                                                                                   |           |             |                      |                                                     |
| <b>Usage Guide</b>            | N/A                                                                                                                                                                                                                    |           |             |                      |                                                     |
| <b>Configuration Examples</b> | <p>The following example sets the screen length for the current terminal to 10.</p> <pre>Ruijie# terminal length 10</pre>                                                                                              |           |             |                      |                                                     |
| <b>Related Commands</b>       | <table border="1"> <thead> <tr> <th>Command</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>N/A</td> <td>N/A</td> </tr> </tbody> </table>                                                                    | Command   | Description | N/A                  | N/A                                                 |
| Command                       | Description                                                                                                                                                                                                            |           |             |                      |                                                     |
| N/A                           | N/A                                                                                                                                                                                                                    |           |             |                      |                                                     |
| <b>Platform Description</b>   | N/A                                                                                                                                                                                                                    |           |             |                      |                                                     |

### 3.27 terminal location

Use this command to configure location description for the current device. Use the **no** form of this command to restore the default setting.

**terminal location** *location*

**terminal no location**

| <b>Parameter Description</b>  | <table border="1"> <thead> <tr> <th>Parameter</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td><i>location</i></td> <td>Configures location description of the current device.</td> </tr> </tbody> </table> | Parameter | Description | <i>location</i> | Configures location description of the current device. |
|-------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------|-------------|-----------------|--------------------------------------------------------|
| Parameter                     | Description                                                                                                                                                                                                          |           |             |                 |                                                        |
| <i>location</i>               | Configures location description of the current device.                                                                                                                                                               |           |             |                 |                                                        |
| <b>Defaults</b>               | N/A                                                                                                                                                                                                                  |           |             |                 |                                                        |
| <b>Command Mode</b>           | Privileged EXEC mode                                                                                                                                                                                                 |           |             |                 |                                                        |
| <b>Usage Guide</b>            | N/A                                                                                                                                                                                                                  |           |             |                 |                                                        |
| <b>Configuration Examples</b> | <p>The following example configures location description of the current device as "Switch's Line Vty 0".</p> <pre>Ruijie# terminal location Switch's Line Vty 0</pre>                                                |           |             |                 |                                                        |

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

### 3.28 terminal speed

Use this command to configure the baud rate for the current terminal. Use the **no** form of this command to restore the default setting,

**terminal speed** *baudrate*

**terminal no speed**

| Parameter Description | Parameter       | Description |
|-----------------------|-----------------|-------------|
|                       | <i>baudrate</i> |             |

**Defaults** The default is 9600.

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration Examples** The following example sets the baud rate for the current terminal to 115200,

```
Ruijie# terminal speed 115200
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

### 3.29 terminal width

Use this command to set the screen width for the terminal.

**terminal width** *screen-width*

**terminal no width**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       |           |             |

|                     |                                                                     |
|---------------------|---------------------------------------------------------------------|
| <i>screen-width</i> | Sets the screen width for the terminal, in the range from 0 to 256. |
|---------------------|---------------------------------------------------------------------|

**Defaults** The default is 79.

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration Examples** The following example sets the screen width for the terminal to 10.

```
Ruijie# terminal width 10
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

### 3.30 timeout login

Use this command to set the login authentication timeout for the line. Use the **no** form of this command to restore the default setting.

**timeout login response** *seconds*

**no timeout login response**

| Parameter Description | Parameter       | Description                                                       |
|-----------------------|-----------------|-------------------------------------------------------------------|
|                       | <b>response</b> |                                                                   |
|                       | <i>seconds</i>  | Timeout value, in the range from 1 to 300 in the unit of seconds. |

**Defaults** The default is 30.

**Command Mode** Line configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example sets the login authentication timeout to 300 seconds for line VTY 0 5.

```
Ruijie(config)# line vty 0 5
Ruijie(config-line)login timeout response 300
```



| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

### 3.31 transport input

Use this command to set the specified protocol under Line that can be used for communication. Use the **no** form of this command to restore the default setting.

**transport input { all | ssh | telnet | none }**

**no transport input { all | ssh | telnet | none }**

| Parameter Description | Parameter     | Description                                                             |
|-----------------------|---------------|-------------------------------------------------------------------------|
|                       |               | <b>all</b>                                                              |
|                       | <b>ssh</b>    | Allows only the SSH protocol under Line to be used for communication    |
|                       | <b>telnet</b> | Allows only the Telnet protocol under Line to be used for communication |
|                       | <b>none</b>   | Allows none of protocols under Line to be used for communication        |

**Defaults** **all**, **ssh** and **telnet** protocols are allowed.

**Command Mode** Line configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example specifies that only the Telnet protocol is allowed to login in line vty 0 4.

```
Ruijie(config)# line vty 0 4
Ruijie(config-line)transport input ssh
```

| Related Commands | Command             | Description                 |
|------------------|---------------------|-----------------------------|
|                  | <b>show running</b> | Displays status information |

**Platform** N/A  
**Description**

### 3.32 vacant-message

Use this command to set the logout message. Use the **no** form of this command to restore the default setting.

**vacant-message** [ *c message c* ]

**no vacant-message**

#### Parameter Description

| Parameter      | Description                                                               |
|----------------|---------------------------------------------------------------------------|
| <i>c</i>       | Delimiter of the logout message, which is not allowed within the message. |
| <i>message</i> | Logout message.                                                           |

**Defaults** N/A

**Command Mode** Line configuration mode

**Usage Guide** This command is used to set the logout message for the line. The characters entered after the ending delimiter are discarded directly, The logout message is displayed when the user logs out.

**Configuration** The following example sets the logout message to "Logout from the ruijie device".

#### Examples

```
Ruijie(config-line)#vacant-message @ Logout from the ruijie device @
```

#### Related Commands

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A

### 3.33 width

Use this command to set the screen width for the line. Use the **no** form of this command to restore the default setting,

**width** *screen-width*

**no width**

#### Parameter Description

| Parameter           | Description                                                     |
|---------------------|-----------------------------------------------------------------|
| <i>screen-width</i> | Sets the screen width for the line, in the range from 0 to 256, |

**Defaults** The default is 79.

**Command Mode** Line configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example sets the screen width for the line to 10.

```
Ruijie(config-line)# width 10
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A

## 4. File System Commands

### 4.1 cd

Use this command to set the present directory for the file system.

**cd** [ *filesystem:* ] [ *directory* ]

| Parameter   | Parameter          | Description                                                                                                                            |
|-------------|--------------------|----------------------------------------------------------------------------------------------------------------------------------------|
| Description | <i>filesystem:</i> | The URL of filesystem, followed by a colon (:). The filesystem includes <b>flash:</b> , <b>sata:</b> , <b>usb:</b> , and <b>tmp:</b> . |
|             | <i>directory</i>   | The path name. A file name starts with "/" is an absolute path. Otherwise, it is a relative path.                                      |

**Defaults** The default directory is the flash root directory.

**Command Mode** Privileged EXEC mode.

**Usage Guide**

**Configuration Examples** The following example sets the SATA directory.

```
Ruijie#pwd
flash:/
Ruijie#cd sata:
Ruijie#pwd
sata/
```

| Related Commands | Command    | Description                          |
|------------------|------------|--------------------------------------|
|                  | <b>pwd</b> | Displays the present word directory. |

**Platform Description** N/A.

### 4.2 copy

Use this command to copy a file from the specified source directory to the specified destination directory.

**copy** *source-url destination-url*

| Parameter | Description |
|-----------|-------------|
|-----------|-------------|

|                    |                        |                                                     |
|--------------------|------------------------|-----------------------------------------------------|
| <b>Parameter</b>   | <i>source-url</i>      | Source file URL, which can be local or remote.      |
| <b>Description</b> | <i>destination-url</i> | Destination file URL, which can be local or remote. |

**Defaults** N/A.

**Command Mode** Privileged EXEC mode.

**Usage Guide** when the file to be copied exists on the target URL, the target file system determines the action, such as error report, overwrite, or offering you the choice.

The following table lists the URL:

| Prefix                                    | Description                                                                                                                |
|-------------------------------------------|----------------------------------------------------------------------------------------------------------------------------|
| <b>running-config</b>                     | Running configuration file.                                                                                                |
| <b>startup-config</b>                     | startup configuration file.                                                                                                |
| <b>flash:</b>                             | local FLASH file system.                                                                                                   |
| <b>tftp:</b>                              | The URL of TFTP network server, in the format as follows:<br><b>tftp:[[/location]/directory]/filename</b>                  |
| <b>oob_tftp:</b> [ via mgmt. { number } ] | The URL of TFTP network server connected with the Out-of-Band port, If there are multiple MGMT ports, you can specify one. |

**Configuration Examples** The following example copies the netconfig file from device 192.168.64.2 to the FLASH disk and the netconfig file exists locally.

```
Do you want to overwrite [/data/netconfig]? [Y/N]:y
Press Ctrl+C to quit
!
Copy success.
```

| Command       | Description                                        |
|---------------|----------------------------------------------------|
| <b>delete</b> | Deletes the file.                                  |
| <b>rename</b> | Renames the file.                                  |
| <b>dir</b>    | Displays the file list of the specified directory. |

**Platform Description** N/A

### 4.3 delete

Use this command to delete the files in the present directory.

**delete** [ filesystem: ] file-url | startup-config }

| Parameter | Description |
|-----------|-------------|
|-----------|-------------|

|                              |                       |                                                                                                                                        |
|------------------------------|-----------------------|----------------------------------------------------------------------------------------------------------------------------------------|
| <b>Parameter Description</b> | <i>filesystem:</i>    | The URL of file system, followed by a colon (:). The file system includes <b>flash:</b> , <b>sata:</b> , <b>usb:</b> and <b>tmp:</b> . |
|                              | <i>file-url</i>       | The file name containing the path. A file name starts with “/” is an absolute path. Otherwise, it is a relative path.                  |
|                              | <b>startup-config</b> | The startup file.                                                                                                                      |

**Defaults** The default *filesystem:* is **flash:**.

**Command Mode** Privileged EXEC mode.

**Usage Guide**

**Configuration Examples** The following example deletes the fstab file on the FLASH disk.

```
Ruijie#pwd
flash:/
Ruijie#dir
Directory of flash:/
1  -rw-      336  Jan 03 2012 18:53:42  fstab
2  -rw-     4096  Jan 03 2012 12:32:09  rc.d
3  -rw-  10485760  Jan 03 2012 18:13:37  rpmdb
3 files, 0 directories
10,490,192 bytes total (13,192,656 bytes free)
Ruijie#delete flash:/fstab
Do you want to delete [flash:/fstab]? [Y/N]:y
Delete success.
Ruijie#dir
Directory of flash:/
1  -rw-     4096  Jan 03 2012 12:32:09  rc.d
2  -rw-  10485760  Jan 03 2012 18:13:37  rpmdb
2 files, 0 directories
10,489,856 bytes total (13,192,992 bytes free)
```

| <b>Related Commands</b> | <b>Command</b> | <b>Description</b>                                 |
|-------------------------|----------------|----------------------------------------------------|
|                         | <b>copy</b>    | Copies the file.                                   |
|                         | <b>dir</b>     | Displays the file list of the specified directory. |

**Platform Description** N/A

## 4.4 dir

Use this command to display the files in the present directory.

**dir** [ *filesystem:* ] [ *directory* ]

| Parameter   | Parameter         | Description                                                                                                             |
|-------------|-------------------|-------------------------------------------------------------------------------------------------------------------------|
| Description | <i>filesystem</i> | The URL of file system, followed by a colon (:). The file system includes <b>flash:</b> , <b>usb:</b> and <b>tmp:</b> . |
|             | <i>directory</i>  | The path name. A file name starts with "/" is an absolute path. Otherwise, it is a relative path.                       |

**Defaults** By default, only the information under the present working path is displayed.

**Command Mode** Privileged EXEC mode.

### Usage Guide

**Configuration** The following example displays the file information of the root directory in the FLASH disk.

### Examples

```
Ruijie#dir flash:/
Directory of flash:/
 1  -rw-      336  Jan 03 2012 18:53:42  fstab
 2  -rw-     4096  Jan 03 2012 12:32:09  rc.d
 3  -rw-  10485760  Jan 03 2012 18:13:37  rpmdb
3 files, 0 directories
10,490,192 bytes total (13,192,656 bytes free)
```

| Field       | Description                                                                                                                                                     |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1, 2, 3...  | Index number                                                                                                                                                    |
| -rw-        | Permissions on a file include: <ul style="list-style-type: none"> <li>● d: directory</li> <li>● r: read</li> <li>● w: write</li> <li>● x: executable</li> </ul> |
| 10485760    | File size                                                                                                                                                       |
| rpmdb       | File name                                                                                                                                                       |
| files       | File number                                                                                                                                                     |
| directories | Directory number                                                                                                                                                |
| total       | Total size                                                                                                                                                      |
| free        | Available space                                                                                                                                                 |

| Related Commands | Command    | Description                                    |
|------------------|------------|------------------------------------------------|
|                  | <b>pwd</b> | Displays the present directory.                |
|                  | <b>cd</b>  | Sets the present directory of the file system. |

**Platform** N/A.

### Description

## 4.5 eject

Use this command to remove the USB.

**eject [ usb0 ]**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example removes the USB disk.

```

Examples
Ruijie#eject ?
usb0 Eject usb disk 0

Ruijie#eject usb0
Ruijie#
    
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 4.6 erase

Use this command to erase the device or file that doesn't have a file system.

**erase filesystem**

| Parameter   | Parameter          | Description                                                           |
|-------------|--------------------|-----------------------------------------------------------------------|
| Description | <i>filesystem:</i> | Name of the file system, followed by a colon (:). For example, usb0:. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A



**Configuration** The following example erases the USB filesystem.

**Examples**

```
Ruijie#erase usb0:
Sure to erase usb0:? [Y/N] y
Erasing disk usb0 ...
Erase disk usb0 done!
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 4.7 file

Use this command to display the information about a file.

**file** [ *filesystem:* ] *file-url*

| Parameter Description | Parameter          | Description                                                                                                             |
|-----------------------|--------------------|-------------------------------------------------------------------------------------------------------------------------|
|                       | <i>filesystem:</i> | The URL of file system, followed by a colon (:). The file system includes <b>flash:</b> , <b>usb:</b> and <b>tmp:</b> . |
|                       | <i>file-url</i>    | The file name containing the path. A file name starts with "/" is an absolute path. Otherwise, it is a relative path.   |

**Defaults** The default *filesystem:* is **flash:**.

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the information about gcc executable file.

**Examples**

```
Ruijie#file flash:/gcc
/usr/bin/gcc-4.6: ELF 32-bit LSB executable, Intel 80386, version 1
(SYSV), dynamically linked (uses shared libs), for GNU/Linux 2.6.15,
stripped
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 4.8 file prompt

Use this command to set the prompt mode.

**file prompt** [ **noisy** | **quiet** ]

| Parameter   | Parameter    | Description                        |
|-------------|--------------|------------------------------------|
| Description | <b>noisy</b> | Displays prompt for all operation. |
|             | <b>quiet</b> | Displays prompt rarely.            |

**Defaults** The default mode is noisy.

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example sets the prompt mode to noisy.

**Examples** Ruijie#file prompt noisy

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 4.9 mkdir

Use this command to create a directory.

**mkdir** [ *filesystem:* ] *directory*

| Parameter   | Parameter          | Description                                                                                                             |
|-------------|--------------------|-------------------------------------------------------------------------------------------------------------------------|
| Description | <i>filesystem:</i> | The URL of file system, followed by a colon (:). The file system includes <b>flash:</b> , <b>usb:</b> and <b>tmp:</b> . |
|             | <i>directory</i>   | The path name. A file name starts with "/" is an absolute path. Otherwise, it is a relative path.                       |

**Defaults** The default *filesystem:* is **flash:**.  
The default *directory* is the root directory.

**Command Mode** Privileged EXEC mode.

**Usage Guide**

**Configuration** The following example creates a directory named newdir:

**Examples**

```
Ruijie#dir
Directory of flash:/
1  -rw-      336  Jan 03 2012 18:53:42  fstab
2  -rw-     4096  Jan 03 2012 12:32:09  rc.d
3  -rw-  10485760  Jan 03 2012 18:13:37  rpmdb
3 files, 0 directories
10,490,132 bytes total (13,192,656 bytes free)
Ruijie#mkdir newdir
Created dir flash:/newdir
Ruijie#dir
Directory of flash:/
1  -rw-      336  Jan 03 2012 18:53:42  fstab
2  -rw-     4096  Jan 03 2012 12:32:09  rc.d
3  -rw-  10485760  Jan 03 2012 18:13:37  rpmdb
4  drw-     4096  Jan 03 2012 18:13:37  newdir
3 files, 1 directories
10,494,228 bytes total (13,188,560 bytes free)
```

| Related Commands | Command      | Description                     |
|------------------|--------------|---------------------------------|
|                  | <b>rmdir</b> | Deletes the directory.          |
|                  | <b>pwd</b>   | Displays the present directory. |

**Platform** N/A  
**Description**

### 4.10 more

Use this command to display the content of a file.

**more** [ */ascii* | */binary* ] [ *filesystem:* ] *file-url*

| Parameter Description | Parameter          | Description                                                                                                             |
|-----------------------|--------------------|-------------------------------------------------------------------------------------------------------------------------|
|                       | <i>/ascii</i>      | Displays the file content in the ASCII format.                                                                          |
|                       | <i>/binary</i>     | Displays the file content in the                                                                                        |
|                       | <i>filesystem:</i> | The URL of file system, followed by a colon (:). The file system includes <b>flash:</b> , <b>usb:</b> and <b>tmp:</b> . |
|                       | <i>file-url</i>    | The file name containing the path. A file name starts with "/" is an absolute path. Otherwise, it is a relative path.   |

**Defaults** The file is displayed in its own format by default.

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the content of the netconfig file under root directory of FLASH disk.

```

Examples Ruijie#more flash:/netconfig
#
# The network configuration file. This file is currently only used in
# conjunction with the TI-RPC code in the libtirpc library.
#
# Entries consist of:
#
#     <network_id> <semantics> <flags> <protofamily> <protoname> \
#         <device> <nametoaddr_libs>
#
# The <device> and <nametoaddr_libs> fields are always empty in this
# implementation.
#
udp      tpi_clts      v   inet   udp    -    -
tcp      tpi_cots_ord v   inet   tcp    -    -
udp6     tpi_clts      v   inet6  udp    -    -
tcp6     tpi_cots_ord v   inet6  tcp    -    -
rawip    tpi_raw       -   inet   -      -    -
local    tpi_cots_ord -   loopback -      -    -
    
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 4.11 pwd

Use this command to display the working path.

**pwd**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A.      | N/A.        |

**Defaults** N/A.

**Usage Guide**

**Configuration** The following example switches from FLASH: to SATA:.

**Examples**

```
Ruijie#pwd
flash:/
Ruijie#cd sata:/
Ruijie#pwd
sata:/
```

**Related  
Commands**

| Command   | Description                                       |
|-----------|---------------------------------------------------|
| <b>cd</b> | Changes the file system in the present directory. |

**Platform** N/A.

**Description**

## 4.12 rename

Use this command to move or rename the specified file.

**rename** *src-url dst-url*

**Parameter  
Description**

| Parameter      | Description                                   |
|----------------|-----------------------------------------------|
| <i>src-url</i> | The source file URL to move.                  |
| <i>dst-url</i> | The URL of the destination file or directory. |

**Defaults** N/A.

**Command  
Mode** Privileged EXEC mode.

**Usage Guide** N/A

**Configuration** The following example renames the fstab file in the root directory on the FLASH disk as new-fstab.

**Examples**

```
Ruijie#dir
Directory of flash:/
1  -rw-      336  Jan 03 2012 18:53:42  fstab
2  -rw-     4096  Jan 03 2012 12:32:09  rc.d
3  -rw-  10485760  Jan 03 2012 18:13:37  rpmdb
3 files, 0 directories
10,490,192 bytes total (13,192,656 bytes free)
Ruijie#rename flash:/fstab flash:/new-fstab
Renamed file flash:/new-fstab
Ruijie#dir
Directory of flash:/
1  -rw-      336  Jan 03 2012 18:53:42  new-fstab
```

```

2  -rw-      4096   Jan 03 2012 12:32:09  rc.d
3  -rw- 10485760   Jan 03 2012 18:13:37  rpmdb
3 files, 0 directories
10,490,192 bytes total (13,192,656 bytes free)

```

**Related  
Commands**

| Command       | Description       |
|---------------|-------------------|
| <b>delete</b> | Deletes the file. |
| <b>copy</b>   | Copies the file.  |

**Platform** N/A

**Description**

## 4.13 rmdir

Use this command to delete an empty directory.

**rmdir** [ *filesystem:* ] *directory*

**Parameter  
Description**

| Parameter          | Description                                                                                                                            |
|--------------------|----------------------------------------------------------------------------------------------------------------------------------------|
| <i>filesystem:</i> | The URL of file system, followed by a colon (:). The file system includes <b>flash:</b> , <b>sata:</b> , <b>usb:</b> and <b>tmp:</b> . |
| <i>directory</i>   | The path name. A file name starts with "/" is an absolute path. Otherwise, it is a relative path.                                      |

**Defaults** The default *filesystem:* is **flash:**.

**Command  
Mode** Privileged EXEC mode.

**Usage Guide**

**Configuration** The following example deletes the null test directories.

**Examples**

```

Ruijie#mkdir newdir
Ruijie#dir
Directory of flash:/
1  -rw-      336   Jan 03 2012 18:53:42  fstab
2  -rw-      4096   Jan 03 2012 12:32:09  rc.d
3  -rw- 10485760   Jan 03 2012 18:13:37  rpmdb
4  drw-      4096   Jan 03 2012 18:13:37  newdir
3 files, 1 directories
10,494,228 bytes total (13,188,560 bytes free)
Ruijie#rmdir newdir
removed dir flash:/newdir
Ruijie#dir

```

```
Directory of flash:/
1  -rw-      336  Jan 03 2012 18:53:42  fstab
2  -rw-     4096  Jan 03 2012 12:32:09  rc.d
3  -rw-  10485760  Jan 03 2012 18:13:37  rpmdb
3 files, 0 directories
10,490,132 bytes total (13,192,656 bytes free)
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A.    | N/A.        |

**Platform** N/A.  
**Description**

### 4.14 show file systems

Use this command to display the file system information.

**show file systems**

| Parameter          | Parameter | Description |
|--------------------|-----------|-------------|
| <b>Description</b> | N/A.      | N/A.        |

**Defaults** N/A.

**Command Mode** User EXEC mode/Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide**

**Configuration Examples** The following example displays the file system information:

```
Ruijie#show file systems
  Size(KB)      Free(KB)      Type  Flags  Prefixes
      NA         NA         ram   rw    tmp:
      NA         NA        network  rw    tftp:
      NA         NA        network  rw    oob_tftp:
      NA         NA        xmodem  rw    xmodem:
      8192        2416         disk   rw    flash:
167772160     147772160     disk   rw    sata0
      1048576     548576        disk   rw    usb0:
```

| Field    | Description                                     |
|----------|-------------------------------------------------|
| Size(KB) | File system space, in the unit of KB.           |
| Free(KB) | Available file system space, in the unit of KB. |
| Type     | File system type                                |
| Flags    | Permissions on the file system include:         |

|          |                                                                                                                           |
|----------|---------------------------------------------------------------------------------------------------------------------------|
|          | <ul style="list-style-type: none"> <li>● ro: read-only</li> <li>● wo: write-only</li> <li>● rw: read and write</li> </ul> |
| Prefixes | File system prefix                                                                                                        |

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A.    | N/A.        |

**Platform** N/A.  
**Description**

### 4.15 show mount

Use this command to display the mounted information.

**show mount**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** User EXEC mode/Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example displays the mounted information.

```
Ruijie#show mount
/dev/sda1 on / type ext4 (rw,errors=remount-ro,commit=0)
proc on /proc type proc (rw,noexec,nosuid,nodev)
sysfs on /sys type sysfs (rw,noexec,nosuid,nodev)
fusectl on /sys/fs/fuse/connections type fusectl (rw)
none on /sys/kernel/debug type debugfs (rw)
none on /sys/kernel/security type securityfs (rw)
udev on /dev type devtmpfs (rw,mode=0755)
devpts on /dev/pts type devpts (rw,noexec,nosuid,gid=5,mode=0620)
tmpfs on /run type tmpfs (rw,noexec,nosuid,size=10%,mode=0755)
none on /run/lock type tmpfs (rw,noexec,nosuid,nodev,size=5242880)
none on /run/shm type tmpfs (rw,nosuid,nodev)
/dev/sda3 on /hao-share type ext3 (rw,commit=0)
binfmt_misc on /proc/sys/fs/binfmt_misc type binfmt_misc
(rw,noexec,nosuid,nodev)
```

| Field | Description |
|-------|-------------|
|-------|-------------|



|                          |                               |
|--------------------------|-------------------------------|
| proc                     | Source address of mount.      |
| on                       | -                             |
| /proc                    | Destination address of mount. |
| type                     | -                             |
| proc                     | Mount type.                   |
| (rw,noexec,nosuid,nodev) | Mount property.               |

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 4.16 tftp-client source

Use this command to bind a source IP address or source interface with a TFTP client. Use the **no** or **default** form of this command to restore the default setting.

**tftp-client source** { **ip** *ip-address* | **ipv6** *ipv6-address* | *interface* }

**no tftp-client source** { **ip** *ip-address* | **ipv6** *ipv6-address* | *interface* }

**default tftp-client source** { **ip** *ip-address* | **ipv6** *ipv6-address* | *interface* }

| Parameter          | Parameter           | Description                        |
|--------------------|---------------------|------------------------------------|
| <b>Description</b> | <i>ip-address</i>   | Specifies the IPv4 source address. |
|                    | <i>ipv6-address</i> | Specifies the IPv6 source address. |
|                    | <i>interface</i>    | Specifies the source interface     |

**Defaults** No source interface or IP address is bound with the TFTP client by default.

**Command Mode** Global configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example binds source IP address 192.168.23.236 with the TFTP client.

```
Ruijie(config)# tftp-client source ip 192.168.23.236
```

The following example binds source IPv6 address 2003:0:0:0::2 with the TFTP client.

```
Ruijie(config)# tftp-client source ipv6 2003:0:0:0::2
```

The following example binds source interface gigabitEthernet 0/0 with the TFTP client.

```
Ruijie(config)# tftp-client source gigabitEthernet 0/0
```

The following example removes the configuration.

```
Ruijie(config)# no tftp-client source ip 192.168.23.236
```

The following example restores the default setting.

```
Ruijie(config)# default tftp-client source ip 192.168.23.236
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 4.17 tree

Use this command to display the file tree of the current directory.

**tree** [ *filesystem:* ] [ *directory* ]

| Parameter Description | Parameter          | Description                                                                                                             |
|-----------------------|--------------------|-------------------------------------------------------------------------------------------------------------------------|
|                       | <i>filesystem:</i> | The URL of file system, followed by a colon (:). The file system includes <b>flash:</b> , <b>usb:</b> and <b>tmp:</b> . |
|                       | <i>directory</i>   | The path name. A file name starts with "/" is an absolute path. Otherwise, it is a relative path.                       |

**Defaults** The default *filesystem:* is **flash:**.

**Command Mode** User EXEC mode/Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the file tree of flash:/echo

**Examples**

```
Ruijie#tree flash:/echo
+-- client_module
+-- client_userspace
+-- echo_cli.c
+-- echo_client.c
+-- echo_client.h
+-- echo_client.o
+-- echo_cli.o
+-- echo_flag.h
+-- echo.h
+-- echo.ko
+-- echo_server.h
+-- exec_set_echo.h
+-- exec_show_echo.h
+-- Makefile
+-- module
|
+-- echo.ko
```

```

| +-- echo.mod.c
| +-- echo.mod.o
| +-- echo_module.c
| +-- echo_module.o
| +-- echo.o
| +-- echo_server.c
| +-- echo_server.o
| +-- echo_sysfs.c
| +-- echo_sysfs.h
| +-- echo_sysfs.o
| +-- Makefile
| +-- modules.order
| +-- Module.symvers
| +-- msg_fd.c
| +-- msg_fd.o
+-- readme
+-- server_module
+-- server_userspace
+-- sys_rgos.ko
+-- user_space
    +-- echo_server.c
    +-- echo_server.o
    +-- Makefile
    +-- msg_fd.c
    +-- msg_fd.o 10,490,132 bytes total (13,192,656 bytes free)
    
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

### 4.18 verify

Use this command to compute, display and verify Message Digest 5 (MD5).

**verify** [ /md5 md5-value ] filesystem: [ file-url ]

| Parameter Description | Parameter   | Description                                                                                                             |
|-----------------------|-------------|-------------------------------------------------------------------------------------------------------------------------|
|                       | /md5        | Computes and displays MD5.                                                                                              |
|                       | md5-value   | The file MD5, which is compared with the computed MD5.                                                                  |
|                       | filesystem: | The URL of file system, followed by a colon (:). The file system includes <b>flash:</b> , <b>usb:</b> and <b>tmp:</b> . |

|                 |                                                                                                                       |
|-----------------|-----------------------------------------------------------------------------------------------------------------------|
| <i>file-url</i> | The file name containing the path. A file name starts with "/" is an absolute path. Otherwise, it is a relative path. |
|-----------------|-----------------------------------------------------------------------------------------------------------------------|

**Defaults** The default *filesystem:* is **flash:**.

**Command Mode** Privileged EXEC mode.

**Usage Guide** N/A

**Configuration** The following example computes MD5 of flash:/gcc.

**Examples**

```
Ruijie#verify flash:/gcc
8b072de7db7affd8b2ef824e7e4d716c
```

The following example computes MD5 and makes a comparison.

```
Ruijie#verify /md5 8b072de7db7affd8b2ef824e7e4d716c flash:/gcc
%SUCCESS verifying /mnt/flash/gcc = 8b072de7db7affd8b2ef824e7e4d716c
Ruijie#verify /md5 8b072de7db7affd8b2ef824e7e4d71 flash:/gcc
%Error verifying flash:/gcc
Computed signature = 8b072de7db7affd8b2ef824e7e4d716c
Submitted signature = 8b072de7db7affd8b2ef824e7e4d71
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 4.19 show disk

Use this command to display USB/Flash information.

**show disk [ usb | flash ]**

| Parameter Description | Parameter   | Description                    |
|-----------------------|-------------|--------------------------------|
|                       | <b>sata</b> | Displays hardware information. |
|                       | <b>usb</b>  | Displays USB information.      |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays USB information.

**Examples**

```
Ruijie#show disk usb
Disk /dev/sdb: 8159 MB, 8159477760 bytes
252 heads, 62 sectors/track, 1020 cylinders
Units = cylinders of 15624 * 512 = 7999488 bytes
```

The following example displays FLASH information.

```
Ruijie#show disk flash
Nand flash size: 512MB
Nor flash size: 1MB
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform  
Description**

N/A

## 5. SYS Commands

### 5.1 calendar set

Use this command to set the hardware calendar.

**calendar set** { *hour* [ *:minute* [ *:second* ] ] } [ *month* [ *day* [ *year* ] ] ]

| Parameter Description | Parameter                                         | Description                                                                                                                                                                                |
|-----------------------|---------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <i>hour</i> [ <i>:minute</i> [ <i>:second</i> ] ] | Sets hardware time in the format of hour: minute: second. Only the specified parameters (hour, minute, or second) can be reset. The unspecified parameters keep the current system values. |
|                       | <i>month</i>                                      | Sets month. The range is from 1 to 12.                                                                                                                                                     |
|                       | <i>day</i>                                        | Sets date. The range is from 1 to 31.                                                                                                                                                      |
|                       | <i>year</i>                                       | Sets year. The range is from 1970 to 2069.                                                                                                                                                 |


**Defaults** -


**Command Mode** Privileged EXEC mode

**Default Level** -

**Usage Guide**

- The time parameter is mandatory. After setting time, set month, day, and year, which can be neglected according to your needs. The parameter that is neglected keeps the current system value. For example, if the current hardware time is "2012-02-29 09:33:44" and you want to change month and hour and keep values of other parameters, use the **calendar set 12 5** command to change the current time into "2012-05-29 12:33:44".

 The hardware time of the system is used as the UTC time, while the software time of the system refers to the local time of the device.

 This command is supported by only VSD0.

**Configuration Examples** The following example changes the current hardware time of the system (for example, 2012-02-01 18:23:06) into 6 o'clock and keeps the values of other parameters.

```
Ruijie# calendar set 6
06:41:39 UTC Fri, Jul 6, 2012
```


The following example changes the current hardware time of the system (for example, 2012-02-01 18:23:06) into 06:42 and keeps the values of other parameters.

```
Ruijie# calendar set 6:42
```

```
06:42:27 UTC Fri, Jul 6, 2012
```

The following example changes the current hardware time of the system (for example, 2012-02-01 18:23:06) into March 2 and keeps the values of other parameters.

```
Ruijie# calendar set 18 3 2
18:43:05 UTC Fri, Mar 2, 2012
```

 Because the *hour* parameter is mandatory, set it to the current time if you do not need to change its value. As shown in the last example, enter **18** (hour), and then enter **3** (month) and **2** (day).

**Check Method** -

**Platform** -  
**Description**

## 5.2 clock read-calendar

Use this command to enable the system to synchronize the software time with the hardware time.  
**clock read-calendar**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | -         | -           |

**Defaults** -

**Command Mode** Privileged EXEC mode

**Default Level** -

**Usage Guide** This command is supported by only VSD0.  
After you configure this command, the system will synchronize the software time with the current hardware time according to the time zone and summer time settings of the device.

**Configuration Examples** The following example enables the system to synchronize the software time with the hardware time.

```
Ruijie# clock read-calendar
Set the system clock from the hardware time.
```

**Check Method** -

**Platform** -  
**Description**

## 5.3 clock set

Use this command to set the system software clock.

**clock set** { *hour* [ *:minute* [ *:second* ] ] } [ *month* [ *day* [ *year* ] ] ]

| Parameter Description | Parameter                                         | Description                                                                                                                                                                             |
|-----------------------|---------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <i>hour</i> [ <i>:minute</i> [ <i>:second</i> ] ] | Sets software time in the format of hour: minute: second. Only the specified parameters (hour, minute, or second) can reset. The unspecified parameters keep the current system values. |
|                       | <i>month</i>                                      | Sets month. The range is from 1 to 12.                                                                                                                                                  |
|                       | <i>day</i>                                        | Sets date. The range is from 1 to 31.                                                                                                                                                   |
|                       | <i>year</i>                                       | Sets year. The range is from 1970 to 2069.                                                                                                                                              |


**Defaults** -


**Command Mode** Privileged EXEC mode

**Default Level** -

**Usage Guide**

- The time parameter is mandatory. After setting time, set month, day, and year, which can be neglected according to your needs. The parameter that is neglected keeps the current system value.

 For example, if the current hardware time is "2012-02-29 09:33:44" and you want to change month and hour and keep values of other parameters, use the **clock set 12 5** command to change the current time into "2012-05-29 12:33:44".

 This command is supported by only VSD0.

**Configuration Examples** The following example changes the current software time of the system (for example, 2012-02-01 18:23:06) into 6 o'clock and keeps the values of other parameters.

```
Ruijie# clock set 6
06:48:13 CST Fri, Mar 2, 2012
```

The following example changes the current software time of the system (for example, 2012-02-01 18:23:06) into 06:42 and keeps the values of other parameters.

```
Ruijie# clock set 6:42
06:42:31 CST Fri, Mar 2, 2012
```


The following example changes the current software time of the system (for example, 2012-02-01 18:23:06) into March 2 and keeps the values of other parameters.

```
Ruijie# clock set 18 3 2
```



---

18:42:48 CST Fri, Mar 2, 2012

 Because the *hour* parameter in this command is mandatory, set it to the current time if you do not need to change its value. As shown in the last example, enter **18** (hour), and then enter **3** (month) and **2** (day).

---

**Check Method** -

**Platform** -

**Description** -

## 5.4 clock summer-time

Use this command to set the summer time.

**clock summer-time** *zone* **start** *start-month* [*week*|**last**] *start-date hh:mm* **end** *end-month* [*week*|**last**] *end-date hh:mm* [**ahead** *hours-offset* [*minutes-offset* ]

Use this command to disable the summer time.

**no clock summer-time**

| Parameter Description | Parameter             | Description                                                                                                                                                                                                                                   |
|-----------------------|-----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <b>zone</b>           | Summer time name. It can only be a letter between A and Z or between a and z, which is not case sensitive. The summer time name contains 3 to 31 characters.                                                                                  |
|                       | <b>start</b>          | Indicates the start time of the summer time.                                                                                                                                                                                                  |
|                       | <i>start-month</i>    | Start month. Value range: January, February, March, April, May, June, July, August, September, October, November, and December. The value is not case sensitive and you are allowed to enter an incomplete word, for example, Febr and FebRu. |
|                       | <i>week</i>           | Start week in the start month. The range is from 1 to 5.                                                                                                                                                                                      |
|                       | <b>last</b>           | The last week of the specified month.                                                                                                                                                                                                         |
|                       | <i>start-date</i>     | Day in the start week of the start month. Value range: Sunday, Monday, Tuesday, Wednesday, Thursday, Friday, and Saturday. The value is not case sensitive and you are allowed to enter an incomplete word, for example, Web and WeDne.       |
|                       | <b>hh:mm</b>          | Time, in the format of hour : minute.                                                                                                                                                                                                         |
|                       | <b>end</b>            | Indicates the end time of the summer time.                                                                                                                                                                                                    |
|                       | <i>end-month</i>      | End month. Value range: January, February, March, April, May, June, July, August, September, October, November, and December. The value is not case sensitive and you may enter an incomplete word, for example, Febr and FebRu.              |
|                       | <b>ahead</b>          | Indicates how much time for the summer time ahead of the standard time during the effective period of the summer time. By default, the summer time is one hour ahead of the standard time.                                                    |
|                       | <i>hours-offset</i>   | Hours ahead of the standard time. The range is from 0 to 12. You are not allowed to set it to 00:00.                                                                                                                                          |
|                       | <i>minutes-offset</i> | Minutes ahead of the standard time. The range is from 0 to 59. If <i>hours-offset</i> has been set to 0, you are not allowed to set <i>minutes-offset</i> to 0.                                                                               |

**Defaults** -

**Command Mode** Global configuration mode

**Default Level** -

**Usage Guide** This command is supported by only VSD0.

**Configuration Examples** Assume that the time zone name of your living place is ABC and the standard time is 8:15 ahead of UTC, namely, GMT+08:15. The summer time period starts from the first Saturday in February to the third Monday in May and the summer time is 01:20 ahead of the standard time. In this case, the summer time is 09:35 ahead of the UTC time, but non-summer time is still 08:15 ahead of the UTC time.

```

Ruijie(config)# clock timezone ABC 8 15
Set time zone name: ABC (GMT+08:15)
Ruijie(config)#show clock
16:39:16 ABC Wed, Feb 29, 2012
Ruijie(config)#show calendar
08:24:35 GMT Wed, Feb 29, 2012

Ruijie(config)# clock summer-time TZA start Feb 1 sat 2:00 end May 3 Monday 18:30 ahead 1 20
*May 10 03:45:58: %SYS-5-CLOCKUPDATE: Set summer-time: TZA from February the 1st Saturday at
2:00 TO May the 3rd Monday at 18:30, ahead 1 hour 20 minute
Set summer-time: TZA from February the 1st Saturday at 2:00 TO May the 3rd Monday at 18:30,
ahead 1 hour 20 minute

Ruijie# show clock
18:00:08 TZA Wed, Feb 29, 2012

# If the time is set to non-summer time, the time zone name is restored to ABC.
Ruijie#clo set 18 1 1
*Jan 1 18:00:09: %SYS-5-CLOCKUPDATE: Set system clock: 18:00:09 ABC Sun, Jan 1, 2012
Set system clock: 18:00:09 ABC Sun, Jan 1, 2012
Ruijie#show clock
18:00:12 ABC Sun, Jan 1, 2012

```

If the system uses the default summer time that is one hour ahead of the standard time, ahead and the parameters behind ahead can be neglected. For example, set the summer time to start from 2:00 a.m. of the first Sunday in April to 2:00 a.m. of the last Sunday in October and set the summer time to one hour ahead of the standard time.

```

Ruijie(config)#clo summer-time PDT start April 1 sunday 2:00 end October last Sunday 2:00
*May 10 03:15:05: %SYS-5-CLOCKUPDATE: Set summer-time: PDT from April the 1st Sunday at 2:00
TO October the last Sunday at 2:00, ahead 1 hour
Set summer-time: PDT from April the 1st Sunday at 2:00 TO October the last Sunday at 2:00,
ahead 1 hour

```

The following example disables summer time.

```

Ruijie(config)#no clock summer-time
*Jan 1 18:01:09: %SYS-5-CLOCKUPDATE: Set no summer time.
Set no summer time.

```

**Check Method**

-

**Platform**

-

**Description**


## 5.5 clock timezone

Use this command to set the time zone.

**clock timezone** [ *name* *hours-offset* [ *minutes-offset* ] ]

Use this command to remove the time zone settings.

**no clock timezone**

| Parameter Description | Parameter             | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|-----------------------|-----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <i>name</i>           | Time zone name. It can only be a letter between A and Z or between a and z, which is not case sensitive. The name contains 3 to 31 characters.                                                                                                                                                                                                                                                                                                                                                                                                                          |
|                       | <i>hours-offset</i>   | Hours of time difference. It indicates whether the time is faster or smaller than the hardware UTC time. The range is from -12 to 12. The negative digit indicates that the time is slower than the hardware time, while the positive digit indicates that the time is faster than the hardware time.<br><br><div style="border: 1px solid #ccc; padding: 2px; margin-top: 5px;">  If the time is slower than the UTC time, add "-" before <i>hours-offset</i>.                 </div> |
|                       | <i>minutes-offset</i> | Minutes of time difference. The range is from 0 to 59.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |

**Defaults** -

**Command Mode** Global configuration mode

**Default Level** -

**Usage Guide** This command is supported by only VSD0.

**Configuration Examples** The following example sets the time zone name to CST. The software time is 8 hours faster than the hardware time.

```
Ruijie(config)# clock timezone CST 8
Set time zone name: CST (GMT+08:00)

Ruijie# show clock
18:00:17 CST Wed, Dec 5, 2012
```

The following example sets the time zone name TZA. The software time is 06:13 slower than the hardware time.

```
Ruijie(config)# clock timezone TZA -6 13
Set time zone name: TZA (GMT-06:13)
```

The following example removes the time zone settings.

```
Ruijie(config)# no clock timezone
```

```
Set no clock timezone.
```

**Check Method** -

**Platform** -  
**Description**

## 5.6 clock update-calendar

Use this command to enable the system to synchronize the hardware time with the software time.

### clock update-calendar

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | -         | -           |

**Defaults** -

**Command Mode** Privileged EXEC mode

**Default Level** -

**Usage Guide** This command is supported by only VSD0.  
 After you configure this command, the system will synchronize the hardware time with the current software time according to the time zone and summer time settings of the device.

**Configuration Examples** The following example enables the system to synchronize the hardware time with the software time.

```
Ruijie# clock update-calendar
Set the hardware time from the system clock.
```

The following example sets the time zone of the hardware time to GMT+5:10, which indicates that the hardware time is 5:10 slower than the software time. The summer time is not set.

```
Ruijie# show clock
09:30:21 TSZ Wed, Feb 29, 2012

Ruijie# clock update-calendar
Set the hardware time from the system clock.

Ruijie#show calendar
04:20:25 UTC Wed, Feb 29, 2012
```

The following example sets the hardware time. If it is set to GMT+5:10 and the summer time is set to be 1:15 faster from the first Monday in February 1 to the second Sunday in June 1, it indicates that the hardware time is 6:25 slower than the software time during the effective period of the summer time.

```
Ruijie# show clock
09:30:02 TSZ Wed, Feb 29, 2012

Ruijie# clock update-calendar
Set the hardware time from the system clock.

Ruijie#show calendar
03:05:08 UTC Wed, Feb 29, 2012
```

**Check Method** -

**Platform** -

**Description** -

## 5.7 cpu high-watermark set

Use this command to set the watermark range of the CPU usage of the control core and enable CPU usage monitoring.

**cpu high-watermark set** [ [ **up** *up-value* ] [ **down** *down-value* ] ]

Use this command to disable CPU usage monitoring.

**no cpu high-watermark set**

Use this command to restore the default settings.

**default cpu high-watermark set**

| Parameter Description | Parameter                     | Description                                                          |
|-----------------------|-------------------------------|----------------------------------------------------------------------|
|                       | <b>up</b> <i>up-value</i>     | Sets the high watermark of the CPU usage. The range is from 1 to 99. |
|                       | <b>down</b> <i>down-value</i> | Sets the low watermark of the CPU usage. The range is from 1 to 99.  |

**Defaults** By default, the range of the CPU usage watermark is from 75% and 85%.

**Command Mode** Global configuration mode

**Default Level** -

**Usage Guide** This command is supported by only VSD0.  
You can use this command to set the high watermark of the CPU usage and enable CPU usage monitoring. When detecting that the CPU usage exceeds the fluctuation range of the highest watermark, the system prints prompts.

**Configuration Examples** The following example sets the CPU usage watermark to the default value and enables CPU usage monitoring (if it is disabled).

```
Ruijie(config)# default cpu high-watermark set
Reset default cpu watermark monitor
Set system cpu high-watermark up 85%, down 75%
```

The following example disables CPU usage monitoring.

```
Ruijie(config)# no cpu high-watermark set
Close cpu watermark monitor
```

The following example enables CPU usage monitoring. Keep the defined watermark value.

```
Ruijie(config)# cpu high-watermark set
Open cpu watermark monitor
Set system cpu high-watermark up 85%, down 75%
```

The following example enables CPU usage monitoring and sets the watermark range to 70%-90%.

```
Ruijie(config)# cpu high-watermark set up 90 down 70
Open cpu watermark monitor
Set system cpu high-watermark up 90%, down 70%
```

**Check Method** -

**Prompt Message** If the high watermark of the CPU usage is allowed to fluctuate from 85% to 91%, the system will print the following warning message when the CPU usage exceeds the upper limit of the high watermark:

```
*Jan 19 16:23:01: %RG_SYSMON-4-CPU_WATERMARK_HIGH: warning! system cpu usage above high watermark(91%),current cpu usage 100%
```

When the CPU usage is less than the lower limit of the high watermark, the system will print the following message about warning release:

```
*Jan 20 07:02:52: %RG_SYSMON-5- CPU_WATERMARK:withdraw warning! system cpu usage below high watermark(85%), current cpu usage 36%
```

**Platform** -  
**Description** -

## 5.8 memory history clear

Use this command to clear the history of the memory usage.

**memory history clear** [ **one-forth** | **half** | **all** ]

| Parameter Description | Parameter        | Description                |
|-----------------------|------------------|----------------------------|
|                       | <b>one-forth</b> | Clears one fourth entries. |
|                       | <b>half</b>      | Clears a half of entries.  |
|                       | <b>all</b>       | Clears all the entries.    |

**Defaults** -

**Command Mode** Global configuration mode

**Default Level** -

**Usage Guide** -

**Configuration Examples** The following example clears a half of the history of the memory usage.

```
Ruijie# show memory history

Time Thu Jan 1 00:24:45 1970
Used(k) 148516
Maximum memory users for this period
Process Name    Holding
tcpip.elf       270028
cli-memory      60600
rg_syslogd      36640

Time Thu Jan 1 00:24:41 1970
Used(k) 148492
Maximum memory users for this period
Process Name    Holding
tcpip.elf       270028
cli-memory      52408
rg_syslogd      36640
```



```

Time Thu Jan 1 00:24:41 1970
Used(k) 148444
Maximum memory users for this period
Process Name    Holding
tcpip.elf      270028
cli-memory     44088
rg_syslogd    36640

Ruijie(config)#memory history clear half
2 out of 5 records in the history table to be cleared...
Clear done !
    
```

- Check Method** -
- Prompt** -
- Message** -
- Platform** -
- Description** -

## 5.9 memory low-watermark set

Use this command to set the low watermark threshold of the memory and enable the memory low watermark detection.

**memory low-watermark set** *mem-rate*

Use this command to disable the detection of memory low watermark.

**no memory low-watermark set**

| Parameter Description | Parameter       | Description                                               |
|-----------------------|-----------------|-----------------------------------------------------------|
|                       | <i>mem-rate</i> | Memory watermark threshold. The range is from 1% to 100%. |

**Defaults** By default, the memory watermark threshold is 90%.

**Command Mode** Global configuration mode

**Default Level** -

**Usage Guide** You can use this command to enable the detection of the memory low watermark and set the memory watermark threshold. When the system memory is less than this threshold, the system will print prompts.

**Configuration** The following example sets the low watermark threshold of the memory to 80% and enables detection.

**Examples** Ruijie(config)#memory low-watermark set 80

**Check Method** -

**Prompt Message** When the system memory is less than the defined watermark value (such as 500000 KB), the system prints the following message:

```
Ruijie(config)#<187> Jan 1 00:18:59 syslog: Free Memory has dropped below 500000k
```

**Platform** -

**Description**

## 5.10 reload

Use this command to reload the device.

**reload** [ at { hour [ :minute [ :second ] ] } [ month [ day [ year ] ] ]

| Parameter Description | Parameter                                           | Description                                                                                                               |
|-----------------------|-----------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------|
|                       | <i>hour</i> [ : <i>minute</i> [ : <i>second</i> ] ] | Sets the restart time in the format of hour : minute : second. Other neglected parameters keep the current system values. |
|                       | <i>month</i>                                        | Sets the month, in the range from 1 to 12.                                                                                |
|                       | <i>day</i>                                          | Sets the day, in the range from 1 to 31.                                                                                  |
|                       | <i>year</i>                                         | Sets the year, in the range from 1970 to 2069.                                                                            |

**Defaults** -

**Command Mode** Privileged EXEC mode

**Default Level** -

**Usage Guide** -

**Configuration** The following example reloads the device.

**Examples**

```
Ruijie# reload
Reload system?(Y/N) Y
Sending all processes the TERM signal... [ OK ]
Sending all processes the KILL signal... [ OK ]
Restarting system...
```

**Check Method** -

**Prompt** -

**Message**

**Platform** -  
**Description** -

### 5.11 show calendar

Use this command to display the hardware calendar.

**show calendar**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | -         | -           |

**Command Mode** Privileged EXEC mode/ global configuration mode

**Default Level** -

**Usage Guide** -

**Configuration Examples** The following example displays the hardware calendar.

```
Ruijie# show calendar
21:57:48 GMT Sun, Feb 28, 2012
```

**Prompt Message** -

**Platform Description** -

### 5.12 show clock

Use this command to display the system software clock.

**show clock**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | -         | -           |

**Command Mode** Privileged EXEC mode / global configuration mode

**Default Level** -

**Usage Guide** -

**Configuration** The following example displays the software clock when the time zone is disabled.

**Examples**

```
Ruijie# show clock
18:22:20 UTC Tue, Dec 11, 2012
```

The following example displays the software clock when the time zone is enabled.

```
Ruijie# show clock
03:07:49 TSZ Wed, Feb 29, 2012
```

**Prompt** -

**Message**

**Platform** -

**Description**

## 5.13 show memory

Use this command to display the system memory.

**show memory** [ **sorted total** | **history** | **low-watermark** | *process-id* | *process-name* ]

**Parameter  
Description**

| Parameter            | Description                                                              |
|----------------------|--------------------------------------------------------------------------|
| <b>sorted total</b>  | Ranked according to the memory usage.                                    |
| <b>history</b>       | Displays the history of memory usage.                                    |
| <b>low-watermark</b> | Displays the memory low watermark threshold of the system.               |
| <i>process-id</i>    | Displays the memory usage of the task specified by <i>process-id</i> .   |
| <i>process-name</i>  | Displays the memory usage of the task specified by <i>process-name</i> . |

**Command** Privileged EXEC mode/ global configuration mode

**Mode**

**Default Level** -

**Usage Guide** Every time when the **show memory history** command is used, the number of displayed entries increases by one. Up to 10 entries can be displayed. You can use the **memory history clear** command to clear history entries.

**Configuration** The following example displays the memory usage of each task and the ranking (based on the total memory usage).

**Examples**

```
Ruijie# show memory sorted
System Memory: 508324K total, 481560K used, 26764K free, 348200K available, 50.5% used rate
```

```

Swap:          128000K total, 128000K free
Used detail:   149112K active, 247776K inactive, 30460K mapped, 50460K slab, 3752K others

PID   Text (K) Rss (K)  Data (K)      Stack (K) Total (K)      Process
807   1568    4584    264728        84      270028        tcpip.elf
854    40     1436    246076        84      248840        cli-filesystem
1237   52     1492    123260        84      126036        cli-memory
803    56     1104    74064         84      76920         ping.elf
727    84     1276    33812         84      36640         rg_syslogd
733    84     796     33536         84      36364         rg_syslogd
776   224    1416    16896         84      19800         lsmdemo
858    40     1324    16844         84      19612         rg-tty-admin
769    40     3600    11052         84      13812         skbdemo
--More--

```

Description of some keywords in the command:

| Keyword   | Description                                                                                                             |
|-----------|-------------------------------------------------------------------------------------------------------------------------|
| total     | Total system memory                                                                                                     |
| used      | Used memory                                                                                                             |
| free      | Remaining memory                                                                                                        |
| used rate | Memory usage (percentage)                                                                                               |
| Active    | Active page                                                                                                             |
| inactive  | Inactive page                                                                                                           |
| mapped    | Mapped memory                                                                                                           |
| slab      | Memory consumed by Slab                                                                                                 |
| others    | Memory capacity of the used memory except the memory used by active and inactive pages, mapped memory, and slab memory. |

Description of the displayed information on each task:

| Field   | Description          |
|---------|----------------------|
| PID     | Process ID           |
| Text    | Code segment size    |
| Rss     | Resident memory size |
| Data    | Data segment size    |
| Stack   | Stack size           |
| Total   | Total used memory    |
| Process | Task name            |

**Prompt**

**Message**

**Platform**

**Description**

## 5.14 show memory vsd

Use this command to display memory information.

**show memory vsd** *vsd\_id*

| Parameter Description | Parameter     | Description                                                                                                             |
|-----------------------|---------------|-------------------------------------------------------------------------------------------------------------------------|
|                       | <i>vsd_id</i> | VSD ID is a digit. You can use the <b>show vsd</b> command to display the ID of each VSD. The ID range is from 0 to 16. |

**Command Mode** Privileged EXEC mode/ global configuration mode

**Default Level** -

### Usage Guide

 This command is supported only in VSD0 mode.

### Configuration

The following example displays the memory usage of each task in VSD 1 mode.

### Examples

```
Ruijie#show memory vsd 1
PID      Text    Rss     Data   Stack  Total  Process
1408     244     1192    25400  84     32164  tty_secu_enable
1385     104     16288   648    84     18648  gvpd
1384     304     3872    17084  84     24728  wbamain
1382     376     17708   33656  84     53308  snooping.elf
1381     84      2156    16736  84     22956  password_policy
1380     72      1096    404    84     3848   dns_client.elf
1379     168     2580    472    84     5352   rg-rmond
1378     652     3504    9768   84     15964  rg-snmpd
1376     208     1452    10672  84     14872  rg-fsui
1375     116     2020    33464  84     37288  rg-telnetc
1373     24      844     220    84     2824   rg-telnetd
1372     724     2364    17016  84     24380  rg-sshd
1371     244     2996    35780  84     42544  rg-tty-admin
1365     132     2168    9004   84     13796  vrrp_plus.elf
1364     312     16944   764    84     20368  vrrp.elf
1363     124     16988   500    84     19744  lacp.elf
1358     24      1380    320    84     3536   ftpc_cli.elf
1357     124     1944    8552   84     14976  ftp_server.elf
1352     340     3032    74704  84     80768  dhcp6.elf
1351     312     1960    988    84     6116   dhcp.elf
1350     388     17808   920    84     21600  mstp.elf
1349     240     3876    976    84     9536   rpi.elf
1348     1316    4656    1004   84     10764  isis.elf
1347     212     4220    872    84     9368   ripng.elf
```

|          |      |       |       |    |       |            |
|----------|------|-------|-------|----|-------|------------|
| 1345     | 460  | 4284  | 876   | 84 | 9656  | rip.elf    |
| 1344     | 1800 | 5568  | 1572  | 84 | 12156 | bgp.elf    |
| 1340     | 1084 | 4700  | 1024  | 84 | 10928 | ldp.elf    |
| 1339     | 288  | 17684 | 556   | 84 | 21472 | msf.elf    |
| 1338     | 208  | 3604  | 42712 | 84 | 47708 | rg-syslogd |
| --More-- |      |       |       |    |       |            |

**Prompt** -  
**Message** -

**Platform** -  
**Description** -

## 5.15 show pci-bus

Use this command to display the information on the device mounted to the PCI bus.

**show pci-bus**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | -         | -           |

**Command Mode** Privileged EXEC mode/ global configuration mode

**Default Level** -

**Usage Guide** -

**Configuration** The following example displays the information on the device mounted to the PCI bus.

**Examples**

```
Ruijie# show pci-bus
NO:0
Vendor ID      : 0x1131
Device ID     : 0x1561
Domain:bus:dev.func : 0000:00:05.0
Status / Command : 0x2100000
Class / Revision : 0xc031030
Latency       : 0x0
first 64 bytes of configuration address space:
00: 31 11 61 15 00 00 10 02 30 10 03 0c 20 00 80 00
10: 00 00 00 f0 00 00 00 00 00 00 00 00 00 00 00 00
20: 00 00 00 00 00 00 00 00 00 00 00 00 31 11 61 15
30: 00 00 00 00 dc 00 00 00 00 00 00 00 29 01 01 2a

NO:1
Vendor ID      : 0x1131
Device ID     : 0x1562
Domain:bus:dev.func : 0000:00:05.1
Status / Command : 0x2100156
Class / Revision : 0xc032030
Latency       : 0x30
```



```

First 64 bytes of configuration address space:
00: 31 11 62 15 56 01 10 02 30 20 03 0c 20 30 80 00
10: 00 10 00 f0 00 00 00 00 00 00 00 00 00 00 00 00
20: 00 00 00 00 00 00 00 00 00 00 00 00 31 11 62 15
30: 00 00 00 00 dc 00 00 00 00 00 00 00 29 01 02 10
    
```

**Prompt** -  
**Message** -  
**Platform** -  
**Description** -

### 5.16 show processes cpu

Use this command to display system task information.

**show processes cpu [ history [ table ] | [ 5sec | 1min | 5min | 15min ] [ nonzero]]**

| Parameter Description | Parameter                         | Description                                                                                                                      |
|-----------------------|-----------------------------------|----------------------------------------------------------------------------------------------------------------------------------|
|                       | <b>5sec   1min   5min   15min</b> | Displays lists of tasks in descending order of CPU usage within the last five seconds, one minute, five minutes, and 15 minutes. |
|                       | <b>nonzero</b>                    | Does not display the task with 0 CPU usage.                                                                                      |
|                       | <b>history</b>                    | Displays the CPU usage of the control core within the last 60 seconds, 60 minutes, and 72 hours in histogram.                    |
|                       | <b>table</b>                      | Displays the CPU usage of the control core within the last 60 seconds, 60 minutes, and 72 hours in table.                        |

**Command Mode** Privileged EXEC mode/ global configuration mode

**Default Level** -

**Usage Guide** This command is only supported by VSD0.

**Configuration Examples** The following example displays the tasks listed in ascending order of task IDs.

```

Ruijie# show processes cpu
System Uptime: 19:08.6
CPU utilization for five seconds:1.2%; one minute:0.8%; five minutes:0.8%
set system cpu watermark (open): high 80%(85~75%)

Tasks Statistics: 375 total, 10 running, 365 sleeping, 0 stopped, 0 zombie
  Pid Vsd S  PRI  P    5Sec    1Min    5Min    15Min Process
   1  0 S   20  0  0.0(0.0)  0.0(0.0)  0.0(0.0)  0.0(0.0) init
   2  0 S   20  1  0.0(0.0)  0.0(0.0)  0.0(0.0)  0.0(0.0) kthreadd
    
```

```

3  0 S  -100  0  0.0(0.0)  0.0(0.0)  0.0(0.0)  0.0(0.0) migration/0
4  0 S   20  0  0.0(0.0)  0.0(0.0)  0.0(0.0)  0.0(0.0) ksoftirqd/0
5  0 S  -100  1  0.0(0.0)  0.0(0.0)  0.0(0.0)  0.0(0.0) migration/1

--More--

```

The following example displays the tasks listed in ascending order of task IDs without displaying the tasks with 0 CPU usage within 15 minutes.

```
Ruijie# show processes cpu nonzero
```

Description of the information displayed in this command:

| Field                    | Description                                                                                             |
|--------------------------|---------------------------------------------------------------------------------------------------------|
| System Uptime            | Total running time of the device, precious to seconds.                                                  |
| CPU Utilization          | Total CPU usage of the control core within the last five seconds, one minute, and five minutes.         |
| Virtual CPU usage        | Total CPU usage of the virtual control core within the last five seconds, one minute, and five minutes. |
| Tasks Statistics         | Task statistics information, including the total number of statistics tasks and the task status.        |
| set system cpu watermark | CPU watermark value and status of the control core.                                                     |

The task running statuses are listed below:

| Task Running Status | Description                                      |
|---------------------|--------------------------------------------------|
| running             | Running task                                     |
| sleeping            | Suspended task                                   |
| stopped             | Stopped task                                     |
| zombie              | Terminated task, but not reclaimed by the system |

Description of each task:

| Field                | Description                                                                                                                                                                                                          |
|----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Pid                  | Task ID                                                                                                                                                                                                              |
| Vsd                  | VSD ID                                                                                                                                                                                                               |
| S                    | Task status. Five statuses in total: R (running), T (stopped), S (sleeping), D (waiting), and Z (zombie).                                                                                                            |
| PRI                  | Task running priority                                                                                                                                                                                                |
| P                    | The core of the CPU on which the task runs                                                                                                                                                                           |
| 5sec/1min/5min/15min | CPU usage of the task within the last five seconds, one minute, five minutes, and 15 minutes. The value in the round brackets is the CPU usage that is not divided by the total number of cores where the task runs. |
| Process              | Task name. Only the first 15 characters are displayed. The remaining characters are truncated.                                                                                                                       |

The following example displays the CPU usage in ascending order of task IDs and only the processes with non-zero CPU usage within 15 minutes are displayed.

```
Ruijie #show processes cpu nonzero
```

The following example displays the CPU usage in descending order within five seconds and the tasks with zero CPU usage within one second are not displayed.

```
Ruijie #show processes cpu 5sec nonzero
```

The following example displays the CPU usage of the control core in histograms within the last 60 seconds, 60 minutes, and 72 hours.


The first histogram displays the CPU usage of the control core within 300 seconds. Every segment in the x-coordinate is five seconds, and every segment in the y-coordinate is 5%. The symbol "\*" indicates the CPU usage at the last specified second. In other words, the first segment on the x-coordinate nearest to 0 is the CPU usage in the last five seconds, measured in %.

The second histogram displays the CPU usage of the control core within the last 60 minutes, measured in %. Every segment on the x-coordinate is 1 minute.

The third histogram displays the CPU usage of the control core within the last 72 hours, measured in %. Every segment on the x-coordinate is 1 hour.

Example:

```
Ruijie#show processes cpu history
```

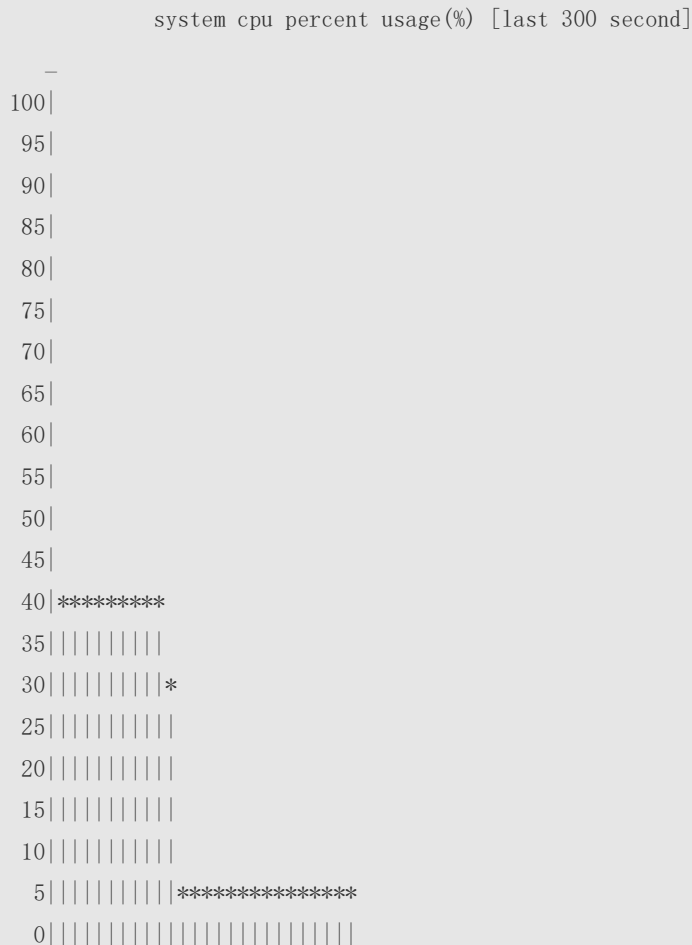

```

#=====#=====#====*==>
0      50      100      second
      system cpu percent usage(%) per 5second (last 125 second)
-----

      system cpu percent usage(%) [last 60 minute]

-
100|
 95|
 90|
 85|
 80|
 75|
 70|
 65|
 60|
 55|
 50|
 45|
 40|
 35|
 30|*
 25||
 20||
 15||
 10||
  5|*
  0||
#==*==>
0      minute
      system cpu percent usage(%) per 1minute (last 2 minute)
-----

```

The following example displays the CPU usage of the core 0 in tables within the last 60 seconds, 60 minutes, and 72 hours.

The first table lists the CPU usage within 300 seconds. The first cell indicates the CPU usage within the last five seconds.

The second table lists the CPU usage within the last 60 minutes, measured in %. The two adjacent cells show the CPU usage measured at an interval of one minute.

The third table lists the CPU usage within the last 72 hours, measured in %. The two adjacent cells show the CPU usage measured at an interval of one hour.

Example:

```

Ruijie #show processes cpu history table
      system cpu percent usage(%) [last 300 second]

```

```

#-----#
|      | 1| 2| 3| 4| 5| 6| 7| 8| 9| 10|
#-----#
#-----#
|      0| 2.0| 2.4| 2.3| 2.3| 2.8| 3.0| 2.7| 3.2| 2.6| 2.4|
#-----#
|      1| 2.7| 2.5| 2.7| 2.2| 2.4| 2.6| 2.2| 2.7| 2.3| 2.5|
#-----#
|      2| 2.9| 2.0| 2.4| 2.5| 2.7| 2.4| 2.4| 2.6| 2.6| 2.5|
#-----#
|      3| 2.7| 2.8| 2.8| 3.2| 2.5| 3.2| 3.1| 4.0| 2.7| 2.7|
#-----#
|      4| 4.0| 2.3| 2.1| 2.2| 2.7| 2.4| 2.5| 2.6| 2.4| 2.6|
#-----#
|      5| 2.4| 3.2| 2.5| 2.3| 2.3| 3.6| 2.8| 2.5| 2.2| 2.4|
#-----#
#-----#
#           system cpu percent usage(%) [last 60 minute]
#-----#
|      | 1| 2| 3| 4| 5| 6| 7| 8| 9| 10|
#-----#
#-----#
|      0| 2.6| 2.5| 3.0| 2.4| 2.6|
#-----#

```

Prompt

-

Message

Platform

-

Description

### 5.17 show processes cpu detailed

Use this command to display the details of the specified task.

**show processes cpu detailed** { *process-id* | *process-name* }

Parameter Description

| Parameter           | Description                                                      |
|---------------------|------------------------------------------------------------------|
| <i>process-id</i>   | Displays the information on the task of the specified task ID.   |
| <i>process-name</i> | Displays the information on the task of the specified task name. |

Command

Privileged EXEC mode/ global configuration mode

Mode

**Default Level** -


**Usage Guide** This command is only supported by VSD0.

**Configuration** The following example displays the information on the task of the specified task name.

**Examples**

```
Ruijie# show processes cpu detailed demo
Process Id   : 1820
Process Name : demo
Vsdid       : 0
Process Ppid : 1

State       : R(running)
On CPU     : 0
Priority    : 20
Age Time   : 24:06.5
Run Time   : 00:01.0
Cpu Usage  :
  Last 5 sec  0.3% (0.6%)
  Last 1 min  0.3% (0.6%)
  Last 5 min  0.3% (0.6%)
  Last 15 min 0.3% (0.6%)
Tty        : ?
```

 **Code Usage: 209.6 KB.** If the specified task name is not unique, the system displays the following message:

```
Ruijie# show processes cpu detailed demo
duplicate process, choose one by id not name.
name: demo, id: 1089, state: S(sleeping)
name: demo, id: 1091, state: R(running)
process name: monitor_procs, do NOT exist, or NOT only one.
```

**Description of the displayed information:**

| Field        | Description                                               |
|--------------|-----------------------------------------------------------|
| Process Id   | Task ID                                                   |
| Vsdid        | VSD ID of the task                                        |
| Process Name | Task name                                                 |
| Process Ppid | Parent process task ID                                    |
| State        | Task running status                                       |
| On CPU       | CPU where the task is running                             |
| Priority     | Task priority                                             |
| Age Time     | Duration for the task from self-startup to now            |
| Run Time     | Duration for the task from self-startup to being executed |

|            |                                                                                                                                                                                                                                                                                                                                                                                         |
|------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Cpu Usage  | CPU usage of the task within the last five seconds, one minute, five minutes, and 15 minutes.<br>The value in the round brackets is the CPU usage that is not divided by the total number of cores where the task runs. For example, the demo task is running on No.0 core, which is the control core and the system has two control cores. In this case, the CPU usage is 0.3% (0.6%). |
| Tty        | Tty ID, in the format of "Primary device ID, secondary device ID". If it is 0, the value is ?.                                                                                                                                                                                                                                                                                          |
| Code Usage | Size occupied by the task code segment                                                                                                                                                                                                                                                                                                                                                  |

The following example displays the information on the task of the specified task ID.

```
Ruijie# show process cpu detailed 1715
Process Id      : 130
Process Name    : crypto
Vsdid          : 0
Process Ppid    : 2

State          : S(sleeping)
On CPU         : 0
Priority        : 0
Age Time       : 03:41:09.9
Run Time       : 00:00.0
Cpu Usage      :
  Last 5 sec   0.0%( 0.0%)
  Last 1 min   0.0%( 0.0%)
  Last 5 min   0.0%( 0.0%)
  Last 15 min  0.0%( 0.0%)
Tty            : ?
Code Usage     : 0.0KB.
```

**Prompt** -  
**Message**  
  
**Platform** -  
**Description**

### 5.18 show usb-bus

Use this command to display the information on the device mounted to the USB bus.

**show usb-bus**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | -         | -           |

|                               |                                                                                                        |
|-------------------------------|--------------------------------------------------------------------------------------------------------|
| <b>Command Mode</b>           | Privileged EXEC mode/ global configuration mode                                                        |
| <b>Default Level</b>          | -                                                                                                      |
| <b>Usage Guide</b>            | -                                                                                                      |
| <b>Configuration Examples</b> | 1: The following example displays the information on the device mounted to the USB bus.                |
| <b>Examples</b>               | <pre>Ruijie# show usb-bus Device: Linux Foundation 2.0 root hub Bus 001 Device 001: ID 1d6b:0002</pre> |
| <b>Prompt Message</b>         | -                                                                                                      |
| <b>Platform Description</b>   | -                                                                                                      |

## 5.19 show version

Use this command to display the system version information.

### show version

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | -         | -           |

|                      |                                                                                                                                                                                                                                                                                                                                                                    |
|----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Command Mode</b>  | Privileged EXEC mode/ global configuration mode                                                                                                                                                                                                                                                                                                                    |
| <b>Default Level</b> | -                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Usage Guide</b>   | -                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Usage Guide</b>   | The following example displays the system version information.                                                                                                                                                                                                                                                                                                     |
|                      | <pre>Ruijie# show version System description      : Ruijie Indoor AP320-I (802.11a/n and 802.11b/g/n) By Ruijie Networks System start time      : 2012-12-06 00:00:00 System uptime          : 0:03:20:07 System hardware version : 1.0.0 System software version : AP_RGOS11.0(1B1) System serial number    : 1234942570018 System boot version     : 1.0.0</pre> |



**Prompt Message** -

**Platform Description** -

## 5.20 show cpu

Use this command to display the information on the system task running on the control core instead of the non-virtual core.

**show cpu**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | -         | -           |

**Command Mode** Privileged EXEC mode/ global configuration mode

**Default Level** -

**Usage Guide** This command is supported only in VSD0 mode. Multiple VSDs are not supported. If the system is equipped with a virtual core, you can use the **show processes cpu** command to check the CPU usage of the virtual core.

**Configuration Examples** The following example displays the information on the system task running on the control core instead of the non-virtual core.

```
Ruijie#show cpu
=====
CPU Using Rate Information
CPU utilization in five seconds: 4.80%
CPU utilization in one minute: 4.10%
CPU utilization in five minutes: 4.00%

NO      5Sec   1Min   5Min Process
  1  0.00%  0.00%  0.00% init
  2  0.00%  0.00%  0.00% kthreadd
  3  0.00%  0.00%  0.00% ksoftirqd/0
  4  0.00%  0.00%  0.00% events/0
--More--
```

**Prompt Message** -

**Platform**  
**Description** -

## 5.21 show reboot-reason

Use this command to display the reboot reason.

**show reboot-reason** [ *all* ]

**Parameter**  
**Description**

| Parameter  | Description                                               |
|------------|-----------------------------------------------------------|
| <i>all</i> | Displays the reboot reason of all devices/service modules |

**Command**  
**Mode** Privileged EXEC mode/ global configuration mode/ User EXEC mode

**Default Level** -

**Usage Guide** -

**Configuration** The following example displays the reboot reason of the device.

**Examples**

```
Ruijie#show reboot-reason
time: 1970-01-01 08:03:13
reason: reload cmd
info: /sbin/rg-sysmon/3844

Ruijie#
```

**Prompt**  
**Message** -

**Platform**  
**Description** -

## 6. Time Range Commands

### 6.1 absolute

Use this command to configure an absolute time range.

**absolute** { [ *start time date* ] [ *end time date* ] }

Use the **no** form of this command to remove the absolute time range.

**no absolute**

#### Parameter Description

| Parameter                     | Description                            |
|-------------------------------|----------------------------------------|
| <b>start</b> <i>time date</i> | Indicates the start time of the range. |
| <b>end</b> <i>time date</i>   | Indicates the end time of the range.   |

#### Defaults

The default absolute time range is the maximum range, which is from 00:00 January 1, 0 to 23:59 December 31, 9999.

#### Command Mode

Time range configuration mode

#### Default Level

14

#### Usage Guide

Use the **absolute** command to configure a time absolute time range between a start time and an end time to allow a certain function to take effect within the absolute time range.

The maximum absolute time range is from 00:00 January 1, 0 to 23:59 December 31, 9999.

#### Configuration

The following example creates a time range and enters time range configuration mode.

#### Examples

```
Ruijie(config)# time-range no-http
Ruijie(config-time-range)#
```

The following example configures an absolute time range.

```
Ruijie(config-time-range)# absolute start 1:1 1 JAN 2013 end 1:1 1 JAN 2014
```

#### Check Method

Use the **show time-range** [ *time-range-name* ] command to display the time range configuration.

#### Prompt Message

-

#### Platform Description

-

## 6.2 periodic

Use this command to configure periodic time.

**periodic** *day-of-the-week time to [ day-of-the-week ] time*

Use the **no** form of this command to remove the configured periodic time.

**no periodic** *day-of-the-week time to [ day-of-the-week ] time*

| Parameter Description | Parameter              | Description                                                     |
|-----------------------|------------------------|-----------------------------------------------------------------|
|                       | <i>day-of-the-week</i> | Indicates the week day when the periodic time starts or ends.   |
|                       | <i>time</i>            | Indicates the exact time when the periodic time starts or ends. |

**Defaults** No periodic time is configured by default.

**Command Mode** Time range configuration mode

**Default Level** 14

**Usage Guide** Use the **periodic** command to configure a periodic time interval to allow a certain function to take effect within the periodic time. If you want to modify the periodic time, it is recommended to disassociate the time range first and associate the time range after the periodic time is modified.

**Configuration Examples** The following example creates a time range and enters time range configuration mode.

```
Ruijie(config)# time-range no-http
Ruijie(config-time-range)#
```

The following example configures a periodic time interval.

```
Ruijie(config-time-range)# periodic Monday 1:1 to Tuesday 2:2
```

**Check Method** Use the **show time-range [ time-range-name ]** command to display the time range configuration.

**Prompt Message** -

**Platform Description** -

## 6.3 show time-range

Use this command to display the time range configuration.

**show time-range** [ *time-range-name* ]

| Parameter Description | Parameter              | Description                      |
|-----------------------|------------------------|----------------------------------|
|                       | <i>time-range-name</i> | Displays a specified time range. |

**Command Mode** Privileged EXEC mode

**Default Level** 14

**Usage Guide** Use this command to check the time range configuration.

**Configuration** The following example displays the time range configuration.

**Examples**

```
Ruijie# show time-range
time-range entry: test (inactive)
  absolute end 01:02 02 February 2012
```

**Prompt Message** -

**Platform Description** -

## 6.4 time-range

Use this command to create a time range and enter time range configuration mode.

**time-range** *time-range-name*

Use the **no** form of this command to remove the configured time range.

**no time-range** *time-range-name*

| Parameter Description | Parameter              | Description     |
|-----------------------|------------------------|-----------------|
|                       | <i>time-range-name</i> | Time range name |

**Defaults** No time range is configured by default.

**Command Mode** Global configuration mode

**Default Level** 2

**Usage Guide** Some applications (such as ACL ) may run based on time. For example, an ACL can be effective within certain time ranges of a week. To this end, first you must configure a time range. After the time range is created, you can configure relevant time control in time range mode.

**Configuration** The following example creates a time range.

**Examples**

```
Ruijie(config)# time-range no-http
Ruijie(config-time-range)#
```

**Check Method** Use the **show time-range** [ *time-range-name* ] command to display the time range configuration.

**Prompt Message** -

**Platform Description** -

## 7. HTTP Service Commands

### 7.1 enable service web-server

Use this command to enable the HTTP service function.

Use the **no** form of this command to disable the HTTP service function.

**enable service web-server [ http | https | all ]**

**{ no | default } enable service web-server [ http | https | all ]**

| Parameter Description | Parameter    | Description                                          |
|-----------------------|--------------|------------------------------------------------------|
|                       | <b>http</b>  | Enables the HTTP service.                            |
|                       | <b>https</b> | Enables the HTTPS service.                           |
|                       | <b>all</b>   | Enables both the HTTP service and the HTTPS service. |

**Defaults** By default, the HTTP service function is disabled.

**Command mode** Global configuration mode.

**Usage Guide** If run a command ends with the keyword **all** or without keyword, it indicates enabling both the HTTP service and the HTTPS service; if run a command ends with keyword **http**, it indicates enabling the HTTP service; if run a command ends with keyword **https**, it indicates enabling the HTTPS service. Use the command **no enable service web-server** to disable the corresponding HTTP service.

**Configuration** The following example enables both the HTTP service and the HTTPS service:

**Examples**

```
Ruijie#configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#enable service web-server
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

### 7.2 http check version

Use this command to detect the available upgrade files on the HTTP server.

**http check-version**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command mode** Privileged EXEC mode

**Usage Guide** Use this command to detect the available upgrade files. The detected upgrade files version is later than that of local files.

**Configuration** The following example demonstrates the version of the detected HTTP upgrade file.

**Examples**

```
Ruijie# http check-version
Business modules need to be updated: character-db, route-db
app name:web
  app-name          version          filename
-----
character-db       2014.02.09.14.02.09  app_sub_1.exe
character-db       2014.02.09.14.02.09  app_file_list.txt
character-db       2014.02.09.14.02.09  app_sub_3.exe
character-db       2014.02.09.14.02.09  app_sub_2.exe
route-db           2013.12.01.00        route-choose.db
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 7.3 http port

Use this command to configure the HTTP port number.

Use the **no** form of this command to restore the default HTTP port number.

**http port** *port-number*

**no http port**

| Parameter Description | Parameter          | Description                                                             |
|-----------------------|--------------------|-------------------------------------------------------------------------|
|                       | <i>port-number</i> | Configures the HTTP port number. The value includes 80, 1025 to 65,535. |



- Defaults** The default HTTP port number is 80.
- Command mode** Global configuration mode.
- Usage Guide** Use this command to configure the HTTP port number.

**Configuration** The following example configures the HTTP port number as 8080:

**Examples**

```
Ruijie#configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#http port 8080
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 7.4 http secure-port

Use this command to configure the HTTPS port number.  
Use the **no** form of this command to restore the default HTTPS port number.

**http secure-port** *port-number*

**no http secure-port**

**Parameter Description**

| Parameter          | Description                                                               |
|--------------------|---------------------------------------------------------------------------|
| <i>port-number</i> | Configures the HTTPS port number. The value includes 443, 1025 to 65,535. |

- Defaults** The default HTTP port number is 443.
- Command mode** Global configuration mode.
- Usage Guide** Use this command to configure the HTTPS port number.

**Configuration** The following example configures the HTTPS port number as 4443:

**Examples**

```
Ruijie#configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#http secure-port 4443
```

| Related<br>Commands | Command                          | Description                                               |
|---------------------|----------------------------------|-----------------------------------------------------------|
|                     | <b>enable service web-server</b> | Enables the HTTP service.                                 |
|                     | <b>show web-server status</b>    | Displays the configuration and status of the Web service. |

**Platform** N/A

**Description**

## 7.5 http update

Use this command to manually upgrade files.

**http update** { **all** | *string* }

| Parameter<br>Description | Parameter     | Description                                                                                         |
|--------------------------|---------------|-----------------------------------------------------------------------------------------------------|
|                          | <i>string</i> | Name of the service to be upgraded. You can enter multiple services, and separate them with spaces. |
|                          | <b>all</b>    | Upgrade all services.                                                                               |

**Defaults** N/A

**Command mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example upgrades the route-db and url-db files.

### Examples

```
Ruijie# http update route-db
Downloading updated files, please wait...
Press Ctrl+C to quit
route-db: download and notify successfully.
```

| Related<br>Commands | Command                  | Description                                              |
|---------------------|--------------------------|----------------------------------------------------------|
|                     | <b>http check-vesion</b> | Detects the available update package on the HTTP server. |

**Platform** N/A

**Description**

## 7.6 http update mode

Use this command to configure the HTTP upgrade mode to manual mode. Use the **no** form of this command to restore the default upgrade mode, namely, auto mode.

**http update mode manual**

**no http update mode**

### Parameter Description

| Parameter     | Description                         |
|---------------|-------------------------------------|
| <b>manual</b> | Configures the manual upgrade mode. |

### Defaults

The default update mode is auto mode.

### Command mode

Global configuration mode.

### Usage Guide

Use this command to configure the HTTP upgrade mode to manual mode.

### Configuration

The following example enables manual HTTP upgrade mode:

### Examples

```
Ruijie#configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#http update mode manual
```

### Related Commands

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

### Platform

N/A

### Description

## 7.7 http update server

Use this command to configure the IP address and the HTTP port number of the HTTP server.

**http update server** { *host-name* | *ip-address* } [ **port** *port-number* ]

**no http update server**

### Parameter Description


| Parameter          | Description                                                    |
|--------------------|----------------------------------------------------------------|
| <i>host-name</i>   | Host name of the HTTP server.                                  |
| <i>ip-address</i>  | IP address of the HTTP server.                                 |
| <i>port-number</i> | Port number of the HTTP server. The range is from 1 to 65,535. |

### Defaults

By default, the IP address of the HTTP remote upgrade server is 0.0.0.0 and the port number is 80.

**Command mode** Global configuration mode.

**Usage Guide** Use this command to configure the IP address and the HTTP port number of the HTTP server. When processing upgrade, the user-configured server address is preferentially used. If the connection fails, the server address in store in the local upgrade record file will be used to establish the connection. When all the above connection fails, upgrade will be suspended. At least one IP address of upgrade server is stored in the local upgrade record file, and this IP address cannot be modified.

 The HTTP upgrade server address is not need to be configured because the local upgrade record file records available upgrade server addresses.

If the server domain needs to be configured, enable the DNS function on the device and configure the DNS server address.

The server IP address cannot be an IPv6 address.

**Configuration Examples** The following example configures the IP address and the HTTP port number of the HTTP server:

```
Ruijie#configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#http update server 10.83.132.1 port 90
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 7.8 http update set oob

Use this command to enable HTTP upgrade on the MGMT port. Use the **no** form of this command to restore the default setting.

**http update set oob**  
**no http update set oob**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** By default, HTTP upgrade is performed on the common port.

**Command mode** Global configuration mode.

**Usage Guide** This command is supported only on the device supporting the MGMT ports.

**Configuration** The following example enables HTTP upgrade on the MGMT port:

**Examples** Ruijie(config)# http update set oob

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 7.9 http update time

Use this command to configure the HTTP auto-detection time. Use the **no** form of this command to restore the default auto-detection time.

**http update time daily hh:mm**

**no http update time**

| Parameter Description | Parameter | Description                                                          |
|-----------------------|-----------|----------------------------------------------------------------------|
|                       | hh:mm     | Specified auto-detection time; (24-hour system); accurate to minute. |

**Defaults** The default HTTP auto-detection time is random.

**Command mode** Global configuration mode.

**Usage Guide** Use this command to configure the HTTP auto-detection time. The device detects the files available for upgrade on the server at the specified detection time. Use can read these detected file information through Web interface.  
 Use the **no** form of this command to reset the auto-detection time as random.

**Configuration** The following example configures the HTTP auto-detection time.

**Examples** Ruijie#configure terminal  
 Enter configuration commands, one per line. End with CNTL/Z.  
 Ruijie(config)#http update time daily 23:40

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  |         |             |

|                         |                                 |
|-------------------------|---------------------------------|
| <b>http update mode</b> | Configures the HTTP update mode |
|-------------------------|---------------------------------|

**Platform** N/A

**Description**

## 7.10 show web-server status

Use this command to display the configuration and status of the Web service.

**show web-server status**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the configuration and status of the Web service:

**Examples**

```
Ruijie#show web-server status
http server status : enabled
http server port : 80
https server status: enabled
https server port: 443
```

| Related Commands | Command                          | Description                       |
|------------------|----------------------------------|-----------------------------------|
|                  | <b>enable service web-server</b> | Enables the HTTP service.         |
|                  | <b>http port</b>                 | Configures the HTTP port number.  |
|                  | <b>http secure-port</b>          | Configures the HTTPS port number. |

**Platform** N/A

**Description**

## 7.11 webmaster level

Use this command to configure the username and password for Web login authentication. Use the **no** form of this command to restore the default setting.

**webmaster level** *privilege-level* **username** *name* **password** { *password* | [ 0 | 7 ] *encrypted-password* }

**no webmaster level** *privilege-level* [ **username** *name* ]

**Parameter Description**

| Parameter                 | Description                                                   |
|---------------------------|---------------------------------------------------------------|
| <i>privilege-level</i>    | Configures the user privilege-level.                          |
| <i>name</i>               | Username.                                                     |
| <i>password</i>           | Password.                                                     |
| <b>0   7</b>              | Password type; 0 indicates plaintext, 7 indicates ciphertext. |
| <i>encrypted-password</i> | Password text.                                                |

**Defaults**

By default, two users are configured.

1. User1 is configured with privilege level 1, username of admin and plaintext password of admin.
2. User2 is configured with privilege level 2, username of guest and plaintext password of guest.

**Command mode**



Global configuration mode.

**Usage Guide**

When HTTP is enabled, users can log in to the Web interface only after being authenticated. Use this command to configure the username and password for Web login authentication.

Use the **no webmaster level** *privilege-level* command to delete all the usernames and passwords with a specified *privilege-level*.

Use the **no webmaster level** *privilege-level* **username** *name* command to delete the specified username and password.

-  Usernames and passwords come with three permission levels, each of which includes at most 10 usernames and passwords.
-  By default, the system creates the **admin** account. The account cannot be deleted and only the password of the account can be changed. The administrator account is the **admin** account, which corresponds to the level 0 permission. The administrator account owns all permissions on the Web page and can edit other management accounts and authorize the accounts to access pages.

**Configuration Examples**

The following example configures the username and password for Web login authentication,

```
Ruijie#configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#webmaster level 0 username ruijie password admin
```

**Related Commands**

| Command                          | Description               |
|----------------------------------|---------------------------|
| <b>enable service web-server</b> | Enables the HTTP service. |

**Platform Description**

N/A

## 8. Syslog Commands

### 8.1 clear logging

Use this command to clear the logs from the buffer in privileged EXEC mode.

**clear logging**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** This command clears the log packets from the memory buffer. You cannot clear the statistics of the log packets.

**Configuration Examples** The following example clears the log packets from the memory buffer.

```
Ruijie# clear logging
```

| Related Commands | Command                 | Function                               |
|------------------|-------------------------|----------------------------------------|
|                  | <b>logging on</b>       | Turns on the log switch.               |
|                  | <b>show logging</b>     | Displays the logs in the buffer.       |
|                  | <b>logging buffered</b> | Records the logs in the memory buffer. |

**Platform Description** N/A

### 8.2 logging

Use this command to send the log message to the specified syslog server.

**logging** { *ip-address* | **ipv6** *ipv6-address* } [ **udp-port** *port* ] [ **vrf** *vrf-name* ]

Use this command to delete the specified syslog server.

**no logging** { *ip-address* [ **vrf** *vrf-name* ] | **ipv6** *ipv6-address* }

Use this command to restore the default port 514.

**no logging** { *ip-address* [ **vrf** *vrf-name* ] | **ipv6** *ipv6-address* } **udp-port**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description |           |             |



|                             |                                                                              |
|-----------------------------|------------------------------------------------------------------------------|
| <i>ip-address</i>           | Sets the IP address of the host receiving log messages.                      |
| <i>vrf-name</i>             | Sets the VRF instance connecting with the host.                              |
| <i>ipv6-address</i>         | Sets the IPv6 address of the host receiving log messages.                    |
| <b>udp-port</b> <i>port</i> | Sets the port number of the host receiving log messages. The default is 514. |

**Defaults** No log message is sent to syslog server by default.

**Command Mode** Global configuration mode

**Usage Guide** This command is used to configure a syslog server to receive log messages from the device. You can configure up to five syslog servers, log messages are sent to all configured syslog servers simultaneously,

**Configuration** The following example configures a syslog server with IP address 202.101.11.1.

**Examples**

```
Ruijie(config)# logging 202.101.11.1
```

The following example configures a syslog server with IP address 10.1.1.100 and port number 8099.

```
Ruijie(config)# logging 202.101.11.1 udp-port 8099
```

The following example configures a syslog server with IPv6 address AAAA:BBBB::FFFF.

```
Ruijie(config)# logging ipv6 AAAA:BBBB::FFFF
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

### 8.3 logging buffered

Use this command to set the memory buffer parameters (log severity, buffer size) for logs at global configuration layer. Use the **no** form of the command to disable recording logs in the memory buffer. Use the **default** form of this command to restore the default setting.

**logging buffered** [ *buffer-size* | *level* ]

**no logging buffered**

**default logging buffered**

| Parameter Description | Parameter          | Description                                                                                                                                                                                                              |
|-----------------------|--------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <i>buffer-size</i> | Size of the buffer is related to the specific device type:<br>1. For the kernel / aggregation switches, 4 K to 10 M bytes.<br>2. For the access switches, 4 K to 1 M Bytes.<br>3. For other devices, 4 K to 128 K Bytes. |

|              |                                                                                     |
|--------------|-------------------------------------------------------------------------------------|
| <i>level</i> | Severity of logs, from 0 to 7. The name of the severity or the numeral can be used. |
|--------------|-------------------------------------------------------------------------------------|

**Defaults** The buffer size is related to the specific device type.

1. kernel switches: 1 M Bytes;
2. aggregation switches: 256 K Bytes;
3. access switches: 128 K Bytes;
4. other devices: 4 K Bytes

The log severity is 7.

**Command**

**Mode** Global configuration mode

**Usage Guide**

The memory buffer for log is used in recycled manner. That is, when the memory buffer with the specified size is full, the oldest information will be overwritten. To show the log information in the memory buffer, run the **show logging** command in privileged user mode.


The logs in the memory buffer are temporary, and will be cleared in case of device restart or the execution of the **clear logging** command in privileged user mode. To trace a problem, it is required to record logs in flash or send them to Syslog Server.

The log information is classified into the following 8 levels (Table 1):

**Table-1**

| Keyword       | Level | Description                                    |
|---------------|-------|------------------------------------------------|
| Emergencies   | 0     | Emergency case, system cannot run normally     |
| Alerts        | 1     | Problems that need immediate remedy            |
| Critical      | 2     | Critical conditions                            |
| Errors        | 3     | Error message                                  |
| warnings      | 4     | Alarm information                              |
| Notifications | 5     | Information that is normal but needs attention |
| informational | 6     | Descriptive information                        |
| Debugging     | 7     | Debugging messages                             |

Lower value indicates higher level. That is, level 0 indicates the information of the highest level. When the level of log information to be displayed on devices is specified, the log information at or below the set level will be allowed to be displayed.

 After running the system for a long time, modifying the log buffer size especially in condition of large buffer may fails due to the insufficient available continuous memory. The failure message will be shown. It is recommended to modify the log buffer size as soon as the system starts.

**Configuration Examples** The following example allows logs at and below severity 6 to be recorded in the memory buffer sized 10,000 bytes.

```
Ruijie(config)# logging buffered 10000 6
```

| <b>Related Commands</b> | Command       | Description                        |
|-------------------------|---------------|------------------------------------|
|                         | logging on    | Turns on the log switch.           |
|                         | show logging  | Displays the logs in the buffer.   |
|                         | clear logging | Clears the logs in the log buffer. |

**Platform Description** N/A

## 8.4 logging console

Use this command to set the severity of logs that are allowed to be displayed on the console in global configuration mode. Use the **no** form of this command to prohibit printing log messages on the console.

**logging console** [ *level* ]

**no logging console**

| <b>Parameter Description</b> | Parameter    | Description                                                                                                                          |
|------------------------------|--------------|--------------------------------------------------------------------------------------------------------------------------------------|
|                              | <i>level</i> | Severity of log messages, 0 to 7. The name of the severity or the numeral can be used. For the details of log severity, see table 1. |

**Defaults** The default is debugging (7).

**Command Mode** Global configuration mode

**Usage Guide** When a log severity is set, the log messages at or below that severity will be displayed on the console.

The **show logging** command displays the related setting parameters and statistics of the log.

**Configuration Examples** The following example sets the severity of log that is allowed to be displayed on the console as 6:

```
Ruijie(config)# logging console informational
```

| <b>Related Commands</b> | Command      | Description                                                               |
|-------------------------|--------------|---------------------------------------------------------------------------|
|                         | logging on   | Turns on the log switch.                                                  |
|                         | show logging | Displays the logs and related log configuration parameters in the buffer. |

**Platform**  
**Description** N/A

## 8.5 logging count

Use this command to enable the log statistics function in global configuration mode. Use the **no** form of this command to restore the default setting.

**logging count**

**no logging count**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** The log statistics function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** This command enables the log statistics function. The statistics begins when the function is enabled. If you run the **no logging count** command, the statistics function is disabled and the statistics data is deleted.

**Configuration Examples** The following example enables the log statistics function:

```
Ruijie(config)# logging count
```

| Related Commands | Command                   | Description                                                                    |
|------------------|---------------------------|--------------------------------------------------------------------------------|
|                  | <b>show logging count</b> | Displays log information about modules of the system.                          |
|                  | <b>show logging</b>       | Displays basic configuration of log modules and log information in the buffer. |

**Platform**  
**Description** N/A

## 8.6 logging delay-send file

Use this command to set the name of the log file saved locally for delay sending. Use the **no** form of this command to restore the default setting.

**logging delay-send file flash:filename**

**no logging delay-send file**

**Parameter Description**

| Parameter             | Description                                                    |
|-----------------------|----------------------------------------------------------------|
| <b>flash:filename</b> | Sets the name of the log file saved locally for delay sending. |

**Defaults**

The default name format is as follows: file size\_device IP address\_index.txt. If you want to change the file name, the file sent to the remote server should be named as follows: prefix\_ file size\_device IP address\_index.txt; the file saved locally should be named as follows: prefix\_index.txt. The default prefix is syslog\_ftp\_server.

**Command Mode**

Global configuration mode

**Usage Guide**

The file name cannot contain special symbols including . \ : \* " < > and |.  
 For example, the file name is log\_server, file index 5, file size 1000B and device IP address 10.2.3.5. The log file sent to the remote server is named log\_server\_1000\_10.2.3.5\_5.txt and the log file saved locally is named log\_server\_5.txt.  
 If the device has an IPv6 address, the colon (:) in the IPv6 address is replaced by the hyphen (-). For example, the is log\_server, file index 6, file size 1000B and device IPv6 address 2001::1. The log file sent to the remote server is named log\_server\_1000\_2001-1\_6.txt and the log file saved locally is named log\_server\_6.txt.

**Configuration Examples**

The following example sets the name of the log file saved locally to log\_server.

```
Ruijie(config)# logging delay-send file flash:log_server
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description**

N/A

## 8.7 logging delay-send interval

Use this command to set the interval at which log sending is delayed. Use the **no** form of this command to restore the default setting.

- logging delay-send interval seconds**
- no logging delay-send interval**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
|-----------|-------------|

|                |                                                                                            |
|----------------|--------------------------------------------------------------------------------------------|
| <i>seconds</i> | Sets the interval at which log sending is delayed, in the range from 600 to 65535 seconds. |
|----------------|--------------------------------------------------------------------------------------------|

**Defaults** The default is 3600.

**Command Mode** Global configuration mode

**Usage Guide** N/A

**Configuration** The following example sets the the interval at which log sending is delayed to 600 seconds.

**Examples**

```
Ruijie(config)# logging delay-send interval 600
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A

## 8.8 logging delay-send server

Use this command to set the interval at which log sending is delayed. Use the **no** form of this command to restore the default setting.

**logging delay-send server** { [ **oob** ] *ip-address* | **ipv6** *ipv6-address* } [ **vrf** *vrf-name* ] [ **via** *mgmt-name* ] **mode** { **ftp** **user** *username* **password** [ **0** | **7** ] *password* | **tftp** }

**no logging delay-send server** [ **oob** ] *hostname* [ **vrf** *vrf-name* ] [ **via** *mgmt-name* ]

**Parameter Description**

| Parameter                       | Description                                                                                                          |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------|
| <b>oob</b>                      | Indicates that logs are sent to the server through the MGMT port. It is required that the device have the MGMT port. |
| <i>ip-address</i>               | Specifies the IP address of the server.                                                                              |
| <b>ipv6</b> <i>ipv6-address</i> | Specifies the IPv6 address of the server.                                                                            |
| <b>vrf</b> <i>vrf-name</i>      | Specifies the VRF instance connected to the server.                                                                  |
| <i>username</i>                 | Sets the FTP server username.                                                                                        |
| <i>password</i>                 | Sets the FTP server password.                                                                                        |
| <b>0</b>                        | (Optional) The password is displayed in plaintext.                                                                   |
| <b>7</b>                        | The password are encrypted.                                                                                          |

**Defaults** The default is 3600.

**Command Mode** Global configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example sets the the interval at which log sending is delayed to 600 seconds.

```
Ruijie(config)# logging delay-send interval 600
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A

## 8.9 logging delay-send terminal

Use this command to enable delay in sending logs to console and remote terminal. Use the **no** form of this command to restore the default setting.

- logging delay-send terminal**
- no logging delay-send terminal**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example enables delay in sending logs to console and remote terminal.

```
Ruijie(config)# logging delay-send terminal
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform**  
**Description** N/A

## 8.10 logging facility

Use this command to configure the device value of the log information in global configuration mode.

Use the **no** form of the command to restore the default setting.

**logging facility** *facility-type*

**no logging facility**

| Parameter          | Parameter            | Description                                                           |
|--------------------|----------------------|-----------------------------------------------------------------------|
| <b>Description</b> | <i>facility-type</i> | Syslog device value. For specific settings, refer to the usage guide. |

**Defaults** The default is 23 if the RFC5424 format is enabled (Local7, local use).  
The default is 16 if the RFC5424 format is disabled (Local0, local use).

**Command Mode** Global configuration mode

**Usage Guide** The following table (Table-2) is the possible device values of Syslog:

| Numerical Code | Facility                                 |
|----------------|------------------------------------------|
| 0 (kern)       | Kernel messages                          |
| 1 (user)       | User-level messages                      |
| 2 (mail)       | Mail system                              |
| 3 (daemon)     | System daemons                           |
| 4 (auth1)      | security/authorization messages          |
| 5 (syslog)     | Messages generated internally by syslogd |
| 6 (lpr)        | Line printer subsystem                   |
| 7 (news)       | USENET news                              |
| 8 (uucp)       | Unix-to-Unix copy system                 |
| 9 (clock1)     | Clock daemon                             |
| 10 (auth2)     | security/authorization messages          |
| 11 (ftp)       | FTP daemon                               |
| 12 (ntp)       | NTP subsystem                            |
| 13 (logaudit)  | log audit                                |
| 14 (logalert)  | log alert                                |
| 15 (clock2)    | clock daemon                             |
| 16 (local0)    | Local use                                |



|             |           |
|-------------|-----------|
| 17 (local1) | Local use |
| 18 (local2) | Local use |
| 19 (local3) | Local use |
| 20 (local4) | Local use |
| 21 (local5) | Local use |
| 22 (local6) | Local use |
| 23 (local7) | Local use |

The default device value of RGOS is 23 (local 7).

**Configuration** The following example sets the device value of **Syslog** as **kernel**:

**Examples** Ruijie(config)# logging facility kern

| Related Commands | Command                | Description                                                                |
|------------------|------------------------|----------------------------------------------------------------------------|
|                  | <b>logging console</b> | Sets the severity of logs that are allowed to be displayed on the console. |

**Platform Description** N/A

## 8.11 logging file

Use this command to save log messages in the log file, which can be saved in hardware disk, expanded FLASH, USB or SD. Use the **no** form of this command to restore the default setting, **logging file { sata0:filename | flash:filename | flash2:filename | usb0:filename | usb1:filename | sd0:filename } [ max-file-size ] [ level ]**  
**no logging file**


| Parameter Description | Parameter            | Description                                                                                                                               |
|-----------------------|----------------------|-------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <b>sata0</b>         | Saves the log file in hardware disk.                                                                                                      |
|                       | <b>flash</b>         | Saves the log file in expanded FLASH.                                                                                                     |
|                       | <b>flash2</b>        | Saves the log file in expanded FLASH2.                                                                                                    |
|                       | <b>usb0</b>          | Saves the log file in USB0. This parameter is supported by the device with one USB connector and the USB extension device.                |
|                       | <b>usb1</b>          | Saves the log file in USB1, This parameter is supported by the device with two USB connectors and the USB extension device.               |
|                       | <b>sd0</b>           | Saves the log file in the SD card. This parameter is supported by the device with the SD card interface and the SD card extension device. |
|                       | <i>filename</i>      | Sets the file name. The file type is omitted, which is fixed as txt.                                                                      |
|                       | <i>max-file-size</i> | Sets the maximum file size, in the range from 128K to 6M bytes, The default is 128K,                                                      |

|              |                                                                                                                                                                 |
|--------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>level</i> | Sets the level of the log message saved in the log file, which can be either the level name or the level number. The default is 6. See Usage Guide for details. |
|--------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|

**Defaults** Log messages are not saved in expanded FLASH by default.

**Command Mode** Global configuration mode

**Usage Guide** You can save log messages in expanded FLASH if you don't want to transmit log messages on the network or there is no syslog server, The log file cannot be configured with the suffix, which is fixed as txt.

 If there is no expanded FLASH, the **logging file flash** command is hidden automatically and cannot be configured. If no FLASH2 is available, the **logging file flash** command is hidden automatically and cannot be configured. If FLASH2 is available, the log file is saved in FLASH2 after the **logging file flash** command is configured.

| Keyword       | Level | Description                                     |
|---------------|-------|-------------------------------------------------|
| Emergencies   | 0     | Emergency case. The system fails to run.        |
| Alerts        | 1     | Problem that call for immediate solution.       |
| Critical      | 2     | Critical message.                               |
| Errors        | 3     | Error message.                                  |
| warnings      | 4     | Alarm message.                                  |
| Notifications | 5     | message that is normal but calls for attention. |
| informational | 6     | Descriptive message.                            |
| Debugging     | 7     | Debugging message                               |

**Configuration Examples** The following example saves the log message in expanded FLASH and sets file name, file size and log level to syslog.txt, 128K and 6 respectively.

```
Ruijie(config)# logging file flash:syslog
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 8.12 logging file numbers

Use this command to set the number of log files written into FLASH. Use the **no** form of this command to restore the default setting.

**logging file numbers** *numbers*

**no logging file numbers**

| Parameter Description | Parameter      | Description                                                                 |
|-----------------------|----------------|-----------------------------------------------------------------------------|
|                       | <i>numbers</i> | Sets the number of log files written into FLASH, in the range from 2 to 16. |

**Defaults** The default is 16.

**Command Mode** Global configuration mode

**Usage Guide** The system does not delete previously generated log files even if you change this configuration, Therefore, you need to delete the log files manually to save FLASH size (you can send log files to the server through TFTP before that). For example, 16 log files are generated by default before you want to change the number to 2. New logs are overwritten constantly in log files indexed 0 to 1. However, log files indexed from 2 to 16 remain. You can delete these log files manually as needed.

**Configuration Examples** The following example sets the number of log files written into FLASH to 8.

```
Ruijie(config)# logging file numbers 8
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 8.13 logging filter direction

Use this command to filter the log messages destined to a certain direction. Use the **no** form of this command to restore the default setting.

**logging filter direction** { **all** | **buffer** | **file** | **server** | **terminal** }

**no logging filter direction** { **all** | **buffer** | **file** | **server** | **terminal** }

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|-----------------------|-----------|-------------|

|                 |                                                                                                                                    |
|-----------------|------------------------------------------------------------------------------------------------------------------------------------|
| <b>all</b>      | Log messages destined to all directions are filtered, including console, VTY terminal, log buffer, log file and log server.        |
| <b>buffer</b>   | Log messages destined to the log buffer are filtered, including log messages displayed by running the <b>show logging</b> command. |
| <b>file</b>     | Log messages destined to the log file are filtered.                                                                                |
| <b>server</b>   | Log messages destined to the log server are filtered.                                                                              |
| <b>terminal</b> | Log messages destined to the console and the VTY terminal (including Telnet and SSH).                                              |

**Defaults** Log messages destined to all directions are filtered by default.

**Command Mode** Global configuration mode

**Usage Guide** In general, log messages destined to all directions are filtered, including console, VTY terminal, log buffer, log file and log server. If you want to filter log messages destined to a certain direction, the terminal for instance, configure the **terminal** parameter.

**Configuration Examples** The following example filters log messages destined to the terminal (including the console and the VTY terminal).

```
Ruijie(config)# logging filter direction terminal
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A

## 8.14 logging filter rule

Use this command to configure the filter rule of the log message,

```
logging filter rule { exact-match module module-name mnemonic mnemonic-name level level | single-match [ level level | mnemonic mnemonic-name | module module-name ] }
```

Use this command to delete the “exact-match” filter rule.

```
no logging filter rule exact-match [ module module-name mnemonic mnemonic-name level level ]
```

Use this command to delete the “single-match” filter rule.

```
no logging filter rule single-match [ level level | mnemonic mnemonic-name | module module-name ]
```

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
|-----------|-------------|

|                                      |                                                                          |
|--------------------------------------|--------------------------------------------------------------------------|
| <b>exact-match</b>                   | Exact-match filter rule. Fill in all the following three parameters.     |
| <b>single-match</b>                  | Single-match filter rule. Fill in one of the following three parameters. |
| <b>module</b> <i>module-name</i>     | Module name.                                                             |
| <b>mnemonic</b> <i>mnemonic-name</i> | Mnemonic name.                                                           |
| <b>level</b> <i>level</i>            | Log level,                                                               |

**Defaults** No filter rule is configured by default,

**Command** Global configuration mode

**Mode**

**Usage Guide** If you want to filter a specific log message, use the “exact-match” filter rule and fill in all three parameters, namely, module name, mnemonic name and log level.  
If you want to filter a specific kind of log messages, use the “single-match” filter rule and fill in one of three parameters, namely, module name, mnemonic name and log level.  
When configured with the same module name, mnemonic name or log level, the “single-match” filter rule has a higher priority than the “exact-match” filter rule,

**Configuration Examples** The following example configures the “exact-match” filter rule with parameters of module name LOGIN, log level 5 and mnemonic name LOGOUT.

```
Ruijie(config)# logging filter rule exact-match module LOGIN mnemonic
LOGOUT level 5
```

The following example configures the “single-match” filter rule with the parameter of module name SYS.

```
Ruijie(config)# logging filter rule single-match module SYS
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 8.15 logging filter type

Use this command to configure the filter type of log messages. Use the **no** form of this command to restore the default setting.

**logging filter type { contains-only | filter-only }**

**no logging filter type**

**Parameter Description**

| Parameter            | Description                                                            |
|----------------------|------------------------------------------------------------------------|
| <b>contains-only</b> | The log message containing the key word of the filter rule is printed. |


|                    |                                                                         |
|--------------------|-------------------------------------------------------------------------|
| <b>filter-only</b> | The log message containing the key word of the filter rule is filtered. |
|--------------------|-------------------------------------------------------------------------|


**Defaults** The default filter type is filter-only.

**Command Mode** Global configuration mode

**Usage Guide**

1. When too many log messages are printed, the terminal screen keeps being refreshed. If you are not concerned with these log messages, use the “filter-only” filter type to filter the log messages,
2. If you are concerned with certain log messages, use the “contains-only” filter type to print log messages containing the key word of the filter rule, so as to monitor whether certain events happen.

 In real operation, the contains-only and the filter-only filter types cannot be configured at the same time.

 If you configure the filter direction and the filter type without configuring the filter rule, the log messages are not filtered.

**Configuration** The following example sets the filter type to contains-only.

**Examples** Ruijie(config)# logging filter type contains-only

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A

## 8.16 logging flash flush

Use this command to write log messages in the system buffer into the flash file immediately.

**logging flash flush**


**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** In general, the log messages are cached in the log buffer. Only when the buffer is full or the timer expires are log messages written into the flash file. This command is used to write log messages in the system buffer into the flash file immediately.

 The **logging flash flush** command takes effect only once for each configuration. The log messages cached in the buffer are written into the flash file immediately after configuration.

**Configuration** The following example writes log messages in the system buffer into the flash file immediately.

**Examples** Ruijie(config)# logging flash flush

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 8.17 logging flash interval

Use this command to set the interval to write log messages into the flash file, Use the **no** form of this command to restore the default setting.

**logging flash interval** *seconds*  
**no logging flash interval**


**Parameter Description**

| Parameter                      | Description                                                                                                  |
|--------------------------------|--------------------------------------------------------------------------------------------------------------|
| <b>interval</b> <i>seconds</i> | The interval to write log messages into the flash file, in the range from 1 to 57840 in the unit of seconds. |

**Defaults** The default is 3600.

**Command Mode** Global configuration mode

**Usage Guide** This command is used to set the interval to write log messages into the flash file. The timer starts after configuration, If you want to restore the interval to 3600 seconds, use the **no logging flash interval** command.

 To avoid writing log messages into the flash file too frequently, it is not recommended to set a short interval.

**Configuration** The following example sets the interval to write log messages into the flash file to 300 seconds.

**Examples** Ruijie(config)# logging flash interval 300

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 8.18 logging life-time

Use this command to configure the preservation duration of logs in expanded FLASH. Use the **no** form of this command to restore the default setting.

**logging life-time level** *level days*


**no logging life-time level** *level*

| Parameter Description | Parameter    | Description                             |
|-----------------------|--------------|-----------------------------------------|
|                       | <i>level</i> |                                         |
| <i>days</i>           |              | Sets the preservation duration of logs. |

**Defaults** No preservation duration is set by default.

**Command Mode** Global configuration mode

**Usage Guide** Due to difference in expanded FLASH size and log level, logs with different levels can be configured with different preservation durations.

 Once log preservation based on time is enabled, log preservation based on file size is disabled automatically. The log files are stored under the `syslog/` directory of the expanded FLASH,

**Configuration Examples** The following example sets the preservation duration of logs whose level is 6 to 10 days.

```
Ruijie(config)# logging life-time level 6 10
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**



## 8.19 logging monitor

Use this command to set the severity of logs that are allowed to be displayed on the VTY window (telnet window, SSH window, etc.) in global configuration mode. Use the **no** form of this command to disable this function.

**logging monitor** [ *level* ]

**no logging monitor**

| Parameter   | Parameter    | Description                                                                                                                     |
|-------------|--------------|---------------------------------------------------------------------------------------------------------------------------------|
| Description | <i>level</i> | Severity of the log message. The name of the severity or the numeral can be used. For the details of log severity, see Table-1. |

**Defaults** The default is debugging (7).

**Command Mode** Global configuration mode

**Usage Guide** To print log information on the VTY window, run the **terminal monitor** command in privileged EXEC mode. The level of logs to be displayed is defined by **logging monitor**.  
The log level defined with "Logging monitor" is for all VTY windows.

**Configuration Examples** The following example sets the severity of log that is allowed to be printed on the VTY window as 6:

```
Ruijie(config)# logging monitor informational
```

| Related Commands | Command             | Description                                                                       |
|------------------|---------------------|-----------------------------------------------------------------------------------|
|                  | <b>logging on</b>   | Turns on the log switch.                                                          |
|                  | <b>show logging</b> | Displays the log messages and related log configuration parameters in the buffer. |

**Platform** N/A

**Description**

## 8.20 logging on

Use this command globally to allow logs to be displayed on different devices. Use the **no** form of this command to disable this function.

**logging on**

**no logging on**

| Parameter | Description |
|-----------|-------------|
|-----------|-------------|

|                              |     |     |
|------------------------------|-----|-----|
| <b>Parameter Description</b> | N/A | N/A |
|------------------------------|-----|-----|

**Defaults** Logs are allowed to be displayed on different devices.

**Command Mode** Global configuration mode

**Usage Guide** Log information can not only be shown in the Console window and VTY window, but also be recorded in different equipments such as the memory buffer, the expanded FLASH and the Syslog Server. This command is the total log switch. If this switch is turned off, no log will be displayed or recorded unless the severity level is smaller than 1.

**Configuration Examples** The following example disables the log switch on the device.

```
Ruijie(config)# no logging on
```

| Related Commands | Command                    | Description                                                                      |
|------------------|----------------------------|----------------------------------------------------------------------------------|
|                  | <b>logging buffered</b>    | Records the logs to a memory buffer.                                             |
|                  | <b>logging server</b>      | Sends logs to the Syslog server.                                                 |
|                  | <b>logging file flash:</b> | Records logs on the expanded FLASH.                                              |
|                  | <b>logging console</b>     | Allows the log level to be displayed on the console.                             |
|                  | <b>logging monitor</b>     | Allows the log level to be displayed on the VTY window (such as telnet window) . |
|                  | <b>logging trap</b>        | Sets the log level to be sent to the Syslog server.                              |

**Platform Description** N/A

## 8.21 logging policy

Use this command to configure the severity ranking policy. Use the **no** form of this command to remove one policy, Use the **no logging policy** command to remove all policies.

**logging policy module** *module-name* [ **not-lesser-than** ] *level* **direction** { **all** | **server** | **file** | **console** | **monitor** | **buffer** }

**no logging policy module** *module-name* [ **not-lesser-than** ] *level* **direction** { **all** | **server** | **file** | **console** | **monitor** | **buffer** }

**no logging policy**

| Parameter Description | Parameter          | Description                                         |
|-----------------------|--------------------|-----------------------------------------------------|
|                       | <i>module-name</i> | The name of the module applying the ranking policy. |

|                        |                                                                                                                                                                                                                                                                                                                     |
|------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>not-lesser-than</b> | If this parameter is specified, only when the log's level is not lower than the configured level can the log be sent. Otherwise, the log is filtered.<br>If this parameter is not specified, only when the log's level is not higher than the configured level can the log be sent. Otherwise, the log is filtered. |
| <i>level</i>           | Severity level                                                                                                                                                                                                                                                                                                      |
| <b>all</b>             | Applies the ranking policy in all directions.                                                                                                                                                                                                                                                                       |
| <b>server</b>          | Applies the ranking policy to the direction toward the server.                                                                                                                                                                                                                                                      |
| <b>file</b>            | Applies the ranking policy to the direction toward the log file.                                                                                                                                                                                                                                                    |
| <b>console</b>         | Applies the ranking policy to the direction toward the console.                                                                                                                                                                                                                                                     |
| <b>monitor</b>         | Applies the ranking policy to the direction toward the remote server.                                                                                                                                                                                                                                               |
| <b>buffer</b>          | Applies the ranking policy to the direction toward the buffer.                                                                                                                                                                                                                                                      |

**Defaults** This function is disabled by default.

**Command** Global configuration mode

**Mode**

**Usage Guide** This command is used to send logs to different destinations based on module and severity.

**Configuration Examples** The following example sends logs of the SYS module leveled above 5 to the console and sends logs of the SYS module leveled below 3 to the buffer.

```
Ruijie(config)# logging policy module SYS not-lesser-than 5 direction
console

Ruijie(config)# logging policy module SYS 3 direction buffer
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform**

**Description**

N/A

## 8.22 logging rate-limit

Use this command to enable log rate limit function to limit the output logs in a second in the global configuration mode. Use the **no** form of this command to disable this function.

**logging rate-limit** { *number* | **all** *number* | **console** { *number* | **all** *number* } } [ **except** *severity* ]

**no logging rate-limit**

| Parameter | Description |
|-----------|-------------|
|-----------|-------------|

**Parameter Description**

|                 |                                                                                                                                             |
|-----------------|---------------------------------------------------------------------------------------------------------------------------------------------|
| <i>number</i>   | The number of logs that can be processed in a second in the range from 1 to 10000.                                                          |
| <b>all</b>      | Sets rate limit to all the logs with severity level 0 to 7.                                                                                 |
| <b>console</b>  | Sets the amount of logs that can be shown in the console in a second.                                                                       |
| <b>except</b>   | By default, the severity level is error (3). The rate of the log whose severity level is less than or equal to error (3) is not controlled. |
| <i>severity</i> | Log severity level in the range from 0 to 7. The lower the level is, the higher the severity is.                                            |

**Defaults** The log rate limit function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** Use this command to control the syslog output to prevent the massive log output.

**Configuration Examples** The following example sets the number of the logs (including debug) that can be processed in a second as 10. However, the logs with warning or higher severity level are not controlled:

```
Ruijie(config)#logging rate-limit all 10 except warnings
```

**Related Commands**

| Command                   | Description                                                                    |
|---------------------------|--------------------------------------------------------------------------------|
| <b>show logging count</b> | Displays log information about modules of the system.                          |
| <b>show logging</b>       | Displays basic configuration of log modules and log information in the buffer. |

**Platform Description** N/A

## 8.23 logging rd on

Use this command in global configuration mode on the host to enable the log re-direction function and allow re-directing logs on slave or backup devices to the host in the VSU environment. Use **no** form of this command to disable this function.

**logging rd on**  
**no logging rd on**

| Parameter | Description |
|-----------|-------------|
|-----------|-------------|

|                              |     |     |
|------------------------------|-----|-----|
| <b>Parameter Description</b> | N/A | N/A |
|------------------------------|-----|-----|

**Defaults** The log re-direction function is enabled by default.

**Command Mode** Global configuration mode

**Usage Guide** The log information on slave or back devices not only can be shown on the Console window of slave or backup devices, but also can be re-directed to the host and exported to the Console and VTY windows of the host, and recorded in cache, expanded FLASH and Syslog Server of the host.

**Configuration Examples** The following example enables the log re-direction function on a device:

```
Ruijie(config)#logging rd on
```

| Related Commands | Command                   | Description                                                                    |
|------------------|---------------------------|--------------------------------------------------------------------------------|
|                  | <b>show logging count</b> | Displays log information about modules of the system.                          |
|                  | <b>show logging</b>       | Displays basic configuration of log modules and log information in the buffer. |

**Platform Description** N/A

## 8.24 logging rd rate-limit

Use this command in global configuration mode on the host to enable the log re-direction rate limiting function to limit the number of logs that can be re-directed from a slave or backup device to the host each second in the VSU environment. Use the **no** form of this command to disable this function.

**logging rd rate-limit** *number* [ **except** [ *severity* ] ]

**no logging rd rate-limit**

| Parameter Description | Parameter       | Description                                                                                                                                                     |
|-----------------------|-----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <i>number</i>   | Log information that can be re-directed each second, ranging from 1 to 10,000 logs                                                                              |
|                       | <b>except</b>   | Log information on or lower than the severity level will not be limited; error (3) by default, log information on or lower than the error level is not limited. |
|                       | <i>severity</i> | Log information severity level; lower the level is, higher the severity is, ranging from 0 to 7                                                                 |

**Defaults** The maximum number of logs that can be re-directed each second is 200 by default.

- Command Mode** Global configuration mode
- Usage Guide** This command is used to control the output of log information by system re-direction. You can use this command to prevent a slave or backup device from re-directing a large number of logs to the host.

- Configuration Examples** The following example sets the maximum number of logs (including debug) that can be re-directed from a slave device to the host each second at 10, excepting logs on and above the warning severity level:

```
Ruijie(config)#logging rd rate-limit 10 except warnings
```

| Related Commands | Command                   | Description                                                                    |
|------------------|---------------------------|--------------------------------------------------------------------------------|
|                  | <b>show logging count</b> | Displays log information about modules of the system.                          |
|                  | <b>show logging</b>       | Displays basic configuration of log modules and log information in the buffer. |

- Platform Description** N/A

## 8.25 logging server

Use this command to send the logs to the specified Syslog Sever in global configuration mode. Use the **no** form of this command to remove the setting. Use the **default** form of this command to restore the default setting.

**logging server** [ **oob** ] { *ip-address* | **ipv6** *ipv6-address* } [ **udp-port** *port* ] [ **vrf** *vrf-name* ]

**no logging server** [ **oob** ] { *ip-address* [ **vrf** *vrf-name* ] | **ipv6** *ipv6-address* }

**no logging server** { *ip-address* [ **vrf** *vrf-name* ] | **ipv6** *ipv6-address* } **udp-port**

| Parameter Description | Parameter                   | Description                                                                                                              |
|-----------------------|-----------------------------|--------------------------------------------------------------------------------------------------------------------------|
|                       | <b>oob</b>                  | Specifies out-of-band communication for the logging server. (logs are sent through the MGMT port to the logging server.) |
|                       | <i>ip-address</i>           | IP address of the host that receives log information.                                                                    |
|                       | <i>vrf-name</i>             | Specifies the VRF instance (VPN device forwarding table) connecting to the log host.                                     |
|                       | <i>ipv6-address</i>         | Specifies IPV6 address for the host receiving the logs.                                                                  |
|                       | <b>udp-port</b> <i>port</i> | Specifies the port number for the specified host (The default port number is 514).                                       |

- Defaults** No log is sent to any syslog server by default.

|                     |                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Command Mode</b> | Global configuration mode                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Usage Guide</b>  | <p>This command specifies a Syslog server to receive the logs of the device. Users are allowed to configure up to 5 Syslog Servers. The log information will be sent to all the configured Syslog Servers at the same time.</p> <p>The <b>via</b> parameter is available only after the <b>oob</b> parameter is used. The <b>/vrf</b> parameter cannot be used at the same time.</p> <p>The IPv6 server does not support VRF and oob.</p> |

**Configuration** The following example specifies a syslog server of the address 202.101.11.1:

**Examples**

```
Ruijie(config)# logging server 202.101.11.1
```

The following example specifies an ipv6 address as AAAA:BBBB:FFFF:

```
Ruijie(config)# logging server ipv6 AAAA:BBBB:FFFF
```

**Related Commands**

| Command             | Description                                                                   |
|---------------------|-------------------------------------------------------------------------------|
| <b>logging on</b>   | Turns on the log switch.                                                      |
| <b>show logging</b> | Displays log messages and related log configuration parameters in the buffer. |
| <b>logging trap</b> | Sets the level of logs allowed to be sent to Syslog server.                   |

**Platform**

N/A

**Description**

## 8.26 logging source interface

Use this command to configure the source interface of logs in global configuration mode. Use the **no** form of this command to restore the default setting.

**logging source [ interface ] interface-type interface-number**

**no logging source [ interface ]**

**Parameter Description**

| Parameter               | Description       |
|-------------------------|-------------------|
| <i>interface-type</i>   | Interface type.   |
| <i>interface-number</i> | Interface number. |

**Defaults**

No source interface is configured by default.

**Command Mode**

Global configuration mode

**Usage Guide**

By default, the source address of the log messages sent to the syslog server is the address of the sending interface. For easy tracing and management, this command can be used to fix the source

address of all log messages as an interface address, so that the administrator can identify which device is sending the message through the unique addresses. If the source interface is not configured on the device, or no IP address is configured for the source interface, the source address of the log messages is the address of the sending interface.

**Configuration** The following example specifies loopback 0 as the source address of the syslog messages:

**Examples**

```
Ruijie(config)# logging source interface loopback 0
```

**Related  
Commands**

| Command        | Description                      |
|----------------|----------------------------------|
| logging server | Sends logs to the Syslog server. |

**Platform  
Description**

N/A

## 8.27 logging source ip | ipv6

Use this command to configure the source IP address of logs in global configuration mode. Use the **no** form of this command to restore the default setting.

**logging source** {ip *ip-address* | ipv6 *ipv6-address*}

**no logging source** { ip | ipv6 }

**Parameter  
Description**

| Parameter           | Description                                                            |
|---------------------|------------------------------------------------------------------------|
| <i>ip-address</i>   | Specifies the source IPV4 address sending the logs to IPV4 log server. |
| <i>ipv6-address</i> | Specifies the source IPV6 address sending the logs to IPV6 log server. |

**Defaults**

No source address is configured by default.

**Command  
Mode**

Global configuration mode

**Usage Guide**

By default, the source address of the log messages sent to the syslog server is the address of the sending interface. For easy tracing and management, this command can be used to fix the source address of all log messages as an address, so that the administrator can identify which device is sending the message through the unique addresses. If this IP address is not configured on the device, the source address of the log messages is the address of the sending interface.

**Configuration** The following example specifies 192.168.1.1 as the source address of the syslog messages:

**Examples**

```
Ruijie(config)# logging source ip 192.168.1.1
```



| Related<br>Commands | Command | Description                 |
|---------------------|---------|-----------------------------|
|                     |         | <code>logging server</code> |

**Platform  
Description** N/A

## 8.28 logging statistic enable

Use this command to enable logging periodically. Use **no** form of this command to restore the default setting.

**logging statistic enable**

**no logging statistic enable**

| Parameter<br>Description | Parameter | Description |
|--------------------------|-----------|-------------|
|                          |           | N/A         |

**Defaults** This function is disabled by default.

**Command  
Mode** Global configuration mode

**Usage Guide** This command is used to send performance statistics at a certain interval for the server to monitor the system performance.

**Configuration** The following example enables logging periodically.

**Examples**

```
Ruijie(config)# logging statistic enable
```

| Related<br>Commands | Command | Description |
|---------------------|---------|-------------|
|                     |         | N/A         |

**Platform  
Description** N/A

## 8.29 logging statistic interval

Use this command to configure the interval at which logs are sent. Use the **no** form of this command to restore the default setting.

**logging statistic mnemonic *mnemonic interval minutes***

**no logging statistic mnemonic *mnemonic***

| Parameter Description | Parameter       | Description                                                       |
|-----------------------|-----------------|-------------------------------------------------------------------|
|                       | <i>mnemonic</i> | Sets the mnemonics to identify the object.                        |
|                       | <i>minutes</i>  | Sets the interval at which logs are sent, in the unit of minutes. |

**Defaults** The default is 15.

**Command Mode** Global configuration mode

**Usage Guide** The available settings include 0, 15, 30, 60 and 120. 0 indicates this function is disabled.

**Configuration Examples** The following example set the interval at which logs are sent to 30 minutes.

```
Ruijie(config)# logging statistic mnemonic TUNNEL_STAT interval 30
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 8.30 logging statistic terminal

Use this command to enable logs to be sent to the console and the remote terminal periodically. Use the **no** form of this command to restore the default setting.

**logging statistic terminal**  
**no logging statistic terminal**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example enable logs to be sent to the console and the remote terminal.

```
Ruijie(config)# logging statistic terminal
```

| <b>Related Commands</b> | Command | Description |
|-------------------------|---------|-------------|
|                         | N/A     | N/A         |

**Platform Description** N/A

### 8.31 logging synchronous

Use this command to enable synchronization function between user input and log output in line configuration mode to prevent interruption when the user is keying in characters. Use the **no** form of this command to restore the default setting.

**logging synchronous**

**no logging synchronous**

| <b>Parameter Description</b> | Parameter | Description |
|------------------------------|-----------|-------------|
|                              | N/A       | N/A         |

**Defaults** The synchronization function between user input and log output is disabled by default.

**Command Mode** Line configuration mode

**Usage Guide** This command enables synchronization function between user input and log output, preventing the user from interrupting when keying in the characters.  
Print UP-DOWN logs on the port when keying in the command, the input command will be output again:

```
Ruijie# configure terminal
Oct 9 23:40:55 %LINK-5-CHANGED: Interface GigabitEthernet 0/1, changed state to down
Oct 9 23:40:55 %LINEPROTO-5-UPDOWN: Line protocol on Interface GigabitEthernet 0/1, changed state to DOWN
Ruijie# configure terminal//---the input command by the user is output again rather than being intererupted.
```

**Configuration Examples**  
Ruijie(config)#**line console 0**  
Ruijie(config-line)#logging synchronous

| <b>Related Commands</b> | Command                    | Description                 |
|-------------------------|----------------------------|-----------------------------|
|                         | <b>show running-config</b> | Displays the configuration. |

**Platform**  
**Description** N/A

## 8.32 logging trap

Use this command to set the severity of logs that are allowed to be sent to the syslog server in global configuration mode. Use the **no** form of this command to prohibit sending log messages to the Syslog server.

**logging trap** [*level*]

**no logging trap**

| Parameter          | Parameter    | Description                                                                                                                     |
|--------------------|--------------|---------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b> | <i>level</i> | Severity of the log message. The name of the severity or the numeral can be used. For the details of log severity, see Table 1. |

**Defaults** The default is informational(6)

**Command Mode** Global configuration mode

**Usage Guide** To send logs to the Syslog Server, run the **logging** command in global configuration mode to configure the **Syslog Server**. Then, run the **logging trap** command to specify the severity level of logs to be sent.  
The **show logging** command displays the configured related parameters and statistics of the log.

**Configuration Examples** The following example enables logs at severity 6 to be sent to the Syslog Server with the address of 202.101.11.22:

```
Ruijie(config)# logging 202.101.11.22
Ruijie(config)# logging trap informational
```

| Related Commands | Command             | Description                                                                       |
|------------------|---------------------|-----------------------------------------------------------------------------------|
|                  | <b>logging on</b>   | Turns on the log switch.                                                          |
|                  | <b>logging</b>      | Sends logs to the Syslog server.                                                  |
|                  | <b>show logging</b> | Displays the log messages and related log configuration parameters in the buffer. |

**Platform**  
**Description** N/A

## 8.33 logging userinfo

Use this command to enable the logging function to record user log/exit. Use the **no** form of this command to restore the default setting.

**logging userinfo**

**no logging userinfo**

### Parameter Description

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

### Defaults

No log message is printed recording user log/exit by default.

### Command Mode

Global configuration mode

### Usage Guide

This command is used to print the log message to remind the administrator of user login. The log message is in the format as follows:

```
Mar 22 14:05:45 %LOGIN-5-LOGIN_SUCCESS: User login from vty0
(192.168.23.68) OK.
```

### Configuration

The following example enables the logging function to record user log/exit.

### Examples

```
Ruijie(config)# logging user-info
```

### Related Commands

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

### Platform

N/A

### Description

## 8.34 logging userinfo command-log

Use this command to enable the logging function to record user operation. Use the **no** form of this command to restore the default setting.

**logging userinfo command-log**

**no logging userinfo command-log**

### Parameter Description

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

### Defaults

No log message is printed recording user operation by default.

**Command Mode** Global configuration mode

**Usage Guide** This command is used to print the log message to remind the administrator of configuration change. The log message is in the format as follows:

```
Mar 22 14:10:40 %CLI-5-EXEC_CMD: Configured from vty0 (192.168.23.68)
command-log: logging server 192.168.23.68.
```

**Configuration** The following example enables the logging function to record user operation.

**Examples** Ruijie(config)# logging user-info command-log

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

### 8.35 service log-format rfc5424

Use this command to enable the RFC5424 format. Use the **no** form of this command to restore the default setting.

**service log-format rfc5424**

**no service log-format rfc5424**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** The RFC3164 format is used by default.

**Command Mode** Global configuration mode

**Usage Guide** After the RFC5424 format is enabled, the service sequence-numbers, service sysname, **service timestamps**, **service private-syslog** and **service standard-syslog** commands become invalid and hidden.  
 After switching back to the RFC3164 format, the **logging delay-send**, **logging policy** and **logging statistic** commands become invalid and hidden.  
 After switching the log format, the results of running the **show logging** and **show logging config** commands change,

**Configuration** The following example enables the RFC5424 format.

**Examples** `Ruijie(config)# service log-format rfc5424`

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

### 8.36 service private-syslog

Use this command to set the syslog format to the private syslog format. Use the **no** form of this command to restore the default setting.

**service private-syslog**  
**no service private-syslog**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** The syslog is displayed in the default format.

**Command Mode** Global configuration mode

**Usage Guide** By default, the syslog is displayed in the format as follows:  
 \*timestamp: %facility-severity-mnemonic: description  
 Here is an example:  
`*May 31 23:25:21: %SYS-5-CONFIG_I: Configured from console by console`  
 With this function enabled, the syslog is displayed in the format as follows:  
 timestamp facility-severity-mnemonic: description  
 Here is an example:  
`May 31 23:31:28 SYS-5-CONFIG_I: Configured from console by console`  
 The difference between the private syslog format and the default syslog format lies in the following marks:  
 The private syslog does not have "\*" before the timestamp, ":" after the timestamp and "%" before the identifying string.

**Configuration** The following example sets the private syslog format.

**Examples** `Ruijie(config)# service private-syslog`

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform**

N/A

**Description**

## 8.37 service sequence-numbers

Use this command to attach serial numbers into the logs in global configuration mode. Use the **no** form of this command to restore the default setting.

**service sequence-numbers**

**no service sequence-numbers**

**Parameter  
Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults**

No serial number is contained in the logs by default.

**Command  
Mode**

Global configuration mode

**Usage Guide**

In addition to the timestamp, you can add serial numbers to the logs, numbering from 1. Then, it is clearly known whether the logs are lost or not and their sequence.

**Configuration**

The following example adds serial numbers to the logs.

**Examples**

```
Ruijie(config)# service sequence-numbers
```

**Related  
Commands**

| Command                   | Description                      |
|---------------------------|----------------------------------|
| <b>logging on</b>         | Turns on the log switch.         |
| <b>service timestamps</b> | Attaches timestamps to the logs. |

**Platform**

N/A

**Description**

## 8.38 service standard-syslog

Use this command to set the syslog format to the standard syslog format defined in RFC3164. Use the **no** form of this command to restore the default setting.

**service standard-syslog**

**no service standard-syslog**



| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** The syslog is displayed in the default format.

**Command Mode** Global configuration mode

**Usage Guide** By default, the syslog is displayed in the format as follows:

\*timestamp: %facility-severity-mnemonic: description

Here is an example:

```
*May 31 23:25:21: %SYS-5-CONFIG_I: Configured from console by console
```

With this function enabled, the syslog is displayed in the format as follows:

timestamp %facility-severity-mnemonic: description

Here is an example:

```
May 31 23:31:28 %SYS-5-CONFIG_I: Configured from console by console
```

The difference between the standard syslog format and the default syslog format lies in the following marks:

The standard syslog does not have "\*" before the timestamp and ":" after the timestamp.

**Configuration** The following example sets the standard syslog format.

**Examples** Ruijie(config)# service standard-syslog

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 8.39 service sysname

Use this command to attach system name to logs in global configuration mode. Use the **no** form of this command to restore the default setting.

**service sysname**

**no service sysname**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** No system name is attached to logs by default.

**Command Mode** Global configuration mode

**Usage Guide** This command allows you to decide whether to add system name in the log information.

**Configuration** The following example adds a system name in the log information:

**Examples**

```
Mar 22 15:28:02 %SYS-5-CONFIG: Configured from console by console
Ruijie #config terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie (config)#service sysname
Ruijie (config)#end
Ruijie #
Mar 22 15:35:57 S3250 %SYS-5-CONFIG: Configured from console by console
```

**Related Commands**

| Command             | Function                                                                       |
|---------------------|--------------------------------------------------------------------------------|
| <b>show logging</b> | Displays basic configuration of log modules and log information in the buffer. |

**Platform Description** N/A

## 8.40 service timestamps

Use this command to attach timestamp into logs in global configuration mode. Use the **no** form of this command to remove the timestamp from the logs. Use the **default** form of this command to restore the default setting.

**service timestamps** [ *message-type* [ **uptime** | **datetime** [ **msec** | **year** ] ] ]

**no service timestamps** [ *message-type* ]

**default service timestamps** [ *message-type* ]

**Parameter Description**

| Parameter           | Description                                                                                                                                                                                         |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>message-type</i> | The log type, including <b>Log</b> and <b>Debug</b> . The <b>log</b> type indicates the log information with severity levels of 0 to 6. The <b>debug</b> type indicates that with severity level 7. |
| <b>uptime</b>       | Device start time in the format of *Day*Hour*Minute*Second, for example, 07:00:10:41.                                                                                                               |
| <b>datetime</b>     | Current time of the device in the format of Month*Date*Hour*Minute*Second, for example, Jul 27 16:53:07.                                                                                            |

|             |                                                                                                                        |
|-------------|------------------------------------------------------------------------------------------------------------------------|
| <b>msec</b> | Current time of the device in the format of Month*Date*Hour*Minute*Second*milisecond, for example, Jul 27 16:53:07.299 |
| <b>year</b> | Current time of the device in the format of Year*Month*Date*Hour*Minute*Second, for example, 2007 Jul 27 16:53:07      |

**Defaults** The time stamp in the log information is the current time of the device. If the device has no RTC, the time stamp is automatically set to the device start time.

**Command Mode** Global configuration mode

**Usage Guide** When the **uptime** option is used, the time format is the running period from the last start of the device to the present time, in seconds. When the **datetime** option is used, the time format is the date of the current device, in the format of YY-MM-DD, HH:MM:SS.

**Configuration Examples** The following example enables the timestamp for **log** and **debug** information, in format of Datetime, supporting millisecond display.

```
Ruijie(config)# service timestamps debug datetime msec
Ruijie(config)# service timestamps log datetime msec
Ruijie(config)# end
Ruijie(config)# Oct 8 23:04:58.301 %SYS-5-CONFIG I: configured from console by console
```

| Related Commands | Command                         | Description                     |
|------------------|---------------------------------|---------------------------------|
|                  | <b>logging on</b>               | Turns on the log switch.        |
|                  | <b>service sequence-numbers</b> | Enables serial numbers of logs. |

**Platform Description** N/A

## 8.41 show logging

Use this command to display configured parameters and statistics of logs and log messages in the memory buffer at privileged user layer. The log messages are sorted by the timestamp from before to now.

**show logging**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration Examples** The following command displays the result of the **show logging** command with RFC5424 format disabled.

```
Ruijie# show logging
Syslog logging: enabled
  Console logging: level debugging, 15495 messages logged
  Monitor logging: level debugging, 0 messages logged
  Buffer logging: level debugging, 15496 messages logged
  Standard format: false
  Timestamp debug messages: datetime
  Timestamp log messages: datetime
  Sequence-number log messages: enable
  Sysname log messages: enable
  Count log messages: enable
  Trap logging: level informational, 15242 message lines logged,0 fail
    logging to 202.101.11.22
    logging to 192.168.200.112
Log Buffer (Total 131072 Bytes): have written 1336,
015487: *Sep 19 02:46:13: Ruijie %LINK-3-UPDOWN: Interface FastEthernet
0/24, changed state to up.
015488: *Sep 19 02:46:13: Ruijie %LINEPROTO-5-UPDOWN: Line protocol on
Interface FastEthernet 0/24, changed state to up.
015489: *Sep 19 02:46:26: Ruijie %LINK-3-UPDOWN: Interface FastEthernet
0/24, changed state to down.
015490: *Sep 19 02:46:26: Ruijie %LINEPROTON/A5N/AUPDOWN: Line protocol
on Interface FastEthernet 0/24, changed state to down.
015491: *Sep 19 02:46:28: Ruijie %LINKN/A3N/AUPDOWN: Interface
FastEthernet 0/24, changed state to up.
015492: *Sep 19 02:46:28: Ruijie %LINEPROTO-5-UPDOWN: Line protocol on
Interface FastEthernet 0/24, changed state to up.
```

Log information description:

| Field           | Description                                              |
|-----------------|----------------------------------------------------------|
| Syslog logging  | Logging flag: enabled or disabled                        |
| Console logging | Level of the logs printed on the console, and statistics |

|                              |                                                                  |
|------------------------------|------------------------------------------------------------------|
| Monitor logging              | Level of the logs printed on the VTY window, and statistics      |
| Buffer logging               | Level of the logs recorded in the memory buffer, and statistics. |
| Standard format              | Standard log format.                                             |
| Timestamp debug messages     | Timestamp format of the Debug messages                           |
| Timestamp log messages       | Timestamp format of the Log messages                             |
| Sequence-number log messages | Serial number switch                                             |
| Sequence log messages        | Attaches system names to the logs.                               |
| Count log messages           | Log statistics function                                          |
| Trap logging                 | Level of the logs sent to the syslog server, and statistics      |
| Log Buffer                   | Log files recorded in the memory buffer                          |

The following example displays the result of the **show logging** command with RFC5424 format enabled.

```
Ruijie# show logging
Syslog logging: enabled
  Console logging: level debugging, 4740 messages logged
  Monitor logging: level debugging, 0 messages logged
  Buffer logging: level debugging, 4745 messages logged
  Statistic log messages: disable
  Statistic log messages to terminal: disable
  Delay-send file name:syslog_ftp_server, Current write index:3, Current
send index:3, Cycle:10 seconds
  Count log messages: enable
  Trap logging: level informational, 2641 message lines logged,4155 fail
logging to 192.168.23.89
logging to 2000::1
  Delay-send logging: 2641 message lines logged
logging to 192.168.23.89 by tftp
Log Buffer (Total 4096 Bytes): have written 4096, Overwritten 3292
<135>1 2013-07-24T12:19:33.130290Z ruijie - 7 - - Please config the IP
address for capwap.
<132>1 2013-07-24T12:20:02.80313Z ruijie CAPWAP 4 NO_IP_ADDR - No ip
address for capwap.
<135>1 2013-07-24T12:20:02.80343Z ruijie - 7 - - Please config the IP
address for capwap.
<132>1 2013-07-24T12:20:32.250265Z ruijie CAPWAP 4 NO_IP_ADDR - No ip
address for capwap.
```

```
<134>1 2013-07-24T12:29:33.410123Z ruijie SYS 6 SHELL_LOGIN [USER@4881
name="" type="" from="console"] user login success.
<134>1 2013-07-24T12:29:34.343763Z ruijie SYS 6 SHELL_CMD
[USER@4881 name=""] [CMD@4881 task="rl_con" cmd="enable"]
```

| Field                              | Description                                                                       |
|------------------------------------|-----------------------------------------------------------------------------------|
| Syslog logging                     | Logging flag: enabled or disabled                                                 |
| Console logging                    | Level of the logs printed on the console, and statistics                          |
| Monitor logging                    | Level of the logs printed on the VTY window, and statistics                       |
| Buffer logging                     | Level of the logs recorded in the memory buffer, and statistics.                  |
| Count log messages                 | Log statistics function                                                           |
| Statistic log messages             | Enables/disables log sending periodically                                         |
| Statistic log messages to terminal | Enables/ disables log sending to console and remote terminal                      |
| Delay-send file name               | Local filename of log delay-sending cache, index of write file and delay interval |
| Trap logging                       | Level of the logs sent to the syslog server and statistics                        |
| Delay-send logging                 | The server address, log sending mode and statistics                               |
| Log Buffer                         | Log files recorded in the memory buffer                                           |

**Related  
Commands**

| Command              | Function                               |
|----------------------|----------------------------------------|
| <b>logging on</b>    | Turns on the log switch.               |
| <b>clear logging</b> | Clears the log messages in the buffer. |

**Platform  
Description**

N/A

## 8.42 show logging config

Use this command to display log configuration and statistics.

**show logging config**

**Parameter  
Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults**

N/A

**Command  
Mode**

Privileged EXEC mode

**Usage Guide** N/A

**Configuration Examples** The following example displays the outcome of running the **show logging config** command with RFC5424 disabled.

```
Ruijie# show logging config
Syslog logging: enabled
  Console logging: level debugging, 15495 messages logged
  Monitor logging: level debugging, 0 messages logged
  Buffer logging: level debugging, 15496 messages logged
  Standard format: false
  Timestamp debug messages: datetime
  Timestamp log messages: datetime
  Sequence-number log messages: enable
  Sysname log messages: enable
  Count log messages: enable
  Trap logging: level informational, 15242 message lines logged, 0 fail
    logging to 202.101.11.22
    logging to 192.168.200.112
```

| Field                        | Description                                                                |
|------------------------------|----------------------------------------------------------------------------|
| Syslog logging               | Whether the logging function is enabled or disabled.                       |
| Console logging              | The level and statistics of the log message printed on the console.        |
| Monitor logging              | The level and statistics of the log message printed on the VTY window.     |
| Buffer logging               | The level and statistics of the log message recorded in the memory buffer. |
| Standard format              | Standard log format.                                                       |
| Timestamp debug messages     | Timestamp format of debugging message.                                     |
| Timestamp log messages       | Timestamp format of log message.                                           |
| Sequence-number log messages | Whether the sequence number function is enabled or disabled.               |
| Sysname log messages         | Adds the system name to the log message.                                   |
| Count log messages           | Log-counting function                                                      |
| Trap logging                 | The level and statistics of the log message sent to the syslog server.     |

The following example displays the outcome of running the **show logging config** command with RFC5424 enabled.

```
Ruijie# show logging
Syslog logging: enabled
  Console logging: level debugging, 4740 messages logged
  Monitor logging: level debugging, 0 messages logged
  Buffer logging: level debugging, 4745 messages logged
  Statistic log messages: disable
  Statistic log messages to terminal: disable
```

```

Delay-send file name:syslog_ftp_server, Current write index:3, Current
send index:3, Cycle:10 seconds
Count log messages: enable
Trap logging: level informational, 2641 message lines logged,4155 fail
logging to 192.168.23.89
logging to 2000::1
Delay-send logging: 2641 message lines logged
logging to 192.168.23.89 by tftp

```

| Field                              | Description                                                                       |
|------------------------------------|-----------------------------------------------------------------------------------|
| Syslog logging                     | Logging flag: enabled or disabled                                                 |
| Console logging                    | Level of the logs printed on the console, and statistics                          |
| Monitor logging                    | Level of the logs printed on the VTY window, and statistics                       |
| Buffer logging                     | Level of the logs recorded in the memory buffer, and statistics.                  |
| Count log messages                 | Log statistics function                                                           |
| Statistic log messages             | Enables/disables log sending periodically                                         |
| Statistic log messages to terminal | Enables/ disables log sending to output console and remove terminal               |
| Delay-send file name               | Local filename of log delay-sending cache, index of write file and delay interval |
| Trap logging                       | Level of the logs sent to the syslog server and statistics                        |
| Delay-send logging                 | The server address, log sending way and statistics                                |

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform  
Description**

N/A

## 8.43 show logging count

Use this command to display the statistics about occurrence times, and the last occurrence time of each module log in the system in privileged mode.

**show logging count**

**Parameter  
Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults**

N/A



**Command Mode** Privileged EXEC mode

**Usage Guide** To use the log packet statistics function, run the **logging count** command in global configuration mode. The **show logging count** command can show the information of a specific log, occurrence times, and the last occurrence time.

You can use the **show logging** command to check whether the log statistics function is enabled.

**Configuration Examples** The following example displays the result of the **show logging count** command:

```
Ruijie# show logging count
Module Name  Message Name  Sev  Occur   Last Time
SYS          CONFIG_I      5    1      Jul 6 10:29:57
SYS TOTAL                    1
```

| Related Commands | Command              | Function                                                                       |
|------------------|----------------------|--------------------------------------------------------------------------------|
|                  | <b>logging count</b> | Enables the log statistics function.                                           |
|                  | <b>show logging</b>  | Displays basic configuration of log modules and log information in the buffer. |
|                  | <b>clear logging</b> | Clears the logs in the buffer.                                                 |

**Platform Description** N/A

## 8.44 show logging reverse

Use this command to display configured parameters and statistics of logs and log messages in the memory buffer at privileged user layer. The log messages are sorted by the timestamp from now to before.

**show logging reverse**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide**

**Configuration Examples** The following command displays the result of the **show logging reverse** command with RFC5424 format disabled.

```

Ruijie# show logging reverse
Syslog logging: enabled
  Console logging: level debugging, 15495 messages logged
  Monitor logging: level debugging, 0 messages logged
  Buffer logging: level debugging, 15496 messages logged
  Standard format: false
  Timestamp debug messages: datetime
  Timestamp log messages: datetime
  Sequence-number log messages: enable
  Sysname log messages: enable
  Count log messages: enable
  Trap logging: level informational, 15242 message lines logged,0 fail
    logging to 202.101.11.22
    logging to 192.168.200.112
Log Buffer (Total 131072 Bytes): have written 1336,
015492: *Sep 19 02:46:28: Ruijie %LINEPROTO-5-UPDOWN: Line protocol on
Interface FastEthernet 0/24, changed state to up.
015491: *Sep 19 02:46:28: Ruijie %LINK-3-UPDOWN: Interface FastEthernet
0/24, changed state to up.
015490: *Sep 19 02:46:26: Ruijie %LINEPROTO-5-UPDOWN: Line protocol on
Interface FastEthernet 0/24, changed state to down.
015489: *Sep 19 02:46:26: Ruijie %LINK-3-UPDOWN: Interface FastEthernet
0/24, changed state to down.
015488: *Sep 19 02:46:13: Ruijie %LINEPROTO-5-UPDOWN: Line protocol on
Interface FastEthernet 0/24, changed state to up.
015487: *Sep 19 02:46:13: Ruijie %LINK-3-UPDOWN: Interface FastEthernet
0/24, changed state to up.

```

| Field                        | Description                                                      |
|------------------------------|------------------------------------------------------------------|
| Syslog logging               | Logging flag: enabled or disabled                                |
| Console logging              | Level of the logs printed on the console, and statistics         |
| Monitor logging              | Level of the logs printed on the VTY window, and statistics      |
| Buffer logging               | Level of the logs recorded in the memory buffer, and statistics. |
| Standard format              | Standard log format.                                             |
| Timestamp debug messages     | Timestamp format of the Debug messages                           |
| Timestamp log messages       | Timestamp format of the Log messages                             |
| Sequence-number log messages | Serial number switch                                             |

|                       |                                                             |
|-----------------------|-------------------------------------------------------------|
| Sequence log messages | Attaches system names to the logs.                          |
| Count log messages    | Log statistics function                                     |
| Trap logging          | Level of the logs sent to the syslog server, and statistics |
| Log Buffer            | Log files recorded in the memory buffer                     |

The following example displays the result of the **show logging reverse** command with RFC5424 format enabled.

```
Ruijie# show logging reverse
Syslog logging: enabled
  Console logging: level debugging, 4740 messages logged
  Monitor logging: level debugging, 0 messages logged
  Buffer logging: level debugging, 4745 messages logged
  Statistic log messages: disable
  Statistic log messages to terminal: disable
  Delay-send file name:syslog_ftp_server, Current write index:3, Current
send index:3, Cycle:10 seconds
  Count log messages: enable
  Trap logging: level informational, 2641 message lines logged,4155 fail
logging to 192.168.23.89
logging to 2000::1
  Delay-send logging: 2641 message lines logged
logging to 192.168.23.89 by tftp
Log Buffer (Total 4096 Bytes): have written 4096, Overwritten 3292
<134>1 2013-07-24T12:29:34.343763Z ruijie SYS 6 SHELL_CMD [USER@4881
name=""][CMD@4881 task="rl_con" cmd="enable"]
<134>1 2013-07-24T12:29:33.410123Z ruijie SYS 6 SHELL_LOGIN [USER@4881
name="" type="" from="console"] user login success.
<132>1 2013-07-24T12:20:32.250265Z ruijie CAPWAP 4 NO_IP_ADDR - No ip
address for capwap.
<135>1 2013-07-24T12:20:02.80343Z ruijie - 7 - - Please config the IP
address for capwap.
<132>1 2013-07-24T12:20:02.80313Z ruijie CAPWAP 4 NO_IP_ADDR - No ip
address for capwap.
<135>1 2013-07-24T12:19:33.130290Z ruijie - 7 - - Please config
the IP address for capwap.
```

| Field           | Description                                                      |
|-----------------|------------------------------------------------------------------|
| Syslog logging  | Logging flag: enabled or disabled                                |
| Console logging | Level of the logs printed on the console, and statistics         |
| Monitor logging | Level of the logs printed on the VTY window, and statistics      |
| Buffer logging  | Level of the logs recorded in the memory buffer, and statistics. |

|                                    |                                                                                   |
|------------------------------------|-----------------------------------------------------------------------------------|
| Count log messages                 | Log statistics function                                                           |
| Statistic log messages             | Enables/disables log sending periodically                                         |
| Statistic log messages to terminal | Enables/ disables log sending to console and remote terminal                      |
| Delay-send file name               | Local filename of log delay-sending cache, index of write file and delay interval |
| Trap logging                       | Level of the logs sent to the syslog server and statistics                        |
| Delay-send logging                 | The server address, log sending mode and statistics                               |
| Log Buffer                         | Log files recorded in the memory buffer                                           |

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform  
Description**

N/A

## 8.45 terminal monitor

Use this command to show logs on the current VTY window. Use the **no** form of this command to restore the default setting.

**terminal monitor**

**terminal no monitor**

**Parameter  
Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults**

Log information is not allowed to be displayed on the VTY window by default.

**Command  
Mode**

Privileged EXEC mode

**Usage Guide**

This command only sets the temporary attributes of the current VTY. As the temporary attribute, it is not stored permanently. At the end of the VTY terminal session, the system will use the default setting, and the temporary setting is invalid. This command can be also executed on the console, but it does not take effect.

**Configuration**

The following example allows log information to be printed on the current VTY window:

**Examples**

```
Ruijie# terminal monitor
```

| Command | Description |
|---------|-------------|
|---------|-------------|

**Related  
Commands**

N/A

N/A

**Platform  
Description**

N/A

**Command  
History****Version**

N/A

**Description**

N/A

## 9. CWMP Commands

### 9.1 acs password

Use this command to configure the ACS password to be authenticated for the CPE to connect to the ACS. Use the **no** form of this command to cancel the configuration.

**acs password** { *password* | *encryption-type encrypted-password* }

**no acs password**



**Parameter Description**

| Parameter                 | Description                                                                                                                                    |
|---------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>password</i>           | Configures the ACS user password to be authenticated for the CPE to connect to the ACS.                                                        |
| <i>encryption-type</i>    | Specifies the encryption type, which can be set to 0 (indicating that no encryption is used) or 7 (indicating that simple encryption is used). |
| <i>encrypted-password</i> | Specifies the password in encrypted form.                                                                                                      |

**Defaults**  
 encryption-type: 0  
 encrypted-password: N/A

**Command Mode**  
 CWMP configuration mode

**Usage Guide** Use this command to configure the ACS user password to be authenticated for the CPE to connect to the ACS. In general, the encryption type does not need to be specified. The encryption type needs to be specified only when copying and pasting the encrypted password of this command. A valid password should meet the following format requirements:

-  The command contains English letters in upper or lower case and numeric characters.
-  Blanks are allowed at the beginning of the password but will be ignored. Intermediate and ending blanks, however, are regarded as a part of the password.

**Configuration Examples** The following example configures the ACS password to be authenticated for the CPE to connect to the ACS to 123.

```
Ruijie#config terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#cwmp
Ruijie(config-cwmp)#acs password 123
Ruijie(config-cwmp)#
```

**Related  
Commands**

| Command                        | Description                                                                        |
|--------------------------------|------------------------------------------------------------------------------------|
| <b>show cwmp configuration</b> | Displays the current configuration of CWMP.                                        |
| <b>show cwmp status</b>        | Displays the running status of CWMP.                                               |
| <b>acs username</b>            | Configures the ACS username to be authenticated for the CPE to connect to the ACS. |

**Platform** N/A**Description**

## 9.2 acs url

Use this command to configure the URL of the ACS to which the CPE will connect.

Use the **no** form of this command to restore the default setting.

**acs url** *url*

**no acs url**

**Parameter  
Description**

| Parameter  | Description                   |
|------------|-------------------------------|
| <i>url</i> | Specifies the URL of the ACS. |

**Defaults** N/A**Command  
Mode** CWMP configuration mode

**Usage Guide** Use this command to configure the URL of the ACS to which the CPE will connect. If no ACS URL is manually specified but a dynamic ACS URL is obtained through DHCP, the CPE initiates a connection to the ACS using the dynamically obtained ACS URL. The URL of the ACS should meet the following format requirements:

- The URL of the ACS is formatted as `http://ip [: port ]/ path`.
- The URL of the ACS consists of at most 255 characters.

**Configuration Examples** The following example specifies the URL of the ACS to `http://10.10.10.1: 7547/acs`.

**Examples**

```
Ruijie#configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#cwmp
Ruijie(config-cwmp)#acs url http://10.10.10.1:7547/acs
Ruijie(config-cwmp)#
```

| Related Commands | Command                        | Description                                 |
|------------------|--------------------------------|---------------------------------------------|
|                  | <b>show cwmp configuration</b> | Displays the current configuration of CWMP. |
|                  | <b>show cwmp status</b>        | Displays the running status of CWMP.        |

**Platform** N/A

**Description**

### 9.3 acs username

Use this command to configure the ACS username to be authenticated for the CPE to connect to the ACS. Use the **no** form of this command to restore the default setting.

**acs username** *username*

**no acs username**

| Parameter Description | Parameter | Description     |
|-----------------------|-----------|-----------------|
|                       |           | <i>username</i> |

**Defaults** N/A

**Command** CWMP configuration mode

**Mode**

**Usage Guide** Configures the ACS username to be authenticated for the CPE to connect to the ACS.

**Configuration Examples** The following example configures the ACS username to be authenticated for the CPE to connect to the ACS to admin.

```
Ruijie#config terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#cwmp
Ruijie(config-cwmp)#acs username admin
Ruijie(config-cwmp)#
```

| Related Commands | Command                        | Description                                                                        |
|------------------|--------------------------------|------------------------------------------------------------------------------------|
|                  | <b>show cwmp configuration</b> | Displays the current configuration of CWMP.                                        |
|                  | <b>show cwmp status</b>        | Displays the running status of CWMP.                                               |
|                  | <b>acs password</b>            | Configures the ACS password to be authenticated for the CPE to connect to the ACS. |



**Platform** N/A  
**Description**

## 9.4 cpe back-up

Use this command to enable the CPE backup function.  
 Use the **no** form of this command to restore the default setting.

**cpe back-up** [*delay-time seconds*]  
**no cpe back-up**

**Parameter Description**

| Parameter      | Description                 |
|----------------|-----------------------------|
| <i>seconds</i> | Sets the backup delay time. |

**Defaults** The default is 60 seconds.

**Command Mode** CWMP configuration mode

**Usage Guide** After upgrading main programs or configurations, CPE cannot communicate with ACS for wrong configuration delivery. Use this command to recover the previous programs and configurations.

**Configuration** The following example disables the CPE backup function.

**Examples**

```
Ruijie#config terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#cwmp
Ruijie(config-cwmp)#no cpe back-up
Ruijie(config-cwmp)#
```

**Platform** N/A  
**Description**

## 9.5 cpe inform

Use this command to configure the periodic notification function of the CPE.  
 Use the **no** form of this command to restore the default setting

**cpe inform** [ *interval seconds* ] [ *start-time time* ]  
**no cpe inform**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
|-----------|-------------|


|                |                                                                                                                 |
|----------------|-----------------------------------------------------------------------------------------------------------------|
| <i>seconds</i> | Specifies the periodical notification interval of the CPE in the range from 30 to 3,600 in the unit of seconds. |
| <i>time</i>    | Specifies the date and time for starting periodical notification in yyyy-mm-ddThh:mm:ss format.                 |

**Defaults** The default is 600 seconds.

**Command Mode** CWMP configuration mode

**Usage Guide** Use this command to configure the periodic notification function of the CPE.

- If the time for starting periodical notification is not specified, periodical notification starts after the periodical notification function is enabled. The notification is performed once within every notification interval.
- If the time for starting periodical notification is specified, periodical notification starts at the specified start time. For instance, if the periodical notification interval is set to 60 seconds and the start time is 12:00 am next day, periodical notification will start at 12:00 am next day and once every 60 seconds.

 The narrower periodical notification interval allows the ACS to track the latest CPE status more accurately. However, narrower periodical notification interval brings about more sessions between the CPE and the ACS, consuming more resources of them. So the user should specify the periodical notification interval of the CPE to a reasonable value according to the network performance and the ACS performance.

**Configuration Examples** The following example specifies the periodical notification interval of the CPE to 60 seconds.

```
Ruijie#config terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#cwmp
Ruijie(config-cwmp)#cpe inform interval 60
Ruijie(config-cwmp)#
```

**Related Commands**

| Command                        | Description                                 |
|--------------------------------|---------------------------------------------|
| <b>show cwmp configuration</b> | Displays the current configuration of CWMP. |
| <b>show cwmp status</b>        | Displays the running status of CWMP.        |

**Platform Description** N/A

## 9.6 cpe password

Use this command to configure the CPE password to be authenticated for the ACS to connect to the CPE. Use the **no** form of this command to cancel the configuration.

**cpe password** { *password* | *encryption-type encrypted-password* }

**no cpe password**

### Parameter Description

| Parameter                 | Description                                                                                                                                    |
|---------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>password</i>           | Configures the CPE user password to be authenticated for the ACS to connect to the CPE.                                                        |
| <i>encryption-type</i>    | Specifies the encryption type, which can be set to 0 (indicating that no encryption is used) or 7 (indicating that simple encryption is used). |
| <i>encrypted-password</i> | Specifies the password in encrypted form.                                                                                                      |

### Defaults



encryption-type: 0  
encrypted-password: N/A

### Command Mode

CWMP configuration mode

### Usage Guide

Use this command to configure the CPE user password to be authenticated for the ACS to connect to the CPE. In general, the encryption type does not need to be specified. The encryption type needs to be specified only when copying and pasting the encrypted password of this command. A valid password should meet the following format requirements:

-  The command contains English letters and numeric characters.
-  Blanks are allowed at the beginning of the password but will be ignored. Intermediate and ending blanks, however, are regarded as a part of the password.

### Configuration Examples

The following example configures the CPE password to be authenticated for the ACS to connect to the CPE to 123.

```
Ruijie#config terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#cwmp
Ruijie(config-cwmp)#cpe password 123
Ruijie(config-cwmp)#
```

### Related Commands

| Command                        | Description                                 |
|--------------------------------|---------------------------------------------|
| <b>show cwmp configuration</b> | Displays the current configuration of CWMP. |
| <b>show cwmp status</b>        | Displays the running status of CWMP.        |

|                     |                                                                                    |
|---------------------|------------------------------------------------------------------------------------|
| <b>acs username</b> | Configures the CPE username to be authenticated for the ACS to connect to the CPE. |
|---------------------|------------------------------------------------------------------------------------|

**Platform** N/A  
**Description**

## 9.7 cpe url

Use this command to configure the URL of the CPE to which the ACS will connect. Use the **no** form of this command to restore default setting.

**cpe url** *url*  
**no cpe url**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       |           | <i>url</i>  |

**Defaults** N/A

**Command Mode** CWMP configuration mode

**Usage Guide** Use this command to configure the URL of the CPE to which the ACS will connect. If no CPE URL is manually specified but a dynamic CPE URL is obtained through DHCP, the ACS initiates a connection to the CPE using the dynamically obtained CPE URL. The URL of the CPE should meet the following format requirements:

- The URL of the CPE is formatted as `http://ip [: port ]/ path`.
- The URL of the CPE consists of at most 255 characters.

**Configuration Examples** The following example specifies the URL of the CPE to `http://10.10.10.1:7547/acs`.

```
Ruijie#configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#cwmp
Ruijie(config-cwmp)#cpe url Hhttp://10.10.10.1:7547/
Ruijie(config-cwmp)#
```

| Related Commands | Command                        | Description                                 |
|------------------|--------------------------------|---------------------------------------------|
|                  | <b>show cwmp configuration</b> | Displays the current configuration of CWMP. |
|                  | <b>show cwmp status</b>        | Displays the running status of CWMP.        |

**Platform** N/A  
**Description**

## 9.8 cpe username

Use this command to configure the ACS username to be authenticated for the CPE to connect to the ACS.

Use the **no** form of this command to restore the default setting.

**cpe username** *username*

**no cpe username**

| Parameter Description | Parameter       | Description                                                                        |
|-----------------------|-----------------|------------------------------------------------------------------------------------|
|                       | <i>username</i> | Configures the CPE username to be authenticated for the ACS to connect to the CPE. |

**Defaults** N/A

**Command Mode** CWMP configuration mode

**Usage Guide** Configures the CPE username to be authenticated for the ACS to connect to the CPE.

**Configuration Examples** The following example configures the CPE username to be authenticated for the ACS to connect to the CPE to admin.

```
Ruijie#config terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#cwmp
Ruijie(config-cwmp)#cpe username admin
Ruijie(config-cwmp)#
```

| Related Commands | Command                        | Description                                                                        |
|------------------|--------------------------------|------------------------------------------------------------------------------------|
|                  | <b>show cwmp configuration</b> | Displays the current configuration of CWMP.                                        |
|                  | <b>show cwmp status</b>        | Displays the running status of CWMP.                                               |
|                  | <b>cpe password</b>            | Configures the CPE password to be authenticated for the ACS to connect to the CPE. |

**Platform** N/A  
**Description**

## 9.9 cwmp

Use this command to enable the CWMP function.

Use the **no** form of this command to disable this function.

**cwmp**

**no cwmp**

### Parameter Description

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

### Defaults

**Command Mode** Global configuration mode

**Usage Guide** Use this command to enable or disable the CWMP function.

**Configuration Examples** The following example disables the CWMP function.

### Examples

```
Ruijie#config terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#no cwmp
Ruijie(config)#
```

### Related Commands

| Command                        | Description                                 |
|--------------------------------|---------------------------------------------|
| <b>show cwmp configuration</b> | Displays the current configuration of CWMP. |
| <b>show cwmp status</b>        | Displays the running status of CWMP.        |

**Platform Description** N/A

## 9.10 disable download

Use this command to disable the function of downloading main program and configuration files from the ACS. Use the **no** form of this command to restore the default setting.

**disable download**

**no disable download**

### Parameter Description

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** By default, the CPE can download main program and configuration files from the ACS.

**Command Mode** CWMP configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example disables the function of downloading main program and configuration files from the ACS.

```
Ruijie#config terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#cwmp
Ruijie(config-cwmp)#disable download
Ruijie(config-cwmp)#
```

**Related Commands**

| Command                        | Description                                 |
|--------------------------------|---------------------------------------------|
| <b>show cwmp configuration</b> | Displays the current configuration of CWMP. |
| <b>show cwmp status</b>        | Displays the running status of CWMP.        |

**Platform** N/A

**Description**

## 9.11 disable upload

Use this command to disable the function of uploading configuration and log files to the ACS.

Use the **no** form of this command to restore the default setting.

**disable upload**

**no disable upload**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** By default, the CPE can upload its configuration and log files to the ACS.

**Command Mode** CWMP configuration mode

**Mode**

**Usage Guide** Disables the function of uploading configuration and log files to the ACS.

**Configuration Examples** The following example disables the function of uploading configuration and log file to the ACS.

```
Ruijie#config terminal
```

```
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#cwmp
Ruijie(config-cwmp)#disable upload
Ruijie(config-cwmp)#
```

**Related  
Commands**

| Command                        | Description                                 |
|--------------------------------|---------------------------------------------|
| <b>show cwmp configuration</b> | Displays the current configuration of CWMP. |
| <b>show cwmp status</b>        | Displays the running status of CWMP.        |

**Platform** N/A**Description**

## 9.12 show cwmp configuration

Use this command to display the current configuration of CWMP.

**show cwmp configuration**

**Parameter  
Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** N/A**Command  
Mode** Privilege EXEC mode**Usage Guide****Configuration** The following example displays the current configuration of CWMP.**Examples**

```
Ruijie(config-cwmp)#show cwmp configuration
CWMP Status           : enable
ACS URL                : http://www.ruijie.com.cn/acs
ACS username           : admin
ACS password           : *****
CPE URL                : http://10.10.10.2:7547/
CPE username           : ruijie
CPE password           : *****
CPE inform status      : disable
CPE inform interval    : 60s
CPE inform start time  : 0:0:0 0 0 0
CPE wait timeout       : 50s
CPE download status    : enable
```



```
CPE upload status      : enable
CPE back up status    : enable
CPE back up delay time : 60s
```

The descriptions to the fields shown after executing the command **show cwmp configuration**.

| Field                  | Description                                                                                     |
|------------------------|-------------------------------------------------------------------------------------------------|
| CWMP Status            | Running status of CWMP.                                                                         |
| ACS URL                | URL of the ACS.                                                                                 |
| ACS username           | ACS username to be authenticated for the CPE to connect to the ACS.                             |
| ACS password           | ACS password to be authenticated for the CPE to connect to the ACS.                             |
| CPE URL                | URL of the CPE.                                                                                 |
| CPE username           | CPE username to be authenticated for the ACS to connect to the CPE.                             |
| CPE password           | CPE password to be authenticated for the ACS to connect to the CPE.                             |
| CPE inform status      | Status of CPE periodical notification function.                                                 |
| CPE inform interval    | CPE periodical notification interval.                                                           |
| CPE wait timeout       | Timeout period of CPE sessions.                                                                 |
| CPE inform start time  | The start time of periodical notification.                                                      |
| CPE download status    | Indicates whether to download main program and configuration files from the ACS.                |
| CPE upload status      | Indicates whether to upload configuration files and log files to the ACS.                       |
| CPE back up status     | Indicates whether backup and restoration of the main program and configuration file is enabled. |
| CPE back up delay time | Delay time of the backup and restoration of the main program and configuration files.           |

**Related Commands**

| Command                 | Description                          |
|-------------------------|--------------------------------------|
| <b>show cwmp status</b> | Displays the running status of CWMP. |

**Platform** N/A  
**Description**

### 9.13 show cwmp status

Uses this command to display the running status of CWMP

**show cwmp status**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
|-----------|-------------|

|     |     |
|-----|-----|
| N/A | N/A |
|-----|-----|

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the running status of CWMP.

```

Examples Ruijie#show cwmp status
CWMP Status           : enable
Session status        : Close
Last success session   : Unknown
Last success session time : Thu Jan 1 00:00:00 1970
Last fail session      : Unknown
Last fail session time : Thu Jan 1 00:00:00 1970
Session retry times    : 0
    
```

The descriptions to the fields shown after executing the command **show cwmp configuration**.

| Field                     | Description                                                   |
|---------------------------|---------------------------------------------------------------|
| CWMP Status               | The running status of CWMP                                    |
| Session status            | The current status of the session between the CPE and the ACS |
| Last success session      | The last success session type                                 |
| Last success session time | The last success session time                                 |
| Last fail session         | The last failed session type                                  |
| Last fail session time    | The last failed session time                                  |
| Session retry times       | The number of session retransmission attempts                 |

| Related Commands | Command                        | Description                                 |
|------------------|--------------------------------|---------------------------------------------|
|                  | <b>show cwmp configuration</b> | Displays the current configuration of CWMP. |

**Platform Description** N/A

### 9.14 timer cpe-timeout

Uses this command to configure the session timeout period of the CPE.

**timer cpe- timeout** *seconds*

**no timer cpe-timeout**

| Parameter Description | Parameter      | Description                                                                   |
|-----------------------|----------------|-------------------------------------------------------------------------------|
|                       | <i>seconds</i> | Sets the session timeout, in the range from 10 to 600 in the unit of seconds. |

**Defaults** By default, the session timeout period is 30 seconds.

**Command Mode** CWMP configuration mode

**Usage Guide** Use this command to configure the session timeout period of the CPE.  
The maximum waiting period that the CPE has when the CPE failed to receive the ACS reply.

**Configuration Examples** The following example configures the session timeout period of the CPE to 50 seconds.

```
Ruijie#config terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#cwmp
Ruijie(config-cwmp)#timer cpe-timeout 50
Ruijie(config-cwmp)#
```

| Related Commands | Command                        | Description                                 |
|------------------|--------------------------------|---------------------------------------------|
|                  | <b>show cwmp configuration</b> | Displays the current configuration of CWMP. |
|                  | <b>show cwmp status</b>        | Displays the running status of CWMP.        |

**Platform Description** N/A





## 10. Module Hot-plugging/ unplugging Commands

### 10.1 remove configuration module slot-num

Use this command to remove the module configurations.

**remove configuration module** *slot-num*

**Parameter  
Description**

| Parameter       | Description  |
|-----------------|--------------|
| <i>slot-num</i> | Slot number. |

**Defaults** N/A

**Command  
Mode** Global configuration mode.

**Usage Guide** Use this command to remove the module configurations. This command is invalid for module in on-line status. If there is a module inserted in the slot, this module will be reset.

**Configuration** The following example clears the configuration on slot 4.

**Examples**

```
Ruijie(config)# remove configure module 4
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform  
Description** N/A

### 10.2 remove configuration device device-id

Use this command to remove the configuration on a VSU device, which validates in VSU mode after restart.

**remove configuration device** *device-id*

**Parameter  
Description**

| Parameter        | Description         |
|------------------|---------------------|
| <i>device-id</i> | The chassis number. |

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** This command is used to remove the configuration on a VSU device. It validates after the device is restarted.

**Configuration** The following example clears the configuration on device 1.

**Examples** `Ruijie(config)# remove configuration device 1`

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A

### 10.3 show alarm

Use this command to display system alarm messages, concerning card startup failure, temperature, power, and fan alarms.

**show alarm**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays system alarm messages.

**Examples**

```
Ruijie#show alarm

Dev  Module          Level  Info
-----
-----
1    DEV              Warning Some fans are absent.
```

| 1      | DEV | Critical Some cards are in cannot-startup state.                                |
|--------|-----|---------------------------------------------------------------------------------|
| Field  |     | Description                                                                     |
| Dev    |     | Device ID                                                                       |
| Module |     | Service module                                                                  |
| Level  |     | Alarm level, including Critical and Warning                                     |
| Info   |     | Alarm cause, such as system power shortage fan absence and card startup failure |

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A

## 10.4 show manuinfo

Use this command to display asset information about all independent components in the system for asset management, including the chassis, fan, power, management board, and line card. The information covers the ID, slot number, name, serial number (SN), software and hardware version, and MAC address. Not all devices support display of the same information and only supported information is printed.

**show manuinfo**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** This command is used to display asset information about all independent components in the system

**Configuration Examples** The following example displays asset information of the single physical device.

```
Ruijie#show manuinfo
Device 1
  Location:           Chassis
  Device name:       RG S12006
  Device Serial Number: 62150129A8B0DAF0F0321
  Hardware Version:  V1.0
```



```
Mac Address:                00.D0.F8.00.11.22

Device 2
  Location:                  Slot-M1
  Device name:               M12000 CM
  Device Serial Number:     32150129A8B0DAF0F0321
  Hardware Version:         V1.0
  Software Version:         RGOS 10.4(3b17) Release 129646
  Mac Address:               00.D0.F8.00.11.34

Device 3
  Location:                  Slot-1
  Device name:               M12000-04XFP-EA
  Device Serial Number:     32150129A8B0DAF0F0322
  Hardware Version:         V1.0
  Software Version:         RGOS 10.4(3b17) Release 129646

Device 4
  Location:                  Slot-2
  Device name:               M12000-04XFP-EA
  Device Serial Number:     32150129A8B0DAF0F0323
  Hardware Version:         V1.0
  Software Version:         RGOS 10.4(3b17) Release 129646

Device 5
  Location:                  Power 1
  Device name:               RG PD1200I
  Device Serial Number:     42150129A8B0DAF0F0321
  Hardware Version:         V1.0

Device 6
  Location:                  Power 2
  Device name:               RG PD1200I
  Device Serial Number:     42150129A8B0DAF0F0322
  Hardware Version:         V1.0

Device 7
  Location:                  FAN
  Device name:               M12000 FAN
  Device Serial Number:     52150129A8B0DAF0F0321
  Hardware Version:         V1.0
```

The following example displays asset information in VSU mode.

```
Ruijie#show manuinfo
Device 1
```

```
Location:                Chassis 1
Device name:              RG S12006
Device Serial Number:    62150129A8B0DAF0F0321
Hardware Version:        V1.0
Mac Address:              00.D0.F8.00.11.22

Device 2
Location:                Slot-1/M1
Device name:              M12000 CM
Device Serial Number:    32150129A8B0DAF0F0321
Hardware Version:        V1.0
Software Version:        RGOS 10.4(3b17) Release 129646
Mac Address:              00.D0.F8.00.11.56

Device 3
Location:                Slot-1/1
Device name:              M12000-04XFP-EA
Device Serial Number:    32150129A8B0DAF0F0322
Hardware Version:        V1.0
Software Version:        RGOS 10.4(3b17) Release 129646

Device 4
Location:                Slot-1/2
Device name:              M12000-04XFP-EA
Device Serial Number:    32150129A8B0DAF0F0323
Hardware Version:        V1.0
Software Version:        RGOS 10.4(3b17) Release 129646

Device 5
Location:                Power 1/1
Device name:              RG PD1200I
Device Serial Number:    42150129A8B0DAF0F0321
Hardware Version:        V1.0

Device 6
Location:                Power 1/2
Device name:              RG PD1200I
Device Serial Number:    42150129A8B0DAF0F0322
Hardware Version:        V1.0

Device 7
Location:                FAN 1
Device name:              M12000 FAN
Device Serial Number:    52150129A8B0DAF0F0322
```

```
Hardware Version:      V1.0

Device 8
  Location:            Chassis 2
  Device name:         RG S12006
  Device Serial Number: 62150129A8B0DAF0F0322
  Hardware Version:    V1.0
  Software Version:    RGOS 10.4(3b17) Release 129646
  Mac Address:         00.D0.F8.00.11.33

Device 9
  Location:            Slot-2/M1
  Device name:         M12000 CM
  Device Serial Number: 32150129A8B0DAF0F0324
  Hardware Version:    V1.0
  Software Version:    RGOS 10.4(3b17) Release 129646
  Mac Address:         00.D0.F8.00.11.22

Device 10
  Location:            Slot-2/1
  Device name:         M12000-04XFP-EA
  Device Serial Number: 32150129A8B0DAF0F0325
  Hardware Version:    V1.0
  Software Version:    RGOS 10.4(3b17) Release 129646

Device 11
  Location:            Slot-2/2
  Device name:         M12000-04XFP-EA
  Device Serial Number: 32150129A8B0DAF0F0326
  Hardware Version:    V1.0
  Software Version:    RGOS 10.4(3b17) Release 129646

Device 12
  Location:            Power 2/1
  Device name:         RG PD1200I
  Device Serial Number: 42150129A8B0DAF0F0323
  Hardware Version:    V1.0

Device 13
  Location:            Power 2/2
  Device name:         RG PD1200I
  Device Serial Number: 42150129A8B0DAF0F0324
  Hardware Version:    V1.0
```

```

Device 14
  Location:                FAN 2
  Device name:             M12000 FAN
  Device Serial Number:    52150129A8B0DAF0F0322
  Hardware Version:        V1.0
    
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform  
Description**

N/A

## 10.5 show sysmac

Use this command to display the MAC address of the current system.

**show sysmac**

**Parameter  
Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults**

N/A

**Command  
Mode**

Privileged EXEC mode.

**Usage Guide**

N/A

**Configuration**

The following example displays the MAC address of the current system.

**Examples**

```

Ruijie#show sysmac
00d0.f822.33e2
    
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform  
Description**

N/A

## 10.6 show version module detail

Use this command to display the details of the module.

**show version module detail** [ *slot-num* ]

**show version module detail** [ *device-id / slot-num* ]

**Parameter Description**

| Parameter        | Description           |
|------------------|-----------------------|
| <i>device-id</i> | (Optional) Device ID. |
| <i>slot-num</i>  | (Optional) Slot ID.   |

**Defaults** N/A

**Command Mode** Privileged EXEC mode.

**Usage Guide** Use this command to display details of the module

**Configuration**

```
Ruijie# show version module detail 2
```

**Examples**

```
Device : 1
Slot   : 2
User Status : none
Software Status: none
Online Module :
Type :
Ports : 0
Version :
Configured Module :
Type :
Ports :
Version :
Ruijie#
```

**Related Commands**

| Command                   | Description            |
|---------------------------|------------------------|
| <b>show version slots</b> | Displays slot details. |

**Platform** N/A

**Description**

## 10.7 show version slots

Use this command to display the details of the slot.

**show version slots** [ *slot-num* ]  
**show version slots** [ *device-id / slot-num* ]

**Parameter Description**

| Parameter        | Description             |
|------------------|-------------------------|
| <i>slot-num</i>  | (Optional) Slot number. |
| <i>device-id</i> | (Optional) Device ID.   |

**Defaults** N/A

**Command Mode** Privileged EXEC mode.

**Usage Guide** N/A

**Configuration Examples**

```
Ruijie# show version slots
Dev Slot Port Configured Module          Online Module          Software Status
-----
 1   0   32   S5750C-28GT4XS-H          S5750C-28GT4XS-H          master
```

**Related Commands**

| Command                           | Description                         |
|-----------------------------------|-------------------------------------|
| <b>show version moduel detail</b> | Displays the details of the module. |

**Platform Description** N/A

# 11. Supervisor Module Redundancy Commands

## 11.1 auto-sync time-period

Use this command to configure the auto-sync time-period of running-config and startup-config when the dual supervisor module is redundant. Use the **no** form of this command to disable automatic synchronization for the dual supervisor modules. Use the **default** form of this command to restore the default automatic synchronization time period for the dual supervisor modules.

**auto-sync time-period** *value*

**no auto-sync time-period**

**default auto-sync time-period**

| Parameter Description | Parameter    | Description                                                                                                                 |
|-----------------------|--------------|-----------------------------------------------------------------------------------------------------------------------------|
|                       | <i>value</i> | Automatic synchronization time interval measured in seconds, in the range from one second to one month (2,678,400 seconds). |

**Defaults** The default is one hour (3600 seconds) by default.

**Command Mode** Redundancy configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example sets the automatic synchronization interval to 60 seconds.

```
Ruijie(config)# redundancy
Ruijie(config-red)# auto-sync time-period 60
Redundancy auto-sync time-period: enabled (60 seconds).
Ruijie(config-red)# exit
```

The following example disables automatic synchronization.

```
Ruijie(config)# redundancy
Ruijie(config-red)# no auto-sync time-period
Redundancy auto-sync time-period: disabled.
Ruijie(config-red)# exit
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 11.2 redundancy

Use this command to enter redundancy configuration mode.

**redundancy**

| Parameter<br>Description | Parameter | Description |
|--------------------------|-----------|-------------|
|                          | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example enters redundancy configuration mode.

```
Ruijie# config terminal
Ruijie(config)# redundancy
Ruijie(config-red)# exit
```

| Related<br>Commands | Command | Description |
|---------------------|---------|-------------|
|                     | N/A     | N/A         |

**Platform Description** N/A

## 11.3 redundancy forceswitch

Use this command to perform active/standby supervisor module switchover.

**redundancy forceswitch**

| Parameter<br>Description | Parameter | Description |
|--------------------------|-----------|-------------|
|                          | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode



**Usage Guide** If this command is executed on the active supervisor module, the module will be reset and the standby supervisor module will act as an active supervisor module.

The following conditions are required to perform hot backup switchover:

- This command is executed on the active supervisor module. There is a standby supervisor module.
- Hot backups on all virtual switch devices (VSDs) are in real-time status.
- Hot backup switchovers on VSDs are not prevented temporarily by any service entity.

When there are multiple VSDs, the system judges whether the hot backup on each VSD allows active/standby switchover; If any VSD does not allow the switchover, the command fails. Otherwise, active/standby switchovers are enforced on all VSDs.

**Configuration** The following example performs active/standby supervisor module switchover.

**Examples**

```
Ruijie# redundancy forceswitch
This operation will reload the master unit and force switchover to the
slave unit. Are you sure to continue? [N/y] y
```


| Related Commands | Command       | Description                          |
|------------------|---------------|--------------------------------------|
|                  | <b>reload</b> | Resets the active supervisor module. |

**Platform** N/A  
**Description**

## 11.4 redundancy reload

Use this command to reset the supervisor module.

**redundancy reload { peer | shelf [ switchid ] }**

| Parameter Description | Parameter                                                                                                                                                                                                                                                                 | Description                           |
|-----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------|
|                       | <b>peer</b>                                                                                                                                                                                                                                                               | Resets the standby supervisor module. |
| <b>shelf</b>          | Resets both the active and standby supervisor modules on the device which works as a single physical device. The device ID should be specified on the device which works as a Virtual Switching Unit (VSU) device.                                                        |                                       |
| <i>switchid</i>       | VSU device ID, supported on a VSU device.<br><br> This parameter is not supported in stand-alone mode. It must be contained in the <b>redundancy reload shelf</b> command in VSU mode. |                                       |

**Defaults** N/A

**Command** Privileged EXEC mode  
**Mode**

**Usage Guide** Resetting the supervisor module does not affect data forwarding. Data forwarding will not be interrupted and the user session information will not be missing.  
The **redundancy reload shelf** command is used to reset the device which works as a single physical device. The **redundancy reload shelf switchid** command is used to reset the specified device which works as a VSU device.

**Configuration** The following example resets the standby supervisor module.

**Examples**

```
Ruijie# redundancy reload peer
This operation will reload the current slave unit. Are you sure to
continue? [N/y] y
Preparing to reload peer!
```

The following example resets device 2 which works as a VSU device.

```
Ruijie# redundancy reload shelf 2
This operation will reload the device 2. Are you sure to continue? [N/y] y
Preparing to reload device 2!
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 11.5 show redundancy states

Use this command to display the current redundancy state.  
**show redundancy states**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | -         | -           |

**Defaults** N/A

**Command** User EXEC mode / Privileged EXEC mode  
**Mode**

**Usage Guide** Currently, only 1:1 hot backup (for the global active module and standby module) is supported in the VSU mode. Therefore, only the hot backup state of the local and peer device is displayed.

If the system is configured with multiple VSDs, the hot backup state of all VSDs is displayed in VSD 0 in global configuration mode.

**Configuration** The following example displays the redundancy states of active supervisor module.

**Examples**

```
Ruijie> enable
Ruijie# show redundancy states
Redundancy role: master
Redundancy state: realtime
Auto-sync time-period: 3600 s
```

```
Redundancy management role: master
Redundancy control role: active
Redundancy control state: realtime
Auto-sync time-period: 3600 s
```

The following example displays the redundancy state of the standby supervisor module.

```
Ruijie> enable
Ruijie# show redundancy states
Redundancy role: slave
Redundancy state: realtime
```

```
Redundancy management role: slave
Redundancy control role: standby
Redundancy control state: realtime
```

The following example displays the redundancy state of the candidate supervisor module.

```
Ruijie> enable
Ruijie# show redundancy states
Redundancy role: candidate
Redundancy state: none

Redundancy management role: candidate
Redundancy control role: standby
Redundancy control state: realtime
```

The following example displays the redundancy state of the active supervisor module with VSD1 and VSD2 configured.

```
Ruijie> enable
Ruijie# show redundancy states
Redundancy role: master
Redundancy state: realtime
Auto-sync time-period: 3600 s
```

```

Redundancy management role: master
Redundancy control role: active
Redundancy control state: realtime
Auto-sync time-period: 3600 s

VSD vsd1 redundancy state: realtime
VSD vsd2 redundancy state: realtime
    
```

| Field                              | Description                                                                                                                                                        |
|------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| role                               | The role of the supervisor module.                                                                                                                                 |
| state                              | The state of the supervisor module.                                                                                                                                |
| Auto-sync time-period              | Displayed on the active supervisor module. The configuration file synchronizes the time interval automatically. "disabled" indicates no automatic synchronization. |
| VSD <vsd name><br>redundancy state | Displays hot backup state of the specified VSD in VSD 0.                                                                                                           |

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform  
Description**

N/A



## 12. UFT Commands

### 12.1 switch-mode

Use this command to switch the UFT operating mode for a line card in stand-alone mode.

**switch-mode** *mode\_type* [ **overlay** ] **slot** *slot\_num*

Use this command to restore the default UFT operating mode for the specified line card in stand-alone mode.

**no switch-mode** *mode\_type* [ **overlay** ] **slot** *slot\_num*

| Parameter Description | Parameter        | Description                                                                                                                                                                                                                                                                                                                                                                                                                          |
|-----------------------|------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <i>mode_type</i> | Indicates the UFT operating mode.<br>In stand-alone mode, the line card can operate in the following modes:<br><b>default:</b> Default mode, which is applied to most of application scenarios.<br><b>bridge:</b> Bridge mode, which is applied to the application scenarios where pure Layer 2 services dominate.<br><b>gateway:</b> Gateway mode, which is applied to the application scenario in which Layer 3 services dominate. |
|                       | <i>overlay</i>   | Enables overlay mode (Optional).                                                                                                                                                                                                                                                                                                                                                                                                     |
|                       | <i>slot_num</i>  | Indicates the corresponding line card installed in the chassis.                                                                                                                                                                                                                                                                                                                                                                      |

**Defaults** The default UFT operating mode is **Default**.

**Command Mode** Global configuration mode

**Default Level** 14

**Usage Guide** N/A

**Configuration Examples** The following example switches the UFT operating mode of the line card in slot 3 of the switch to bridge mode in stand-alone mode.

```
Ruijie(config)#switch-mode bridge slot 3
Please save current config and restart your device!
Ruijie(config)#show running-config | include switch-mode
switch-mode bridge slot 3
```

**Verification** Use the **show switch-mode status** command to display the current operating mode.

```
Ruijie#show switch-mode status
```

| Slot No | Switch-Mode-Next | Switch-Mode-Current |
|---------|------------------|---------------------|
| 3       | bridge           | bridge              |

**Prompt Messages** N/A

**Common Errors** N/A

**Platforms** The S6120-20XS4VS2QXS switch does not support UFT mode configuration.

## 12.2 show switch-mode status

Use this command to display the UFT mode of a switch.

**show switch-mode status**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Command Mode** Privileged EXEC mode, global configuration mode, interface configuration mode

**Default Level** 14

**Usage Guide** N/A

**Configuration Examples** The following example displays the UFT mode of the switch in stand-alone mode.

```
Ruijie#show switch-mode status
Slot No      Switch-Mode      Status
-----      -
1            default          ok
```

The following example displays the UFT mode of the switch in VSU mode.

```
Ruijie#show switch-mode status
Device No    Slot No    Switch-Mode      Status
-----
1            2          default          ok
1            3          default          none
```

Field Description:

| Field | Description |
|-------|-------------|
|-------|-------------|

---

|             |                                                                                                         |
|-------------|---------------------------------------------------------------------------------------------------------|
| Slot No     | Displays only slot number in stand-alone mode; displays both device number and slot number in VSU mode. |
| Device No   | Indicates the device number in VSU mode.                                                                |
| Switch Mode | Indicates the UFT operating mode.                                                                       |
| Status      | Indicates whether the node (device or line card) is online or not.<br>ok: Online<br>none: Offline       |

**Prompt****Messages****Platforms**      N/A



## 13. Package Management Commands

### 13.1 show upgrade auto-sync

Use this command to display related auto-sync configuration on the device.

**show upgrade auto-sync**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Command Mode** Privileged EXEC mode

**Default Level** 2

**Usage Guide** This command is used to display the auto-sync upgrade configuration in the system including the policy, range and upgrade package's path.

**Prompt Messages** The auto-sync information of the system is displayed after running.

```
Ruijie#show upgrade auto-sync
  auto-sync policy: coordinate
  auto-sync range: vsu
  auto-sync package: flash:/eg1000m_main_1.0.0.0f328e91.bin
```

### 13.2 show upgrade file

Use this command to display the information of the installation package files in the device file system.

**show upgrade file *url***

| Parameter Description | Parameter  | Description                                                                       |
|-----------------------|------------|-----------------------------------------------------------------------------------|
|                       | <i>url</i> | The local <i>url</i> path indicates where an installation package file is stored. |

**Command Mode** Privileged EXEC mode

**Default Level** 2

**Usage Guide** This command is used to preview main messages of an installation package after it is downloaded into local file system.

**Configuration** The following example displays the information of an installation package file.

#### Examples

```
Ruijie#show flash:S6120_RGOS12.1(1)B0101-FULL_install.bin
Name           : main
Version        : 1.0.0.2f1c4dd8
Package type   : unknown
Size           : 166440370
Build time     : Fri 23 Nov 2018 09:01:43 UTC
Description    : main upgrade package
Package files  :
                /fdt.img
                /initrd.img
                /kernel.img
                /rboot-s6120.bin
```

**Prompt Messages**

N/A

## 13.3 show upgrade history

Use this command to display the upgrade history.

**show upgrade history**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Command Mode** Privileged EXEC mode

**Default Level** 2

**Configuration** The following example displays the upgrade history.

**Examples**

```
Ruijie#show upgrade history
Upgrade History Information:
    Time           : 2018-11-05 06:13:17
    Method          : OOBTFTP
    Package Name    : s6120.bin
    Package Type    : MAIN

    Time           : 2018-11-06 03:11:16
    Method          : OOBTFTP
    Package Name    : S6120_RGOS12.1(1)B1_install.bin
    Package Type    : MAIN
```

**Prompt Messages** N/A

**Platforms** N/A

### 13.4 show upgrade status

Use this command to display the upgrade status of all line cards on the chassis device.

**show upgrade status**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Command Mode** Privileged EXEC mode

**Default Level** 2

**Configuration Examples** The following example displays the upgrade status of all line cards on the chassis device.

```
Ruijie#show upgrade status
[slot: M1]
    dev_type: s12k-ppc-cm
    status  : ready
[slot: 8]
    dev_type: s12k-s86-ppc-lc
    status  : upgrading
```

**Prompt Messages** The upgrade status of various line cards is displayed.

```
[slot: M1]
    dev_type: s12k-ppc-cm
    status  : ready
[slot: 8]
    dev_type: s12k-s86-ppc-lc
    status  : upgrading
```

**Platforms** This command is supported only on the chassis device.

## 13.5 upgrade

Use this command to install and upgrade an installation package in the local file system.

**Upgrade** *url* [ **force** ]

| Parameter Description | Parameter    | Description                                                                                                                                 |
|-----------------------|--------------|---------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <i>url</i>   | The local path indicates where an installation package is stored.<br>This command is used to upgrade an installation package on the device. |
|                       | <b>force</b> | Mandatory upgrade                                                                                                                           |

**Command Mode** Privileged EXEC mode

**Default Level** 2

**Usage Guide** This command is applicable to installation packages of all subsystem components, chassis devices, and feature components. Before its use, run the **copy** command to copy feature packages into the file system in the device.

When there is no specified range of parameters, the command is used to upgrade the matched system components according to the auto-sync configuration.

**Configuration** The following example upgrades the main package on the device.

**Examples**

```
Ruijie#upgrade usb0:/egl000m_main_1.0.0.0f328e91.bin
Upgrade processing is 10%
Upgrade processing is 60%
Upgrade processing is 90%
Upgrade info [OK]
Kernel version[2.6.32.91f9d21->2.6.32.9f8b56f]
Rootfs version[1.0.0.2ad02537->1.0.0.1bcc12e8]
Upgrade processing is 100%
Reload system to take effect!
```

The following example upgrades the chassis package on the device.

```
Ruijie# upgrade usb0:/ S8600E_RGOS11.0(4)B1_CM_install.bin
[Slot M1]:Upgrade processing is 10%

[Slot 1]:Upgrade processing is 10%

[Slot M1]:Upgrade processing is 60%

[Slot 1]:Upgrade processing is 60%

[Slot M1]:Upgrade processing is 90%

[Slot M1]:
Upgrade info [OK]
Kernel version[2.6.32.abb2b41f170c81->2.6.32.abb2b415749f40]
```

```

Rootfs version[1.0.0.d5f0de03->1.0.0.660e0085]

[Slot M1]:Restart to take effect !

[Slot M1]:Upgrade processing is 100%
[Slot 1]:Upgrade processing is 90%

[Slot 1]:
Upgrade info [OK]
  Kernel version[2.6.32.9f8b56f1d45ab2 ->2.6.32.0f48cb9f170c81]
  Rootfs version[1.0.0.2ad02537->1.0.0.1bcc12e8]

[Slot 1]:Restart to take effect !

[Slot 1]:Upgrade processing is 100%
[slot: M1]
  device_name: ca-octeon-cm
  status:      SUCCESS
[slot: 1]
  device_name: ca-octeon-lc
Status:      SUCCESS

```

**Verification** Run the **show version detail** command to check whether the upgrade of a subsystem component is successful.

Run the **show component** command to check whether the upgrade of a feature component is successful. upgrading a feature component

**Prompt** The prompt message of successful running is displayed.

**Messages**

```
Upgrade info [OK]
```

The installation package is invalid or damaged and needs to be regained for upgrade command.

```
Invalid package file
```

The installation package is not available on the device and needs to be regained for upgrade command.

```
Device don't support
```

There is no need to upgrade the device.

```
The version in device is newer or the same
```

When there is insufficient space for upgrade, check USB flash disk attached on the device.

```
No enough space for decompress
```

Contact the service center to solve the system problem.

```
No enough space,rootfs been destroyed. Please upgrade in uboot
```

## 13.6 upgrade auto-sync package

Use this command to configure the path for the auto-sync upgrade.

**upgrade auto-sync package** *url*

| Parameter Description | Parameter  | Description                       |
|-----------------------|------------|-----------------------------------|
|                       | <i>url</i> | The path of installation package. |

**Defaults** The default is the last upgrade path.

**Command Mode** Privileged EXEC mode

**Default Level** 2

**Usage Guide** It is recommended to use default settings.

**Configuration Examples** The following example sets the path to the upgrade package in the USB flash disk.

```
Ruijie# upgrade auto-sync package usb0:/eg1000m_main_1.0.0.0f328e91.bin
```

**Verification** Run the **show upgrade auto-sync** command to display current auto-sync policy.

If *url* provides normal path, run the **stat** command to check whether it can be accessed.

**Prompt** The prompt message of successful running is displayed:  
**Messages** Upgrade auto-sync package is set as usb0:/eg1000m\_main\_1.0.0.0f328e91.bin

## 13.7 Upgrade auto-sync policy

Use this command to set an auto-sync policy for the system.

**upgrade auto-sync policy [ none | compatible | coordinate ]**

| Parameter Description | Parameter         | Description                                                                                      |
|-----------------------|-------------------|--------------------------------------------------------------------------------------------------|
|                       | <b>none</b>       | No auto-sync upgrade                                                                             |
|                       | <b>compatible</b> | Performs auto-synchronization based on the sequential order of versions.                         |
|                       | <b>coordinate</b> | Synchronizes with the version based on the system upgrade patch stored on the supervisor module. |

**Defaults** **coordinate**

**Command Mode** Privileged EXEC mode

**Default Level** 2

**Usage Guide** Check whether the upgrade package is ready before using the command.

**Configuration Examples** The following example sets the auto-sync policy of the device based on the version of supervisor modules.

```
Ruijie# upgrade auto-sync policy coordinate
```



**Verification** Display the current policy for auto-sync upgrade by running the **show upgrade auto-sync** command.

**Prompt** The prompt message of successful running is displayed.

**Messages** Upgrade auto-sync policy is set as coordinate.

## 13.8 upgrade auto-sync range

Use this command to set the range of auto-sync upgrade.

**upgrade auto-sync range [ chassis | vsu ]**

| Parameter Description | Parameter      | Description                                               |
|-----------------------|----------------|-----------------------------------------------------------|
|                       | <b>chassis</b> | Auto-sync version upgrade in the range of chassis         |
|                       | <b>vsu</b>     | Auto-sync version upgrade in the range of the VSU system. |

**Defaults** vsu

**Command Mode** Privileged EXEC mode

**Default Level** 2

**Usage Guide** It is recommended to set the parameter to vsu to ensure system version consistency to the most extent.

**Configuration Examples** The following example installs the auto-sync upgrade in the VSU system.

```
Ruijie# upgrade auto-sync range vsu
```

**Verification** Run the **show upgrade auto-sync** command to display the range of current auto-sync upgrade.

**Prompt** The prompt message of successful running is displayed.

**Messages** Upgrade auto-sync range is set as vsu.

## 13.9 upgrade download tftp

Use this command to download, install and upgrade installation packages from the tftp server.

**upgrade download tftp://path [vrf vrf-name] [ force ]**

**upgrade download oob\_tftp://path [via mgmt {number}] [ force ]**

| Parameter Description | Parameter                     | Description                                                                                                                    |
|-----------------------|-------------------------------|--------------------------------------------------------------------------------------------------------------------------------|
|                       | <i>path</i>                   | The path of installation packages on the tftp server<br>This command is downloaded and upgraded automatically from the server. |
|                       | <b>vrf</b> <i>vrf-name</i>    | Specifies a VRF for downloading the installation package.                                                                      |
|                       | <b>via</b> <i>mgmt number</i> | If the transfer mode is <i>oob_tftp</i> and there are multiple MGMT ports, you can select a specific port.                     |
|                       | <b>force</b>                  | Enforces upgrade.                                                                                                              |

**Command Mode** Privileged EXEC mode

**Default Level** 2

**Usage Guide** This command is applicable to installation packages of all subsystem components and chassis devices. This command is used to perform automatic installation, copy and upgrade of files.

**Configuration Examples** The following example upgrades the device.

```
Ruijie#upgrade download tftp://172.30.31.176/S6120_RGOS12.1(1)B0101-FULL_install.bin
*Nov 23 13:21:38: %UPGRADE-6-INFO: Start upgrade
*Nov 23 13:21:39: %UPGRADE-6-INFO: Copy to /tmp/vsd/0/upgrade_rep/
*Nov 23 13:21:39: %UPGRADE-6-INFO: Please wait for a moment.....
Press Ctrl+C to quit
```

```

!!
!!!!!!
!!
Ruijie#*Nov 16 19:09:00: %UPGRADE-6-INFO: Upgrade disable reload device
*Nov 16 19:09:00: %UPGRADE-6-INFO: Upgrade disable redundancy forceswitch
*Nov 16 19:09:00: %UPGRADE-6-INFO: (*2/0) Upgrade processing is 10%
*Nov 16 19:09:03: %UPGRADE-6-INFO: (*2/0) Upgrade processing is 30%
*Nov 16 19:09:05: %UPGRADE-6-INFO: (*2/0) Upgrade get package from master device, wait a
moment.....
*Nov 16 19:11:23: %UPGRADE-6-INFO: (*2/0) Upgrade check package md5 value, wait a moment
*Nov 16 19:11:34: %UPGRADE-6-INFO: (*2/0) Upgrade processing is 60%
*Nov 16 19:11:35: %UPGRADE-6-INFO: Upgrade processing is 10%
*Nov 16 19:11:37: %UPGRADE-6-INFO: Upgrade processing is 30%
*Nov 16 19:11:39: %UPGRADE-6-INFO: Upgrade check package md5 value, wait a moment
*Nov 16 19:11:41: %UPGRADE-6-INFO: (*2/0) Upgrade info [OK]
*Nov 16 19:11:41: %UPGRADE-6-INFO: (*2/0)      Rootfs
version[1.0.0.aca71d43->1.0.0.aca71d43]
*Nov 16 19:11:41: %UPGRADE-6-INFO: (*2/0) Reload system to take effect !
*Nov 16 19:11:50: %UPGRADE-6-INFO: Upgrade processing is 60%
*Nov 16 19:12:40: %UPGRADE-6-INFO: Upgrade info [OK]
*Nov 16 19:12:40: %UPGRADE-6-INFO:      Rootfs version[1.0.0.aca71d43->1.0.0.aca71d43]
*Nov 16 19:12:40: %UPGRADE-6-INFO: Reload system to take effect !
*Nov 16 19:13:20: %UPGRADE-6-INFO: Upgrade enable redundancy forceswitch
*Nov 16 19:13:20: %UPGRADE-6-INFO: Upgrade enable reload device
*Nov 16 19:13:20: %UPGRADE-6-INFO: Upgrade processing is 100%
*Nov 16 19:13:20: %UPGRADE-6-INFO: Upgrade finish

```

**Verification** Run the **show version** command to check whether the upgrade of a feature component is successful.

**Prompt** The prompt message of successful running is displayed.

**Messages** Upgrade info [OK];

The installation package is invalid or damaged and needs to be regained for upgrade command.

```
Invalid package file
```

The installation package is not available on the device and needs to be regained for upgrade command.

```
Device don't support
```

There is no need to upgrade the device.

```
The version in device is same
```

When there is insufficient space for upgrade, check USB flash disk attached on the device.

```
No enough space for decompress
```

## 13.10 upgrade download ftp

Use this command to download, install and upgrade installation packages from the ftp server.

```
upgrade download ftp://path [vrf vrf-name] [force ]
```

```
upgrade download oob_ftp://path [via mgmt {number}] [force ]
```

| Parameter Description | Parameter                     | Description                                                                                                                   |
|-----------------------|-------------------------------|-------------------------------------------------------------------------------------------------------------------------------|
|                       | <i>path</i>                   | The path of installation packages on the ftp server<br>This command is downloaded and upgraded automatically from the server. |
|                       | <b>vrf</b> <i>vrf-name</i>    | Specifies a VRF for downloading the installation package.                                                                     |
|                       | <b>via mgmt</b> <i>number</i> | If the transfer mode is <i>oob_ftp</i> and there are multiple MGMT ports, you can select a specific port.                     |
|                       | <b>force</b>                  | Enforces upgrade.                                                                                                             |

**Command Mode** Privileged EXEC mode

**Default Level** 2

**Usage Guide** This command is applicable to installation packages of all subsystem components and chassis devices. This command is used to perform automatic installation, copy and upgrade of files.

**Configuration** The following example upgrades the device.

**Examples**

```
Ruijie#upgrade download ftp://user:123456@172.30.31.176/S6120_RGOS12.1(1)B1_install-11-15.bin
*Nov 16 18:55:00: %UPGRADE-6-INFO: Start upgrade
*Nov 16 18:55:01: %UPGRADE-6-INFO: Copy to /data/upgrade_rep/
*Nov 16 18:55:01: %UPGRADE-6-INFO: Please wait for a moment.....
temp_patch_file = /data/upgrade_rep/_temp_S6120_RGOS12.1(1)B1_install-11-15.bin_
Press Ctrl+C to quit

=====>100%
*Nov 16 18:59:37: %UPGRADE-6-INFO: Upgrade disable reload device
*Nov 16 18:59:37: %UPGRADE-6-INFO: Upgrade disable redundancy forceswitch
*Nov 16 18:59:37: %UPGRADE-6-INFO: (*2/0) Upgrade processing is 10%
Ruijie#*Nov 16 18:59:39: %UPGRADE-6-INFO: (*2/0) Upgrade processing is 30%
*Nov 16 18:59:43: %UPGRADE-6-INFO: (*2/0) Upgrade get package from master device, wait a moment.....
*Nov 16 19:01:54: %UPGRADE-6-INFO: (*2/0) Upgrade check package md5 value, wait a moment
*Nov 16 19:02:04: %UPGRADE-6-INFO: (*2/0) Upgrade processing is 60%
*Nov 16 19:02:06: %UPGRADE-6-INFO: Upgrade processing is 10%
*Nov 16 19:02:08: %UPGRADE-6-INFO: Upgrade processing is 30%
*Nov 16 19:02:10: %UPGRADE-6-INFO: Upgrade check package md5 value, wait a moment
*Nov 16 19:02:12: %UPGRADE-6-INFO: (*2/0) Upgrade info [OK]
*Nov 16 19:02:12: %UPGRADE-6-INFO: (*2/0)      Rootfs
version[1.0.0.aca71d43->1.0.0.aca71d43]
*Nov 16 19:02:12: %UPGRADE-6-INFO: (*2/0) Reload system to take effect !
*Nov 16 19:02:21: %UPGRADE-6-INFO: Upgrade processing is 60%
*Nov 16 19:02:31: %UPGRADE-6-INFO: Upgrade info [OK]
*Nov 16 19:02:31: %UPGRADE-6-INFO:      Rootfs version[1.0.0.aca71d43->1.0.0.aca71d43]
*Nov 16 19:02:31: %UPGRADE-6-INFO: Reload system to take effect !
*Nov 16 19:02:32: %UPGRADE-6-INFO: Upgrade enable redundancy forceswitch
*Nov 16 19:02:32: %UPGRADE-6-INFO: Upgrade enable reload device
*Nov 16 19:02:32: %UPGRADE-6-INFO: Upgrade processing is 100%
*Nov 16 19:02:32: %UPGRADE-6-INFO: Upgrade finish
```

**Verification** Run the **show version detail** command to check whether the upgrade of a subsystem component is successful.

Run the **show component** command to check whether the upgrade of a feature component is successful.

**Prompt** The prompt message of successful running is displayed.

**Messages**

```
Upgrade info [OK];
```

The installation package is invalid or damaged and needs to be regained for upgrade command.

```
Invalid package file
```

The installation package is not available on the device and needs to be regained for upgrade command.

```
Device don't support
```

There is no need to upgrade the device.

```
The version in device is same
```

When there is insufficient space for upgrade, check USB flash disk attached on the device.

```
No enough space for decompress
```

## 14. OpenFlow Commands

### 14.1 of controller-ip

Use this command to enable OpenFlow.

**of controller-ip** *ip-address* [ **port** *port-id* ] [ **aux** ] **interface** [ *interface-id* ]

Use the **no** form of this command to disable OpenFlow.

**no of controller-ip** [ *ip-address* ]

| Parameter Description | Parameter                            | Description                                                                                                                                                                                                                                             |
|-----------------------|--------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <i>ip-address</i>                    | Controller IP address. If you configure the <b>no</b> form of this command without any parameter, all controllers are disabled. (OpenFlow1.3 supports connection to multiple controllers and OpenFlow1.0 supports connection to one single controller). |
|                       | <b>port</b> <i>port-id</i>           | Controller access port ID. The default for OpenFlow1.0 is 6633 and for OpenFlow1.3 is 6653.                                                                                                                                                             |
|                       | <b>aux</b>                           | Auxiliary switch (it takes effect for only OpenFlow1.3)                                                                                                                                                                                                 |
|                       | <b>Interface</b> <i>interface-id</i> | Interface ID, whether out-of-band MGMT interface or in-band physical port (some devices may not have MGMT interfaces).                                                                                                                                  |

**Command Mode** Global configuration mode

**Default** OpenFlow is disabled by default.

**Usage Guide** N/A

**Configuration Examples** The following example enables OpenFlow.

```
Ruijie(config)#of controller-ip 192.168.21.57 interface gigabitEthernet 0/1
```

The following example disables OpenFlow.

```
Ruijie#no of controller-ip
```

### 14.2 of mode

Use this command to configure the controller mode.

**of mode** [ **single** | **multiple** ]

Use the **no** form of this command to restore the default setting.

**no of mode**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|-----------------------|-----------|-------------|

|                      |                                                        |     |
|----------------------|--------------------------------------------------------|-----|
|                      | N/A                                                    | N/A |
| <b>Command Mode</b>  | Global configuration mode                              |     |
| <b>Default</b>       | The default mode is multiple.                          |     |
| <b>Usage Guide</b>   | Configure this command before enabling the controller. |     |
| <b>Configuration</b> | The following example enables the single mode.         |     |
| <b>Examples</b>      | <pre>Ruijie(config)#of mode single</pre>               |     |
|                      | The following example enables the multiple mode.       |     |
|                      | <pre>Ruijie(config)#of mode multiple</pre>             |     |
|                      | The following example restores the default setting.    |     |
|                      | <pre>Ruijie(config)#no of mode</pre>                   |     |

### 14.3 of packet table-lookup

Use this command to enable table-lookup mode or disable table-lookup mode.

**of packet table-lookup [ enable | disable ]**

**no of packet table-lookup**

|                              |                                                          |                    |
|------------------------------|----------------------------------------------------------|--------------------|
| <b>Parameter Description</b> | <b>Parameter</b>                                         | <b>Description</b> |
|                              | N/A                                                      | N/A                |
| <b>Command Mode</b>          | Global configuration mode                                |                    |
| <b>Default</b>               | The table-lookup mode is enabled by default.             |                    |
| <b>Usage Guide</b>           | N/A                                                      |                    |
| <b>Configuration</b>         | The following example enables the table-lookup mode.     |                    |
| <b>Examples</b>              | <pre>Ruijie(config)#of packet table-lookup enable</pre>  |                    |
|                              | The following example disables the table-lookup mode.    |                    |
|                              | <pre>Ruijie(config)#of packet table-lookup disable</pre> |                    |
|                              | The following example restores the default setting.      |                    |
|                              | <pre>Ruijie(config)#no of packet table-lookup</pre>      |                    |

### 14.4 of packet vlantag

Use this command to determine whether to contain the VLAN tag in the packet sent by the OpenFlow device.

**[ no ] of packet vlantag**



| Parameter Description | Parameter                                                                                       | Description |
|-----------------------|-------------------------------------------------------------------------------------------------|-------------|
|                       | N/A                                                                                             | N/A         |
| <b>Command Mode</b>   | Global configuration mode                                                                       |             |
| <b>Default</b>        | The VLAN tag is contained in the packet sent by the OpenFlow device by default.                 |             |
| <b>Usage Guide</b>    | N/A                                                                                             |             |
| <b>Configuration</b>  | The following example contains the VLAN tag in the packet sent by the OpenFlow device.          |             |
| <b>Examples</b>       | <pre>Ruijie(config)#of packet vlantag</pre>                                                     |             |
|                       | The following example does not contain the VLAN tag in the packet sent by the OpenFlow device.. |             |
|                       | <pre>Ruijie(config)#no of packet vlantag</pre>                                                  |             |

### 14.5 show of

Use this command to display the connection between the current device and the controller.

**show of**

| Parameter Description | Parameter                                                                                    | Description |
|-----------------------|----------------------------------------------------------------------------------------------|-------------|
|                       | N/A                                                                                          | N/A         |
| <b>Command Mode</b>   | Global configuration mode                                                                    |             |
| <b>Default</b>        | N/A                                                                                          |             |
| <b>Usage Guide</b>    | Use this command to display the OpenFlow version on the device.                              |             |
| <b>Configuration</b>  | The following example displays the connection between the current device and the controller. |             |
| <b>Examples</b>       | <pre>Ruijie#show of</pre>                                                                    |             |

### 14.6 show of flowtable

Use this command to display flow table entries of OpenFlow Device

**show of flowtable**

| Parameter Description | Parameter                 | Description |
|-----------------------|---------------------------|-------------|
|                       | N/A                       | N/A         |
| <b>Command Mode</b>   | Global configuration mode |             |

**Default** N/A

**Usage Guide** Running the **of controller-ip** command before configuring this command. Otherwise, the flow table entries are not displayed.

**Configuration** The following example display flow table entries.

**Examples**

```
Ruijie#show of flowtable
```

## 14.7 show of group

Use this command to display group information of OpenFlow device.

**show of group**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Command Mode** Global configuration mode

**Default** N/A

**Usage Guide** This command takes effect only for OpenFlow1.3.

**Configuration** The following example displays group information of OpenFlow device.

**Examples**

```
Ruijie(config)#show of group
```

## 14.8 show of mergedflow

Use this command to display merged entries of OpenFlow device.

**show of mergedflow**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Command Mode** Global configuration mode

**Default** N/A

**Usage Guide** This command takes effect only for OpenFlow1.3. See the **show of flowtable** command for parameter description.

**Configuration** The following example displays merged entries of OpenFlow device.

**Examples**

```
Ruijie(config)#show of mergedflow
```

### 14.9 show of meter

Use this command to display meter information of OpenFlow device.

**show of meter**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       |           | N/A         |

**Command Mode** Global configuration mode

**Default** N/A

**Usage Guide** This command takes effect only for OpenFlow1.3.

**Configuration** The following example displays meter information of OpenFlow device.

**Examples**

```
Ruijie(config)#show of meter
```

### 14.10 show of port

Use this command to display port information of OpenFlow device.

**show of port**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       |           | N/A         |

**Command Mode** Global configuration mode

**Default** N/A

**Usage Guide** Running the **of controller-ip** command before configuring this command. Otherwise, the port information is not displayed.

**Configuration** The following example displays port information of OpenFlow device.

**Examples**

```
Ruijie#show of port
```

### 14.11 show of mergedflow

Use this command to display merged flow information.

**show of mergeflow**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       |           | N/A         |

**Command Mode** Global configuration mode

**Default** N/A

**Usage Guide** This command is active only for OpenFlow1.3.

**Configuration** The following example displays merged flow information.

**Examples** `Ruijie(config)#show of mergedflow`



## Ethernet Configuration Commands

---

1. Interface Commands
2. MAC Address Commands
3. Aggregate Port Commands
4. VLAN Commands
5. Super-VLAN Commands
6. Private VLAN Commands
7. MSTP Commands
8. GVRP Commands
9. LLDP Commands
10. QinQ Commands
11. ERPS Commands

# 1 Interface Commands

## 1.1 bandwidth

Use this command to set the bandwidth on the interface. Use the **no** form of this command to restore the default setting.

**bandwidth** *kilobits*

**no bandwidth**

| Parameter Description | Parameter       | Description                                |
|-----------------------|-----------------|--------------------------------------------|
|                       | <i>kilobits</i> | Bandwidth per second, in the unit of Kbps. |

**Defaults** If this command is not configured on the interface, use the show interface command to display the default setting in privileged EXEC mode.

**Command Mode** Interface configuration mode

**Usage Guide** This command does not affect the actual bandwidth on the interface. Instead, it is used to display the system the bandwidth specification. By default, the bandwidth is determined by the actual link rate on the interface. It can be set by the user as well.

**Configuration Examples** The following example sets the bandwidth on the interface to 64 Kbps.

```
Ruijie(config)#interface gigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)# bandwidth 64
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 1.2 carrier-delay

Use this command to set the carrier delay on the interface. Use the no form of this command to restore the default value.

**carrier-delay** { [ *milliseconds* ] *num* | **up** [ *milliseconds* ] *num* **down** [ *milliseconds* ] *num*}

**no carrier-delay**

| Parameter Description | Parameter           | Description                                                                        |
|-----------------------|---------------------|------------------------------------------------------------------------------------|
|                       | <i>num</i>          | (Optional) in the range from 0 to 60 in the unit of seconds.                       |
|                       | <i>milliseconds</i> | (Optional) in the range from 0 to 60000 in the unit of milliseconds.               |
|                       | <b>up</b>           | (Optional) Configures the delay after which DCD changes from Down to Up in status. |
|                       | <b>down</b>         | (Optional) Configures the delay after which DCD changes from Up to Down in status. |

**Defaults** The default is 2 seconds.

**Command** Interface configuration mode

**Mode**

**Usage Guide** This parameter refers to the delay after which the carrier detection signal DCD of the interface link changes from the Down status to the Up status or vice versa. If the DCD changes within the delay, the system will ignore such changes without disconnecting the upper data link layer for renegotiation. If the DCD carrier is disconnected for a long time, the parameter should be set longer to accelerate route aggregation so that the routing table can be converged more quickly. On the contrary, if the DCD carrier interruption period is shorter than the time used for route aggregation, you should set the parameter to a higher value to avoid unnecessary route vibration.

**Configuration** The following example sets the carrier delay of serial interface to 5 seconds.

**Examples**

```
Ruijie(config)# interface gigabitethernet 1/1
Ruijie(config)# carrier-delay 5
```

The following example sets the carrier delay of serial interface to 100 milliseconds.

```
Ruijie(config)# interface GigabitEthernet 1/1
Ruijie(config-if-GigabitEthernet 1/1)#carrier-delay milliseconds 100
```

The following example sets the DCD delay from Down to Up in status to 100 milliseconds and from Up to Down to 200 milliseconds.

```
Ruijie(config)# interface GigabitEthernet 1/1
Ruijie(config-if-GigabitEthernet 1/1)# carrier-delay up milliseconds 100 down
milliseconds 200
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

### 1.3 clear counters

Use this command to clear the counters on the specified interface.

**clear counters** [*interface-type interface-number*]

| Parameter Description | Parameter                                        | Description                     |
|-----------------------|--------------------------------------------------|---------------------------------|
|                       | <i>interface-type</i><br><i>interface-number</i> | Interface type and interface ID |

**Defaults** N/A

**Command Mode** Privileged EXEC mode.

**Usage Guide** In the privileged EXEC mode, use the **show interfaces** command to display the counters or the **clear counters** command to clear the counters. If the interface is not specified, the counters on all interfaces will be cleared.

**Configuration** The following example clears the counters on interface gigabitethernet 1/1.

**Examples** Ruijie# clear counters gigabitethernet 1/1

| Related Commands | Command                | Description                         |
|------------------|------------------------|-------------------------------------|
|                  | <b>show interfaces</b> | Displays the interface information. |

**Platform Description** N/A

## 1.4 clear interface

Use this command to reset the interface.

**clear interface** *interface-type interface-number*

| Parameter Description | Parameter                                        | Description                     |
|-----------------------|--------------------------------------------------|---------------------------------|
|                       | <i>interface-type</i><br><i>interface-number</i> | Interface type and interface ID |

**Defaults** N/A

**Command Mode** Privileged EXEC mode.

**Usage Guide** This command is only used on the switch port, member port of the L2 Aggregate port, routing port, and member port of the L3 aggregate port. This command is equal to the **shutdown** and **no shutdown** commands.



**Configuration** The following example resets the interface gigabitethernet 1/1.

**Examples**

```
Ruijie# clear interface gigabitethernet 1/1
```

| Related Commands | Command | Description     |
|------------------|---------|-----------------|
|                  |         | <b>shutdown</b> |

**Platform** N/A

**Description**

## 1.5 description

Use this command to configure the alias of interface. Use the **no** form of this command to restore the default setting.

**description** *string*

**no description**

| Parameter Description | Parameter | Description   |
|-----------------------|-----------|---------------|
|                       |           | <i>string</i> |

**Defaults** No alias is configured by default.

**Command Mode** Interface configuration mode.

**Usage Guide** Use **show interfaces** to display the interface information, including the alias.

**Configuration** The following example configures the alias of interface.

**Examples**

```
Ruijie(config)# interface gigabitethernet 1/1
Ruijie(config-if)# description GBIC-1
```

| Related Commands | Command | Description            |
|------------------|---------|------------------------|
|                  |         | <b>show interfaces</b> |

**Platform** N/A

**Description**

## 1.6 duplex

Use this command to specify the duplex mode for the interface. Use the **no** form of this command to

restore the default setting.

**duplex { auto | full | half }**

**no duplex**

**Parameter  
Description**

| Parameter   | Description                               |
|-------------|-------------------------------------------|
| <b>auto</b> | Self-adaptive full duplex and half duplex |
| <b>full</b> | Full duplex                               |
| <b>half</b> | Half duplex                               |

**Defaults** The default is **auto**,

**Command  
Mode** Interface configuration mode.

**Usage Guide** The duplex mode is associated with the interface type. Use **show interfaces** to display the duplex mode of the interface

**Configuration** The following example specifies the duplex mode for the interface.

**Examples**

```
Ruijie(config-if)# duplex full
```

**Related  
Commands**

| Command                | Description                         |
|------------------------|-------------------------------------|
| <b>show interfaces</b> | Displays the interface information. |

**Platform  
Description** N/A

## 1.7 errdisable recovery

Use this command to recover the interface in violation.

**errdisable recovery [ interval time ]**

**Parameter  
Description**

| Parameter   | Description                                                                  |
|-------------|------------------------------------------------------------------------------|
| <i>time</i> | Time for the command to take effect. The range is from 30 to 86,400 seconds. |

**Defaults** N/A

**Command  
Mode** Interface configuration mode.

**Usage Guide** Use the command to recover the port that triggers violation after being configured with the **violation**

**shutdown** command.

**Configuration** The following example recovers the violation interface gigabitethernet 1/1.

**Examples**

```
Ruijie(config)# interface gigabitethernet 1/1
Ruijie(config-if)# errdisable recovery
```

**Related  
Commands**

| Command                                            | Description                                         |
|----------------------------------------------------|-----------------------------------------------------|
| <b>switchport port-security violation shutdown</b> | Configures the port security violation to shutdown. |

**Platform** N/A.

**Description**

## 1.8 fec mode

Use this command to enable or disable the FEC function.

**fec mode {rs | base-r | none | auto}**

Use the **no** form of this command to restore the default value.

**no fec mode**

**Parameter  
Description**

| Parameter     | Description                                                                                                                                   |
|---------------|-----------------------------------------------------------------------------------------------------------------------------------------------|
| <b>rs</b>     | Indicates the RS mode for enabling the FEC function.                                                                                          |
| <b>base-r</b> | Indicates the base-r mode for enabling the FEC function.                                                                                      |
| <b>none</b>   | Disables the FEC function.                                                                                                                    |
| <b>auto</b>   | Indicates FEC function self-adaption, that is, the system determines whether to enable the FEC function based on the optical module and rate. |

**Defaults** The default configuration depends on the product model.

**Command  
Mode** Interface configuration mode

**Default Level** 14

**Usage Guide** When one end runs FEC function, the other end should enable it, too.  
On the premise of not affecting the negotiation status of the two ends, we suggest you NOT to:  
enable FEC function on the QSFP28-100G-LR4 optical module, on which FEC function is disabled by default.  
disable FEC function on QSFP28 modules (except QSFP28-100G-LR4), on which FEC function is enabled by default.

**Configuration** The following example forcibly enables the FEC function on Interface HundredGigabitEthernet 1/1.

**Examples**

```
Ruijie(config)# interface HundredGigabitEthernet 1/1
Ruijie(config-if- HundredGigabitEthernet 1/1)# fec mode rs
```

The following example forcibly enables the FEC function on Interface TFGigabitEthernet 2/1.

```
Ruijie(config)# interface TFGigabitEthernet 2/1
Ruijie(config-if- TFGigabitEthernet 2/1)# fec mode base-r
```

## 1.9 fiber antifake enable

Use this command to enable or disable the optical module antifake detection. Use the **no** form of this command to restore the default setting.

**fiber antifake {ignore | enable}**

**no fiber antifake enable**

**Parameter  
Description**

| Parameter     | Description                                     |
|---------------|-------------------------------------------------|
| <b>ignore</b> | Disables the optical module antifake detection. |
| <b>enable</b> | Enables the optical module antifake detection.  |

**Defaults** By default, optical module antifake detection is disabled.

**Command** Global configuration mode

**Mode**

**Usage Guide** If the optical module antifake detection is enabled by default, when a non-original optical module is inserted, alarm logs are printed.

**Configuration** The following example enables the optical module antifake detection.

**Examples**

```
Ruijie(config)# fiber antifake enable
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 1.10 flowcontrol

Use this command to enable or disable the flow control. Use the **no** form of this command to restore the default setting.

**flowcontrol { auto | off | on}**

**no flowcontrol****Parameter  
Description**

| Parameter   | Description                       |
|-------------|-----------------------------------|
| <b>auto</b> | Self-negotiates the flow control. |
| <b>off</b>  | Disables the flow control.        |
| <b>on</b>   | Enables the flow control.         |

**Defaults** This function is disabled by default.

**Command  
Mode** Interface configuration mode.

**Usage Guide** Use the **show interfaces** command to display the flow control configuration.

**Configuration** The following example enables flow control on fastEthernet port 1/1.

**Examples**

```
Ruijie(config)# interface gigabitethernet 1/1
Ruijie(config-if)# flowcontrol on
```

**Related  
Commands**

| Command                | Description                         |
|------------------------|-------------------------------------|
| <b>show interfaces</b> | Displays the interface information. |

**Platform  
Description** N/A

## 1.11 interface

Use this command to enter the interface configuration mode.

**interface** *interface-type* *interface-number*

**Parameter  
Description**

| Parameter               | Description         |
|-------------------------|---------------------|
| <i>interface-type</i>   | The interface type. |
| <i>interface-number</i> | The interface ID.   |

**Defaults** N/A

**Command  
Mode** Global configuration mode

**Usage Guide** This command is used to enter interface configuration mode. The user can modify the interface configuration next,

**Configuration** The following example enters configuration mode on Aggregateport 1.

**Examples**

```
Ruijie(config)# interface Aggregateport 1
Ruijie(config-if-Aggregateport 1)#
```

The following example enters configuration mode on GigabitEthernet 1/2.

```
Ruijie(config)# interface GigabitEthernet 1/2
Ruijie(config-if-GigabitEthernet 1/2)#
```

The following example configuration mode on VLAN 1.

```
Ruijie(config)# interface vlan 1
Ruijie(config-if-VLAN 1)#
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 1.12 interface range

Use this command to enter interface configuration mode on multiple interfaces.

**interface range** { *port-range* | **macro** *macro\_name* }

Use this command to define the macro name of the **interface range** command.

**define interface-range** *macro\_name*

**Parameter  
Description**

| Parameter                      | Description                                                                                                                                                                                      |
|--------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>port-range</i>              | The interface type and ID range, entered in the form of <i>interface-type slot-number/interface-number</i> . The interface can be either an Ethernet physical interface or a loopback interface. |
| <b>macro</b> <i>macro_name</i> | The macro name which represents the interface range.                                                                                                                                             |

**Defaults** The **interface range** command is disabled by default.

**Command  
Mode** Global configuration mode

**Usage Guide** Use the define interface-range command to define a range of interfaces as the macro name and then use the **interface range** macro *macro\_name* command to enter interface configuration mode on multiple interfaces.

**Configuration  
Examples** The following example enters interface configuration mode on multiple interfaces by setting the interface range.

```
Ruijie(config)# interface range gigabitEthernet 0/0, 0/2
```

```
Ruijie(config-if-range)# bandwidth 100
```

The following example enters interface configuration mode on multiple interfaces by defining the macro name.

```
Ruijie(config)# define interface-range routel gigabitEthernet 0/0-2
Ruijie(config)# interface range macro routel
Ruijie(config-if-range)# bandwidth 100
```

#### Related Commands

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

#### Platform

N/A

#### Description

## 1.13 load-interval

Use this command to set the interval for calculating load on the interface. Use the **no** form of this command to restore the default setting.

**load-interval** *seconds*

**no load-interval**

#### Parameter Description

| Parameter      | Description                                        |
|----------------|----------------------------------------------------|
| <i>seconds</i> | In the range from 5 to 600 in the unit of seconds. |

#### Defaults

The default is 10.

#### Command Mode

Interface configuration mode

#### Usage Guide

This command is used to set the interval for calculating load on the interface. In general, the numbers of incoming and outgoing packets and bytes are calculated every 10 seconds. For example, if the parameter is set to 180 seconds, the following outcome is displayed when the **show interface gigabitEthernet 0/1** command is run.

```
3 minutes input rate 15 bits/sec, 0 packets/sec
3 minutes output rate 14 bits/sec, 0 packets/sec
```

#### Configuration Examples

The following example sets the interval for calculating load on interface GigabitEthernet 0/1 to 180 seconds.

```
Ruijie(config)# interface gigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)# load-interval 180
```

#### Related Commands

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 1.14 logging

Use this command to print information on the interface.

**logging** [ **link-updown** | **error-frame** | **link-dither** ]

**Parameter  
Description**

| Parameter          | Description                           |
|--------------------|---------------------------------------|
| <b>link-updown</b> | Prints the status change information. |
| <b>error-frame</b> | Prints the error frame information.   |
| <b>link-dither</b> | Prints the oscillation information.   |

**Defaults** This function is enabled by default.

**Command  
Mode** Global configuration mode

**Usage Guide** N/A

**Configuration** The following example prints information on the interface..

**Examples**

```
Ruijie(config)# logging link-updown
Ruijie(config)# logging error-frame
Ruijie(config)# logging link-dither
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 1.15 mtu

Use this command to set the MTU supported on the interface.

**mtu** *num*

**Parameter  
Description**

| Parameter  | Description                                     |
|------------|-------------------------------------------------|
| <i>num</i> | 64 to 9216 (or 65536, which varies by products) |



- Defaults** The default is 1500.
- Command** Interface configuration mode.
- Mode**
- Usage Guide** This command is used to set the maximum transmission unit (MTU) supported on the interface.

**Configuration** The following example sets the MTU supported on interface `gigabitethernet 1/1` to 9000.

**Examples**

```
Ruijie(config)# interface GigabitEthernet 1/1
Ruijie(config-if-GigabitEthernet)# mtu 9000
```

| Related Commands | Command | Description     |
|------------------|---------|-----------------|
|                  |         | show interfaces |

**Platform** N/A

**Description**

## 1.16 negotiation mode

Use this command to enable or disable auto-negotiation mode. Use the **no** form of this command to restore the default setting.

**negotiation mode { on | off }**  
**no negotiation mode**

| Parameter Description | Parameter  | Description                |
|-----------------------|------------|----------------------------|
|                       |            | <b>on</b>                  |
|                       | <b>off</b> | Disables auto-negotiation. |

**Defaults** This function is disabled by default.

**Command** Interface configuration mode

**Mode**

**Usage Guide** In general, the auto-negotiation status is determined by interface speed, duplex, and auto-negotiation factor mode.

**Configuration** The following example enables auto-negotiation mode on interface `GigabitEthernet 1/1`.

**Examples**

```
Ruijie(config)# interface GigabitEthernet 1/1
Ruijie(config-if-GigabitEthernet 1/1)# negotiation mode on
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  |         |             |

|     |     |
|-----|-----|
| N/A | N/A |
|-----|-----|

**Platform** N/A

**Description**

## 1.17 physical-port dither protect

Use this command to enable oscillation protection on the port.

**physical-port dither protect**


| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** This function is enabled by default.

**Command** Global configuration mode

**Mode**

**Usage Guide** After you configure the **physical-port dither protect** command, the port will be shut down when the oscillation occurs for certain times.

 If oscillation occurs on the port for 6 times within 2 seconds, a syslog will be printed. If syslog is printed for 10 consecutive times, the port will be shut down. If oscillation occurs on the port for over 10 times within 10 seconds, a syslog will be printed but the port will not be shut down.

**Configuration** The following example enables oscillation protection on the port.

**Examples** Ruijie(config)# physical-port dither protect

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 1.18 port speed-mode

Use this command to configure the work rate mode of a 25 Gbps port.

**port speed-mode {25G | 10G }**

| Parameter | Parameter | Description |
|-----------|-----------|-------------|
|-----------|-----------|-------------|

| Description |                                                           |
|-------------|-----------------------------------------------------------|
| <b>25G</b>  | Indicates that a 25 Gbps port works in 25 Gbps rate mode. |
| <b>10G</b>  | Indicates that a 25 Gbps port works in 10 Gbps rate mode. |

**Defaults** A 25 Gbps port works in 25 Gbps rate mode by default.

**Command Mode** Interface configuration mode

**Default Level** 14

**Usage Guide**

1. Only 25 Gbps ports support this configuration. The four consecutive 25 Gbps ports of the same slot need to be set to work in the same rate mode.
2. Only 25 Gbps ports that work in the same rate mode can be added to the same aggregation group.
3. The **default interface** command will not clear the **port speed-mode** configuration of 25 Gbps ports.

**Configuration Examples** The following example configures Interfaces TFGigabitEthernet 2/1 through TFGigabitEthernet 2/4 to work in 10 Gbps rate mode.

```
Ruijie(config)# interface TFGigabitEthernet 2/2
Ruijie(config-if-TFGigabitEthernet 2/2)# port speed-mode 10G
Warning: Ports Tf2/1 - Tf2/4 will be set speed mode 10G. Continue? [Y/N]:Y
Ruijie(config-if-TFGigabitEthernet 2/2)# end
```

## 1.19 protected-ports route-deny

Use this command to configure L3 routing between the protected ports.

### protected-ports route-deny

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** This function is disabled by default..

**Command Mode** Global configuration mode.

**Usage Guide** The ports that are set as the protected ports can route on L3. Use this command to deny the L3 communication between protected ports. Use the **show running-config** command to display configuration.

**Configuration Examples** The following example configures L3 routing between the protected ports.

```
Ruijie(config)# protected-ports route-deny
```

| Related Commands | Command | Description         |
|------------------|---------|---------------------|
|                  |         | show running-config |

**Platform** N/A

**Description**

## 1.20 show interfaces

Use this command to display the interface information and optical module information.

**show interfaces** [ *interface-type interface-number* ] [ **description** [up | down] | **switchport** | **trunk** ]

| Parameter Description | Parameter          | Description                                                  |
|-----------------------|--------------------|--------------------------------------------------------------|
|                       |                    | <i>interface-id</i><br><i>interface-number</i>               |
|                       | <b>description</b> | The description of the interface, including the link status. |
|                       | <b>switchport</b>  | Layer 2 interface information.                               |
|                       | <b>trunk</b>       | Trunk port, applicable for physical port and aggregate port. |

**Defaults**

**Command** Privileged EXEC mode.

**Mode**

**Usage Guide** This command is used to show all basic information if no parameter is specified.

**Configuration** The following example displays the interface information when the Gi0/1 is a Trunk port.

**Examples**

```
SwitchA#show interfaces gigabitEthernet 0/1
Index(dec):1 (hex):1
GigabitEthernet 0/1 is DOWN , line protocol is DOWN
Hardware is Broadcom 5464 GigabitEthernet
Interface address is: no ip address
  MTU 1500 bytes, BW 1000000 Kbit
  Encapsulation protocol is Bridge, loopback not set
  Carrier delay is 2 sec
  RXload is 1 ,Txload is 1
  Queueing strategy: FIFO
    Output queue 0/0, 0 drops;
    Input queue 0/75, 0 drops
Switchport attributes:
  interface's description:""
```

```

medium-type is copper
lastchange time:0 Day: 0 Hour: 0 Minute:13 Second
Priority is 0
admin duplex mode is AUTO, oper duplex is Unknown
admin speed is AUTO, oper speed is Unknown
flow receive control admin status is OFF,flow send control admin status is OFF,flow
receive control oper status is Unknown,flow send control oper status is Unknown
broadcast Storm Control is OFF,multicast Storm Control is OFF,unicast Storm Control
is OFF
Port-type: trunk
Native vlan:1
Allowed vlan lists:1-4094
Active vlan lists:1, 3-4
5 minutes input rate 0 bits/sec, 0 packets/sec
5 minutes output rate 0 bits/sec, 0 packets/sec
0 packets input, 0 bytes, 0 no buffer, 0 dropped
Received 0 broadcasts, 0 runts, 0 giants
0 input errors, 0 CRC, 0 frame, 0 overrun, 0 abort
0 packets output, 0 bytes, 0 underruns , 0 dropped
0 output errors, 0 collisions, 0 interface resets

```

The following example displays the interface information when the Gi0/1 is an Access port.

```

SwitchA#show interfaces gigabitEthernet 0/1
Index(dec):1 (hex):1
GigabitEthernet 0/1 is DOWN , line protocol is DOWN
Hardware is Broadcom 5464 GigabitEthernet
Interface address is: no ip address
MTU 1500 bytes, BW 1000000 Kbit
Encapsulation protocol is Bridge, loopback not set
Carrier delay is 2 sec
RXload is 1 ,Txload is 1
Queueing strategy: FIFO
Output queue 0/0, 0 drops;
Input queue 0/75, 0 drops
Switchport attributes:
interface's description:""
medium-type is copper
lastchange time:0 Day: 0 Hour: 0 Minute:13 Second
Priority is 0
admin duplex mode is AUTO, oper duplex is Unknown
admin speed is AUTO, oper speed is Unknown
flow receive control admin status is OFF,flow send control admin status is
OFF,flow receive control oper status is Unknown,flow send control oper status is
Unknown

```

```
broadcast Storm Control is OFF,multicast Storm Control is OFF,unicast Storm Control
is OFF
Port-type: access
Vlan id : 2
  5 minutes input rate 0 bits/sec, 0 packets/sec
  5 minutes output rate 0 bits/sec, 0 packets/sec
    0 packets input, 0 bytes, 0 no buffer, 0 dropped
    Received 0 broadcasts, 0 runts, 0 giants
    0 input errors, 0 CRC, 0 frame, 0 overrun, 0 abort
    0 packets output, 0 bytes, 0 underruns , 0 dropped
0 output errors, 0 collisions, 0 interface resets
```

The following example displays the layer-2 interface information when the Gi0/1 is a Hybrid port.

```
SwitchA#show interfaces gigabitEthernet 0/1
Index(dec):1 (hex):1
GigabitEthernet 0/1 is DOWN , line protocol is DOWN
Hardware is Broadcom 5464 GigabitEthernet
Interface address is: no ip address
  MTU 1500 bytes, BW 1000000 Kbit
  Encapsulation protocol is Bridge, loopback not set
  Keepalive interval is 10 sec , set
  Carrier delay is 2 sec
  RXload is 1 ,Txload is 1
  Queueing strategy: FIFO
    Output queue 0/0, 0 drops;
    Input queue 0/75, 0 drops
  Switchport attributes:
    interface's description:""
    medium-type is copper
    lastchange time:0 Day: 0 Hour: 0 Minute:13 Second
    Priority is 0
    admin duplex mode is AUTO, oper duplex is Unknown
    admin speed is AUTO, oper speed is Unknown
    flow receive control admin status is OFF,flow send control admin status is
OFF,flow receive control oper status is Unknown,flow send control oper status is
Unknown
broadcast Storm Control is OFF,multicast Storm Control is OFF,unicast Storm Control
is OFF
Port-type: hybrid
Tagged vlan id:2
Untagged vlan id:none
  5 minutes input rate 0 bits/sec, 0 packets/sec
  5 minutes output rate 0 bits/sec, 0 packets/sec
    0 packets input, 0 bytes, 0 no buffer, 0 dropped
```

```

Received 0 broadcasts, 0 runts, 0 giants
0 input errors, 0 CRC, 0 frame, 0 overrun, 0 abort
0 packets output, 0 bytes, 0 underruns , 0 dropped
0 output errors, 0 collisions, 0 interface resets
    
```

The following example displays the layer-2 information of the Gi0/1.

```

Ruijie# show interfacesgigabitEthernet 0/1 switchport
Interface Switchport ModeAccess Native Protected VLAN lists
-----
GigabitEthernet 0/1 enabled Access 11 Disabled ALL
    
```

**Related  
Commands**

| Command                          | Description                                                                                          |
|----------------------------------|------------------------------------------------------------------------------------------------------|
| <b>duplex</b>                    | Duplex                                                                                               |
| <b>flowcontrol</b>               | Flow control status.                                                                                 |
| <b>interface gigabitEthernet</b> | Selects the interface and enter the interface configuration mode.                                    |
| <b>interface aggregateport</b>   | Creates or accesses the aggregate port, and enters the interface configuration mode.                 |
| <b>interface vlan</b>            | Creates or accesses the switch virtual interface (SVI), and enters the interface configuration mode. |
| <b>shutdown</b>                  | Disables the interface.                                                                              |
| <b>speed</b>                     | Configures the speed on the port.                                                                    |
| <b>switchport priority</b>       | Configures the default 802.1q interface priority.                                                    |
| <b>switchport protected</b>      | Configures the interface as a protected port.                                                        |

**Platform** N/A

**Description**

## 1.21 show interfaces counters

Use this command to display the received and transmitted packet statistics.

```

show interfaces [ interface-type interface-number ] counters [ increment | drops | errors | rate | summary ] [ up | down ]
    
```

**Parameter  
Description**

| Parameter                                        | Description                                                               |
|--------------------------------------------------|---------------------------------------------------------------------------|
| <i>interface-type</i><br><i>interface-number</i> | (Optional) The interface type and ID.                                     |
| <b>increment</b>                                 | Displays the packet statistics increased during the last sample interval. |
| <b>drops</b>                                     | Displays dropped packet statistics.                                       |
| <b>errors</b>                                    | Displays error packet statistics.                                         |

|                |                                                  |
|----------------|--------------------------------------------------|
| <b>rate</b>    | Displays packet receiving and transmitting rate. |
| <b>summary</b> | Displays packet statistics summary.              |
| <i>up</i>      | (Optional) Displays the port up statistics.      |
| <i>down</i>    | (Optional) Displays the port down statistics.    |

**Defaults** N/A

**Command** Any CLI mode

**Mode**

**Usage Guide** If you do not specify an interface, the packet statistics on all interfaces are displayed.

**Configuration** The following example displays packet statistics on interface GigabitEthernet 0/1.

**Examples**


```
Ruijie#show interfaces GigabitEthernet 0/1 counters
Interface : GigabitEthernet 0/1
5 minute input rate : 9144 bits/sec, 9 packets/sec
5 minute output rate : 1280 bits/sec, 1 packets/sec
Rxload           : 1%
InOctets         : 17310045
InPkts           : 1000 (Unicast: 10%, Multicast: 10%, Broadcast: 80%)
InUcastPkts      : 100
InMulticastPkts  : 100
InBroadcastPkts  : 800
Txload           : 1%
OutOctets        : 1282535
OutPkts          : 1000 (Unicast: 10%, Multicast: 10%, Broadcast: 80%)
OutUcastPkts     : 100
OutMulticastPkts : 100
OutBroadcastPkts : 800
Undersize packets : 0
Oversize packets : 0
collisions       : 0
Fragments        : 0
Jabbers          : 0
CRC alignment errors : 0
AlignmentErrors  : 0
FCSErrors        : 0
dropped packet events (due to lack of resources): 0
packets received of length (in octets):
 64:46264
 65-127: 47427
128-255: 3478
256-511: 658
512-1023: 18016
```



```

1024-1518: 125
Packet increment in last sampling interval(5 seconds):
  InOctets           : 10000
  InPkts             : 1000(Unicast: 10%, Multicast: 10%, Broadcast: 80%)
  InUcastPkts       : 100
  InMulticastPkts   : 100
  InBroadcastPkts   : 800
  OutOctets         : 10000
  OutPkts           : 1000(Unicast: 10%, Multicast: 10%, Broadcast: 80%)
  OutUcastPkts      : 100
  OutMulticastPkts  : 100

```

-  Rxload refers to the receive bandwidth usage and Txload refers to the Tx bandwidth usage. InPkts is the total number of receive unicast, multicast and broadcast packets. OutPkts is the total number of transmit unicast, multicast and broadcast packets. Packet increment in last sampling interval (5 seconds) represents the packet statistics increased during the last sample interval (5 seconds).

The following example displays the packet statistics on interface GigabitEthernet 0/1 increased during the last sample interval.

```

Ruijie#show interfaces GigabitEthernet 0/1 counters increment
Interface : GigabitEthernet 0/1
Packet increment in last sampling interval(5 seconds):
  InOctets           : 10000
  InPkts             : 1000(Unicast: 10%, Multicast: 10%, Broadcast: 80%)
  InUcastPkts       : 100
  InMulticastPkts   : 100
  InBroadcastPkts   : 800
  OutOctets         : 10000
  OutPkts           : 1000(Unicast: 10%, Multicast: 10%, Broadcast: 80%)
  OutUcastPkts      : 100
  OutMulticastPkts  : 100

```

The following example displays error packet statistics on interface GigabitEthernet 0/1.

```

Ruijie#show interfaces GigabitEthernet 0/1 counters increment
Interface  UnderSize           OverSize           Collisions
Fragments
-----
-----
Gi0/1      0                   0                   0                   0
Interface  Jabbers             CRC-Align-Err     Align-Err
FCS-Err
-----
-----
Gi0/1      0                   0                   0                   0

```

-  UnderSize is the number of valid packets smaller than 64 bytes.

OverSize is the number of valid packets smaller than 1518 bytes.

Collisions is the number of colliding transmit packets.

Fragments is the number of packets with CRC error or frame alignment error which are smaller than 64 bytes.

Jabbers is the number of packets with CRC error or frame alignment error which are smaller than 1518 bytes.

CRC-Align-Err is the number of receive packets with CRC error.

Align\_Err is the number of receive packets with frame alignment error.

FCS-Err is the number of receive packets with FCS error.

The following example displays packet receiving and transmitting rate on interface GigabitEthernet 0/1.

```
Ruijie#show interface gigabitEthernet 0/1 counters rate
Interface      Sampling Time      Input Rate          Input Rate
Output Rate    Output Rate
                (bits/sec)         (packets/sec)
(bits/sec)     (packets/sec)
-----
Gi0/1          5 seconds          23391              23
124            0
```

**i** Sampling Time is the time when packets are sampled. Input rate is packet receiving rate and Output rate is packet transmitting rate.

The following example displays packet statistics summary on interface GigabitEthernet 0/1.

```
Ruijie#show interface gigabitEthernet 0/1 counters summary
Interface      InOctets           InUcastPkts        InMulticastPkts
InBroadcastPkts
-----
Gi0/1          1475788005         1389               45880503
11886621
Interface      OutOctets           OutUcastPkts        OutMulticastPkts
OutBroadcastPkts
-----
Gi0/1          6667915            6382               31629
13410
```

**i** InOctets is the total number of packets received on the interface. InUcastPkts is the number of unicast packets received on the interface. InMulticastPkts is the number of multicast packets received on the interface. InBroadcastPkts is the number of broadcast packets received on the interface.

OutOctets is the total number of packets transmitted on the interface. OutUcastPkts is the number of unicast packets transmitted on the interface. OutMulticastPkts is the number of multicast packets transmitted on the interface. OutBroadcastPkts is the number of broadcast

packets transmitted on the interface.

#### Related Commands

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

#### Platform

N/A

#### Description

## 1.22 show interfaces link-state-change statistics

Use this command to display the link state change statistics, including the time and count.

**show interfaces** [ *interface-type interface-number* ] **link-state-change statistics**

#### Parameter Description

| Parameter               | Description                |
|-------------------------|----------------------------|
| <i>interface-type</i>   | The interface type and ID. |
| <i>interface-number</i> |                            |

#### Defaults

N/A

#### Command Mode

Privileged EXEC mode

#### Usage Guide

If you do not specify an interface, the link state statistics of all interfaces are displayed.

#### Configuration Examples

The following example displays the link state statistics of interface GigabitEthernet 0/1.

```
Ruijie#show int link-state-change statistics
Interface      Link state  Link state change times  Last change time
Link-dither begin  Link-dither end
-----
-----
Te0/1          down       0                          2018-05-05 11:07:45  none
none
```

| Interface               | Description                                                                           |
|-------------------------|---------------------------------------------------------------------------------------|
| Link state change times | The count of link state change.                                                       |
| Last change time        | The time when the last link state change occurs.                                      |
| Link-dither begin       | The time when the last frequent dithers begin.<br>"None" indicates no dither happens. |

|                 |                                                                                  |
|-----------------|----------------------------------------------------------------------------------|
|                 | Frequent dithers refer to six dithers happening within 2s.                       |
| Link-dither end | The time when the last frequent dithers end. "None" indicates no dither happens. |

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A**Description**

## 1.23 show interfaces status

Use this command to display interface status information.

**show interfaces** [ *interface-type interface-number* ] **status**

**Parameter Description**

| Parameter                                        | Description                                                        |
|--------------------------------------------------|--------------------------------------------------------------------|
| <i>interface-type</i><br><i>interface-number</i> | The interface type and ID.                                         |
| <b>status</b>                                    | Displays interface status information, including speed and duplex. |

**Defaults** N/A**Command** Privileged EXEC mode**Mode****Usage Guide** If you do not specify an interface, the status information of all interfaces is displayed.**Configuration** The following example displays the status information of interface GigabitEthernet 0/1.**Examples**

```
Ruijie#show interfaces GigabitEthernet 0/1 status
Interface          Status      Vlan    Duplex  Speed  Type
-----
GigabitEthernet 0/1  up         1       Full   1000M  copper
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A**Description**

## 1.24 show interfaces status err-disable

Use this command to display the interface violation status.

**show interfaces** [ *interface-type interface-number* ] **status err-disable**

| Parameter Description | Parameter               | Description                           |
|-----------------------|-------------------------|---------------------------------------|
|                       | <i>interface-type</i>   | (Optional) The interface type and ID. |
|                       | <i>interface-number</i> |                                       |

### Defaults


**Command Mode** Any CLI mode

**Usage Guide** If you do not specify an interface, violation status of all interfaces is displayed.

**Configuration Examples** The following example displays the violation status of interface GigabitEthernet 0/1.

```
Ruijie#show interface gigabitEthernet 0/1 status err-disabled
```

```
Interface                Status          Reason
-----
GigabitEthernet 0/1      err-disabled    BPDU Guard
```

 The violation status is displayed as **err-disabled**.

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 1.25 show interfaces transceiver

Use this command to display transceiver information of the interface.

**show interfaces** [ *interface-type interface-number* ] **transceiver** [ **alarm** | **diagnosis** ]

| Parameter Description | Parameter               | Description                                                         |
|-----------------------|-------------------------|---------------------------------------------------------------------|
|                       | <i>interface-type</i>   | The interface type and ID.                                          |
|                       | <i>interface-number</i> |                                                                     |
|                       | <b>transceiver</b>      | Displays the transceiver information.                               |
|                       | <b>alarm</b>            | Displays the alarm message of the transceiver. If there is no alarm |

|                  |                                                        |
|------------------|--------------------------------------------------------|
|                  | message, it is displayed as None.                      |
| <b>diagnosis</b> | Displays the diagnostic parameters of the transceiver. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** If you do not specify an interface, the transceiver information of all interfaces is displayed.

**Configuration Examples** The following example displays the transceiver information of interface GigabitEthernet 5/4.

```
Ruijie#show interfaces GigabitEthernet 5/4 transceiver
Transceiver Type      : 1000BASE-SX-SFP
Connector Type        : LC
Wavelength(nm)       : 850
Transfer Distance     :
    50/125 um OM2 fiber
    -- 550m
    62.5/125 um OM1 fiber
    -- 270m
Digital Diagnostic Monitoring : YES
Vendor Serial Number   : 101680093602489
```

The following example displays the alarm message of the transceiver of interface GigabitEthernet 5/4.

```
Ruijie#show interfaces GigabitEthernet 5/4 transceiver alarm
gigabitEthernet 5/4 transceiver current alarm information:
RX loss of signal
```

The following example displays the diagnostic parameters of the transceiver of interface GigabitEthernet 5/4.

```
Ruijie#show interfaces GigabitEthernet 5/4 transceiver diagnosis
Current diagnostic parameters[AP:Average Power]:
Temp(Celsius) Voltage(V) Bias(mA) RX power(dBm) TX
power(dBm)
38 (OK)          3.20 (OK)          0.04 (OK)
-40.00 (alarm) [AP] -40.00 (alarm)
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A

## 1.26 show interfaces usage

Use this command to display bandwidth usage of the interface.

**show interfaces** [ *interface-type interface-number* ] **usage** [ *up | down* ]

| Parameter Description | Parameter                                        | Description                                   |
|-----------------------|--------------------------------------------------|-----------------------------------------------|
|                       | <i>interface-type</i><br><i>interface-number</i> | (Optional) The interface type and ID.         |
|                       | <i>up</i>                                        | (Optional) Displays the port up statistics.   |
|                       | <i>down</i>                                      | (Optional) Displays the port down statistics. |

**Defaults** N/A


**Command Mode** Any CLI mode

**Usage Guide** If you do not specify an interface, the bandwidth usage of all interfaces is displayed. Bandwidth refers to the actual link bandwidth rather than the *bandwidth* parameter configured on the interface.

**Configuration Examples** The following example displays bandwidth usage of interface GigabitEthernet 0/1.

```

Interface           Bandwidth   Average Usage   Output Usage
Input Usage
-----
GigabitEthernet 0/0      1000 Mbit    0.002822759%   0.001183280%
0.004462237%
```

 Bandwidth refers to the interface link bandwidth, the maximum speed of link. Average Usage refers to the current usage.

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 1.27 shutdown

Use this command to disable an interface. Use the **no** form of this command to enable a disabled port.

**shutdown**


**no shutdown**

| Parameter<br>Description | Parameter | Description |
|--------------------------|-----------|-------------|
|                          |           | N/A         |

**Defaults** By default, the administrative status of an interface is Up.

**Command Mode** Interface configuration mode

**Usage Guide** Use this command to stop the forwarding on the interface (Gigabit Ethernet interface, Aggregate port or SVI). You can enable the port with the **no shutdown** command. If you shut down the interface, the configuration of the interface exists, but does not take effect. You can view the interface status by using the **show interfaces** command.

 If you use the script to run no shutdown frequently and rapidly, the system may prompt the interface status reversal.

**Configuration** The following example disables an interface.

**Examples**

```
Ruijie(config)# interface aggregateport 1
Ruijie(config-if)# shutdown
```

The following example enables an interface.

```
Ruijie(config)# interface aggregateport 1
Ruijie(config-if)# no shutdown
```

| Related<br>Commands | Command                | Description                         |
|---------------------|------------------------|-------------------------------------|
|                     |                        | <b>clear interface</b>              |
|                     | <b>show interfaces</b> | Displays the interface information. |

**Platform** N/A

**Description**

## 1.28 show split summary

Use this command to display split information.

**show split summary**

| Parameter<br>Description | Parameter | Description |
|--------------------------|-----------|-------------|
|                          |           | N/A         |

**Command Mode** All CLI user modes



**Default Level** 14

**Usage Guide** This command displays split information of all splittable ports.

### Configuration

#### Examples

The following example displays the split information about Interface GigabitEthernet 0/1.

```
Ruijie#show split summary
Port          SpliteStatus SplitPorts
Hu1/1         merged       Hu1/1:1   Hu1/1:2   Hu1/1:3   Hu1/1:4
Hu1/2         merged       Hu1/2:1   Hu1/2:2   Hu1/2:3   Hu1/2:4
Hu1/3         merged       Hu1/3:1   Hu1/3:2   Hu1/3:3   Hu1/3:4
Hu1/4         merged       Hu1/4:1   Hu1/4:2   Hu1/4:3   Hu1/4:4
Hu1/5         merged       Hu1/5:1   Hu1/5:2   Hu1/5:3   Hu1/5:4
Hu1/6         merged       Hu1/6:1   Hu1/6:2   Hu1/6:3   Hu1/6:4
Hu1/7         merged       Hu1/7:1   Hu1/7:2   Hu1/7:3   Hu1/7:4
Hu1/8         merged       Hu1/8:1   Hu1/8:2   Hu1/8:3   Hu1/8:4
Hu3/25        merged       Hu3/25:1  Hu3/25:2  Hu3/25:3  Hu3/25:4
Hu3/26        merged       Hu3/26:1  Hu3/26:2  Hu3/26:3  Hu3/26:4
```

Note: **Port** indicates the splittable master port, **SpliteStatus** indicates the current split status, and **SplitPorts** indicates member ports of the splittable port after splitting.

## 1.29 snmp trap link-status

Use this command to send LinkTrap on a port. Use the **no** form of this command to disable this function.

**snmp trap link-status**

**no snmp trap link-status**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** This function is enabled by default

**Command Mode** Interface configuration mode.

**Usage Guide** For an interface (for instance, Ethernet interface, AP interface, and SVI interface), this command sets whether to send LinkTrap on the interface. If the function is enabled, the SNMP sends the LinkTrap when the link status of the interface changes.

**Configuration** The following example disables the interface from sending LinkTrap on the interface.

**Examples**

```
Ruijie(config)# interface gigabitEthernet 1/1
Ruijie(config-if)# no snmp trap link-status
```

The following example enables the interface to forward Link trap.

```
Ruijie(config)# interface gigabitEthernet 1/1
Ruijie(config-if)# snmp trap link-status
```

**Related Commands**

| Command                         | Description                                                    |
|---------------------------------|----------------------------------------------------------------|
| <b>snmp trap link-status</b>    | Enables the interface to send LinkTrap on the interface.       |
| <b>no snmp trap link-status</b> | Disables the interface from sending LinkTrap on the interface. |

**Platform** N/A

**Description**

### 1.30 snmp-server if-index persist

Use this command to set the interface index persistence. The interface index remains the same after the device is restarted.

**snmp-server if-index persist**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command** Global configuration mode

**Mode**

**Usage Guide** After this command is configured, all interface indexes are saved in the configuration file. After the device is restarted, interface indexes remain the same as before.

**Configuration** The following example enables the interface index persistence.

**Examples**

```
Ruijie(config)# snmp-server if-index persist
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 1.31 speed

Use this command to configure the speed on the port.

**speed** [ **1000** | **40G** | **auto** ]

| Parameter Description | Parameter   | Description                                         |
|-----------------------|-------------|-----------------------------------------------------|
|                       | <b>1000</b> | The transmission rate of the interface is 1000Mbps. |
|                       | <b>40G</b>  | The transmission rate of the interface is 40Gbps.   |
|                       | <b>auto</b> | Self-adaptive                                       |

**Defaults** The default is **auto**.

**Command** Interface configuration mode.

**Mode**

**Usage Guide** If an interface is the member of an aggregate port, the rate of the interface depends on the rate of the aggregate port. You can set the rate of the interface, but it does not take effect until the interface exits the aggregate port. Use **show interfaces** to display configuration. The rate varies by interface types. For example, you cannot set the rate of a SFP interface to 10M.

**Configuration** N/A

**Examples**

| Related Commands | Command                | Description                         |
|------------------|------------------------|-------------------------------------|
|                  | <b>show interfaces</b> | Displays the interface information. |

**Platform** N/A

**Description**

## 1.32 split interface

Use this command to split a 40G interface into four 10G interfaces. Use the **no** form of this command to restore the default setting.

**split interface FortyGigabitEthernet** *interface-number*

**no split interface FortyGigabitEthernet** *interface-number*

| Parameter Description | Parameter               | Description                     |
|-----------------------|-------------------------|---------------------------------|
|                       | <i>interface-number</i> | Specifies the interface number. |

**Defaults** By default, the interface is in the combination mode.

**Command** Global configuration mode.  
**Mode**

**Usage Guide** N/A

**Configuration** The following example splits the 40G interface 0/65 into four 10G interfaces.

**Examples**

```
Ruijie(config-if)# split interface forty-giga 0/65
```

| Related Commands | Command | Description            |
|------------------|---------|------------------------|
|                  |         | <b>show interfaces</b> |

**Platform** N/A  
**Description**

## 1.33 switchport

Use this command to configure a Layer 3 interface. Use the **no** form of this command to restore the default setting.

**switchport**

**no switchport**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       |           | N/A         |

**Defaults** All the interfaces are in Layer 2 mode by default.

**Command** Interface configuration mode.  
**Mode**

**Usage Guide** This command is valid only for physical interfaces. The **switchport** command is used to disable the interface and re-enable it. In this status, the device will send the information to indicate the connect status. If the interface is changed to Layer 3 mode from Layer 2, all the attributes in Layer 2 mode will be cleared.

**Configuration** The following example configures a Layer 3 interface.

**Examples**

```
Ruijie(config-if)# switchport
```

| Related Commands | Command | Description            |
|------------------|---------|------------------------|
|                  |         | <b>show interfaces</b> |

**Platform** N/A  
**Description**

## 1.34 switchport access

Use this command to configure an interface as a statics access port and add it to a VLAN. Use the **no** form of this command to restore the default setting.

**switchport access vlan** *vlan-id*

**no switchport access vlan**

| Parameter   | Parameter      | Description                                |
|-------------|----------------|--------------------------------------------|
| Description | <i>vlan-id</i> | The VLAN ID at which the port to be added. |

**Defaults** By default, the switch port is an access port and the VLAN is VLAN 1.

**Command** Interface configuration mode.

**Mode**

**Usage Guide** Enter one VLAN ID. The system will create a new one and add the interface to the VLAN if you enter a new VLAN ID. If the VLAN ID already exists, the command adds the interface to the VLAN.  
 If the port is a trunk port, the operation does not take effect.

**Configuration Examples** The following example configures interface gigabitethernet 1/1 as a static access port and adds it to VLAN 2.

```
Ruijie(config)# interface gigabitethernet 1/1
Ruijie(config-if)# switchport access vlan 2
```

| Related Commands | Command                 | Description                                                           |
|------------------|-------------------------|-----------------------------------------------------------------------|
|                  | <b>switchport mode</b>  | Configures the interface as Layer 2 mode (switch port mode).          |
|                  | <b>switchport trunk</b> | Configures a native VLAN and the allowed-VLAN list for the trunkport. |

**Platform** N/A  
**Description**

## 1.35 switchport mode

Use this command to specify a L2 interface (switch port) mode. You can specify this interface to be an access port or a trunk port or an 802.1Q tunnel. Use the **no** form of this command to restore the default setting.

**switchport mode { access | trunk }**

**no switchport mode**

**Parameter  
Description**

| Parameter     | Description                                   |
|---------------|-----------------------------------------------|
| <b>access</b> | Configures the switch port as an access port. |
| <b>trunk</b>  | Configures the switch port as a trunk port.   |

**Defaults**

The default is **access**.

**Command  
Mode**

Interface configuration mode.

**Usage Guide**

If a switch port mode is access port, it can be the member port of only one VLAN. Use **switchport access vlan** to specify the member of the VLAN.

A trunk port can be the member port of various VLANs defined by the allowed-VLAN list. The allowed VLAN list of the interface determines the VLANs to which the interface may belong. The trunk port is the member of all the VLANs in the allowed VLAN list. Use **switchport trunk** to define the allowed-VLANs list.

**Configuration**

The following example specifies a L2 interface (switch port) mode.

**Examples**

```
Ruijie(config-if)# switchport mode trunk
```

**Related  
Commands**

| Command                  | Description                                                                |
|--------------------------|----------------------------------------------------------------------------|
| <b>switchport access</b> | Configures an interface as a statics access port and assigns it to a VLAN. |
| <b>switchport trunk</b>  | Configures a native VLAN and the allowed-VLAN list for the trunk port.     |

**Platform**

N/A

**Description**

## 1.36 switchport protected

Use this command to configure the interface as the protected port.

**switchport protected**

**Parameter  
Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults**

This function is disabled by default.

**Command** Interface configuration mode.  
**Mode**

**Usage Guide** The ports that are set as the protected ports cannot switch on L2, but can route on L3. A protected port can communicate with an unprotected port. Use the **show interfaces** command to display configuration.

**Configuration** The following example configures interface `gigabitethernet 1/1` as a protected port.

**Examples**

```
Ruijie(config)#interface gigabitethernet 1/1
Ruijie(config-if)# switchport protected
```

| Related Commands | Command | Description            |
|------------------|---------|------------------------|
|                  |         | <b>show interfaces</b> |

**Platform** N/A  
**Description**

## 1.37 switchport trunk

Use this command to specify a native VLAN and the allowed-VLAN list for the trunk port. Use the **no** form of this command to restore the default setting.

**switchport trunk { allowed vlan { all | [ add | remove | except ] *vlan-list* } | native vlan *vlan-id* }**  
**no switchport trunk { allowed vlan | native vlan }**

| Parameter Description | Parameter                               | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|-----------------------|-----------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <b>allowed vlan</b><br><i>vlan-list</i> | Configures the list of VLANs allowed on the trunk port. <i>vlan-list</i> can be a VLAN or a range of VLANs starting with the smaller VLAN ID and ending with the larger VLAN ID and being separated by hyphen, for example, 10 to 20. The segments can be separated with a comma (,), for example, 1 to 10, 20 to 25, 30, 33.<br>all means that the allowed VLAN list contains all the supported VLANs;<br>add means to add the specified VLAN list to the allowed VLAN list;<br>remove means to remove the specified VLAN list from the allowed VLAN list;<br>except means to add all the VLANs other than those in the specified VLAN list to the allowed VLAN list; |
|                       | <b>native vlan</b><br><i>vlan-id</i>    | Configures the native VLAN.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |

**Defaults** The allowed VLAN list is all, the Native VLAN is VLAN1.

**Command** Interface configuration mode.  
**Mode**

**Usage Guide** Native VLAN:  
 A trunk port belongs to one native VLAN. A native VLAN means that the untagged packets received/sent on the trunk port belong to the VLAN. Obviously, the default VLAN ID of the interface (that is, the PVID in the IEEE 802.1Q) is the VLAN ID of the native VLAN. In addition, when frames belonging to the native VLAN are sent over the trunk port, they are untagged.  
 Allowed-VLAN List:  
 By default, a trunk port sends traffic to and received traffic from all VLANs (ID 1 to 4094). However, you can prevent the traffic from passing over the trunk by configuring allowed VLAN lists on a trunk. Use `show interfaces switchport` to display configuration.

**Configuration** The following example removes port 1/15 from VLAN 2.

**Examples**

```
Ruijie(config)# interface fastethernet 1/15
Ruijie(config-if)# switchport trunk allowed vlan remove 2
Ruijie(config-if)# end
Ruijie# show interfaces fastethernet1/15 switchport
Switchport is enabled
Mode is trunk port
Access vlan is 1,Native vlan is 1
Protected is disabled
Vlan lists is
1,3-4094
```

**Related  
Commands**

| Command                        | Description                                                                |
|--------------------------------|----------------------------------------------------------------------------|
| <code>show interfaces</code>   | Displays the interface information.                                        |
| <code>switchport access</code> | Configures an interface as a statics access port and assigns it to a VLAN. |

**Platform** N/A  
**Description**



## 2 MAC Address Commands

### 2.1 clear mac-address-table dynamic

Use this command to clear the dynamic MAC address.

```
clear mac-address-table dynamic [ address mac-addr [ interface interface-id ] [ vlan vlan-id ] ]
{ [ interface interface-id ] [ vlan vlan-id ] }
```

| Parameter   | Parameter                            | Description                                                                              |
|-------------|--------------------------------------|------------------------------------------------------------------------------------------|
| Description | <b>dynamic</b>                       | Clears all the dynamic MAC addresses.                                                    |
|             | <b>address</b> <i>mac-addr</i>       | Clears the specified dynamic MAC address.                                                |
|             | <b>interface</b> <i>interface-id</i> | Clears all the dynamic MAC addresses of the specified interface.                         |
|             | <b>vlan</b> <i>vlan-id</i>           | Clears all the dynamic MAC addresses of the specified VLAN, in the range from 1 to 4094. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode.

**Usage Guide** Use the **show mac-address-table dynamic** command to display all the dynamic MAC addresses.

**Configuration** The following command clears all the dynamic MAC addresses.

**Examples** Ruijie# clear mac-address-table dynamic

| Related Commands | Command                               | Description                   |
|------------------|---------------------------------------|-------------------------------|
|                  | <b>show mac-address-table dynamic</b> | Displays dynamic MAC address. |

**Platform** N/A

**Description**

### 2.2 mac-address-learning

Use this command to enable the port address learning. Use the **no** or **default** form of this command to restore the default setting.

**mac-address-learning**

**no mac-address-learning**

**default mac-address-learning**

| Parameter | Parameter | Description |
|-----------|-----------|-------------|
|-----------|-----------|-------------|

|                    |     |     |
|--------------------|-----|-----|
| <b>Description</b> | N/A | N/A |
|--------------------|-----|-----|

**Defaults** The address learning function is enabled.

**Command Mode** Interface configuration mode.

**Usage Guide** MAC address learning cannot be disabled on the port where the security function is enabled. The security function cannot be configured on the port where address learning is disabled.

**Configuration** The following example disables the port address learning function.

**Examples**

```
Ruijie(config-if)# no mac-address-learning
```

| <b>Related Commands</b> | <b>Command</b> | <b>Description</b> |
|-------------------------|----------------|--------------------|
|                         | N/A            | N/A                |

**Platform Description** N/A

## 2.3 mac-address-learning (global)

Use this command to enable MAC address learning globally. Use the **no** or **default** form of this command to restore the default setting.

### **mac-address-learning enable**

Use this command to disable MAC address learning globally.

### **mac-address-learning disable**

Use this command to restore MAC address learning globally.

### **default mac-address-learning**

| <b>Parameter Description</b> | <b>Parameter</b> | <b>Description</b>                      |
|------------------------------|------------------|-----------------------------------------|
|                              | <b>enable</b>    | Enables MAC address learning globally.  |
|                              | <b>disable</b>   | Disables MAC address learning globally. |

**Defaults** The **mac-address-learning enable** command is enabled by default.

**Command Mode** Global configuration mode

**Usage Guide** When this function is enabled, the MAC address is learned in global configuration mode the same as learned in interface configuration mode.

**Configuration** The following example disables MAC address learning globally.

**Examples**

```
Ruijie(config)# mac-address-learning disable
```

| Related  | Command | Description |
|----------|---------|-------------|
| Commands | N/A     | N/A         |

Platform N/A  
Description

## 2.4 mac-address-table aging-time

Use this command to specify the aging time of the dynamic MAC address. Use the **no** or **default** form of the command to restore the default setting.

**mac-address-table aging-time** *seconds*

**no mac-address-table aging-time**

**default mac-address-table aging-time**

| Parameter   | Parameter      | Description                                                                                  |
|-------------|----------------|----------------------------------------------------------------------------------------------|
| Description | <i>seconds</i> | Aging time of the dynamic MAC address (in seconds).<br>The time range depends on the switch. |

Defaults The default is 300.

Command Global configuration mode.  
Mode

Usage Guide Use **show mac-address-table aging-time** to display configuration.

Configuration The following example sets the aging time of the dynamic MAC address to 500 seconds.

Examples 

```
Ruijie(config)# mac-address-table aging-time 500
```

| Related  | Command                                  | Description                                         |
|----------|------------------------------------------|-----------------------------------------------------|
| Commands | <b>show mac-address-table aging-time</b> | Displays the aging time of the dynamic MAC address. |
|          | <b>show mac-address-table dynamic</b>    | Displays dynamic MAC address.                       |

Platform N/A  
Description

## 2.5 mac-address-table filtering

Use this command to configure the filtering MAC address. Use the **no** or **default** form of the command to restore the default setting.

**mac-address-table filtering** *mac-address* **vlan** *vlan-id*

**no mac-address-table filtering** *mac-address* **vlan** *vlan-id*

**default mac-address-table filtering** *mac-address* **vlan** *vlan-id*

| Parameter   | Parameter          | Description                           |
|-------------|--------------------|---------------------------------------|
| Description | <i>mac-address</i> | Filtering Address                     |
|             | <i>vlan-id</i>     | VLAN ID, in the range from 1 to 4094. |

**Defaults** No filtering address is configured by default.

**Command** Global configuration mode.

**Mode**

**Usage Guide** The filtering MAC address shall not be a multicast address.

**Configuration** The following example configures the filtering MAC address for VLAN 1.

**Examples** Ruijie(config)#mac-address-table filtering 0000.0202.0303 vlan 3

| Related  | Command                                  | Description                       |
|----------|------------------------------------------|-----------------------------------|
| Commands | <b>clear mac-address-table filtering</b> | Clears the filtering MAC address. |

**Platform** N/A

**Description**

## 2.6 mac-address-table notification

Use this command to enable the MAC address notification function. Use The **no** or **default** form of the command to restore the default setting.

**mac-address-table notification** [ **interval** *value* | **history-size** *value* ]

**no mac-address-table notification** [ **interval** | **history-size** ]

**default mac-address-table notification** [ **interval** | **history-size** ]

| Parameter   | Parameter                        | Description                                                                                          |
|-------------|----------------------------------|------------------------------------------------------------------------------------------------------|
| Description | <b>interval</b> <i>value</i>     | Sets the interval of sending the MAC address trap message, 1 second by default.                      |
|             | <b>history-size</b> <i>value</i> | Sets the maximum number of the entries in the MAC address notification table, 50 entries by default. |

**Defaults** By default, the interval is 1 and the maximum number of the entries in the MAC address notification table is 50.

**Command** Global configuration mode.

**Mode**

**Usage Guide** The MAC address notification function is specific for only dynamic MAC address and secure MAC address. No MAC address trap message is generated for static MAC addresses. In the global

configuration mode, you can use the **snmp-server enable traps mac-notification** command to enable or disable the switch to send the MAC address trap message.

**Configuration** The following example enables the MAC address notification function.

**Examples**

```
Ruijie(config)# mac-address-table notification
Ruijie(config)# mac-address-table notification interval 40
Ruijie(config)# mac-address-table notification history-size 100
```

**Related**

**Commands**

| Command                                    | Description                                                                                      |
|--------------------------------------------|--------------------------------------------------------------------------------------------------|
| <b>snmp-server enable traps</b>            | Sets the method of handling the MAC address trap message..                                       |
| <b>show mac-address-table notification</b> | Displays the MAC address notification configuration and the MAC address trap notification table. |
| <b>snmp trap mac-notification</b>          | Enables the MAC address trap notification function on the specified interface.                   |

**Platform** N/A

**Description**

## 2.7 mac-address-table static

Use this command to configure a static MAC address. Use the **no** or **default** form of the command to restore the default setting.

**mac-address-table static** *mac-addr* **vlan** *vlan-id* **interface** *interface-id*

**no mac-address-table static** *mac-addr* **vlan** *vlan-id* **interface** *interface-id*

**default mac-address-table static** *mac-addr* **vlan** *vlan-id* **interface** *interface-id*

**Parameter**

**Description**

| Parameter           | Description                                                                    |
|---------------------|--------------------------------------------------------------------------------|
| <i>mac-addr</i>     | Destination MAC address of the specified entry                                 |
| <i>vlan-id</i>      | VLAN ID of the specified entry, in the range from 1 to 4094.                   |
| <i>interface-id</i> | Interface (physical interface or aggregate port) that packets are forwarded to |

**Defaults** No static MAC address is configured by default.

**Command** Global configuration mode.

**Mode**

**Usage Guide** A static MAC address has the same function as the dynamic MAC address that the switch learns. Compared with the dynamic MAC address, the static MAC address will not be aged out. It can only be configured and removed by manual. Even if the switch is reset, the static MAC address will not be lost. A static MAC address shall not be configured as a multicast address. Use **show mac-address-table static** to display the static MAC address.

**Configuration** N/A

**Examples**

| Related  | Command                              | Description                      |
|----------|--------------------------------------|----------------------------------|
| Commands | <b>show mac-address-table static</b> | Displays the static MAC address. |

Platform N/A

Description

## 2.8 max-dynamic-mac-count

Use this command to set the maximum number of MAC address learned dynamically on the VLAN or interface. Use the **no** or **default** form of this command to restore the default setting.

**max-dynamic-mac-count** *num*

**no max-dynamic-mac-count**

**default max-dynamic-mac-count**

| Parameter   | Parameter  | Description                               |
|-------------|------------|-------------------------------------------|
| Description | <i>num</i> | Sets the maximum number of MAC addresses. |

Defaults The maximum number is not set by default.

Command VLAN configuration mode / Interface configuration mode

Mode

Usage Guide This command is used to set the maximum number of MAC addresses learned dynamically on the VLAN or interface.

If the number of MAC addresses dynamically learned on the VLAN or interface reaches the upper limit, MAC address learning is disabled on the VLAN or interface.

If the number of MAC addresses reaches the upper limit when this command is configured, the surplus MAC addresses are not cleared. Instead, they remain and then age. MAC address learning is disabled on the VLAN or interface.

Use the **show mac-address-table max-dynamic-mac-count** command to display the maximum number of MAC addresses learned dynamically on the VLAN or interface.

Configuration Examples The following example sets the maximum number of MAC addresses dynamically learned on VLAN 1.

```
Ruijie#configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#vlan 1
Ruijie(config-vlan)#max-dynamic-mac-count 160
```

The following example sets the maximum number of MAC addresses dynamically learned on interface GigabitEthernet 0/1.

```
Ruijie#configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
```

```
Ruijie(config)#interface GigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)#max-dynamic-mac-count 160
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 2.9 max-dynamic-mac-count exceed-action

Use this command to set the action if the dynamic MAC address learned on the VLAN or interface exceeds the limit. Run the no form of this command to restore the default setting.

**max-dynamic-mac-count exceed-action forward | discard**

**no max-dynamic-mac-count exceed-action forward | discard**

| Parameter Description | Parameter      | Description                                                                                         |
|-----------------------|----------------|-----------------------------------------------------------------------------------------------------|
|                       | <i>forward</i> | Forwards the packets if the dynamic MAC address learned on the VLAN or interface exceeds the limit. |
|                       | <i>discard</i> | Discards the packets if the dynamic MAC address learned on the VLAN or interface exceeds the limit. |

**Command Mode** VLAN configuration mode / Interface configuration mode

**Usage Guide** This command is used to set the action if the dynamic MAC address learned on the VLAN or interface exceeds the limit.

When the command **default interface** is run in global configuration mode, if there is any layer-2 sub-interface, the action when MAC address learned dynamically exceeds the limit cannot restore the default settings.

**Configuration Examples** The following example sets the maximum number of MAC addresses dynamically learned on VLAN 1.

```
Ruijie#configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#vlan 1
Ruijie(config-vlan)#max-dynamic-mac-count 160
Ruijie(config-vlan)#max-dynamic-mac-count exceed-action discard
```

The following example sets the maximum number of MAC addresses dynamically learned on interface GigabitEthernet 0/1.

```
Ruijie#configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#interface GigabitEthernet 0/1
```

```
Ruijie(config-if-GigabitEthernet 0/1)#max-dynamic-mac-count 100
Ruijie(config-if-GigabitEthernet 0/1)#max-dynamic-mac-count exceed-action
discard
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 2.10 show mac-address-learning

Use this command to display the MAC address learning.

**show mac-address-learning**

| Parameter          | Parameter | Description |
|--------------------|-----------|-------------|
| <b>Description</b> | N/A       | N/A         |

**Defaults** N/A

**Command** Privileged EXEC mode.

**Mode**

**Usage Guide** N/A

**Configuration** The following example displays the MAC address learning.

**Examples**

```
Ruijie# show mac-address-learning
GigabitEthernet 0/0    learning ability: disable
GigabitEthernet 0/1    learning ability: enable
GigabitEthernet 0/2    learning ability: enable
GigabitEthernet 0/3    learning ability: enable
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 2.11 show mac-address-table

Use this command to display all types of MAC addresses (including dynamic address, static address and filter address).

**show mac-address-table [ address *mac-addr*] [ interface *interface-id*] [ vlan *vlan-id*]**



| Parameter   | Parameter                            | Description                               |
|-------------|--------------------------------------|-------------------------------------------|
| Description | <b>address</b> <i>mac-addr</i>       | The MAC address.                          |
|             | <b>interface</b> <i>interface-id</i> | The Interface ID.                         |
|             | <b>vlan</b> <i>vlan-id</i>           | The VLAN ID, in the range from 1 to 4094. |

**Defaults** N/A

**Command Mode** All modes

**Usage Guide** N/A

**Configuration** The following example displays the MAC address.

**Examples**

```
Ruijie# show mac-address-table address 00d0.f800.1001
Vlan      MAC Address      Type      Interface
-----  -
1         00d0.f800.1001  STATIC   GigabitEthernet 1/1
Ruijie# show mac-address-table
Vlan      MAC Address      Type      Interface
-----  -
1         00d0.f800.1001  STATIC   GigabitEthernet 1/1
1         00d0.f800.1002  DYNAMIC  GigabitEthernet 1/1
1         00d0.f800.1003  OTHER    GigabitEthernet 1/1
1         00d0.f800.1004  FILTER
```

| Field       | Description                                     |
|-------------|-------------------------------------------------|
| Vlan        | The interface address.                          |
| MAC Address | The MAC address.                                |
| Type        | The MAC address type.                           |
| Interface   | The interface corresponding to the MAC address. |

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 2.12 show mac-address-table aging-time

Use this command to display the aging time of the dynamic MAC address.

**show mac-address-table aging-time**

| Parameter        | Parameter                                                                 | Description                                     |
|------------------|---------------------------------------------------------------------------|-------------------------------------------------|
| Description      | N/A                                                                       | N/A                                             |
| Defaults         | N/A                                                                       |                                                 |
| Command Mode     | All modes                                                                 |                                                 |
| Usage Guide      | N/A                                                                       |                                                 |
| Configuration    | The following example displays the aging time of the dynamic MAC address. |                                                 |
| Examples         | <pre>Ruijie# show mac-address-table aging-time Aging time : 300</pre>     |                                                 |
| Related Commands | Command                                                                   | Description                                     |
|                  | <b>mac-address-table aging-time</b>                                       | Sets the aging time of the dynamic MAC address. |
| Platform         | N/A                                                                       |                                                 |
| Description      |                                                                           |                                                 |

## 2.13 show mac-address-table count

Use this command to display the number of address entries in the address table.

**show mac-address-table count** [ **interface** *interface-id* | **vlan** *vlan-id* ]

| Parameter     | Parameter                                                                                                                                                                                                                                                                                                                                                                                                                                                      | Description                           |
|---------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------|
| Description   | <b>interface</b> <i>interface-id</i>                                                                                                                                                                                                                                                                                                                                                                                                                           | Interface ID                          |
|               | <b>vlan</b> <i>vlan-id</i>                                                                                                                                                                                                                                                                                                                                                                                                                                     | VLAN ID, in the range from 1 to 4094. |
| Defaults      | N/A                                                                                                                                                                                                                                                                                                                                                                                                                                                            |                                       |
| Command Mode  | Privileged EXEC mode.                                                                                                                                                                                                                                                                                                                                                                                                                                          |                                       |
| Usage Guide   | <p>The <b>show mac-address-table count</b> command is used to display the number of entries based on the type of MAC address entry.</p> <p>The <b>show mac-address-table count interface</b> command is used to display the number of entries based on the interface associated with the MAC address entry.</p> <p>The <b>show mac-address-table count vlan</b> command is used to display the number of entries based on the VLAN of MAC address entries.</p> |                                       |
| Configuration | The following example displays the number of MAC address entries.                                                                                                                                                                                                                                                                                                                                                                                              |                                       |
| Examples      | <pre>Ruijie# show mac-address-table count Dynamic Address Count : 51</pre>                                                                                                                                                                                                                                                                                                                                                                                     |                                       |

```
Static Address Count : 0
Filter Address Count : 0
Total Mac Addresses : 51
Total Mac Address Space Available: 8139
```

The following example displays the number of MAC address in VLAN 1.

```
Ruijie# show mac-address-table count vlan 1
Dynamic Address Count : 7
Static Address Count : 0
Filter Address Count : 0
Total Mac Addresses : 7
```

The following example displays the number of MAC addresses on interface g0/1.

```
Ruijie# show mac-address-table interface g0/1
Dynamic Address Count : 10
Static Address Count : 0
Filter Address Count : 0
Total Mac Addresses : 10
```

#### Related Commands

| Command                                 | Description                                                      |
|-----------------------------------------|------------------------------------------------------------------|
| <b>show mac-address-table static</b>    | Displays the static address.                                     |
| <b>show mac-address-table filtering</b> | Displays the filtering address.                                  |
| <b>show mac-address-table dynamic</b>   | Displays the dynamic address.                                    |
| <b>show mac-address-table address</b>   | Displays all the address information of the specified address.   |
| <b>show mac-address-table interface</b> | Displays all the address information of the specified interface. |
| <b>show mac-address-table vlan</b>      | Displays all the address information of the specified vlan.      |

**Platform** N/A  
**Description**

## 2.14 show mac-address-table dynamic

Use this command to display the dynamic MAC address.

```
show mac-address-table dynamic [ address mac-addr ] [ interface interface-id ] [ vlan vlan-id ]
```

#### Parameter Description

| Parameter           | Description                                                                                  |
|---------------------|----------------------------------------------------------------------------------------------|
| <i>mac-addr</i>     | Destination MAC address of the entry                                                         |
| <i>vlan-id</i>      | VLAN of the entry, in the range from 1 to 4094.                                              |
| <i>interface-id</i> | Interface that the packet is forwarded to.<br>It may be a physical port or an aggregate port |

#### Defaults

**Command** All modes

**Mode**

**Usage Guide** N/A

**Configuration** The following example displays the dynamic MAC address.

**Examples**

```
Ruijie# show mac-address-table dynamic
Vlan  MAC Address      Type  Interface
-----
1     0000.0000.0001     DYNAMIC  gigabitethernet 1/1
1     0001.960c.a740     DYNAMIC  gigabitethernet 1/1
1     0007.95c7.dff9     DYNAMIC  gigabitethernet 1/1
1     0007.95cf.eee0     DYNAMIC  gigabitethernet 1/1
1     0007.95cf.f41f     DYNAMIC  gigabitethernet 1/1
1     0009.b715.d400     DYNAMIC  gigabitethernet 1/1
1     0050.bade.63c4     DYNAMIC  gigabitethernet 1/1
```

**Related**

**Commands**

| Command                                | Description                     |
|----------------------------------------|---------------------------------|
| <b>clear mac-address-table dynamic</b> | Clears the dynamic MAC address. |

**Platform** N/A

**Description**

## 2.15 show mac-address-table filtering

Use this command to display the filtering MAC address.

**show mac-address-table filtering [ ddr mac-addr ] [ vlan vlan-id ]**

**Parameter**

**Description**

| Parameter       | Description                                        |
|-----------------|----------------------------------------------------|
| <i>mac-addr</i> | Destination MAC address of the entry               |
| <i>vlan-id</i>  | VLAN ID of the entry, in the range from 1 to 4094. |

**Defaults** N/A

**Command** Privileged EXEC mode.

**Mode**

**Usage Guide** N/A

**Configuration** The following example displays the filtering MAC address.

**Examples**

```
Ruijie# show mac-address-table filtering
Vlan  MAC Address      Type  Interface
-----
```

```
1 0000.2222.2222 FILTER Not available
```

| Related Commands | Command                            | Description                           |
|------------------|------------------------------------|---------------------------------------|
|                  | <b>mac-address-table filtering</b> | Configures the filtering MAC address. |

**Platform** N/A

**Description**

## 2.16 show mac-address-table interface

Use this command to display all the MAC addresses on the specified interface including static and dynamic MAC address

**show mac-address-table interface** [ *interface-id* ] [ **vlan** *vlan-id* ]

| Parameter Description | Parameter           | Description                                                                                             |
|-----------------------|---------------------|---------------------------------------------------------------------------------------------------------|
|                       | <i>interface-id</i> | Displays the MAC address information of the specified Interface (physical interface or aggregate port). |
|                       | <i>vlan-id</i>      | VLAN ID of the entry, in the range from 1 to 4094..                                                     |

**Defaults** N/A

**Command Mode** Privileged EXEC mode.

**Usage Guide** N/A

**Configuration Examples** The following example displays all the MAC addresses on interface gigabitethernet 1/1.

```
Ruijie# show mac-address-table interface
gigabitethernet 1/1
Vlan  MAC Address  Type  Interface
-----
1  00d0.f800.1001  STATIC  gigabitethernet 1/1
1  00d0.f800.1002  STATIC  gigabitethernet 1/1
1  00d0.f800.1003  STATIC  gigabitethernet 1/1
1  00d0.f800.1004  STATIC  gigabitethernet 1/1
```

| Related Commands | Command                                 | Description                                                |
|------------------|-----------------------------------------|------------------------------------------------------------|
|                  | <b>show mac-address-table static</b>    | Displays the static MAC address.                           |
|                  | <b>show mac-address-table filtering</b> | Displays the filtering MAC address.                        |
|                  | <b>show mac-address-table dynamic</b>   | Displays the dynamic MAC address.                          |
|                  | <b>show mac-address-table address</b>   | Displays all types of MAC addresses.                       |
|                  | <b>show mac-address-table vlan</b>      | Displays all types of MAC addresses of the specified VLAN. |
|                  | <b>show mac-address-table count</b>     | Displays the address counts in the MAC address table.      |

**Platform** N/A  
**Description**

## 2.17 show mac-address-table max-dynamic-mac-count

Use this command to display the maximum number of dynamic MAC addresses learned on the VLAN or interface.

**show mac-address-table max-dynamic-mac-count** { **vlan** [ *vlan-id* ] | **interface** [ *interface-id* ] }

| Parameter Description | Parameter           | Description                                                                                                                              |
|-----------------------|---------------------|------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <b>vlan</b>         | Displays the dynamic MAC address learned on all VLANs which are configured with the maximum number of dynamic MAC address learning.      |
|                       | <i>vlan-id</i>      | Displays the dynamic MAC address learned on the specified VLAN.                                                                          |
|                       | <b>interface</b>    | Displays the dynamic MAC address learned on all interfaces which are configured with the maximum number of dynamic MAC address learning. |
|                       | <i>interface-id</i> | Displays the dynamic MAC address learned on the specified interface.                                                                     |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration Examples** The following example displays the MAC address learned on all VLANs which are configured with the maximum number of dynamic MAC addresses.

```
Ruijie#show mac-address-table max-dynamic-mac-count vlan
Vlan Limit  MAC count Learning
-----
1    160      6          YES
```

The following example displays the MAC address learned dynamically on the specified VLAN.

```
Ruijie#show mac-address-table max-dynamic-mac-count vlan 1
Vlan Limit  MAC count Learning
-----
1    160      6          YES
```

| Field | Description                          |
|-------|--------------------------------------|
| Vlan  | The VLAN ID.                         |
| Limit | The maximum number of MAC addresses. |

|           |                                                            |
|-----------|------------------------------------------------------------|
| MAC count | The number of MAC address learned dynamically on the VLAN. |
| Learning  | Whether MAC address learning is disabled on the VLAN.      |

The following example displays the MAC address learned on all interfaces which are configured with the maximum number of the dynamic MAC address.

```
Ruijie#show mac-address-table max-dynamic-mac-count interface
Interface          Limit  MAC count Learning
-----
GigabitEthernet 0/1    160    6         YES
```

The following example displays the MAC address learned dynamically on the specified interface.

```
Ruijie#show mac-address-table max-dynamic-mac-count interface
GigabitEthernet 0/1
Interface          Limit  MAC count Learning
-----
GigabitEthernet 0/1    160    6         YES
```

| Field     | Description                                                     |
|-----------|-----------------------------------------------------------------|
| Interface | The Interface ID                                                |
| Limit     | The maximum number of MAC addresses.                            |
| MAC count | The number of MAC address learned dynamically on the interface. |
| Learning  | Whether MAC address learning is disabled on the interface       |

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

Platform N/A

Description

## 2.18 show mac-address-table notification

Use this command to display the MAC address notification configuration and the MAC address notification table.

**show mac-address-table notification** [ interface [ *interface-id* ] | history ]

| Parameter Description | Parameter           | Description                                                                  |
|-----------------------|---------------------|------------------------------------------------------------------------------|
|                       | <b>interface</b>    | Displays the MAC address notification configuration on all interfaces.       |
|                       | <i>interface-id</i> | Displays the MAC address notification configuration on a specific interface. |
|                       | <b>history</b>      | Displays the MAC address notification history.                               |

**Defaults****Command** Privileged EXEC mode.**Mode****Usage Guide** N/A**Configuration Examples** The following example displays the MAC address notification configuration and the MAC address notification table.

```
Ruijie# show mac-address-table notification
MAC Notification Feature: Disabled
Interval between Notification Traps: 1 secs
Maximum Number of entries configured in History Table:1
Current History Table Length: 0
```

**Related****Commands**

| Command                               | Description                                                                    |
|---------------------------------------|--------------------------------------------------------------------------------|
| <b>mac-address-table notification</b> | Enables MAC address notification.                                              |
| <b>snmp trap mac-notification</b>     | Enables the MAC address trap notification function on the specified interface. |

**Platform** N/A**Description**

## 2.19 show mac-address-table static

Use this command to display the static MAC address.

**show mac-address-table static** [**addr** *mac-addr* *r*] [**interface** *interface-Id*] [**vlan** *vlan-id*]**Parameter****Description**

| Parameter           | Description                                                 |
|---------------------|-------------------------------------------------------------|
| <i>mac-addr</i>     | Destination MAC address of the entry                        |
| <i>vlan-id</i>      | VLAN ID of the entry, within the range from 1 to 4094.      |
| <i>interface-id</i> | Interface of the entry physical interface or aggregate port |

**Defaults** N/A**Command** Privileged EXEC mode.**Mode****Usage Guide** N/A**Configuration Examples** The following example displays the static MAC addresses**Examples**

```
Ruijie# show mac-address-table static
Vlan    MAC Address    Type    Interface
-----  -
```



```

1 00d0.f800.1001 STATIC gigabitethernet 1/1
1 00d0.f800.1002 STATIC gigabitethernet 1/1
1 00d0.f800.1003 STATIC gigabitethernet 1/1

```

| Related Commands | Command                         | Description                        |
|------------------|---------------------------------|------------------------------------|
|                  | <b>mac-address-table static</b> | Configures the static MAC address. |

**Platform** N/A

**Description**

## 2.20 show mac-address-table vlan

Use this command to display all addresses of the specified VLAN.

**show mac-address-table vlan [ *vlan-id* ]**

| Parameter          | Parameter      | Description                                            |
|--------------------|----------------|--------------------------------------------------------|
| <b>Description</b> | <i>vlan-id</i> | VLAN ID of the entry, within the range from 1 to 4094. |

**Defaults** N/A

**Command** Privileged EXEC mode

**Mode**

**Usage Guide** N/A

**Configuration** The following example displays all addresses of the specified VLAN.

**Examples**

```

Ruijie# show mac-address-table vlan 1
Vlan  MAC Address   Type      Interface
-----
1     00d0.f800.1001  STATIC   gigabitethernet 1/1
1     00d0.f800.1002  STATIC   gigabitethernet 1/1
1     00d0.f800.1003  STATIC   gigabitethernet 1/1

```

| Related Commands | Command                                 | Description                                                     |
|------------------|-----------------------------------------|-----------------------------------------------------------------|
|                  | <b>show mac-address-table static</b>    | Displays static addresses.                                      |
|                  | <b>show mac-address-table filtering</b> | Displays filtered addresses.                                    |
|                  | <b>show mac-address-table dynamic</b>   | Displays dynamic addresses.                                     |
|                  | <b>show mac-address-table address</b>   | Displays all address information about the specified address.   |
|                  | <b>show mac-address-table interface</b> | Displays all address information about the specified interface. |
|                  | <b>show mac-address-table count</b>     | Displays the number of addresses in the address table.          |

**Platform** N/A

**Description**

## 2.21 snmp trap mac-notification

Use this command to enable the MAC address trap notification on the specified interface. Use The **no** or **default** form of the command to restore the default setting.

**snmp trap mac-notification { added | removed }**

**no snmp trap mac-notification { added | removed }**

**default snmp trap mac-notification { added | removed }**

| Parameter          | Parameter      | Description                            |
|--------------------|----------------|----------------------------------------|
| <b>Description</b> | <i>added</i>   | Notifies when a MAC address is added.  |
|                    | <i>removed</i> | Notifies when a MAC address is removed |

**Defaults**

**Command** Interface configuration mode.

**Mode**

**Usage Guide** Use **show mac-address-table notification interface** to display configuration.

**Configuration** The following example enables the MAC address trap notification on interface gigabitethernet 1/1.

**Examples**

```
Ruijie(config)# interface gigabitethernet 1/1
Ruijie(config-if)# snmp trap mac-notification added
```

| Related         | Command                                    | Description                                                                                 |
|-----------------|--------------------------------------------|---------------------------------------------------------------------------------------------|
| <b>Commands</b> | <b>mac-address-table notification</b>      | Enables MAC address notification.                                                           |
|                 | <b>show mac-address-table notification</b> | Displays the MAC address notification configuration and the MAC address notification table. |

**Platform** N/A

**Description**

## 3 Aggregate Port Commands

### 3.1 aggregate bfd-detect

Use this command to enable BFD on the AP port. Use the **no** form of this command to restore the default setting.

**aggregate bfd-detect ipv4** *src\_ip dst\_ip*

**no aggregate bfd-detect ipv4**

| Parameter Description | Parameter     | Description                                                                              |
|-----------------------|---------------|------------------------------------------------------------------------------------------|
|                       | <b>ipv4</b>   | Enables IPv4 BFD when the AP port is configured with an IPv4 address.                    |
|                       | <i>src_ip</i> | Specifies source IP address, namely, the IP address configured on the AP port.           |
|                       | <i>dst_ip</i> | Specifies destination IP address, namely, the IP address configured on the peer AP port. |

**Defaults** This function is disabled by default.

**Command Mode** AP interface configuration mode

**Usage Guide** If you want to enable BFD on the AP port, you should see corresponding configuration guide for BFD parameter settings.

Different products vary in support for IPv4 BFD on AP port.

If an AP port supports IPv4 BFD, it is allowed to enable IPv4 BFD at the same time.

If an AP port is enabled with BFD, its member ports in forwarding state create BFD session automatically.

**Configuration** The following example enables BFD on the AP port.

**Examples**

```
Switch(config)# interface aggregateport 3
Switch(config-if-Aggregateport 3)# ip address 1.0.0.1
Switch(config-if-Aggregateport 3)# aggregate bfd-detect ipv4 1.0.0.1 1.0.0.2
Switch(config-if-Aggregateport 3)# bfd interval 50 min_rx 50 multiplier 3
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 3.2 aggregateport capacity mode

Use this command to configure the AP capacity mode. Use the **no** form of this command to restore the default setting. Use the **no** form of this command to restore the default setting,

**aggregateport capacity mode** *capacity-mode*

**no aggregateport capacity mode**

| Parameter   | Parameter            | Description                   |
|-------------|----------------------|-------------------------------|
| Description | <i>capacity-mode</i> | Configures the capacity mode. |

**Defaults** The default *capacity-mode* varies with the device.

**Command Mode** Global configuration mode

**Usage Guide** The system provides several capacity modes for devices that support capacity mode configuration. To restore the default settings, run **no aggregateport capacity mode** in global configuration mode.

**Configuration Examples** The following example configures the the capacity mode.

```
Ruijie# configure terminal
Ruijie(config)# aggregateport capacity mode 256*8
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 3.3 aggregateport hash-header

Use this command to specify the balancing factor acquisition mode for specific tunnel packets, to optimize traffic balancing. Use the **default** form of this command to restore the default setting,

**aggregateport hash-header** {**inner** | **outer**}

**default aggregateport hash-header**

| Parameter   | Parameter    | Description                                                                                                 |
|-------------|--------------|-------------------------------------------------------------------------------------------------------------|
| Description | <b>inner</b> | Specifies the inner layer in the header of tunnel packets as the source for acquiring the balancing factor. |
|             | <b>outer</b> | Specifies the outer layer in the header of tunnel packets as the source for acquiring the balancing factor. |


**Defaults** The default configuration varies with products.

**Command Mode** Global configuration mode

**Usage Guide** Optional. When performing load balancing, use this command to specify the balancing factor acquisition mode for specific tunnel packets, to optimize traffic balancing.

Use the **default** form of this command to restore the default acquisition mode.

After configuration, if the **show running** command does not display the configuration, the configured mode is the same as the default value.

 The supported configuration options and types of tunnel packets vary with products.

**Configuration Examples** The following example specifies the inner layer in the header of tunnel packets as the source for acquiring the balancing factor in global configuration mode.

```
Ruijie# configure terminal
Ruijie(config)# aggregateport hash-header inner
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A

### 3.4 aggregateport load-balance

Use this command to configure a global load-balance algorithm for aggregate ports or a load-balance algorithm for an aggregate port . Use the **no** form of this command to return the default setting.

**aggregateport load-balance { dst-mac | src-mac | src-dst-mac | dst-ip | src-ip | src-dst ip | src-dst-ip-l4port | enhanced profile *profile-name* }**  
**no aggregateport load-balance**

| Parameter Description | Parameter         | Description                                                                                                                                                                                                                                                                          |
|-----------------------|-------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <b>dst-mac</b>    | Load balance based on the destination MAC addresses of the incoming packets. For all the links of an aggregate port, the messages with the same destination MAC addresses are sent to the same port, and those with different destination MAC addresses are sent to different ports. |
|                       | <b>src-mac</b>    | Load balance based on the source MAC addresses of the incoming packets. For all the links of an aggregate port, the messages from different addresses are distributed to different ports, and those from the same addresses are distributed to the same port.                        |
|                       | <b>src-dst-ip</b> | Load balance based on the source IP address and destination IP address. Packets with different source and destination IP address pairs are forwarded through different ports. The packets with the same source and destination IP address pairs                                      |

|                                                                   |                                                                                                                                                                                                                                                                                   |
|-------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                   | are forwarded through the same links. At layer 3, this load balancing style is recommended.                                                                                                                                                                                       |
| <b>dst-ip</b>                                                     | Load balance based on the destination IP addresses of the incoming packets. For all the links of an aggregate port, the messages with the same destination IP addresses are sent to the same port, and those with different destination IP addresses are sent to different ports. |
| <b>src-ip</b>                                                     | Load balance based on the source IP addresses of the incoming packets. For all the links of an aggregate port, the messages from different addresses are distributed to different ports, and those from the same addresses are distributed to the same port.                      |
| <b>src-dst-mac</b>                                                | Load balance based on the source and destination MAC addresses. Packets with different source and destination MAC address pairs are forwarded through different ports. The packets with the same source and destination MAC address pairs are forwarded through the same port.    |
| <b>src-dst-ip-l4port</b> (supported in global configuration mode) | Load balance based on the source IP address, destination IP address, L4 source port number and L4 destination port number.                                                                                                                                                        |
| <b>enhanced profile</b>                                           | Load balance based on the packet type                                                                                                                                                                                                                                             |

**Defaults** The default load balance mode is **src-dst-mac** for the L2 AP port and **src-dst-ip** for the L3 AP port .

**Command Mode** Global configuration mode/Interface configuration mode

**Usage Guide** You can run aggregateport load-balance in interface configuration mode of an AP port on devices that support load balancing configuration on a specific AP port. The configuration in interface configuration mode prevails. To disable the load balancing algorithm, run no aggregateport load-balance in interface configuration mode of the AP port. After that, the load balancing algorithm configured in global configuration mode takes effect.

**Configuration Examples** The following example configures a load-balance algorithm globally based on the destination MAC address.

```
Ruijie(config)# aggregateport load-balance dst-mac
```

| Related Commands | Command                                | Description                            |
|------------------|----------------------------------------|----------------------------------------|
|                  | <b>show aggregateport load-balance</b> | Displays aggregate port configuration. |

**Platform Description** N/A

### 3.5 aggregateport member linktrap

Use this command to send LinkTrap to aggregate port members. Use the **no** form of this command to restore the default setting.

**aggregateport member linktrap**

**no aggregateport member linktrap**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** This function cannot be enabled by running the **snmp trap link-status** command in interface configuration mode.

**Configuration Examples** The following example enables the LinkTrap function on the aggregate port members.

```
Ruijie# configure terminal
Ruijie(config)# aggregateport member linktrap
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

### 3.6 aggregateport primary-port

Use this command to configure the AP member port as a primary port. Use the **no** form of this command to restore the default setting.

**aggregateport primary-port**

**no aggregateport primary-port**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** The AP member port is not a primary port by default.

**Command Mode** Interface configuration mode

**Usage Guide** Only one primary port can be configured for an aggregate port.

**Configuration** The following example configures GigabitEthernet 0/1 as a primary port.

**Examples**

```
Ruijie(config)# interface GigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)# port-group 1 mode active
Ruijie(config-if-GigabitEthernet 0/1)# aggregateport primary-port
Ruijie(config-if-GigabitEthernet 0/1)# end
Ruijie# show interface aggregateport 1
...
Aggregate Port Informations:
    Aggregate Number: 1
    Name: "AggregatePort 1"
    Members: (count=1)
    Primary Port: GigabitEthernet 0/1
    GigabitEthernet 0/1      Link Status: Up   LACP Status: bndl
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

### 3.7 hash-disturb

Use this command to configure HASH disturbance. Use the **no** form of this command to restore the default setting.

**hash-disturb** { *string* | { [ **seed** *seed\_value* ] [ **offset** *offset* ] } }

**no hash-disturb**

| Parameter          | Parameter         | Description                       |
|--------------------|-------------------|-----------------------------------|
| <b>Description</b> | <i>string</i>     | HASH disturbance.                 |
|                    | <i>seed_value</i> | Seed value of HASH disturbance.   |
|                    | <i>offset</i>     | Offset value of HASH disturbance. |

**Defaults** This function is disabled by default.

**Command Mode** Enhanced template configuration mode

**Usage Guide** You can configure this function if you want to balance packets of the same type among multiple devices of the same type.

To configure HASH disturbance, you can run either the **hash-disturb** *string* command or the



**hash-disturb** { [ **seed** *seed\_value* ] [ **offset** *offset* ] } command. The latter is supported on few models. And these two commands are mutually excluded. Thus, you need to remove the first configuration before adopting a second configuration.

**Configuration** The following example configures the HASH disturbance.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)#load-balance-profile
Ruijie(config-load-balance-profile)#
Ruijie(config-load-balance-profile)#hash-disturb A
Ruijie(config-load-balance-profile)#
```

The following example sets the seed value to 12 and offset to 1.

```
Ruijie# configure terminal
Ruijie(config)#load-balance-profile
Ruijie(config-load-balance-profile)#
Ruijie(config-load-balance-profile)#hash-disturb seed 12 offset 1
Ruijie(config-load-balance-profile)#
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

### 3.8 hash-symmetrical

Use this command to configure HASH symmetry. Use the **no** form of this command to restore the default setting.

**hash-symmetrical** {**ipv4** | **ipv6** }

**no hash-symmetrical** {**ipv4** | **ipv6** }

**Parameter  
Description**

| Parameter   | Description                                |
|-------------|--------------------------------------------|
| <b>ipv4</b> | Configures HASH symmetry for IPv4 packets. |
| <b>ipv6</b> | Configures HASH symmetry for IPv6 packets. |

**Defaults** This function is enabled by default.

**Command  
Mode** Enhanced template configuration mode

**Usage Guide** You can configure this function if you want to specify a link for both the uplink and downlink traffic of packets of the same type.

**Configuration** The following example disables HASH symmetry for IPv6 packets.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)#load-balance-profile
Ruijie(config-load-balance-profile)#
Ruijie(config-load-balance-profile)#no hash-symmetrical ipv6
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform**

N/A

**Description**

### 3.9 interfaces aggregateport

Use this command to create the aggregate port or enter interface configuration mode of the aggregate port. Use the **no** form of this command to restore the default setting.

**interfaces aggregateport** *ap-number*

**no interfaces aggregateport** *ap-number*

**Parameter**

| Parameter        | Description            |
|------------------|------------------------|
| <i>ap-number</i> | Aggregate port number. |

**Description****Defaults**

The aggregate port is not created by default.

**Command**

Global configuration mode

**Mode****Usage Guide**

If the aggregate port is created, this command is used to enter the interface configuration mode. Otherwise, this command is used to create the aggregate port and then enter its interface configuration mode.

**Configuration** The following example creates AP 5 and enters its interface configuration mode.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# interfaces aggregateport 5
Ruijie(config-if-Aggregateport 5)# end
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform**

N/A

**Description**

### 3.10 ipv4 field

Use this command to configure the IPv4 load balance mode for a specified profile. Use the **no** form of this command to restore the default setting.

**ipv4 field** [ **src-ip** ] [ **dst-ip** ] [ **protocol** ] [ **I4-src-port** ] [ **I4-dst-port** ] [ **vlan** ]

**no ipv4 field**

| Parameter   | Parameter          | Description                                                              |
|-------------|--------------------|--------------------------------------------------------------------------|
| Description | <b>src-ip</b>      | Load balance based on the source IP address of the IPv4 packet.          |
|             | <b>dst-ip</b>      | Load balance based on the destination IP address of the IPv4 packet.     |
|             | <b>protocol</b>    | Load balance based on the protocol type of the IPv4 packet.              |
|             | <b>I4-src-port</b> | Load balance based on the L4 source port number of the IPv4 packet.      |
|             | <b>I4-dst-port</b> | Load balance based on the L4 destination port number of the IPv4 packet. |
|             | <b>vlan</b>        | Load balance based on the VLAN ID of the IPv4 packet.                    |

**Defaults** The default load balance mode is **src-ip** and **dst-ip**.

**Command Mode** Load balance profile configuration mode

**Usage Guide** You need to configure the load balance profile first.

**Configuration Examples** The following example sets the IPv4 load balance mode for profile apl to **src-ip**.

```
Ruijie# configure terminal
Ruijie(config)# load-balance-profile apl
Ruijie(config-load-balance-profile)# ipv4 field src-ip
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

### 3.11 ipv6 field

Use this command to configure the IPv6 load balance mode for a specified profile. Use the **no** form of this command to restore the default setting.

**ipv6 field** [ **src-ip** ] [ **dst-ip** ] [ **protocol** ] [ **I4-src-port** ] [ **I4-dst-port** ] [ **vlan** ]

**no ipv6 field**

| Parameter | Parameter | Description |
|-----------|-----------|-------------|
|-----------|-----------|-------------|

|                    |                    |                                                                            |
|--------------------|--------------------|----------------------------------------------------------------------------|
| <b>Description</b> | <b>src-ip</b>      | Load balance based on the source IP addresses of the IPv6 packets.         |
|                    | <b>dst-ip</b>      | Load balance based on the destination IP addresses of the IPv6 packets.    |
|                    | <b>protocol</b>    | Load balance based on the protocol types of the IPv6 packets.              |
|                    | <b>I4-src-port</b> | Load balance based on the L4 source port numbers of the IPv6 packets.      |
|                    | <b>I4-dst-port</b> | Load balance based on the L4 destination port numbers of the IPv6 packets. |
|                    | <b>vlan</b>        | Load balance based on the VLAN ID of the IPv4 packet.                      |

**Defaults** The default load balance mode is **src-ip** and **dst-ip**.

**Command Mode** Load balance profile configuration mode

**Usage Guide** You need to configure the load balance profile first.

**Configuration** The following example sets the load balance mode of IPv6 packets to **src-ip**.

```
Ruijie(config)# load-balance-profile apl
Ruijie(config-load-balance-profile)# ipv6 field src-ip
```

| <b>Related Commands</b> | <b>Command</b> | <b>Description</b> |
|-------------------------|----------------|--------------------|
|                         | N/A            | N/A                |

**Platform Description** N/A

### 3.12 I2 field

Use this command to configure the load balance mode of L2 packets for a specified profile. Use the **no** form of this command to restore the default setting.

**I2 field [ src-mac ] [ dst-mac ] [ vlan ]**

**no I2 field**

| <b>Parameter Description</b> | <b>Parameter</b> | <b>Description</b>                                                   |
|------------------------------|------------------|----------------------------------------------------------------------|
|                              | <b>src-mac</b>   | Load balance based on the source MAC address of the L2 packet.       |
|                              | <b>dst-mac</b>   | Load balance based on the destination MAC address of the L2 packets. |
|                              | <b>vlan</b>      | Load balance based on the VLAN ID of the L2 packet.                  |

**Defaults** The default load balance mode is **src-mac**, **dst-mac**, and **vlan**.

**Command Mode** Load balance profile configuration mode

**Usage Guide** You need to configure the load balance profile first.

**Configuration** The following example sets the load balance mode of L2 packets to **src-mac** and **src-prot**.

**Examples**

```
Ruijie(config)# load-balance-profile apl
Ruijie(config-load-balance-profile)# l2 field src-mac src-port
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

### 3.13 lacp individual-port enable

Use this command to enable the LACP independent port function. Use the **no** form of this command to restore the default setting.

**lacp individual-port enable**

**no lacp individual-port enable**

| Parameter          | Parameter | Description |
|--------------------|-----------|-------------|
| <b>Description</b> | N/A       | N/A         |

**Defaults** By default, the LACP independent port function is disabled.

**Command Mode** Interface configuration mode

**Usage Guide** (Optional) Perform this operation when the LACP member port cannot perform LACP negotiation and need to be changed to a common physical port.  
After this function is enabled, the member port becomes an independent port (a common physical port) if LACP negotiation fails because the port does not receive LACP packets from the peer end within the set time-out period.

**Configuration** This example shows how to enable the independent port function for GigabitEthernet 0/1.

**Examples**

```
Ruijie(config)# interface GigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)# port-group 1 mode active
Ruijie(config-if-GigabitEthernet 0/1)# lacp individual enable
Ruijie(config-if-GigabitEthernet 0/1)# end
Ruijie# show interface aggregateport 1
...
Aggregate Port Informations:
  Aggregate Number: 1
  Name: "AggregatePort 1"
  Members: (count=1)
```

```
Primary Port: GigabitEthernet 0/1
GigabitEthernet 0/1      Link Status: Up   LACP Status: individual ...
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform  
Description**

N/A

### 3.14 lacp port-priority

Use this command to set the priority of the LACP AP member port. Use the **no** form of this command to restore the default setting.

**lacp port-priority** *port-priority*

**no lacp port-priority**

**Parameter  
Description**

| Parameter            | Description                                           |
|----------------------|-------------------------------------------------------|
| <i>port-priority</i> | The LACP port priority, in the range from 0 to 65535. |

**Defaults** The default is 32768.

**Command  
Mode** Interface configuration mode

**Usage Guide** N/A

**Configuration** This example sets the LACP port priority of interface Gi0/1 to 4096.

**Examples**

```
Ruijie(config)# interface gigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)# lacp port-priority 4096
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform  
Description**

N/A

### 3.15 lacp short-timeout

Use this command to configure the short-timeout mode for the LACP AP member port. Use the **no** form of this command to restore the default setting.

**lacp short-timeout**

**no lacp short-timeout**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** The default is long-timeout mode.

**Command Mode** Interface configuration mode

**Usage Guide** In long-timeout mode, the port sends an LACP packet every 30 seconds. If the packet is not received in 90 seconds, the connection times out.  
In short-timeout mode, the port sends an LACP packet every 1 second. If the packet is not received in 3 seconds, the connection times out.

**Configuration** The following example configures the short-timeout mode for the LACP AP member port.

**Examples**

```
Ruijie(config)# interface gigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)# lacp short-timeout
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

### 3.16 lacp system-priority

Use this command to set the LACP system priority. Use the **no** form of this command to restore the default setting.

**lacp system-priority** *system-priority*

**no lacp system-priority**

| Parameter Description | Parameter              | Description                                             |
|-----------------------|------------------------|---------------------------------------------------------|
|                       | <i>system-priority</i> | The LACP system priority, in the range from 0 to 65535. |

**Defaults** The default is 32768.

**Command Mode** Global configuration mode.

**Usage Guide**

**Configuration** The following example sets the LACP system priority to 4096.

**Examples**

```
Ruijie(config)# lacp system-priority 4096
```

| Related Commands | Command                         | Description                                           |
|------------------|---------------------------------|-------------------------------------------------------|
|                  |                                 | <code>port-group key mode { active   passive }</code> |
|                  | <code>lacp port-priority</code> | Sets the LACP port priority.                          |

**Platform** N/A

**Description**

### 3.17 load-balance-profile

Use this command to rename a load balance enhanced profile and apply the profile. Use the **default** form of this command to restore the default setting.

**load-balance-profile** *profile-name*

**no load-balance-profile** *profile-name*

**no load-balance-profile**

| Parameter          | Parameter           | Description                                                     |
|--------------------|---------------------|-----------------------------------------------------------------|
| <b>Description</b> | <i>profile-name</i> | Specifies the profile name, which contains up to 31 characters. |

**Defaults** The default *profile-name* is default.

**Command** Global configuration mode.

**Mode**

**Usage Guide** By default, the device is configured with an enhanced profile named default. Use the **load-balance-profile default** command to enter the enhanced profile configuration mode. You can change the profile name by using the **load-balance-profile** *profile-name* command.

**Configuration** The following example creates a load balance profile named **apl**.

**Examples**

```
Ruijie(config)# load-balance-profile apl
Warning: The profile default has been used, and this command will rename it. Continue? [Y/N]:y
Ruijie(config-load-balance-profile)#
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  |         | N/A         |

**Platform** N/A

**Description**



## 3.18 port-group

Use this command to assign a physical interface to be a member port of a static aggregate port or an LACP aggregate port. Use the **no** form of this command to restore the default setting.

**port-group** *port-group-number*

**port-group** *key-number* **mode** { **active** | **passive** }

**no port-group**

| Parameter   | Parameter                | Description                                                                                                                                    |
|-------------|--------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|
| Description | <i>port-group-number</i> | Member group ID of an aggregate port, the interface number of the aggregate port.                                                              |
|             | <i>key-number</i>        | Member group ID of an LACP aggregate port, the interface number of the LACP aggregate port.                                                    |
|             | <b>active</b>            | Places a port into an active negotiating state, in which the port initiates negotiations with remote ports by sending LACP packets.            |
|             | <b>passive</b>           | Places a port into a passive negotiating state, in which the port responds to LACP packets it receives but does not initiate LACP negotiation. |

**Defaults** By default, the physical port does not belong to any aggregate port.

**Command** Interface configuration mode.

**Mode**

**Usage Guide** All the members of an aggregate port belong to a VLAN or configured to be trunk ports. The ports belonging to different native VLANs cannot form an aggregate port.

**Configuration** The following example specifies the Ethernet interface 1/3 as a member of the static AP 3.

**Examples**

```
Ruijie(config)# interface gigabitethernet 1/3
```

```
Ruijie(config-if-GigabitEthernet 1/3)# port-group 3
```

The following example specifies the Ethernet interface 2/3 as a member of the LACP AP4 and set the aggregation mode to active.

```
Ruijie(config)# interface gigabitethernet 2/3
```

```
Ruijie(config-if-GigabitEthernet 2/3)# port-group 4 mode active
```

| Related  | Command | Description |
|----------|---------|-------------|
| Commands | N/A     | N/A         |

**Platform** N/A

**Description**

## 3.19 show aggregateport

Use this command to display the aggregate port configuration.

**show aggregateport** *aggregate-port-number* [ **load-balance** | **summary** ]

| Parameter   | Parameter                    | Description                                                |
|-------------|------------------------------|------------------------------------------------------------|
| Description | <i>aggregate-port-number</i> | Number of the aggregate port.                              |
|             | <b>load-balance</b>          | Displays the load-balance algorithm on the aggregate port. |
|             | <b>summary</b>               | Displays the summary of the aggregate port.                |

**Defaults** N/A

**Command Mode** Any mode

**Usage Guide** If the aggregate port number is not specified, all the aggregate port information will be displayed.

**Configuration Examples** The following example displays the aggregate port configuration.

```
Ruijie# show aggregateport 1 summary
AggregatePort  MaxPorts  SwitchPort Mode    Load balance    Ports
-----
-----
Ag1              8          Enabled  ACCESS  dst-mac          Gi0/2
```

| Field         | Description                                                                                                                                                          |
|---------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| AggregatePort | Indicates AP name.                                                                                                                                                   |
| MaxPorts      | Indicates the maximum number of ports an AP can support.                                                                                                             |
| SwitchPort    | Indicates whether the AP is a switch port or not. "Enabled" indicates the AP is a switch port, while "Disabled" means the AP is not a switch port.                   |
| Mode          | Indicates the AP Mode, which can be ACCESS, TRUNK, TUNNEL, HYBRID, UPLINK, HOST, or PROMIS. When the AP is not a switch port, nothing is displayed under this field. |
| Load balance  | Indicates load balancing mode of the AP.                                                                                                                             |
| Ports         | Indicates the name of an AP member.                                                                                                                                  |

The following example displays the configuration information of **load-balance** globally.

```
Ruijie#show aggregateport load-balance
Load-balance      : Source MAC and Destination MAC
Hash-elasticity   : enable
Algorithm mode
current: 3, default: 0
Hash-disturb(Expert Mode):
current seed: 1, offset 0.
default seed: 0, offset 0.
Hash-disturb(Expert Mode):
```

```
current seed: 1, offset 0.
default seed: 0, offset 0.
```

| Field                     | Description                                                                                                                                                                                         |
|---------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Load-balance              | Indicates global load balancing mode.                                                                                                                                                               |
| Hash-elasticity           | Indicates whether Hash elasticity is enabled.                                                                                                                                                       |
| Algorithm mode            | Indicates Hash load-balancing algorithm mode.                                                                                                                                                       |
| Hash-disturb(Expert Mode) | Indicates the seed and offset values of Hash disturbance. Not all models are able to display this such information.<br>“Current” stands for the current values, and “default” for the default ones. |

| Related Commands | Command                           | Description                                |
|------------------|-----------------------------------|--------------------------------------------|
|                  | <b>aggregateport load-balance</b> | Configures a load-balance algorithm of AP. |

**Platform** N/A

**Description**

## 3.20 show aggregateport capacity

Use this command to display the AP capacity mode and the AP number.

**show aggregateport capacity**

| Parameter          | Parameter | Description |
|--------------------|-----------|-------------|
| <b>Description</b> | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Any mode

**Usage Guide** N/A

**Configuration Examples** The following example displays the AP capacity mode and the AP number.

```
Ruijie# show aggregateport capacity
AggregatePort Capacity Information:
Configuration Capacity Mode: 128*16.
Effective Capacity Mode      : 256*8.
Available Capacity           : 128*8.
Total Number: 128, Used: 1, Available: 127.
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

### 3.21 show lacp summary

Use this command to display the LACP aggregation information.

**show lacp summary** [*key-number* ]

| Parameter Description | Parameter         | Description                                 |
|-----------------------|-------------------|---------------------------------------------|
|                       | <i>key-number</i> | Specifies the aggregation group id to show. |

**Defaults** N/A

**Command** Any mode.

**Mode**

**Usage Guide** N/A

**Configuration** The following example displays the LACP aggregation information.

**Examples**

```
Ruijie(config)# show lacp summary 3
System Id:32768, 00d0.f8fb.0002
Flags: S - Device is requesting Slow LACPDUs
F - Device is requesting Fast LACPDUs.
A - Device is in active mode.          P - Device is in passive mode.
Aggregate port 3:
Local information:
LACP port      Oper   Port   Port
Port   Flags   State  Priority   Key   Number  State
-----
Gi0/1   SA     bndl   4096     0x3   0x1     0x3d
Gi0/2   SA     bndl   4096     0x3   0x2     0x3d
Gi0/3   SA     bndl   4096     0x3   0x3     0x3d
Partner information:
                LACP port      Oper   Port   Port
Port   Flags   Priority  Dev ID  Key   Number  State
-----
Gi0/1   SA     61440   00d0.f800.0002  0x3   0x1     0x3d
Gi0/2   SA     61440   00d0.f800.0002  0x3   0x2     0x3d
Gi0/3   SA     61440   00d0.f800.0002  0x3   0x3     0x3d
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
|---------|-------------|

|                                   |                                                                                         |
|-----------------------------------|-----------------------------------------------------------------------------------------|
| <b>port-group</b> <i>key mode</i> | Enables the LACP on the port and specifies the aggregation group ID and operation mode. |
|-----------------------------------|-----------------------------------------------------------------------------------------|

**Platform** N/A

**Description**

### 3.22 show load-balance-profile

Use this command to display the enhanced profile.

**show load-balance-profile** [ *profile-name* ]

| Parameter          | Parameter           | Description                 |
|--------------------|---------------------|-----------------------------|
| <b>Description</b> | <i>profile-name</i> | Specifies the profile name. |

**Defaults** -

**Command** Any mode.

**Mode**

**Usage Guide** All enhanced profiles are displayed if the profile name is not specified.

**Configuration** The following example displays the enhanced profile of module0.

**Examples**

```
Ruijie# show load-balance-profile module0
Load-balance-profile: module0
Packet Hash Field:
IPv4: src-ip dst-ip
IPv6: src-ip dst-ip
L2 : src-mac dst-mac vlan
```

| Related         | Command | Description |
|-----------------|---------|-------------|
| <b>Commands</b> | N/A     | N/A         |

**Platform** N/A

**Description**

## 4 VLAN Commands

### 4.1 add

Use this command to add one or a group Access interface into current VLAN. Use the **no** or **default** form of the command to remove the Access interface.

**add interface** { *interface-id* | **range** *interface-range* }

**no add interface** { *interface-id* | **range** *interface-range* }

**default add interface** { *interface-id* | **range** *interface-range* }

| Parameter Description | Parameter                           | Description                                                 |
|-----------------------|-------------------------------------|-------------------------------------------------------------|
|                       | <i>interface-id</i>                 | Layer-2 Ethernet interface or layer-2 AP port.              |
|                       | <b>range</b> <i>interface-range</i> | Range of the Layer-2 Ethernet interface or layer-2 AP port. |

**Defaults** All layer-2 Ethernet interfaces are in the VLAN1.

**Command mode** VLAN configuration mode.

**Usage Guide** This command is only valid for the access port.  
 The configuration of this command is the same as specifying the VLAN to which interface belongs in the interface configuration mode (that is the **switchport access vlan** *vlan-id* command). For the two commands of adding the interface to the VLAN, the command configured later will overwrite the one configured before and take effect.  
 The configuration of adding the layer-2 AP into current VLAN through this command will only take effect for the layer-2 AP port, but not for the member port of the layer-2 AP port.

**Configuration Examples** The following example adds the interface GigabitEthernet 0/10 to VLAN20.

```
Ruijie# configure terminal
SwitchA(config)#vlan 20
SwitchA(config-vlan)#add interface GigabitEthernet 0/10
Ruijie# show interface GigabitEthernet 0/10 switchport
Interface  Switchport  Mode  Access  Native  Protected  VLAN lists
-----  -
GigabitEthernet 0/10  enabled  ACCESS  20    1    Disabled  ALL
```

The following example adds the interface range GigabitEthernet 0/1-10 to VLAN200.

```
Ruijie# configure terminal
SwitchA(config)#vlan 200
SwitchA(config-vlan)#add interface range GigabitEthernet 0/1-10
Ruijie# show vlan
```

```
SwitchA#show vlan
VLAN Name          Status          Ports
-----
1 VLAN0001    STATIC    Gi0/11,Gi0/12,Gi0/13,Gi0/14,Gi0/15,
Gi0/16,Gi0/17,Gi0/18,Gi0/19,Gi0/20,Gi0/21, Gi0/22, Gi0/23, Gi0/24
200 VLAN0200  STATIC    Gi0/1,Gi0/2,Gi0/3,Gi0/4,Gi0/5,
Gi0/6,Gi0/7,Gi0/8,Gi0/9,Gi0/10
```

The following example adds the AggregatePort10 to VLAN20.

```
Ruijie# configure terminal
SwitchA(config)#vlan 20
SwitchA(config-vlan)#add interface aggregateport 10
Ruijie# show interface aggregateport 10 switchport
Interface Switchport Mode Access Native Protected VLAN lists
-----
AggregatePort 10 enabled ACCESS 20 1 Disabled ALL
```

#### Related Commands

| Command                                                     | Description                      |
|-------------------------------------------------------------|----------------------------------|
| <b>show interface</b> <i>interface-id</i> <b>switchport</b> | Displays the layer-2 interfaces. |

**Platform** N/A

**Description**

## 4.2 name

Use this command to specify the name of a VLAN. Use the **no** or **default** form of this command to restore the default setting.

**name** *vlan-name*

**no name**

**default name**

#### Parameter Description

| Parameter        | Description |
|------------------|-------------|
| <i>vlan-name</i> | VLAN name   |

#### Defaults

The default name of a VLAN is the combination of "VLAN" and VLAN ID, for example, the default name of the VLAN 2 is "VLAN0002".

#### Command mode

VLAN configuration Mode.

#### Usage Guide

N/A

**Configuration** The following example sets the name of VLAN to 10.

**Examples**

```
Ruijie(config)# vlan 10
Ruijie(config-vlan)# name vlan10
```

**Related  
Commands**

| Command          | Description                        |
|------------------|------------------------------------|
| <b>show vlan</b> | Displays member ports of the VLAN. |

**Platform** N/A

**Description**

## 4.3 show vlan

Use this command to display member ports of the VLAN.

**show vlan [ id *vlan-id* ]**

**Parameter  
Description**

| Parameter      | Description |
|----------------|-------------|
| <i>vlan-id</i> | VLAN ID     |

**Defaults** N/A

**Command  
mode** All modes

**Usage Guide** N/A

**Configuration** The following command displays the status of VLAN 1.

**Examples**

```
Ruijie(config-vlan)#show vlan id 20
VLAN Name                Status    Ports
-----
20 VLAN0020              STATIC   Gi0/1
```

The following command displays the status of all VLANs.

```
Ruijie(config-vlan)#show vlan
VLAN Name                Status    Ports
-----
1 VLAN0001              STATIC   Gi0/1, Gi0/2, Gi0/4, Gi0/5
```



```

                Gi0/6, Gi0/7, Gi0/8, Gi0/9
                Gi0/10, Gi0/11, Gi0/12, Gi0/13
                Gi0/14, Gi0/15, Gi0/16, Gi0/17
                Gi0/18, Gi0/19, Gi0/20, Gi0/21
                Gi0/22, Gi0/23, Gi0/24
2-3 VLAN0002-VLAN0003          STATIC   Gi0/1
20 VLAN0020                   STATIC   Gi0/1

```

**Related  
Commands**

| Command                  | Description                   |
|--------------------------|-------------------------------|
| <b>name</b>              | VLAN name.                    |
| <b>switchport access</b> | Adds the interface to a VLAN. |

**Platform** N/A  
**Description**

## 4.4 switchport access

Use this command to configure an interface as a static access port and assign it to a VLAN. Use the **no** or **default** form of the command to assign the port to the default VLAN.

**switchport access vlan** *vlan-id*  
**no switchport access vlan**  
**default switchport access vlan**

**Parameter  
Description**

| Parameter      | Description                                |
|----------------|--------------------------------------------|
| <i>vlan-id</i> | The VLAN ID at which the port to be added. |

**Defaults** By default, the switch port is an access port and the VLAN is VLAN 1.

**Command mode** Interface configuration mode.

**Usage Guide** Enter one VLAN ID. The system will create a new one and add the interface to the VLAN if you enter a new VLAN ID. If the VLAN ID already exists, the command adds the port to the VLAN.  
If the port is a trunk port, the operation does not take effect.

**Configuration Examples**

```

Ruijie(config)# interface gigabitethernet 1/1
Ruijie(config-if)# switchport access vlan 2

```

**Related  
Commands**

| Command | Description |
|---------|-------------|
|---------|-------------|

|                         |                                                                      |
|-------------------------|----------------------------------------------------------------------|
| <b>switchport mode</b>  | Specifies the interface as Layer 2 mode (switch port mode).          |
| <b>switchport trunk</b> | Specifies a native VLAN and the allowed-VLAN list for the trunkport. |

**Platform** N/A

**Description**

## 4.5 switchport hybrid allowed

Use this command to add the port to the VLAN or remove the port from the VLAN, Use the **no** or **default** form of this command to restore the default setting.

**switchport hybrid allowed vlan** { { [ **add** | **only** ] **tagged** *vlist* | [ **add** ] **untagged** *vlist* } | **remove** *vlist* }

**no switchport hybrid allowed vlan**

**default switchport hybrid allowed vlan**

| Parameter Description | Parameter       | Description                                                                                       |
|-----------------------|-----------------|---------------------------------------------------------------------------------------------------|
|                       | <b>add</b>      | Adds the port to the VLAN.                                                                        |
|                       | <b>only</b>     | Adds the port to the VLAN and removes the port from the VLANs not on the VLAN list.               |
|                       | <b>tagged</b>   | Adds the port to the VLAN and the VLAN packets going out on the port are tagged with VLAN ID.     |
|                       | <b>untagged</b> | Adds the port to the VLAN and the VLAN packets going out on the port are not tagged with VLAN ID. |
|                       | <b>remove</b>   | Removes the port from the VLAN.                                                                   |
|                       | <i>vlist</i>    | Specifies the VLAN.                                                                               |

**Defaults** By default, the hybrid port is in all VLANs. All VLAN packets (except native VLAN packets) going out on the port are tagged with VLAN ID. Native VLAN packets are not tagged with VLAN ID.

**Command mode** Interface configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example adds the hybrid port to VLAN 20 and VLAN 30 and the VLAN packets going out on the port are not tagged with VLAN ID.

```
Ruijie(config)# interface gigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)# switchport mode hybrid
Ruijie(config-if-GigabitEthernet 0/1)#switchport hybrid allowed vlan untagged
20
Ruijie(config-if-GigabitEthernet 0/1)#switchport hybrid allowed vlan add
```

```
untagged 30
```

The following example adds the hybrid port to VLAN 40 and VLAN 50 and the VLAN packets going out on the port are tagged with VLAN ID,

```
Ruijie(config)# interface gigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)#switchport mode hybrid
Ruijie(config-if-GigabitEthernet 0/1)#switchport hybrid allowed vlan tagged
40
Ruijie(config-if-GigabitEthernet 0/1)#switchport hybrid allowed vlan tagged
50
```

The following example removes the hybrid port from VLAN 20.

```
Ruijie(config)# interface gigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)#switchport mode hybrid
Ruijie(config-if-GigabitEthernet 0/1)#switchport hybrid allowed vlan remove
20
```

The following example adds the hybrid port to VLAN 20 and deletes all the other VLANs. The VLAN packets going out on the port are tagged with VLAN ID.

```
Ruijie(config)# interface gigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)#switchport mode hybrid
Ruijie(config-if-GigabitEthernet 0/1)#switchport hybrid allowed vlan only
tagged 20
```

#### Related Commands

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

#### Platform Description

N/A

## 4.6 switchport hybrid native

Use this command to configure the native VLAN for the hybrid port. Use the **no** or **default** form of this command to restore the default setting.

**switchport hybrid native vlan** *vlan-id*

**no switchport hybrid native vlan**

**default switchport hybrid native vlan**

#### Parameter Description

| Parameter      | Description                                     |
|----------------|-------------------------------------------------|
| <i>vlan-id</i> | Configures the native VLAN for the hybrid port. |

#### Defaults

The default is VLAN 1.

**Command mode** Interface configuration mode

**Usage Guide** Native VLAN packets going out on the hybrid port are not tagged with VLAN ID. Packets not tagged with VLAN ID coming in on the hybrid port are taken as native VLAN packets.

**Configuration Examples** The following example configures VLAN 20 as the native VLAN for hybrid port GigabitEthernet 0/1.

```
Ruijie(config-if-GigabitEthernet 0/1)#interface gigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)#switchport mode hybrid
Ruijie(config-if-GigabitEthernet 0/1)#switchport hybrid native vlan 20
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A

## 4.7 switchport mode

Use this command to specify a L2 interface (switch port) mode. You can specify this interface to be an access port or a trunk port. Use the **no** or **default** form of this command to restore the default setting.

**switchport mode { access | trunk | hybrid | uplink }**

**no switchport mode**

**default switchport mode**

**Parameter Description**

| Parameter     | Description                                   |
|---------------|-----------------------------------------------|
| <b>access</b> | Configures the switch port as an access port. |
| <b>trunk</b>  | Configures the switch port as a trunk port.   |
| <b>hybrid</b> | Configures the switch port as a hybrid port.  |
| <b>uplink</b> | Configures the switch port as an uplink port. |

**Defaults** By default, the switch port is an access port.

**Command mode** Interface configuration mode.

**Usage Guide** If a switch port is an access port, the port can be added only to one VLAN. You can run the **switchport access vlan** command to specify the VLAN to which the port belongs. If a switch port is a trunk port, the port is added to all VLANs by default. You can also run the **switchport trunk allowed** command to add the port to or remove the port from a specified VLAN. If a switch port is an uplink port, the port is added to all VLANs by default. Different from the trunk

port, the uplink port sends packets with a tag carried, that is, the tag of packets from default VLANs will not be deleted. You can run the **switchport trunk allowed** command to add the port to or remove the port from a specified VLAN.

If a switch port is a hybrid port, the port is added to all VLANs by default. Different from a trunk port, a hybrid port can be added to a VLAN in tag or untag mode by running the **switchport hybrid allowed** command.

**Configuration** The following example configures port 1 as an access port.

**Examples**

```
Ruijie(config)#int g 0/1
Ruijie(config-if-GigabitEthernet 0/1)#switchport mode access
```

The following example configures port 1 as a trunk port.

```
Ruijie(config)#int g 0/1
Ruijie(config-if-GigabitEthernet 0/1)# switchport mode trunk
```

The following example configures port 1 as an uplink port.

```
Ruijie(config)#int g 0/1
Ruijie(config-if-GigabitEthernet 0/1)# switchport mode uplink
```

The following example configures port 1 as a hybrid port.

```
Ruijie(config)#int g 0/1
Ruijie(config-if-GigabitEthernet 0/1)# switchport mode hybrid
```

**Related Commands**

| Command                  | Description                                                                |
|--------------------------|----------------------------------------------------------------------------|
| <b>switchport access</b> | Configures an interface as a statics access port and assigns it to a VLAN. |
| <b>switchport trunk</b>  | Specifies a native VLAN and the allowed-VLAN list for the trunkport.       |

**Platform** N/A

**Description**

## 4.8 switchport trunk allowed vlan

Use this command to add the trunk/uplink port to the VLAN or remove a trunk/uplink port from the VLAN. Use the **no** or **default** form of the command to restore the default setting.

**switchport trunk allowed vlan { all | { add *vlan-list* | remove *vlan-list* | except *vlan-list* | only *vlan-list* } }**

**no switchport trunk allowed vlan**

**default switchport trunk allowed vlan**

**Parameter Description**

| Parameter  | Description                              |
|------------|------------------------------------------|
| <b>all</b> | Adds the trunk/uplink port to all VLANs. |

|                  |                                                                                                            |
|------------------|------------------------------------------------------------------------------------------------------------|
| <b>add</b>       | Adds the trunk/uplink port to the VLAN.                                                                    |
| <b>remove</b>    | Removes the trunk/uplink port from the VLAN port.                                                          |
| <b>except</b>    | Removes the trunk/uplink port from the VLAN and adds the port to all the other VLANs.                      |
| <b>only</b>      | Adds the trunk/uplink port to the specified VLAN and removes the port from the VLANs not on the VLAN list. |
| <i>vlan-list</i> | Specifies the VLAN.                                                                                        |

**Defaults** The trunk/unlink port is in all VLANs by default.

**Command mode** Interface configuration mode.

**Usage Guide** A trunk/uplink port transmits all VLAN (1-4094) data by default. You can block some VLAN data by configuring this command. Use the **show interfaces** command to display configuration.

**Configuration** The following example removes trunk port GigabitEthernet 0/10 from VLAN 2.

```
Ruijie(config)# interface gigabitEthernet 0/10
Ruijie(config-if-GigabitEthernet 0/10)# switchport mode trunk
Ruijie(config-if-GigabitEthernet 0/10)# switchport trunk allowed vlan remove 2
```

The following example removes trunk port GigabitEthernet 0/10 from VLAN 2.

```
Ruijie(config)# interface gigabitEthernet 0/10
Ruijie(config-if-GigabitEthernet 0/10)# switchport trunk allowed vlan except 10
```

The following example removes uplink port GigabitEthernet 0/10 from VLAN 10.

```
Ruijie(config)# interface gigabitEthernet 0/10
Ruijie(config-if-GigabitEthernet 0/10)# switchport mode uplink
Ruijie(config-if-GigabitEthernet 0/10)# switchport trunk allowed vlan remove 10
```

The following example adds uplink port GigabitEthernet 0/10 to all VLANs except VLAN10.

```
Ruijie(config)# interface gigabitEthernet 0/10
Ruijie(config-if-GigabitEthernet 0/10)# switchport trunk allowed vlan except 10
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 4.9 switchport trunk native vlan

Use this command to configure the native VLAN for the trunk/uplink port. Use the **no** or **default** form of this command to restore the default setting.

**switchport trunk native vlan** *vlan-id*

**no switchport trunk native vlan**

**default switchport trunk native vlan**

| Parameter Description | Parameter      | Description     |
|-----------------------|----------------|-----------------|
|                       | <i>vlan-id</i> | Native VLAN ID. |

**Defaults** By default, the native VLAN for the trunk/uplink port is VLAN 1.

**Command mode** Interface configuration mode

**Usage Guide** After this function is enabled, packets not tagged with VLAN ID are taken as native VLAN packets. Tags are removed from native VLAN packets going out on the trunk port.

**Configuration Examples** The following example configures VLAN 10 as the native VLAN for trunk port GigabitEthernet 0/10.

### Examples

```
Ruijie(config)#interface gigabitEthernet 0/10
Ruijie(config-if-GigabitEthernet 0/10)# switchport mode trunk
Ruijie(config-if-GigabitEthernet 0/10)# switch trunk native vlan 10
```

The following example configures VLAN 10 as the native VLAN for unlink port GigabitEthernet 0/10.

```
Ruijie(config)#interface gigabitEthernet 0/10
Ruijie(config-if-GigabitEthernet 0/10)# switchport mode uplink
Ruijie(config-if-GigabitEthernet 0/10)# switch trunk native vlan 10
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 4.10 vlan

Use this command to enter the VLAN configuration mode. Use the **no** or **default** form of this command to restore the default setting.

**vlan** { *vlan-id* | **range** *vlan-range* }

**no vlan** { *vlan-id* | **range** *vlan-range* }

**default vlan** { *vlan-id* | **range** *vlan-range* }

| <b>Parameter Description</b> | <b>Parameter</b>  | <b>Description</b>                                  |
|------------------------------|-------------------|-----------------------------------------------------|
|                              | <i>vlan-id</i>    | VLAN ID<br>Default VLAN (VLAN 1) cannot be removed. |
|                              | <i>vlan-range</i> | VLAN ID range.                                      |

**Defaults** The default is static VLAN.

**Command mode** Global configuration mode.

**Usage Guide** N/A

**Configuration Examples** The following example creates VLAN 10.

```
Ruijie(config)# vlan 10
Ruijie(config-vlan)#
```

| <b>Related Commands</b> | <b>Command</b>   | <b>Description</b>                 |
|-------------------------|------------------|------------------------------------|
|                         | <b>show vlan</b> | Displays member ports of the VLAN. |

**Platform Description** N/A



## 5 Super-VLAN Commands

### 5.1 proxy-arp

Use this command to enable the proxy ARP function for a VLAN. Use the **no** form of this command to disable this function. Use the **default** form of this command to restore the default setting.

**proxy-arp**

**no proxy-arp**

**default proxy-arp**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** This function is enabled by default.

**Command mode** VLAN configuration Mode.

**Usage Guide** Super VLAN and sub VLAN must be both enabled with proxy ARP.

**Configuration Examples** The following example enables the proxy ARP function for VLAN 3.

```
Ruijie(config)# vlan 3
Ruijie(config-vlan)# proxy-arp
```

The following example disables the proxy ARP function for VLAN 3.

```
Ruijie(config)# vlan 3
Ruijie(config-vlan)# no proxy-arp
```

| Related Commands | Command               | Description                          |
|------------------|-----------------------|--------------------------------------|
|                  | <b>show supervlan</b> | Displays the super VLAN information. |

**Platform** N/A  
**Description**

### 5.2 show supervlan

Use this command to display the configuration of the super VLAN and its sub VLANs.

**show supervlan**

**show supervlan** *vlan-id*

| Parameter Description | Parameter      | Description |
|-----------------------|----------------|-------------|
|                       | <i>vlan-id</i> | VLAN ID     |

**Defaults** N/A

**Command mode** Any mode

**Usage Guide** N/A

**Configuration** The following example displays the configuration of super VLAN 2.

**Examples**

```
SwitchA(config-if-range)# show supervlan 2
supervlan id supervlan arp-proxy subvlan id subvlan arp-proxy subvlan ip
range
-----
      2          ON      10      ON      192.168.196.10 - 192.168.196.50
                          20      ON      192.168.196.60 - 192.168.196.100
                          30      ON      192.168.196.110 - 192.168.196.150
```

The following example displays the configuration of all super VLANs.

```
SwitchA(config-if-range)# show supervlan
supervlan id supervlan arp-proxy subvlan id subvlan arp-proxy subvlan ip
range
-----
      2          ON      10      ON      192.168.196.10 - 192.168.196.50
                          20      ON      192.168.196.60 - 192.168.196.100
                          30      ON      192.168.196.110 - 192.168.196.150
      6          ON      7-8    ON
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 5.3 subvlan

Use this command to set the sub VLAN for the super VLAN. Use the **no** form of this command to disable this function. Use the **default** form of this command to restore the default setting.

**subvlan** *vlan-id-list*

**no subvlan** [ *vlan-id-list* ]

**default subvlan** [ *vlan-id-list* ]

| Parameter Description | Parameter           | Description                                            |
|-----------------------|---------------------|--------------------------------------------------------|
|                       | <i>vlan-id-list</i> | Sub VLAN ID of the VLAN. Multiple VLANs are supported. |

**Defaults** No super VLAN is set by default.

**Command mode** VLAN configuration Mode.

**Usage Guide** Use the **no subvlan** command to delete all sub VLANs of this super VLAN.

**Configuration** The following example sets the sub VLAN.

**Examples**

```
SwitchA(config)#vlan 2
SwitchA(config-vlan)#supervlan
SwitchA(config-vlan)#subvlan 10,20,30
```

| Related Commands | Command               | Description                          |
|------------------|-----------------------|--------------------------------------|
|                  | <b>show supervlan</b> | Displays the super VLAN information. |

**Platform** N/A  
**Description**

## 5.4 subvlan-address-range

Use this command to set the IP address range of the sub VLAN. Use the **no** form of this command to disable this function. Use the **default** form of this command to restore the default setting.

**subvlan-address-range** *start-ip end-ip*

**no subvlan-address-range**

**default subvlan-address-range**

| Parameter Description | Parameter       | Description                           |
|-----------------------|-----------------|---------------------------------------|
|                       | <i>start-ip</i> | The start IP address of this sub VLAN |
|                       | <i>end-ip</i>   | The end IP address of this sub VLAN   |

**Defaults** No IP address range is set by default.

**Command mode** VLAN configuration Mode.

**Usage Guide** N/A

**Configuration** The following example sets the IP address range for the sub VLAN.

**Examples**

```
Ruijie(config)# vlan 2
Ruijie(config-vlan)#subvlan-address-range 192.168.23.1 192.168.23.5
```

**Related  
Commands**

| Command               | Description                          |
|-----------------------|--------------------------------------|
| <b>show supervlan</b> | Displays the super VLAN information. |

**Platform** N/A**Description**

## 5.5 supervlan

Use this command to set the VLAN as a super VLAN. Use the **no** form of this command to disable this function. Use the **default** form of this command to restore the default setting.

**supervlan****no supervlan****default supervlan****Parameter  
Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** No super VLAN is set by default.**Command  
mode** VLAN configuration Mode.**Usage Guide** No physical port can be added to a super VLAN.**Configuration** The following example configures a Sub VLAN.**Examples**

```
Ruijie(config)# vlan 2
Ruijie(config-vlan)#supervlan
```

**Related  
Commands**

| Command               | Description                          |
|-----------------------|--------------------------------------|
| <b>show supervlan</b> | Displays the super VLAN information. |

**Platform** N/A**Description**

## 6 Private VLAN Commands

### 6.1 debug bridge pvlan

Use this command to enable private VLAN debugging. Use the **no** or **default** form of this command to restore the default setting.

**debug bridge pvlan**

**no debug bridge pvlan**


| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |


**Defaults** Debugging is disabled by default.

**Command mode** Privileged EXEC mode

**Usage Guide** Debugging information includes error and prompt messages appearing during private VLAN configuration.

This command can be used to troubleshoot VLAN and interface configuration failure.

 With private VLAN debugging enabled, all super VLAN configuration and packet processing on SVI is displayed.

 Debugging information helps troubleshooting and fault location.

**Configuration** The following example enables private VLAN debugging.

**Examples** Ruijie# debug bridge pvlan

The following example disables private VLAN debugging.

Ruijie# no debug bridge pvlan

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

### 6.2 private-vlan

Use this command to configure the private VLAN feature. Use the **no** or **default** form of this command to restore the default setting.

**private-vlan { community | isolated | primary }**  
**no private-vlan { community | isolated | primary }**  
**default private-vlan { community | isolated | primary }**

| Parameter Description | Parameter        | Description              |
|-----------------------|------------------|--------------------------|
|                       | <b>community</b> | Sets the community VLAN. |
|                       | <b>isolated</b>  | Sets the isolated VLAN.  |
|                       | <b>primary</b>   | Sets the primary VLAN.   |

**Defaults** No private VLAN feature is configured by default.

**Command mode** VLAN configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example configures the private VLAN feature.

```
Ruijie(config)#vlan 90
Ruijie(config-vlan)#private-vlan primary
Ruijie(config-vlan)#vlan 91
Ruijie(config-vlan)#private-vlan isolated
Ruijie(config-vlan)#vlan 92
Ruijie(config-vlan)#private-vlan community
```

The following example disables the private VLAN feature using the **no private-vlan** command.

```
Ruijie(config)#vlan 90
Ruijie(config-vlan)#no private-vlan primary
Ruijie(config-vlan)#vlan 91
Ruijie(config-vlan)#no private-vlan isolated
Ruijie(config-vlan)#vlan 92
Ruijie(config-vlan)#no private-vlan community
```

The following example disables the private VLAN feature using the **default private-vlan** command.

```
Ruijie(config)#vlan 90
Ruijie(config-vlan)#default private-vlan primary
Ruijie(config-vlan)#vlan 91
Ruijie(config-vlan)#default private-vlan isolated
Ruijie(config-vlan)#vlan 92
Ruijie(config-vlan)#default private-vlan community
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 6.3 private-vlan association

Use this command to associate the secondary VLAN with the primary VLAN on layer 2. Use the **no** or **default** form of this command to restore the default setting.

**private-vlan association** { *svlist* | **add** *svlist* | **remove** *svlist* }

**no private-vlan association**

**default private-vlan association**

| Parameter Description | Parameter                   | Description                            |
|-----------------------|-----------------------------|----------------------------------------|
|                       | <i>svlist</i>               | The secondary VLAN list                |
|                       | <b>add</b> <i>svlist</i>    | Adds the associated secondary VLAN.    |
|                       | <b>remove</b> <i>svlist</i> | Removes the associated secondary VLAN. |

**Defaults** This function is disabled by default.

**Command mode** VLAN configuration Mode.

**Usage Guide** N/A

**Configuration Examples** The following example associates the secondary VLAN with the primary VLAN on layer 2.

```
Ruijie(config)# vlan 22
Ruijie(config-vlan)# private-vlan association add 24-26
```

The following example removes the association between the secondary VLAN with the primary VLAN.

```
Ruijie(config)# vlan 22
Ruijie(config-vlan)# private-vlan association remove 24
```

| Related Commands | Command                       | Description |
|------------------|-------------------------------|-------------|
|                  | <b>show vlan private-vlan</b> | N/A         |

**Platform Description** N/A

## 6.4 private-vlan mapping

Use this command to associate the secondary VLAN with the primary VLAN on layer 3. Use the **no** or **default** form of this command to restore the default setting.

**private-vlan mapping** { *svlist* | **add** *svlist* | **remove** *svlist* }  
**no private-vlan mapping**  
**default private-vlan mapping**

| Parameter Description | Parameter                   | Description                            |
|-----------------------|-----------------------------|----------------------------------------|
|                       | <i>svlist</i>               | Secondary VLAN list.                   |
|                       | <b>add</b> <i>svlist</i>    | Adds the associated secondary VLAN.    |
|                       | <b>remove</b> <i>svlist</i> | Removes the associated secondary VLAN. |

**Defaults** This function is disabled by default.

**Command mode** Interface configuration mode

**Usage Guide** N/A

**Configuration** The following example associates the secondary VLAN with the primary VLAN on layer 3.

**Examples**

```
Ruijie(config)# interface vlan 22
Ruijie(config-if)# private-vlan mapping add 24-26
```

| Related Commands | Command                       | Description |
|------------------|-------------------------------|-------------|
|                  | <b>show vlan private-vlan</b> | N/A         |

**Platform** N/A  
**Description**

## 6.5 show vlan private-vlan

Use this command to display the private VLAN configuration.

**show vlan private-vlan** [ **community** | **primary** | **isolated** ]

Use this command to display all the private VLANs configuration.

**show vlan private-vlan**

| Parameter Description | Parameter        | Description                              |
|-----------------------|------------------|------------------------------------------|
|                       | <b>primary</b>   | Displays the primary VLAN information.   |
|                       | <b>community</b> | Displays the community VLAN information. |
|                       | <b>isolated</b>  | Displays the isolated VLAN information.  |

**Defaults** N/A



**Command mode** All modes

**Usage Guide** N/A

**Configuration** The following example displays the private VLAN configuration.

**Examples**

```
Ruijie# show vlan private-vlan
VLAN  Type      Status  Routed  Ports  Associated
-----
30    primary  inactive Enabled
31    isolated inactive Disabled  No Association
90    primary  active  Disabled 91-92
91    isolated active  Disabled 90
92    community active  Disabled Gi0/1 90
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 6.6 switchport mode private-vlan

Use this command to declare the private VLAN mode of the interface. Use the **no** or **default** form of this command to restore the default setting.

**switchport mode private-vlan { host | promiscuous }**

**no switchport mode**

**default switchport mode**

**Parameter Description**

| Parameter          | Description                          |
|--------------------|--------------------------------------|
| <b>host</b>        | Host mode of the private VLAN        |
| <b>promiscuous</b> | Promiscuous mode of the private VLAN |

**Defaults** The port is an access port by default.

**Command mode** Interface configuration mode.

**Usage Guide** Before a port is configured as an isolated port or promiscuous port, and the port mode must be configured as the host port mode.

The port mode must be configured as the promiscuous mode.

**Configuration** The following example applies the private host mode to the interface.

**Examples**

```
Ruijie(config)# interface gigabitEthernet0/2
Ruijie(config-if)# switchport mode private-vlan host
```

The following example applies the promiscuous mode to the interface.

```
Ruijie(config)# interface gigabitEthernet 0/2
Ruijie(config-if-GigabitEthernet 0/2)#sw mode private-vlan promiscuous
```

**Related Commands**

| Command                       | Description |
|-------------------------------|-------------|
| <b>show vlan private-vlan</b> | N/A         |

**Platform** N/A

**Description**

## 6.7 switchport private-vlan association trunk

Use this command to associate the trunk port in the private VLAN mode, which is associated with the primary VLAN and the secondary VLAN. Use the **no** or **default** form of this command to restore the default settings.

**switchport private-vlan association trunk** *p\_vid s\_vid*

**no switchport private-vlan association trunk**

**default switchport private-vlan association trunk** *p\_vid s\_vid*

**Parameter Description**

| Parameter    | Description                                  |
|--------------|----------------------------------------------|
| <i>p_vid</i> | Primary VID.                                 |
| <i>s_vid</i> | Secondary VID                                |
| <b>no</b>    | Deletes the host port from the private VLAN. |

**Defaults** By default, it is trunk port.

**Command mode** Interface configuration mode.

**Usage Guide** The associated PVLAN must be a VLAN pair on which Layer-2 association is performed.

The interface must work in Trunk port mode.

One Trunk port can be associated with multiple PVLAN pairs.

**Configuration** The following example configures a Trunk port, and associates it with a layer 2 port and private VLAN.

**Examples**

```
Ruijie(config)# interface gigabitEthernet 0/2
Ruijie(config-if)# switchport mode trunk
Ruijie(config-if)# switchport private-vlan association trunk 202 203
```

**Related Commands**

| Command                       | Description |
|-------------------------------|-------------|
| <b>show vlan private-vlan</b> | N/A         |

**Platform** N/A  
**Description**

## 6.8 switchport private-vlan host-association

Use this command to associate the primary VLAN, which is associated with the private VLAN mode of the interface, with the secondary VLAN. Use the **no** or **default** form of this command to restore the default setting.

**switchport private-vlan host-association** *p\_vid* *s\_vid*

**no switchport private-vlan host-association**

**default switchport private-vlan host-association**

**Parameter Description**

| Parameter    | Description   |
|--------------|---------------|
| <i>p_vid</i> | Primary VID.  |
| <i>s_vid</i> | Secondary VID |

**Defaults** This function is disabled by default.

**Command mode** Interface configuration mode.

**Usage Guide** Before a port is configured as an isolated port or promiscuous port, and the port mode must be configured as the host port mode.

Whether a port is configured as an isolated port or community port depends on the *s\_vid* parameter. *p\_vid* and *s\_vid* must be respectively the IDs of the primary VLAN and secondary VLAN in a PVLAN pair, on which Layer-2 association is performed.

One host port can be associated with only one PVLAN pair.

**Configuration** The following example associates the secondary VLAN with the primary VLAN on the host port.

**Examples**

```
Ruijie(config)# interface gigabitEthernet 0/1
Ruijie(config-if)# switchport mode private-vlan host
Ruijie(config-if)# switchport private-vlan host-association 22 23
Ruijie(config-if)# default switchport private-vlan host-association
```

```
Ruijie(config-if)# switchport private-vlan host-association 22 25
```

| Related Commands | Command | Description                   |
|------------------|---------|-------------------------------|
|                  |         | <b>show vlan private-vlan</b> |

**Platform** N/A

**Description**

## 6.9 switchport private-vlan mapping

Use this command to configure the secondary VLAN for the promiscuous port. Use the **no** or **default** form of this command to restore the default setting.

**switchport private-vlan mapping** *p\_vid* { *svlist* | **add** *svist* | **remove** *svlist* }

**no switchport private-vlan mapping**

**default switchport private-vlan mapping**

| Parameter          | Parameter     | Description                                                                                                                          |
|--------------------|---------------|--------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b> | <i>p_vid</i>  | Indicates the primary VLAN ID in a PVLAN pair.                                                                                       |
|                    | <i>svlist</i> | Indicates the secondary VLAN associated with a promiscuous port. Layer-2 association must be performed between it and <i>p_vid</i> . |
|                    | <b>add</b>    | Adds a secondary VLAN to be associated with a port.                                                                                  |
|                    | <b>remove</b> | Cancels the secondary VLAN associated with a port.                                                                                   |

**Defaults** This function is disabled by default.

**Command mode** Interface configuration mode

**Usage Guide** The port mode must be configured as the promiscuous mode.  
Layer-2 association must be performed between the primary and secondary VLAN.

**Configuration** The following example configures the secondary VLAN for the promiscuous port.

**Examples**

```
Ruijie(config)# interface gigabitEthernet 0/1
Ruijie(config-if)# switchport mode private-vlan
promiscuous
Ruijie(config-if)# switchport private-vlan mapping 22 add 23-25
```

| Related Commands | Command | Description                   |
|------------------|---------|-------------------------------|
|                  |         | <b>show vlan private-vlan</b> |

**Platform** N/A

**Description**

## 6.10 switchport private-vlan promiscuous trunk

Use this command to configure the ports as a promiscuous trunk port, which is associated with the L2 port and the private VLAN. Multiple pairs are allowed to associate. Use the **no** or **default** form of this command to restore the default settings.

**switchport private-vlan promiscuous trunk** *p\_vid\_s\_list*

**no switchport private-vlan promiscuous trunk** *p\_vid\_s\_list*

**Parameter Description**

| Parameter     | Description                                                                |
|---------------|----------------------------------------------------------------------------|
| <i>p_vid</i>  | Primary VID                                                                |
| <i>svlist</i> | Secondary VLAN list.                                                       |
| <b>no</b>     | Removes all the relationships between the layer-2 ports and private VLANs. |

**Defaults** N/A

**Command mode** Interface configuration mode

**Usage Guide** The port mode must be a Trunk port.  
Layer-2 association must be performed between the primary and secondary VLAN.

**Configuration Examples**

```
Ruijie(config)# interface gigabitEthernet 0/2
Ruijie(config-if)# switchport mode trunk
Ruijie(config-if)# switchport private-vlan promiscuous trunk 202 203
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A

## 7 MSTP Commands

### 7.1 bpdu src-mac-check

Use this command to enable the BPDU source MAC address check function on the interface. Use the **no** form of this command to restore the default setting.

**bpdu src-mac-check** *H.H.H*

**no bpdu src-mac-check**

| Parameter Description | Parameter    | Description                                                               |
|-----------------------|--------------|---------------------------------------------------------------------------|
|                       | <i>H.H.H</i> | Indicates that only the BPDU messages from this MAC address are received. |

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode.

**Usage Guide** BPDU source MAC address check prevents BPDU packets from maliciously attacking switches and causing MSTP abnormal. When the switch connected to a port on a point-to-point link is determined, you can enable BPDU source MAC address check to receive BPDU packets sent only by the peer switch and discard all other BPDU packets, thereby preventing malicious attacks. You can enable the BPDU source MAC address check in interface configuration mode for a specific port. One port can only filter one MAC address.

**Configuration Examples** The following example indicates only the BPDU with 00d0.f800.1e2f as the source MAC address will be received by interface Gi 1/1 .

```
Ruijie(config)# interface gigabitethernet 1/1
Ruijie(config-if-interface-id-interface-id)# bpdu src-mac-check
00d0.f800.1e2f
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 7.2 bridge-frame forwarding protocol bpdu

Use this command to enable BPDU transparent transmission. Use the **no** form of this command to restore the default setting.

**bridge-frame forwarding protocol bpdu**  
**no bridge-frame forwarding protocol bpdu**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** In the IEEE 802.1Q standard, 01-80-C2-00-00-00, the destination MAC address of BPDU frames, is reserved. Devices following the IEEE 802.1Q standard don't forward BPDU frames. In real network deployment, devices may be required to support BPDU transparent transmission. For example, when a device is not enabled with STP, BPDU transparent transmission can help implement STP calculation.  
 BPDU transparent transmission works only when STP is disabled.

**Configuration** The following example enables BPDU transparent transmission.

**Examples** Ruijie(config)# bridge-frame forwarding protocol bpdu

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 7.3 clear spanning-tree counters

Use this command to clear the statistics of the sent and received STP packets.

**clear spanning-tree detected-protocols [ interface *interface-id* ]**

| Parameter Description | Parameter           | Description         |
|-----------------------|---------------------|---------------------|
|                       | <i>interface-id</i> | ID of the interface |

**Defaults** N/A**Command Mode** Privileged EXEC mode**Usage Guide** It is used to clear the statistics of the sent and received STP packets.**Configuration** The following example clears the statistics of the sent and received STP packets.**Examples**

```
Ruijie# clear spanning-tree counters
```

The following example clears the statistics of the sent and received packets on interface Gi 0/1.

```
Ruijie# clear spanning-tree counters interface gigabitethernet 0/1
```

**Related Commands**

| Command                            | Description                                                |
|------------------------------------|------------------------------------------------------------|
| <b>show spanning-tree counters</b> | <b>Displays the statistics of STP transceived packets.</b> |

**Platform Description** N/A

## 7.4 clear spanning-tree detected-protocols

Use this command to force the interface to send the RSTP BPDU message and check the BPDU messages.

**clear spanning-tree detected-protocols [ interface *interface-id* ]**

**Parameter Description**

| Parameter           | Description         |
|---------------------|---------------------|
| <i>interface-id</i> | ID of the interface |

**Defaults** N/A**Command Mode** Privileged EXEC mode**Usage Guide** Use this command to force the interface to send the RSTP BPDU message.**Configuration** Forces to check the version of all interfaces.**Examples**

```
Ruijie# clear spanning-tree detected-protocols
```

**Related Commands**

| Command                             | Description                                  |
|-------------------------------------|----------------------------------------------|
| <b>show spanning-tree interface</b> | <b>Displays the STP configuration of the</b> |



|  |                   |
|--|-------------------|
|  | <b>interface.</b> |
|--|-------------------|

**Platform** N/A

**Description**

## 7.5 clear spanning-tree mst topochange record

Use this command to clear STP topology change record.

**clear spanning-tree mst *instance-id* topochange record**

| Parameter   | Parameter          | Description                                                        |
|-------------|--------------------|--------------------------------------------------------------------|
| Description | <i>instance-id</i> | Instance ID. For STP and RSTP protocols, only instance 0 is valid. |

**Defaults** N/A

**Command** Privileged EXEC mode

**Mode**

**Usage Guide** N/A

**Configuration** The following example clears STP topology change record.

**Examples**

```
Ruijie# show spanning-tree mst 0 topochange record
Topology change information on mst 0:
Time                Interface          Old status   New status   Type
-----
2013.5.1 4:18:46   GI0/6         Learning    Forwarding   Normal
Ruijie# clear spanning-tree mst 0 topochange record
Ruijie# show spanning-tree mst 0 topochange record
%There's no topology change information has been record on mst 0.
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 7.6 instance instance-id vlan vlan-range

Use this command to set instance and VLAN mapping relations. Use the **no** form of the command to restore the default setting.

**instance** *instance-id* **vlan** *vlan-range*  
**no instance** *instance-id* { **vlan** *vlan-range* }

**Parameter Description**

| Parameter          | Description                              |
|--------------------|------------------------------------------|
| <i>instance-id</i> | Instance ID, in the range from 0 to 64   |
| <i>vlan-range</i>  | VLAN range, in the range from 1 to 4094. |

**Defaults** The default is instance 0.

**Command Mode** MST configuration mode

**Usage Guide** **instance** *instance-id* **vlan** *vlan-range* : Add VLAN to MST instance. Instance-ID is in the range from 0 to 64 and VLAN is in the range from 1 to 4094. Use commas to separate VLAN IDs and use hyphen to indicate VLAN range, e.g., instance 10 vlan 2,3,6-9, which adds VLAN 2, 3, 4, 5, 6, 7, 8, 9 to instance 10. By default, all VLANs are in instance 0. Use the **no** form of this command to remove VLAN from instance 1-64.

If you create 64 instances by stacking on a Ruijie device with a small memory (e.g., 64M), the memory may be undersized. It is recommended to limit stacking instance number.

**Configuration Examples** This example enters MST mode and maps VLAN 3 and 5-10 to MST instance1.

```
Ruijie(config)# spanning-tree mst configuration
Ruijie(config-mst)# instance 1 vlan 3, 5-10
Ruijie(config-mst)# show spanning-tree mst configuration
Multi spanning tree protocol : Enable
Name      :
Revision  : 0
Instance  Vlans Mapped
-----  -----
0         1-2,4,11-4094
1         3,5-10
-----
Ruijie(config-mst)# exit
Ruijie(config)#
```

The following example removes VLAN3 from instance 1.

```
Ruijie(config-mst)# no instance 1 vlan 3
```

The following example removes instance 1.

```
Ruijie(config-mst)# no instance 1
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 7.7 l2protocol-tunnel stp

Use this command to enable BPDU TUNNEL globally. Use the **no** form of this command to disable this function.

**l2protocol-tunnel stp**  
**no l2protocol-tunnel stp**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** If you want to BPDU TUNNEL globally, enable BPDU TUNNEL on the interface first.

**Configuration** The following example enables BPDU TUNNEL globally.

```

Examples Ruijie(config)# l2protocol-tunnel stp
Ruijie(config)# show l2protocol-tunnel stp

L2protocol-tunnel: stp Enable
L2protocol-tunnel destination mac address: 01d0.f800.0005

```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 7.8 l2protocol-tunnel stp enable

Use this command to enable BPDU TUNNEL on the interface. Use the **no** form of this command to disable this function.

**l2protocol-tunnel stp enable**  
**no l2protocol-tunnel stp enable**

| Parameter | Parameter | Description |
|-----------|-----------|-------------|
|-----------|-----------|-------------|

|                    |     |     |
|--------------------|-----|-----|
| <b>Description</b> |     |     |
|                    | N/A | N/A |

**Defaults** N/A

**Command Mode** Interface configuration mode

**Usage Guide** If you want to BPDU TUNNEL globally, enable BPDU TUNNEL on the interface first.

**Configuration** The following example enables BPDU TUNNEL on the interface.

**Examples**

```
Ruijie(config-if-interface-id)# l2protocol-tunnel stp enable
Ruijie(config-if-interface-id)# show l2protocol-tunnel stp

L2protocol-tunnel: stp Enable
L2protocol-tunnel destination mac address: 01d0.f800.0005
GigabitEthernet 0/1 l2protocol-tunnel stp enable
```

| <b>Related Commands</b> | Command | Description |
|-------------------------|---------|-------------|
|                         | N/A     | N/A         |

**Platform Description** N/A

## 7.9 l2protocol-tunnel stp tunnel-dmac

Use this command to configure the STP address for transparent transmission through BPDU TUNNEL. Use the **no** form of this command to restore the default setting.

**l2protocol-tunnel stp tunnel-dmac** *mac-address*  
**no l2protocol-tunnel stp tunnel-dmac**

| <b>Parameter Description</b> | Parameter          | Description                                   |
|------------------------------|--------------------|-----------------------------------------------|
|                              | <i>mac-address</i> | The STP address for transparent transmission. |

**Defaults**

**Command Mode** Global configuration mode

**Usage Guide** The available STP address includes 01d0.f800.0005, 011a.a900.0005, 010f.e200.0003, 0100.0ccd.cdd0, 0100.0ccd.cdd1, and 0100.0ccd.cdd2.

**Configuration** The following example configures the STP address for transparent transmission through BPDU

**Examples** TUNNEL.

```
Ruijie(config)# l2protocol-tunnel stp tunnel-dmac 011a.a900.0005
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 7.10 name

Use this command to set MST name. Use the **no** form of the command to restore the default setting.

**name** *name*

**no name**

**Parameter  
Description**

| Parameter   | Description                    |
|-------------|--------------------------------|
| <i>name</i> | MST name, up to 32 characters. |

**Defaults** The default is NULL.

**Command  
Mode** MST configuration mode

**Usage Guide** **name** *name*: Sets the MST name, up to 32 characters.  
**show spanning-tree mst configuration**: Displays MST region information.

**Configuration** This example sets MST name to region1.

**Examples**

```
Ruijie(config)# spanning-tree mst configuration
Ruijie(config-mst)# name region1
Ruijie(config-mst)# show spanning-tree mst configuration
Multi spanning tree protocol : Enable
Name      : region1
Revision  : 0
Instance  Vlans Mapped
-----
0         : ALL
Ruijie(config-mst)# exit
Ruijie(config)#
```

**Related**

| Command | Description |
|---------|-------------|
|---------|-------------|

| Commands |     |     |
|----------|-----|-----|
|          | N/A | N/A |

**Platform** N/A

**Description**

## 7.11 revision

Use this command to set revision number of MSTP region. Use the **no** form of the command to restore the default setting.

**revision** *version*

**no revision**

| Parameter Description | Parameter      | Description                                        |
|-----------------------|----------------|----------------------------------------------------|
|                       | <i>version</i> | MST revision number, in the range from 0 to 65535. |

### Defaults

The default is 0.

**Command** MST configuration mode

**Mode**

**Usage Guide** **revision** *version*: Sets the MST version, in the range from 0 to 65535.  
**show spanning-tree mst configuration**: Displays MST region information.

**Configuration** This example sets revision number to 1.

### Examples

```
Ruijie(config)# spanning-tree mst configuration
Ruijie(config-mst)# revision 1
Ruijie(config-mst)# show spanning-tree mst configuration
Multi spanning tree protocol : Enable
Name      :
Revision  : 1
Instance  Vlans Mapped
-----
0         : ALL
Ruijie(config-mst)# exit
Ruijie(config)#
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 7.12 show l2protocol-tunnel stp

Use this command to display BPDU TUNNEL configuration.

**show l2protocol-tunnel stp**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode / Global configuration mode / Interface configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example displays BPDU TUNNEL configuration.

```
Ruijie# show l2protocol-tunnel stp

L2protocol-tunnel: stp Enable
L2protocol-tunnel destination mac address:011a.a900.0005
GigabitEthernet 0/1 l2protocol-tunnel stp enable
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 7.13 show spanning-tree

Use this command to display the global spanning-tree configuration.

**show spanning-tree [summary | forward-time | hello-time | max-age | inconsistentports| tx-hold-count | pathcost method | max\_hops | counters]**

| Parameter Description | Parameter                | Description                                                                         |
|-----------------------|--------------------------|-------------------------------------------------------------------------------------|
|                       | <b>summary</b>           | Displays the information of MSTP instances and forwarding status of the interfaces. |
|                       | <b>inconsistentports</b> | Displays the block port due to root guard or loop guard.                            |

|                               |                                                     |
|-------------------------------|-----------------------------------------------------|
| <b><i>forward-time</i></b>    | Displays BridgeForwardDelay.                        |
| <b><i>hello-time</i></b>      | Displays BridgeHelloTime.                           |
| <b><i>max-age</i></b>         | Displays BridgeMaxAge.                              |
| <b><i>max-hops</i></b>        | Displays the maximum hops of an instance.           |
| <b><i>tx-hold-count</i></b>   | Displays TxHoldCount.                               |
| <b><i>pathcost method</i></b> | Displays the method used for calculating path cost. |
| <b><i>counters</i></b>        | Displays the statistics of STP transceived packets. |

**Defaults** N/A

**Command** Privileged EXEC mode, global configuration mode and interface configuration mode.

**Mode**

**Usage Guide** N/A

**Configuration** The following example displays the global spanning-tree configuration.

**Examples** Ruijie# show spanning-tree hello-time

The following example displays the sent and received STP packets.

```
Ruijie# show spanning-tree counters
----- STP BPDU count -----
Port                                Receive      Send
GigabitEthernet 0/3                 0            122594

----- STP TC or TCN count -----
MSTID  Port                                Receive      Send
0      GigabitEthernet 0/3                 0            0
```

**Related  
Commands**

| Command                              | Description                           |
|--------------------------------------|---------------------------------------|
| <b>spanning-tree pathcost method</b> | Sets the pathcost method.             |
| <b>spanning-tree forward-time</b>    | Sets BridgeForwardDelay.              |
| <b>spanning-tree hello-time</b>      | Sets BridgeHelloTime.                 |
| <b>spanning-tree max-age</b>         | Sets BridgeMaxAge.                    |
| <b>spanning-tree max-hops</b>        | Sets the maximum hops of an instance. |
| <b>spanning-tree tx-hold-count</b>   | Displays TxHoldCount.                 |

**Platform** N/A

**Description**

## 7.14 show spanning-tree interface

Use this command to display the STP configuration of the interface, including the optional spanning



tree.

**show spanning-tree interface** *interface-id* [ { **bpdufilter** | **portfast** | **bpduguard** | **link-type** } ]

**Parameter  
Description**

| Parameter           | Description                             |
|---------------------|-----------------------------------------|
| <i>interface-id</i> | Interface ID                            |
| <b>bpdufilter</b>   | Displays the status of BPDU filter.     |
| <b>portfast</b>     | Displays the status of portfast.        |
| <b>bpduguard</b>    | Displays the status of BPDU guard.      |
| <b>link-type</b>    | Displays the link type of an interface. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode, global configuration mode and interface configuration mode.

**Usage Guide** N/A

**Configuration Examples** The following example displays the STP configuration on interface Gi 0/1.

```
Ruijie# show spanning-tree int gi 0/1

PortAdminPortFast : Disabled
PortOperPortFast : Disabled
PortAdminAutoEdge : Enabled
PortOperAutoEdge : Disabled
PortAdminLinkType : auto
PortOperLinkType : point-to-point
PortBPDUGuard : Disabled
PortBPDUFilter : Disabled
PortGuardmode : None

##### MST 0 vlans mapped :ALL
PortState : forwarding
PortPriority : 128
PortDesignatedRoot : 32768.001a.a979.00ea
PortDesignatedCost : 0
PortDesignatedBridge :32768.001a.a979.00ea
PortDesignatedPortPriority : 128
PortDesignatedPort : 1
PortForwardTransitions : 1
PortAdminPathCost : 200000
PortOperPathCost : 200000
Inconsistent states : normal
PortRole : rootPort
```

| Related<br>Commands | Command                          | Description                                            |
|---------------------|----------------------------------|--------------------------------------------------------|
|                     | <b>spanning-tree bpdudfilter</b> | Enables the BPDU filter feature someone the interface. |
|                     | <b>spanning-tree portfast</b>    | Enables the portfast on the interface.                 |
|                     | <b>spanning-tree bpduguard</b>   | Enables the BPDU guard on the interface.               |
|                     | <b>spanning-tree link-type</b>   | Sets the link type of the interface to point-to-point. |

**Platform** N/A

**Description**

## 7.15 show spanning-tree mst

Use this command to display the information of MST and instances.

**show spanning-tree mst { configuration | instance-id [ interface interface-id ] }**

| Parameter<br>Description | Parameter            | Description                             |
|--------------------------|----------------------|-----------------------------------------|
|                          | <b>configuration</b> | The MST configuration of the equipment. |
|                          | <i>instance-id</i>   | Instance number                         |
|                          | <i>interface-id</i>  | Interface number                        |

**Defaults** All the instances are displayed by default.

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** N/A

**Configuration** The following example displays the information of MST and instances.

### Examples

```
Ruijie# show spanning-tree mst configuration
Multi spanning tree protocol : Enable
Name      : test
Revision  : 0
Instance  Vlans Mapped
-----
0         : 2-4094
1         : 1
```

Field Description

| Field                        | Description            |
|------------------------------|------------------------|
| Multi spanning tree protocol | Enables MSTP protocol. |

|                       |                                                |
|-----------------------|------------------------------------------------|
| Name                  | Name of the MST region                         |
| Revision              | Revision of the MST region                     |
| Instance Vlans Mapped | Mapping relation between the instance and VLAN |

**Related Commands**

| Command                                | Description                                      |
|----------------------------------------|--------------------------------------------------|
| <b>spanning-tree mst configuration</b> | Configures the MST region.                       |
| <b>spanning-tree mst cost</b>          | Displays the path cost of the instance.          |
| <b>spanning-tree mst max-hops</b>      | Displays the maximum hops of the instance.       |
| <b>spanning-tree mst priority</b>      | Displays the equipment priority of the instance. |
| <b>spanning-tree mst port-priority</b> | Displays the port priority of the instance.      |

**Platform** N/A

**Description**

## 7.16 show spanning-tree mst topochange record

Use this command to display the STP topology change record.

**show spanning-tree mst *instance-id* topochange record**

**Parameter Description**

| Parameter          | Description  |
|--------------------|--------------|
| <i>instance-id</i> | Instance ID. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode / Global configuration mode / Interface configuration mode

**Usage Guide** N/A

**Configuration** The following example displays the STP topology change record of instance 0.

**Examples**

```
Ruijie# show spanning-tree mst 0 topochange record
Topology change information on mst 0:
Time                Interface          Old status   New status   Type
-----
2013.5.1 4:18:46   GI0/6        Learning    Forwarding   Normal
```

| Field      | Description                           |
|------------|---------------------------------------|
| Time       | The time when the topology changes.   |
| Interface  | The interface whose topology changes. |
| Old status | Old STP status on the interface.      |

|            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| New status | New STP status on the interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Type       | <p>Topology change may be caused by the following causes:</p> <p>Normal: UP/DOWN state change on the interface,</p> <p>LoopGuard Block: Loop-inconsistence causes the interface to be blocked.</p> <p>RootGuard Block: Root-inconsistence causes the interface to be blocked.</p> <p>Inferior Block: Receiving inferior BPDU frames causes the interface to be blocked.</p> <p>LoopGuard Unblock: The interface returns to Forward status from loop-inconsistence.</p> <p>RootGuard Unblock: The interface returns to Forward status from root-inconsistence.</p> <p>Inferior Unblock-The interface returns to Forward status after not receiving inferior BPDU frames.</p> |

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description**

N/A

## 7.17 spanning-tree

Use this command to enable MSTP and configure its basic settings globally. The **no** form of the command disables the spanning-tree function. The **no** form of the command with parameters only restores the corresponding parameters to the default values, but does not disable the spanning-tree function.

**spanning-tree** [ **forward-time** *seconds* | **hello-time** *seconds* | **max-age** *seconds* ]

**no spanning-tree** [ **forward-time** | **hello-time** | **max-age** ]

**Parameter Description**

| Parameter                          | Description                                                                                                              |
|------------------------------------|--------------------------------------------------------------------------------------------------------------------------|
| <b>forward-time</b> <i>seconds</i> | Interval at which the port status changes, in the range from 4 to 30 in the unit of seconds. The default is 15.          |
| <b>hello-time</b> <i>seconds</i>   | Interval at which the switch sends the BPDU message, in the range from 1 to 10 in the unit of seconds. The default is 2. |
| <b>max-age</b> <i>seconds</i>      | Maximum aging time of the BPDU message, in the range from 6 to 40 in the unit of seconds. The default is 20.             |

**Defaults** This function is disabled by default.

**Command** Global configuration mode.

**Mode**

**Usage Guide** The values of **forward-time**, **hello time** and **max-age** are interrelated. Modifying one of these three parameters will affect the others. There is a restricted relationship among the above three values.  
 $2 * (\text{Hello Time} + 1.0\text{snd}) \leq \text{Max-Age Time} \leq 2 * (\text{Forward-Delay} - 1.0\text{snd})$   
 If the values do not according with the condition, the settings do not work.

**Configuration** The following example enables the spanning-tree function.

**Examples** Ruijie(config)# **spanning-tree**

The following example configures the BridgeForwardDelay.

Ruijie(config)# spanning-tree forward-time 10

**Related Commands**

| Command                            | Description                            |
|------------------------------------|----------------------------------------|
| <b>show spanning-tree</b>          | Displays the global STP configuration. |
| <b>spanning-tree mst cost</b>      | Sets the PathCost of an STP interface. |
| <b>spanning-tree tx-hold-count</b> | Sets the global TxHoldCount of STP.    |

**Platform** N/A

**Description**

## 7.18 spanning-tree autoedge

Use this command to enable Autoedge on the interface. Use the **disabled** form of this command to disable this function.

**spanning-tree autoedge [ disabled ]**

**Parameter Description**

| Parameter | Description                         |
|-----------|-------------------------------------|
| disabled  | Disabled Autoedge on the interface. |

**Defaults** This function is enabled by default.

**Command** Interface configuration mode.

**Mode**

**Usage Guide** If the designated port of a device does not receive a BPDU from the downlink port within a specific period (3 seconds), the device regards a network device connected to the designated port, configures the port as an edge port, and switches the port directly into the forwarding state. The edge port will be automatically identified as a non-edge port after receiving a BPDU.  
 You can run the spanning-tree autoedge disabled command to disable Auto Edge.

**Configuration** The following example disables Autoedge on the interface.

**Examples**

```
Ruijie(config)# interface gigabitethernet 1/1
Ruijie(config-if-interface-id-interface-id)# spanning-tree autoedge disabled
```

**Related  
Commands**

| Command                             | Description                                                  |
|-------------------------------------|--------------------------------------------------------------|
| <b>show spanning-tree interface</b> | Displays the STP configuration information of the interface. |

**Platform** N/A

**Description**

## 7.19 spanning-tree bpdudfilter

Use this command to enable BPDU filter on the interface. You can use the **enabled** or **disabled** option of the command to enable or disable the BPDU filter function on the interface.

**spanning-tree bpdudfilter [ enabled | disabled ]**

**Parameter  
Description**

| Parameter       | Description                            |
|-----------------|----------------------------------------|
| <b>enabled</b>  | Enables BPDU filter on the interface.  |
| <b>disabled</b> | Disables BPDU filter on the interface. |

**Defaults** This function is disabled by default,

**Command  
Mode** Interface configuration mode.

**Usage Guide** If BPDU filter is enabled on a port, the port neither sends nor receives BPDUs.

**Configuration** The following example enables BPDU filter on interface Gi 1/1.

**Examples**

```
Ruijie(config)# interface gigabitethernet 1/1
Ruijie(config-if-interface-id-interface-id)# spanning-tree bpdudfilter enable
```

**Related  
Commands**

| Command                             | Description                                      |
|-------------------------------------|--------------------------------------------------|
| <b>show spanning-tree interface</b> | Displays the STP configuration of the interface. |

**Platform** N/A

**Description**

## 7.20 spanning-tree bpduguard

Use this command to enable the BPDU guard function on the interface. You can use the **enabled** or **disabled** option of the command to enable or disable the BPDU guard function on the interface.

**spanning-tree bpduguard [ enabled | disabled ]**

| Parameter Description | Parameter | Description                           |
|-----------------------|-----------|---------------------------------------|
|                       | enabled   | Enables BPDU guard on the interface.  |
|                       | disabled  | Disables BPDU guard on the interface. |

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode.

**Usage Guide**

1. If BPDU guard is enabled on a port, the port enters the error-disabled state after receiving a BPDU.
2. Run command **errdisable recovery [ interval seconds ]** to recover the interface in Error-disabled state.

**Configuration Examples** The following example enables the BPDU guard function on the interface.

```
Ruijie(config)# interface gigabitethernet 1/1
Ruijie(config-if-interface-id-interface-id)# spanning-tree bpduguard enable
```

| Related Commands | Command                             | Description                                      |
|------------------|-------------------------------------|--------------------------------------------------|
|                  | <b>show spanning-tree interface</b> | Displays the STP configuration of the interface. |

**Platform Description** N/A

## 7.21 spanning-tree compatible enable

Use this command to send the message selectively carried with MSTI according to the interface attribute of current port to realize interconnection with other vendors. Use the **no** form of this command to restore the default setting.

**spanning-tree compatible enable**

**no spanning-tree compatible enable**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** This function is disabled by default. .

**Command Mode** Interface configuration mode.

**Usage Guide** If the compatibility mode is enabled on a port, this port will add different MSTI information into the to-be-sent BPDU based on the current port to realize interconnection between Ruijie devices and other SPs' devices.

**Configuration** The following example enables the compatibility mode on interface Gi 0/1.

**Examples**

```
Ruijie(config)# interface gigabitethernet 0/1
Ruijie(config-if-interface-id-interface-id)#spanning-tree compatible enable
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 7.22 spanning-tree guard loop

Use this command to enable **loop guard** on the interface to prevent the root port or backup port from generating loop since they cannot receive bpdu. Use the **no** form of this command to disable **loop guard**.

**spanning-tree guard loop**

**no spanning-tree guard loop**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode.

**Usage Guide**

1. Enabling loop guard on a root port or backup port will prevent possible loops caused by BPDU receipt failure.
2. The loop guard function and root guard function cannot be enabled at the same time.

**Configuration** The following example enables **loop guard** on interface Gi 0/1.



**Examples**

```
Ruijie(config)# interface gigabitethernet 0/1
Ruijie(config-if-interface-id)# spanning-tree guard loop
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A**Description**

## 7.23 spanning-tree guard none

Use this command to disable **guard** on the interface. Use the **no** form of this command to enable this function

**spanning-tree guard none****no spanning-tree guard none****Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** This function is enabled by default.**Command Mode** Interface configuration mode.**Usage Guide** N/A**Configuration** The following example disables **guard** on interface Gi 0/1.**Examples**

```
Ruijie(config)# interface gigabitethernet 0/1
Ruijie(config-if-interface-id)# spanning-tree guard none
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A**Description**

## 7.24 spanning-tree guard root

Use this command to enable **root guard** on the interface to prevent the change of current root bridge position because of error configuration and illegal packet attack. Use the **no** form of this command to

restore the default setting.

**spanning-tree guard root**

**no spanning-tree guard root**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode.

**Usage Guide**

- If root guard is enabled, the current root bridge will not change due to incorrect configuration or illegal packet attacks.
- The loop guard function and root guard function cannot be enabled at the same time.

**Configuration** The following example enables **root guard** on the interface.

**Examples**

```
Ruijie(config)# interface gigabitethernet 0/1
Ruijie(config-if-interface-id)# spanning-tree guard root
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 7.25 spanning-tree ignore tc

Use this command to enable the tc filtering on the interface. Use the **no** form of this command to restore the default setting. With tc filtering enabled, the TC packets received on the interface will not be processed.

**spanning-tree ignore tc**

**no spanning-tree ignore tc**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command** Interface configuration mode.

**Mode**

**Usage Guide** If TC filter is enabled on a port, the port does not process received TC packets.

**Configuration** The following example enables the tc filtering on the interface.

**Examples**

```
Ruijie(config)# interface gigabitethernet 0/1
Ruijie(config-if-interface-id)# spanning-tree ignore tc
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 7.26 spanning-tree link-type

Use this command to configure the link type of the interface. Use the **no** form of this command to restore the default setting.

**spanning-tree link-type [ point-to-point | shared ]**

**no spanning-tree link-type**

**Parameter  
Description**

| Parameter             | Description                                             |
|-----------------------|---------------------------------------------------------|
| <b>point-to-point</b> | Sets the link type of the interface to point-to-point.  |
| <b>shared</b>         | Forcibly sets the link type of the interface to shared. |

**Defaults** For a full-duplex interface, its link type is set to point-to-point link; for a half-duplex interface, its link type is set to shared.

**Command** Interface configuration mode.

**Mode**

**Usage Guide** If the link type of a port is point-to-point connection, RSTP can rapidly converge. If the link type is not configured, the device automatically sets the link type based on the duplex mode of the port.

**Configuration** The following example configures the link type of the interface.

**Examples**

```
Ruijie(config)# interface gigabitethernet 1/1
Ruijie(config-if-interface-id)# spanning-tree link-type point-to-point
```

**Related  
Commands**

| Command                             | Description                                      |
|-------------------------------------|--------------------------------------------------|
| <b>show spanning-tree interface</b> | Displays the STP configuration of the interface. |

**Platform** N/A  
**Description**

## 7.27 spanning-tree loopguard default

Use this command to enable **loop guard** globally to prevent the root port or backup port from generating loop since they cannot receive bpdu. Use the **no** form of this command to restore the default setting.

**spanning-tree loopguard default**

**no spanning-tree loopguard default**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode.

**Usage Guide** Enabling loop guard on a root port or backup port will prevent possible loops caused by BPDU receipt failure.

**Configuration Examples** The following example enables **loop guard** globally to prevent the root port or backup port from generating loop since they cannot receive bpdu.

```
Ruijie(config)# spanning-tree loopguard default
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 7.28 spanning-tree max-hops

Use this command to set the maximum number of hops(Max-hopsCount) of the BPDU message in the global configuration mode, the number of hops in a region that the BPDU message passes before being dropped. This parameter takes effect for all instances. Use the **no** form of this command to restore the default setting.

**spanning-tree max-hops** *hop-count*

**no spanning-tree max-hops**

|                               |                                                                                                                                                                                                                                                                                                                                             |                                                                                                          |
|-------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------|
| <b>Parameter Description</b>  | <b>Parameter</b>                                                                                                                                                                                                                                                                                                                            | <b>Description</b>                                                                                       |
|                               | <i>hop-count</i>                                                                                                                                                                                                                                                                                                                            | Number of hops in a region that the BPDU message passes before being dropped. The range is 1 to 40 hops. |
| <b>Defaults</b>               | The default is 20 hops.                                                                                                                                                                                                                                                                                                                     |                                                                                                          |
| <b>Command Mode</b>           | Global configuration mode.                                                                                                                                                                                                                                                                                                                  |                                                                                                          |
| <b>Usage Guide</b>            | In the region, the BPDU message sent by the root bridge includes a Hop Count field. When the BPDU message passes a device, the Hop Count is decreased by 1 until it reaches 0, which indicates the BPDU message times out. The device will drop the BPDU message whose Hop Count is 0. Changing the max-hops command affects all instances. |                                                                                                          |
| <b>Configuration Examples</b> | This example sets the max-hops of the spanning tree to 10 for all instances.                                                                                                                                                                                                                                                                |                                                                                                          |
|                               | <pre>Ruijie(config)# spanning-tree max-hops 10</pre>                                                                                                                                                                                                                                                                                        |                                                                                                          |
| <b>Related Commands</b>       | <b>Command</b>                                                                                                                                                                                                                                                                                                                              | <b>Description</b>                                                                                       |
|                               | <b>show spanning-tree</b>                                                                                                                                                                                                                                                                                                                   | Displays the MSTP information.                                                                           |
| <b>Platform Description</b>   | N/A                                                                                                                                                                                                                                                                                                                                         |                                                                                                          |

## 7.29 spanning-tree mode

Use this command to set the STP version. Use the **no** form of the command to restore the default setting.

**spanning-tree mode [ stp | rstp | mstp ]**  
**no spanning-tree mode**

|                              |                                                                                            |                                              |
|------------------------------|--------------------------------------------------------------------------------------------|----------------------------------------------|
| <b>Parameter Description</b> | <b>Parameter</b>                                                                           | <b>Description</b>                           |
|                              | <i>stp</i>                                                                                 | Spanning tree protocol(IEEE 802.1d)          |
|                              | <i>rstp</i>                                                                                | Rapid spanning tree protocol(IEEE 802.1w)    |
|                              | <i>mstp</i>                                                                                | Multiple spanning tree protocol(IEEE 802.1s) |
| <b>Defaults</b>              | The default is <b>mstp</b> .                                                               |                                              |
| <b>Command Mode</b>          | Global configuration mode.                                                                 |                                              |
| <b>Usage Guide</b>           | However, some vendors' devices do not work according to 802.1 protocol standards, possibly |                                              |

causing incompatibility. If other vendors' devices are incompatible with Ruijie devices, run this command to switch the STP mode to a lower version.

**Configuration** The following example sets the STP version.

**Examples**

```
Ruijie(config)# spanning-tree mode stp
```

**Related  
Commands**

| Command                   | Description                               |
|---------------------------|-------------------------------------------|
| <b>show spanning-tree</b> | Displays the spanning-tree configuration. |

**Platform** N/A

**Description**

## 7.30 spanning-tree mst configuration

Use this command to enter the MST configuration mode in the global configuration mode and configure the MSTP region. Use the **no** form of the command to restore the default setting.

**spanning-tree mst configuration**

**no spanning-tree mst configuration**

**Parameter  
Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults**

**Command** Global configuration mode.

**Mode**

**Usage Guide** To return to the privileged EXEC mode, enter end or Ctrl+C.

To return to the global configuration mode, enter exit.

After entering the MST configuration mode, you can configure MSTP Region parameters:

**Configuration** This example enters the MST configuration mode.

**Examples**

```
Ruijie(config)# spanning-tree mst configuration
Ruijie(config-mst)# instance 1 vlan 3, 5-10
Ruijie(config-mst)# name region 1
Ruijie(config-mst)# revision 1
Ruijie(config-mst)# show spanning-tree mst configuration
Multi spanning tree protocol : Enable
Name      : region1
Revision  : 1Instance Vlans Mapped
```

```

-----
0      1-2, 4, 11-4094
1      3, 5-10
-----

Ruijie(config-mst) # exit
Ruijie(config) #

```

**Related  
Commands**

| Command                                                          | Description                            |
|------------------------------------------------------------------|----------------------------------------|
| <b>show spanning-tree mst</b>                                    | Displays the MST region configuration. |
| <b>instance</b> <i>instance-id</i> <b>vlan</b> <i>vlan-range</i> | Adds VLANs to the MST instance.        |
| <b>name</b>                                                      | Configures the name of MST.            |
| <b>revision</b>                                                  | Configures the version of MST.         |

**Platform** N/A**Description**

## 7.31 spanning-tree mst cost

Use this command to set the path cost of an instance in the interface configuration mode. Use the **no** form of the command to restore the default setting.

**spanning-tree** [ **mst** *instance-id* ] **cost** *cost*

**no spanning-tree** [ **mst** *instance-id* ] *cost*

**Parameter  
Description**

| Parameter   | Description                                   |
|-------------|-----------------------------------------------|
| instance-id | Instance ID in the range from 0 to 64.        |
| cost        | Path cost in the range from 1 to 200,000,000. |

**Defaults**

The default instance-id is 0.

The default value is calculated by the link rate of the interface automatically.

1000 Mbps—20000

100 Mbps—200000

10 Mbps—2000000

**Command**

Interface configuration mode.

**Mode****Usage Guide**

A higher cost value means a higher path cost.

**Configuration**

This example sets the path cost to 400 on the interface associated with instances 3.

**Examples**

```

Ruijie(config)# interface gigabitethernet 1/1
Ruijie(config-if)# spanning-tree mst 3 cost 400

```

| Related<br>Commands | Command                                | Description                                    |
|---------------------|----------------------------------------|------------------------------------------------|
|                     | <b>show spanning-tree mst</b>          | Displays the MSTP information of an interface. |
|                     | <b>spanning-tree mst port-priority</b> | Configures the priority of an interface.       |
|                     | <b>spanning-tree mst priority</b>      | Configures the priority of an instance.        |

**Platform** N/A

**Description**

## 7.32 spanning-tree mst port-priority

Use this command to configure the interface priority for different instances in the interface configuration mode. It will determine which interface of a loop in a region is in charge of forwarding.

Use the **no** form of this command to restore the default setting.

**spanning-tree [ mst *instance-id* ] port-priority *priority***

**no spanning-tree [ mst *instance-id* ] port-priority**

| Parameter<br>Description | Parameter                                                                                                                                                  | Description                          |
|--------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------|
|                          | <i>Instance-id</i>                                                                                                                                         | Instance ID, in the range of 0 to 64 |
| priority                 | Interface priority. Sixteen integers are available: 0, 16, 32, 48, 64, 80, 96, 112, 128, 144, 160, 176, 192, 208, 224, 240, which are the multiples of 16. |                                      |

**Defaults** The default instance-id is 0.  
The default priority is 128.

**Command Mode** Interface configuration mode.

**Usage Guide** When a loop occurs in the region, the interface of the higher priority will be in charge of forwarding. If all interfaces have the same priority value, the interface of the smaller number will be in charge of the forwarding.  
Run this command to determine which port in the loop of a region enters the forwarding state.

**Configuration Examples** This example sets the priority of **gigabitethernet 1/1** to 10 in instance 20.

```
Ruijie(config)# interface gigabitethernet 1/1
Ruijie(config-if-interface-id)# spanning-tree mst 20 port-priority 0
```

| Related<br>Commands | Command                       | Description                                    |
|---------------------|-------------------------------|------------------------------------------------|
|                     | <b>show spanning-tree mst</b> | Displays the MSTP information of an interface. |



|                                   |                                                   |
|-----------------------------------|---------------------------------------------------|
| <b>spanning-tree mst cost</b>     | Sets the path cost.                               |
| <b>spanning-tree mst priority</b> | Sets the device priority for different instances. |

**Platform** N/A

**Description**

## 7.33 spanning-tree mst priority

Use this command to set the device priority for different instances in the global configuration mode.

Use the **no** form of this command to restore the default setting.

**spanning-tree [mst *instance-id*] priority *priority***

**no spanning-tree [ mst *instance-id*] priority**

| Parameter Description | Parameter          | Description                                                                                                                                                                                    |
|-----------------------|--------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <i>instance-id</i> | Instance ID, in the range of 0 to 64                                                                                                                                                           |
|                       | <i>priority</i>    | Device priority. Sixteen integers are available: 0, 4096, 8192, 12288, 16384, 20480, 24576, 28672, 32768, 36864, 40960, 45056, 49152, 53248, 57344 and 61440, which are all multiples of 4096. |

**Defaults** The default instance ID is 0.  
The default device priority is 32768.

**Command Mode** Global configuration mode.

**Usage Guide** Configure the switch priority to determine a device as the root of the entire network and to determine the topology of the entire network.

**Configuration** The following example sets the device priority of the Instance to 8192.

**Examples**

```
Ruijie(config)# spanning-tree mst 20 priority 8192
```

| Related Commands | Command                                | Description                                    |
|------------------|----------------------------------------|------------------------------------------------|
|                  | <b>show spanning-tree mst</b>          | Displays the MSTP information of an interface. |
|                  | <b>spanning-tree mst cost</b>          | Sets path cost.                                |
|                  | <b>spanning-tree mst port-priority</b> | Sets the port priority of an instance.         |

**Platform** N/A

**Description**

## 7.34 spanning-tree pathcost method

Use this command to configure the path cost of the port. Use the **no** form of this command to restore the default setting.

**spanning-tree pathcost method** { { long [ standard ] | short }

**no spanning-tree pathcost method**

| Parameter Description | Parameter                | Description                                                                                                                                                   |
|-----------------------|--------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <b>Long [ standard ]</b> | Adopts the 802.1t standard to configure path cost.<br>The standard indicates that use the expression recommended by the standard to calculate the cost value. |
|                       | <b>short</b>             | Adopts the 802.1d standard to configure path cost.                                                                                                            |

**Defaults** 802.1T standard is adopted to set path cost by default.

**Command** Global configuration mode.

**Mode**

**Usage Guide** If the port path cost uses the default value, the device automatically calculates the port path cost based on the port rate.

**Configuration** The following example configures the path cost of the port.

**Examples**

```
Ruijie(config-if)# spanning-tree pathcost method long
```

| Related Commands | Command                             | Description                                      |
|------------------|-------------------------------------|--------------------------------------------------|
|                  | <b>show spanning-tree interface</b> | Displays the STP configuration of the interface. |

**Platform** N/A

**Description**

## 7.35 spanning-tree portfast

Use this command to enable the portfast on the interface. Use the disabled form of this command to restore the default setting,

**spanning-tree portfast** [ disabled ]

| Parameter Description | Parameter       | Description                             |
|-----------------------|-----------------|-----------------------------------------|
|                       | <b>disabled</b> | Disables the portfast on the interface. |

**Defaults** This function is disabled by default.

**Command** Interface configuration mode.

**Mode**

**Usage Guide** After PortFast is enabled on a port, the port directly enters the forwarding state. However, since the Port Fast Operational State becomes disabled due to receipt of BPDUs, the port can properly run the STP algorithm and enter the forwarding state.

**Configuration** The following example enables the portfast on the interface.

**Examples**

```
Ruijie(config)# interface gigabitethernet 1/1
Ruijie(config-if-interface-id)# spanning-tree portfast
```

**Related  
Commands**

| Command                      | Description                                      |
|------------------------------|--------------------------------------------------|
| show spanning-tree interface | Displays the STP configuration of the interface. |

**Platform** N/A

**Description**

## 7.36 spanning-tree portfast bpdufilter default

Use this command to enable the BPDU filter function globally. You can use the **no** form of the command to restore the default setting.

**spanning-tree portfast bpdufilter default**

**no spanning-tree portfast bpdufilter default**

**Parameter  
Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** This function is disabled by default,

**Command** Global configuration mode.

**Mode**

**Usage Guide** Once the BPDU filter is enabled, the BPDU message is neither received nor sent on the interface. Use the **show spanning-tree** command to display the configuration.

**Configuration** The following example enables the BPDU filter function globally.

**Examples**

```
Ruijie(config)# spanning-tree portfast bpdufilter default
```

**Related  
Commands**

| Command                      | Description                            |
|------------------------------|----------------------------------------|
| show spanning-tree interface | Displays the global STP configuration. |

**Platform** N/A

**Description**

## 7.37 spanning-tree portfast bpduguard default

Use this command to enable the BPDU guard globally. Use the **no** form of this command to restore the default setting,

**spanning-tree portfast bpduguard default**

**no spanning-tree portfast bpduguard default**

**Parameter Description**


| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command** Global configuration mode.

**Mode**

**Usage Guide** Once the BPDU guard is enabled on the interface, it will enter the error-disabled status if the BPDU message arrives at the interface. Use the **show spanning-tree** command to display the configuration.

 The global BPDU guard takes effect only when PortFast is enabled on a port.

**Configuration** The following example enables the GPDU guard globally.

**Examples**

```
Ruijie(config)# spanning-tree portfast bpduguard
default
```

**Related Commands**

| Command                             | Description                            |
|-------------------------------------|----------------------------------------|
| <b>show spanning-tree interface</b> | Displays the global STP configuration. |

**Platform** N/A

**Description**

## 7.38 spanning-tree portfast default

Use this command to enable the portfast feature on all interfaces globally. Use the **no** form of this command to restore the default setting.

**spanning-tree portfast default**

**no spanning-tree portfast default**

| Parameter<br>Description | Parameter | Description |
|--------------------------|-----------|-------------|
|                          | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode.

**Usage Guide** N/A

**Configuration** The following example enables the portfast feature on all interfaces globally.

**Examples**

```
Ruijie(config)# spanning-tree portfast default
```

| Related<br>Commands | Command                             | Description                            |
|---------------------|-------------------------------------|----------------------------------------|
|                     | <b>show spanning-tree interface</b> | Displays the global STP configuration. |

**Platform Description** N/A

## 7.39 spanning-tree reset

Use this command to restore the **spanning-tree** configuration to the default setting.

**spanning-tree reset**

| Parameter<br>Description | Parameter | Description |
|--------------------------|-----------|-------------|
|                          | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Global configuration mode.

**Usage Guide** Enable TC guard to prevent TC packets from spreading.

**Configuration** The following example enables tc-guard on interface Gi 1/1.

**Examples**

```
Ruijie(config)# interface gigabitethernet 1/1
Ruijie(config-if-interface-id)# spanning-tree tc-guard
```

| Related<br>Commands | Command | Description |
|---------------------|---------|-------------|
|---------------------|---------|-------------|

|                                     |                                                  |
|-------------------------------------|--------------------------------------------------|
| <b>show spanning-tree</b>           | Displays the global STP configuration.           |
| <b>show spanning-tree interface</b> | Displays the STP configuration of the interface. |

**Platform** N/A

**Description**

## 7.40 spanning-tree tc-guard

Use this command to enable **tc-guard** on the interface to prevent the spread of TC messages. Use the **no** form of this command to disable this function on the interface.

**spanning-tree tc-guard**

**no spanning-tree tc-guard**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command** Global configuration mode.

**Mode**

**Usage Guide** N/A

**Configuration** The following example enables **tc-guard** on the interface to prevent the spread of TC messages.

**Examples** Ruijie(config)# spanning-tree tc-guard

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 7.41 spanning-tree tc-protection

Use this command to enable **tc-protection** globally. Use The **no** form of this command to disable this function.

**spanning-tree tc- protection**

**no spanning-tree tc- protection**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|-----------------------|-----------|-------------|

|     |     |
|-----|-----|
| N/A | N/A |
|-----|-----|

**Defaults** This function is enabled by default.

**Command Mode** Global configuration mode.

**Usage Guide** N/A

**Configuration** The following example enables **tc-protection** globally.

**Examples** Ruijie(config)# spanning-tree tc-protection

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 7.42 spanning-tree tc-protection tc-guard

Use this command to enable tc-guard to prevent TC packets from being flooded. Use the **no** form of this command to restore the default setting.

**spanning-tree tc-protection tc-guard**

**no spanning-tree tc-protection tc-guard**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode.

**Usage Guide** Enable TC guard to prevent TC packets from spreading.

**Configuration** The following example enables tc-guard to prevent TC packets from being flooded.

**Examples** Ruijie(config)# spanning-tree tc-protection tc-guard

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 7.43 spanning-tree tx-hold-count

Use this command to configure the TxHoldCount of the STP, the maximum number of the BPDU messages sent in one second. Use the **no** form of this command to restore the default setting.

**spanning-tree tx-hold-count** *tx-hold-count*

**no spanning-tree tx-hold-count**

| Parameter Description | Parameter            | Description                                                                                                   |
|-----------------------|----------------------|---------------------------------------------------------------------------------------------------------------|
|                       | <i>tx-hold-count</i> | Indicates the maximum number of BPDUs sent per second. The value ranges from 1 to 10. The default value is 3. |

**Defaults** The default is 3.

**Command Mode** Global configuration mode.

**Usage Guide** N/A

**Configuration Examples** The following example sets the maximum number of the BPDU messages sent in one second.

```
Ruijie(config)# spanning-tree tx-hold-count 5
```

| Related Commands | Command                   | Description                             |
|------------------|---------------------------|-----------------------------------------|
|                  | <b>show spanning-tree</b> | Displays the global MSTP configuration. |

**Platform** N/A  
**Description**



## 8 GVRP Commands

### 8.1 bridge-frame forwarding protocol gvrp

Use this command to enable GVRP PDUs transparent transmission. Use the **no** form of this command to restore the default setting.

**bridge-frame forwarding protocol gvrp**  
**no bridge-frame forwarding protocol gvrp**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command mode** Global configuration mode

**Usage Guide** In the IEEE 802.1Q standard, the MAC address 01-80-C2-00-00-21 of GVRP PDUs is reserved for future standardization. In other words, the device following the IEEE 802.1Q standard does not forward GVRP PDUs frames. However, in actual network deployment, GVRP PDUs transparent transmission may be required. For example, the device not enabled with GVRP needs to transmit GVRP PDUs frames transparently to ensure proper GVRP topology calculation.

**Configuration Examples** The following example enables GVRP PDUs transparent transmission.

```
Ruijie(config)# bridge-frame forwarding protocol gvrp
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

### 8.2 clear gvrp statistic

Use this command to clear the GVRP statistics for re-counting.

**clear gvrp statistics** { *interface-id* | **all** }

| Parameter Description | Parameter           | Description  |
|-----------------------|---------------------|--------------|
|                       | <i>interface-id</i> | Interface id |

**Defaults** N/A

**Command mode** Privileged EXEC mode.

**Usage Guide** Use the **show gvrp statistics** to display the statistics.

**Configuration** The following example clears GVRP statistics.

**Examples**

```
Ruijie# clear gvrp statistics all
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

### 8.3 gvrp applicant state

Use this command configures the GVRP advertisement mode on the interface.. Use the **no** form of this command to restore default setting.

**gvrp applicant state { normal | non-applicant }**  
**no gvrp applicant state**

| Parameter Description | Parameter     | Description                                     |
|-----------------------|---------------|-------------------------------------------------|
|                       | normal        | The interface sends VLAN advertisement.         |
|                       | non-applicant | The interface does not send VLAN advertisement. |

**Defaults** The interface sends GVRP advertisement by default.

**Command mode** Interface configuration mode.

**Usage Guide** N/A

**Configuration** The following example configures the GVRP advertisement mode on the interface.

**Examples**

```
Ruijie(config-if)# gvrp applicant state normal
```

| Related Commands | Command                 | Description                       |
|------------------|-------------------------|-----------------------------------|
|                  | show gvrp configuration | Displays the GVRP configurations. |

**Platform** N/A

**Description**

## 8.4 gvrp dynamic-vlan-creation

Use this command to enable dynamic VLAN creation. Use the **no** form of this command to restore the default setting.

**gvrp dynamic-vlan-creation enable**

**no gvrp dynamic-vlan-creation enable**

**Parameter  
Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command mode** Global configuration mode.

**Usage Guide** Use the **show gvrp configuration** to display the configuration.

**Configuration** The following example enables dynamic VLAN creation.

**Examples**

```
Ruijie(config)# gvrp dynamic-vlan-creation enable
```

**Related  
Commands**

| Command                 | Description                       |
|-------------------------|-----------------------------------|
| show gvrp configuration | Displays the GVRP configurations. |

**Platform** N/A

**Description**

## 8.5 gvrp enable

Use this command to enable the GVRP function. Use the **no** form of this command to restore the default setting.

**gvrp enable**

**no gvrp enable**

**Parameter  
Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

- Defaults** This function is disabled by default.
- Command mode** Global configuration mode
- Usage Guide** This command is used to display the configuration.
- Configuration** The following example enables the GVRP function.
- Examples**

```
Ruijie(config)#gvrp enable
```

**Related Commands**

| Command                 | Description                       |
|-------------------------|-----------------------------------|
| show gvrp configuration | Displays the GVRP configurations. |

- Platform** N/A
- Description**

## 8.6 gvrp registration mode

Use this command to set the registration mode to control whether to enable dynamic VLAN creation/registration/canceling on the port. Use the **no** form of this command to restore the default setting.

**gvrp registration mode { normal | disabled }**  
**no gvrp registration mode**

**Parameter Description**

| Parameter | Description                                                        |
|-----------|--------------------------------------------------------------------|
| normal    | Enables dynamic VLAN creation/registration/canceling on the port.  |
| disabled  | Disables dynamic VLAN creation/registration/canceling on the port. |

- Defaults** Dynamic VLAN creation/registration/canceling is enabled by default,
- Command mode** Interface configuration mode.
- Usage Guide** N/A

**Configuration** The following example sets the registration mode.

**Examples**

```
Ruijie(config-if)# gvrp registration mode normal
```

**Related Commands**

| Command                 | Description                       |
|-------------------------|-----------------------------------|
| show gvrp configuration | Displays the GVRP configurations. |

**Platform** N/A  
**Description**

## 8.7 gvrp timer

Use this command to set the GVRP timer. Use the **no** form of this command to restore the default setting.

**gvrp timer** { **join** *timer\_value* | **leave** *timer\_value* | **leaveall** *timer\_value* }  
**no gvrp timer**

| Parameter Description | Parameter                    | Description                                                                                                                                                                                                                                                                                                                                                                   |
|-----------------------|------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <i>join timer_value</i>      | Controls the maximum delay before sending the advertisement on the port. The actual sending interval is in the range of 0 to the maximum delay.                                                                                                                                                                                                                               |
|                       | <i>leave timer_value</i>     | Controls the waiting time before removing the VLAN from the port with the Leave Message received. If the Join Message is received again within this time range, the port-VLAN relation still exists and the timer becomes invalid. If no Join Message is received on the port, the port status will be the Empty and removed from the VLAN member list.                       |
|                       | <i>leave all timer_value</i> | Controls the minimum interval of sending the LeaveAll Message on the port. If the LeaveAll Message is received before the timer expires, the timer re-counts. If the timer expires, send the LeaveAll Message on the port and also send this Message to the port, so that the Leave timer begins counting. The actual sending interval ranges from leaveall to leaveall+join. |

**Defaults** Join timer: 200 milliseconds;  
 Leave timer: 600 milliseconds;  
 Leaveall timer: 10000 milliseconds.

**Command mode** Global configuration mode

**Usage Guide** Use the **show gvrp configuration** to display the configuration.  
 Use the **no gvrp timer** command to restore **join**, **leave** and **leaveall timer** to default settings.

**Configuration** The following example configures the join timer.

**Examples** Ruijie(config)# gvrp timer join 200

| Related Commands | Command                 | Description                      |
|------------------|-------------------------|----------------------------------|
|                  | show gvrp configuration | Displays the GVRP configuration. |

**Platform** N/A  
**Description**

## 8.8 l2protocol-tunnel gvrp

Use this command to enable global GVRP PDUs TUNNEL globally. Use the **no** form of this command to restore the default setting.

**l2protocol-tunnel gvrp**  
**no l2protocol-tunnel gvrp**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command mode** Global configuration mode

**Usage Guide** If you want to enable global GVRP PDUs TUNNEL, enable GVRP PDUs TUNNEL on the interface first.

**Configuration Examples** The following example enables GVRP PDUs TUNNEL globally.

```
Ruijie(config)# l2protocol-tunnel gvrp
Ruijie(config)# show l2protocol-tunnel gvrp

L2protocol-tunnel: Gvrp Disable
L2protocol-tunnel destination mac address:01d0.f800.0006
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 8.9 l2protocol-tunnel gvrp enable

Use this command to enable GVRP PDUs TUNNEL on the interface. Use this command to restore the default setting.

**l2protocol-tunnel gvrp enable**  
**no l2protocol-tunnel gvrp enable**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command mode** Interface configuration mode

**Usage Guide** If you want to enable global GVRP PDUs TUNNEL, enable GVRP PDUs TUNNEL on the interface first.

**Configuration Examples** The following example enables GVRP PDUs TUNNEL on the interface.

```
Ruijie(config-if-interface-id)# l2protocol-tunnel gvrp enable
Ruijie(config-if-interface-id)# show l2protocol-tunnel gvrp

L2protocol-tunnel: Gvrp Disable
L2protocol-tunnel destination mac address:01d0.f800.0006
GigabitEthernet 0/1 l2protocol-tunnel gvrp enable
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 8.10 l2protocol-tunnel gvrp tunnel-dmac

Use this command to configure the MAC address for transparent transmission in GVRP PDUs TUNNEL. Use the **no** form of this command to restore the default setting.

**l2protocol-tunnel gvrp tunnel-dmac** *mac-address*

**no l2protocol-tunnel gvrp tunnel-dmac**

| Parameter Description | Parameter          | Description                                                       |
|-----------------------|--------------------|-------------------------------------------------------------------|
|                       | <i>mac-address</i> | The MAC address for transparent transmission in GVRP PDUs TUNNEL. |

**Defaults** The default is 01d0.f800.0006.

**Command mode** Global configuration mode

**Usage Guide** The available MAC address f ranges from 01d0.f800.0006 to 011a.a900.0006.

**Configuration Examples** The following example configures the MAC address for transparent transmission in GVRP PDUs TUNNEL.

```
Ruijie(config)# l2protocol-tunnel gvrp tunnel-dmac 011a.a900.0006
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 8.11 show gvrp configuration

Use this command to display the GVRP configuration.

**show gvrp configuration**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** N/A

**Command mode** Privileged EXEC mode.

**Usage Guide** Use the **show gvrp configuration** to display the configuration.

**Configuration Examples** The following example displays GVRP configuration.

Global GVRP Configuration:

GVRP Feature:enabled

GVRP dynamic VLAN creation:enabled

Join Timers(ms):200

Leave Timers(ms):600

Leaveall Timers(ms):1000

Port based GVRP Configuration:

| PORT                | Applicant Status | Registration Mode |
|---------------------|------------------|-------------------|
| -----               | -----            | -----             |
| GigabitEthernet 0/2 | normal           | normal            |

| Field                      | Description                             |
|----------------------------|-----------------------------------------|
| GVRP Feature               | Whether to enable GVRP                  |
| GVRP dynamic VLAN creation | Whether to enable dynamic VLAN creation |



|                   |                    |
|-------------------|--------------------|
| Join Timers       | Join timer         |
| Leave Timers      | Leave timer        |
| Leaveall Timers   | Leaveall timer     |
| PORT              | Port               |
| Applicant Status  | Advertisement mode |
| Registration Mode | Registration mode  |

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 8.12 show gvrp statistics

Use this command to display the GVRP statistics of one interface or all interfaces.

**show gvrp statistics** { *interface-id* | **all** }

| Parameter Description | Parameter           | Description   |
|-----------------------|---------------------|---------------|
|                       | <i>interface-id</i> | Interface id. |

**Defaults** N/A

**Command mode** Privileged EXEC mode

**Usage Guide** Use the **show gvrp statistics** to display the statistics of one interface or all interfaces.

**Configuration** Ruijie# show gvrp statistics gigabitethernet 1/1

**Examples** Interface GigabitEthernet 3/1

```

RecValidGvrpPdu      0
RecInvalidGvrpPdu    0
RecJoinEmpty         0
RecJoinIn            0
RecEmpty             0
RecLeaveEmpty         0
RecLeaveIn            0
RecLeaveAll           0
SentGvrpPdu          0
SentJoinEmpty        0
SentJoinIn           0

```

```
SentEmpty      0
SentLeaveEmpty  0
SentLeaveIn     0
SentLeaveAll    0
JoinIndicated  0
LeaveIndicated  0
JoinPropagated 0
LeavePropagated 0
```

| Field                            | Description                                    |
|----------------------------------|------------------------------------------------|
| RecValidGvrpPdu                  | Number of received valid GPDU packets.         |
| RecInvalidGvrpPdu                | Number of received invalid GPDU packets.       |
| RecJoinEmpty/ SentJoinEmpty      | Number of received/sent JoinEmpty messages.    |
| RecJoinIn/ SentJoinIn            | Number of received/sent JoinIn messages.       |
| RecEmpty/SentEmpty               | Number of received/sent Empty messages.        |
| RecLeaveEmpty/SentLeaveEmpty     | Number of received/sent LeaveEmpty messages,   |
| RecLeaveIn/ SentLeaveIn          | Number of received/sent LeaveIn messages.      |
| RecLeaveAll/SentLeaveAll         | Number of received/sent LeaveAll messages.     |
| SentGvrpPdu                      | Number of sent GPDU messages.                  |
| JoinIndicated/ LeaveIndicated    | Number of Join/Leave service requests.         |
| JoinPropagated / LeavePropagated | Number of Join/Leave topology update requests. |

#### Related Commands

| Command               | Description                                               |
|-----------------------|-----------------------------------------------------------|
| clear gvrp statistics | Clears the statistics of one interface or all interfaces. |

**Platform** N/A

**Description**

## 8.13 show gvrp status

Use this command to display all dynamic VLAN ports generated by GVRP and the dynamic VLAN ports added to the static VLAN.

**show gvrp status**

#### Parameter Description

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** N/A

**Command mode** Privileged EXEC mode.

**Usage Guide** Use the **show gvrp status** command to display the GVRP status.

**Configuration** The following example displays the GVRP status.

**Examples**

```
Ruijie# show gvrp status
VLAN 1
Dynamic Ports:
DVLAN 2
Dynamic Ports:
```

| Field         | Description    |
|---------------|----------------|
| VLAN          | Static VLAN    |
| DVLAN         | Dynamic VLAN   |
| Dynamic Ports | Dynamic ports. |

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 8.14 show l2protocol-tunnel gvrp

Use this command to display GVRP PDUs TUNNEL configuration.

**show l2protocol-tunnel gvrp**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** N/A

**Command mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** N/A

**Configuration** The following example displays GVRP PDUs TUNNEL configuration.

**Examples**

```
Ruijie# show l2protocol-tunnel gvrp
L2protocol-tunnel: Gvrp Enable
```

```
L2protocol-tunnel destination mac address:011a.a900.0006  
GigabitEthernet 0/1 l2protocol-tunnel gvrp enable
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform  
Description**

N/A

## 9 LLDP Commands

### 9.1 civic-location

Use this command to configure a common LLDP address. Use the **no** form of this command to delete the address.

```
{ country | state | county | city | division | neighborhood | street-group | leading-street-dir |
trailing-street-suffix | street-suffix | number | street-number-suffix | landmark |
additional-location-information | name | postal-code | building | unit | floor | room |
type-of-place | postal-community-name | post-office-box | additional-code } ca-word
```

```
no { country | state | county | city | division | neighborhood | street-group | leading-street-dir |
trailing-street-suffix | street-suffix | number | street-number-suffix | landmark |
additional-location-information | name | postal-code | building | unit | floor | room |
type-of-place | postal-community-name | post-office-box | additional-code } ca-word
```

Parameter  
Description

| Parameter                              | Description                                                            |
|----------------------------------------|------------------------------------------------------------------------|
| <b>country</b>                         | Country code, two bytes. For example, the country code of China is CH. |
| <b>state</b>                           | Address information, CA type 1                                         |
| <b>county</b>                          | CA type 2                                                              |
| <b>city</b>                            | CA type 3                                                              |
| <b>division</b>                        | CA type 4                                                              |
| <b>neighborhood</b>                    | CA type 5                                                              |
| <b>street-group</b>                    | CA type 6                                                              |
| <b>leading-street-dir</b>              | CA type 16                                                             |
| <b>trailing-street-suffix</b>          | CA type 17                                                             |
| <b>street-suffix</b>                   | CA type 18                                                             |
| <b>number</b>                          | CA type 19                                                             |
| <b>street-number-suffix</b>            | CA type 20                                                             |
| <b>landmark</b>                        | CA type 21                                                             |
| <b>additional-location-information</b> | CA type 22                                                             |
| <b>name</b>                            | CA type 23                                                             |
| <b>postal-code</b>                     | CA type 24                                                             |
| <b>building</b>                        | CA type 25                                                             |
| <b>unit</b>                            | CA type 26                                                             |
| <b>floor</b>                           | CA type 27                                                             |
| <b>room</b>                            | CA type 28                                                             |
| <b>type-of-place</b>                   | CA type 29                                                             |
| <b>postal-community-name</b>           | CA type 30                                                             |
| <b>post-office-box</b>                 | CA type 31                                                             |

|                        |                     |
|------------------------|---------------------|
| <b>additional-code</b> | CA type 32          |
| <i>ca-word</i>         | Address information |

**Defaults** N/A

**Command Mode** LLDP Civic address configuration mode

**Usage Guide** This command is used to configure a common LLDP address in LLDP Civic address configuration mode.

**Configuration** The following example configures an LLDP Civic Address (ID: 1).

**Examples**

```
Ruijie#config
Ruijie(config)# lldp location civic-location identifier 1
Ruijie(config-lldp-civic)# country CH
Ruijie(config-lldp-civic)# city Fuzhou
```

**Related**

**Commands**

| Command                                                                                        | Description                                           |
|------------------------------------------------------------------------------------------------|-------------------------------------------------------|
| <b>show lldp location civic-location { identifier id   interface interface-name   static }</b> | Displays the information about an LLDP Civic address. |

**Platform** N/A

**Description**

## 9.2 clear lldp statistics

Use this command to clear LLDP statistics.

**clear lldp statistics [ interface interface-name ]**

**Parameter**

**Description**

| Parameter             | Description    |
|-----------------------|----------------|
| <i>interface-name</i> | Interface name |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** **interface** parameter: clear the LLDP statistics of the specified interface

**Configuration** The following example clears LLDP statistics of interface 1.

**Examples**

```
Ruijie# clear lldp statistics interface GigabitEthernet 0/1
Ruijie# show lldp statistics interface GigabitEthernet 0/1
Lldp statistics information of port [GigabitEthernet 0/1]
-----
```

```

The number of lldp frames transmitted : 0
The number of frames discarded      : 0
The number of error frames          : 0
The number of lldp frames received  : 0
The number of TLVs discarded        : 0
The number of TLVs unrecognized     : 0
The number of neighbor information aged out : 0

```

| Related  | Command | Description |
|----------|---------|-------------|
| Commands | N/A     | N/A         |

**Platform** N/A

**Description**

### 9.3 clear lldp table

Use this command to clear LLDP neighbor information.

**clear lldp table** [ **interface** *interface-name* ]

| Parameter   | Parameter             | Description    |
|-------------|-----------------------|----------------|
| Description | <i>interface-name</i> | Interface name |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** If the **interface** parameter is specified, the LLDP neighbor information on the specified interface is cleared.  
If the **interface** parameter is not specified, the LLDP neighbor information on all interfaces is cleared.

**Configuration Examples** The following example clears the LLDP neighbor information on interface 1.

```

Ruijie# show lldp neighbors interface GigabitEthernet 0/1
Lldp statistics information of port [GigabitEthernet 0/1]
-----
The number of lldp frames transmitted : 0
The number of frames discarded      : 0
The number of error frames          : 0
The number of lldp frames received  : 0
The number of TLVs discarded        : 0
The number of TLVs unrecognized     : 0
The number of neighbor information aged out : 0
Ruijie# clear lldp table interface GigabitEthernet 0/1
Ruijie# show lldp neighbors interface GigabitEthernet 0/1

```

| Related  | Command | Description |
|----------|---------|-------------|
| Commands | N/A     | N/A         |

Platform N/A

Description

## 9.4 device-type

Use this command to configure the device type. Use the **no** form of this command to restore the default setting.

**device-type** *device-type*

**no device-type**

| Parameter   | Parameter          | Description                                                                                                                                                   |
|-------------|--------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Description | <i>device-type</i> | Device type. The value ranges from 0 to 2.<br>0: The device type is DHCP Server.<br>1: The device type is switch.<br>2: The device type is LLDP MED terminal. |

Defaults

Command LLDP Civic address configuration mode

Mode

**Usage Guide** This command is used to configure the device type in a common LLDP address in LLDP Civic address configuration mode.

**Configuration** The following example sets the device type to switch.

**Examples**

```
Ruijie#config
Ruijie(config)# lldp location civic-location identifier 1
Ruijie(config-lldp-civic)# device-type 1
```

| Related  | Command                                                                                                      | Description                              |
|----------|--------------------------------------------------------------------------------------------------------------|------------------------------------------|
| Commands | <b>show lldp location civic-location { identifier <i>id</i>   interface <i>interface-name</i>   static }</b> | Displays LLDP Civic Address information. |

Platform N/A

Description

## 9.5 lldp compliance vendor

Use this command to enable detection of compatible neighbors.



**lldp compliance vendor**  
**no lldp compliance vendor**

| Parameter              | Parameter                                                                   | Description |
|------------------------|-----------------------------------------------------------------------------|-------------|
| Description            | N/A                                                                         | N/A         |
| Defaults               | This function is disabled by default.                                       |             |
| Command Mode           | Global configuration mode                                                   |             |
| Usage Guide            | N/A                                                                         |             |
| Configuration Examples | The following example enables detection of compatible neighbors.            |             |
|                        | <pre>Ruijie#configure terminal Ruijie(config)# lldp compliance vendor</pre> |             |
| Related Commands       | Command                                                                     | Description |
|                        | N/A                                                                         | N/A         |
| Platform Description   | N/A                                                                         |             |

## 9.6 lldp enable

Use this command to enable the LLDP globally or on the interface. Use **no** form of this command to disable this function.

**lldp enable**  
**no lldp enable**

| Parameter              | Parameter                                                             | Description |
|------------------------|-----------------------------------------------------------------------|-------------|
| Description            | N/A                                                                   | N/A         |
| Defaults               | This function is enabled by default.                                  |             |
| Command Mode           | Global (or interface) configuration mode                              |             |
| Usage Guide            | LLDP takes effect on an interface only when LLDP is enabled globally. |             |
| Configuration Examples | The following example disables LLDP globally and on the interface.    |             |
|                        | <pre>Ruijie#config Ruijie(config)#no lldp enable</pre>                |             |

```
Ruijie(config)#interface gigabitethernet 0/1
Ruijie(config-if)# no lldp enable
```

| Related Commands | Command                 | Description                       |
|------------------|-------------------------|-----------------------------------|
|                  | <b>show lldp status</b> | Displays LLDP status information. |

**Platform** N/A

**Description**

## 9.7 lldp encapsulation snap

Use this command to configure the encapsulation format of LLDP packets. Use the **no** form of this command to restore the default setting.


**lldp encapsulation snap**

**no lldp encapsulation snap**

| Parameter          | Parameter | Description |
|--------------------|-----------|-------------|
| <b>Description</b> | N/A       | N/A         |

**Defaults** By default, Ethernet II encapsulation format is used.

**Command Mode** Interface configuration mode.

**Usage Guide**  To guarantee the normal communication between local device and neighbor device, the same LLDP packet encapsulation format must be used.

**Configuration Examples** The following example sets LLDP packet encapsulation format to SNAP.

```
Ruijie#config
Ruijie(config)#interface gigabitethernet 0/1
Ruijie(config-if)#lldp encapsulation snap
```

| Related Commands | Command                 | Description                       |
|------------------|-------------------------|-----------------------------------|
|                  | <b>show lldp status</b> | Displays LLDP status information. |

**Platform** N/A

**Description**

## 9.8 lldp error-detect

Use this command to configure the LLDP error detection, including the detection of VLAN configurations on both sides of the link, port state detection, port aggregation configuration detection,

MTU configuration detection and loop detection. If any error is detected by LLDP, warning message will be printed to notify the administrator. Use the **no** form of this command to disable this function.

**lldp error-detect**

**no lldp error-detect**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** This function is enabled by default.

**Command Mode** Interface configuration mode.

**Usage Guide** LLDP error detection relies on the specific TLV in the LLDP packets exchanged between devices on both sides of the link. To ensure normal functioning of the detection feature, correct TLVs must be advertised.

**Configuration** The following example configures LLDP error detection.

**Examples**

```
Ruijie#config
Ruijie(config)#interface gigabitethernet 0/1
Ruijie(config-if)#lldp error-detect
```

| Related Commands | Command                      | Description                       |
|------------------|------------------------------|-----------------------------------|
|                  | <b>show interface status</b> | Displays LLDP status information. |

**Platform Description** N/A

## 9.9 lldp fast-count

When a new neighbor is detected or when LLDP operating mode changes from shutdown or Rx to TxRx or Tx, to allow the neighbor device to quickly study the information about this device, the fast sending mechanism will be initiated. The fast sending mechanism shortens the LLDPDU sending interval to 1 second and continuously transmits a certain number of LLDPDUs before restoring to the normal transmit interval. Use the **no** form of this command to restore the default setting.

**lldp fast-count value**

**no lldp fast-count**

| Parameter   | Parameter    | Description                                                      |
|-------------|--------------|------------------------------------------------------------------|
| Description | <i>value</i> | The number of fast sent LLDP packets, in the range from 1 to 10. |

**Defaults** The default is 3.

**Command** Global configuration mode.

**Mode****Usage Guide** N/A**Configuration** The following example sets the number of fast sent LLDP packets to 5.**Examples**

```
Ruijie#config
Ruijie(config)#lldp fast-count 5
```

**Related****Commands**

| Command               | Description                       |
|-----------------------|-----------------------------------|
| show interface status | Displays LLDP status information. |

**Platform** N/A**Description**

## 9.10 lldp hold-multiplier

Use this command to set the TTL multiplier. Use the **no** form of this command to restore to default setting.

**lldp hold-multiplier** *value*

**no lldp hold-multiplier**

**Parameter****Description**

| Parameter    | Description                                |
|--------------|--------------------------------------------|
| <i>value</i> | TTL multiplier, in the range from 2 to 10. |

**Defaults**

The default is 4.

**Command**

Global configuration mode.

**Mode****Usage Guide**

The value of Time To Live (TLV) in LLDP packet = TTL multiplier × LLDP packet transmit interval + 1. Therefore, the TTL of local device information on the neighbor device can be controlled by adjusting TTL multiplier.

**Configuration** The following example sets TTL multiplier to 5.**Examples**

```
Ruijie#config
Ruijie(config)#lldp hold-multiplier 5
```

**Related****Commands**

| Command          | Description                       |
|------------------|-----------------------------------|
| show lldp status | Displays LLDP status information. |

**Platform** N/A**Description**

## 9.11 lldp ignore pvid-error-detect

Use this command to enable the function of ignoring PVID function. Use the **no** form of this command to disable the function of ignoring PVID function.

**lldp ignore pvid-error-detect**

**no lldp ignore pvid-error-detect**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** By default, it is disabled.

**Command Mode** Global configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example ignores PVID detection globally.

```
Ruijie# configure terminal
Ruijie(config)# lldp ignore pvid-error-detect
```

**Platform Description** N/A

## 9.12 lldp location civic-location identifier

Use this command to create a common address of a device connected to the network in LLDP Civic Address configuration mode. Use the **no** form of this command to delete the address.

**lldp location civic-location identifier *id***

**no lldp location civic-location identifier *id***

| Parameter   | Parameter | Description                                                              |
|-------------|-----------|--------------------------------------------------------------------------|
| Description | <i>id</i> | ID of a common address of a network device, in the range from 1 to 1024. |

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** This command can be used to enter the LLDP Civic Address configuration mode.

**Configuration Examples** The following example creates the Civic Address information in LLDP MED-TLV as follows: set *id* to 1.

```
Ruijie#config
Ruijie(config)#lldp location civic-location identifier 1
Ruijie(config-lldp-civic)#
```

| Related Commands | Command                                                                                                      | Description                                  |
|------------------|--------------------------------------------------------------------------------------------------------------|----------------------------------------------|
|                  | <b>show lldp location civic-location { identifier <i>id</i>   interface <i>interface-name</i>   static }</b> | Displays the LLDP Civic Address information. |

**Platform** N/A  
**Description**

## 9.13 lldp location elin identifier

Use this command to set an emergency number encapsulated in a Location Identification TLV. Use the **no** form of this command to delete the number.

**lldp location elin identifier *id* elin-location *tel-number***  
**no lldp location elin identifier *id***

| Parameter Description | Parameter         | Description                                             |
|-----------------------|-------------------|---------------------------------------------------------|
|                       | <i>id</i>         | ID of an emergency number, in the range from 1 to 1024. |
|                       | <i>tel-number</i> | Emergency number, in the range from 10 to 25 bytes.     |

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** This command is used to configure an emergency number.

**Configuration Examples** The following example sets an emergency number.

```
Ruijie#config
Ruijie(config)#lldp location elin identifier 1 elin-location 085283671111
```

| Related Commands | Command                                                                                                     | Description                        |
|------------------|-------------------------------------------------------------------------------------------------------------|------------------------------------|
|                  | <b>show lldp location elin-location { identifier <i>id</i>   interface <i>interface-name</i>   static }</b> | Displays an LLDP emergency number. |

**Platform** N/A  
**Description**

## 9.14 lldp management-address-tlv

Use this command to configure the management address advertised in LLDP packets. Use the **no**

form of this command to disable the advertisement of management address.

**lldp management-address-tlv** [ *ip-address* ]

**no lldp management-address-tlv**

| Parameter   | Parameter         | Description                                        |
|-------------|-------------------|----------------------------------------------------|
| Description | <i>ip-address</i> | The management address advertised in LLDP packets. |

**Defaults** N/A

**Command** Interface configuration mode.

**Mode**

**Usage Guide** By default, the management address is advertised in LLDP packets, and is the IPv4 address of the lowest-ID VLAN carried on the port. If IPv4 address is not configured for this VLAN, the next lowest-ID VLAN carried on the port will be tried until the IPv4 address is obtained.

If the IPv4 address is still not found, the IPv6 address of the lowest-ID VLAN carried on the port will be tried.

If the IPv6 address is still not found, the MAC address of the device will be advertised as the management address.

**Configuration** The following example configures the management address advertised in LLDP packets to

**Examples** 192.168.1.1.

```
Ruijie#config
Ruijie(config)#interface gigabitethernet 0/1
Ruijie(config-if)#lldp management-address-tlv 192.168.1.1
```

| Related  | Command                            | Description                     |
|----------|------------------------------------|---------------------------------|
| Commands | <b>show lldp local-information</b> | Displays LLDP local information |

**Platform** N/A

**Description**

## 9.15 lldp mode

Use this command to configure the LLDP operating mode. Use **no** form of this command to restore the default setting.

**lldp mode** { *rx* | *tx* | *txrx* }

**no lldp mode**

| Parameter   | Parameter   | Description                 |
|-------------|-------------|-----------------------------|
| Description | <b>rx</b>   | Only sends LLDPDUs.         |
|             | <b>tx</b>   | Only receives LLDPDUs.      |
|             | <b>txrx</b> | Sends and receives LLDPDUs. |

**Defaults** The default is **txrx**.

**Command Mode** Interface configuration mode

**Usage Guide** Disable LLDP operating mode on the interface. The interface won't send and receive LLDP packets. The precondition for enabling LLDP on the interface is that LLDP has been enabled globally and LLDP operates in tx, rx or txrx mode.

**Configuration Examples** The following example sets LLDP operating mode to tx on the interface.

```
Ruijie#config
Ruijie(config)#interface gigabitethernet 0/1
Ruijie(config-if)#lldp mode tx
```

| Related Commands | Command                 | Description                      |
|------------------|-------------------------|----------------------------------|
|                  | <b>show lldp status</b> | Displays LLDP status information |

**Platform** N/A

**Description**

## 9.16 lldp network-policy profile

Use this command to create an LLDP network policy and enter the LLDP network policy configuration mode. Use the no form of this command to delete the policy.

**lldp network-policy profile** *profile-num*

**no lldp network-policy profile** *profile-num*

| Parameter          | Parameter          | Description                                                |
|--------------------|--------------------|------------------------------------------------------------|
| <b>Description</b> | <i>profile-num</i> | ID of an LLDP network policy, in the range from 1 to 1024. |

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** This command is used to enter the LLDP network policy configuration mode. When this command is run, the policy ID must be specified. In LLDP network-policy mode, the { **voice** | **voice-signaling** } **vlan** command can be used to configure the specific network policy.

**Configuration Examples** The following example creates an LLDP network policy whose ID is 1.

```
Ruijie#config
```



```
Ruijie(config)#lldp network-policy profile 1
Ruijie(config-lldp-network-policy)#
```

| Related Commands | Command                                                        | Description                      |
|------------------|----------------------------------------------------------------|----------------------------------|
|                  | <b>show lldp network-policy profile</b> [ <i>profile-num</i> ] | Displays an LLDP network policy. |

**Platform** N/A

**Description**

## 9.17 lldp notification remote-change enable

Use this command to configure LLDP Trap. Use the **no** form of this command to restore the default setting.

**lldp notification remote-change enable**

**no lldp notification remote-change enable**

| Parameter          | Parameter | Description |
|--------------------|-----------|-------------|
| <b>Description</b> | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode.

**Usage Guide** By configuring LLDP Trap, the LLDP information of local device (such as information about the detection of new neighbor or the fault on the communication link) can be sent to the network management server. The administrator can monitor the network operation status according to such information.

**Configuration Examples** The following example configures LLDP Trap.

```
Ruijie#config
Ruijie(config)#interface gigabitethernet 0/1
Ruijie(config-if)#lldp notification remote-change enable
```

| Related Commands | Command                 | Description                       |
|------------------|-------------------------|-----------------------------------|
|                  | <b>show lldp status</b> | Displays LLDP status information. |

**Platform** N/A

**Description**

## 9.18 lldp timer notification-interval

Use this command to set an interval of sending LLDP Traps. Use the **no** form of this command to restore the default setting.

**lldp timer notification-interval** *seconds*

**no lldp timer notification-interval**

| Parameter   | Parameter      | Description                                                                         |
|-------------|----------------|-------------------------------------------------------------------------------------|
| Description | <i>seconds</i> | Interval of sending LLDP Traps, in the range from 5 to 3600 in the unit of seconds. |

**Defaults** The default is 5.

**Command** Global configuration mode.

**Mode**

**Usage Guide** To prevent excessive LLDP traps from being sent, you can set an interval of sending LLDP Traps. If LLDP information change is detected during this interval, traps will be sent to the network management server.

**Configuration Examples** The following example sets the interval of sending LLDP Traps to 10 seconds.

```
Ruijie#config
Ruijie(config)#lldp timer notification-interval 10
```

| Related  | Command                 | Description                       |
|----------|-------------------------|-----------------------------------|
| Commands | <b>show lldp status</b> | Displays LLDP status information. |

**Platform** N/A

**Description**

## 9.19 lldp timer reinit-delay

Use this command to set port initialization delay. Use the **no** form of this command to restore the default setting.

**lldp timer reinit-delay** *seconds*

**no lldp timer reinit-delay**

| Parameter   | Parameter      | Description                                                                  |
|-------------|----------------|------------------------------------------------------------------------------|
| Description | <i>seconds</i> | Port initialization delay, in the range from 1 to 10 in the unit of seconds. |

**Defaults** The default is 2.

**Command** Global configuration mode.

**Mode**

**Usage Guide** To prevent LLDP from being initialized too frequently due to the frequent operating mode change, you can configure port initialization delay.

**Configuration Examples** The following example sets LLDP port initialization delay to 3 seconds.

**Examples**

```
Ruijie#config
Ruijie(config)#lldp timer reinit-delay 3
```

| Related Commands | Command                 | Description                       |
|------------------|-------------------------|-----------------------------------|
|                  | <b>show lldp status</b> | Displays LLDP status information. |

**Platform** N/A

**Description**

## 9.20 lldp timer tx-delay

Use this command to set LLDP packet transmission delay. Use the **no** form of this command to restore the default setting.

**lldp timer tx-delay** *seconds*

**no lldp timer tx-delay**

| Parameter          | Parameter      | Description                                                                         |
|--------------------|----------------|-------------------------------------------------------------------------------------|
| <b>Description</b> | <i>seconds</i> | LLDP packet transmission delay, in the range from 1 to 8192 in the unit of seconds. |

**Defaults** The default is 2.

**Command** Global configuration mode.

**Mode**

**Usage Guide** An LLDP-enabled port will send LLDP packets when the local device information changes. To avoid frequently sending LLDP packets due to the frequent local device information change, configure the LLDP packet transmission delay to control the frequent transmission of LLDP packets.

**Configuration Examples** The following example sets LLDPDU transmission delay to 3 seconds.

**Examples**

```
Ruijie#config
Ruijie(config)#lldp timer tx-delay 3
```

| Related | Command | Description |
|---------|---------|-------------|
|---------|---------|-------------|

|                 |                         |                                   |
|-----------------|-------------------------|-----------------------------------|
| <b>Commands</b> | <b>show lldp status</b> | Displays LLDP status information. |
|-----------------|-------------------------|-----------------------------------|

**Platform** N/A

**Description**

## 9.21 lldp timer tx-interval

Use this command to set the interval of sending the LLDP packets. Use **no** form of this command to restore the default setting.

**lldp timer tx-interval** *seconds*

**no lldp timer tx-interval**

| Parameter          | Parameter      | Description                                                                                |
|--------------------|----------------|--------------------------------------------------------------------------------------------|
| <b>Description</b> | <i>seconds</i> | Interval of sending the LLDP packets, in the range from 5 to 32768 in the unit of seconds. |

**Defaults** The default is 30.

**Command** Global configuration mode.

**Mode**

**Usage Guide** N/A

**Configuration** The following example sets the interval of sending the LLDP packets to 10 seconds.

**Examples**

```
Ruijie#config
Ruijie(config)#lldp timer tx-interval 10
```

| Related         | Command                 | Description                       |
|-----------------|-------------------------|-----------------------------------|
| <b>Commands</b> | <b>show lldp status</b> | Displays LLDP status information. |

**Platform** N/A

**Description**

## 9.22 lldp tlv-enable

Use this command to configure the types of advertisable TLVs. Use the **no** form of this command to restore the default setting.

**lldp tlv-enable** { **basic-tlv** { **all** | **port-description** | **system-capability** | **system-description** | **system-name** } | **dot1-tlv** { **all** | **port-vlan-id** | **protocol-vlan-id** [ *vlan-id* ] | **vlan-name** [ *vlan-id* ] } | **dot3-tlv** { **all** | **link-aggregation** | **mac-physic** | **max-frame-size** | **power** } | **med-tlv** { **all** | **capability** | **inventory** | **location** { **civic-location** | **elin** } **identifier** *id* | **network-policy profile** [ *profile-num* ] |

```
power-over-ethernet } }
```

```
no lldp tlv-enable { basic-tlv { all | port-description | system-capability | system-description |
system-name } | dot1-tlv { all | port-vlan-id | protocol-vlan-id | vlan-name } | dot3-tlv { all |
link-aggregation | mac-physic | max-frame-size | power } | med-tlv { all | capability | inventory |
location { civic-location | elin } identifier id | network-policy profile [ profile-num ] |
power-over-ethernet } }
```

| Parameter                  | Parameter                  | Description                                                                                                                                                                                  |
|----------------------------|----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Description                | <b>basic-tlv</b>           | Basic management TLV                                                                                                                                                                         |
|                            | <b>port-description</b>    | Port Description TLV                                                                                                                                                                         |
|                            | <b>system-capability</b>   | System Capabilities TLV                                                                                                                                                                      |
|                            | <b>system-description</b>  | System Description TLV                                                                                                                                                                       |
|                            | <b>system-name</b>         | System Name TLV                                                                                                                                                                              |
|                            | <b>dot1-tlv</b>            | 802.1 organizationally specific TLV                                                                                                                                                          |
|                            | <b>port-vlan-id</b>        | Port VLAN ID TLV                                                                                                                                                                             |
|                            | <b>protocol-vlan-id</b>    | Port And Protocol VLAN ID TLV                                                                                                                                                                |
|                            | <i>vlan-id</i>             | VLAN ID                                                                                                                                                                                      |
|                            | <i>vlan-name</i>           | VLAN Name TLV                                                                                                                                                                                |
|                            | <i>vlan-id</i>             | VLAN ID corresponding to the specified VLAN name                                                                                                                                             |
|                            | <b>dot3-tlv</b>            | 802.3 organizationally specific TLV                                                                                                                                                          |
|                            | <b>link-aggregation</b>    | Link Aggregation TLV                                                                                                                                                                         |
|                            | <b>mac-physic</b>          | MAC/PHY Configuration/Status TLV                                                                                                                                                             |
|                            | <b>max-frame-size</b>      | Maximum Frame Size TLV                                                                                                                                                                       |
|                            | <b>power</b>               | Power Via MDI TLV                                                                                                                                                                            |
|                            | <b>med-tlv</b>             | LLDP MED TLV                                                                                                                                                                                 |
|                            | <b>capability</b>          | LLDP-MED Capabilities TLV                                                                                                                                                                    |
|                            | <b>inventory</b>           | Inventory management TLVs, including hardware revision TLVs, firmware revision TLVs, software revision TLVs, serial number TLVs, manufacturer name TLVs, model name TLVs, and asset ID TLVs. |
|                            | <b>location</b>            | Location Identification TLV                                                                                                                                                                  |
|                            | <b>civic-location</b>      | Common address information about the network device in location identification TLVs.                                                                                                         |
|                            | <b>elin</b>                | Encapsulated emergency number                                                                                                                                                                |
|                            | <i>id</i>                  | Policy ID                                                                                                                                                                                    |
| <b>network-policy</b>      | Network Policy TLV         |                                                                                                                                                                                              |
| <i>profile-num</i>         | ID of network policy       |                                                                                                                                                                                              |
| <b>power-over-ethernet</b> | Extended Power-via-MDI TLV |                                                                                                                                                                                              |

### Defaults

By default, all TLVs other than Location Identification TLV can be advertised on the interface for products other than S12000. For the S12000 product series, only basic TLVs and IEEE 802.1 TLVs are advertised. To advertise IEEE 802.3 TLVs and LLDP-MED TLVs, run the **lldp tlv-enable** command.

**Command** Interface configuration mode

**Mode**

**Usage Guide** During configuration of basic management TLVs, IEEE 802.1 TLVs, and IEEE 802.3 TLVs, if the **all** parameter is specified, all optional TLVs of the types are advertised.

During configuration of LLDP-MED TLVs, if the **all** parameter is specified, all LLDP-MED TLVs except Location Identification TLVs are advertised.

When configuring LLDP-MED Capability TLVs, configure LLDP-MED MAC/PHY TLVs first. When canceling LLDP-MED MAC/PHY TLVs, cancel LLDP-MED Capability TLVs first.

When configuring LLDP-MED TLVs, configure LLDP-MED Capability TLVs first so that LLDP-MED TLVs of other types can be configured.

To cancel LLDP-MED TLVs, cancel LLDP-MED TLVs of other types first so that LLDP-MED Capability TLVs can be canceled.

**Configuration** The following example configures all IEEE 802.1 TLVs to be advertised.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)#interface gigabitethernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)#lldp tlv-enable dot1-tlv all
```

The following example applies LLDP network policy 1 on the 0/1 interface.

```
Ruijie#config
Ruijie(config)#interface gigabitethernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)#lldp tlv-enable med-tlv network-policy
profile 1
```

The following example applies the LLDP Civic Address (ID: 1) configuration on the 0/1 interface.

```
Ruijie#config
Ruijie(config)#interface gigabitethernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)#lldp tlv-enable med-tlv location
civic-location identifier 1
```

The following example applies the emergency number (ID: 1) on the 0/1 interface.

```
Ruijie#config
Ruijie(config)#interface gigabitethernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)#lldp location elin identifier 1
```

**Related**

**Commands**

| Command                               | Description                                  |
|---------------------------------------|----------------------------------------------|
| <b>show lldp tlv-config interface</b> | Displays the attributes of advertisable TLVs |

**Platform**

N/A

**Description**

## 9.23 show lldp local-information

Use this command to display the LLDP information of local device. The information will be encapsulated in the TLVs and sent to the neighbor device.

**show lldp local-information** [ **global** | **interface** *interface-name* ]

| Parameter   | Parameter             | Description    |
|-------------|-----------------------|----------------|
| Description | <i>interface-name</i> | Interface name |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

- Usage Guide**
- **global** parameter: display the global LLDP information to be sent.
  - **Interface** parameter: displays the LLDP information to be sent out the interface specified.
  - No parameter: display all LLDP information, including global and interface-based LLDP information.

**Configuration Examples** The following example displays the device information to be sent to neighbor device.

```
Ruijie# show lldp local-information
Global LLDP local-information:
  Chassis ID type      : MAC address
  Chassis id          : 00d0.f822.33aa
  System name         : System name
  System description   : System description
  System capabilities supported : Repeater, Bridge, Router
  System capabilities enabled  : Repeater, Bridge, Router

  LLDP-MED capabilities   : LLDP-MED Capabilities, Network Policy, Location
    Identification, Extended Power via MDI-PD, Inventory
  Device class         : Network Connectivity
  HardwareRev          : 1.0
  FirmwareRev          :
  SoftwareRev          : RGOS 10.4(3) Release(94786)
  SerialNum            : 1234942570001
  Manufacturer name    : Manufacturer name
  Asset tracking identifier :

-----
Lldp local-information of port [GigabitEthernet 0/1]
-----
Port ID type          : Interface name
```

```

Port id      : GigabitEthernet 0/1
Port description  :

Management address subtype : 802 mac address
Management address  : 00d0.f822.33aa
Interface numbering subtype :
Interface number    : 0
Object identifier   :

802.1 organizationally information
Port VLAN ID       : 1
Port and protocol VLAN ID (PPVID) : 1
  PPVID Supported   : YES
  PPVID Enabled     : NO
VLAN name of VLAN 1 : VLAN0001
Protocol Identity   :

802.3 organizationally information
Auto-negotiation supported : YES
Auto-negotiation enabled   : YES
PMD auto-negotiation advertised : 100BASE-TX full duplex mode, 100BASE-TX half
duplex mode
Operational MAU type      :
PoE support               : NO
Link aggregation supported : YES
Link aggregation enabled   : NO
Aggregation port ID      : 0
Maximum frame Size       : 1500

LLDP-MED organizationally information
Power-via-MDI device type : PD
Power-via-MDI power source : Local
Power-via-MDI power priority :
Power-via-MDI power value  :
Model name                : Model name

```

**show lldp local-information** command output description:

| Field           | Description                                                                |
|-----------------|----------------------------------------------------------------------------|
| Chassis ID type | Chassis ID type for identifying the Chassis ID field                       |
| Chassis ID      | Used to identify the device, and is generally represented with MAC address |



|                                 |                                                                                                                                                                                                                                                                                                                                                                                                        |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| System name                     | Name of the sending device                                                                                                                                                                                                                                                                                                                                                                             |
| System description              | Description of the sending device, including hardware/software version, operating system and etc.                                                                                                                                                                                                                                                                                                      |
| System capabilities supported   | Capabilities supported by the system                                                                                                                                                                                                                                                                                                                                                                   |
| System capabilities enabled     | Capabilities currently enabled by the system                                                                                                                                                                                                                                                                                                                                                           |
| LLDP-MED capabilities           | LLDP-MED capabilities supported by the system                                                                                                                                                                                                                                                                                                                                                          |
| Device class                    | MED device class, which is divided into 2 categories: network connectivity device and terminal device.<br>Network connectivity device<br>Class I: normal terminal device<br>Class II: media terminal device; besides Class I capabilities, it also supports media streams.<br>Class III: communication terminal device; it supports all the capabilities of Class I and Class II and IP communication. |
| HardwareRev                     | Hardware version                                                                                                                                                                                                                                                                                                                                                                                       |
| FirmwareRev                     | Firmware version                                                                                                                                                                                                                                                                                                                                                                                       |
| SoftwareRev                     | Software version                                                                                                                                                                                                                                                                                                                                                                                       |
| SerialNum                       | Serial number                                                                                                                                                                                                                                                                                                                                                                                          |
| Manufacturer name               | Device manufacturer                                                                                                                                                                                                                                                                                                                                                                                    |
| Asset tracking identifier       | Asset tracking ID                                                                                                                                                                                                                                                                                                                                                                                      |
| Port ID type                    | Port ID type                                                                                                                                                                                                                                                                                                                                                                                           |
| Port ID                         | Port ID                                                                                                                                                                                                                                                                                                                                                                                                |
| Port description                | Port description                                                                                                                                                                                                                                                                                                                                                                                       |
| Management address subtype      | Management address type                                                                                                                                                                                                                                                                                                                                                                                |
| Management address              | Management address                                                                                                                                                                                                                                                                                                                                                                                     |
| Interface numbering subtype     | Type of the interface identified by the management address                                                                                                                                                                                                                                                                                                                                             |
| Interface number                | ID of the interface identified by the management address                                                                                                                                                                                                                                                                                                                                               |
| Object identifier               | ID of the object identified by the management address                                                                                                                                                                                                                                                                                                                                                  |
| Port VLAN ID                    | Port VLAN ID                                                                                                                                                                                                                                                                                                                                                                                           |
| Port and protocol VLAN ID       | Port and Protocol VLAN ID                                                                                                                                                                                                                                                                                                                                                                              |
| PPVID Supported                 | Indicates whether port and protocol VLAN is supported                                                                                                                                                                                                                                                                                                                                                  |
| PPVID Enabled                   | Indicates whether port and protocol VLAN is enabled                                                                                                                                                                                                                                                                                                                                                    |
| VLAN name of VLAN 1             | Name of VLAN 1                                                                                                                                                                                                                                                                                                                                                                                         |
| Protocol Identity               | Protocol identifier                                                                                                                                                                                                                                                                                                                                                                                    |
| Auto-negotiation supported      | Indicates whether auto-negotiation is supported                                                                                                                                                                                                                                                                                                                                                        |
| Auto-negotiation enabled        | Indicates whether auto-negotiation is enabled                                                                                                                                                                                                                                                                                                                                                          |
| PMD auto-negotiation advertised | Auto-negotiation advertising capability of the port                                                                                                                                                                                                                                                                                                                                                    |
| Operational MAU type            | Speed and duplex state of the port                                                                                                                                                                                                                                                                                                                                                                     |
| PoE support                     | Indicates whether POE is supported                                                                                                                                                                                                                                                                                                                                                                     |
| Link aggregation supported      | Indicates whether link aggregation is supported                                                                                                                                                                                                                                                                                                                                                        |
| Link aggregation enabled        | Indicates whether link aggregation is enabled                                                                                                                                                                                                                                                                                                                                                          |
| Aggregation port ID             | ID of the link aggregation port                                                                                                                                                                                                                                                                                                                                                                        |

|                              |                                                                                  |
|------------------------------|----------------------------------------------------------------------------------|
| Maximum frame Size           | Maximum frame size supported by the port                                         |
| Power-via-MDI device type    | Device type, including:<br>PSE (power sourcing equipment)<br>PD (powered device) |
| Power-via-MDI power source   | Power source type                                                                |
| Power-via-MDI power priority | Power supply priority                                                            |
| Power-via-MDI power value    | Available power on port                                                          |
| Model name                   | Name of model                                                                    |

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 9.24 show lldp location

Use this command to display the common LLDP address or emergency number of the local device.

```
show lldp location { civic-location | elin-location } { identifier id | interface interface-name | static }
```

| Parameter          | Parameter             | Description                                               |
|--------------------|-----------------------|-----------------------------------------------------------|
| <b>Description</b> | <b>civic-location</b> | Encapsulates a common address of a network device.        |
|                    | <b>elin-location</b>  | Encapsulates an emergency number.                         |
|                    | <b>identifier</b>     | Displays one address or emergency number configured.      |
|                    | <i>id</i>             | Policy ID of configured information                       |
|                    | <b>interface</b>      | Displays the address or emergency number on an interface. |
|                    | <i>interface-name</i> | Interface name                                            |
|                    | <b>static</b>         | Displays all addresses or emergency numbers configured.   |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** If the policy ID is specified, the specified address or emergency number is displayed.  
If the interface name is specified, the address or emergency number configured on the interface is displayed.  
If no parameter is specified, all addresses or emergency numbers are displayed.

**Configuration Examples** The following example displays all addresses.

### Examples

```
Ruijie# show lldp location civic-location static
```

```

LLDP Civic location information
-----
Identifier      : testt
County         : china
City Division   : 22
Leading street direction : 44
Street number   : 68
Landmark       : 233
Name           : liuy
Building       : 19bui
Floor          : 1
Room           : 33
City           : fuzhou
Country        : 86
Additional location : aaa
Ports          : Gi0/1
-----
Identifier      : tee
-----
    
```

The following example displays all emergency numbers.

```

Ruijie# show lldp location elin-location static
Elin location information
-----
Identifier : t
Elin      : iiiiiviiii
Ports     : Gi1/0/3
-----
    
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

Platform N/A  
Description

## 9.25 show lldp neighbors

Use this command to display the LLDP information about a neighboring device.

**show lldp neighbors** [ **interface** *interface-name* ] [ **detail** ]

| Parameter Description | Parameter             | Description                                |
|-----------------------|-----------------------|--------------------------------------------|
|                       | <i>interface-name</i> | Interface name                             |
|                       | <b>detail</b>         | All information about a neighboring device |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** If the **detail** parameter is not specified, the brief information about a neighboring device is displayed. If the **detail** parameter is specified, the detailed information about a neighboring device is displayed. If the **interface** parameter is specified, the neighboring device information received on the specified interface is displayed.

**Configuration Examples** The following example displays the neighboring device information received on all ports.

```
Ruijie# show lldp neighbors detail
Lldp neighbor-information of port [GigabitEthernet 0/1]
Neighbor index      : 1
Device type        : LLDP Device
Update time        : 1hour 53minutes 30seconds
Aging time         : 5seconds

Chassis ID type    : MAC address
Chassis id        : 00d0.f822.33cd
System name       : System name
System description : System description
System capabilities supported : Repeater, Bridge, Router
System capabilities enabled : Repeater, Bridge, Router

Management address subtype : 802 mac address
Management address      : 00d0.f822.33cd
Interface numbering subtype :
Interface number       : 0
Object identifier      :

LLDP-MED capabilities  :
Device class          :
HardwareRev           :
FirmwareRev           :
SoftwareRev           :
SerialNum             :
Manufacturer name     :
Asset tracking identifier :

Port ID type         : Interface name
```

```

Port id      : GigabitEthernet 0/1
Port description  :

802.1 organizationally information
Port VLAN ID   : 1
Port and protocol VLAN ID (PPVID) : 1
  PPVID Supported   : YES
  PPVID Enabled     : NO
VLAN name of VLAN 1 : VLAN0001
Protocol Identity  :
802.3 organizationally information
Auto-negotiation supported : YES
Auto-negotiation enabled   : YES
PMD auto-negotiation advertised : 1000BASE-T full duplex mode, 100BASE-TX full
  duplex mode, 100BASE-TX half duplex mode
Operational MAU type   : speed(1000)/duplex(Full)
PoE support           : NO
Link aggregation supported : YES
Link aggregation enabled : NO
Aggregation port ID    : 0
Maximum frame Size     : 1500
LLDP-MED organizationally information
Power-via-MDI device type :
Power-via-MDI power source :
Power-via-MDI power priority :
Power-via-MDI power value :

```

## Description of fields:

| Field                         | Description                                                                          |
|-------------------------------|--------------------------------------------------------------------------------------|
| Neighbor index                | Neighbor index                                                                       |
| Device type                   | Type of neighboring device                                                           |
| Update time                   | Latest update time of neighbor information                                           |
| Aging time                    | Aging time of a neighbor, namely the time after which a neighbor is aged and deleted |
| Chassis ID type               | Chassis ID type                                                                      |
| Chassis ID                    | Used to identify a device. Usually, a MAC address is used.                           |
| System name                   | Device name                                                                          |
| System description            | Device description, including hardware/software version and operating system         |
| System capabilities supported | Functions supported by the system                                                    |
| System capabilities enabled   | Functions enabled by the system                                                      |
| Management address subtype    | Type of management address                                                           |
| Management address            | Management address                                                                   |
| Interface numbering subtype   | Interface type of management address                                                 |

|                                 |                                                                                                                                                                                                                                                                                                                                                                    |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Interface number                | Interface ID of management address                                                                                                                                                                                                                                                                                                                                 |
| Object identifier               | Object ID of management address                                                                                                                                                                                                                                                                                                                                    |
| Device class                    | MED device type: network connectivity device and terminal device<br>Network connectivity device:<br>Class I: general terminal device<br>Class II: media terminal device, including capabilities of Class I and supporting media stream<br>Class III: communication terminal device, including capabilities of Class I and Class II and supporting IP communication |
| HardwareRev                     | Hardware version                                                                                                                                                                                                                                                                                                                                                   |
| FirmwareRev                     | Firmware version                                                                                                                                                                                                                                                                                                                                                   |
| SoftwareRev                     | Software version                                                                                                                                                                                                                                                                                                                                                   |
| SerialNum                       | Serial number                                                                                                                                                                                                                                                                                                                                                      |
| Manufacturer name               | Manufacturer name                                                                                                                                                                                                                                                                                                                                                  |
| Asset tracking identifier       | Asset ID                                                                                                                                                                                                                                                                                                                                                           |
| Port ID type                    | Port ID type                                                                                                                                                                                                                                                                                                                                                       |
| Port ID                         | Port ID                                                                                                                                                                                                                                                                                                                                                            |
| Port description                | Port description                                                                                                                                                                                                                                                                                                                                                   |
| Port VLAN ID                    | VLAN ID of a port                                                                                                                                                                                                                                                                                                                                                  |
| Port and protocol VLAN ID       | Port and protocol VLAN ID                                                                                                                                                                                                                                                                                                                                          |
| PPVID Supported                 | Whether port and protocol VLAN is supported                                                                                                                                                                                                                                                                                                                        |
| PPVID Enabled                   | Whether port and protocol VLAN is enabled                                                                                                                                                                                                                                                                                                                          |
| VLAN name of VLAN 1             | VLAN 1 name                                                                                                                                                                                                                                                                                                                                                        |
| Protocol Identity               | Protocol ID                                                                                                                                                                                                                                                                                                                                                        |
| Auto-negotiation supported      | Whether auto-negotiation is supported                                                                                                                                                                                                                                                                                                                              |
| Auto-negotiation enabled        | Whether auto-negotiation is enabled                                                                                                                                                                                                                                                                                                                                |
| PMD auto-negotiation advertised | Port auto-negotiation advertisement capability                                                                                                                                                                                                                                                                                                                     |
| Operational MAU type            | Rate and duplex status of port auto-negotiation                                                                                                                                                                                                                                                                                                                    |
| PoE support                     | Whether POE is supported                                                                                                                                                                                                                                                                                                                                           |
| Link aggregation supported      | Whether link aggregation is supported                                                                                                                                                                                                                                                                                                                              |
| Link aggregation enabled        | Whether link aggregation is enabled                                                                                                                                                                                                                                                                                                                                |
| Aggregation port ID             | ID of link aggregation port                                                                                                                                                                                                                                                                                                                                        |
| Maximum frame Size              | Maximum frame length supported by a port                                                                                                                                                                                                                                                                                                                           |
| Power-via-MDI device type       | Device type, including:<br>● PSE<br>● PD                                                                                                                                                                                                                                                                                                                           |
| Power-via-MDI power source      | Power type                                                                                                                                                                                                                                                                                                                                                         |
| Power-via-MDI power priority    | Power supply priority                                                                                                                                                                                                                                                                                                                                              |
| Power-via-MDI power value       | Power value of a port where power is supplied                                                                                                                                                                                                                                                                                                                      |

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 9.26 show lldp network-policy profile

Use this command to display the information about an LLDP network policy.

**show lldp network-policy** { **profile** [ *profile-num* ] | **interface** *interface-name* }

| Parameter          | Parameter             | Description                                          |
|--------------------|-----------------------|------------------------------------------------------|
| <b>Description</b> | <i>profile-num</i>    | ID of a network policy, in the range from 1 to 1024. |
|                    | <i>interface-name</i> | Interface name                                       |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** If *profile-num* is specified, the information about the specified network policy is displayed.  
If no parameter is specified, the information about all network policies is displayed.

**Configuration** The following example displays the information about a network policy.

**Examples**

```
Ruijie# show lldp network-policy profile
network-policy information:
-----
Network Policy Profile 1
  voice vlan 2 cos 4 dscp 6
  voice-signaling vlan 2000 cos 4 dscp 6
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 9.27 show lldp statistics

The following example displays LLDP statistics.

**show lldp statistics** [ **global** | **interface** *interface-name* ]

| Parameter | Parameter | Description |
|-----------|-----------|-------------|
|-----------|-----------|-------------|

|                    |                       |                |
|--------------------|-----------------------|----------------|
| <b>Description</b> | <i>interface-name</i> | Interface name |
|--------------------|-----------------------|----------------|

**Defaults** N/A

**Command Mode** Privileged EXEC mode

- Usage Guide**
- **global** parameter: display the global LLDP statistics.
  - **Interface** parameter: display the LLDP statistics of the specified interface.

**Configuration** The following example displays all LLDP statistics.

**Examples**

```
Ruijie# show lldp statistics
lldp statistics global Information:
Neighbor information last changed time : 1hour 52minute 22second
The number of neighbor information inserted : 2
The number of neighbor information deleted : 0
The number of neighbor information dropped : 0
The number of neighbor information age out : 1

-----

Lldp statistics information of port [GigabitEthernet 0/1]
-----

The number of lldp frames transmitted : 26
The number of frames discarded : 0
The number of error frames : 0
The number of lldp frames received : 12
The number of TLVs discarded : 0
The number of TLVs unrecognized : 0
The number of neighbor information aged out : 0
```

**show lldp statistics** command output description:

| Field                                       | Description                                                   |
|---------------------------------------------|---------------------------------------------------------------|
| Neighbor information last change time       | Time the neighbor information is latest updated               |
| The number of neighbor information inserted | Number of times of adding neighbor information                |
| The number of neighbor information deleted  | Number of times of removing neighbor information              |
| The number of neighbor information dropped  | Number of times of dropping neighbor information              |
| The number of neighbor information aged out | Number of the neighbor information entries that have aged out |



|                                             |                                                               |
|---------------------------------------------|---------------------------------------------------------------|
| The number of lldp frames transmitted       | Total number of the LLDPDUs transmitted                       |
| The number of frames discarded              | Total number of the LLDPDUs discarded                         |
| The number of error frames                  | Total number of the LLDP error frames received                |
| The number of lldp frames received          | Total number of the LLDPDUs received                          |
| The number of TLVs discarded                | Total number of the LLDP TLVs dropped                         |
| The number of TLVs unrecognized             | Total number of the LLDP TLVs that cannot be recognized       |
| The number of neighbor information aged out | Number of the neighbor information entries that have aged out |

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 9.28 show lldp status

Use this command to display LLDP status information.

**show lldp status** [ **interface** *interface-name* ]

| Parameter          | Parameter             | Description    |
|--------------------|-----------------------|----------------|
| <b>Description</b> | <i>interface-name</i> | Interface name |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** **interface** parameter: display the LLDP status information of the specified interface.

**Configuration Examples** The following example displays LLDP status information of all ports.

```
Ruijie# show lldp status
Global status of LLDP      : Enable
Neighbor information last changed time : 1hour 52minute 22second
Transmit interval        : 30s
Hold multiplier          : 4
Reinit delay             : 2s
Transmit delay           : 2s
Notification interval    : 5s
Fast start counts        : 3
-----
```

```

Port [GigabitEthernet 0/1]
-----
Port status of LLDP      : Enable
Port state              : UP
Port encapsulation      : Ethernet II
Operational mode        : RxAndTx
Notification enable     : NO
Error detect enable     : YES
Number of neighbors     : 1
Number of MED neighbors : 0
    
```

**show lldp status** command output description:

| Field                                  | Description                                     |
|----------------------------------------|-------------------------------------------------|
| Global status of LLDP                  | Whether LLDP is globally enabled                |
| Neighbor information last changed time | Time the neighbor information is latest updated |
| Transmit interval                      | LLDPDU transmit interval                        |
| Hold multiplier                        | TTL multiplier                                  |
| Reinit delay                           | Port re-initialization delay                    |
| Transmit delay                         | LLDPDU transmit delay                           |
| Notification interval                  | Interval for sending LLDP Traps                 |
| Fast start counts                      | The number of fast sent LLDPDUs                 |
| Port status of LLDP                    | Whether LLDP is enabled on the port             |
| Port state                             | Link status of port: UP or DOWN                 |
| Port encapsulation                     | LLDPDU encapsulation format                     |
| Operational mode                       | Operating mode of LLDP                          |
| Notification enable                    | Whether LLDP Trap is enabled on the port        |
| Error detect enable                    | Whether error detection is enabled on the port  |
| Number of neighbors                    | Number of neighbors                             |
| Number of MED neighbors                | Number of MED neighbors                         |

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 9.29 show lldp tlv-config

Use this command to display the advertisable TLV configuration of a port.

**show lldp tlv-config** [ **interface** *interface-name* ]

| Parameter | Parameter | Description |
|-----------|-----------|-------------|
|-----------|-----------|-------------|

|                    |                       |                |
|--------------------|-----------------------|----------------|
| <b>Description</b> | <i>interface-name</i> | Interface name |
|--------------------|-----------------------|----------------|

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** **Interface** parameter: display the LLDP TLV configuration of the specified interface.

**Configuration Examples** The following example displays TLV information of port 1.

```
Ruijie# show lldp tlv-config interface GigabitEthernet 0/1
LLDP tlv-config of port [GigabitEthernet 0/1]
-----
      NAME      STATUS DEFAULT
-----
Basic optional TLV:
Port Description TLV      YES YES
System Name TLV          YES YES
System Description TLV   YES YES
System Capabilities TLV  YES YES
Management Address TLV   YES YES

IEEE 802.1 extend TLV:
Port VLAN ID TLV         YES YES
Port And Protocol VLAN ID TLV YES YES
VLAN Name TLV           YES YES

IEEE 802.3 extend TLV:
MAC-Physic TLV          YES YES
Power via MDI TLV       YES YES
Link Aggregation TLV    YES YES
Maximum Frame Size TLV  YES YES

LLDP-MED extend TLV:
Capabilities TLV         YES YES
Network Policy TLV      YES YES
Location Identification TLV NO NO
Extended Power via MDI TLV YES YES
Inventory TLV           YES YES
```

|                         |                |                    |
|-------------------------|----------------|--------------------|
| <b>Related Commands</b> | <b>Command</b> | <b>Description</b> |
|                         | N/A            | N/A                |

**Platform** N/A

**Description**

## 9.30 { voice | voice-signaling } vlan

Use this command to configure the LLDP network policy. Use the **no** form of this command to delete the policy.

```
{ voice | voice-signaling } vlan { { vlan-id [ cos cvalue | dscp dvalue ] } | { dot1p [ cos cvalue | dscp dvalue ] } | none | untagged }
```

```
no { voice | voice-signaling } vlan
```

| Parameter   | Parameter              | Description                                                                                                           |
|-------------|------------------------|-----------------------------------------------------------------------------------------------------------------------|
| Description | <b>voice</b>           | Voice application                                                                                                     |
|             | <b>voice-signaling</b> | Voice-signaling application                                                                                           |
|             | <i>vlan-id</i>         | (Optional) VLAN ID of voice flow. The value ranges from 1 to 4094.                                                    |
|             | <b>cos</b>             | (Optional) Class of service                                                                                           |
|             | <i>cvalue</i>          | (Optional) CoS of the configured voice flow. The value ranges from 0 to 7, and the default value is 5.                |
|             | <b>dscp</b>            | (Optional) Differentiated services code point                                                                         |
|             | <i>dvalue</i>          | (Optional) DSCP value of the configured voice flow. The value ranges from 0 to 63. The default value is 46.           |
|             | <b>dot1p</b>           | (Optional) 802.1p priority tagging. The tag frame includes user_priority and vlan id is 0.                            |
|             | <b>none</b>            | (Optional) The network policy is not advertised. VoIP determines the network policy based on its configuration.       |
|             | <b>untagged</b>        | (Optional) The untag frame is sent in the voice vlan in VoIP. In this case, the value of vlan id and cos are ignored. |

**Defaults** N/A

**Command** LLDP network policy configuration mode

**Mode**

**Usage Guide** In the LLDP network policy configuration mode, configure the LLDP network policy.

**Configuration Examples** The following example configures the LLDP network policy (profile-num is 1).

```
Ruijie#config
Ruijie(config)#lldp network-policy profile 1
Ruijie(config-lldp-network-policy)# voice vlan untagged
Ruijie(config-lldp-network-policy)# voice-signaling vlan 3 cos 4
Ruijie(config-lldp-network-policy)# voice-signaling vlan 3 dscp 6
```

---

| Related  | Command                                                        | Description                       |
|----------|----------------------------------------------------------------|-----------------------------------|
| Commands | <b>show lldp network-policy profile</b> [ <i>profile-num</i> ] | Displays the LLDP network policy. |

**Platform** N/A

**Description**

## 10 QinQ Commands

### 10.1 dot1q-tunnel cos inner-cos-value remark-cos outer-cos-value

Use this command to map the priority from the outer tag to the inner tag for the packets on the interface. Use the **no** form of this command to restore the default setting.

**dot1q-tunnel cos inner-cos-value remark-cos outer-cos-value**

**no dot1q-tunnel cos inner-cos-value remark-cos outer-cos-value**

**default dot1q-Tunnel cos *inner-cos-value* remark-cos *outer-cos-value***

| Parameter   | Parameter              | Description                                                   |
|-------------|------------------------|---------------------------------------------------------------|
| Description | <i>inner-cos-value</i> | Indicates the CoS value of the inner tag.                     |
|             | <i>outer-cos-value</i> | Indicates the CoS value of the outer tag.                     |
|             | <b>no</b>              | Cancels the priority mapping of the packets on the interface. |

**Defaults** The policy list is null by default.

**Command Mode** Interface configuration mode.

**Usage Guide** If the QoS policy based on the COS value is set for the service provider's network to which a user network connects, the COS value of the outer tag can be set to different values based on the data packet importance. In this case, important services can be preferentially processed and transmitted.

**Configuration Examples** The following example configures the priority mapping from the outer tag to the inner tag.

```
ruijie# configure
ruijie(config)# interface gigabitEthernet 0/2
ruijie(config-if)# dot1q-tunnel cos 3 remark-cos 5
ruijie(config-if)# end
```

| Related Commands | Command                                | Description |
|------------------|----------------------------------------|-------------|
|                  | <b>show interface intf-name remark</b> | N/A         |

**Platform Description** N/A

### 10.2 frame-tag tpid

Use this command to set the packet TPID compatible with the manufacturer TPID. Use the **no** or **default** form of this command to restore the default setting.

**frame-tag tpid** *tpid*  
**no frame-tag tpid**  
**default frame-tag tpid**

| Parameter Description | Parameter | Description  |
|-----------------------|-----------|--------------|
|                       | tpid      | Packet TPID. |

**Defaults** The default is 0x8100.

**Command Mode** Interface configuration mode.

**Usage Guide** If the TPID value of the connected third-party device is not 0x8100 (default value) defined in IEEE802.1Q, the TPID value on the egress used to connect to the third-party device is the TPID value of the third-party device.

**Configuration Examples** The following example sets the packet TPID compatible with the manufacturer TPID.

```
Ruijie(config)# interface g0/3
Ruijie(config-if)# frame-tag tpid 0x9100
Ruijie(config-if)# end
Ruijie# show frame-tag tpid
Port      tpid
-----  -
Gi0/3     0x9100
```

| Related Commands | Command                    | Description |
|------------------|----------------------------|-------------|
|                  | <b>show frame-tag tpid</b> | N/A         |

**Platform Description** N/A

## 10.3 inner-priority-trust enable

Use this command to copy the priority of the inner tag to the outer tag of the packets on the interface. Use the **no** or **default** form of this command to restore the default setting.

**inner-priority-trust enable**  
**no inner-priority-trust enable**  
**default inner-priority-trust enable**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|-----------------------|-----------|-------------|

|     |     |
|-----|-----|
| N/A | N/A |
|-----|-----|

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode.

**Usage Guide** If the QoS policy is configured based on the COS value of the user's VLAN tag for the service provider's network to which a user network connects, the user's VLAN tag priority can be copied to the outer VLAN tag, so that the user's packets are encapsulated with the outer VLAN tag and have the same priority as the user's VLAN tag. In this case, the user's packets can be preferentially processed and transmitted on the service provider's network.

**Configuration Examples** The following example copies the priority of the inner tag to the outer tag of the packets on the interface.

```
ruijie#configure terminal
ruijie(config)# interface gigabitEthernet 0/2
ruijie(config-if)# inner-priority-trust enable
ruijie(config-if)#end
```

**Related Commands**

| Command                          | Description |
|----------------------------------|-------------|
| <b>show inner-priority-trust</b> | N/A         |

**Platform Description** N/A

## 10.4 I2protocol-tunnel

Use this command to set the dot1q-tunnel port to receive L2 protocol message. Use the **no** or **default** form of this command to disable this function.

**I2protocol-tunnel { stp | gvrp }**

**no I2protocol-tunnel { stp | gvrp }**

**default I2protocol-tunnel { stp | gvrp }**

**Parameter Description**

| Parameter   | Description            |
|-------------|------------------------|
| <b>stp</b>  | Receives stp message.  |
| <b>gvrp</b> | Receives gvrp message. |

**Defaults** N/A

**Command** Global configuration mode.



**Mode**

**Usage Guide** If the STP and GVRP packets need to be transparently transmitted, this function must be enabled in global configuration mode.

**Configuration** The following example enables the function of receiving L2 protocol gvrp and stp.

**Examples**

```
Ruijie#configure
Ruijie(config)# l2protocol-tunnel stp
Ruijie(config)# l2protocol-tunnel gvrp
Ruijie(config)#end
```

**Related Commands**

| Command                                      | Description |
|----------------------------------------------|-------------|
| <b>show l2protocol-tunnel { gvrp   stp }</b> | N/A         |

**Platform** N/A

**Description**

## 10.5 l2protocol-tunnel enable

Use this command to enable transparent transmission of L2 protocol message. Use the **no** or **default** form of this command to restore the default setting.

**l2protocol-tunnel { stp | gvrp } enable**

**no l2protocol-tunnel { stp | gvrp } enable**


**Parameter Description**

| Parameter   | Description                           |
|-------------|---------------------------------------|
| <b>stp</b>  | Transparently transmits stp message.  |
| <b>gvrp</b> | Transparently transmits gvrp message. |

**Defaults** It is disabled by default.

**Command** Interface configuration mode.

**Mode****Usage Guide**

 If this function is enabled in global and interfa

ce  
 configu  
 ration  
 modes  
 , STP  
 packet  
 s can  
 be  
 transp  
 arently  
 transm  
 itted  
 after  
 the  
 bridge-  
 frame  
 forwar  
 ding  
 protoc  
 ol bpdu  
 comm  
 and is  
 enable  
 d in  
 global  
 configu  
 ration  
 mode.

**Configuration Examples** Here is an example of enabling transparent transmission of L2 protocol message :

```
Ruijie#configure
Ruijie(config)# interface fa 0/1
Ruijie(config-if)# l2protocol-tunnel gvrp enable
Ruijie(config-if)#end
```

**Related Commands**

| Command                                            | Description |
|----------------------------------------------------|-------------|
| <code>show l2protocol-tunnel { gvrp   stp }</code> | N/A         |

**Platform Description** N/A

## 10.6 I2protocol-tunnel tunnel-dmac

Use this command to set the MAC address for the transparent transmission of the corresponding protocol messages. Use the **no** or **default** form of this command to restore the default setting.

**I2protocol-tunnel** { **stp|gvrp** } **tunnel-dmac** *mac-address*

**no I2protocol-tunnel** { **stp|gvrp** } **tunnel-dmac** *mac-address*

**default I2protocol-tunnel** { **stp | gvrp** } **tunnel-dmac** *mac-address*

| Parameter Description | Parameter   | Description                                     |
|-----------------------|-------------|-------------------------------------------------|
|                       | <b>stp</b>  | Sets the STP transparent transmission address.  |
|                       | <b>gvrp</b> | Sets the GVRP transparent transmission address. |

**Defaults** The first three bytes of the address are 01d0f8 and the last three bytes are 000005 for **stp** and 000006 for **gvrp** by default.

**Command Mode** Global configuration mode.

**Usage Guide** N/A

**Configuration Examples** The following example sets the MAC address for the L2-protocol transparent transmission function:

```
ruijie# configure terminal
Ruijie(config-if)# I2protocol-tunnel gvrp tunnel-dmac 011AA9 000005
Ruijie(config-if)#end
```

| Related Commands | Command                                             | Description |
|------------------|-----------------------------------------------------|-------------|
|                  | <b>show I2protocol-tunnel</b> { <b>gvrp   stp</b> } | N/A         |

**Platform Description** N/A

## 10.7 show dot1q-tunnel

Use this command to display whether dot1q-tunnel of interface is enabled or not.

**show dot1q-tunnel** [ **interfaces** *intf-id* ]

| Parameter Description | Parameter      | Description              |
|-----------------------|----------------|--------------------------|
|                       | <i>intf-id</i> | The specified interface. |

**Defaults** N/A

**Command** Any mode

**Mode**

**Usage Guide** N/A

**Configuration** The following example displays whether dot1q-tunnel of interface is enabled or not.

**Examples**

```
Ruijie# show dot1q-tunnel
Ports   Dot1q-tunnel
-----  -
Gi0/1   Enable
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform**

**Description**

## 10.8 show frame-tag tpid

Use this command to display the configuration of interface tpid.

**show frame-tag tpid [ interfaces *intf-id* ]**

**Parameter  
Description**

| Parameter      | Description              |
|----------------|--------------------------|
| <i>intf-id</i> | Specifies the interface. |

**Defaults** N/A

**Command** Any mode

**Mode**

**Usage Guide** N/A

**Configuration** The following example displays the configuration of interface tpid.

**Examples**

```
Ruijie# show frame-tag tpid
Ports   tpid
-----  -
Gi0/1   0x9100
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
|---------|-------------|

|     |     |
|-----|-----|
| N/A | N/A |
|-----|-----|

**Platform** N/A

**Description**

## 10.9 show inner-priority-trust

Use this command to display whether the priority copy function is enabled.

**show inner-priority-trust**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command** Any mode

**Mode**

**Usage Guide** N/A

**Configuration** The following example displays whether the priority copy function is enabled.

**Examples**

```
Ruijie# show inner-priority-trust
Port    inner-priority-trust
-----  -----
Gi0/1   enable
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform**

**Description**

## 10.10 show interfaces dot1q-tunnel

Use this command to display the VLAN configuration on the dot1q-tunnel port.

**show interfaces [ *intf-id* ] dot1q-tunnel**

| Parameter Description | Parameter | Description              |
|-----------------------|-----------|--------------------------|
|                       | intf-id   | Specifies the interface. |

**Defaults** N/A

**Command Mode** Any mode

**Usage Guide** N/A

**Configuration** The following example displays the VLAN configuration on the dot1q-tunnel port.

**Examples**

```
Ruijie# show interfaces dot1q-tunnel
Interface: Gi0/3
Native vlan: 10
Allowed vlan list: 4-6, 10, 30-60
Tagged vlan list: 4, 6, 30-60
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A

## 10.11 show interfaces remark

Use this command to display the priority mapping configuration.

**show interfaces [ *intf-id* ] remark**

**Parameter Description**

| Parameter      | Description            |
|----------------|------------------------|
| <i>intf-id</i> | specifies an interface |

**Defaults** N/A

**Command Mode** Any mode

**Usage Guide** N/A

**Configuration** The following example displays the priority mapping configuration.

**Examples**

```
Ruijie# show interfaces remark
Ports          Type          From value  To value
-----
Gi0/1          Cos-To-Cos    3           5
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 10.12 show l2protocol-tunnel

Use this command to display transparent transmission configuration of L2 protocol.

**show l2protocol-tunnel { gvrp | stp }**

| Parameter Description | Parameter                                                          | Description                                                         |
|-----------------------|--------------------------------------------------------------------|---------------------------------------------------------------------|
|                       | <b>gvrp</b>                                                        | Displays configuration of transparently transmitting gvrp protocol. |
| <b>stp</b>            | Displays configuration of transparently transmitting stp protocol. |                                                                     |

**Defaults** N/A

**Command Mode** Any mode

**Usage Guide** N/A

**Configuration Examples** The following example displays transparent transmission configuration of L2 protocol.

```
Ruijie# show l2protocol-tunnel stp
L2protocol-tunnel: Stp Enable
Ruijie# show l2protocol-tunnel gvrp
L2protocol-tunnel: gvrp Disable
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 10.13 show registration-table

Use this command to display vid add policy list of prorocol-based dot1q-tunnel port.

**show registration-table [ interfaces *intf-id* ]**

| <b>Parameter Description</b>  | <table border="1"> <thead> <tr> <th>Parameter</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>intf-id</td> <td>Specifies the interface.</td> </tr> </tbody> </table>                                                                | Parameter | Description | intf-id | Specifies the interface. |
|-------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------|-------------|---------|--------------------------|
| Parameter                     | Description                                                                                                                                                                                                                                   |           |             |         |                          |
| intf-id                       | Specifies the interface.                                                                                                                                                                                                                      |           |             |         |                          |
| <b>Defaults</b>               | N/A                                                                                                                                                                                                                                           |           |             |         |                          |
| <b>Command Mode</b>           | Any mode                                                                                                                                                                                                                                      |           |             |         |                          |
| <b>Usage Guide</b>            | N/A                                                                                                                                                                                                                                           |           |             |         |                          |
| <b>Configuration Examples</b> | <p>The following example displays vid add policy list of protocol-based dot1q-tunnel port.</p> <pre>Ruijie# show registration-table Ports      Type      Outer-VID  Inner-VID-list ----- Gi0/7      Add-outer  5          7-10,15,20-30</pre> |           |             |         |                          |
| <b>Related Commands</b>       | <table border="1"> <thead> <tr> <th>Command</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>N/A</td> <td>N/A</td> </tr> </tbody> </table>                                                                                           | Command   | Description | N/A     | N/A                      |
| Command                       | Description                                                                                                                                                                                                                                   |           |             |         |                          |
| N/A                           | N/A                                                                                                                                                                                                                                           |           |             |         |                          |
| <b>Platform Description</b>   | N/A                                                                                                                                                                                                                                           |           |             |         |                          |

## 10.14 show traffic-redirect

Use this command to display flow-based vid change or add policy list.

**show traffic-redirect [ interfaces *intf-id* ]**

| <b>Parameter Description</b>  | <table border="1"> <thead> <tr> <th>Parameter</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>intf-id</td> <td>Specifies the interface.</td> </tr> </tbody> </table> | Parameter | Description | intf-id | Specifies the interface. |
|-------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------|-------------|---------|--------------------------|
| Parameter                     | Description                                                                                                                                                                    |           |             |         |                          |
| intf-id                       | Specifies the interface.                                                                                                                                                       |           |             |         |                          |
| <b>Defaults</b>               | N/A                                                                                                                                                                            |           |             |         |                          |
| <b>Command Mode</b>           | Any mode                                                                                                                                                                       |           |             |         |                          |
| <b>Usage Guide</b>            | N/A                                                                                                                                                                            |           |             |         |                          |
| <b>Configuration Examples</b> | <p>The following example displays flow-based vid change or add policy list.</p> <pre>Ruijie# show traffic-redirect Ports      Type      VID      Match-filter</pre>            |           |             |         |                          |



```

-----
Gi0/3      Mod-outer  23   11
Gi0/3      Mod-outer   3    4
Gi0/3      Mod-outer   6    5
Gi0/3      Mod-inner   8   inner-to-8
Gi0/6      Mod-inner   9   100
Gi0/7      Nested-vid 13  nest-13

```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A**Description**

## 10.15 show translation-table

Use this command to display vid modify policy list of protocol-based access, trunk, hybrid port.

**show translation-table** [ interfaces *intf-id* ]

**Parameter  
Description**

| Parameter | Description              |
|-----------|--------------------------|
| intf-id   | Specifies the interface. |

**Defaults** N/A**Command  
Mode** Any mode**Usage Guide** N/A**Configuration** The following example displays vid modify policy list of protocol-based access, trunk, hybrid port.**Examples**

```

Ruijie# show translation-table
Ports      Type      Relay-VID  Old-local  Local\inner-VID-list
-----
Gi0/7      Inner-CVID 8          N/A        10-20
Gi0/7      Local-SVID 1001       N/A        30-60
Gi0/7      In+Out    8          20         50

```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 10.16 switchport dot1q-tunnel allowed vlan

Use this command to configure the allowed VLAN of dot1q-tunnel. Use the **no** or **default** form of this command to restore the default setting.

**switchport dot1q-tunnel allowed vlan** { [ **add** ] **tagged** *vlist* | [ **add** ] **untagged** *vlist* | **remove** *vlist* }  
**no switchport dot1q-tunnel allowed vlan**  
**default switchport dot1q-tunnel allowed vlan**

| Parameter Description | Parameter       | Description          |
|-----------------------|-----------------|----------------------|
|                       | <b>add</b>      | Add allowed VLAN.    |
|                       | <b>tagged</b>   | Tag-carried.         |
|                       | <b>untagged</b> | Not tag-carried.     |
|                       | <i>v_list</i>   | vlan id list.        |
|                       | <b>no</b>       | Remove the settings. |

**Defaults** The default is **untagged** 1.

**Command Mode** Interface configuration mode.

**Usage Guide** N/A

**Configuration Examples** The following example specifies vlan 3-6 of dot1q-tunnel port as allowed VLAN and outputting the frame with tag.

```
Ruijie(config)#interface gigabitEthernet 0/1
Ruijie(config-if)#switchport dot1q-tunnel allowed vlan tagged 3-6
Ruijie(config)#end
```

| Related Commands | Command                            | Description |
|------------------|------------------------------------|-------------|
|                  | <b>show interface dot1q-tunnel</b> | N/A         |

**Platform** N/A  
**Description**

## 10.17 switchport dot1q-tunnel native vlan

Use this command to configure the default vlan id of dot1q-tunnel. Use the **no** or **default** form of this command to restore the default setting.

**switchport dot1q-tunnel native vlan *vid***  
**no switchport dot1q-tunnel native vlan**  
**default switchport dot1q-tunnel native vlan**

| Parameter Description | Parameter | Description                 |
|-----------------------|-----------|-----------------------------|
|                       | vid       | Configures default vlan id. |

**Defaults** The default is VLAN 1.

**Command Mode** Interface configuration mode.

**Usage Guide** N/A

**Configuration Examples** The following example specifies default VLAN of dot1q-tunnel port as 8.

```
Ruijie(config)#interface gigabitEthernet 0/1
Ruijie(config-if)#switchport dot1q-tunnel native vlan 8
Ruijie(config)#end
```

| Related Commands | Command                            | Description |
|------------------|------------------------------------|-------------|
|                  | <b>show interface dot1q-tunnel</b> | N/A         |

**Platform Description** N/A

## 10.18 switchport mode dot1q-tunnel

Use this command to configure the interface as the dot1q-tunnel interface. Use the **no** or **default** form of this command to restore the default setting.

**switchport mode dot1q-tunnel**  
**no switchport mode**  
**default switchport mode**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | -         | -           |

**Defaults** The interface is not a tunnel port by default.

**Command Mode** Interface configuration mode.

**Usage Guide** N/A

**Configuration** The following example configures the interface as the dot1q-tunnel interface.

**Examples**

```
ruijie(config)# interface gigabitEthernet 0/1
ruijie(config-if)# switchport mode dot1q-tunnel
ruijie(config)# end
```

**Related  
Commands**

| Command   | Description |
|-----------|-------------|
| show vlan | N/A         |

**Platform** N/A

**Description**

## 11 ERPS Commands

### 11.1 associate sub-ring

Use this command to associate the ethernet ring with its sub-rings.

**associate sub-ring raps-vlan** *vlan-list*

**no associate sub-ring raps-vlan** *vlan-list*

#### Parameter Description

| Parameter        | Description            |
|------------------|------------------------|
| <i>vlan-list</i> | Sub-rings' R-APS VLAN. |

#### Defaults

By default, Ethernet ring is not associated with its sub-rings.

#### Command

ERPS configuration mode.

#### Mode

#### Usage Guide

1. You need to configure this command on all nodes of the Ethernet ring, so as to transmit its sub-ring's ERPS protocol packets in the Ethernet ring.
2. Configuring the association is mainly to make the sub-ring's protocol packets transmit in the Ethernet ring. Users can also adopt the configuration command provided by the VLAN module to configure elaborately the VLAN and the relation between ports and VLAN, so as to transmit the sub-ring's protocol packets in other Ethernet rings and not leak the packets to the user network.

#### Configuration

The following example associates the Ethernet sub-ring with other Ethernet rings:

#### Examples

```
#Enter the privileged EXEC mode
Ruijie# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.

# Configure the link mode of the Ethernet ring port and the default VLAN.
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if)# switchport mode trunk
Ruijie(config-if)# exit
Ruijie(config)# interface fastEthernet 0/2
Ruijie(config-if)# switchport mode trunk
Ruijie(config-if)# exit

# Enter the erps configuration mode.
Ruijie(config)# erps raps-vlan 4093

#Add the ports that participate in the ERPS protocol computing to the Ethernet ring.
Ruijie(config-erps4093)# ring-port west fastEthernet 0/1 east fastEthernet
```

```

0/2

# Configure the Ethernet subring
Ruijie(config)# erps raps-vlan 100
Ruijie(config)# interface fastEthernet 0/3
Ruijie(config-if)# switchport mode trunk
Ruijie(config-if)# exit
Ruijie(config)# erps raps-vlan 100
Ruijie(config-erps100)# ring-port west fastEthernet 0/3 east virtual-channel
Ruijie(config-if)# exit

# Associate the subring with other Ethernet rings.
Ruijie(config)# erps raps-vlan 4093
Ruijie(config-erps4093)# associate sub-ring raps-vlan 100
    
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description**

N/A

## 11.2 erps enable

Use this command to enable/disable the ERPS function in the global configuration mode.

**erps enable**

**no erps enable**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults**

Disabled

**Command Mode**

Global configuration mode.

**Usage Guide**

The ERPS protocol of the specified ring will begin running truly only after the global ERPS protocol and the ERPS protocol of the specified ring are both enabled.

**Configuration Examples**

The following example enables the ERPS protocol globally:

```

# Enter the privileged EXEC mode
Ruijie# configure terminal
    
```

```
Enter configuration commands, one per line. End with CNTL/Z.
```

```
# Enable the ERPS function globally.
Ruijie(config)# erps enable
```

```
# Enter the ERPS configuration mode
Ruijie(config)# erps raps-vlan 4093
```

```
# Enable the ERPS function for the specified ring.
Ruijie(config-erps4093)# state enable
```

**Related Commands**

| Command             | Description                                                                                                                                  |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------|
| <b>state enable</b> | After entering the ERPS configuration mode of the specified ring, configure this command to enable the ERPS protocol of this specified ring. |

**Platform** N/A  
**Description**

### 11.3 erps monitor link-state by oam

Use this command to configure the method of monitoring the ERPS link state.

**erps monitor link-state by oam vlan *vlan-id***  
**no erps monitor link-state by oam**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** By default, it adopts the directly monitoring the link physical state (up or down) rather than the oam method.

**Command Mode** Global configuration mode.

**Usage Guide** For the link state monitoring, use the method of directly monitoring the link physical state (up or down), also monitor the logic state (unidirectional fault, bidirectional fault or normal) of the link by the OAM. By default, the former is adopted. If the OAM method is used, the inefficient link state monitoring may cause the convergence time longer when the topology changes.

**Configuration Examples** The following example configures the method of monitoring the link state.

```
# Enter the privileged EXEC mode.
Ruijie# configure terminal
```

```
Enter configuration commands, one per line. End with CNTL/Z.

# Configure the method of monitoring the link state.
Ruijie(config)# erps monitor link-state by oam vlan 100
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 11.4 erps raps-vlan

Use this command to configure the R-APS VLAN of Ethernet ring.

```
erps raps-vlan vlan-id
no erps raps-vlan vlan-id
```

**Parameter Description**

| Parameter      | Description   |
|----------------|---------------|
| <i>vlan-id</i> | R-APS VLAN ID |

**Defaults** No R-APS VLAN is configured.

**Command Mode** Global configuration mode.

**Usage Guide** The R-APS VLAN must be the VLAN that is not used on the device. Cannot set the VLAN1 to the R-APS VLAN.  
 The same Ethernet ring of different devices needs the same R-APS VLAN.  
 If you want to transparently transmit the ERPS protocol packets on a device without the ERPS function configured, make sure that only the two ports connected to the Ethernet ring on this device allow the R-APSA VLAN packets corresponding to this ERPS ring passing through. Otherwise, the other VLAN packets may enter the R-APS VLAN through the transparent transmission, causing the shock to the ERPS ring.

**Configuration Examples**

```
# Enter the privileged EXEC mode.
Ruijie# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.

#Configure the R-APS VLAN globally.
Ruijie(config)# erps raps-vlan 4093
```



| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  |         | N/A         |

**Platform** N/A  
**Description**

## 11.5 protected-instance

Use this command to configure the VLAN protected by the Ethernet ring to implement the load balance function.

**protected-instance** *instance-id-list*

**no protected-instance**

| Parameter Description | Parameter | Description             |
|-----------------------|-----------|-------------------------|
|                       |           | <i>instance-id-list</i> |

**Defaults** By default, all VLANs are protected.

**Command Mode** ERPS configuration mode.

**Usage Guide** The protected VLAN consists of the R-APS VLAN of this Ethernet ring and the data VLAN protected by this Ethernet ring.

**Configuration Examples** Suppose that the ERP1 and ERP2 are configured on the switch to implement the load balance. The R-APS VLAN of the ERPS1 is 100, the protected data VLAN is in the range of 1 to 99 and 101-2000, the R-APS VLAN of the ERPS2 is 4093, and the protected data VLAN is in the range of 2001 to 4092 and 4094. Configuration for the load balance is shown as below:

```
# Enter the privileged EXEC mode.
Ruijie# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
```

```
# Configure the VLAN configured by the ERP1.
Ruijie(config)# spanning-tree mst configuration
Ruijie(config-mst)# instance 1 vlan 100, 1-99, 101-2000
Ruijie(config-mst)# exit
Ruijie(config)# erps raps-vlan 100
Ruijie(config-erps100)#protected-instance 1
```

```
# Configure the VLAN configured by the ERP2.
Ruijie(config)# spanning-tree mst configuration
```

```
Ruijie(config-mst)# instance 2 vlan 4093, 2001-4092, 4094
Ruijie(config-mst)# exit
Ruijie(config)# erps raps-vlan 4093
Ruijie(config-erps4093)#protected-instance 2
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 11.6 ring-port

Use this command to configure the ERPS ring.

**ring-port west** { *interface-name1* | **virtual-channel** } **east** { *interface-name2* | **virtual-channel** }  
**no ring-port**

**Parameter Description**

| Parameter              | Description            |
|------------------------|------------------------|
| <i>interface-name1</i> | Name of the West port. |
| <i>interface-name2</i> | Name of the East port. |

**Defaults** No ERPS ring is configured.

**Command Mode** EPRS configuration mode.

- Usage Guide**
- 1) After adding the port to the ERP ring, the trunk attribute of the port is not allowed to be modified any more.
  - 2) If the ring port is configured on the virtual-channel, this ring will be considered as a sub-ring.
  - 3) Ports running the ERPS do not participate in the STP computing. ERPS, RERP and REUP do not share the port.

**Configuration Examples** The following example is for the ERPS ring.

```
# Enter the privileged EXEC mode.
Ruijie# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.

# Configure the link mode of the Ethernet ring port and the default VLAN.
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if)# switchport mode trunk
Ruijie(config-if)# exit
Ruijie(config)# interface fastEthernet 0/2
```

```
Ruijie(config-if)# switchport mode trunk
Ruijie(config-if)# exit
```

```
# Enter the ERPS configuration mode.
Ruijie(config)# erps raps-vlan 4093
```

```
#Add the ports that participate in the ERPS protocol computing to the Ethernet ring.
Ruijie(config-erps4093)# ring-port west fastEthernet 0/1 east fastEthernet
0/2
```

### Related Commands

| Command                                            | Description                                                                                                    |
|----------------------------------------------------|----------------------------------------------------------------------------------------------------------------|
| <b>state enable</b>                                | Enable the ERPS protocol of the specified ring in the ERPS mode of the specified ring.                         |
| <b>sub-ring associate raps-vlan <i>vlan-id</i></b> | Establish the association between the subring and other Ethernet rings in the subring ERPS configuration mode. |

**Platform** N/A

### Description

## 11.7 rpl-port

Use this command to configure the RPL port and RPL owner.

```
rpl-port { west | east } [ rpl-owner ]
no rpl-port
```

### Parameter Description

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** No RPL port and RPL owner are configured.

**Command** EPRS configuration mode.

### Mode

**Usage Guide** Up to one RPL link and one RPL owner node are needed and configurable for each ring.

**Configuration** The following example configures the RPL port and RPL owner.

### Examples

```
# Enter the privileged EXEC mode.
Ruijie# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
```

```
# Configure the link mode of the Ethernet ring port and the default VLAN.
```

```
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if)# switchport mode trunk
Ruijie(config-if)# exit
Ruijie(config)# interface fastEthernet 0/2
Ruijie(config-if)# switchport mode trunk
Ruijie(config-if)# exit
```

```
# Enter the ERPS configuration mode.
Ruijie(config)# erps raps-vlan 4093
```

```
# Add the ports that participate in the ERPS protocol computing to the Ethernet ring.
Ruijie(config-erps4093)# ring-port west fastEthernet 0/1 east fastEthernet
0/2
```

```
# Specify the port where the RPL link is and the RPL owner.
Ruijie(config-erps4093)# rpl-port west rpl-owner
```

#### Related Commands

| Command                                                                                                                                   | Description                                                                                          |
|-------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------|
| <b>ring-port west</b> { <i>interface-name1</i>   <b>virtual-channel</b> } <b>east</b> { <i>interface-name2</i>   <b>virtual-channel</b> } | Configure the specified ERP ring in the ERPS configuration mode of the specified ring.               |
| <b>state enable</b>                                                                                                                       | Enable the ERPS protocol of the specified ring in the ERPS configuration mode of the specified ring. |

**Platform** N/A

**Description**

## 11.8 show erps

Use this command to show the parameters and states of the ERPS.

```
show erps [ { global | raps_vlan vlan-id [ sub-ring ] } ]
```

#### Parameter Description

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode.

**Usage Guide** N/A

**Configuration** The following example shows the use of this command.

**Examples**

```
Ruijie# show erps
ERPS Information
Global Status           : Enabled
Link monitored by      : Not Oam
-----
R-APS VLAN              : 4092
Ring Status            : Enabled
West Port              : Gi 0/5 (Blocking)
East Port              : Gi 0/7 (Forwarding)
RPL Port               : West Port
RPL Port Blocked VLAN  : All
RPL Owner              : Enabled
Holdoff Time           : 0 milliseconds
Guard Time            : 500 milliseconds
WTR Time               : 5 minutes
Current Ring State     : Idle
-----
R-APS VLAN              : 4093
Ring Status            : Enabled
West Port              : Virtual Channel
East Port              : Gi 0/10 (Forwarding)
RPL Port               : None
RPL Port Blocked VLAN  : All
RPL Owner              : Disabled
Holdoff Time           : 0 milliseconds
Guard Time            : 500 milliseconds
WTR Time               : 5 minutes
Current Ring State     : Idle
-----
R-APS VLAN              : 4094
Ring Status            : Enabled
West Port              : Virtual Channel
East Port              : 12 (Forwarding)
RPL Port               : None
RPL Port Blocked VLAN  : All
RPL Owner              : Disabled
Holdoff Time           : 0 milliseconds
Guard Time            : 500 milliseconds
WTR Time               : 5 minutes
Current Ring State     : Idle

Ruijie# show erps raps_vlan 4093 sub-ring
```

```

R-APS VLAN: 4093
Sub-Ring R-APS VLANs   TC Propagation State
-----
100                     Enable
200                     Enable

```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 11.9 state enable

Use this command to enable/disable the specified R-APS ring.

**state enable**

**no state enable**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** Disabled

**Command Mode** EPRS configuration mode.

**Usage Guide** Only after the global ERPS protocol and the ERPS protocol of the specified ring are both enabled, the ERPS protocol of the specified ring will begin truly running.

**Configuration Examples** The following example enables the specified ERPS ring:

```

#Enter the privileged EXEC mode.
Ruijie# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.

#Configure the link mode of the Ethernet ring port and the default VLAN.
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if)# switchport mode trunk
Ruijie(config-if)# exit
Ruijie(config)# interface fastEthernet 0/2
Ruijie(config-if)# switchport mode trunk
Ruijie(config-if)# exit

```

```
# Enter the ERPS configuration mode.
Ruijie(config)# erps raps-vlan 4093

# Add the ports that participate in the ERPS protocol computing to the Ethernet ring.
Ruijie(config-erps4093)# ring-port west fastEthernet 0/1 east fastEthernet
0/2

# Enable the ERPS function for the specified ring.
Ruijie(config-erps4093)#state enable

# Enable the global ERPS function.
Ruijie(config-erps4093)# exit
Ruijie(config)# erps enable
```

#### Related Commands

| Command            | Description                      |
|--------------------|----------------------------------|
| <b>erps enable</b> | Enable the global ERPS protocol. |

**Platform** N/A  
**Description**

## 11.10 sub-ring tc-propagation

Use this command to specify the devices corresponding to the crossing node on the crossing ring whether to send out the notification when the subring topology changes.

**sub-ring tc\_propagation enable**  
**no sub-ring tc\_propagation**

#### Parameter Description

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** By default, the topology changing notification is not sent.

**Command Mode** EPRS configuration mode.

**Usage Guide** This command is just needed to be configured on the crossing nodes on the crossing ring.

**Configuration Examples** The following example is configured when the subring topology changes.

```
# Enter the privileged EXEC mode.
Ruijie# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
```

```

#Configure the link mode of the Ethernet ring port and the default VLAN.
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if)# switchport mode trunk
Ruijie(config-if)# exit
Ruijie(config)# interface fastEthernet 0/2
Ruijie(config-if)# switchport mode trunk
Ruijie(config-if)# exit

# Enter the ERPS configuration mode.
Ruijie(config)# erps raps-vlan 4093

# Add the ports that participate in the ERPS protocol computing to the Ethernet ring.
Ruijie(config-erps4093)# ring-port west fastEthernet 0/1 east fastEthernet
0/2

#Configure the Ethernet subring.
Ruijie(config)# erps raps-vlan 100
Ruijie(config)# interface fastEthernet 0/3
Ruijie(config-if)# switchport mode trunk
Ruijie(config-if)# exit
Ruijie(config)# erps raps-vlan 100
Ruijie(config-erps100)# ring-port west fastEthernet 0/3 east virtual-channel

# Associate the subring with other Ethernet rings.
Ruijie(config-erps100)# sub-ring associate raps-vlan 4093

# Enable the topology changing notification for the subring.
Ruijie(config-erps100)# sub-ring tc-propagation enable

```

#### Related Commands

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

#### Platform Description

N/A

## 11.11 timer

Use this command to configure the timer of the ERPS protocol.

```

timer { holdoff-time interval1 | guard-time interval2 | wtr-time interval3 }
no timer { holdoff-time | guard-time | wtr-time }

```

#### Parameter Description

| Parameter | Description |
|-----------|-------------|
|           |             |



|           |                                                                              |
|-----------|------------------------------------------------------------------------------|
| interval1 | Value of the Holdoff timer in 100 milliseconds, the valid range is 0 to 100. |
| Interval2 | Value of the Guard timer in 10 milliseconds, the valid range is 1 to 200.    |
| Interval3 | Value of the WTR in minute, the valid range is 5 to 12.                      |

**Defaults** Holdoff timer: 0.  
Guard timer: 500 milliseconds.  
WTP timer: 5 seconds.

**Command Mode** EPRS configuration mode.

**Usage Guide** **Holdoff timer:** This timer is used to avoid the ERPS from topology switching continuously due to the link intermittent fault. With this timer configured, if the link fault is detected, the ERPS does not perform the topology switching immediately until the timer times out and the link fault is verified.  
**Guard timer:** This timer is used to prevent the device receiving the timed-out R-APS messages. When the device detects the recovery from failure of the link, it sends out the message of link recovery and starts up the Guard timer. Before the Guard times out, except for the flush packets indicating the subring topology change, other packets are discarded directly without being handled.  
**WTR (Wait-to-restore) timer:** This timer is only valid for the RPL owner device. It is mainly used to prevent the RPL owner making the erroneous judgment to the ring network status. When the RPL detects the fault recovery, it does not perform the topology switching immediately until the WTR times out and the Ethernet ring indeed recovers from the fault. If the ring network fault is checked again before the WTR times out, then the WTR timer will be canceled and topology switching will be not executed any longer.

**Configuration Examples** The following example configures the timer of the ERPS protocol.

```
# Enter the privileged EXEC mode.
Ruijie# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
# Enter the ERPS configuration mode.
Ruijie(config)# erps raps-vlan 4093

# Configure the protocol timer.
Ruijie(config-erps4093)# timer holdoff-time 10
Ruijie(config-erps4093)# timer guard-time 10
Ruijie(config-erps4093)# timer wtr-time 10
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A





## IP Address & Application Commands

---

1. IP Address/Service Commands
2. ARP Commands
3. IPv6 Commands
4. DHCP Commands
5. DHCPv6 Commands
6. DNS Commands
7. FTP Server Commands
8. FTP Client Commands
9. TFTP Server Commands
10. TCP Commands
11. IPv4/IPv6 REF Commands

# 1 IP Address/Service Commands

## 1.1 gateway

Use this command to set the gateway address for the management port. Use the **no** form of this command to remove the setting.

**gateway** *address*

**no gateway**

| Parameter   | Parameter      | Description                                      |
|-------------|----------------|--------------------------------------------------|
| Description | <i>address</i> | Sets the gateway address for the management port |

**Defaults** N/A

**Command Mode** Interface configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example sets the gateway address for the management port to 1.1.1.1.

```
Ruijie(config)# interface mgmt 0
Ruijie(config-if-Mgmt 0)# gateway 1.1.1.1
Ruijie(config-if-Mgmt 0)#
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 1.2 ip-address

Use this command to configure the IP address of an interface. Use the **no** form of this command to restore the default setting.

**ip address** *ip-address network-mask* [ **secondary** ]

**no ip address** [ *ip-address network-mask* [ **secondary** ]

| Parameter   | Parameter         | Description                                                                                  |
|-------------|-------------------|----------------------------------------------------------------------------------------------|
| Description | <i>ip-address</i> | 32-bit IP address, with 8 bits in one group in decimal format. Groups are separated by dots. |

|                     |                                                                                                                                                      |
|---------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>network-mask</i> | 32-bit network mask. 1 stands for the mask bit, 0 stands for the host bit, with 8 bits in one group in decimal format. Groups are separated by dots. |
| <b>secondary</b>    | Secondary IP address                                                                                                                                 |

**Defaults** No IP address is configured for the interface by default.

**Command Mode** Interface configuration mode

**Usage Guide** The equipment cannot receive and send IP packets before it is configured with an IP address. After an IP address is configured for the interface, the interface is allowed to run the Internet Protocol (IP).

The network mask is also a 32-bit value that identifies which bits among the IP address is the network portion. Among the network mask, the IP address bits that correspond to value “1” are the network address. The IP address bits that correspond to value “0” are the host address. For example, the network mask of Class A IP address is “255.0.0.0”. You can divide a network into different subnets using the network mask. Subnet division means to use the bits in the host address part as the network address part, so as to reduce the capacity of a host and increase the number of networks. In this case, the network mask is called subnet mask.

The RGOS software supports multiple IP address for an interface, in which one is the primary IP address and others are the secondary IP addresses. Theoretically, there is no limit for the number of secondary IP addresses. The primary IP address must be configured before the secondary IP addresses. The secondary IP address and the primary IP address must belong to the same network or different networks. Secondary IP addresses are often used in network construction. Typically, you can try to use secondary IP addresses in the following situations:

A network hasn't enough host addresses. At present, the LAN should be a class C network where 254 hosts can be configured. However, when there are more than 254 hosts in the LAN, another class C network address is necessary since one class C network is not enough. Therefore, the device should be connected to two networks and multiple IP addresses should be configured.

Many older networks are layer 2-based bridge networks that have not been divided into different subnets. Use of secondary IP addresses will make it very easy to upgrade this network to an IP layer-based routing network. The equipment configures an IP address for each subnet.

Two subnets of a network are separated by another network. You can create a subnet for the separated network, and connect the separated subnet by configuring a secondary IP address. One subnet cannot appear on two or more interfaces of a device.

**Configuration Examples** The following example configures the primary IP address and the network mask as 10.10.10.1 and 255.255.255.0 respectively .

```
Ruijie(config)# interface gigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)# ip address 10.10.10.1 255.255.255.0
```

| Related Commands | Command                  | Description                                     |
|------------------|--------------------------|-------------------------------------------------|
|                  | <b>show ip interface</b> | Displays detailed information of the interface. |

**Platform** N/A  
**Description**

### 1.3 ip address-pool local

Use this command to enable the IP address pool function. Use the **no** form of this command to disable this function.

**ip address-pool local**  
**no ip address-pool local**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** This function is enabled by default.

**Command Mode** Global configuration mode

**Usage Guide** This function is enabled by default. PPP users can allocate an IP address to the peer end from the IP address pool configured. If you can use the **no ip address-pool local** command to disable this function and clear all configured IP address pools.

**Configuration Examples** The following example enables the IP address pool function.

```
Ruijie(config)# ip address-pool local
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

### 1.4 ip broadcast-addresss

Use this command to define a broadcast address for an interface in the interface configuration mode. Use the **no** form of this command to restore the default setting.

**ip broadcast-addresss** *ip-address*  
**no ip broadcast-addresss**

|                               |                                                                                                                                                                                                                                                                               |                                 |
|-------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------|
| <b>Parameter</b>              | <b>Parameter</b>                                                                                                                                                                                                                                                              | <b>Description</b>              |
| <b>Description</b>            | <i>ip-address</i>                                                                                                                                                                                                                                                             | Broadcast address of IP network |
| <b>Defaults</b>               | The default IP broadcast address is 255.255.255.255.                                                                                                                                                                                                                          |                                 |
| <b>Command Mode</b>           | Interface configuration mode.                                                                                                                                                                                                                                                 |                                 |
| <b>Usage Guide</b>            | At present, the destination address of IP broadcast packet is all "1", represented as 255.255.255.255. The RGOS software can generate broadcast packets with other IP addresses through definition, and can receive both all "1" and the broadcast packets defined by itself. |                                 |
| <b>Configuration Examples</b> | The following example sets the destination address of IP broadcast packets generated by this interface to 0.0.0.0.                                                                                                                                                            |                                 |
|                               | <pre>Ruijie(config)# interface gigabitEthernet 0/1 Ruijie(config-if)# ip broadcast-address 0.0.0.0</pre>                                                                                                                                                                      |                                 |
| <b>Related Commands</b>       | <b>Command</b>                                                                                                                                                                                                                                                                | <b>Description</b>              |
|                               | N/A                                                                                                                                                                                                                                                                           | N/A                             |
| <b>Platform Description</b>   | N/A                                                                                                                                                                                                                                                                           |                                 |

## 1.5 ip icmp error-interval

Use this command to set the rate to send the ICMP destination unreachable packets triggered by DF in the IP header. Use the **no** form of this command to restore the default setting.

`ip icmp error-interval DF milliseconds [ bucket-size ]`

**no ip icmp error-interval DF milliseconds [ bucket-size ]**

Use this command to set the rate to send other ICMP error packets. Use the **no** form of this command to restore the default setting.

`ip icmp error-interval milliseconds [bucket-size]`

**no ip icmp error-interval milliseconds [ bucket-size ]**

|                    |                     |                                                                                                                                                                                            |
|--------------------|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Parameter</b>   | <b>Parameter</b>    | <b>Description</b>                                                                                                                                                                         |
| <b>Description</b> | <i>milliseconds</i> | The refresh period of the token bucket, in the range from 0 to 2147483647 in the unit of milliseconds. 0 indicates no limit on the rate to send ICMP error packets.<br>The default is 100. |
|                    | <i>bucket-size</i>  | The number of tokens in the bucket, in the range is from 1 to 200. The default is 10.                                                                                                      |

**Defaults** The default rate is 10 packets per 100 millisecond.

**Command Mode** Global configuration mode.

**Usage Guide** To prevent DoS attack, the token bucket algorithm is adopted to limit the rate to send ICMP error packets.

If IP packets need to be fragmented while the DF is set to 1, the device sends ICMP destination unreachable packets numbered 4 to the source IP address for path MTU discovery. Rate limits on ICMP destination unreachable packets and other error packets are needed to prevent path MTU discovery failure.

It is recommended to set the refresh period to an integral multiple of 10 milliseconds. If the refresh period is not an integral multiple of 10 milliseconds, it is adjusted automatically. For example, 1 per 5 milliseconds is adjusted to 2 per 10 milliseconds; 3 per 15 milliseconds is adjusted to 2 per 10 milliseconds.

**Configuration Examples** The following example sets the rate to send the ICMP destination unreachable packets triggered by DF in the IP header to 100 per second.

```
Ruijie(config)# ip icmp error-interval DF 1000 100
```

The following example sets the rate to send other ICMP error packets to 10 per second.

```
Ruijie(config)# ip icmp error-interval 1000 10
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 1.6 ip icmp timestamp

Use this command to enable the device to return a Timestamp Reply. Use the **no** form of this command to disable returning of Timestamp Reply.

- ip icmp timestamp**
- no ip icmp timestamp**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** This function is enabled by default.

**Command Mode** Global configuration mode.



**Usage Guide** N/A

**Configuration** The following example disables the device to return a Timestamp Reply.

**Examples** Ruijie(config)# no ip icmp timestamp

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 1.7 ip directed-broadcast

Use this command to enable the conversion from IP directed broadcast to physical broadcast in the interface configuration mode. Use the **no** form of this command to restore the default setting.

**ip directed-broadcast** [ *access-list-number* ]

**no ip directed-broadcast**

| Parameter          | Parameter                 | Description                                                                                                                                                                                                      |
|--------------------|---------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b> | <i>access-list-number</i> | (Optional) Access list number, in the range from 1 to 199 and from 1300 to 2699. After an access list number has been defined, only the IP directed broadcast packets that match this access list are converted. |

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode.

**Usage Guide** IP directed broadcast packet is an IP packet whose destination address is an IP subnet broadcast address. For example, the packet with the destination address 172.16.16.255 is called a directed broadcast packet. However, the node that generates this packet is not a member of the destination subnet.

The device that is not directly connected to the destination subnet receives an IP directed broadcast packet and handles this packet in the same way as forwarding a unicast packet. After the directed broadcast packet reaches a device that is directly connected to this subnet, the device converts the directed broadcast packet into a flooding broadcast packet (typically the broadcast packet whose destination IP address is all "1"), and then sends the packet to all the hosts in the destination subnet in the manner of link layer broadcast.

You can enable conversion from directed broadcast into physical broadcast on a specified interface, so that this interface can forward a direct broadcast packet to a directly connected network. This command affects only the final transmission of directed broadcast packets that

have reached the destination subnet instead of normal forwarding of other directed broadcast packets.

You can also define an access list on an interface to control which directed broadcast packets to forward. After an access list is defined, only the packets that conform to the conditions defined in the access list undergo conversion from directed broadcast into physical broadcast.

If the **no ip directed-broadcast** command is configured on an interface, RGOS will discard the directed broadcast packets received from the directly connected network.

### Configuration

The following example enables forwarding of directed broadcast packet on the fastEthernet 0/1 port of a device.

### Examples

```
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if)# ip directed-broadcast
```

### Related Commands

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

### Platform

N/A

### Description

## 1.8 ip local pool

Use this command to create an IP address pool. Use the **no** form of this command to remove the setting.

**ip local pool** *pool-name* *low-ip-address* [ *high-ip-address* ]

**no ip local pool** *pool-name* [ *low-ip-address* [ *high-ip-address* ] ]

### Parameter

| Parameter              | Description                                                           |
|------------------------|-----------------------------------------------------------------------|
| <i>pool-name</i>       | Specifies the address pool name. The default name is <b>default</b> . |
| <i>low-ip-address</i>  | The start IP address in the address pool.                             |
| <i>high-ip-address</i> | (Optional) The end IP address in the address pool.                    |

### Description

### Defaults

No IP address pool is configured by default.

### Command

Global configuration mode

### Mode

### Usage Guide

This command is used to create one or multiple IP address pools for PPP to allocate addresses to users.

### Configuration

The following example creates an IP address pool named quark ranging from 172.16.23.0 to 172.16.23.255.

### Examples

```
Ruijie(config)#ip local pool quark 172.16.23.0 172.16.23.255
```

| <b>Related Commands</b> | Command | Description |
|-------------------------|---------|-------------|
|                         | N/A     | N/A         |

**Platform Description** N/A

## 1.9 ip mask-reply

Use this command to configure the RGOS software to respond the ICMP mask request and send an ICMP response message in the interface configuration mode. Use the **no** form of this command to restore the default setting.

**ip mask-reply**  
**no ip mask-reply**

| <b>Parameter Description</b> | Parameter | Description |
|------------------------------|-----------|-------------|
|                              | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command mode** Interface configuration mode.

**Usage Guide** Sometimes, a network device needs the subnet mask of a subnet on the Internet. To obtain such information, the network device can send an ICMP mask request message, and the network device that receives this message will send a mask response message.

**Configuration Examples** The following example sets the FastEthernet 0/1 interface of a device to respond the ICMP mask request message.

```
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if)# ip mask-reply
```

| <b>Related Commands</b> | Command | Description |
|-------------------------|---------|-------------|
|                         | N/A     | N/A         |

**Platform Description** N/A

## 1.10 ip mtu

Use this command to set the Maximum Transmission Unit (MTU) for an IP packet in the interface configuration mode. Use the **no** form of this command is restore the default setting.

**ip mtu bytes**

**no ip mtu**

| Parameter   | Parameter    | Description                                                                 |
|-------------|--------------|-----------------------------------------------------------------------------|
| Description | <i>bytes</i> | Maximum transmission unit of IP packet , in the range from 68 to 1500 bytes |

**Defaults** It is the same as the value configured in the interface command **mtu** by default.

**Command Mode** Interface configuration mode.

**Usage Guide** If an IP packet is larger than the IP MTU, the RGOS software will split this packet. All the devices in the same physical network segment must have the same IP MTU for the interconnected interface.

If the interface configuration command **mtu** is used to set the maximum transmission unit value of the interface, IP MTU will automatically match with the MTU value of the interface. However, if the IP MTU value is changed, the MTU value of the interface will remain unchanged.

**Configuration Examples** The following iexample sets the IP MTU value of the fastEthernet 0/1 interface to 512 bytes.

```
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if)# ip mtu 512
```

| Related Commands | Command    | Description                         |
|------------------|------------|-------------------------------------|
|                  | <b>mtu</b> | Sets the MTU value of an interface. |

**Platform** N/A

**Description**

## 1.11 ip redirects

Use this command to allow the RGOS software to send an ICMP redirection message in the interface configuration mode. Use the **no** form of this command to disable this function.

**ip redirects**

**no ip redirects**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** This function is enabled by default.

**Command Mode** Interface configuration mode.

**Usage Guide** When the route is not optimum, it may make the device to receive packets through one interface and send it though the same interface. If the device sends the packet through the interface through which this packet is received, the device will send an ICMP redirection message to the data source, telling the data source that the gateway for the destination address is another device in the subnet. In this way the data source will send subsequent packets along the optimum path.

**Configuration** The following example disables ICMP redirection for the fastEthernet 0/1 interface.

**Examples**

```
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if)# no ip redirects
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 1.12 ip source-route

Use this command to allow the RGOS software to process an IP packet with source route information in global configuration mode. Use the **no** form of this command to disable this function.

**ip source-route**  
**no ip source-route**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** This function is enabled by default.

**Command Mode** Global configuration mode.

**Usage Guide** RGOS supports IP source route. When the device receives an IP packet, it will check the options of the IP packet, such as strict source route, loose source route and record route. Details about these options can be found in RFC 791. If an option is found to be enabled in this packet, a response will be made. If an invalid option is detected, an ICMP parameter problem message will be sent to the data source, and then this packet is discarded.

**Configuration** The following example disables the IP source route.

**Examples**

```
Ruijie(config)# no ip source-route
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 1.13 ip ttl

Use this command to set the TTL value of the unicast packet. Use the **no** form of this command to restore the default setting.

**ip ttl** *value*

**no ip ttl**

| Parameter          | Parameter    | Description                                                           |
|--------------------|--------------|-----------------------------------------------------------------------|
| <b>Description</b> | <i>value</i> | Sets the TTL value of the unicast packet, in the range from 0 to 255. |

**Defaults** The default is 64.

**Command Mode** Global configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example sets the TTL value of the unicast packet to 100.

```
Ruijie(config)# ip ttl 100
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 1.14 ip ttl-expires enable

This command is used to enable notifications of expired TTL. Use the **no** form of this command to disable this function.

**ip ttl-expires enable**

**no ttl-expires enable**

| Parameter          | Parameter | Description |
|--------------------|-----------|-------------|
| <b>Description</b> | N/A       | N/A         |

**Defaults** By default, notifications are enabled to indicate expired TTL.

**Command mode** Global configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example disables notifications indicating expired TTL.

```
Ruijie(config)# no ttl-expires enable
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A

## 1.15 ip unnumbered

This command is used to configure unnumbered interfaces. After an interface is set to an unnumbered interface, IP can be run on the interface and packets can be sent or received on the interface. Use the **no** form of this command to restore the default setting.

**ip unnumbered** *interface-type interface-number*  
**no ip unnumbered**

**Parameter Description**

| Parameter               | Description                      |
|-------------------------|----------------------------------|
| <i>interface-type</i>   | Type of the associated interface |
| <i>interface-number</i> | No. of the associated interface  |

**Defaults** No unnumbered interface is configured by default.

**Command mode** Interface configuration mode

**Usage Guide** An unnumbered interface indicates that IP is enabled on the interface but no IP address is allocated for the interface. An unnumbered interface must associate with an interface with an IP address. The source IP address of the IP packets generated on an unnumbered interface is the IP address of the associated interface. In addition, the routing protocol process determines whether to send route update packets to the unnumbered interface according to the IP address of the associated interface. Pay attention to the following when using an unnumbered interface:

An Ethernet interface cannot be set to an unnumbered interface.

When SLIP, HDLC, PPP, LAPB, and Frame-relay are encapsulated on a serial port, the port can be set to an unnumbered interface. When a frame relay is encapsulated, only a point-to-point subinterface can be set to an unnumbered interface. In the case of X.25 encapsulation, unnumbered interface is not allowed.

The **ping** command cannot be used to check whether an unnumbered interface is working properly because the interface does not have an IP address. The status of an unnumbered interface can be remotely monitored over SNMP.

The network cannot be enabled using an unnumbered interface.

**Configuration Examples** The following example configures the local interface as an unnumbered interface and sets the associated interface to FastEthernet 0/1 (an IP address is configured for the interface).

```
Ruijie(config-if)# ip unnumbered fastEthernet 0/1
```

**Related Commands**

| Command               | Description                                            |
|-----------------------|--------------------------------------------------------|
| <b>show interface</b> | Displays the detailed information about the interface. |

**Platform Description** N/A

## 1.16 ip unreachable

Use this command to allow the RGOS software to generate ICMP destination unreachable messages. Use the **no** form of this command to disable this function.

**ip unreachable**

**no ip unreachable**

| Parameter          | Parameter | Description |
|--------------------|-----------|-------------|
| <b>Description</b> | N/A       | N/A         |

**Defaults** This function is enabled by default.

**Command Mode** Interface configuration mode.

**Usage Guide** RGOS software will send a ICMP destination unreachable message if it receives unicast message with self-destination-address and can not process the upper protocol of this message.

RGOS software will send ICMP host unreachable message to source data if it can not forward a message due to no routing.

This command influences all ICMP destination unreachable messages.



**Configuration Examples** The following example disables sending ICMP destination unreachable message on FastEthernet 0/1.

```
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if)# no ip unreachable
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 1.17 show ip interface

Use this command to display the IP status information of an interface.

**show ip interface** [ *interface-type interface-number* | **brief** ]

| Parameter Description | Parameter               | Description                                                                                                                                     |
|-----------------------|-------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <i>interface-type</i>   | Specifies interface type.                                                                                                                       |
|                       | <i>interface-number</i> | Specifies interface number.                                                                                                                     |
|                       | <i>brief</i>            | Displays the brief configurations about the IP of the layer-3 interface (including the interface primary ip, secondary ip and interface status) |

**Defaults** N/A.

**Command Mode** Privileged EXEC mode.

**Usage Guide** When an interface is available, RGOS will create a direct route in the routing table. The interface is available in that the RGOS software can receive and send packets through this interface. If the interface changes from available status to unavailable status, the RGOS software removes the appropriate direct route from the routing table.

If the interface is unavailable, for example, two-way communication is allowed, the line protocol status will be shown as "UP". If only the physical line is available, the interface status will be shown as "UP".

The results shown may vary with the interface type, because some contents are the interface-specific options

**Configuration Examples** The following example displays the output of the **show ip interface brief** command.

```
Ruijie#show ip interface brief
Interface IP-Address(Pri) IP-Address(Sec) Status Protocol
GigabitEthernet 0/10 2.2.2.2/24 3.3.3.3/24 down down
```

```
GigabitEthernet 0/11 no address no address down down
VLAN 1 1.1.1.1/24 no address down down
```

Description of fields:

| Field    | Description                                                                                               |
|----------|-----------------------------------------------------------------------------------------------------------|
| Status   | Link status of an interface. The value can be <b>up</b> , <b>down</b> , or <b>administratively down</b> . |
| Protocol | IPv4 protocol status of an interface.                                                                     |

The following example displays the output of the **show ip interface vlan** command.

```
SwitchA#show ip interface vlan 1
VLAN 1
  IP interface state is: DOWN
  IP interface type is: BROADCAST
  IP interface MTU is: 1500
  IP address is:
  1.1.1.1/24 (primary)
  IP address negotiate is: OFF
  Forward direct-broadcast is: OFF
  ICMP mask reply is: ON
  Send ICMP redirect is: ON
  Send ICMP unreachable is: ON
  DHCP relay is: OFF
  Fast switch is: ON
  Help address is:
  Proxy ARP is: OFF
ARP packet input number: 0
  Request packet: 0
  Reply packet: 0
  Unknown packet: 0
TTL invalid packet number: 0
ICMP packet input number: 0
  Echo request: 0
Echo reply: 0
  Unreachable: 0
  Source quench: 0
  Routing redirect: 0
```

Description of fields in the results:

| Field                  | Description                                                                                                   |
|------------------------|---------------------------------------------------------------------------------------------------------------|
| IP interface state is: | The network interface is available, and both its interface hardware status and line protocol status are "UP". |
| IP interface type is:  | Show the interface type, such as broadcast, point-to-point, etc.                                              |
| IP interface MTU is:   | Show the MTU value of the interface.                                                                          |

|                                                                                                                  |                                                                                                                                                                                                     |
|------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| IP address is:                                                                                                   | Show the IP address and mask of the interface.                                                                                                                                                      |
| IP address negotiate is:                                                                                         | Show whether the IP address is obtained through negotiation.                                                                                                                                        |
| Forward direct-broadcast is:                                                                                     | Show whether the directed broadcast is forwarded.                                                                                                                                                   |
| ICMP mask reply is:                                                                                              | Show whether an ICMP mask response message is sent.                                                                                                                                                 |
| Send ICMP redirect is:                                                                                           | Show whether an ICMP redirection message is sent.                                                                                                                                                   |
| Send ICMP unreachable is:                                                                                        | Show whether an ICMP unreachable message is sent.                                                                                                                                                   |
| DHCP relay is:                                                                                                   | Show whether the DHCP relay is enabled.                                                                                                                                                             |
| Fast switch is:                                                                                                  | Show whether the IP fast switching function is enabled.                                                                                                                                             |
| Route horizontal-split is:                                                                                       | Show whether horizontal split is enabled, which will affect the route update behavior of the distance vector protocol.                                                                              |
| Help address is:                                                                                                 | Show the helper IP address.                                                                                                                                                                         |
| Proxy ARP is:                                                                                                    | Show whether the agent ARP is enabled.                                                                                                                                                              |
| ARP packet input number:<br>Request packet:<br>Reply packet:<br>Unknown packet:                                  | Show the total number of ARP packets received on the interface, including:<br>ARP request packet<br>ARP reply packet<br>Unknown packet                                                              |
| TTL invalid packet number:                                                                                       | Show the TTL invalid packet number                                                                                                                                                                  |
| ICMP packet input number:<br>Echo request:<br>Echo reply:<br>Unreachable:<br>Source quench:<br>Routing redirect: | Show the total number of ICMP packets received on the interface, including:<br>Echo request packet<br>Echo reply packet<br>Unreachable packet<br>Source quench packet<br>Routing redirection packet |
| Outgoing access list is                                                                                          | Show whether an outgoing access list has been configured for an interface.                                                                                                                          |
| Inbound access list is                                                                                           | Show whether an incoming access list has been configured for an interface.                                                                                                                          |

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A.    | N/A.        |

**Platform** N/A.  
**Description**

## 1.18 show ip packet queue

Use this command to display the statistics of IP packet queues.

**show ip packet queue**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode.

**Usage Guide** N/A.

**Configuration** The following example displays the statistics of IP packet queues.

**Examples**

```
Ruijie#show ip packet queue
Receive 31925 packets(fragment=0):
  IP packet receive queue: length 0, max 1542, overflow 0.
  Receive 13 ICMP echo packets, 25 ICMP reply packets .
  Discards:
    Failed to alloc skb: 0.
    Receive queue overflow: 0.
    Unknow protocol drops: 0.
    ICMP rcv drops: 0. for skb check fail.
    ICMP rcv drops: 0. for skb is broadcast.
Sent packets:
  Success: 15644
  Generate 13 and send 8 ICMP reply packets, send 26 ICMP echo packets.
  It records 187 us as max time in ICMP reply process.
Failed to alloc ebuf: 0
  Dropped by EFMP: 0
  NoRoutes: 887
  Get vrf fails: 0
  Cannot assigned address drops: 0
  Failed to encapsulate ethernet head: 0
ICMP error queue: length 0, max 1542, overflow 0.
```

| Field                   | Description                      |
|-------------------------|----------------------------------|
| IP packet receive queue | Statistics of received packets   |
| Discards                | Statistics of discarded packets  |
| Sent packets            | Statistics of sent packets       |
| ICMP error queue        | Statistics of ICMP error packets |

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 1.19 show ip packet statistics

Use this command to display the statistics of IP packets.

**show ip packet statistics** [ **total** | *interface-name* ]

| Parameter          | Parameter             | Description                                      |
|--------------------|-----------------------|--------------------------------------------------|
| <b>Description</b> | <i>interface-name</i> | Interface name                                   |
|                    | <i>total</i>          | Displays the total statistics of all interfaces. |

**Defaults** N/A.

**Command Mode** Privileged EXEC mode.

**Usage Guide** N/A.

**Configuration** The following example displays the output of this command.

### Examples

```
Ruijie# show ip packet statistics
Total
Received 1000 packets, 1000000 bytes
Unicast:1000,Multicast:0,Broadcast:0
Discards:0
HdrErrors:0 (BadChecksum:0,TTLExceeded:0,Others:0)
NoRoutes:0
Others:0
Sent 100 packets, 6000 bytes
Unicast:50,Multicast:50,Broadcast:0

VLAN 1
Received 1000 packets, 1000000 bytes
Unicast:1000,Multicast:0,Broadcast:0
Discards:0
HdrErrors:0 (BadChecksum:0,TTLExceeded:0,Others:0)
NoRoutes:0
Others:0
Sent 100 packets, 6000 bytes
Unicast:50,Multicast:50,Broadcast:0
```

| Related         | Command                   | Description                                                                    |
|-----------------|---------------------------|--------------------------------------------------------------------------------|
| <b>Commands</b> | <b>ip default-gateway</b> | Configures the default gateway, which is only supported on the Layer 2 switch. |

**Platform** N/A

**Description**

## 1.20 show ip pool

Use this command to display the IP address pool.

**show ip pool** [ *pool-name* ]

| Parameter          | Parameter        | Description                    |
|--------------------|------------------|--------------------------------|
| <b>Description</b> | <i>pool-name</i> | Specifies the IP address pool. |

**Defaults** N/A

**Command** Privileged EXEC mode

**Mode**

**Usage Guide** N/A

**Configuration** The following example displays all IP address ranges.

**Examples**

```
Ruijie# show ip pool
Ruijie(config)#show ip pool
Pool          Begin          End             Free   In use
default      1.1.1.1       1.1.1.1        1      0
pool1        2.2.2.2       2.2.2.254     253    0
pool2        3.1.1.1       3.2.1.1       65537  0
pool3        192.168.1.1  192.168.1.254
```

| Field  | Description                                           |
|--------|-------------------------------------------------------|
| Pool   | Address pool name                                     |
| Begin  | The start IP address of the address pool              |
| Free   | The number of free IP addresses in the address pool   |
| In use | The number of IP addresses in use in the address pool |

| Related         | Command | Description |
|-----------------|---------|-------------|
| <b>Commands</b> | N/A     | N/A         |

**Platform** N/A

**Description**

## 1.21 show ip raw-socket

Use this command to display IPv4 raw sockets.

**show ip raw-socket [ num ]**

| Parameter   | Parameter  | Description |
|-------------|------------|-------------|
| Description | <i>num</i> | Protocol.   |

**Defaults** N/A.

**Command Mode** Privileged EXEC mode.

**Usage Guide** N/A.

**Configuration** The following example displays all IPv4 raw sockets.

**Examples**

```
Ruijie# show ip raw-socket
Number Protocol Process name
1 ICMP dhcp.elf
2 ICMP vrrp.elf
3 IGMP igmp.elf
4 VRRP vrrp.elf
Total: 4
```

## Field Description

| Field        | Description  |
|--------------|--------------|
| Number       | Number       |
| Protocol     | Protocol     |
| Process name | Process name |
| Total        | Total number |

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 1.22 show ip sockets

Use this command to display all IPv4 sockets.

**show ip sockets**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A.      | N/A.        |

**Defaults** N/A.

**Command Mode** Privileged EXEC mode.

**Usage Guide** N/A.

**Configuration** The following displays all IPv4 sockets.

**Examples**

```
Ruijie# show ip sockets
Number Process name      Type      Protocol LocalIP:Port  ForeignIP:Port
State
1      dhcp.elf              RAW       ICMP       0.0.0.0:1     0.0.0.0:0
*
2      vrrp.elf              RAW       ICMP       0.0.0.0:1     0.0.0.0:0
*
3      igmp.elf              RAW       IGMP       0.0.0.0:2     0.0.0.0:0
*
4      vrrp.elf              RAW       VRRP       0.0.0.0:112   0.0.0.0:0
*
5      dhcpc.elf             DGRAM    UDP        0.0.0.0:68    0.0.0.0:0
*
6      rg-snmpd              DGRAM    UDP        0.0.0.0:161   0.0.0.0:0
*
7      wbav2                 DGRAM    UDP        0.0.0.0:2000  0.0.0.0:0
*
8      vrrp_plus.elf        DGRAM    UDP        0.0.0.0:3333  0.0.0.0:0
*
9      mpls.elf              DGRAM    UDP        0.0.0.0:3503  0.0.0.0:0
*
10     rds_other_th         DGRAM    UDP        0.0.0.0:3799  0.0.0.0:0
*
11     rg-snmpd              DGRAM    UDP        0.0.0.0:14800 0.0.0.0:0
*
12     rg-sshd              STREAM   TCP        0.0.0.0:22    0.0.0.0:0
LISTEN
13     rg-telnetd           STREAM   TCP        0.0.0.0:23    0.0.0.0:0
LISTEN
14     wbard                 STREAM   TCP        0.0.0.0:4389  0.0.0.0:0
LISTEN
15     wbard                 STREAM   TCP        0.0.0.0:7165  0.0.0.0:0
LISTEN
Total: 15
```

**Field Description**

| Field        | Description    |
|--------------|----------------|
| Number       | Serial number. |
| Process name | Process name.  |



|                |                                                                                                                 |
|----------------|-----------------------------------------------------------------------------------------------------------------|
| Type           | Socket type, including the following types:<br>RAW: raw sockets<br>DGRAM: datagram type<br>STREAM: stream type. |
| Protocol       | Protocol.                                                                                                       |
| LocalIP:Port   | Local IP address and port.                                                                                      |
| ForeignIP:Port | Peer IP address and port.                                                                                       |
| State          | State. This field is for only TCP sockets.                                                                      |
| Total          | The total number of sockets.                                                                                    |

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform  
Description**

N/A

## 1.23 show ip udp

Use this command to display IPv4 UDP sockets.

**show ip udp [ local-port num ]**

Use this command to display IPv4 UDP socket statistics.

**show ip udp statistics**

**Parameter  
Description**

| Parameter             | Description       |
|-----------------------|-------------------|
| <b>local-port num</b> | Local port number |

**Defaults**

N/A.

**Command Mode**

Privileged EXEC mode.

**Usage Guide**

N/A.

**Configuration**

The following example displays all IPv4 UDP sockets.

**Examples**

```
Ruijie# show ip udp
Number Local Address      Peer Address      Process name
1      0.0.0.0:68              0.0.0.0:0        dhcpc.elf
2      0.0.0.0:161             0.0.0.0:0        rg-snmpd
3      0.0.0.0:2000            0.0.0.0:0        wbav2
4      0.0.0.0:3333            0.0.0.0:0        vrrp_plus.elf
5      0.0.0.0:3503            0.0.0.0:0        mpls.elf
6      0.0.0.0:3799            0.0.0.0:0        rds_other_th
7      0.0.0.0:14800           0.0.0.0:0        rg-snmpd
```

## Field Description

| Field         | Description                |
|---------------|----------------------------|
| Number        | Number.                    |
| Local Address | Local IP address and port. |
| Peer Address  | Peer IP address and port.  |
| Process name  | Process name.              |

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform  
Description**

N/A

## 2 ARP Commands

### 2.1 arp

Use this command to add a permanent IP address and MAC address mapping to the ARP cache table. Use the **no** form of this command to restore the default setting.

**arp** [ *vrf name* ] *ip-address* *MAC-address* *type*

**no arp** [ *vrf name* ] *ip-address*

| Parameter   | Parameter          | Description                                                                                                                                                             |
|-------------|--------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Description | <i>vrf name</i>    | VRF instance. Set the <i>name</i> parameter to configure a name for the VRF instance.<br>By default, no VRF instance is specified. The configured static ARP is global. |
|             | <i>ip-address</i>  | The IP address that corresponds to the MAC address. It includes four parts of numeric values in decimal format separated by dots.                                       |
|             | <i>MAC-address</i> | 48-bit data link layer address                                                                                                                                          |
|             | <i>type</i>        | ARP encapsulation type. The keyword is arpa for the Ethernet interface.                                                                                                 |

**Defaults** There is no static mapping record in the ARP cache table by default.

**Command Mode** Global configuration mode.

**Usage Guide** RGOS finds the 48-bit MAC address according to the 32-bit IP address using the ARP cache table. Since most hosts support dynamic ARP resolution, usually static ARP mapping is not necessary. The **clear arp-cache** command can be used to delete the ARP mapping that is learned dynamically.

**Configuration Examples** The following example sets an ARP static mapping record for a host in the Ethernet.

```
Ruijie(config)# arp 1.1.1.1 4e54.3800.0002 arpa
```

| Related Commands | Command         | Description                |
|------------------|-----------------|----------------------------|
|                  | clear arp-cache | Clears the ARP cache table |

**Platform Description** N/A

### 2.2 arp-learning

Use this command to enable ARP learning. Use the **no** form of this command to disable this

function.

**arp-learning enable**

**no arp-learning enable**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** This function is enabled by default

**Command Mode** Interface configuration mode

**Usage Guide** After the device learns the dynamic ARP and turns it to the static ARP through Web, it is recommended to enable ARP learning. Otherwise, it is not recommended to enable this function. If this function is disabled with dynamic ARP existing, you can turn dynamic ARP to static ARP through Web. You can also clear the dynamic ARP using the clear arp command to deny the specified user's access to Internet. Otherwise, the dynamic ARP will be aged and then cleared. After this function is disabled, the AnyIP function and trust ARP detection are disabled.

**Configuration Examples** The following example enables ARP learning.

```
Ruijie(config)# interface gi 0/0
Ruijie(config-if-GigabitEthernet 0/0)# arp-learning enable
```

The following example disables ARP learning.

```
Ruijie(config)# interface gi 0/0
Ruijie(config-if-GigabitEthernet 0/0)# no arp-learning enable
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 2.3 arp anti-ip-attack

Use this command to configure ARP anti-ip-attack. Use the **no** form of this command to restore the default setting.

**arp anti-ip-attack num**

**no arp anti-ip-attack**

| Parameter   | Parameter  | Description                                                                                                                                            |
|-------------|------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|
| Description | <i>num</i> | The number of the IP message to trigger the ARP to discarded entry in the range from 0 to 100. 0 stands for disabling the arp anti-ip-attack function. |

**Defaults** By default, set the discarded entry after 3 unknown unicast messages are sent to the CPU.

**Command Mode** Global configuration mode.

**Usage Guide** For the messages corresponds to the directly-connected route, if the switch does not learn the ARP that corresponds to the destination IP address, it is not able to forward the message in hardware, and it needs to send the message to the CPU to resolve the address(that is the ARP learning). Sending large number of this message to the CPU will influence the other tasks of the switch. To prevent the IP messages from attacking the CPU, a discarded entry is set to the hardware during the address resolution, so that all sequential messages with that destination IP address are not sent to the CPU. After the address resolution, the entry is updated to the forwarding status, so that the switch could forward the message with that destination IP address in hardware.

In general, during the ARP request ,if the switch CPU receives three destination IP address messages corresponding to the ARP entry, it is considered to be possible to attack the CPU and the switch sets the discarded entry to prevent the unknown unicast message from attacking the CPU. User could set the *num* parameter of this command to decide whether it attacks the CPU in specific network environment or disable this function.

The arp anti-ip-attack function needs to occupy the switch hardware routing resources when attacked by the unknown unicast message. If there are enough resources, the **arp anti-ip-attack num** could be smaller. If not, in order to preferential ensure the use of the normal routing, the *num* could be larger or disable this function.

**Configuration Examples** The following example sets the IP message number that triggers to discard entry as 5.

```
Ruijie(config)# arp anti-ip-attack 5
```

The following example disables the ARP anti-ip-attack function.

```
Ruijie(config)# arp anti-ip-attack 0
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 2.4 arp cache interface-limit

Use this command to set the maximum number of ARP learned on the interface.

Use the **no** form of this command to restore the default setting.

**arp cache interface-limit limit**

**no arp cache interface-limit**

| Parameter | Parameter | Description |
|-----------|-----------|-------------|
|-----------|-----------|-------------|

| <b>Description</b>            | <i>limit</i>                                                                                                                                                                                                              | Sets the maximum number of ARP learned on the interface, including static and dynamic ARPs, in the range from 0 to the number supported on the interface. 0 indicates that the number is not limited. |             |     |     |  |
|-------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------|-----|-----|--|
| <b>Defaults</b>               | The default is 0.                                                                                                                                                                                                         |                                                                                                                                                                                                       |             |     |     |  |
| <b>Command Mode</b>           | Interface configuration mode                                                                                                                                                                                              |                                                                                                                                                                                                       |             |     |     |  |
| <b>Usage Guide</b>            | This function can prevent ARP attacks from generating ARP entries to consume memory. <i>limit</i> must be no smaller than the number of ARPs learned on the interface. Otherwise, the configuration does not take effect. |                                                                                                                                                                                                       |             |     |     |  |
| <b>Configuration Examples</b> | The following example sets the maximum number of ARP learned on the interface to 300.                                                                                                                                     |                                                                                                                                                                                                       |             |     |     |  |
|                               | <pre>Ruijie(config)# interface gi 0/0 Ruijie(config-if-GigabitEthernet 0/0)# arp cache interface-limit 300</pre>                                                                                                          |                                                                                                                                                                                                       |             |     |     |  |
|                               | The following example restores the default setting.                                                                                                                                                                       |                                                                                                                                                                                                       |             |     |     |  |
|                               | <pre>Ruijie(config)# interface gi 0/0 Ruijie(config-if-GigabitEthernet 0/0)# no arp cache interface-limit</pre>                                                                                                           |                                                                                                                                                                                                       |             |     |     |  |
| <b>Related Commands</b>       | <table border="1"> <thead> <tr> <th>Command</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>N/A</td> <td>N/A</td> </tr> </tbody> </table>                                                                       | Command                                                                                                                                                                                               | Description | N/A | N/A |  |
| Command                       | Description                                                                                                                                                                                                               |                                                                                                                                                                                                       |             |     |     |  |
| N/A                           | N/A                                                                                                                                                                                                                       |                                                                                                                                                                                                       |             |     |     |  |
| <b>Platform Description</b>   | N/A                                                                                                                                                                                                                       |                                                                                                                                                                                                       |             |     |     |  |

## 2.5 arp gratuitous-send interval

Use this command to set the interval of sending the free ARP request message on the interface. Use the **no** form of this command to restore the default setting.

**arp gratuitous-send interval** *seconds*

**no arp gratuitous-send**

| Parameter Description | Parameter      | Description                                                                                                |
|-----------------------|----------------|------------------------------------------------------------------------------------------------------------|
|                       | <i>seconds</i> | The time interval to send the free ARP request message in the range from 1 to 3600 in the unit of seconds. |
|                       | <i>number</i>  | The number of free ARP request message to be sent in the range from 1 to 100. The default value is 1.      |

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode.

**Usage Guide** If an interface of the switch is used as the gateway of its downlink devices and counterfeit gateway behavior occurs in the downlink devices, you can configure to send the free ARP request message regularly on this interface to notify that the switch is the real gateway.

**Configuration Examples** The following example sets to send one free ARP request to SVI 1 per second.

```
Ruijie(config)# interface vlan 1
Ruijie(config-if)# arp gratuitous-send interval 1
```

The following example stops sending the free ARP request to SVI 1.

```
Ruijie(config)# interface vlan 1
Ruijie(config-if)# no arp gratuitous-send
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 2.6 arp oob

Use this command to configure the static ARP on the management interface. Use the **no** form of this command to restore the default setting.

**arp oob** [ *mgmt.-name* ] *ip-address mac-address type*

**no arp oob** [ *mgmt.-name* ] *ip-address*

| Parameter          | Parameter          | Description                                                                                       |
|--------------------|--------------------|---------------------------------------------------------------------------------------------------|
| <b>Description</b> | <i>ip-address</i>  | The IP address corresponding to the MAC address, written as four groups of dotted decimal values. |
|                    | <i>mac-address</i> | The data link layer address, composed of 48 bits.                                                 |
|                    | <i>type</i>        | The ARP encapsulation type. The key word for the Ethernet interface is <b>arpa</b> .              |
|                    | <i>mgmt.-name</i>  | Specifies the ARP-mapping management interface when there are multiple management interfaces.     |

**Defaults** No static ARP is configured by default.

**Command Mode** Global configuration mode

**Usage Guide** RGOS uses the ARP cache table to search for the 48-bit MAC address according to the 32-bit IP address.

Most hosts support dynamic ARP analysis, so static ARP mapping does not need to be configured. The `clear arp-cache oob` command is used to clear the ARP mapping learned by the management port dynamically.

If no management interface is specified, the static ARP is configured on the first management interface by default. If you specify the first management interface, the `mgmt-name` parameter is not displayed by running the `show run` command.

**Configuration** The following example configures a static ARP mapping record for the Ethernet host

**Examples**

```
Ruijie(config)# arp oob 1.1.1.1 4e54.3800.0002 arpa
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 2.7 arp proxy-resolved

Use this command to enable a device to judge the existence of the ARP entry corresponding to a destination IP address when the device responds to an ARP request as an ARP proxy. Use the `no` form of this command to disable this function.

**arp proxy-resolved**  
**no arp proxy-resolved**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** This function is enabled by default.

**Command Mode** Global configuration mode

**Usage Guide** After the `arp proxy-resolved` command is configured, the active VRRP device first judges, upon receiving an ARP request, whether the ARP entry corresponding to the destination IP address exists. If yes, the active VRRP device acts as an ARP proxy. If no, the active VRRP device does not act as an ARP proxy. In addition, the gateway automatically requests the ARP entry corresponding to the destination IP address in broadcast mode. This prevents a case that the gateway fails to act as a proxy to respond to an ARP request of the destination IP address due to absence of the ARP entry corresponding to the destination IP address.

After the `no arp proxy-resolved` command is configured, if the proxy conditions are met, the active VRRP device directly acts as a proxy upon receiving an ARP request, with no need to judge whether the ARP entry corresponding to the destination IP address has been resolved.



**Configuration** The following example disables a device to judge the existence of the ARP entry corresponding to a destination IP address when the device responds to an ARP request as an ARP proxy.

**Examples**

```
Ruijie(config)# no arp proxy-resolved
```

| Related  | Command | Description |
|----------|---------|-------------|
| Commands | N/A     | N/A         |

**Platform** N/A

**Description**

## 2.8 arp resolve vlan

Use this command to enable active sending of ARP resolution requests to a specific sub VLAN of a super VLAN. Use the **no** form of this command to disable the active sending of ARP resolution requests to a specific sub VLAN of a super VLAN. Use the **default** form of this command to restore the default settings.

**arp resolve vlan** {*vlan-list* | **none**}

**no arp resolve vlan** {*vlan-list* | **none**}

**default arp resolve vlan**

| Parameter          | Parameter        | Description                                                                                                 |
|--------------------|------------------|-------------------------------------------------------------------------------------------------------------|
| <b>Description</b> | <i>vlan-list</i> | Sets the list of sub VLANs in a super VLAN, where ARP resolution requests are sent only to these sub VLANs. |
|                    | <b>none</b>      | Specifies that no ARP resolution request is sent to any sub VLAN of a super VLAN.                           |


**Defaults** This function is disabled by default.

**Command** Global configuration mode

**Mode**

**Usage Guide** By default, the device actively sends ARP resolution requests to the entire super VLAN by default. If many sub VLANs exist in a super VLAN, then a great number of packet replications are caused and therefore affect device performance.

Most terminals (such as PCs and servers) request ARP information from the gateway before accessing the network. Therefore, it is unnecessary to actively broadcast ARP resolution requests to the sub VLANs where these terminals reside. For dumb terminals that do not actively send free ARP requests, run the **arp resolve vlan** *vlan-list* command to actively send ARP resolution requests to VLANs in the specified VLAN list.

 After the **arp resolve vlan** *vlan-list* command is configured, ARP resolution requests are sent only to VLANs specified in the VLAN list. It should be particularly noted that if authentication-free VLANs are not included in the VLAN list specified in the **arp resolve vlan** command, ARP resolution requests are not broadcast to the authentication-free VLANs.

**Configuration** The following example enables active sending of ARP resolution requests from the device to VLANs 10–20 and VLANs 25–30.

**Examples**

```
Ruijie(config)# arp resolve vlan 10-20, 25-30
```

The following example disables active sending of ARP resolution requests from the device to VLANs 10–20.

```
Ruijie(config)# no arp resolve vlan 10-20
```

The following example configures the device not to actively send ARP resolution requests to any sub VLAN of a super VLAN.

```
Ruijie(config)# arp resolve vlan none
```

**Verification** Run the **show running-config** command to display configurations.

## 2.9 arp retry interval

Use this command to set the frequency for sending the arp request message locally, namely, the time interval between two continuous ARP requests sent for resolving one IP address. Use the **no** form of this command to restore the default setting.

**arp retry interval** *seconds*

**no arp retry interval**

| Parameter          | Parameter      | Description                                                                                         |
|--------------------|----------------|-----------------------------------------------------------------------------------------------------|
| <b>Description</b> | <i>seconds</i> | Time for retransmitting the ARP request message in the range from 1 to 3600 in the unit of seconds. |

**Defaults** The default is 1.

**Command Mode** Global configuration mode.

**Usage Guide** The switch sends the ARP request message frequently, and thus causing problems like network busy. In this case, you can set the retry interval of the ARP request message longer. In general, it should not exceed the aging time of the dynamic ARP entry.

**Configuration** The following example sets the retry interval of the ARP request as 30 seconds.

**Examples**

```
Ruijie(config)# arp retry interval 30
```

| Related         | Command                | Description                                                |
|-----------------|------------------------|------------------------------------------------------------|
| <b>Commands</b> | <b>arp retry times</b> | Number of times for retransmitting an ARP request message. |

**Platform** N/A

**Description**

## 2.10 arp retry times

Use this command to set the local retry times of the ARP request message, namely, the times of sending the ARP request message to resolve one IP address. Use the **no** form of this command to restore the default setting.

**arp retry times** *number*

**no arp retry times**

| Parameter   | Parameter     | Description                                                                                                                                                                            |
|-------------|---------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Description | <i>number</i> | The times of sending the same ARP request in the range from 1 to 100. When it is set as 1, it indicates that the ARP request is not retransmitted, only 1 ARP request message is sent. |

**Defaults** The default is 5.

**Command Mode** Global configuration mode.

**Usage Guide** The switch sends the ARP request message frequently, and thus causing problems like network busy. In this case, you can set the retry times of the ARP request smaller. In general, the retry times should not be set too large.

**Configuration Examples** The following example sets the local ARP request not to be retried.

```
Ruijie(config)# arp retry times 1
```

The following example sets the local ARP request to be retried for one time.

```
Ruijie(config)# arp retry times 2
```

| Related Commands | Command                   | Description                                        |
|------------------|---------------------------|----------------------------------------------------|
|                  | <b>arp retry interval</b> | Interval for retransmitting an ARP request message |

**Platform Description** N/A

## 2.11 arp suppress-auth-vlan-req

Use this command to disable the SVI interface from sending the ARP request to the authentication VLAN. Use the **no** form of this command to disable this function.

**arp suppress-auth-vlan-req**

**no arp suppress-auth-vlan-req**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** This function is enabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** In gateway authentication mode, all sub-VLANs of SuperVLAN are authentication VLANs by default. Users on authentication VLANs should pass the authentication before accessing the network. Static ARP table entries are generated on the device after users pass authentication. The device does not need to send ARP requests to the authentication VLAN when accessing these users. If the device accesses users on the authentication-exemption VLAN, it only needs to send ARP requests to the authentication-exemption VLAN.

In gateway authentication mode, the device enables suppression of ARP request sent to the authentication VLAN by default. If the device needs to access authentication-exemption users on the authentication VLAN, this function should be disabled.

**Configuration Examples** The following example disables VLAN 2 from sending the ARP request to the authentication VLAN.

```
Ruijie(config)# interface vlan 2
Ruijie(config-if-VLAN 2)# arp suppress-auth-vlan-req
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 2.12 arp switch-over resolve

Use this command to enable active ARP resolution during active/standby switchovers in global configuration mode. Use the **no** form of this command to disable active ARP resolution during active/standby switchovers.

**arp switch-over resolve**  
**no arp switch-over resolve**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** Active ARP resolution during active/standby switchovers is disabled by default.

**Command Mode** Global configuration mode

**Default Level** 2

**Usage Guide** This command is used to quickly update ARP entries of the downlink device during VSU active/standby switchovers (especially when the downlink device is similar to a server with two NICs). When the standby host takes over the responsibilities of the active host, the new active host actively sends ARP resolution requests to a maximum of 1,000 terminals on a common SVI (not an interface in a super VLAN), to trigger the terminals to respond with ARP entries, thereby updating the ARP and MAC tables.

**Configuration** The following example enables active ARP resolution during active/standby switchovers.

**Examples**

```
Ruijie(config)# arp switch-over resolve
```

**Verification** Run the **show running-config** command to display configurations.

## 2.13 arp timeout

Use this command to configure the timeout for the ARP static mapping record in the ARP cache.

Use the **no** form of this command to restore the default setting.

**arp timeout** *seconds*

**no arp timeout**

| Parameter   | Parameter       | Description                                                           |
|-------------|-----------------|-----------------------------------------------------------------------|
| Description | <i>secondsv</i> | The timeout is in the range from 0 to 2147483 in the unit of seconds. |

**Defaults** The default is 3600.

**Command Mode** Interface configuration mode/Global configuration mode

**Usage Guide** The ARP timeout setting is only applicable to the IP address and the MAC address mapping that are learned dynamically. The shorter the timeout, the truer the mapping table saved in the ARP cache, but the more network bandwidth occupied by the ARP. Hence the advantages and disadvantages should be weighted. Generally it is not necessary to configure the ARP timeout unless there is a special requirement.

The ARP timeout configuration in interface configuration mode prevail over that in global configuration mode.

**Configuration Examples** The following example sets the timeout for the dynamic ARP mapping record that is learned dynamically from FastEthernet port 0/1 to 120 seconds.

```
Ruijie(config)# interface fastEthernet 0/1
```

```
Ruijie(config-if-GigabitEthernet 0/1)# arp timeout 120
```

The following example sets the ARP timeout to 3000 seconds in global configuration mode.

```
Ruijie(config)# arp timeout 3000
```

| Related<br>Commands   | Command                | Description                         |
|-----------------------|------------------------|-------------------------------------|
|                       | <b>clear arp-cache</b> |                                     |
| <b>show interface</b> |                        | Displays the interface information. |

**Platform** N/A  
**Description**

## 2.14 arp trusted

Use this command to set the maximum number of trusted ARP entries. Use the **no** form of this command to restore the default setting.

**arp trusted** *number*  
**no arp trusted**

| Parameter<br>Description | Parameter     | Description                                                                                    |
|--------------------------|---------------|------------------------------------------------------------------------------------------------|
|                          | <i>number</i> | Maximum number of trusted ARP entries. It ranges from 10 to the maximum ARP volum minus 1,024. |

**Defaults** N/A

**Command Mode** Global configuration mode.

**Usage Guide** To make this command valid, enable the trusted ARP function firstly. The trusted ARP entries and other entries share the memory. Too much trusted ARP entries may lead to insufficient ARP entry space. In general, you should set the maximum number of trusted ARP entries according to your real requirements.

**Configuration Examples** The following example sets 1000 trusted ARPs.

```
Ruijie(config)# arp trusted 1000
```

| Related<br>Commands | Command                   | Description |
|---------------------|---------------------------|-------------|
|                     | <b>service trustedarp</b> |             |

**Platform** N/A  
**Description**

## 2.15 arp trust-monitor enable

Use this command to enable egress gateway trusted ARP. Use the **no** form of this command to restore the default setting.

**arp trust-monitor enable**  
**no arp trust-monitor enable**

|                               |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |                    |
|-------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------|
| <b>Parameter</b>              | <b>Parameter</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | <b>Description</b> |
| <b>Description</b>            | N/A                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | N/A                |
| <b>Defaults</b>               | This function is disabled by default.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |                    |
| <b>Command Mode</b>           | Interface configuration mode                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |                    |
| <b>Usage Guide</b>            | The egress gateway trusted ARP is different from GSN trusted ARP. With this function enabled, the device sends a unicast request for confirmation when learning an ARP table entry. The device learns the ARP table entry after receiving the response. When the device receives the ARP packet, only if the ARP table entry is aged or incomplete and the ARP packet is a response packet will the packet be handled. After egress gateway trusted ARP is enabled, the aging time of the ARP table entry turns to 60 seconds. After this function is disabled, the aging time restores to 3600 seconds. |                    |
| <b>Configuration Examples</b> | The following example enables egress gateway trusted ARP.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |                    |
|                               | <pre>Ruijie(config)# interface gi 0/0 Ruijie(config-if-GigabitEthernet 0/0)# arp trust-monitor enable</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |                    |
|                               | The following example disables egress gateway trusted ARP.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |                    |
|                               | <pre>Ruijie(config)# interface gi 0/0 Ruijie(config-if-GigabitEthernet 0/0)# no arp trust-monitor enable</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |                    |
| <b>Related Commands</b>       | <b>Command</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | <b>Description</b> |
|                               | N/A                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | N/A                |
| <b>Platform Description</b>   | N/A                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |                    |

## 2.16 arp trusted aging

Use this command to set trusted ARP aging. Use the **no** form of this command to restore the default setting.

**arp trusted aging**

**no arp trusted aging**

|                     |                                       |                    |
|---------------------|---------------------------------------|--------------------|
| <b>Parameter</b>    | <b>Parameter</b>                      | <b>Description</b> |
| <b>Description</b>  | N/A                                   | N/A                |
| <b>Defaults</b>     | This function is disabled by default. |                    |
| <b>Command Mode</b> | Global configuration mode.            |                    |

**Usage Guide** Use this command to set trusted ARP aging. Aging time is the same as dynamic ARP aging time. Use the **arp timeout** command to set aging time in interface mode.

**Configuration** The following example enables trusted ARP aging.

**Examples**

```
Ruijie(config)# arp trusted aging
```

| Related Commands | Command                   | Description                   |
|------------------|---------------------------|-------------------------------|
|                  | <b>service trustedarp</b> | Enables trusted ARP function. |

**Platform** N/A

**Description**

## 2.17 arp trusted user-vlan

Use this command to execute the VLAN transformation while setting the trusted ARP entries. Use the **no** form of this command to restore the default setting.

**arp trusted user-vlan** *vid1* **translated-vlan** *vid2*

**no arp trusted user-vlan** *vid1*

| Parameter          | Parameter   | Description                   |
|--------------------|-------------|-------------------------------|
| <b>Description</b> | <i>vid1</i> | VID set by the server.        |
|                    | <i>vid2</i> | VID after the transformation. |

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode.

**Usage Guide** In order to validate this command, enable the trusted ARP function first. This command is needed only when the VLAN sent by the server is different from the VLAN which takes effect in the trusted ARP entry.

**Configuration Examples** The following example sets the VLAN sent by the server to 3, but the VLAN which takes effect in the trusted ARP entry to 5.

```
Ruijie(config)# arp trusted user-vlan 3 translated-vlan 5
```

| Related Commands | Command                   | Description                       |
|------------------|---------------------------|-----------------------------------|
|                  | <b>service trustedarp</b> | Enables the trusted ARP function. |

**Platform** N/A

**Description**



## 2.18 arp unresolve

Use this command to set the maximum number of the unresolved ARP entries. Use **no** form of this command to restore the default setting.

**arp unresolve** *number*

**no arp unresolve**

| Parameter   | Parameter     | Description                                                                                                         |
|-------------|---------------|---------------------------------------------------------------------------------------------------------------------|
| Description | <i>number</i> | The maximum number of the unresolved ARP entries in the range from 1 to the ARP table size supported by the device. |

**Defaults** The default is the ARP table size supported by the device.

**Command** Global configuration mode.

**Mode**

**Usage Guide** If there are a large number of unresolved entries in the ARP cache table and they do not disappear after a period of time, this command can be used to limit the quantity of the unresolved entries.

**Configuration** The following example sets the maximum number of the unresolved items to 500.

**Examples**

```
Ruijie(config)# arp unresolve 500
```

| Related  | Command | Description |
|----------|---------|-------------|
| Commands | N/A     | N/A         |

**Platform** N/A

**Description**

## 2.19 clear arp-cache

Use this command to remove a dynamic ARP mapping record from the ARP cache table and clear an IP route cache table.

**clear arp-cache** [ **vrf** *vrf\_name* | **trusted** ] [ *ip [mask]* ] | **interface** *interface-name* ]

| Parameter   | Parameter                  | Description                                                                                                                                                                                  |
|-------------|----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Description | <i>trusted</i>             | Deletes trusted ARP entries. Dynamic ARP entries are deleted by default.                                                                                                                     |
|             | <b>vrf</b> <i>vrf_name</i> | Deletes dynamic ARP entries of the specified VRF instance. The default is the public instance.                                                                                               |
|             | <i>ip</i>                  | Deletes ARP entries of the specified IP address. If <i>trusted</i> value is specified, trusted ARP entries are deleted; otherwise, all dynamic ARP entries are deleted which is the default. |

|                                        |                                                                                                                                                                                                                                                          |
|----------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>mask</i>                            | Deletes ARP entries in a subnet mask. If <i>trusted</i> value is specified, trusted ARP entries in the subnet mask are deleted; otherwise, all dynamic ARP entries are deleted. The dynamic ARP entry specified by the IP address is deleted by default. |
| <b>interface</b> <i>interface-name</i> | Deletes dynamic ARP entries on the specified interface. Dynamic ARP entries are deleted on all interfaces by default.                                                                                                                                    |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** This command can be used to refresh an ARP cache table.

On a NFPP-based (Network Foundation Protection Policy) device, it receives one ARP packet for every mac/ip address per second by default. If the interval of two **clear arp** times is within 1s, the second response packet will be filtered and the ARP packet will not be resolved for a short time.

**Configuration Examples** The following example deletes all dynamic ARP mapping records.

```
Ruijie# clear arp-cache
```

The following deletes the dynamic ARP entry 1.1.1.1.

```
Ruijie# clear arp-cache 1.1.1.1
```

The following example deletes the dynamic ARP entry on interface SVI1.

```
Ruijie# clear arp-cache interface Vlan 1
```

| Related Commands | Command    | Description                                          |
|------------------|------------|------------------------------------------------------|
|                  | <b>arp</b> | Adds a static mapping record to the ARP cache table. |

**Platform Description** N/A

## 2.20 clear arp-cache oob

Use this command to clear dynamic ARP mapping records.

**clear arp-cache oob** [*ip* [*mask*]]

| Parameter Description | Parameter   | Description                                                                                                                                                     |
|-----------------------|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <i>ip</i>   | Clears the ARP table entry of the specified IP address. All dynamic ARP table entries are cleared by default.                                                   |
|                       | <i>mask</i> | Clears the ARP table entry within the specified subnet. The dynamic ARP table entry of the specified IP address (the previous parameter) is cleared by default. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** On a device supporting Network Foundation Protection Policy (NFPP), every MAC / IP address receives an ARP packet per second by default. If the **clear arp oob** command is run twice within one second, the second response packet may be filtered, causing ARP uanalysis for a short time.

**Configuration Examples** The following example clears the cache table of dynamic ARP mapping records.

```
Ruijie# clear arp-cache oob
```

The following example clears dynamic ARP table entry 1.1.1.1.

```
Ruijie# clear arp-cache oob 1.1.1.1
```

The following example clears the dynamic ARP table entry within the specified subnet.

```
Ruijie# clear arp-cache oob 1.0.0.0 255.0.0.0
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A

## 2.21 ip proxy-arp

Use this command to enable ARP proxy function on the interface. Use the **no** form of this command to restore the default setting.

**ip proxy-arp**

**no ip proxy-arp**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** N/A

**Command Mode** Interface configuration mode.

**Usage Guide** Proxy ARP helps those hosts without routing message obtain MAC address of other networks or subnet IP address. For example, a device receives an ARP request. The IP addresses of request sender and receiver are in different networks. However, the device that knows the routing of IP address of request receiver sends ARP response, which is Ethernet MAC address of the device itself.

**Configuration** The following example enables ARP on FastEthernet port 0/1.

**Examples**

```
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if)# ip proxy-arp
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform**

N/A

**Description**

## 2.22 local-proxy-arp

Use this command to enable local proxy ARP on the SVI interface. Use the **no** form of this command to restore the default setting.

**local-proxy-arp****no local-proxy-arp****Parameter  
Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults**

N/A

**Command  
Mode**

Interface configuration mode

**Usage Guide**

With local proxy ARP enabled, the device helps a host to obtain MAC addresses of other hosts on the subnet. If the device enables switchport protected, users on different ports are segregated on layer 2. After local proxy ARP is enabled, the device serves as a proxy to send a response after receiving an ARP request. The ARP response contains a MAC address which is the device's Ethernet MAC address, realizing communication between different hosts through L3 routes.

**Configuration**

The following example enables local proxy ARP on VLAN1.

**Examples**

```
Ruijie(config)# interface vlan 1
Ruijie(config-if-VLAN 1)# local-proxy-arp
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform**

N/A

**Description**

## 2.23 service trustedarp

Use this command to enable the trusted ARP function. Use the **no** form of this command to restore

the default setting.

**service trustedarp**

**no service trustedarp**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** The trusted ARP function of the device is to prevent the ARP fraud function. As a part of the GSN scheme, it should be used together with the GSN scheme.

**Configuration Examples** The following example enables the trusted ARP function in global configuration mode.

```
Ruijie(config)# service trustedarp
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 2.24 show arp

Use this command to display the Address Resolution Protocol (ARP) cache table

**show arp** [ *interface-type interface-number* | **trusted** [*ip [mask]*] | [**vrf** *vrf-name*] [*ip [mask]* | *mac-address* | **static** | **complete** | **incomplete** ] ]

| Parameter Description | Parameter                                        | Description                                                                                                                                                                                        |
|-----------------------|--------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <i>interface-type</i><br><i>interface-number</i> | Displays the ARP entry of a specified Layer-2 or Layer-3 port.                                                                                                                                     |
|                       | <b>vrf</b> <i>vrf_name</i>                       | VRF instance, which Displays the ARP entry with specified VRF.                                                                                                                                     |
|                       | <b>trusted</b>                                   | Displays the trusted ARP entries. Currently, only the global VRF supports the trusted ARP.                                                                                                         |
|                       | <i>ip</i>                                        | Displays the ARP entry of the specified IP address. If <b>trusted</b> is configured, only trusted ARP entries are displayed. Otherwise, untrusted ARP entries are displayed.                       |
|                       | <i>mask</i>                                      | Displays the ARP entries of the network segment included within the mask. If <b>trusted</b> is configured, only trusted ARP entries are displayed. Otherwise, untrusted ARP entries are displayed. |
|                       | <b>static</b>                                    | Displays all the static ARP entries.                                                                                                                                                               |

|                    |                                                        |
|--------------------|--------------------------------------------------------|
| <b>complete</b>    | Displays all the resolved dynamic ARP entries.         |
| <b>incomplete</b>  | Displays all the unresolved dynamic ARP entries.       |
| <i>mac-address</i> | Displays the ARP entry with the specified mac address. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the output result of the **show arp** command:

**Examples**

```
Ruijie# show arp
Total Numbers of Arp: 7
Protocol Address Age(min) Hardware Type Interface
Internet 192.168.195.68 0 0013.20a5.7a5f arpa VLAN 1
Internet 192.168.195.67 0 001a.a0b5.378d arpa VLAN 1
Internet 192.168.195.65 0 0018.8b7b.713e arpa VLAN 1
Internet 192.168.195.64 0 0018.8b7b.9106 arpa VLAN 1
Internet 192.168.195.63 0 001a.a0b5.3990 arpa VLAN 1
Internet 192.168.195.62 0 001a.a0b5.0b25 arpa VLAN 1
Internet 192.168.195.5 -- 00d0.f822.33b1 arpa VLAN 1
```

The following example displays the output result of **show arp 192.168.195.68**

```
Ruijie# show arp 192.168.195.68
Protocol Address Age(min) Hardware Type Interface
Internet 192.168.195.68 1 0013.20a5.7a5f arpa VLAN 1
```

The following example displays the output result of **show arp 192.168.195.0 255.255.255.0**

```
Ruijie# show arp 192.168.195.0 255.255.255.0
Protocol Address Age(min) Hardware Type Interface
Internet 192.168.195.64 0 0018.8b7b.9106 arpa VLAN 1
Internet 192.168.195.2 1 00d0.f8ff.f00e arpa VLAN 1
Internet 192.168.195.5 -- 00d0.f822.33b1 arpa VLAN 1
Internet 192.168.195.1 0 00d0.f8a6.5af7 arpa VLAN 1
Internet 192.168.195.51 1 0018.8b82.8691 arpa VLAN 1
```

The following example displays the output result of **show arp 001a.a0b5.378d**

```
Ruijie# show arp 001a.a0b5.378d
Protocol Address Age(min) Hardware Type Interface
Internet 192.168.195.67 4 001a.a0b5.378d arpa VLAN 1
```

The following example displays the output result of **show arp static**.

```
Ruijie# show arp static
Protocol Address Age(min) Hardware Type Interface Origin
Internet 192.168.23.55 <static> 0000.0000.0010 arpa VLAN 100
Configure
Internet 192.168.23.56 <static> 0000.0000.0020 arpa VLAN 100
Authentication
Internet 192.168.23.57 <static> 0000.0000.0020 arpa VLAN 100
DHCP-Snooping
2 static arp entries exist.
```

The meaning of each field in the ARP cache table is described as below:

Table 1 Fields in the ARP cache table

| Field     | Description                                                                                                                             |
|-----------|-----------------------------------------------------------------------------------------------------------------------------------------|
| Protocol  | Protocol of the network address, always to be Internet                                                                                  |
| Address   | IP address corresponding to the hardware address                                                                                        |
| Age (min) | Age of the ARP cache record, in minutes; If it is not locally or statically configured, the value of the field is represented with “-”. |
| Hardware  | Hardware address corresponding to the IP address                                                                                        |
| Type      | Hardware address type, ARPA for all Ethernet addresses                                                                                  |
| Interface | Interface associated with the IP addresses                                                                                              |
| Origin    | Origin of static ARP entries.                                                                                                           |

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform  
Description**

N/A

## 2.25 show arp counter

Use this command to display the number of ARP entries in the ARP cache table.

**show arp counter**

**Parameter  
Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults**

N/A

**Command  
Mode**

Privileged EXEC mode

**Usage Guide**

N/A

**Configuration** The following example displays the output result of the **show arp counter** command:

**Examples**

```
Ruijie#sho arp counter
ARP Limit:                75000
Count of static entries:  0
Count of dynamic entries: 1 (complete: 1 incomplete: 0)
Total:                    1
```

**Related****Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform**

N/A

**Description**

## 2.26 show arp detail

Use this command to display the details of the Address Resolution Protocol (ARP) cache table.

**show arp detail** [ *interface-type interface-number* | **trusted** [ *ip [ mask ]* ] | [ **vrf vrf-name** ] [ *ip [ mask ]* ] | *mac-address* | **static** | **complete** | **incomplete** ] | **subvlan** { *subvlan-number* | **min-max min\_value max\_value** ]

**Parameter  
Description**

| Parameter                              | Description                                                                                |
|----------------------------------------|--------------------------------------------------------------------------------------------|
| <i>interface-type interface-number</i> | Displays the ARP of the layer 2 port or the layer 3 interface.                             |
| <b>vrf vrf_name</b>                    | VRF instance, which Displays the ARP entry with specified VRF.                             |
| <i>trusted</i>                         | Displays the trusted ARP entries. Currently, only the global VRF supports the trusted ARP. |
| <i>ip</i>                              | Displays the ARP entry of the specified IP address.                                        |
| <i>ip mask</i>                         | Displays the ARP entries of the network segment included within the mask.                  |
| <i>mac-address</i>                     | Displays the ARP entry of the specified MAC address.                                       |
| <i>static</i>                          | Displays all the static ARP entries.                                                       |
| <i>complete</i>                        | Displays all the resolved dynamic ARP entries.                                             |
| <i>incomplete</i>                      | Displays all the unresolved dynamic ARP entries.                                           |
| <b>subvlan</b>                         | Displays the ARP entries of the specified subvlan                                          |
| <i>subvlan-number</i>                  | Subvlan ID                                                                                 |
| <b>min-max</b>                         | Displays the minimum and maximum subvlan ID                                                |
| <i>min_value</i>                       | Minimum subvlan ID                                                                         |
| <i>max_value</i> ]                     | Maximum subvlan ID.                                                                        |

**Defaults**

N/A

**Command**

Privileged EXEC mode



**Mode**

**Usage Guide** Use this command to display the ARP details, such as the ARP type (Dynamic, Static, Local, Trust), the information on the layer2 port.

If you enter a *min\_value* greater than *max\_value*, no error message is prompted. Instead, ARP entries corresponding to the subvlan are displayed.

**Configuration** The following example displays the output result of the **show arp detail** command:

**Examples**

```
Ruijie# show arp detail
IP Address      MAC Address      Type      Age (min)  Interface  Port
SubVlan
20.1.1.2        0020.0101.0002   Static    --         Te2/5      --
20.1.1.1        00d0.f822.33bb   Local     --         Te2/5      --
1.1.1.2         00d0.1111.1112   Dynamic   1          V12        Te2/1      4
1.1.1.1         00d0.f822.33bb   Local     --         V12        --
```

The following example displays arp details including InnerVLAN on products supporting QinQ termination:

```
Ruijie# show arp detail
IP Address      MAC Address      Type      Age (min)  Interface  Port
SubVlan  InnerVlan
20.1.1.2        0020.0101.0002   Static    --         Te2/5      --
20.1.1.1        00d0.f822.33bb   Local     --         Te2/5      --
1.1.1.2         00d0.1111.1112   Dynamic   1          V12        Te2/1      4
300
1.1.1.1         00d0.f822.33bb   Local     --         V12        --
```

The meaning of each field in the ARP cache table is described as below:

Table 1 Fields in the ARP cache table

| Field       | Description                                                   |
|-------------|---------------------------------------------------------------|
| IP Address  | IP address corresponding to the hardware address              |
| MAC Address | hardware address corresponding to the IP address              |
| Age (min)   | Age of the ARP learning, in minutes                           |
| Port        | Layer2 port associated with the ARP                           |
| Type        | ARP type, includes the Static, Dynamic, Trust, Local          |
| Interface   | Layer 3 interface associated with the IP addresses            |
| SubVLAN     | SubVLAN corresponding to the ARP entries                      |
| InnerVLAN   | InnerVLAN or CE-VLAN corresponding to the ARP entries         |
| Subvni      | Vni corresponding to the ARP entries, namely ID of the VxLAN. |

|          |                                                                                                                           |
|----------|---------------------------------------------------------------------------------------------------------------------------|
| Location | Local: ARP entries are generated or learned on the local device.<br>Remote: ARP entries are synced from a remote gateway. |
|----------|---------------------------------------------------------------------------------------------------------------------------|

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 2.27 show arp oob

Use this command to display the ARP cache table.

**show arp oob** [ *ip* [ *mask* ] | **static** | **complete** | **incomplete** | *mac-address* ]

| Parameter Description | Parameter          | Description                                              |
|-----------------------|--------------------|----------------------------------------------------------|
|                       | <i>ip</i>          | Displays ARP table entries of the specified IP address.  |
|                       | <i>mask</i>        | Displays ARP table entries within the IP subnet.         |
|                       | <b>static</b>      | Displays all static ARP table entries.                   |
|                       | <b>complete</b>    | Displays all analyzed ARP table entries.                 |
|                       | <b>incomplete</b>  | Displays all unanalyzed ARP table entries.               |
|                       | <i>mac-address</i> | Displays ARP table entries of the specified MAC address. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** This command is used to display the ARP cache table. The **complete** / **incomplete** key word represents analyzed / unanalyzed ARP table entries.

**Configuration Examples** The following example displays the outcome of the running the **show arp oob** command.

```
Ruijie# show arp oob
Total Numbers of Arp: 7
Protocol Address      Age (min)  Hardware      Type  Interface
Internet 192.168.195.68  0          0013.20a5.7a5f arpa  mgmt 0
Internet 192.168.195.67  0          001a.a0b5.378d arpa  mgmt 0
Internet 192.168.195.65  0          0018.8b7b.713e arpa  mgmt 0
Internet 192.168.195.64  0          0018.8b7b.9106 arpa  mgmt 0
Internet 192.168.195.63  0          001a.a0b5.3990 arpa  mgmt 0
Internet 192.168.195.62  0          001a.a0b5.0b25 arpa  mgmt 0
Internet 192.168.195.5   --         00d0.f822.33b1 arpa  mgmt 0
```

The following example displays the outcome of running the **show arp oob 192.168.195.68** command.

```
Ruijie# show arp oob 192.168.195.68
Protocol Address           Age(min)  Hardware           Type  Interface
Internet 192.168.195.68  1         0013.20a5.7a5f  arpa  mgmt 0
```

The following example displays the outcome of running the **show arp oob 192.168.195.0 255.255.255.0**.

```
Ruijie# show arp 192.168.195.0 255.255.255.0
Protocol Address           Age(min)  Hardware           Type  Interface
Internet 192.168.195.64  0         0018.8b7b.9106  arpa  mgmt 0
Internet 192.168.195.2   1         00d0.f8ff.f00e  arpa  mgmt 0
Internet 192.168.195.5   --        00d0.f822.33b1  arpa  mgmt 0
Internet 192.168.195.1   0         00d0.f8a6.5af7  arpa  mgmt 0
Internet 192.168.195.51  1         0018.8b82.8691  arpa  mgmt 0
```

The following example displays the outcome of running the **show arp oob 001a.a0b5.378d** command.

```
Ruijie# show arp 001a.a0b5.378d
Protocol Address           Age(min)  Hardware           Type  Interface
Internet 192.168.195.67  4         001a.a0b5.378d  arpa  mgmt 0
```

| Field     | Description                                                                                                                                                                                                                                                                        |
|-----------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Protocol  | Only "Internet" is available at present, which indicates the IP protocol.                                                                                                                                                                                                          |
| Address   | The IPv4 address.                                                                                                                                                                                                                                                                  |
| Age(min)  | The age of the table entry. For the local IP address, the field is displayed as '-'. For the static table entry, the field is displayed as <static>. For the dynamic table entry, the field indicates the time for which the table entry has been learned, in the unit of minutes. |
| Hardware  | 48-bit MAC address, written as a dotted triple of four-digit hexadecimal numbers.                                                                                                                                                                                                  |
| Type      | Only "arpa" is available at present.                                                                                                                                                                                                                                               |
| Interface | The L3 interface corresponding to the ARP table entry. The field is NULL for static ARP table entries for the IP address of the static ARP is not within any network segment directly connected with the device.                                                                   |

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform  
Description**

N/A

## 2.28 show arp packet statistics

Use this command to display the statistics of ARP packets.

**show arp packet statistics** [ *interface-name* ]

| Parameter          | Parameter             | Description                                                        |
|--------------------|-----------------------|--------------------------------------------------------------------|
| <b>Description</b> | <i>interface-name</i> | Displays the statistics of ARP packets on the specified interface. |

**Defaults** N/A.

**Command Mode** Privileged EXEC mode.

**Usage Guide** N/A.

**Configuration Examples** The following example displays the output information of the command.

```
Ruijie#show arp packet statistics
Interface          Received Requests  Received Replies  Received Others  Sent Requests  Sent Replies  Sent Others
Name              R
-----
GigabitEthernet 0/0  0      0      0      0      0
GigabitEthernet 0/1 143649 232    0      2      0
GigabitEthernet 0/2  0      0      0      0      0
GigabitEthernet 0/3  0      0      0      0      0
GigabitEthernet 0/4  0      0      0      0      0
GigabitEthernet 0/5  0      0      0      0      0
GigabitEthernet 0/6  0      0      0      0      0
Loopback 1        0      0      0      0      0
```

Description of fields:

| Field             | description                              |
|-------------------|------------------------------------------|
| Received Requests | Number of received ARP requests          |
| Received Replies  | Number of received ARP response messages |
| Received Others   | Number of other received ARP packets     |
| Sent Requests     | Number of sent ARP requests              |
| Sent Replies      | Number of sent ARP requests              |

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A.    | N/A.        |

**Platform Description** N/A

## 2.29 show arp timeout

Use this command to display the aging time of a dynamic ARP entry on the interface.

**show arp timeout**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A.      | N/A.        |

**Defaults** N/A.

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A.

**Configuration Examples** The following example displays the output of the **show arp timeout** command:

```
Ruijie# show arp timeout
Interface arp timeout(sec)
-----
VLAN 1 3600
```

The meaning of each field in the ARP cache table is described in Table 1.

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A.    | N/A.        |

**Platform Description** N/A

## 2.30 show ip arp

Use this command to display the Address Resolution Protocol (ARP) cache table.

**show ip arp [vrf vrf-name]**

| Parameter   | Parameter       | Description   |
|-------------|-----------------|---------------|
| Description | <i>vrf-name</i> | VRF instance. |

**Defaults** N/A.

**Command Mode** Privileged EXEC mode.

**Usage Guide** N/A.

**Configuration** The following example displays the output of **show ip arp**:

**Examples**

```
Ruijie# show ip arp
Protocol Address Age(min) Hardware Type Interface
Internet 192.168.7.233 23 0007.e9d9.0488 ARPA FastEthernet 0/0
Internet 192.168.7.112 10 0050.eb08.6617 ARPA FastEthernet 0/0
Internet 192.168.7.79 12 00d0.f808.3d5c ARPA FastEthernet 0/0
Internet 192.168.7.1 50 00d0.f84e.1c7f ARPA FastEthernet 0/0
Internet 192.168.7.215 36 00d0.f80d.1090 ARPA FastEthernet 0/0
Internet 192.168.7.127 0 0060.97bd.ebee ARPA FastEthernet 0/0
Internet 192.168.7.195 57 0060.97bd.ef2d ARPA FastEthernet 0/0
Internet 192.168.7.183 -- 00d0.f8fb.108b ARPA FastEthernet 0/0
```

The following example displays the output of **show ip arp vrf vpnv4**.

```
Ruijie#show ip arp vrf vpnv4
Protocol Address Age(min) Hardware Type Interface
Internet 11.1.1.1 0 78e3.b5b6.f4dc arpa GigabitEthernet
0/0
Internet 11.1.1.2 -- 1111.2222.1111 arpa GigabitEthernet
0/0
Total number of ARP entries: 2
```

Each field in the ARP cache table has the following meanings:

| Field     | Description                                                                                                                             |
|-----------|-----------------------------------------------------------------------------------------------------------------------------------------|
| Protocol  | Network address protocol, always Internet.                                                                                              |
| Address   | The IP address corresponding to the hardware address.                                                                                   |
| Age (min) | Age of the ARP cache record, in minutes; If it is not locally or statically configured, the value of the field is represented with "-". |
| Hardware  | Hardware address corresponding to the IP address                                                                                        |
| Type      | The type of hardware address. The value is ARPA for all Ethernet addresses.                                                             |
| Interface | Interface associated with the IP address.                                                                                               |

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A.    | N/A.        |

**Platform  
Description**

N/A

## 3 IPv6 Commands

### 3.1 clear ipv6 neighbors

Use this command to clear the dynamic IPv6 neighbors.

**clear ipv6 neighbors** [ **vrf** *vrf-name* ] [ **oob** ] [*interface-id*]

| Parameter   | Parameter           | Description                                                                              |
|-------------|---------------------|------------------------------------------------------------------------------------------|
| Description | <i>vrf-name</i>     | VRF name. All global IPv6 neighbors are cleared without specified VRF name by default.   |
|             | <b>oob</b>          | Clears the dynamic IPv6 neighbors discovered by neighbors on MGMT interface.             |
|             | <i>interface-id</i> | Interface name. Clear the dynamically learned IPv6 neighbors on the specified interface. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode.

**Usage Guide** This command does not clear all the dynamic neighbors on authentication VLAN. Note that the static neighbors will not be cleared.

**Configuration** The following example clears the dynamic IPv6 neighbors.

**Examples** Ruijie# clear ipv6 neighbors

The following example clears all dynamic neighbors on the MGMT port.

Ruijie# clear ipv6 neighbors oob

The following example clears all dynamic neighbors on the interface gigabitEthernet 0/1.

Ruijie# clear ipv6 neighbors gigabitEthernet 0/1

| Related Commands | Command             | Description                        |
|------------------|---------------------|------------------------------------|
|                  | ipv6 neighbor       | Configures the neighbor.           |
|                  | show ipv6 neighbors | Displays the neighbor information. |

**Platform Description** N/A

## 3.2 ipv6 address

Use this command to configure an IPv6 address for a network interface. Use the **no** form of this command to restore the default setting.

**ipv6 address** *ipv6-address/prefix-length*

**ipv6 address** *ipv6-prefix/prefix-length eui-64*

**ipv6 address** *prefix-name sub-bits/prefix-length [ eui-64 ]*

**no ipv6 address**

**no ipv6 address** *ipv6-address/prefix-length*

**no ipv6 address** *ipv6-prefix/prefix-length eui-64*

**no ipv6 address** *prefix-name sub-bits/prefix-length [ eui-64 ]*

| Parameter          | Parameter            | Description                                                                                                                                                                     |
|--------------------|----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b> | <i>ipv6-prefix</i>   | IPv6 address prefix in the format defined in RFC4291. The address shall be in hex; the fields in the address shall be separated by comma, and each field shall contain 16 bits. |
|                    | <i>ipv6-address</i>  | IPv6 address in the format defined in RFC4291. The address shall be in hex; the fields in the address shall be separated by comma, and each field shall contain 16 bits.        |
|                    | <i>prefix-length</i> | Length of the IPv6 prefix, the network address of the IPv6 address.<br>Note: The prefix length range of the IPv6 address of the interface of S86 is 0 to 64 or 128 to 128.      |
|                    | <i>prefix-name</i>   | The general prefix name. Use the specified general prefix to generate the interface address.                                                                                    |
|                    | <i>sub-bits</i>      | The value of the sub-prefix bit and the host bit generates the interface address combining with the general prefix. The value shall be in the format defined in the RFC4291.    |
|                    | <b>eui-64</b>        | The generated IPV6 address consists of the address prefix and the 64 bit interface ID                                                                                           |

**Defaults** N/A

**Command** Interface configuration mode

**Mode**

**Usage Guide** When an IPv6 interface is created and the link status is UP, the system will automatically generate a local IP address for the interface.

The IPv6 address could also be generated using the general prefix. That is, the IPv6 address consists of the general prefix and the sub-prefix and the host bit. The general prefix could be configured using the **ipv6 general-prefix** command or may be learned through the DHCPv6 agent PD (Prefix Discovery) function (please refer to the *DHCPv6 Configuration*). Use the *sub-bits/prefix-length* parameter of this command to configure the sub-prefix and the host bit.

If no deleted address is specified when using **no ipv6 address**, all the manually configured



addresses will be deleted.

The **no ipv6 address** *ipv6-prefix/prefix-length eui-64* command can be used to delete the addresses configured with **ipv6 address** *ipv6-prefix/prefix-length eui-64*.


**Configuration** The following example configures an IPv6 address for the interface GigabitEthernet 0/1.

**Examples**

```
Ruijie(config-if)# ipv6 address 2001:1::1/64
Ruijie(config-if)# no ipv6 address 2001:1::1/64
Ruijie(config-if)# ipv6 address 2002:1::1/64 eui-64
Ruijie(config-if)# no ipv6 address 2002:1::1/64 eui-64
```

The following example applies general prefix to configure an IPv6 address for the interface GigabitEthernet 0/1.

```
Ruijie(config-if-GigabitEthernet 0/1)# ipv6 address my-prefix
0:0:0:7272::72/64
```

 If the prefix 2001:1111:2222::/48 is configured under the general prefix name *my-prefix*, then the generated IPv6 address of the interface is 2001:1111:2222:7272::72/64.

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

### 3.3 ipv6 address autoconfig

Use this command to automatically configure an IPv6 stateless address for a network interface. Use the **no** form of this command to restore the default setting.

**ipv6 address autoconfig [ default ]**  
**no ipv6 address autoconfig**

| Parameter          | Parameter      | Description                                                                                                                                                                     |
|--------------------|----------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b> | <b>default</b> | (Optional) If this keyword is configured, a default routing is generated. Note that only one layer3 interface on the entire device is allowed to use the <b>default</b> keyword |

**Defaults** N/A

**Command Mode** Interface configuration mode

**Usage Guide** The stateless automatic address configuration is that when receiving the RA (Route Advertisement) message, the device could use the prefix information of the RA message to automatically generate the EUI-64 interface address.  
 If the RA message contains the flag of the “other configurations”, the interface will obtain these “other

configurations” through the DHCPv6. The “other configurations” usually means the IPv6 address of the DNS server, the IPv6 address of the NTP server, etc.

Use the **no ipv6 address autoconfig** command to delete the IPv6 address.

**Configuration Examples** The following example automatically configures an IPv6 stateless address for a network interface and generates a default route.

```
Ruijie(config-if-GigabitEthernet 0/1)# ipv6 address autoconfig default
```

The following example resotres the default setting.

```
Ruijie(config-if-GigabitEthernet 0/1)# no ipv6 address autoconfig
```

**Related Commands**

| Command                                                  | Description                                             |
|----------------------------------------------------------|---------------------------------------------------------|
| <b>ipv6 address ipv6-prefix/prefix-length [ eui-64 ]</b> | Configures the IPv6 address for the interface manually. |

**Platform Description** N/A

### 3.4 ipv6 icmp error-interval

Use this command to set the frequency with which ICMPv6-oversize error packets are sent. Use the **no** form of this command to restore the default setting.

```
ipv6 icmp error-interval too-big milliseconds [ bucket-size ]
```

```
no ipv6 icmp error-interval too-big milliseconds [ bucket-size ]
```

Use this command to set the frequency with which other ICMPv6 error packets are sent. Use the **no** form of this command to restore the default setting.

```
ipv6 icmp error-interval milliseconds [ bucket-size ]
```

```
no ipv6 icmp error-interval milliseconds [ bucket-size ]
```

**Parameter Description**

| Parameter           | Description                                                                                                                                                                                                         |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>milliseconds</i> | Sets the refresh interval of the token bucket, in the range from 0 to 2147483647 in the unit of seconds. Setting the value to 0 indicates that the frequency with which ICMPv6 error packets are sent is not fixed. |
| <i>bucket-size</i>  | Sets the number of tokens in the token bucket, in the range from 1 to 200.                                                                                                                                          |

**Defaults** The default *milliseconds* is 100 and *bucket-size* is 10.

**Command Mode** Global configuration mode

**Usage Guide** The token bucket algorithm is adopted to set the frequency with which ICMPv6 error packets are sent

so as to prevent Denial of Service (DoS) attack,  
 If the forwarded IPv6 packet is greater than the egress IPv6 MTU in size, the router discards the IPv6 packet and sends the ICMPv6-oversize error packet to the source IPv6 address. This kind of ICMPv6 error packet is used for IPv6 path MTU discovery. If there are too many ICMPv6 error packets, the ICMPv6-oversize error packet may not be sent, causing IPv6 path MTU discovery failure. Therefore, it is recommended to set the frequency of ICMPv6-oversize error packet and other ICMPv6 error packet respectively. Note that ICMPv6 redirect packet is not an ICMPv6 error packet and Ruijie sets the frequency of the ICMPv6 redirect packet the same as that of other ICMPv6 error packet.  
 For the timer is accurate to 10 milliseconds, it is recommended to set the refresh interval of the token bucket to an integer multiple of 10 milliseconds. If the refresh interval is not an integer multiple of 10 milliseconds, it is converted automatically. For example, the frequency of 1 per five milliseconds turns out to be 2 per 10 milliseconds; the frequency of 3 per 15 milliseconds is converted to 2 per 10 milliseconds.

**Configuration Examples** The following example sets the frequency with which ICMPv6-oversize error packets are sent to 100 per second.

```
Ruijie(config)# ipv6 icmp error-interval too-big 1000 100
```

The following example sets the frequency with which other ICMPv6 error packets are sent to 10 per second.

```
Ruijie(config)# ipv6 icmp error-interval 1000 10
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

### 3.5 ipv6 enable

Use this command to enable the IPv6 function on an interface. Use the **no** form of this command to restore the default setting.

**ipv6 enable**  
**no ipv6 enable**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** The IPv6 function of an interface can be enabled by configuring **ipv6 enable** or by configuring IPv6

address for the interface.

- i** If an IPv6 address is configured for the interface, the IPv6 function will be enabled automatically on the interface and cannot be disabled with **no ipv6 enable**.

**Configuration** The following example enables the IPv6 function on the interface GigabitEthernet 0/1.

**Examples**

```
Ruijie(config-if-GigabitEthernet 0/1)# ipv6 enable
```

| Related         | Command                    | Description                                       |
|-----------------|----------------------------|---------------------------------------------------|
| <b>Commands</b> | <b>show ipv6 interface</b> | Displays the related information of an interface. |

**Platform** N/A

**Description**

### 3.6 Ipv6 gateway

Use this command to configure the default gateway IPv6 address on the management port.

**ipv6 gateway *ipv6-address***

| Parameter          | Parameter           | Description                                  |
|--------------------|---------------------|----------------------------------------------|
| <b>Description</b> | <i>ipv6-address</i> | Configures the default gateway IPv6 address. |

**Defaults** N/A

**Command Mode** Interface configuration mode

**Usage Guide** The management port is MGMT in type and 0 in ID.

**Configuration** The following example configures the default gateway IPv6 address on the management port.

**Examples**

```
Ruijie(config)# interface mgmt 0
Ruijie(config-int)# ipv6 gateway 2001:1::1
Ruijie(config-int)# exit
Ruijie(config)#
```

| Related         | Command | Description |
|-----------------|---------|-------------|
| <b>Commands</b> | N/A     | N/A         |

**Platform** N/A

**Description**

### 3.7 ipv6 general-prefix

Use this command to configure the IPv6 general prefix in the global configuration mode.

**ipv6 general-prefix** *prefix-name* *ipv6-prefix/prefix-length*

**no ipv6 general-prefix** *prefix-name* *ipv6-prefix/prefix-length*

| Parameter   | Parameter            | Description                                                                             |
|-------------|----------------------|-----------------------------------------------------------------------------------------|
| Description | <i>prefix-name</i>   | The general prefix name.                                                                |
|             | <i>pv6-prefix</i>    | The network prefix value of the general-prefix following the format defined in RFC4291. |
|             | <i>prefix-length</i> | The length of the general prefix.                                                       |

**Defaults** N/A

**Command Mode** Global configuration mode.

**Usage Guide** It is convenient to number the network by using the general prefix, which defines a prefix so that many longer specified prefixes could refer to it. These specified prefixes are updated whenever the general prefix changes. If the network number changes, just modify the general prefix.

A general prefix could contain multiple prefixes.

These longer specified prefixes are usually used for the Ipv6 address configuration on the interface.

**Configuration** The following example configures manually a general prefix as my-prefix.

**Examples** Ruijie(config)# ipv6 general-prefix my-prefix 2001:1111:2222::/48

| Related Commands | Command                                                                 | Description                                                |
|------------------|-------------------------------------------------------------------------|------------------------------------------------------------|
|                  | <b>ipv6 address</b> <i>prefix-name</i><br><i>sub-bits/prefix-length</i> | Configures the interface address using the general prefix. |
|                  | <b>show ipv6 general-prefix</b>                                         | Displays the general prefix.                               |

**Platform** N/A

**Description**

### 3.8 ipv6 hop-limit

Use this command to configure the default hopcount to send unicast messages in the global configuration mode.

**ipv6 hop-limit** *value*

**no ipv6 hop-limit**

| Parameter   | Parameter    | Description                     |
|-------------|--------------|---------------------------------|
| Description | <i>value</i> | Hopcount ranging from 1 to 255. |

| <b>Defaults</b>               | The default is 64.                                                                                                                                  |         |             |     |     |
|-------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|---------|-------------|-----|-----|
| <b>Command Mode</b>           | Global configuration mode.                                                                                                                          |         |             |     |     |
| <b>Usage Guide</b>            | This command takes effect for the unicast messages only, not for multicast messages.                                                                |         |             |     |     |
| <b>Configuration Examples</b> | The following example sets the default hopcount to 100.                                                                                             |         |             |     |     |
| <b>Examples</b>               | <pre>Ruijie(config)# ipv6 hop-limit 100</pre>                                                                                                       |         |             |     |     |
| <b>Related Commands</b>       | <table border="1"> <thead> <tr> <th>Command</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>N/A</td> <td>N/A</td> </tr> </tbody> </table> | Command | Description | N/A | N/A |
| Command                       | Description                                                                                                                                         |         |             |     |     |
| N/A                           | N/A                                                                                                                                                 |         |             |     |     |
| <b>Platform Description</b>   | N/A                                                                                                                                                 |         |             |     |     |

### 3.9 ipv6 mtu

Use this command to configure the MTU of IPv6 packets. Use the **no** form of this command to restore the default setting.

**ipv6 mtu** *bytes*  
**no ipv6 mtu**

| <b>Parameter Description</b>  | <table border="1"> <thead> <tr> <th>Parameter</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td><i>bytes</i></td> <td>MTU of IPv6 packets, in bytes. The value ranges from 1,280 to 1,500.</td> </tr> </tbody> </table> | Parameter | Description | <i>bytes</i> | MTU of IPv6 packets, in bytes. The value ranges from 1,280 to 1,500. |
|-------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------|-------------|--------------|----------------------------------------------------------------------|
| Parameter                     | Description                                                                                                                                                                                                                     |           |             |              |                                                                      |
| <i>bytes</i>                  | MTU of IPv6 packets, in bytes. The value ranges from 1,280 to 1,500.                                                                                                                                                            |           |             |              |                                                                      |
| <b>Defaults</b>               | The default configuration is the same as the configuration of the <b>mtu</b> command.                                                                                                                                           |           |             |              |                                                                      |
| <b>Command Mode</b>           | Interface configuration mode                                                                                                                                                                                                    |           |             |              |                                                                      |
| <b>Usage Guide</b>            | If the size of an IPv6 packet exceeds the IPv6 MTU, the RGOS software segments the packet. For all devices in the same physical network segment, the IPv6 MTU of the interconnected interface must be the same.                 |           |             |              |                                                                      |
| <b>Configuration Examples</b> | The following example sets the IPv6 MTU of the FastEthernet 0/1 interface to 1400 bytes.                                                                                                                                        |           |             |              |                                                                      |
| <b>Examples</b>               | <pre>Ruijie(config)# interface fastEthernet 0/1 Ruijie(config-if)# ipv6 mtu 1400</pre>                                                                                                                                          |           |             |              |                                                                      |
| <b>Related Commands</b>       | <table border="1"> <thead> <tr> <th>Command</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td><b>mtu</b></td> <td>Sets the MTU of an interface.</td> </tr> </tbody> </table>                                            | Command   | Description | <b>mtu</b>   | Sets the MTU of an interface.                                        |
| Command                       | Description                                                                                                                                                                                                                     |           |             |              |                                                                      |
| <b>mtu</b>                    | Sets the MTU of an interface.                                                                                                                                                                                                   |           |             |              |                                                                      |

**Platform** This command cannot be used on Layer 2 devices.

**Description**

### 3.10 ipv6 nd cache interface-limit

Use this command to set the maximum number of neighbors learned on the interface. Use the **no** form of this command to restore the default setting.

**ipv6 nd cache interface-limit** *value*

**no ipv6 nd cache interface-limit**

| Parameter          | Parameter    | Description                                                                                                                                                                                                  |
|--------------------|--------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b> | <i>value</i> | Sets the maximum number of neighbors learned on the interface, including the static and dynamic neighbors, in the range from 0 to the number supported by the device. 0 indicates the number is not limited. |

**Defaults** The default is 0.

**Command** Interface configuration mode

**Mode**

**Usage Guide** This function can prevent neighbor entries generated by malicious neighbor attacks from consuming memory. *limit* must be no smaller than the number of neighbors learned on the interface. Otherwise, the configuration does not take effect.

**Configuration** The following example sets the number of neighbors learned on the interface to 100.

**Examples**

```
Ruijie(config)# interface GigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)# ipv6 nd cache interface-limit 100
```

| Related         | Command | Description |
|-----------------|---------|-------------|
| <b>Commands</b> | N/A     | N/A         |

**Platform** N/A

**Description**

### 3.11 ipv6 nd dad attempts

Use this command to set the number of the NS packets to be continuously sent for IPv6 address collision check on the interface. Use the **no** form of this command to restore it to the default setting.

**ipv6 nd dad attempts** *value*

**no ipv6 nd dad attempts** *value*

|                               |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |                                                                                                                                                      |
|-------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Parameter</b>              | <b>Parameter</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | <b>Description</b>                                                                                                                                   |
| <b>Description</b>            | <i>value</i>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | Number of the NS packets. If it is set to 0, it indicates that the IPv6 address collision check is disabled on the interface. The range is 0 to 600. |
| <b>Defaults</b>               | The default is 1.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |                                                                                                                                                      |
| <b>Command Mode</b>           | Interface configuration mode.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |                                                                                                                                                      |
| <b>Usage Guide</b>            | When the interface is configured with a new IPv6 address, the address collision shall be checked before the address is assigned to the interface, and the address shall be in the "tentative" status. After the address collision check is completed, if no collision is detected, the address can be used normally; if collision is detected and the interface ID of the address is an EUI-64 ID, it indicates that the link-layer address is repeated, and the system will automatically shut down the interface (that is, to prohibit IPv6 operations on the interface). In this case, you shall modify and configure a new address manually, and restart address collision check for the <b>down/up</b> interface. Whenever the state of an interface changes from <b>down</b> to <b>up</b> , the address collision check function of the interface will be enabled. |                                                                                                                                                      |
| <b>Configuration Examples</b> | The following example sets the number of the NS packets.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |                                                                                                                                                      |
| <b>Examples</b>               | <pre>Ruijie(config-if-GigabitEthernet 0/1)# ipv6 nd dad attempts 3</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |                                                                                                                                                      |
| <b>Related Commands</b>       | <b>Command</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | <b>Description</b>                                                                                                                                   |
|                               | <b>show ipv6 interface</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | Displays the interface information.                                                                                                                  |
| <b>Platform Description</b>   | N/A                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |                                                                                                                                                      |

### 3.12 Ipv6 nd dad retry

Use this command to set the interval for address conflict detection. Use the **no** form of this command to restore the default setting.

**ipv6 nd dad retry** *value*

**no ipv6 nd dad retry**

|                    |                           |                                                                                                                                             |
|--------------------|---------------------------|---------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Parameter</b>   | <b>Parameter</b>          | <b>Description</b>                                                                                                                          |
| <b>Description</b> | <i>value</i>              | Sets the interval for address conflict detection, 60 seconds by default. Setting <i>value</i> to 0 indicates that the function is disabled. |
| <b>Defaults</b>    | N/A                       |                                                                                                                                             |
| <b>Command</b>     | Global configuration mode |                                                                                                                                             |



**Mode**

**Usage Guide** Before configuring a new IPv6 address for an interface, enable address conflict detection on the interface. If a conflict address is detected, the device does not receive the IPv6 packet destined to the conflict address. This command is used to perform conflict detection again when the interval expires. If there is no conflict, the address can be used.

**Configuration** The following example sets the interval for address conflict detection to 10s.

**Examples**

```
Ruijie(config)# ipv6 nd dad retry 10
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

### 3.13 ipv6 nd managed-config-flag

Use this command to set the “managed address configuration” flag bit of the RA message. Use the **no** form of this command to restore the default setting.

**ipv6 nd managed-config-flag**

**no ipv6 nd managed-config-flag**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command**

**Mode** Interface configuration mode.

**Usage Guide** This flag determines whether the host that receives the RA message obtains an IP address through stateful auto configuration. If the flag is set, the host obtains an IP address through stateful auto configuration, otherwise it does not be used.

**Configuration** The following example set the “managed address configuration” flag bit of the RA message.

**Examples**

```
Ruijie(config-if)# ipv6 nd managed-config-flag
```

| Related Commands | Command                          | Description                                                                                        |
|------------------|----------------------------------|----------------------------------------------------------------------------------------------------|
|                  | <b>show ipv6 interface</b>       | Displays the interface information.                                                                |
|                  | <b>ipv6 nd other-config-flag</b> | Sets the flag for obtaining all information except IP address through stateful auto configuration. |

**Platform** N/A

**Description**

### 3.14 ipv4 nd max-opt

Use this command to set the maximum number of ND options. Use the **no** form of this command to restore the default setting.

**ipv4 nd max-opt** *value*

**no ipv4 nd max-opt**

| Parameter          | Parameter    | Description                                                        |
|--------------------|--------------|--------------------------------------------------------------------|
| <b>Description</b> | <i>value</i> | Sets the maximum number of ND options, in the range from 1 to 100. |

**Defaults** The default is 10.

**Command**

**Mode** Global configuration mode

**Usage Guide** This command is used to set the maximum number of ND options, such as source link layer address option, MTU option, redirection option and prefix option.

**Configuration** The following example sets the maximum of ND options to 20.

**Examples**

```
Ruijie(config)# ipv4 nd max-opt 20
```

| Related         | Command | Description |
|-----------------|---------|-------------|
| <b>Commands</b> | N/A     | N/A         |

**Platform** N/A

**Description**

### 3.15 ipv6 nd ns-interval

Use this command to set the interval for the interface to retransmitting NS (Neighbor Solicitation). Use the **no** form of this command to restore the default setting.

**ipv6 nd ns-interval** *milliseconds*

**no ipv6 nd ns-interval**

| Parameter          | Parameter           | Description                                                                   |
|--------------------|---------------------|-------------------------------------------------------------------------------|
| <b>Description</b> | <i>milliseconds</i> | Interval for retransmitting NS in the range of 1000 to 429467295 milliseconds |

**Defaults** The default value in RA is 0 (unspecified); the interval for retransmitting NS is 1,000 milliseconds (1 second).

**Command** Interface configuration mode.  
**mode**

**Usage Guide** The configured value will be advertised through RA and will be used by the device itself. It is not recommended to set a too short interval.

**Configuration** The following example sets the interval to 2,000 milliseconds, namely 2 seconds.

**Examples**

```
Ruijie(config-if)# ipv6 nd ns-interval 2000
```

| Related         | Command                    | Description                         |
|-----------------|----------------------------|-------------------------------------|
| <b>Commands</b> | <b>show ipv6 interface</b> | Displays the interface information. |

**Platform** N/A

**Description**

### 3.16 ipv6 nd other-config-flag

Use this command to set “other stateful configuration” flag bit of the RA message. Use the **no** form of this command to delete the flag bit.

**ipv6 nd other-config-flag**

**no ipv6 nd other-config-flag**

| Parameter          | Parameter | Description |
|--------------------|-----------|-------------|
| <b>Description</b> | N/A       | N/A         |

**Defaults** The flag bit is not set by default.

**Command** Interface configuration mode.  
**mode**

**Usage Guide** With this flag bit set, the flag bit of the RA message sent by the device is set. After receiving this flag bit, the host uses the dhcpv6 to acquire the information excluding the IPv6 address for the purpose of automatic configuration. When the **managed address configuration** is set, the default **other stateful configuration** is also set

**Configuration** The following example sets “other stateful configuration” flag bit of the RA message.

**Examples**

```
uijie(config-if-GigabitEthernet 0/1)# ipv6 nd other-config-flag
```

| Related         | Command                    | Description                         |
|-----------------|----------------------------|-------------------------------------|
| <b>Commands</b> | <b>show ipv6 interface</b> | Displays the interface information. |

**Platform** N/A

## Description

## 3.17 ipv6 nd prefix

Use this command to configure the address prefix included in the RA. Use the **no** form of this command to delete the set prefix or restore the default setting.

```

ipv6 nd prefix { ipv6-prefix/prefix-length | default } [ [ valid-lifetime preferred-lifetime ] ] [ at valid-date preferred-date ] [ [ infinite | preferred-lifetime ] ] [ no-advertise ] [ [ off-link ] [ no-autoconfig ] ]
no ipv6 nd prefix { ipv6-prefix/prefix-length | default }

```

| Parameter   | Parameter                           | Description                                                                                                                                                                                                                                                            |
|-------------|-------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Description | <i>ipv6-prefix</i>                  | IPv6 network ID following the format defined in RFC4291                                                                                                                                                                                                                |
|             | <i>prefix-length</i>                | Length of the IPv6 prefix. “/” shall be added in front of the prefix                                                                                                                                                                                                   |
|             | <i>valid-lifetime</i>               | Valid lifetime of the RA prefix received by the host                                                                                                                                                                                                                   |
|             | <i>preferred-lifetime</i>           | Preferred lifetime of the RA prefix received by the host                                                                                                                                                                                                               |
|             | <i>at valid-date preferred-date</i> | Sets the dead line for the valid lifetime and that of the preferred lifetime, in day, month, year, hour, minute.                                                                                                                                                       |
|             | <b>infinite</b>                     | Indicates that the prefix is always valid.                                                                                                                                                                                                                             |
|             | <b>default</b>                      | Sets the default prefix.                                                                                                                                                                                                                                               |
|             | <b>no-advertise</b>                 | The prefix will not be advertised by the device.                                                                                                                                                                                                                       |
|             | <b>off-link</b>                     | When the host sends an IPv6 packet, if the prefix of the destination address matches the set prefix, it is considered that the destination is on-link and is directly reachable. If this option is set, it indicates that the prefix is not used for on-link judgment. |
|             | <b>no-autoconfig</b>                | Indicates that the RA prefix received by the host cannot be used for auto address configuration.                                                                                                                                                                       |

**Defaults** By default, the advertised prefix is the one set with **ipv6 address** on the interface. The default parameters of the prefix configured in the RA are as follows:

*valid-lifetime*: 2592000s (30 days)

*preferred-lifetime*: 604800s (7 days),

The prefix is advertised and is used for on-link judgment and auto address configuration.

**Command** Interface configuration mode.

**Mode**

**Usage Guide** This command can be used to configure the parameters of each prefix, including whether to advertise the prefix. By default, the prefix advertised in RA is the one set with **ipv6 address** on the interface. To add other prefixes, use this command.

**ipv6 nd prefix default**

Set the default parameters to be used by the interface. If no parameter is specified for an added prefix, the parameters set with **ipv6 nd prefix default** will be used. Note that after a parameter is specified for the prefix, the default configuration will not be used. That is to say, the configuration of

the prefix cannot be modified with **ipv6 nd prefix default**; only the prefix that uses all the default configurations can be modified with this command.

**at** *valid-date preferred-date*

The valid lifetime of a prefix can be specified in two ways. One way is to specify a fixed time for each prefix in the RA; the other way is to specify the end time (in this mode, the valid lifetime of the prefix sent in RA will be gradually reduced until the end time is 0).

**Configuration** The following example adds a prefix for SVI 1.

**Examples**

```
Ruijie(config)# interface vlan 1
Ruijie(config-if)# ipv6 nd prefix 2001::/64 infinite 2592000
```

The following example sets the default prefix parameters for SVI 1 (they cannot be used for auto address configuration):

```
Ruijie(config)# interface vlan 1
Ruijie(config-if)# ipv6 prefix default no-autoconfig
```

If no parameter is specified, the default parameters will be used, and the prefix cannot be used for auto address configuration.

| Related  | Command             | Description                                  |
|----------|---------------------|----------------------------------------------|
| Commands | show ipv6 interface | Displays the RA information of an interface. |

**Platform** N/A  
**Description**

### 3.18 ipv6 nd ra-hoplimit

Use this command to set the hopcount of the RA message. Use the **no** form of this command to restore the default setting.

**ipv6 nd ra-hoplimit** *value*  
**no ipv6 nd ra-hoplimit**

| Parameter   | Parameter    | Description |
|-------------|--------------|-------------|
| Description | <i>value</i> | Hopcount    |

**Defaults** The default is 64.

**Command Mode** Interface configuration mode.

**Usage Guide** This command is used to set the hopcount of the RA message.

**Configuration** The following example sets the hopcount to 110.

**Examples**

```
Ruijie(config-if-GigabitEthernet 0/1)# ipv6 nd ra-hoplimit 110
```

| Related Commands | Command                    | Description                                  |
|------------------|----------------------------|----------------------------------------------|
|                  | <b>show ipv6 interface</b> | Displays the interface information.          |
|                  | <b>ipv6 nd ra-lifetime</b> | Sets the lifetime of the device.             |
|                  | <b>ipv6 nd ra-interval</b> | Sets the interval of sending the RA message. |
|                  | <b>ipv6 nd ra-mtu</b>      | Sets the MTU of the RA message.              |

**Platform** N/A

**Description**

### 3.19 ipv6 nd ra-interval

Use this command to set the interval of sending the RA. Use the **no** form of this command to restore the default setting.

**ipv6 nd ra-interval** { *seconds* | **min-max** *min\_value* *max\_value* }

**no ipv6 nd ra-interval**

| Parameter Description | Parameter        | Description                                                    |
|-----------------------|------------------|----------------------------------------------------------------|
|                       | <i>seconds</i>   | Interval of sending the RA message in seconds, 3-1800s.        |
|                       | <b>min-max</b>   | Maximum and minimum interval sending the RA message in seconds |
|                       | <i>min_value</i> | Minimum interval sending the RA message in seconds             |
|                       | <i>max_value</i> | Maximum interval sending the RA message in seconds             |

**Defaults** 200s. The actual interval of sending the RA message will be fluctuated 20% based on 200s.

**Command Mode** Interface configuration mode.

**Usage Guide** If the device serves as the default device, the set interval shall not be longer than the lifetime of the device. Besides, to ensure other devices along the link occupies network bandwidth while sending the RA message, the actual interval for sending the RA message will be fluctuated 20% based on the set value.

If the key word **min-max** is specified, the actual interval for sending the packet will be chosen between the range of minimum value and maximum value.

**Configuration** The following example sets the interval to 110 seconds.

**Examples**

```
Ruijie(config-if-GigabitEthernet 0/1)# ipv6 nd ra-interval 110
```

The following example sets the interval to between 110 and 120 seconds.

```
Ruijie(config-if-GigabitEthernet 0/1)# ipv6 nd ra-interval min-max 110 120
```

| Related Commands | Command                    | Description                          |
|------------------|----------------------------|--------------------------------------|
|                  | <b>show ipv6 interface</b> | Displays the interface information.  |
|                  | <b>ipv6 nd ra-lifetime</b> | Sets the lifetime of the device.     |
|                  | <b>ipv6 nd ra-hoplimit</b> | Sets the hopcount of the RA message. |
|                  | <b>ipv6 nd ra-mtu</b>      | Sets the MTU of the RA message.      |

**Platform** N/A  
**Description**

### 3.20 ipv6 nd ra-lifetime

Use this command to set the device lifetime of the RA sent on the interface. Use the **no** form of this command to restore the default setting.

**ipv6 nd ra-lifetime** *seconds*

**no ipv6 nd ra-lifetime**

| Parameter Description | Parameter      | Description                                                                                           |
|-----------------------|----------------|-------------------------------------------------------------------------------------------------------|
|                       | <i>seconds</i> | Default life time of the device on the interface, in the range from 0 to 9000 in the unit of seconds. |

**Defaults** The default is 1,800.

**Command Mode** Interface configuration mode.

**Usage Guide** The router lifetime field is available in each RA. It specifies the time during which the hosts along the link of the interface can select the device as the default device. If the value is set to 0, the device will not serve as the default device any longer. If it is not set to 0, it shall be larger than or equal to the interval of sending the RA (ra-interval)

**Configuration Examples** The following example sets the device lifetime to 2,000 seconds.

```
Ruijie(config-if-GigabitEthernet 0/1)# ipv6 nd ra-lifetime 2000
```

| Related Commands | Command                    | Description                          |
|------------------|----------------------------|--------------------------------------|
|                  | <b>show ipv6 interface</b> | Displays the interface information.  |
|                  | <b>ipv6 nd ra-interval</b> | Sets the interval of sending the RA. |
|                  | <b>ipv6 nd ra-hoplimit</b> | Sets the hopcount of the RA.         |
|                  | <b>ipv6 nd ra-mtu</b>      | Sets the MTU of the RA.              |

**Platform** N/A  
**Description**

### 3.21 ipv6 nd ra-mtu

Use this command to set the MTU of the RA message. Use the **no** form of this command to restore the default setting.

**ipv6 nd ra-mtu** *value*

**no ipv6 nd ra-mtu**

| Parameter   | Parameter    | Description                                   |
|-------------|--------------|-----------------------------------------------|
| Description | <i>value</i> | MTU value, in the range from 0 to 4294967295. |

**Defaults** IPv6 MTU value of the network interface.

**Command Mode** Interface configuration mode.

**Usage Guide** If it is specified as 0, the RA will not have the MTU option

**Configuration Examples** The following example sets the MTU to 1,400 bytes.

```
Ruijie(config -if)# ipv6 nd ra-mtu 1400
```

| Related Commands | Command                    | Description                                  |
|------------------|----------------------------|----------------------------------------------|
|                  | <b>show ipv6 interface</b> | Displays the interface information.          |
|                  | <b>ipv6 nd ra-lifetime</b> | Sets the lifetime of the device.             |
|                  | <b>ipv6 nd ra-interval</b> | Sets the interval of sending the RA message. |
|                  | <b>ipv6 nd ra-hoplimit</b> | Sets the hopcount of the RA message.         |

**Platform** N/A

**Description**

### 3.22 ipv6 nd reachable-time

Use this command to set the reachable time after the interface checks the reachability of the neighbor dynamically learned through NDP. Use the **no** form of this command to restore the default setting.

**ipv6 nd reachable-time** *milliseconds*

**no ipv6 nd reachable-time**

| Parameter   | Parameter           | Description                                                                                   |
|-------------|---------------------|-----------------------------------------------------------------------------------------------|
| Description | <i>milliseconds</i> | Reachable time for the neighbor in the range from 0 to 3,600,000 in the unit of milliseconds. |

**Defaults** The default value in RA is 0 (unspecified); the reachable time for the neighbor is 30,000 milliseconds (30 seconds) when the device discovers the neighbor.



**Command** Interface configuration mode.

**Mode**

**Usage Guide** The device checks the unreachable neighbor through the set time. A shorter time means that the device can check the neighbor failure more quickly, but more network bandwidth and device resource will be occupied. Therefore, it is not recommended to set a too short reachable time.

The configured value will be advertised through RA and will be used by the device itself. If the value is set to 0, it indicates that the time is not specified, that is, the default value is used.

**Configuration** The following example sets the reachable time to 1,000,000 milliseconds, namely 1,000 seconds.

**Examples**

```
Ruijie(config-if-GigabitEthernet 0/1)# ipv6 nd reachable-time 1000000
```

| Related  | Command             | Description                         |
|----------|---------------------|-------------------------------------|
| Commands | show ipv6 interface | Displays the interface information. |

**Platform** N/A

**Description**

### 3.23 ipv6 nd resolve vlan

Use this command to enable active sending of NS resolution requests to a specific sub VLAN of a super VLAN. Use the no form of this command to disable the active sending of NS resolution requests to a specific sub VLAN of a super VLAN. Use the default form of this command to restore the default settings.

ipv6 nd resolve vlan {*vlan-list* | none}

no ipv6 nd resolve vlan {*vlan-list* | none}

default ipv6 nd resolve vlan

| Parameter   | Parameter        | Description                                                                                                |
|-------------|------------------|------------------------------------------------------------------------------------------------------------|
| Description | <i>vlan-list</i> | Sets the list of sub VLANs in a super VLAN, where NS resolution requests are sent only to these sub VLANs. |
|             | none             | Specifies that no NS resolution request is sent to any sub VLAN of a super VLAN.                           |

**Defaults** The function is disabled by default.

**Command Mode** Global configuration mode

**Default Level** 2

**Usage Guide** If many sub VLANs exist in a super VLAN, when the device sends NS resolution requests to learn ND entries of the peer, the NS resolution requests are sent to the entire super VLAN by default. In this case, too many sub VLANs may cause a great number of packet replications, and therefore affect device performance.

Most STAs (such as PCs and servers) request information about ND neighbors from the gateway before accessing the network. Therefore, it is unnecessary to actively broadcast NS resolution requests to the sub VLANs where these STAs reside. For dumb terminals that do not actively send NA advertisements, run the `ipv6 nd resolve vlan vlan-list` command to resolve and send ND entries to VLANs in the specified VLAN list.

**!** After the `ipv6 ns resolve vlan vlan-list` command is configured, NS resolution requests are sent only to VLANs in the VLAN list of a super VLAN. It should be particularly noted that if authentication-free VLANs are configured but not included in the VLAN list specified in the `ipv6 nd resolve vlan` command, NS resolution requests are not broadcast to the authentication-free VLANs.

**Configuration Examples** The following example enables the device to provide active NS resolution for VLANs 10–20 and VLANs 25–30.

```
Ruijie(config)# ipv6 nd resolve vlan 10-20, 25-30
```

The following example removes active NS resolution of VLANs 10–20.

```
Ruijie(config)# no ipv6 nd resolve vlan 10-20
```

The following example configures the device not to provide active NS resolution for any sub VLAN of a super VLAN.

```
Ruijie(config)# ipv6 nd resolve vlan none
```

**Verification** Run the `show running-config` command to display configurations.

### 3.24 ipv6 nd state-time

Use this command to set the period for the neighbor to maintain the state. Use the **no** form of this command to restore the default setting.

**ipv6 nd state-time *seconds***

**no ipv6 nd state-time**

| Parameter   | Parameter      | Description                                                                                                  |
|-------------|----------------|--------------------------------------------------------------------------------------------------------------|
| Description | <i>Seconds</i> | Sets the period for the neighbor to maintain the state, in the range from 0 to 86400 in the unit of seconds. |

**Defaults** The default is 3600.

**Command Mode** Global configuration mode

**Usage Guide** This command is used to set the period for the neighbor to maintain the state. After the period expires, neighbor unreachability detection is performed. The shorter the period, the faster the neighbor is found unreachable. On the other hand, more network bandwidth and device resources are consumed. Therefore, it is recommended to set a value not too small.

**Configuration** The following example sets the period to 600 seconds for the neighbor to maintain the state.

**Examples** `Ruijie(config)# ipv6 nd stale-time 600`

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

### 3.25 ipv6 nd suppress-auth-vlan-ns

Use this command to disable the SVI interface from sending the NS packet to the authentication VLAN. Use the **no** form of this command to disable this function.

**ipv6 nd suppress-auth-vlan-ns**

**no ipv6 nd suppress-auth-vlan-ns**

| Parameter          | Parameter | Description |
|--------------------|-----------|-------------|
| <b>Description</b> | N/A       | N/A         |

**Defaults** This function is enabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** This command is supported on the SVI interface in gateway authentication mode.

**Configuration Examples** The following example enables VLAN 2 to send the NS packet to the authentication VLAN.

**Examples** `Ruijie(config-if-VLAN 2)# no ipv6 nd suppress-auth-vlan-ns`

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

### 3.26 ipv6 nd suppress-ra

Use this command to disable the interface from sending the RA message. Use the **no** form of this command to enable the function.

**ipv6 nd suppress-ra**

**no ipv6 nd suppress-ra**

| Parameter          | Parameter | Description |
|--------------------|-----------|-------------|
| <b>Description</b> | N/A       | N/A         |

**Defaults** The **ipv6 nd suppress-ra** command is enabled by default.

**Command** Interface configuration mode.

**Mode**

**Usage Guide** This command suppresses the sending of the RA message on an interface.

**Configuration** The following example disables the interface from sending the RA message.

**Examples**

```
Ruijie(config-if-GigabitEthernet 0/1)# ipv6 nd suppress-ra
```

| Related  | Command                    | Description                         |
|----------|----------------------------|-------------------------------------|
| Commands | <b>show ipv6 interface</b> | Displays the interface information. |

**Platform** N/A

**Description**

### 3.27 ipv6 nd unresolved

Use this command to set the maximum number of the unresolved neighbor table entries. Use the **no** form of this command to restore the default setting.

**ipv6 nd unresolved** *number*

**no ipv6 nd unresolved**

| Parameter   | Parameter     | Description                                                                                                                               |
|-------------|---------------|-------------------------------------------------------------------------------------------------------------------------------------------|
| Description | <i>number</i> | Sets the maximum number of the unresolved neighbor table entries, in the range from 1 to the neighbor table size supported by the device. |

**Defaults** The default is 0. (The maximum number is the neighbor table size supported by the device)

**Command** Global configuration mode

**Mode**

**Usage Guide** This command is used to prevent unresolved ND table entries generated by malicious scan attacks from consuming table entry resources,

**Configuration** The following example sets the maximum number of the unresolved neighbor table entries to 200.

**Examples**

```
Ruijie(config)# ipv6 nd unresolved 200
```

| Related  | Command | Description |
|----------|---------|-------------|
| Commands | N/A     | N/A         |

**Platform** N/A

**Description**

## 3.28 ipv6 neighbor

Use this command to configure a static neighbor. Use the **no** form of this command to delete a static neighbor.

**ipv6 neighbor** *ipv6-address interface-id hardware-address*

**no ipv6 neighbor** *ipv6-address interface-id*

| Parameter          | Parameter               | Description                                                                                                  |
|--------------------|-------------------------|--------------------------------------------------------------------------------------------------------------|
| <b>Description</b> | <i>ipv6-address</i>     | The neighbor IPv6 address, in the form as defined in RFC4291.                                                |
|                    | <i>interface-id</i>     | Specifies the network interface where the neighbor is (including Router Port, L3 AP port and SVI interface). |
|                    | <i>hardware-address</i> | The 48-bit MAC address, a dotted triple of four-digit hexadecimal numbers.                                   |

**Defaults** No static neighbor is configured by default.

**Command** Global configuration mode

**Mode**

**Usage Guide** This command can only be configured on the interface enabled with IPv6 protocol, similar to the ARP command.

If the neighbor to be configured has been learned through Neighbor Discovery Protocol (NDP) and stored in the NDP neighbor table, the dynamic neighbor turns to be static. If the static neighbor is valid, it is always reachable. An invalid static neighbor refers to the neighbor whose IPv6 address is not valid (not in the IPv6 network segment configured for the interface or interface address conflict). The packet is not forwarded to the MAC address as specified by the invalid static neighbor. The invalid static neighbor is in inactive state. Use the `show ipv6 neighbor static` command to display the state of the static neighbor.

Use the **clear ipv6 neighbors** command to clear all neighbors learned dynamically through NDP.

**Configuration** The following example configures a static neighbor on SVI 1.

**Examples**

```
Ruijie(config)# ipv6 neighbor 2001::1 vlan 1 00d0.f811.1111
```

| Related         | Command | Description |
|-----------------|---------|-------------|
| <b>Commands</b> | N/A     | N/A         |

**Platform** N/A

**Description**

### 3.29 ipv6 ns-linklocal-src

Use this command to set the local address of the link as the source IP address to send neighbor requests. Use the **no** form of this command to use the global IP address w as the source address to send neighbor requests.

**ipv6 ns-linklocal-src**

**no ipv6 ns-linklocal-src**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** The local address of the link is always used as the source address to send neighbor requests.

**Command Mode** Global configuration mode.

**Usage Guide** N/A

**Configuration Examples** The following example sets the local address of the link as the source IP address to send neighbor requests.

```
Ruijie(config)# no ipv6 ns-linklocal-src
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

### 3.30 ipv6 redirects

Use this command to control whether to send ICMPv6 redirect message when the switch receives and forwards an IPv6 packet through an interface. Use the **no** form of this command to restore the default setting.

**ipv6 redirects**

**no ipv6 redirects**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** This function is enabled by default.

**Command Mode** Interface configuration mode.

**Usage Guide** The transmission rate of any ICMPv6 error message is limited. By default, it is 10pps.

**Configuration** The following example enables ICMPv6 redirection on interface GigabitEthernet 0/1.

**Examples**

```
Ruijie(config-if-GigabitEthernet 0/1)# ipv6 redirects
```

| Related Commands | Command                    | Description                         |
|------------------|----------------------------|-------------------------------------|
|                  | <b>show ipv6 interface</b> | Displays the interface information. |

**Platform** N/A

**Description**

### 3.31 ipv6 source-route

Use this command to forward the IPv6 packet with route header. Use the **no** form of this command to restore the default setting.

**ipv6 source-route**

**no ipv6 source-route**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** The **ipv6 source-route** command is disabled by default.

**Command Mode** Global configuration mode.

**Usage Guide** Because of the potential security of the header of type 0 route, it's easy for the device to suffer from the denial service attack. Therefore, forwarding the IPv6 packet with route header is disabled by default. However, the IPv6 packet of route header with type 0 that destined to the local machine is processed.

**Configuration** The following example forwards the IPv6 packet with route header.

**Examples**

```
Ruijie(config)# no ipv6 source-route
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

### 3.32 show ipv6 address

Use this command to display the IPv6 addresses.

**show ipv6 address** [ *interface-name* ]

| Parameter   | Parameter             | Description    |
|-------------|-----------------------|----------------|
| Description | <i>interface-name</i> | Interface name |

**Defaults** N/A

**Command Mode** Privileged EXEC mode.

**Usage Guide** N/A

**Configuration** The following example displays all IPv6 address configured on the device.

#### Examples

```
Ruijie#show ipv6 addr
Global unicast address limit: 1024, Global unicast address count: 2
Tentative address count: 3,Duplicate address count: 0
Preferred address count: 0,Deprecated address count: 0
GigabitEthernet 0/5
  2003:1::23/64                Tentative
  Preferred lifetime: INFINITE, Valid lifetime: INFINITE
  fe80::2d0:f8ff:febf:deb2/64  Tentative
  Preferred lifetime: INFINITE, Valid lifetime: INFINITE
  2005:1::1111/64             Tentative
  Preferred lifetime: INFINITE, Valid lifetime: INFINITE
Ruijie#
```

The following example displays the IPv6 address configured on the GigabitEthernet 0/1.

```
Ruijie#show ipv6 addr gi 0/5
Global unicast address count: 2
Tentative address count: 3,Duplicate address count: 0
Preferred address count: 0,Deprecated address count: 0
GigabitEthernet 0/1
  2003:1::23/64                Tentative
  Preferred lifetime: INFINITE, Valid lifetime: INFINITE
  fe80::2d0:f8ff:febf:deb2/64  Tentative
  Preferred lifetime: INFINITE, Valid lifetime: INFINITE
  2005:1::1111/64             Tentative
  Preferred lifetime: INFINITE, Valid lifetime: INFINITE
```



```
Ruijie#
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

### 3.33 show ipv6 general-prefix

Use this command to display the information of the general prefix.

**show ipv6 general-prefix**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode.

**Usage Guide** Use this command to display the information of the general prefix including the manually configured and learned from the DHCPv6 agent.

**Configuration Examples** The following example displays the information of the general prefix.

```
Ruijie#
show ipv6 general-prefix
There is 1 general prefix.
IPv6 general prefix my-prefix, acquired via Manual configuration
 2001:1111:2222::/48
 2001:1111:3333::/48
```

| Related Commands | Command                    | Description                    |
|------------------|----------------------------|--------------------------------|
|                  | <b>ipv6 general-prefix</b> | Configures the general prefix. |

**Platform** N/A  
**Description**

### 3.34 show ipv6 interface

Use this command to display the IPv6 interface information.

**show ipv6 interface** [ *interface-id* ] [ **ra-info** ] [ *brief* [ *interface-id* ] ]

| Parameter | Parameter | Description |
|-----------|-----------|-------------|
|-----------|-----------|-------------|

|                    |                     |                                                                                             |
|--------------------|---------------------|---------------------------------------------------------------------------------------------|
| <b>Description</b> | <i>interface-id</i> | Interface (including Ethernet interface, aggregate port, or SVI)                            |
|                    | <b>ra-info</b>      | Displays the RA information of the interface.                                               |
|                    | <i>brief</i>        | Displays the brief information of the interface (interface status and address information). |

**Defaults** N/A

**Command** Privileged EXEC mode.

**Mode**

**Usage Guide** Use this command to display the address configuration, ND configuration and other information of an IPv6 interface.

**Configuration** The following example displays the information of the IPv6 interface.

**Examples**

```
Ruijie# show ipv6 interface vlan 1
Interface vlan 1 is Up, ifindex: 2001
address(es):
Mac Address: 00:00:00:00:00:01
INET6: fe80::200:ff:fe00:1 , subnet is fe80::/64
Joined group address(es):
ff01:1::1
ff02:1::1
ff02:1::2
ff02:1::1:ff00:1
INET6: 2001::1 , subnet is 2001::/64 [TENTATIVE]
Joined group address(es):
ff01:1::1
ff02:1::1
ff02:1::2
ff02:1::1:ff00:1
MTU is 1500 bytes
ICMP error messages limited to one every 10 milliseconds
ICMP redirects are enabled
ND DAD is enabled, number of DAD attempts: 1
ND reachable time is 30000 milliseconds
ND advertised reachable time is 0 milliseconds
ND retransmit interval is 1000 milliseconds
ND advertised retransmit interval is 0 milliseconds
ND router advertisements are sent every 200 seconds<240--160>
ND device advertisements live for 1800 seconds
```

The following line is included in the above information: 2001::1, subnet is 2001::/64 [TENTATIVE]. The flag bit in the [ ] following the INET6 address is explained as follows:

| Flag       | Meaning                                                                                                                |
|------------|------------------------------------------------------------------------------------------------------------------------|
| ANYCAST    | Indicate that the address is an anycast address.                                                                       |
| TENTATIVE  | Indicate that the DAD is underway. The address is a tentative before the DAD is completed.                             |
| DUPLICATED | Indicate that a duplicate address exists.                                                                              |
| DEPRECATED | Indicate that the preferred lifetime of the address expires.                                                           |
| NODAD      | Indicate that no DAD is implemented for the address.                                                                   |
| AUTOIFID   | Indicate that the interface ID of the address is automatically generated by the system, which is usually an EUI-64 ID. |
| PRE        | Indicate the IP stateless address that is automatically configured.                                                    |
| GEN        | Indicate the IP address that is generated by the general prefix.                                                       |

The following example displays the RA information of the IPv6 interface.

```
Ruijie# show ipv6 interface vlan 1 ra-info
vlan 1: DOWN
RA timer is stopped
waits: 0, initcount: 3
statistics: RA(out/in/inconsistent): 4/0/0, RS(input): 0
Link-layer address: 00:00:00:00:00:01
Physical MTU: 1500
ND device advertisements live for 1800 seconds
ND device advertisements are sent every 200 seconds<240--160>
Flags: !M!O, Adv MTU: 1500
ND advertised reachable time is 0 milliseconds
ND advertised retransmit time is 0 milliseconds
ND advertised CurHopLimit is 64
Prefixes: (total: 1)
fec0:1:1:1::/64(Def,Auto,vltime: 2592000, pltime: 604800, flags: LA)
```

Description of the fields in **ra-info**:

| Field                    | Meaning                                                                            |
|--------------------------|------------------------------------------------------------------------------------|
| RA timer is stopped (on) | Indicate whether the RA timer is started.                                          |
| waits                    | Indicate that the RS is received but the number of the responses is not available. |
| initcount                | Indicate the number of the RAs when the RA timer is restarted.                     |

|                          |                                                                                                                                                                                                                                                                      |
|--------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| RA(out/in/ inconsistent) | out: Indicate the number of the RAs that are sent.<br>In: Indicate the number of the RAs that are received.<br>inconsistent: Indicate the number of the received RAs in which the parameters are different from those contained in the RAs advertised by the device. |
| RS(input)                | Indicate the number of the RSs that are received.                                                                                                                                                                                                                    |
| Link-layer address       | Link-layer address of the interface.                                                                                                                                                                                                                                 |
| Physical MTU             | Link MTU of the interface.                                                                                                                                                                                                                                           |
| !M   M                   | !M indicates the managed-config-flag bit in the RA is not set.<br>M: Conversely                                                                                                                                                                                      |
| !O   O                   | !O indicates the other-config-flag bit in the RA is not set.<br>O: Conversely                                                                                                                                                                                        |

Description of the fields of the prefix list in **ra-info**:

| Field           | Meaning                                                                                                                                                                           |
|-----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| total           | The number of the prefixes of the interface.                                                                                                                                      |
| fec0:1:1:1::/64 | A specific prefix.                                                                                                                                                                |
| Def             | Indicate that the interfaces use the default prefix.                                                                                                                              |
| Auto   CFG      | Auto: Indicate the prefix is automatically generated after the interface is configured with the corresponding IPv6 address. CFG: Indicate that the prefix is manually configured. |
| !Adv            | Indicate that the prefix will not be advertised.                                                                                                                                  |
| vlttime         | Valid lifetime of the prefix, measured in seconds.                                                                                                                                |
| pltime          | Preferred lifetime of the prefix, measured in seconds.                                                                                                                            |
| L   !L          | L: Indicate that the on-link in the prefix is set.<br>!L: Indicate that the on-link in the prefix is not set.                                                                     |
| A   !A          | A: Indicate that the auto-configure in the prefix is set. !A: It indicates that the auto-configure in the prefix is not set.                                                      |

The following example displays the brief information of the IPv6 interface.

```
Ruijie#show ipv6 interface brief
GigabitEthernet 0/1          [down/down]
    2222::2
    FE80::1614:4BFF:FE5C:ED3A
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

### 3.35 show ipv6 neighbors

Use this command to display the IPv6 neighbors.

**show ipv6 neighbors** [ *vrf vrf-name* ] [ **verbose** ] [ *interface-id* ] [ *ipv6-address* ] [ **static** ] [ **oob** ]

| Parameter   | Parameter           | Description                                           |
|-------------|---------------------|-------------------------------------------------------|
| Description | <b>verbose</b>      | Displays the neighbor details.                        |
|             | <b>static</b>       | Displays the validity status of static neighbors.     |
|             | <i>vrf-name</i>     | VRF name                                              |
|             | <i>interface-id</i> | Displays the neighbors of the specified interface.    |
|             | <i>ipv6-address</i> | Displays the neighbors of the specified IPv6 address. |
|             | <b>oob</b>          | Displays the IPv6 neighbors of the MGMT port.         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode.

**Mode**

**Usage Guide** N/A

**Configuration** The following example displays the neighbors on the SVI 1 interface.

**Examples**

```
Ruijie# show ipv6 neighbors vlan 1
IPv6 Address Linklayer Addr Interface
fa::1 00d0.0000.0002 vlan 1
fe80::200:ff:fe00:2 00d0.0000.0002 vlan 1
```

The following example displays the neighbor details.

```
Ruijie# show ipv6 neighbors verbose
IPv6 Address Linklayer Addr Interface
2001::1 00d0.f800.0001 vlan 1
  State: Reach/H Age: - asked: 0
fe80::200:ff:fe00:1 00d0.f800.0001 vlan 1
  State: Reach/H Age: - asked: 0
```

| Field          | Meaning                                                                             |
|----------------|-------------------------------------------------------------------------------------|
| IPv6 Address   | IPv6 address of the Neighbor                                                        |
| Linklayer Addr | Link address, namely, MAC address. If it is not available, incomplete is displayed. |
| Interface      | Interface the neighbor locates.                                                     |
| State          | State of the neighbor: state/H(R)                                                   |

|       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|-------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|       | <p>The values of STATE are as below:</p> <p>INCMP (Incomplete): The address resolution of the neighbor is underway, the NS is sent, but the NA is not received.</p> <p>REACH (Reachable): The switch is connected with the neighbor. In this state, the switch takes no additional action when sending packets to the neighbor.</p> <p>STALE: The reachable time of the neighbor expires. In this state, the switch takes no additional action; it only starts NUD (Neighbor Unreachability Detection) after a packet is sent to the neighbor.</p> <p>DELAY: A packet is sent to the neighbor in STALE state. If the STALE state changes to DELAY, DELAY will be changed to PROBE if no neighbor reachability notification is received within DELAY_FIRST_PROBE_TIME seconds (5s), the NS will be sent to the neighbor to start NUD.</p> <p>PROBE: The NUD is started to check the reachability of the neighbor. The NS packets are sent to the neighbor at the interval of RetransTimer milliseconds until the response from the neighbor is received or the number of the sent NSs hits MAX_UNICAST_SOLICIT(3).</p> <p>?: Unknown state.</p> <p>/R—indicate the neighbor is considered as a device</p> <p>/H: The neighbor is a host.</p> |
| Age   | <p>The reachable time of the neighbor. '-' indicates that the neighbor is always reachable. Note that the reachability of a static neighbor depends on the actual situation. 'expired' indicates that the lifetime of the neighbor expires, and the neighbor is waits for the triggering of NUD.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Asked | <p>The number of the NSs that are sent to the neighbor for the resolution of the link address of the neighbor.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |

The following example displays the status of static neighbors.

```
Ruijie# show ipv6 neighbors static
IPv6 Address      Linklayer Addr  Interface          State
2001:1::1         00d0.f822.33ab  GigabitEthernet 0/14  ACTIVE
2001:2::2         00d0.f822.33ac  VLAN 1             INACTIVE
```

| Related Commands | Command              | Description            |
|------------------|----------------------|------------------------|
|                  | <b>ipv6 neighbor</b> | Configures a neighbor. |

**Platform** N/A

**Description**

### 3.36 show ipv6 neighbors statistics

Use the following commands to display the statistics of one IPv6 neighbors.

**show ipv6 neighbors [ vrf vrf-name ] statistics**

|                               |                                                                                                                                                                            |                    |
|-------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------|
| <b>Parameter</b>              | <b>Parameter</b>                                                                                                                                                           | <b>Description</b> |
| <b>Description</b>            | <i>vrf-name</i>                                                                                                                                                            | VRF name           |
| <b>Defaults</b>               | N/A                                                                                                                                                                        |                    |
| <b>Command Mode</b>           | Privileged EXEC mode.                                                                                                                                                      |                    |
| <b>Usage Guide</b>            | N/A                                                                                                                                                                        |                    |
| <b>Configuration Examples</b> | The following example displays the statistics of the global neighbors.                                                                                                     |                    |
|                               | <pre>Ruijie#show ipv6 neighbor statistics  Memory: 0 bytes Entries: 0   Static: 0,Dynamic: 0,Local: 0   Incomplete:0, Reachable:0, Stale:0, Delay:0, Probe:0 Ruijie#</pre> |                    |
| <b>Related Commands</b>       | <b>Command</b>                                                                                                                                                             | <b>Description</b> |
|                               | N/A                                                                                                                                                                        | N/A                |
| <b>Platform Description</b>   | Supported on all platforms.                                                                                                                                                |                    |

### 3.37 show ipv6 neighobr statistics per-mac

Use this command to display the number of neighbor entries of every MAC address.

**show ipv6 neighbor statistics per-mac** [*interface-name*] [*mac-address*]

|                     |                       |                    |
|---------------------|-----------------------|--------------------|
| <b>Parameter</b>    | <b>Parameter</b>      | <b>Description</b> |
| <b>Description</b>  | <i>interface-name</i> | Interface ID       |
|                     | <i>mac-address</i>    | MAC address        |
| <b>Defaults</b>     | N/A                   |                    |
| <b>Command Mode</b> | Privileged EXEC mode  |                    |
| <b>Usage Guide</b>  | N/A                   |                    |

**Configuration** The following example displays the number of neighbor entries of every MAC address..

**Examples**

```
Ruijie# show ipv6 neighbor statistics per-mac
Interface  MAC address      Statistics
-----
VLAN 1    0000:0000:0001      3
VLAN 1    0000:0000:0002      5
VLAN 2    0000:0000:0003     10
```

| Field       | Description      |
|-------------|------------------|
| Interface   | Interface ID.    |
| MAC address | MAC address.     |
| Statistics  | ND entry number. |

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

### 3.38 show ipv6 packet statistics

Use this command to display the statistics of IPv6 packets.

**show ipv6 packet statistics [ total | interface-name ]**

**Parameter  
Description**

| Parameter             | Description                                  |
|-----------------------|----------------------------------------------|
| <b>total</b>          | Displays total statistics of all interfaces. |
| <i>interface-name</i> | Interface name                               |

**Defaults** N/A

**Command  
Mode** Privileged EXEC mode.

**Usage Guide** N/A

**Configuration  
Examples** The following example displays the total statistics of the Ipv6 packets and the statistics of each interface.

```
Ruijie#show ipv6 pack statistics
Total
  Received 0 packets, 0 bytes
  Unicast:0,Multicast:0
  Discards:0
  HdrErrors:0 (HoplimitExceeded:0,Others:0)
```



```

    NoRoutes:0
    Others:0
  Sent 0 packets, 0 bytes
    Unicast:0,Multicast:0
  GigabitEthernet 0/5
  Received 0 packets, 0 bytes
    Unicast:0,Multicast:0
  Discards:0
    HdrErrors:0 (HoplimitExceeded:0,Others:0)
    NoRoutes:0
    Others:0
  Sent 0 packets, 0 bytes
    Unicast:0,Multicast:0
Ruijie#

```

The following example displays the total statistics of the ipv6 packets.

```

Ruijie#show ipv6 pack statistics total
Total
  Received 0 packets, 0 bytes
    Unicast:0,Multicast:0
  Discards:0
    HdrErrors:0 (HoplimitExceeded:0,Others:0)
    NoRoutes:0
    Others:0
  Sent 0 packets, 0 bytes
    Unicast:0,Multicast:0
Ruijie#

```

| Related  | Command | Description |
|----------|---------|-------------|
| Commands | N/A     | N/A         |

**Platform** Supported on all platforms.

**Description**

### 3.39 show ipv6 raw-socket

Use this command to display all original IPv6 sockets.

**show ipv6 raw-socket** [*num*]

| Parameter   | Parameter  | Description     |
|-------------|------------|-----------------|
| Description | <i>num</i> | Protocol number |

**Defaults** N/A

**Command Mode** Privileged EXEC mode.

**Usage Guide** N/A

**Configuration Examples** The following example displays all original IPv6 sockets.

```
Ruijie# show ipv6 raw-socket
Number Protocol Process name
1      ICMPv6   vrrp.elf
2      ICMPv6   tcpip.elf
3      VRRP    vrrp.elf
Total: 3
```

| Field        | Description              |
|--------------|--------------------------|
| Number       | Number.                  |
| Process name | Process name.            |
| Protocol     | Protocol number          |
| Total        | Total number of sockets. |

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

### 3.40 show ipv6 routers

In the IPv6 network, some neighbor routers send out the advertisement messages. Use this command to display the neighbor routers and the advertisement.

**show ipv6 routers** [ *interface-type interface-number* ]

| Parameter          | Parameter                                        | Description                                                               |
|--------------------|--------------------------------------------------|---------------------------------------------------------------------------|
| <b>Description</b> | <i>interface-type</i><br><i>interface-number</i> | (Optional) Displays the routing advertisement of the specified interface. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode.

**Usage Guide** Use this command to display the neighbor routers and the routing advertisement. If no interface is specified, all the routing advertisement of this device will be displayed.

**Configuration** The following example displays the IPv6 router

**Examples**

```
Ruijie# show ipv6 routers
Router FE80::2D0:F8FF:FEC1:C6E1 on VLAN 2, last update 62 sec
  Hops 64, Lifetime 1800 sec, ManagedFlag=0, OtherFlag=0, MTU=1500
  Preference=MEDIUM
  Reachable time 0 msec, Retransmit time 0 msec
  Prefix 6001:3::/64 onlink autoconfig
    Valid lifetime 2592000 sec, preferred lifetime 604800 sec
  Prefix 6001:2::/64 onlink autoconfig
    Valid lifetime 2592000 sec, preferred lifetime 604800 sec
```

| Related  | Command | Description |
|----------|---------|-------------|
| Commands | N/A     | N/A         |

**Platform** N/A

**Description**

### 3.41 show ipv6 sockets

Use this command to display all IPv6 sockets.

**show ipv6 sockets**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** N/A

**Command** Privileged EXEC mode.

**Mode**

**Usage Guide** N/A

**Configuration** The following example displays all IPv6 sockets.

**Examples**

```
Ruijie# show ipv6 sockets
Number Process name      Type  Protocol  LocalIP:Port  ForeignIP:Port  State
1    vrrp.elf             RAW   ICMPv6    :::58         :::0            *
2    tcpip.elf           RAW   ICMPv6    :::58         :::0            *
3    vrrp.elf             RAW   VRRP      :::112        :::0            *
4    rg-snmpd            DGRAM UDP        :::161        :::0            *
5    rg-snmpd            DGRAM UDP        :::162        :::0            *
6    dhcp6.elf           DGRAM UDP        :::547        :::0            *
7    rg-sshd             STREAM TCP      :::22         :::0            LISTEN
8    rg-telnetd          STREAM TCP      :::23         :::0            LISTEN
```

| Total: 8       |                                                                                                             |
|----------------|-------------------------------------------------------------------------------------------------------------|
| Field          | Description                                                                                                 |
| Number         | Number.                                                                                                     |
| Process name   | Process name.                                                                                               |
| Type           | Socket type. RAW indicates the raw socket. DGRAM indicates data packet type. STREAM indicates traffic type. |
| Protocol       | Protocol number                                                                                             |
| LocalIP:Port   | Local IPv6 address and port.                                                                                |
| ForeignIP:Port | Peer IPv6 address and port.                                                                                 |
| State          | State (for IPv6 TCP sockets).                                                                               |
| Total          | Total number of sockets.                                                                                    |

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

### 3.42 show ipv6 udp

Use this command to display all IPv6 UDP sockets.

**show ipv6 udp [ local-port *num* ] [ peer-port *num* ]**

Use this command to display IPv6 UDP socket statistics.

**show ipv6 udp statistics**

| Parameter Description | Parameter                    | Description        |
|-----------------------|------------------------------|--------------------|
|                       | <b>local-port <i>num</i></b> | Local port number. |
|                       | <b>peer-port <i>num</i></b>  | Peer port number.  |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays all IPv6 UDP sockets.

#### Examples

```
Ruijie# show ipv6 udp
Number Local Address Peer Address Process name
1      :::161      :::0      rg-snmpd
2      :::162      :::0      rg-snmpd
```

| 3             | :::547 | :::0                         | dhcp6.elf |
|---------------|--------|------------------------------|-----------|
| Filed         |        | Description                  |           |
| Number        |        | Number.                      |           |
| Local Address |        | Local IPv6 address and port. |           |
| Peer Address  |        | Peer IPv6 address and port.  |           |
| Process name  |        | Process name.                |           |

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform  
Description**

N/A

## 4 DHCP Commands

### 4.1 address range

Use this command to specify the network segment range of the addresses that can be allocated by CLASS associated with DHCP address pool. Use the **no** form of this command to restore the default setting.

**address range** *low-ip-address high-ip-address*

**no address range**

| Parameter   | Parameter              | Description                                 |
|-------------|------------------------|---------------------------------------------|
| Description | <i>low-ip-address</i>  | Start address in the network segment range. |
|             | <i>high-ip-address</i> | End address in the network segment range.   |

**Defaults** By default, the associated CLASS is not configured with the network segment range. The default is the address pool range.

**Command Mode** Address pool CLASS configuration mode.

**Usage Guide** Each CLASS corresponds to one network range which must be from low address to high address, so as to allow the duplication of network segment range between multiple CLASSES. If the CLASS associated with the address pool is specified without configuring the corresponding network segment range, the default network segment range of this CLASS is same as the range of the address pool where this CLASS is.

**Configuration Examples** The following example configures the network segment of class1 associated with address pool mypool0 ranging from 172.16.1.1 to 172.16.1.8.

```
Ruijie(config)# ip dhcp pool mypool0
Ruijie(dhcp-config)# class class1
Ruijie (config-dhcp-pool-class)# address range 172.16.1.1 172.16.1.8
```

| Related Commands | Command             | Description                                                                                                      |
|------------------|---------------------|------------------------------------------------------------------------------------------------------------------|
|                  | <b>ip dhcp pool</b> | Defines the name of the DHCP address pool and enters the DHCP address pool configuration mode.                   |
|                  | <b>class</b>        | Configures the CLASS associated with the DHCP address pool and enters the address pool CLASS configuration mode. |

**Platform Description** N/A

## 4.2 address-manage

Use this command to enter the AM rule configuration mode.

**address-manage**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** This command is configured on the DHCP server and used in combination with Super VLAN.

**Configuration Examples** The following example enters the AM rule configuration mode.

```
Ruijie(config)#address-manage
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 4.3 bootfile

Use this command to define the startup mapping file name of the DHCP client. Use the **no** or **default** form of this command to restore the default setting.

**bootfile** *file-name*

**no bootfile**

**default bootfile**

| Parameter   | Parameter        | Description        |
|-------------|------------------|--------------------|
| Description | <i>file-name</i> | Startup file name. |

**Defaults** No startup file name is defined by default.

**Command Mode** DHCP address pool configuration mode

**Usage Guide** Some DHCP clients need to download the operating system and configure the file during the startup. The DHCP server should provide the mapping file name required for the startup, so that DHCP clients

can download the file from the corresponding server (such as TFTP). Other servers are defined by the **next-server** command.

**Configuration** The following example defines the device.conf as the startup file name.

**Examples** `bootfile device.conf`

| Related Commands | Command             | Description                                                                                   |
|------------------|---------------------|-----------------------------------------------------------------------------------------------|
|                  | <b>ip dhcp pool</b> | Defines the name of the DHCP address pool and enter the DHCP address pool configuration mode. |
|                  | <b>next-server</b>  | Configures the next server IP address of the DHCP client startup process.                     |

**Platform** N/A

**Description**

## 4.4 class

Use this command to configure the associated CLASS in the DHCP address pool. Use the **no** form of this command to restore the default setting.

**class** *class-name*

**no class**

| Parameter Description | Parameter         | Description                                                                    |
|-----------------------|-------------------|--------------------------------------------------------------------------------|
|                       | <i>class-name</i> | Class name, which can be the character string or numeric such as myclass or 1. |

**Defaults** By default, no CLASS is associated with the address pool.

**Command Mode** DHCP address pool configuration mode

**Usage Guide** Each DHCP address pool performs the address assignment according to the Option82 matching information. We can divide this Option82 information into classes and specify the available network segment range for these classes in the DHCP address pool. These classes are called CLASS. One DHCP address pool can map to multiple CLASSES, and each CLASS can specify different network segment range.

During the address assignment, firstly, ensure the assignable address pool through the network segment where the client is, then according to the Option82 information further ensure the CLASS and assign the IP address from the network segment range corresponding to the CLASS. If one request packet matches multiple CLASSES in the address pool, perform the address assignment according to the sequencing of configuring the CLASS in the address pool. If this CLASS's assigned addresses have been to the upper limit, then continue to assign the address from the next CLASS, and so on. Each CLASS corresponds to one network segment range that must be from low addresses to high addresses and the duplicated network ranges between multiple CLASSES are allowed. If the CLASS corresponding to the address pool is specified and the network segment corresponding to the CLASS is not configured, this CLASS's default network segment range is same



as the range of address pool where the CLASS is.

**Configuration** The following example configures the address *mypool0* to associate with class1.

**Examples**

```
Ruijie(config)# ip dhcp pool mypool0
Ruijie(dhcp-config)# class class1
```

| Related Commands | Command             | Description                                                                                    |
|------------------|---------------------|------------------------------------------------------------------------------------------------|
|                  | <b>ip dhcp pool</b> | Defines the name of the DHCP address pool and enters the DHCP address pool configuration mode. |

**Platform** N/A

**Description**

## 4.5 clear ip dhcp binding

Use this command to clear the DHCP binding table in the privileged user mode.

**clear ip dhcp binding** { \* | *ip-address* }

| Parameter          | Parameter         | Description                                        |
|--------------------|-------------------|----------------------------------------------------|
| <b>Description</b> | *                 | Deletes all DHCP bindings.                         |
|                    | <i>ip-address</i> | Deletes the binding of the specified IP addresses. |

**Defaults** N/A.

**Command Mode** Privileged EXEC mode.

**Usage Guide** This command can only clear the automatic DHCP binding, but the manual DHCP binding can be deleted by the **no ip dhcp pool** command.

**Configuration** The following example clears the DHCP binding with the IP address 192.168.12.100.

**Examples**

```
clear ip dhcp binding 192.168.12.100
```

| Related Commands | Command                     | Description                                      |
|------------------|-----------------------------|--------------------------------------------------|
|                  | <b>show ip dhcp binding</b> | Displays the address binding of the DHCP server. |

**Platform** N/A

**Description**

## 4.6 clear ip dhcp conflict

Use this command to clear the DHCP address conflict record.

**clear ip dhcp conflict** { \* | *ip-address* }

|                               |                                                                                                                                                                                                                                                                     |                                                                                                                                                         |
|-------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Parameter</b>              | <b>Parameter</b>                                                                                                                                                                                                                                                    | <b>Description</b>                                                                                                                                      |
| <b>Description</b>            | *                                                                                                                                                                                                                                                                   | Deletes all DHCP address conflict records.                                                                                                              |
|                               | <i>ip-address</i>                                                                                                                                                                                                                                                   | Deletes the conflict record of the specified IP addresses.                                                                                              |
| <b>Defaults</b>               | N/A.                                                                                                                                                                                                                                                                |                                                                                                                                                         |
| <b>Command Mode</b>           | Privileged EXEC mode.                                                                                                                                                                                                                                               |                                                                                                                                                         |
| <b>Usage Guide</b>            | The DHCP server uses the ping session to detect the address conflict, while the DHCP client uses the address resolution protocol (ARP) to detect the address conflict. The <b>clear ip dhcp conflict</b> command can be used to delete the history conflict record. |                                                                                                                                                         |
| <b>Configuration Examples</b> | The following example clears all address conflict records.                                                                                                                                                                                                          |                                                                                                                                                         |
| <b>Examples</b>               | <pre>clear ip dhcp conflict *</pre>                                                                                                                                                                                                                                 |                                                                                                                                                         |
| <b>Related Commands</b>       | <b>Command</b>                                                                                                                                                                                                                                                      | <b>Description</b>                                                                                                                                      |
|                               | <b>ip dhcp ping packets</b>                                                                                                                                                                                                                                         | Defines the number of the data packets sent by the ping operation for the detection of the address conflict when the DHCP server assigns an IP address. |
|                               | <b>show ip dhcp conflict</b>                                                                                                                                                                                                                                        | Displays the address conflict that the DHCP server detects when it assigns an IP address.                                                               |
| <b>Platform Description</b>   | N/A                                                                                                                                                                                                                                                                 |                                                                                                                                                         |

## 4.7 clear ip dhcp history

Use this command to clear the address assigned by the DHCP server.

**clear ip dhcp history**{ \* | *mac-address* }

|                     |                                                |                                                                                            |
|---------------------|------------------------------------------------|--------------------------------------------------------------------------------------------|
| <b>Parameter</b>    | <b>Parameter</b>                               | <b>Description</b>                                                                         |
| <b>Description</b>  | *                                              | Clears all addresses assigned by the DHCP server.                                          |
|                     | <i>mac-address</i>                             | Clears the address assigned by the DHCP server corresponding to the specified MAC address. |
| <b>Defaults</b>     | N/A                                            |                                                                                            |
| <b>Command Mode</b> | Privileged EXEC mode                           |                                                                                            |
| <b>Usage Guide</b>  | This command is configured on the DHCP server. |                                                                                            |

**Configuration** The following example clears all addresses assigned by the DHCP server.

**Examples**

```
Ruijie# clear ip dhcp history *
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 4.8 clear ip dhcp server detect

Use this command to clear statistics about the fake DHCP server.

**clear ip dhcp server detect** { \* | *ip-address* }

| Parameter          | Parameter         | Description                                             |
|--------------------|-------------------|---------------------------------------------------------|
| <b>Description</b> | *                 | Clears statistics about all fake DHCP servers.          |
|                    | <i>ip-address</i> | Clears statistics about the specified fake DHCP server. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** The detected fake DHCP server addresses are saved on the server. You can use the **clear ip dhcp server detect** command to clear statistics about the fake DHCP server.

**Configuration** The following example clears statistics about all fake DHCP servers.

**Examples**

```
Ruijie#clear ip dhcp server detect *
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 4.9 clear ip dhcp server rate

Use this command to clear statistics about the packet processing rate of every module.

**clear ip dhcp server rate**

| Parameter          | Parameter | Description |
|--------------------|-----------|-------------|
| <b>Description</b> | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** This command is used to clear statistics about the packet processing rate of every module, including arp, hot backup, lsm, and socket.

**Configuration** The following example clears statistics about the packet processing rate of every module.

**Examples** Ruijie# clear ip dhcp server rate

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 4.10 clear ip dhcp server statistics

Use this command to reset the counter of the DHCP server in the privileged user mode.

**clear ip dhcp server statistics**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode.

**Usage Guide** The DHCP server carries out the statistics counter, records the DHCP address pool, automatic binding, manual binding and expired binding. Furthermore, it also carries out the statistics to the number of sent and received DHCP messages. The **clear ip dhcp server statistics** command can be used to delete the history counter record and carry out the statistics starting from scratch.

**Configuration** The following example clears the statistics record of the DHCP server.

**Examples** clear ip dhcp server statistics

| Related Commands | Command                        | Description                                        |
|------------------|--------------------------------|----------------------------------------------------|
|                  | show ip dhcp server statistics | Displays the statistics record of the DHCP server. |

**Platform** N/A

**Description**

## 4.11 clear ip dhcp relay statistics

Use this command to clear the DHCP relay statistics.

**clear ip dhcp relay statistics**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** The DHCP relay is configured with the counter to count various packets received or transmitted by the relay. This command is used to clear the counters.

**Configuration** The following example clears the DHCP relay statistics.

**Examples** Ruijie# clear ip dhcp relay statistics

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 4.12 client-identifier

Use this command to define the unique ID of the DHCP client (indicated in hex, separated by dot) in the DHCP address pool configuration mode. Use the **no** or **default** form of this command to restore the default setting.

**client-identifier** *unique-identifier*

**no client-identifier**

**default client-identifier**

| Parameter   | Parameter                | Description                                                                                                                                |
|-------------|--------------------------|--------------------------------------------------------------------------------------------------------------------------------------------|
| Description | <i>unique-identifier</i> | The DHCP client ID is indicated in hex and separated by dot, for instance, 0100.d0f8.2233.b467.6967.6162.6974.4574.6865.726e.6574.302f.31. |

**Defaults** N/A.

**Command** DHCP address pool configuration mode.

**Mode**

**Usage Guide** When some DHCP clients request the DHCP server to assign IP addresses, they use their client IDs rather than their hardware addresses. The client ID consists of media type, MAC addresses and interface name. For instance, the MAC address is 00d0.f822.33b4, the interface name is GigabitEthernet 0/1, and the corresponding client ID is 0100.d0f8.2233.b467.6967.6162.6974.4574.6865.726e.6574.302f.31, where, 01 denotes the type of the Ethernet media.

The 67.6967.6162.6974.4574.6865.726e.6574.302f.31 is the hex code of GigabitEthernet0/1. For the definition of the media code, refer to the Address Resolution Protocol Parameters section in RFC1700. This command is used only when the DHCP is defined by manual binding.

**Configuration Examples** The following example defines the client ID of the Ethernet DHCP client whose MAC address is 00d0.f822.33b4.

```
client-identifier
0100.d0f8.2233.b467.6967.6162.6974.4574.6865.726e.6574.302f.31
```

**Related Commands**

| Command                 | Description                                                                                    |
|-------------------------|------------------------------------------------------------------------------------------------|
| <b>hardware-address</b> | Defines the hardware address of DHCP client.                                                   |
| <b>host</b>             | Defines the IP address and network mask, which is used to configure the DHCP manual binding.   |
| <b>ip dhcp pool</b>     | Defines the name of the DHCP address pool and enters the DHCP address pool configuration mode. |

**Platform** N/A

**Description**

## 4.13 client-name

Use this command to define the name of the DHCP client in the DHCP address pool configuration mode. Use the **no** or **default** form of this command to restore the default setting.

**client-name** *client-name*

**no client-name**

**default client-name**

**Parameter Description**

| Parameter   | Description                                                                                                                                                                                                    |
|-------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| client-name | Name of DHCP client, a set of standards-based ASCII characters. The name should not include the suffix domain name. For instance, you can define the name of the DHCP client as river, not river.i-net.com.cn. |

**Defaults** No client name is defined by default.

**Command Mode** DHCP address pool configuration mode.

**Usage Guide** This command can be used to define the name of the DHCP client only when the DHCP is defined by manual binding. This name should not include the suffix domain name.

**Configuration Examples** The following example defines a string river as the name of the client.

```
Ruijie(dhcp-config)# client-name river
```

| Related Commands | Command             | Description                                                                                    |
|------------------|---------------------|------------------------------------------------------------------------------------------------|
|                  | <b>host</b>         | Defines the IP address and network mask, which is used to configure the DHCP manual binding.   |
|                  | <b>ip dhcp pool</b> | Defines the name of the DHCP address pool and enters the DHCP address pool configuration mode. |

**Platform Description** N/A

### 4.14 default-router

Use this command to define the default gateway of the DHCP client in the DHCP address pool configuration mode. Use the **no** or **default** form of this command to restore the default setting.

```
default-router ip-address [ ip-address2...ip-address8 ]
no default-router
default default-router
```

| Parameter Description | Parameter                        | Description                                                                                   |
|-----------------------|----------------------------------|-----------------------------------------------------------------------------------------------|
|                       | <i>ip-address</i>                | Defines the IP address of the equipment. It is required to configure one IP address at least. |
|                       | <i>ip-address2...ip-address8</i> | (Optional) Up to 8 gateways can be configured.                                                |

**Defaults** No gateway is defined by default.

**Command Mode** DHCP address pool configuration mode.

**Usage Guide** In general, the DHCP client should get the information of the default gateway from the DHCP server. The DHCP server should specify one gateway address for the client at least, and this address should be of the same network segment as the address assigned to the client.

**Configuration Examples** The following example defines 192.168.12.1 as the default gateway.

```
default-router 192.168.12.1
```

| Related Commands | Command             | Description                                                                                    |
|------------------|---------------------|------------------------------------------------------------------------------------------------|
|                  | <b>ip dhcp pool</b> | Defines the name of the DHCP address pool and enters the DHCP address pool configuration mode. |

**Platform** N/A

**Description**

## 4.15 dns-server

Use this command to define the DNS server of the DHCP client in the DHCP address pool configuration mode. Use the **no** or **default** form of this command to restore the default setting.

**dns-server** { *ip-address* [ *ip-address2*...*ip-address8* ]

**no dns-server**

**default dns-server**

| Parameter          | Parameter                                 | Description                                                                             |
|--------------------|-------------------------------------------|-----------------------------------------------------------------------------------------|
| <b>Description</b> | <i>ip-address</i>                         | Defines the IP address of the DNS server. At least one IP address should be configured. |
|                    | <i>ip-address2</i> ... <i>ip-address8</i> | (Optional) Up to 8 DNS servers can be configured.                                       |

**Defaults** No DNS server is defined by default.

**Command** DHCP address pool configuration mode.

**Mode**

**Usage Guide** When more than one DNS server is defined, the former will possess higher priority, so the DHCP client will select the next DNS server only when its communication with the former DNS server fails.

**Configuration** The following example specifies the DNS server 192.168.12.3 for the DHCP client.

**Examples**

```
Ruijie(dhcp-config)# dns-server 192.168.12.3
```

| Related Commands | Command                | Description                                                                                    |
|------------------|------------------------|------------------------------------------------------------------------------------------------|
|                  | <b>domain-name</b>     | Defines the suffix domain name of the DHCP client.                                             |
|                  | <b>ip address dhcp</b> | Enables the DHCP client on the interface to obtain the IP address information.                 |
|                  | <b>ip dhcp pool</b>    | Defines the name of the DHCP address pool and enters the DHCP address pool configuration mode. |

**Platform** N/A

**Description**

## 4.16 domain-name

Use this command to define the suffix domain name of the DHCP client in the DHCP address pool



configuration mode. Use the **no** or **default** form of this command to restore the default setting.

**domain-name** *domain-name*

**no domain-name**

**default domain-name**

| Parameter   | Parameter          | Description                                               |
|-------------|--------------------|-----------------------------------------------------------|
| Description | <i>domain-name</i> | Defines the suffix domain name string of the DHCP client. |

**Defaults** No suffix domain name by default.

**Command** DHCP address pool configuration mode.

**Mode**

**Usage Guide** After the DHCP client obtains specified suffix domain name, it can access a host with the same suffix domain name by the host name directly.

**Configuration** The following example defines the suffix domain name i-net.com.cn for the DHCP client.

**Examples** Ruijie (dhcp-config) #domain-name ruijie.com.cn

| Related  | Command             | Description                                                                                   |
|----------|---------------------|-----------------------------------------------------------------------------------------------|
| Commands | <b>dns-server</b>   | Defines the DNS server of the DHCP client.                                                    |
|          | <b>ip dhcp pool</b> | Defines the name of the DHCP address pool and enter the DHCP address pool configuration mode. |

**Platform** N/A

**Description**

## 4.17 force-no-router

Use this command to cancel gateway allocation to the client. Use the **no** or **default** form of this command to restore the default setting.

**force-no-router**

**no force-no-router**

**default force-no-router**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command** DHCP address pool configuration mode

**Mode**

**Usage Guide** N/A

**Configuration** The following example cancels gateway allocation to the client.

**Examples** Ruijie (dhcp-config) # force-no-router

| Related  | Command | Description |
|----------|---------|-------------|
| Commands | N/A     | N/A         |

**Platform** N/A

**Description**

## 4.18 hardware-address

Use this command to define the hardware address of the DHCP client in the DHCP address pool configuration mode. Use the **no** or **default** form of this command to restore the default setting.

**hardware-address** *hardware-address* [ *type* ]

**no hardware-address**

**default hardware-address**

| Parameter   | Parameter               | Description                                                                                                                                                                                                   |
|-------------|-------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Description | <i>hardware-address</i> | Define the MAC address of the DHCP client.                                                                                                                                                                    |
|             | <i>type</i>             | To indicate the hardware platform protocol of the DHCP client, use the string definition or digits definition.<br>String option:<br>Ethernet<br>ieee802<br>Digits option:<br>1 (10M Ethernet)<br>6 (IEEE 802) |

**Defaults** No hardware address is defined by default.

If there is no option when the hardware address is defined, it is the Ethernet by default.

**Command** DHCP address pool configuration mode.

**Mode**

**Usage Guide** This command can be used only when the DHCP is defined by manual binding.

**Configuration** The following example defines the MAC address 00d0.f838.bf3d with the type ethernet.

**Examples** hardware-address 00d0.f838.bf3d

| Related  | Command           | Description                                                |
|----------|-------------------|------------------------------------------------------------|
| Commands | client-identifier | Defines the unique ID of the DHCP client (Indicated by the |

|                       |                                                                                               |
|-----------------------|-----------------------------------------------------------------------------------------------|
|                       | hexadecimal numeral, separated by dot).                                                       |
| <b>host</b>           | Defines the IP address and network mask, which is used to configure the DHCP manual binding.  |
| <b>ip dhcp pool</b>   | Defines the name of the DHCP address pool and enter the DHCP address pool configuration mode. |
| <b>default-router</b> | Defines the default route of the DHCP client.                                                 |

**Platform** N/A

**Description**

## 4.19 host

Use this command to define the IP address and network mask of the DHCP client host in the DHCP address pool configuration mode. Use the **no** or **default** form of this command to restore the default setting.

**host** *ip-address* [ *netmask* ]

**no host**

**default host**

| Parameter          | Parameter         | Description                              |
|--------------------|-------------------|------------------------------------------|
| <b>Description</b> | <i>ip-address</i> | Defines the IP address of DHCP client.   |
|                    | <i>netmask</i>    | Defines the network mask of DHCP client. |

**Defaults** No IP address or network mask of the host is defined.

**Command** DHCP address pool configuration mode.

**Mode**

**Usage Guide** If the network mask is not defined definitely, the DHCP server will use the natural network mask of this IP address: 255.0.0.0 for class A IP address, 255.255.0 for class B IP address, and 255.255.255.0 for class C IP address.

This command can be used only when the DHCP is defined by manual binding.

**Configuration Examples** The following example sets the client IP address as 192.168.12.91, and the network mask as 255.255.255.240.

```
host 192.168.12.91 255.255.255.240
```

| Related Commands | Command                  | Description                                                                                    |
|------------------|--------------------------|------------------------------------------------------------------------------------------------|
|                  | <b>client-identifier</b> | Defines the unique ID of the DHCP client (Indicated in hex and separated by dot).              |
|                  | <b>hardware-address</b>  | Defines the hardware address of DHCP client.                                                   |
|                  | <b>ip dhcp pool</b>      | Defines the name of the DHCP address pool and enters the DHCP address pool configuration mode. |

|                       |                                              |                       |
|-----------------------|----------------------------------------------|-----------------------|
| <b>default-router</b> | Define the default route of the DHCP client. | <b>default-router</b> |
|-----------------------|----------------------------------------------|-----------------------|

**Platform** N/A

**Description**

## 4.20 ip address dhcp

Use this command to make the Ethernet interface or the PPP, HDLC and FR encapsulated interface obtain the IP address information by the DHCP in the interface configuration mode. Use the **no** or **default** form of this command to restore the default setting.

**ip address dhcp**

**no ip address dhcp**

**default ip address dhcp**

| Parameter          | Parameter | Description |
|--------------------|-----------|-------------|
| <b>Description</b> | N/A       | N/A         |

**Defaults** The interface cannot obtain the IP address by the DHCP by default.

**Command** Interface configuration mode.

**Mode**

**Usage Guide** When requesting the IP address, the DHCP client of the RGOS software also requires the DHCP server provide 5 configuration parameter information: 1) DHCP option 1, client subnet mask, 2) DHCP option 3, it is the same as the gateway information of the same subnet, 3) DHCP option 6, the DNS server information, 4) DHCP option 15, the host suffix domain name, and 5) DHCP option 44, the WINS server information (optional).

The client of the RGOS software is allowed to obtain the address on the PPP, FR or HDL link by the DHCP, which should be supported by the server. At present, our server can support this function.

**Configuration** The following example makes the FastEthernet 0 port obtain the IP address automatically.

```
Ruijie(config)# interface GigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1) ip address dhcp
```

| Related         | Command             | Description                                                                                    |
|-----------------|---------------------|------------------------------------------------------------------------------------------------|
| <b>Commands</b> | <b>dns-server</b>   | Defines the DNS server of DHCP client.                                                         |
|                 | <b>ip dhcp pool</b> | Defines the name of the DHCP address pool and enters the DHCP address pool configuration mode. |

**Platform** N/A

**Description**

## 4.21 ip dhcp arp-probe

Use this command to check ARP entries of the local host to prevent IP address conflict of an STA configured with a static IP address. Use the **no** form of this command to disable the function. Use the **default** form of this command to restore the default setting.

**ip dhcp arp-probe**

**no ip dhcp arp-probe**

**default ip dhcp arp-probe**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** The ARP entry check function is disabled by default.

**Command Mode** Global configuration mode

**Default Level** 14

**Usage Guide** This function is a supplement to the ping conflict detection function. If there is an STA with a static IP address and L2 isolation in the environment and the ping conflict detection function becomes invalid (for example, the firewall is enabled on the STA), an STA that applies for a dynamic address may be assigned with this IP address, resulting in IP conflict.

This function can be enabled only in the preceding scenario. If ARP attack exists, this function cannot be enabled. Otherwise, the DHCP IP address assignment service is affected. As a result, it takes a long time for an STA to apply for an IP address or the STA cannot apply for an IP address.

**Configuration Examples** The following example enables the function in global configuration mode.

```
Ruijie(config)# ip dhcp arp-probe
```

**Verification** Run the **show run** command to check whether the configuration is successful.

## 4.22 ip dhcp class

Use this command to define a CLASS and enter the global CLASS configuration mode. Use the **no** form of this command to restore the default setting.

**ip dhcp class** *class-name*

**no ip dhcp class** *class-name*

| Parameter Description | Parameter         | Description                                                                |
|-----------------------|-------------------|----------------------------------------------------------------------------|
|                       | <i>class-name</i> | Class name, which can be character string or numeric such as myclass or 1. |

- Defaults** By default, the class is not configured.
- Command Mode** Global configuration mode.
- Usage Guide** After executing this command, it enters the global CLASS configuration mode which is shown as "Ruijie (config-dhcp-class)#". In this configuration mode, user can configure the Option82 information that matches the CLASS and the CLASS identification information.

**Configuration** The following example configures a global CLASS.

**Examples**

```
Ruijie(config)# ip dhcp class myclass
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 4.23 ip dhcp excluded-address

Use this command to configure excluded IP address. Use the **no** or **default** form of this command to restore the default setting.

**ip dhcp excluded-address** *low-ip-address* [*high-ip-address*]

**no ip dhcp excluded-address** *low-ip-address* [*high-ip-address*]

**default ip dhcp excluded-address** *low-ip-address* [*high-ip-address*]

| Parameter Description | Parameter              | Description                   |
|-----------------------|------------------------|-------------------------------|
|                       | <i>low-ip-address</i>  | Indicates a start IP address. |
|                       | <i>high-ip-address</i> | Indicates an end IP address.  |

**Defaults** By default, the DHCP server assigns all IP addresses of the address pool.

**Command Mode** Global configuration mode.

**Usage Guide** Unless otherwise specified, a DHCP server assigns all the addresses from an IP address pool to DHCP clients. To reserve some addresses(e.g., addresses already assigned to the server or devices), you need to configure these addresses as excluded addresses. To configure a DHCP server, it is recommended to configure excluded addresses to avoid address conflict and shorten detection time during address assignment.

**Configuration** The following example configures 192.168.12.100~150 as excluded IP address.

**Examples**

```
Ruijie(config)#ip dhcp excluded-address 192.168.12.100 192.168.12.150
```

The following example restores the default setting.

```
Ruijie(config)#no ip dhcp excluded-address 192.168.12.100 192.168.12.150
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 4.24 ip dhcp force-send-nak

Use this command to configure the forcible NAK packet sending function. Use the **no** or **default** form of this command to restore the default setting.

**ip dhcp force-send-nak**

**no ip dhcp force-send-nak**

**default ip dhcp force-send-nak**

| Parameter          | Parameter | Description |
|--------------------|-----------|-------------|
| <b>Description</b> | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode.

**Usage Guide** The DHCP client checks the previously used IP address every time it is started and sends a DHCPREQUEST packet to continue leasing this IP address. If the address is not available, the DHCP server sends an NAK packet to let the client resend a DHCPDISCOVER packet to apply for a new IP address. If no corresponding lease record can be found on the server, the client keeps sending DHCPDISCOVER packets.

**Configuration Examples** The following example enables the forcible NAK packet sending function in global configuration mode.

```
Ruijie(config)# ip dhcp force-send-nak
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 4.25 ip dhcp ping packets

Use this command to configure the times of pinging the IP address when the DHCP server detects address conflict in the global configuration mode. Use the **no** or **default** form of this command to restore the default setting.

**ip dhcp ping packets** [ *number* ]

**no ip dhcp ping packets**

**default ip dhcp ping packets**

| Parameter          | Parameter     | Description                                                                                                                                            |
|--------------------|---------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b> | <i>number</i> | (Optional) Number of packets in the range of 0 to 10, where 0 indicates disabling the ping operation. The Ping operation sends two packets by default. |

**Defaults** The Ping operation sends two packets by default.

**Command Mode** Global configuration mode.

**Usage Guide** When the DHCP server attempts to assign the IP address from the DHCP address pool, use the ping operation to check whether this address is occupied by other hosts. Record it if the address is occupied, otherwise, assign it to the DHCP client. The Ping operation will send up to 10 packets, two packets by default.

**Configuration Examples** The following example sets the number of the packets sent by the ping operation as 3.

**Examples** Ruijie(config)# ip dhcp ping packets 3

| Related Commands | Command                       | Description                                                                                                                                                                                                                                           |
|------------------|-------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                  | <b>clear ip dhcp conflict</b> | Clears the DHCP history conflict record.                                                                                                                                                                                                              |
|                  | <b>ip dhcp ping packet</b>    | Configures the timeout time that the DHCP server waits for the Ping response. If all the ping packets are not responded within the specified time, it indicates that this IP address can be assigned. Otherwise, it will record the address conflict. |
|                  | <b>show ip dhcp conflict</b>  | Displays the DHCP server detects address conflict when it assigns an IP address.                                                                                                                                                                      |

**Platform** N/A

**Description**

## 4.26 ip dhcp ping timeout

Use this command to configure the timeout that the DHCP server waits for response when it uses the ping operation to detect the address conflict in the global configuration mode. Use the **no** or **default** form of this command to restore the default setting.



**ip dhcp ping timeout** *milli-seconds*  
**no ip dhcp ping timeout**  
**default ip dhcp ping timeout**

| Parameter          | Parameter            | Description                                                                               |
|--------------------|----------------------|-------------------------------------------------------------------------------------------|
| <b>Description</b> | <i>milli-seconds</i> | Time that the DHCP server waits for ping response in the range 100 to 10000 milliseconds. |

**Defaults** The default is 500 seconds.

**Command Mode** Global configuration mode.

**Usage Guide** This command defines the time that the DHCP server waits for a ping response packet.

**Configuration Examples** The following example configures the waiting time of the ping response packet to 600ms.

```
ip dhcp ping timeout 600
```

| Related Commands | Command                       | Description                                                                                                                                             |
|------------------|-------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------|
|                  | <b>clear ip dhcp conflict</b> | Clears the DHCP history conflict record.                                                                                                                |
|                  | <b>ip dhcp ping packets</b>   | Defines the number of the data packets sent by the ping operation for the detection of the address conflict when the DHCP server assigns an IP address. |
|                  | <b>show ip dhcp conflict</b>  | Displays the address conflict the DHCP server detects when it assigns an IP address.                                                                    |

**Platform** N/A

**Description**

## 4.27 ip dhcp pool

Use this command to define a name of the DHCP address pool and enter the DHCP address pool configuration mode in the global configuration mode. Use the **no** or **default** form of this command to restore the default setting.

**ip dhcp pool** *pool-name*  
**no ip dhcp pool** *pool-name*  
**default ip dhcp pool** *pool-name*

| Parameter          | Parameter        | Description                                                              |
|--------------------|------------------|--------------------------------------------------------------------------|
| <b>Description</b> | <i>pool-name</i> | A string of characters and positive integers, for instance, mypool or 1. |

**Defaults** No DHCP address pool is defined by default.

**Command** Global configuration mode.  
**Mode**

**Usage Guide** Execute the command to enter the DHCP address pool configuration mode:

```
Ruijie(dhcp-config)#
```

In this configuration mode, configure the IP address range, the DNS server and the default gateway.

**Configuration** The following example defines a DHCP address pool named mypool0.

**Examples**

```
Ruijie(config)#ip dhcp pool mypool0
```

**Related  
Commands**

| Command                         | Description                                                                                  |
|---------------------------------|----------------------------------------------------------------------------------------------|
| <b>host</b>                     | Defines the IP address and network mask, which is used to configure the DHCP manual binding. |
| <b>ip dhcp excluded-address</b> | Defines the IP addresses that the DHCP server cannot assign to the clients.                  |
| <b>network (DHCP)</b>           | Defines the network number and network mask of the DHCP address pool.                        |

**Platform** N/A

**Description**

## 4.28 ip dhcp relay check server-id

Use this command to enable the **ip dhcp relay check server-id** function. Use the **no** form of this command to restore the default setting.

**ip dhcp relay check server-id**

**no ip dhcp relay check server-id**

| Parameter          | Parameter | Description |
|--------------------|-----------|-------------|
| <b>Description</b> | N/A       | N/A         |

**Defaults** The **ip dhcp relay check server-id** command is disabled.

**Command** Global configuration mode.  
**Mode**

**Usage Guide** Switch will select the server to be sent according to server-id option when forwarding DHCP REQUEST via this command. Without this command configured, the switch forwards the DHCP REQUEST to all configured DHCP servers.

**Configuration** The following example enables the ip dhcp relay check server-id function.

**Examples**

```
Ruijie(config)# ip dhcp relay check server-id
```

The following example disables the ip-dhcp relay check server-id function.

```
Ruijie(config)# no ip dhcp relay check server-id
```

| Related  | Command             | Description             |
|----------|---------------------|-------------------------|
| Commands | <b>service dhcp</b> | Enables the DHCP Relay. |

Platform N/A

Description

## 4.29 ip dhcp relay information option82

Use this command to enable the **ip dhcp relay information option82** function. Use the **no** form of this command to restore the default setting.

**ip dhcp relay information option82**

**no ip dhcp relay information option82**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** The **ip dhcp relay information option82** command is disabled.

**Command** Global configuration mode.

**Mode**

**Usage Guide** This command is exclusive with the **option dot1x** command.

**Configuration** The following example enables the option82 function on the DHCP relay.

**Examples**

```
Ruijie(config)# Ip dhcp relay information option82
```

The following example disables the option82 function on the DHCP relay.

```
Ruijie(config)# no ip dhcp relay information option82
```

| Related  | Command             | Description             |
|----------|---------------------|-------------------------|
| Commands | <b>service dhcp</b> | Enables the DHCP Relay. |

Platform N/A

Description

## 4.30 ip dhcp relay suppression

Use this command to enable the DHCP binding globally. Use the **no** form of this command to disable the DHCP binding globally and enable the **DHCP relay** suppression on the port.

**ip dhcp relay suppression**  
**no ip dhcp relay suppression**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** The **ip dhcp relay suppression** command is disabled.

**Command** Interface configuration mode.

**Mode**

**Usage Guide** After executing this command, the system will not relay the DHCP request message on the interface.

**Configuration** The following example enables the relay suppression function.

**Examples**

```
Ruijie(config-if)# ip dhcp relay suppression
```

The following example enables the relay suppression function.

```
Ruijie(config-if)# no ip dhcp relay suppression
```

| Related  | Command             | Description             |
|----------|---------------------|-------------------------|
| Commands | <b>service dhcp</b> | Enables the DHCP Relay. |

**Platform** N/A

**Description**

## 4.31 ip dhcp server arp-detect

Use this command to enable the user-offline detection. Use the **no** or **default** form this command to restore the default setting.

**ip dhcp server arp-detect**  
**no ip dhcp server arp-detect**  
**default ip dhcp server arp-detect**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command** Global configuration mode

**Mode**

**Usage Guide** This command is used to detect whether the user has gone offline, If the user does not go online within a certain period, the IP address is reclaimed.

**Configuration** The following example enables the user-offline detection.

**Examples**

```
Ruijie(config)# ip dhcp server arp-detect
```

| Related         | Command | Description |
|-----------------|---------|-------------|
| <b>Commands</b> | N/A     | N/A         |

**Platform** N/A

**Description**

## 4.32 ip dhcp server detect

Use this command to enable the fake DHCP server detection. Use the **no** or **default** form of this command to restore the default setting.

**ip dhcp server detect**

**no ip dhcp server detect**

**default ip dhcp server detect**

| Parameter          | Parameter | Description |
|--------------------|-----------|-------------|
| <b>Description</b> | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** After this function is enabled, any fake DHCP server detected is logged.

**Configuration** The following example enables the fake DHCP server detection.

**Examples**

```
Ruijie(config)# ip dhcp server detect
```

| Related         | Command | Description |
|-----------------|---------|-------------|
| <b>Commands</b> | N/A     | N/A         |

**Platform** N/A

**Description**

## 4.33 ip dhcp use class

Use this command to enable the CLASS to allocate addresses in the global configuration mode. Use the **no** form of this command can be used to disable the CLASS.

**ip dhcp use class**

**no ip dhcp use class**

|                      |                                                                |                    |
|----------------------|----------------------------------------------------------------|--------------------|
| <b>Parameter</b>     | <b>Parameter</b>                                               | <b>Description</b> |
| <b>Description</b>   | N/A                                                            | N/A                |
| <b>Defaults</b>      | Enabled                                                        |                    |
| <b>Command</b>       | This function is enabled by default.                           |                    |
| <b>Mode</b>          |                                                                |                    |
| <b>Usage Guide</b>   | N/A                                                            |                    |
| <b>Configuration</b> | The following example enables the CLASS to allocate addresses. |                    |
| <b>Examples</b>      | <pre>Ruijie(config)# ip dhcp use class</pre>                   |                    |
| <b>Related</b>       | <b>Command</b>                                                 | <b>Description</b> |
| <b>Commands</b>      | N/A                                                            | N/A                |
| <b>Platform</b>      | N/A                                                            |                    |
| <b>Description</b>   |                                                                |                    |

## 4.34 ip helper-address

Use this command to add an IP address of the DHCP server. Use the **no** form of this command to delete an IP address of the DHCP server.

The server address can be configured globally or on a specific interface. Therefore, this command can run in the global configuration mode or the interface configuration mode to add the DHCP server information.

**ip helper-address { cycle-mode | [ vrf {vrf-name}] A.B.C.D }**

**no ip helper-address { cycle-mode | [ vrf {vrf-name}] A.B.C.D }**

|                    |                                                                                                                                                |                                                                        |
|--------------------|------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------|
| <b>Parameter</b>   | <b>Parameter</b>                                                                                                                               | <b>Description</b>                                                     |
| <b>Description</b> | <b>cycle-mode</b>                                                                                                                              | Indicates that DHCP request packets are forwarded to all DHCP servers. |
|                    | <b>vrf {vrf-name}</b>                                                                                                                          | Indicates a VPN Routing & Forwarding (VRF) name.                       |
|                    | <b>A.B.C.D</b>                                                                                                                                 | Indicates the IP address of a DHCP server.                             |
| <b>Defaults</b>    | N/A                                                                                                                                            |                                                                        |
| <b>Command</b>     | Global configuration mode, interface configuration mode.                                                                                       |                                                                        |
| <b>Mode</b>        |                                                                                                                                                |                                                                        |
| <b>Usage Guide</b> | DHCP request packets are sent to the DHCP server whose IP address is configured, while DHCP response packets are forwarded to the DHCP client. |                                                                        |

Up to 20 DHCP server IP addresses can be configured globally or on a layer-3 interface. When an interface receives a DHCP request packet, the DHCP server configuration on the interface prevails over that configured globally. If the interface is not configured with DHCP server addresses, the global configuration takes effect.

DHCP relay is based on vrf.

In global configuration mode, you can enable **cycle-mode**. When it is enabled, DHCP request packets are forwarded to all DHCP servers. If it is not enabled, DHCP request packets are sent to the first DHCP server configured under this rule. This parameter can only be enabled in global configuration mode and take effect both globally and on interfaces. By default, **cycle-mode** is enabled.

**Configuration** The following example sets the address for a DHCP server, in the interface vlan 1, to 192.168.11.1.

**Examples**

```
Ruijie# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)# interface vlan 1
Ruijie(config-if)# ip helper-address 192.168.11.1
```

The following example deletes the configured address of a DHCP server, 192.168.11.1.

```
Ruijie(config-if)# no ip helper-address 192.168.11.1
```

The following example sets the IP address for the global server to 192.168.100.1.

```
Ruijie# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)# ip helper-address 192.168.100.1
```

The following example deleted the configured IP address for the global server, 192.168.100.1.

```
Ruijie(config)# no ip helper-address 192.168.100.1
```

The following example enables DHCP request packets to be forwarded to all servers.

```
Ruijie(config)# ip helper-address cycle-mode
```

The following example disables DHCP request packets to be forwarded to all servers.

```
Ruijie(config)# no ip helper-address cycle-mode
```

| Related  | Command      | Description             |
|----------|--------------|-------------------------|
| Commands | service dhcp | Enables the DHCP relay. |

**Platform** N/A

**Description**

## 4.35 lease

Use this command to define the lease time of the IP address that the DHCP server assigns to the client in the DHCP address pool configuration mode. Use the **no** or **default** form of this command to restore the default setting. A limited lease time ranges from 1 minute to 23 hours and 59 minutes.

**lease** { *days* [ *hours* ] [ *minutes* ] | **infinite** }

**no lease**

**default lease**

| Parameter   | Parameter       | Description                                                                                                 |
|-------------|-----------------|-------------------------------------------------------------------------------------------------------------|
| Description | <i>days</i>     | Lease time in days                                                                                          |
|             | <i>hours</i>    | (Optional) Lease time in hours. It is necessary to define the days before defining the hours.               |
|             | <i>minutes</i>  | (Optional) Lease time in minutes. It is necessary to define the days and hours before defining the minutes. |
|             | <b>infinite</b> | Infinite lease time.                                                                                        |

**Defaults** The lease time for a static address pool is infinite. The lease time for other address pools is 1 day.

**Command** DHCP address pool configuration mode.

**Mode**

**Usage Guide** When the lease is getting near to expire, the DHCP client will send the request of renewal of lease. In general, the DHCP server will allow the renewal of lease of the original IP address.

**Configuration** The following example sets the DHCP lease to 1 hour.

**Examples**

```
Ruijie(dhcp-config)# lease 0 1
```

The following example sets the DHCP lease to 1 minute.

```
Ruijie(dhcp-config)# lease 0 0 1
```

| Related  | Command             | Description                                                                                    |
|----------|---------------------|------------------------------------------------------------------------------------------------|
| Commands | <b>ip dhcp pool</b> | Defines the name of the DHCP address pool and enters the DHCP address pool configuration mode. |

**Platform** N/A

**Description**

## 4.36 lease-threshold

Use this command in DHCP address pool configuration mode to define the DHCP alarm threshold. Use the **default** or **no** form of this command to restore the default setting.

**lease-threshold** *percentage*



**default lease-threshold****no lease-threshold**

| Parameter   | Parameter         | Description                                                      |
|-------------|-------------------|------------------------------------------------------------------|
| Description | <i>percentage</i> | Usage of the address pool, ranging from 60 to 100 in percentage. |

**Defaults** 90**Command** DHCP address pool configuration mode.**Mode**

**Usage Guide** If the maximum IP usage of the address pool reaches the threshold, the DHCP Server generates a SYSLOG alarm. The IP usage indicates the ratio of the number of assigned address pools to the total number of assignable address pools. If the number of assigned pools stays above the alarm threshold, an alarm is generated every 5 minutes.

**Configuration** The following example sets the alarm threshold to 80%.**Examples** Ruijie(dhcp-config)# lease-threshold 80

The following example disables the address pool alarm function.

Ruijie(dhcp-config)# no lease-threshold

| Related Commands | Command             | Description                                                                                    |
|------------------|---------------------|------------------------------------------------------------------------------------------------|
|                  | <b>ip dhcp pool</b> | Defines the name of the DHCP address pool and enters the DHCP address pool configuration mode. |

**Platform** N/A**Description**

## 4.37 match ip

Use this command to define an AM matching rule.

Use the **no** form of this command to remove the configuration.

Use the clear form of this command to clear all configurations.

**match ip** ip-address netmask [interface] [**add/remove**] vlan vlan-list**no match ip** ip-address netmask [interface] [**add/remove**] vlan vlan-list**clear match ip** [interface]

| Parameter   | Parameter         | Description                         |
|-------------|-------------------|-------------------------------------|
| Description | <i>ip-address</i> | IP address                          |
|             | <i>netmask</i>    | Subnet mask                         |
|             | <i>interface</i>  | Interface ID                        |
|             | <i>add/remove</i> | Adds or removes the specified VLAN. |

|                  |         |
|------------------|---------|
| <i>vlan-list</i> | VLAN ID |
|------------------|---------|

**Defaults** N/A

**Command Mode** AM rule configuration mode

**Usage Guide** With this function enabled, all DHCP clients with specified *vlan-list* and interface obtain addresses in the rule.  
If a DHCP client obtains a static address, it is not subject to AM matching rules in whichever Sub VLAN unless the AM rule configuration is based on VLAN instead of Sub VLAN. This type of matching rules applies to only static addresses.

**Configuration** The following example defines an AM matching rule.

**Examples**

```
Ruijie (config-address-manage) #match ip 192.168.11.0 255.255.255.0
GigabitEthernet 0/10 vlan 10
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 4.38 match ip default

Use this command to define a default AM matching rule.  
Use the no form of this command to remove the configuration,  
**match ip default ip-address netmask**  
**no match ip default ip-address netmask**

| Parameter Description | Parameter         | Description |
|-----------------------|-------------------|-------------|
|                       | <i>ip-address</i> | IP address  |
|                       | <i>netmask</i>    | Subnet mask |

**Defaults** N/A

**Command Mode** AM rule configuration mode

**Usage Guide** With this function enabled, all DHCP clients with specified *vlan-list* and interface obtain addresses in the default rule.

**Configuration** The following example defines a default AM matching rule.

**Examples** `Ruijie (config-address-manage) #match ip default 192.168.12.0 255.255.255.0`

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

### 4.39 netbios-name-server

Use this command to configure the WINS name server of the Microsoft DHCP client NETBIOS in the DHCP address pool configuration mode. The **no** or **default** form of this command can be used to restore the default setting.

**netbios-name-server** *ip-address* [ *ip-address2...ip-address8* ]

**no netbios-name-server**

**default netbios-name-server**

| Parameter Description | Parameter                        | Description                                                                         |
|-----------------------|----------------------------------|-------------------------------------------------------------------------------------|
|                       | <i>ip-address</i>                | IP address of the WINS server. It is required to configure one IP address at least. |
|                       | <i>ip-address2...ip-address8</i> | (Optional) IP addresses of WINS servers. Up to 8 WINS servers can be configured.    |

**Defaults** No WINS server is defined by default.

**Command Mode** DHCP address pool configuration mode.

**Usage Guide** When more than one WINS server is defined, the former has higher priority. The DHCP client will select the next WINS server only when its communication with the former WINS server fails.

**Configuration Examples** The following example specifies the WINS server 192.168.12.3 for the DHCP client.

```
netbios-name-server 192.168.12.3
```

| Related Commands | Command                  | Description                                                                                   |
|------------------|--------------------------|-----------------------------------------------------------------------------------------------|
|                  | <b>ip address dhcp</b>   | Enables the DHCP client on the interface to obtain the IP address.                            |
|                  | <b>ip dhcp pool</b>      | Defines the name of the DHCP address pool and enter the DHCP address pool configuration mode. |
|                  | <b>netbios-node-type</b> | Defines the netbios node type of the client host.                                             |

**Platform Description** N/A

## 4.40 netbios-node-type

Use this command to define the node type of the master NetBIOS of the Microsoft DHCP client in the DHCP address configuration mode. Use the **no** or **default** form of this command to restore the default setting.

**netbios-node-type** *type*

**no netbios-node-type**

**default netbios-node-type**

| Parameter   | Parameter   | Description                                                                                                                                                                                                                                                                                        |
|-------------|-------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Description | <i>type</i> | Type of node in two modes:<br>Digit in hexadecimal form in the range of 0 to FF. Only the following numerals are available:<br>1: b-node.<br>2: p-node.<br>4: m-node.<br>8: h-node.<br>String:<br>b-node: broadcast node<br>p-node: peer-to-peer node<br>m-node: mixed node<br>h-node: hybrid node |

**Defaults** No type of the NetBIOS node is defined by default.

**Command Mode** DHCP address pool configuration mode.

**Usage Guide** There are 4 types of the NetBIOS nodes of the Microsoft DHCP client: 1) Broadcast, which carries out the NetBIOS name resolution by the broadcast method, 2) Peer-to-peer, which directly requests the WINS server to carry out the NetBIOS name resolution, 3) Mixed, which requests the name resolution by the broadcast method firstly, and then carry out the name resolution by the WINS server connection, 4) Hybrid, which requests the WINS server to carry out the NetBIOS name resolution firstly, and it will carry out the NetBIOS name resolution by the broadcast method if the response is not received.  
By default, the node type for Microsoft operating system is broadcast or hybrid. If the WINS server is not configured, broadcast node is used. Otherwise, hybrid node is used. It is recommended to set the type of the NetBIOS node as Hybrid.

**Configuration Examples** The following example sets the NetBIOS node of Microsoft DHCP client as Hybrid.

```
Ruijie(dhcp-config)# netbios-node-type h-node
```

| Related Commands | Command             | Description                                               |
|------------------|---------------------|-----------------------------------------------------------|
|                  | <b>ip dhcp pool</b> | Defines the name of DHCP address pool and enters the DHCP |

|  |                            |                                                                       |
|--|----------------------------|-----------------------------------------------------------------------|
|  |                            | address pool configuration mode.                                      |
|  | <b>netbios-name-server</b> | Configures the WINS name server of the Microsoft DHCP client NETBIOS. |

**Platform** N/A

**Description**

## 4.41 network

Use this command to define the network number and network mask of the DHCP address pool in the DHCP address pool configuration mode. Use the **no** or **default** form of this command to restore the default setting.

**network** *net-number net-mask* [*low-ip-address high-ip-address* ]

**no network**

**default network**

| Parameter          | Parameter              | Description                                                                                                                  |
|--------------------|------------------------|------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b> | <i>net-number</i>      | Network number of the DHCP address pool                                                                                      |
|                    | <i>net-mask</i>        | Network mask of the DHCP address pool. If the network mask is not defined, the natural network mask will be used by default. |
|                    | <i>low-ip-address</i>  | Start IP address.                                                                                                            |
|                    | <i>high-ip-address</i> | End IP address.                                                                                                              |

**Defaults** No network number or network mask is defined by default.

**Command** DHCP address pool configuration mode.

**Mode**

**Usage Guide** This command defines the subnet and subnet mask of a DHCP address pool, and provides the DHCP server with an address space which can be assigned to the clients. Unless excluded addresses are configured, all the addresses of the DHCP address pool can be assigned to the clients. The DHCP server assigns the addresses in the address pool orderly. If the DHCP server found an IP address is in the DHCP binding table or in the network segment, it checks the next until it assigns an effective IP address.

The **show ip dhcp binding** command can be used to view the address assignment, and the **show ip dhcp conflict** command can be used to view the address conflict detection configuration.

**Configuration Examples** The following example defines the network number of the DHCP address pool as 192.168.12.0, and the network mask as 255.255.255.240.

```
network 192.168.12.0 255.255.255.240
```

| Related         | Command                         | Description                                                        |
|-----------------|---------------------------------|--------------------------------------------------------------------|
| <b>Commands</b> | <b>ip dhcp excluded-address</b> | Defines the IP addresses that the DHCP server cannot assign to the |

|                     |                                                                                                |
|---------------------|------------------------------------------------------------------------------------------------|
|                     | clients.                                                                                       |
| <b>ip dhcp pool</b> | Defines the name of the DHCP address pool and enters the DHCP address pool configuration mode. |

**Platform** N/A

**Description**

## 4.42 next-server

Use this command to define the startup sever list that the DHCP client accesses during startup in the DHCP address configuration mode. Use the **no** or **default** form of this command to restore the default setting.

**next-server** *ip-address* [ *ip-address2...ip-address8* ]

**no next-server**

**default next-server**

| Parameter          | Parameter                        | Description                                                                                                                          |
|--------------------|----------------------------------|--------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b> | <i>ip-address</i>                | Defines the IP address of the startup server, which is usually the TFTP server. It is required to configure one IP address at least. |
|                    | <i>ip-address2...ip-address8</i> | (Optional) Up to 8 startup servers can be configured.                                                                                |

**Defaults** N/A

**Command** DHCP address pool configuration mode.

**Mode**

**Usage Guide** When more than one startup server is defined, the former will possess higher priory. The DHCP client will select the next startup server only when its communication with the former startup server fails.

**Configuration** The following example specifies the startup server 192.168.12.4 for the DHCP client.

**Examples**

```
Ruijie(dhcp-config)# next-server 192.168.12.4
```

| Related         | Command                | Description                                                                                   |
|-----------------|------------------------|-----------------------------------------------------------------------------------------------|
| <b>Commands</b> | <b>bootfile</b>        | Defines the default startup mapping file name of the DHCP client.                             |
|                 | <b>ip dhcp pool</b>    | Defines the name of the DHCP address pool and enter the DHCP address pool configuration mode. |
|                 | <b>ip help-address</b> | Defines the Helper address on the interface.                                                  |
|                 | <b>option</b>          | Configures the option of the RGOS software DHCP server.                                       |

**Platform** N/A

**Description**

## 4.43 option

Use this command to configure the option of the DHCP server in the DHCP address pool configuration mode. Use the **no** or **default** form of this command to restore the default setting.

**option** *code* { **ascii** *string* | **hex** *string* | **ip** *ip-address* }

**no option**

**default option**

| Parameter Description | Parameter                   | Description                    |
|-----------------------|-----------------------------|--------------------------------|
|                       | <i>code</i>                 | Defines the DHCP option codes. |
|                       | <b>ascii</b> <i>string</i>  | Defines an ASCII string.       |
|                       | <b>hex</b> <i>string</i>    | Defines a hex string.          |
|                       | <b>ip</b> <i>ip-address</i> | Defines an IP address list.    |

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** The DHCP provides a mechanism to transmit the configuration information to the host in the TCP/IP network. The DHCP message has a variable option field that can be defined according to the actual requirement. The DHCP client needs to carry the DHCP message with 32 bytes of option information at least. Furthermore, the fixed data field in the DHCP message is also referred to as an option. For the definition of current DHCP option, refer to RFC 2131.

**Configuration Examples** The following example defines the option code 19, which determines whether the DHCP client can enable the IP packet forwarding. 0 indicates to disable the IP packet forwarding, and 1 indicates to enable the IP packet forwarding. The configuration below enable the IP packet forwarding on the DHCP client.

```
Ruijie(dhcp-config)# option 19 hex 1
```

The following example defines the option code 33, which provides the DHCP client with the static route information. The DHCP client will install two static routes: 1) the destination network 172.16.12.0 and the gateway 192.168.12.12, 2) the destination network 172.16.16.0 and the gateway 192.168.12.16.

```
option 33 ip 172.16.12.0 192.168.12.12 172.16.16.0 192.168.12.16
```

| Related Commands | Command             | Description                                                                                    |
|------------------|---------------------|------------------------------------------------------------------------------------------------|
|                  | <b>ip dhcp pool</b> | Defines the name of the DHCP address pool and enters the DHCP address pool configuration mode. |

**Platform** N/A

**Description**

## 4.44 pool-status

Use this command to enable or disable the DHCP address pool.

**pool-status { enable | disable }**

| Parameter          | Parameter      | Description                |
|--------------------|----------------|----------------------------|
| <b>Description</b> | <b>enable</b>  | Enables the address pool.  |
|                    | <b>disable</b> | Disables the address pool. |

**Defaults** By default, the address pool is enabled after it is configured.

**Command Mode** DHCP address pool configuration mode

**Usage Guide** This command is configured on the DHCP server.

**Configuration** The following example disables the address pool.

**Examples** Ruijie (dhcp-config) # pool-status disable

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 4.45 relay agent information

Use this command to enter the Option82 matching information configuration mode in the global CLASS configuration mode. Use the **no** form of this command to delete the Option82 matching information of the CLASS.

**relay agent information**

**no relay agent information**

| Parameter          | Parameter | Description |
|--------------------|-----------|-------------|
| <b>Description</b> | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Global CLASS configuration mode



**Usage Guide** After executing this command, it enters the Option82 matching information configuration mode which is shown as "Ruijie (config-dhcp-class-relayinfo)#".  
In this configuration mode, user can configure the class matching multiple Option82 information.

**Configuration Examples** The following example configures a global CLASS and enters the Option82 matching information configuration mode.

```
Ruijie(config)# ip dhcp class myclass
Ruijie(config-dhcp-class)# relay agent information
Ruijie(config-dhcp-class-relayinfo)#
```

| Related Commands | Command              | Description                                                     |
|------------------|----------------------|-----------------------------------------------------------------|
|                  | <b>ip dhcp class</b> | Defines a CLASS and enters the global CLASS configuration mode. |

**Platform** N/A  
**Description**

### 4.46 relay-information hex

Use this command to enter the Option82 matching information configuration mode. Use the **no** form of this command to delete a piece of matching information.

**relay-information hex** *aabb.ccdd.eeff...* [ \* ]  
**no relay-information hex** *aabb.ccdd.eeff...* [ \* ]

| Parameter Description | Parameter                   | Description                                                                                                                                                             |
|-----------------------|-----------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <i>aabb.ccdd.eeff...[*]</i> | Hexadecimal Option82 matching information. The "*" symbol means partial matching which needs the front part matching only. Without the "*" means needing full matching. |

**Defaults** N/A

**Command Mode** Global CLASS configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example configures a global CLASS which can match multiple Option82 information.

```
Ruijie(config)# ip dhcp class myclass
Ruijie(config-dhcp-class)# relay agent information
Ruijie(config-dhcp-class-relayinfo)# relay-information
hex 0102256535
Ruijie(config-dhcp-class-relayinfo)# relay-information
hex 010225654565
Ruijie(config-dhcp-class-relayinfo)# relay-information
hex 060225654565
```

```
Ruijie(config-dhcp-class-relayinfo)# relay-information
hex 060223*
```

| Related Commands | Command                        | Description                                                    |
|------------------|--------------------------------|----------------------------------------------------------------|
|                  | <b>ip dhcp class</b>           | Defines a CLASS and enter the global CLASS configuration mode. |
|                  | <b>relay agent information</b> | Enters the Option82 matching information configuration mode.   |

**Platform** N/A

**Description**

## 4.47 remark

Use this command to configure the identification which is used to describe the CLASS in this global CLASS configuration mode. Use the **no** form of this command to delete the identification.

**remark** *class-remark*

**no remark**

| Parameter Description | Parameter    | Description                                                                                    |
|-----------------------|--------------|------------------------------------------------------------------------------------------------|
|                       | class-remark | Information used to identify the CLASS, which can be the character strings with space in them. |

**Defaults** N/A.

**Command Mode** Global CLASS configuration mode.

**Usage Guide** N/A

**Configuration Examples** The following example configures the identification information for a global CLASS.

```
Ruijie(config)# ip dhcp class myclass
Ruijie(config-dhcp-class)# remark used in #1 build
```

| Related Commands | Command              | Description                                                    |
|------------------|----------------------|----------------------------------------------------------------|
|                  | <b>ip dhcp class</b> | Defines a CLASS and enter the global CLASS configuration mode. |

**Platform** N/A

**Description**

## 4.48 service dhcp

Use this command to enable the DHCP server and the DHCP relay on the device in global configuration mode. Use the **no** or **default** form of this command to restore the default setting.

**service dhcp**

**no service dhcp**  
**default service dhcp**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** The **service dhcp** command is disabled.

**Command Mode** Global configuration mode

**Usage Guide** The DHCP server can assign the IP addresses to the clients automatically, and provide them with the network configuration information such as DNS server and default gateway. The DHCP relay can forward the DHCP requests to other servers, and the returned DHCP responses to the DHCP client, serving as the relay for DHCP packets.

**Configuration Examples** The following example enables the DHCP server and the DHCP relay feature.

```
Ruijie(config)# service dhcp
```

| Related Commands | Command                                  | Description                                                 |
|------------------|------------------------------------------|-------------------------------------------------------------|
|                  | <b>show ip dhcp server statistics</b>    | Displays various statistics information of the DHCP server. |
|                  | <b>ip helper-address [ vrf ] A.B.C.D</b> | Adds an IP address of the DHCP server.                      |

**Platform Description** N/A

## 4.49 show dhcp lease

Use this command to display the lease information of the IP address obtained by the DHCP client.

**show dhcp lease**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode.

**Usage Guide** If the IP address is not defined, display the binding condition of all addresses. If the IP address is defined, display the binding condition of this IP address.

**Configuration** The following example displays the result of the show dhcp lease.

**Examples**

```
Ruijie# show dhcp lease
Temp IP addr: 192.168.5.71 for peer on Interface: FastEthernet0/0
Temp sub net mask: 255.255.255.0
  DHCP Lease server: 192.168.5.70, state: 3 Bound
  DHCP transaction id: 168F
  Lease: 600 secs, Renewal: 300 secs, Rebind: 525 secs
Temp default-gateway addr: 192.168.5.1
Next timer fires after: 00:04:29
Retry count: 0 Client-ID: redgaint-00d0.f8fb.5740-Fa0/0
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform  
Description**

N/A

## 4.50 show ip dhcp binding

Use this command to display the binding condition of the DHCP address.

**show ip dhcp binding** [ *ip-address* ]

**Parameter  
Description**

| Parameter         | Description                                                                   |
|-------------------|-------------------------------------------------------------------------------|
| <i>ip-address</i> | (Optional) Only displays the binding condition of the specified IP addresses. |

**Defaults**

N/A

**Command  
Mode**

Privileged EXEC mode.

**Usage Guide**

If the IP address is not defined, show the binding condition of all addresses. If the IP address is defined, show the binding condition of this IP address

**Configuration**

The following is the result of the show ip dhcp binding.

**Examples**

```
Ruijie# show ip dhcp binding
Total number of clients   : 4
Expired clients           : 3
Running clients           : 1

IP address      Hardware address      Lease expiration      Type
20.1.1.1        2000.0000.2011      000 days 23 hours 59 mins  Automatic
```

The meaning of various fields in the show result is described as follows.

| Field                                  | Description                                                                                                                                                                                                           |
|----------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| IP address                             | The IP address to be assigned to the DHCP client.                                                                                                                                                                     |
| Client-Identifier<br>/Hardware address | The client identifier or hardware address of the DHCP client.                                                                                                                                                         |
| Lease expiration                       | The expiration date of the lease. The Infinite indicates it is not limited by the time. The IDLE indicates the address is in the free status currently for it is not renewed or the DHCP client releases it actively. |
| Type                                   | The type of the address binding. The Automatic indicates an IP address is assigned automatically, and the Manual indicates an IP address is assigned by manual.                                                       |

| Related Commands | Command                      | Description                            |
|------------------|------------------------------|----------------------------------------|
|                  | <b>clear ip dhcp binding</b> | Clears the DHCP address binding table. |

**Platform** N/A  
**Description**

## 4.51 show ip dhcp conflict

Use this command to show the conflict history record of the DHCP sever.

**show ip dhcp conflict**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode.

**Usage Guide** This command can display the conflict address list detected by the DHCP server.

**Configuration Examples** The following example displays the output result of the **show ip dhcp conflict** command.

```
Ruijie# show ip dhcp conflict
IP address  Detection Method
192.168.12.1 Ping
```

The meaning of various fields in the show result is described as follows.

| Field            | Description                                                   |
|------------------|---------------------------------------------------------------|
| IP address       | The IP addresses which cannot be assigned to the DHCP client. |
| Detection Method | The conflict detection method.                                |

| Related  | Command                       | Description                      |
|----------|-------------------------------|----------------------------------|
| Commands | <b>clear ip dhcp conflict</b> | Clears the DHCP conflict record. |

**Platform** N/A

**Description**

## 4.52 show ip dhcp database

Use this command to display backup status of DHCP database.

**show ip dhcp database**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** N/A

**Command** Privileged EXEC mode.

**Mode**

**Usage Guide** This command is configured on the DHCP server. Run this command to display information about the DHCP database.

**Configuration** The following example displays status of the DHCP database..

**Examples**

```
Ruijie#show ip dhcp database
Enable           :No
Status           :ready
Save File        :Default
Successs         :0
Failures         :0
Interval Time    :86400
```

The meaning of various fields in the show result is described as follows.

| Field     | Description                          |
|-----------|--------------------------------------|
| Enable    | The status of the database.          |
| Status    | The status of data recovery.         |
| Save File | The path where data is saved.        |
| Successs  | The times of successful data saving. |
| Failures  | The times of failed data saving.     |

|               |                                    |
|---------------|------------------------------------|
| Interval Time | The interval time for data saving. |
|---------------|------------------------------------|

**Related Commands** N/A

**Platform Description** N/A

### 4.53 show ip dhcp history

Use this command to display the DHCP lease history.

**show ip dhcp history**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** This command is configured on the DHCP server.

**Configuration Examples** The following example displays the DHCP lease history.

```
Ruijie#show ip dhcp history
Expired clients          : 3
IP address              Hardware address      Lease expiration      Vlan/Relay
10.1.1.5                2222.abcd.47ac      IDLE                  4097
10.1.1.4                2222.abcd.47ae      IDLE                  4097
10.1.1.3                2222.abcd.47ad      IDLE                  4097
Running clients         : 0
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

### 4.54 show ip dhcp identifier

Use this command to display the DHCP address pool ID and address usage.

**show ip dhcp identifier**

| Parameter    | Parameter            | Description |
|--------------|----------------------|-------------|
| Description  | N/A                  | N/A         |
| Defaults     | N/A                  |             |
| Command Mode | Privileged EXEC mode |             |
| Usage Guide  | N/A                  |             |

**Configuration** The following example displays the DHCP address pool ID and address usage.

**Examples**

```
Ruijie# show ip dhcp identifier
```

| Pool name | Identifier | Total | Distributed | Remained |
|-----------|------------|-------|-------------|----------|
| wwp       | 597455782  | 65533 | 0           | 65533    |

|             |                                |
|-------------|--------------------------------|
| Pool name   | Address pool name.             |
| Identifier  | Address pool ID.               |
| Total       | Total number of addresses.     |
| Distributed | Number of allocated addresses. |
| Remained    | Number of remained addresses.  |

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 4.55 show ip dhcp pool

Use this command to display the address statistics of an address pool.

**show ip dhcp pool** [ *poolname* ]

| Parameter   | Parameter       | Description                                                           |
|-------------|-----------------|-----------------------------------------------------------------------|
| Description | <i>poolname</i> | (Optional) Address pool whose address statistics are to be displayed. |

**Defaults** Privileged EXEC mode.

**Command Mode** N/A

**Usage Guide** Use this command to show the address statistics of an address pool.



**Configuration** The following example displays the output result of the **show ip dhcp pool *poolname*** command.

**Examples**

```
Ruijie# show ip dhcp pool
Ruijie#sh ip dh pool
Pool name      Total      Distributed  Remained    Percentage
-----
net20          253        11           242         4.34782
test           0          0            0           0.00000
```

**Related  
Commands**

| Command      | Description                                                                                    |
|--------------|------------------------------------------------------------------------------------------------|
| ip dhcp pool | Defines the name of the DHCP address pool and enters the DHCP address pool configuration mode. |

**Platform** N/A

**Description**

## 4.56 show ip dhcp relay-statistics

Use this command to display the statistics of the DHCP relay.

**show ip dhcp relay-statistics**

**Parameter  
Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** N/A

**Command  
Mode** Privileged EXEC mode

**Usage Guide** This command is used to display the statistics of the DHCP relay.

**Configuration** The following example displays the statistics of the DHCP relay.

**Examples**

```
Ruijie# show ip dhcp relay-statistics
Cycle mode          0

Message            Count
Discover            0
Offer               0
Request             0
Ack                 0
Nak                 0
Decline             0
Release             0
Info                0
Bad                 0
```

| Direction     | Count |
|---------------|-------|
| Rx client     | 0     |
| Rx client uni | 0     |
| Rx client bro | 0     |
| Tx client     | 0     |
| Tx client uni | 0     |
| Tx client bro | 0     |
| Rx server     | 0     |
| Tx server     | 0     |

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 4.57 show ip dhcp server detect

Use this command to display the fake DHCP server detected.

**show ip dhcp server detect**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration Examples** The following example displays the fake DHCP server detected.

```
Ruijie#show ip dhcp server detect
The DHCP Server information:
Server IP = 10.1.10.40, DHCP server interface = GigabitEthernet 0/1
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 4.58 show ip dhcp server statistics

Use this command to display the statistics of the DHCP server.

**show ip dhcp server statistics**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** N/A

**Command** Privileged EXEC mode

**Mode**

**Usage Guide** This command displays the statistics of the DHCP server.

**Configuration** The following example displays the output result of the **show ip dhcp server statistics** command.

### Examples

```
Ruijie# show ip dhcp server statistics
Address pools          2
Lease counter         4
Active Lease Counter   0
Expired Lease Counter  4
Malformed messages    0
Dropped messages      0

Message                Received
BOOTREQUEST            216
DHCPDISCOVER           33
DHCPREQUEST            25
DHCPDECLINE            0
DHCPRELEASE            1
DHCPINFORM             150

Message                Sent
BOOTREPLY              16
DHCPOFFER              9
DHCPACK                7
DHCPNAK                0
DHCPREQUESTTIMES      0
DHCPREQUESTSUCTIMES   0
DISCOVER-PROCESS-ERROR 0
LEASE-IN-PINGSTATE     0
NO-LEASE-RESOURCE     0
SERVERID-NO-MATCH     0
```

```
-----
recv                0
send                0
```

The meaning of various fields in the show result is described as follows.

| Field                    | Description                                                               |
|--------------------------|---------------------------------------------------------------------------|
| Address pools            | Number of address pools.                                                  |
| Automatic bindings       | Number of automatic address bindings.                                     |
| Manual bindings          | Number of manual address bindings.                                        |
| Expired bindings         | Number of expired address bindings.                                       |
| Malformed messages       | Number of malformed messages received by the DHCP.                        |
| Message Received or Sent | Number of the messages received and sent by the DHCP server respectively. |

| Related Commands | Command                                | Description                        |
|------------------|----------------------------------------|------------------------------------|
|                  | <b>clear ip dhcp server statistics</b> | Clears the DHCP server statistics. |

**Platform** N/A  
**Description**

## 4.59 show ip dhcp socket

Use this command to display the socket used by the DHCP server.

**show ip dhcp socket**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration Examples** The following example displays the socket used by the DHCP server.

```
ruijie#show ip dhcp socket
dhcp socket = 47.
```

---

| <b>Related<br/>Commands</b> | <b>Command</b> | <b>Description</b> |
|-----------------------------|----------------|--------------------|
|                             | N/A            | N/A                |

**Platform  
Description**

N/A

## 5 DHCPv6 Commands

### 5.1 clear ipv6 dhcp binding

Use this command to clear the DHCPv6 binding information.

**clear ipv6 dhcp binding** [ *ipv6-address* ]

| Parameter   | Parameter           | Description                          |
|-------------|---------------------|--------------------------------------|
| Description | <i>ipv6-address</i> | Sets the IPv6 address or the prefix. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** If the *ipv6-address* is not specified, all DHCPv6 binding information is cleared. If the *ipv6-address* is specified, the binding information for the specified address is cleared.

**Configuration Examples** The following example clears the DHCPv6 binding information:

```
Ruijie(config)# clear ipv6 dhcp binding
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

### 5.2 clear ipv6 dhcp client

Use this command to reset the DHCPv6 client.

**clear ipv6 dhcp client***interface-type interface-number*

| Parameter   | Parameter                                        | Description                                       |
|-------------|--------------------------------------------------|---------------------------------------------------|
| Description | <i>interface-type</i><br><i>interface-number</i> | Sets the interface type and the interface number. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** This command is used to reset the DHCPv6 client, which may lead the client to request for the configurations from the server again.

**Configuration** The following example resets DHCP client VLAN 1.

**Examples**

```
Ruijie# clear ipv6 dhcp client vlan 1
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

### 5.3 clear ipv6 dhcp conflict

Use this command to clear the DHCPv6 address conflicts.

**clear ipv6 dhcp conflict** { *ipv6-address* | \* }

| Parameter          | Parameter           | Description                       |
|--------------------|---------------------|-----------------------------------|
| <b>Description</b> | <i>ipv6-address</i> | Specifies IPv6 address or prefix. |
|                    | *                   | All IPv6 addresses or prefixes    |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** If an IPv6 address conflict is detected, the DHCPv6 client will send the Decline message. Then the DHCPv6 server will add the address in this message into the address conflict queue. The addresses added into the address conflict queue cannot be assigned any longer.

If the \* parameter is not specified, all conflicts of IPv6 addresses or prefixes will be deleted.

If the *ipv6-address* parameter is specified, only the specified address conflict will be deleted.

**Configuration** The following example clears a DHCPv6 address conflict.

**Examples**

```
Ruijie# clear ipv6 dhcp conflict 2008:50::2
```

| Related Commands | Command                        | Description                 |
|------------------|--------------------------------|-----------------------------|
|                  | <b>show ipv6 dhcp conflict</b> | Displays address conflicts. |

**Platform** N/A

**Description**

## 5.4 clear ipv6 dhcp relay statistics

Use this command to clear the packet sending and receiving condition with the DHCPv6 Relay function enabled.

**clear ipv6 dhcp relay statistics**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration Examples** The following example clears the packet sending and receiving condition with the DHCPv6 Relay function enabled.

```
Ruijie# clear ipv6 dhcp relay statistics
```

| Related Commands | Command                                | Description                           |
|------------------|----------------------------------------|---------------------------------------|
|                  | <b>show ipv6 dhcp relay statistics</b> | Displays the statistical information. |

**Platform Description** N/A

## 5.5 clear ipv6 dhcp server statistics

Use this command to clear the DHCPv6 server statistics.

**clear ipv6 dhcp server statistics**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** This command is used to clear the DHCPv6 server statistics.

**Configuration** The following example clears the DHCPv6 server statistics.



**Examples** `Ruijie(config)# clear ipv6 dhcp server statistics`

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 5.6 dns-server

Use this command to set the DNS Server list information for the DHCPv6 Server.

Use the **no** form of this command to restore the default setting.

**dns-server** *ipv6-address*

**no dns-server** *ipv6-address*

| Parameter          | Parameter           | Description                              |
|--------------------|---------------------|------------------------------------------|
| <b>Description</b> | <i>ipv6-address</i> | Sets the IPv6 address or the DNS server. |

**Defaults** By default, no DNS server list is configured.

**Command Mode** DHCPv6 pool configuration mode

**Usage Guide** To configure several DNS Server addresses, use the **dns-server** command for several times. The newly-configured DNS Server address will not overwrite the former ones.

**Configuration Examples** The following example configures the DNS server address.

**Examples** `Ruijie(config-dhcp)# dns-server 2008:1::1`

| Related Commands | Command               | Description                              |
|------------------|-----------------------|------------------------------------------|
|                  | <b>domain-name</b>    | Sets the DHCPv6 domain name information. |
|                  | <b>ipv6 dhcp pool</b> | Sets a DHCPv6 pool.                      |

**Platform** N/A

**Description**

## 5.7 domain-name

Use this command to set the domain name for the DHCPv6 server.

Use the **no** form of this command to restore the default setting.

**domain-name** *domain*

**no domain-name** *domain*

|                               |                                                                                                                                                                     |                                  |
|-------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------|
| <b>Parameter</b>              | <b>Parameter</b>                                                                                                                                                    | <b>Description</b>               |
| <b>Description</b>            | <i>domain</i>                                                                                                                                                       | Sets the domain name.            |
| <b>Defaults</b>               | By default, no domain name is configured.                                                                                                                           |                                  |
| <b>Command Mode</b>           | DHCPv6 pool configuration mode                                                                                                                                      |                                  |
| <b>Usage Guide</b>            | To configure several domain names, use the <code>domain-name</code> command for several times. The newly-configured domain name will not overwrite the former ones. |                                  |
| <b>Configuration Examples</b> | The following example sets the domain name for the DHCPv6 server to <code>example.com</code> .                                                                      |                                  |
| <b>Examples</b>               | <pre>Ruijie(config-dhcp)# domain-name example.com</pre>                                                                                                             |                                  |
| <b>Related Commands</b>       | <b>Command</b>                                                                                                                                                      | <b>Description</b>               |
|                               | <b>dns-server</b>                                                                                                                                                   | Sets the DHCPv6 DNS server list. |
|                               | <b>ipv6 dhcp pool</b>                                                                                                                                               | Sets the DHCPv6 pool.            |
| <b>Platform</b>               | N/A                                                                                                                                                                 |                                  |
| <b>Description</b>            |                                                                                                                                                                     |                                  |

## 5.8 iana-address prefix

Use this command to set the IA\_NA address prefix for the DHCPv6 Server. Use the **no** form of this command to restore the default setting.

**iana-address prefix** *ipv6-prefix/prefix-length* [ **lifetime** { *valid-lifetime* | *preferred-lifetime* } ]

**no iana-address prefix**

|                    |                                  |                                                                                                                                                                                                    |
|--------------------|----------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Parameter</b>   | <b>Parameter</b>                 | <b>Description</b>                                                                                                                                                                                 |
| <b>Description</b> | <i>ipv6-prefix/prefix-length</i> | Sets the IPv6 prefix and prefix length.                                                                                                                                                            |
|                    | <b>lifetime</b>                  | Sets the lifetime of the address allocated to the client.<br>With the keyword <b>lifetime</b> configured, both parameters <i>valid-lifetime</i> and <i>preferred-lifetime</i> shall be configured. |
|                    | <i>valid-lifetime</i>            | Sets the valid lifetime of using the allocated address for the client.                                                                                                                             |
|                    | <i>preferred-lifetime</i>        | Sets the preferred lifetime of the address allocated to the client.                                                                                                                                |

**Defaults**

By default, no IA\_NA address prefix is configured.

The default *valid-lifetime* is 3,600s(1 hour).

The default *preferred-lifetime* is 3,600s(1 hour).

**Command Mode**

DHCPv6 pool configuration mode

**Usage Guide** This command is used to set the IA\_NA address prefix for the DHCPv6 Server, and allocate the IA\_NA address to the client.  
 The Server attempts to allocate a usable address within the IA\_NA address prefix range to the client upon receiving the IA\_NA address request from the client. That address will be allocated to other clients if the client no longer uses that address again.

**Configuration** The following example sets the IA\_NA address prefix for the DHCPv6 Server.

**Examples**

```
Ruijie(config-dhcp)# iana-address prefix 2008:50::/64 lifetime 2000 1000
```

| Related Commands | Command                    | Description                           |
|------------------|----------------------------|---------------------------------------|
|                  | <b>ipv6 dhcp pool</b>      | Sets the DHCPv6 pool.                 |
|                  | <b>show ipv6 dhcp pool</b> | Displays the DHCPv6 pool information. |

**Platform** N/A  
**Description**

## 5.9 ipv6 dhcp client ia

Use this command to enable DHCPv6 client mode and request the IANA address from the DHCPv6 server. Use the **no** form of this command to restore the default setting.

**ipv6 dhcp client ia [rapid-commit]**  
**no ipv6 dhcp client ia**

| Parameter          | Parameter           | Description                                 |
|--------------------|---------------------|---------------------------------------------|
| <b>Description</b> | <b>rapid-commit</b> | Allows the two-message interaction process. |

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** This command is used to enable DHCPv6 client mode and request the IANA address from the DHCPv6 server,  
 The **rapid-commit** key allows the two-message interaction process between the client and the server. After the key is configured, the solicit message transmitted by the client contains the rapid-commit option.

**Configuration** The following example enables the request for the IANA address on the interface.

**Examples**

```
Ruijie(config)# interface fastethernet 0/1
Ruijie(config-if)# ipv6 dhcp client ia
```

| Related | Command | Description |
|---------|---------|-------------|
|---------|---------|-------------|

|                 |     |     |
|-----------------|-----|-----|
| <b>Commands</b> | N/A | N/A |
|-----------------|-----|-----|

**Platform** N/A

**Description**

## 5.10 ipv6 dhcp client pd

Use this command to enable the DHCPv6 client and request for the prefix address information.

Use the **no** form of this command to restore the default setting.

**ipv6 dhcp client pd** *prefix-name* [ **rapid-commit** ]

**no ipv6 dhcp client pd**

| Parameter          | Parameter           | Description                                 |
|--------------------|---------------------|---------------------------------------------|
| <b>Description</b> | <i>prefix-name</i>  | Defines the IPv6 prefix name.               |
|                    | <b>rapid-commit</b> | Allows the two-message interaction process. |

**Defaults** This function is disabled by default.

**Command** Interface configuration mode

**Mode**

**Usage Guide** With the DHCPv6 client mode disabled, use this command to enable the DHCPv6 client mode on the interface.

With the **ipv6 dhcp client pd** command enabled, the DHCPv6 client sends the prefix request to the DHCPv6 server

The keyword **rapid-commit** allows the client and the server two-message interaction process. With this keyword configured, the solicit message sent by the client includes the **rapid-commit** item.

**Configuration** The following example enables the prefix information request on the interface.

**Examples**

```
Ruijie(config)# interface fastethernet 0/1
Ruijie(config-if)# ipv6 dhcp client pd pd_name
```

| Related         | Command                         | Description                                         |
|-----------------|---------------------------------|-----------------------------------------------------|
| <b>Commands</b> | <b>clear ipv6 dhcp client</b>   | Resets the DHCPv6 client function on the interface. |
|                 | <b>show ipv6 dhcp interface</b> | Displays the DHCPv6 interface configuration.        |

**Platform** N/A

**Description**

## 5.11 ipv6 dhcp pool

Use this command to set the DHCPv6 server pool.

Use the **no** form of this command to restore the default setting.

**ipv6 dhcp pool** *poolname*  
**no ipv6 dhcp pool** *poolname*

| Parameter   | Parameter       | Description                   |
|-------------|-----------------|-------------------------------|
| Description | <i>poolname</i> | Defines the DHCPv6 pool name. |

**Defaults** By default, no DHCPv6 server pool is configured.

**Command Mode** Global configuration mode

**Usage Guide** This command is used to create a DHCPv6 Server configuration pool. After configuring this command, it enters the DHCPv6 pool configuration mode, in which the administrator can set the pool parameters, such as the prefix and the DNS Server information, ect.  
 After creating the DHCPv6 Server configuration pool, use the **ipv6 dhcp server** command to associate the pool and the DHCPv6 Server on one interface.

**Configuration Examples** The following example sets the DHCPv6 server pool.

```
Ruijie# configure terminal
Ruijie(config)# ipv6 dhcp pool pool1
Ruijie(config-dhcp)#
```

| Related Commands | Command                    | Description                                          |
|------------------|----------------------------|------------------------------------------------------|
|                  | <b>ipv6 dhcp server</b>    | Enables the DHCPv6 server function on the interface. |
|                  | <b>show ipv6 dhcp pool</b> | Displays the DHCPv6 pool information.                |

**Platform Description** N/A

## 5.12 ipv6 dhcp relay destination

Use this command to enable the DHCPv6 relay service and configure the destination address to which the messages are forwarded.

Use the **no** form of this command to restore the default setting.

**ipv6 dhcp relay destination** *ipv6-address* [ *interface-type interface-number* ]  
**no ipv6 dhcp relay destination** *ipv6-address* [ *interface-type interface-number* ]

| Parameter   | Parameter                                        | Description                                                                                               |
|-------------|--------------------------------------------------|-----------------------------------------------------------------------------------------------------------|
| Description | <i>ipv6-address</i>                              | Sets the DHCPv6 relay destination address.                                                                |
|             | <i>interface-type</i><br><i>interface-number</i> | (Optional) Specifies the forwarding output interface if the forwarding address is the local link address. |

**Defaults** By default, the relay and forward function is disabled, and the forwarding destination address and the output interface are not configured.

**Command Mode** Interface configuration mode

**Usage Guide** With the DHCPv6 relay service enabled on the interface, the DHCPv6 message received on the interface can be forwarded to all configured destination addresses. Those received DHCPv6 messages can be from the client, or from another DHCPv6 relay service.

The forwarding output interface configuration is mandatory if the forwarding address is the local link address or the multicast address. And the forwarding output interface configuration is optional if the forwarding address is global or station unicast or multicast address.

Without the forwarding output interface configured, the interface is selected according to the unicast or multicast routing protocol.

The relay reply message can be forwarded without the relay function enabled on the interface.

**Configuration Examples** The following example enables DHCPv6 Relay and sets the relay destination address on the interface to 3001::2.

```
Ruijie# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)# interface vlan 1
Ruijie(config-if)# ipv6 dhcp relay destination 3001::2
Ruijie(config-if)# end
```

| Related Commands | Command                         | Description                                |
|------------------|---------------------------------|--------------------------------------------|
|                  | <b>show ipv6 dhcp interface</b> | Displays the DHCPv6 interface information. |

**Platform Description** N/A

### 5.13 ipv6 dhcp server

Use this command to enable the DHCPv6 server on the interface.

Use the **no** form of this command to restore the default setting.

**ipv6 dhcp server *poolname* [ rapid-commit ] [ preference *value* ]**  
**no ipv6 dhcp server**

| Parameter Description | Parameter                      | Description                                                                                                       |
|-----------------------|--------------------------------|-------------------------------------------------------------------------------------------------------------------|
|                       | <i>poolname</i>                | Defines the DHCPv6 pool name.                                                                                     |
|                       | <b>rapid-commit</b>            | Allows the two-message interaction process.                                                                       |
|                       | <b>preference <i>value</i></b> | Sets the preference level for the advertise message. The valid range is from 1 to 100 and the default value is 0. |

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** Use the **ipv6 dhcp server** command to enable the DHCPv6 service. Configuring the keyword **rapid-commit** allows the two-message interaction for the server and the client when allocating the address prefix and setting other configurations. With this keyword configured, if the client solicit message includes the **rapid-commit** item, the DHCPv6 Server will send the Reply message immediately.

DHCPv6 Server carries with the **preference** value when sending the advertise message if the **preference** level is not 0.

If the **preference** level is 0, the advertise message will not include this field. If the **preference** value is 255, the client sends the request message to the server to obtain the configurations.

DHCPv6 Client, Server and Relay functions are exclusive, and only one of the functions can be configured on the interface.

**Configuration** The following example enables the DHCPv6 server on the interface.

**Examples**

```
Ruijie(config)# interface fastethernet 0/1
Ruijie(config-if)# ipv6 dhcp server pool1
```

| Related Commands | Command                    | Description                           |
|------------------|----------------------------|---------------------------------------|
|                  | <b>ipv6 dhcp pool</b>      | Sets the DHCPv6 pool.                 |
|                  | <b>show ipv6 dhcp pool</b> | Displays the DHCPv6 pool information. |

**Platform** N/A

**Description**

## 5.14 ipv6 local pool

Use this command to configure the local prefix pool of the DHCPv6 server prefix.

Use the **no** form of this command to restore the default setting.

**ipv6 local pool** *poolname prefix/prefix-length assigned-length*

**no ipv6 local pool** *poolname*

| Parameter Description | Parameter                   | Description                  |
|-----------------------|-----------------------------|------------------------------|
|                       | <i>poolname</i>             | The local prefix pool name   |
|                       | <i>prefix/prefix-length</i> | The prefix and prefix length |
|                       | <i>assigned-length</i>      | The assigned prefix length   |

**Defaults** By default, no local prefix pool of the DHCPv6 server prefix is configured.

**Command Mode** Global configuration mode

**Usage Guide** The **ipv6 local pool** command is used to create the local prefix pool. If the DHCPv6 server requires prefix delegation, you can use the **prefix-delegation pool** command to specify the local prefix pool and then assign prefixes from the prefix pool.

**Configuration** The following example configures the local prefix pool.

```
Ruijie(config)# ipv6 local pool client-prefix-pool 2001::db8::/64 80
```

The following example specifies the local prefix pool.

```
Ruijie(config-dhcp)# prefix-delegation pool client-prefix-pool lifetime 2000 1000
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

### 5.15 option52

Use this command to configure the DHCPv6 Server to set the CAPWAP AC IPv6 address. Use the **no** form of this command to restore the default setting.

**option52** *ipv6-address*  
**no option52** *ipv6-address*

| Parameter Description | Parameter           | Description                      |
|-----------------------|---------------------|----------------------------------|
|                       | <i>ipv6-address</i> | Sets the CAPWAP AC IPv6 address. |

**Defaults** By default, no option52 is created after pool configuration on the DHCPv6 server is complete.

**Command Mode** DHCPv6 pool configuration mode

**Usage Guide** This command can be used to set multiple CAPWAP AC IPv6 addresses. The newly added IPv6 address does not overwrite the old one.

**Configuration** The following example configures the domain-name address.

```
Ruijie(config-dhcp)# option52 2008:1::1
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |



**Platform** N/A

**Description**

## 5.16 prefix-delegation

Use this command to set the static binding address prefix information for the DHCPv6 server.

Use the **no** form of this command to restore the default setting.

**prefix-delegation** *ipv6-prefix/prefix-length client-DUID [ lifetime ]*

**no prefix-delegation** *ipv6-prefix/prefix-length client-DUID [ lifetime ]*

| Parameter          | Parameter                        | Description                                          |
|--------------------|----------------------------------|------------------------------------------------------|
| <b>Description</b> | <i>ipv6-prefix/prefix-length</i> | Sets the IPv6 address prefix and the prefix length.  |
|                    | <i>client-DUID</i>               | Sets the client DUID.                                |
|                    | <i>lifetime</i>                  | Sets the interval of using the prefix by the client. |

**Defaults** By default, no address prefix information is configured.  
The default *lifetime* is 3,600 seconds (one hour).

**Command Mode** DHCPv6 pool configuration mode

**Usage Guide** The administrator uses this command to manually set the address prefix information list for the client IA\_PD and set the valid lifetime for those prefixes.  
The parameter *client-DUID* allocates the address prefix to the first IA\_PD in the specified client.  
Before receiving the request message for the address prefix from the client, DHCPv6 Server searches for the corresponding static binding first. If it succeeds, the server returns to the static binding; otherwise, the server will attempt to allocate the address prefix from other prefix information sources.

**Configuration** The following example sets the prefix information for a DHCPv6 client.

**Examples**

```
Ruijie(config-dhcp)# prefix-delegation 2008:2::/64 0003000100d0f82233ac
```

| Related         | Command                       | Description                             |
|-----------------|-------------------------------|-----------------------------------------|
| <b>Commands</b> | <b>ipv6 dhcp pool</b>         | Sets a DHCPv6 pool.                     |
|                 | <b>ipv6 local pool</b>        | Sets a local prefix pool.               |
|                 | <b>prefix-delegation pool</b> | Specifies the DHCPv6 local prefix pool. |
|                 | <b>show ipv6 dhcp pool</b>    | Displays the DHCPv6 pool information.   |

**Platform** N/A

**Description**

## 5.17 prefix-delegation pool

Use this command to specify the local prefix pool for the DHCPv6 server.

Use the **no** form of this command to restore the default setting.

**prefix-delegation pool** *poolname* [ **lifetime** { *valid-lifetime* | *preferred-lifetime* } ]

**no prefix-delegation pool** *poolname*

| Parameter   | Parameter                 | Description                                                                                                                                                                                               |
|-------------|---------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Description | <i>poolname</i>           | Sets the local prefix pool name.                                                                                                                                                                          |
|             | <b>lifetime</b>           | Sets the lifetime of the address prefix allocated to the client.<br>With the keyword <b>lifetime</b> configured, both parameters <i>valid-lifetime</i> and <i>preferred-lifetime</i> shall be configured. |
|             | <i>valid-lifetime</i>     | Sets the valid lifetime of using the allocated address prefix for the client.                                                                                                                             |
|             | <i>preferred-lifetime</i> | Sets the preferred lifetime of the address prefix allocated to the client.                                                                                                                                |

**Defaults** By default, no address prefix pool is specified.  
The default *valid-lifetime* is 3,600s(1 hour).  
The default *preferred-lifetime* is 3,600s(1 hour).

**Command Mode** DHCPv6 pool configuration mode

**Usage Guide** Use the **prefix-delegation pool** command to set the prefix pool for the DHCPv6 Server and allocate the prefix to the client. Use the **ipv6 local pool** command to set the prefix pool.  
The Server attempts to allocate a usable prefix from the prefix pool to the client upon receiving the prefix request from the client. That prefix will be allocated to other clients if the client no longer uses that prefix again.

**Configuration Examples** The following example specifies the local prefix pool for the DHCPv6 server.

```
Ruijie(config-dhcp)# prefix-delegation pool client-prefix-pool lifetime 2000
1000
```

| Related Commands | Command                    | Description                                          |
|------------------|----------------------------|------------------------------------------------------|
|                  | <b>ipv6 dhcp pool</b>      | Sets a DHCPv6 pool.                                  |
|                  | <b>ipv6 local pool</b>     | Sets a local prefix pool.                            |
|                  | <b>prefix-delegation</b>   | Statically binds the client with the address prefix. |
|                  | <b>show ipv6 dhcp pool</b> | Displays the DHCPv6 pool information.                |

**Platform Description** N/A

## 5.18 show ipv6 dhcp

Use this command to display the device DUID.

**show ipv6 dhcp**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Interface configuration mode/Global configuration mode

**Usage Guide** The server, client and relay on the same device share a DUID.

**Configuration Examples** The following example displays the device DUID.

```
Ruijie# show ipv6 dhcp
This device's DHCPv6 unique identifier(DUID): 00:03:00:01:00:d0:f8:22:33:b0
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 5.19 show ipv6 dhcp binding

Use this command to display the address binding information for the DHCPv6 server.

**show ipv6 dhcp binding [ ipv6-address ]**

| Parameter   | Parameter           | Description                          |
|-------------|---------------------|--------------------------------------|
| Description | <i>ipv6-address</i> | Sets the IPv6 address or the prefix. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** If the *ipv6-address* is not specified, all prefixes dynamically assigned to the client and IANA address binding information are shown. If the *ipv6-address* is specified, the binding information for the specified address is shown.

**Configuration** The following example displays the address binding information for the DHCPv6 server.

**Examples**

```
Ruijie# show ipv6 dhcp binding
Client DUID: 00:03:00:01:00:d0:f8:22:33:ac
  IAPD: iaaid 0, T1 1800, T2 2880
  Prefix: 2001:20::/72
        preferred lifetime 3600, valid lifetime 3600
        expires at Jan 1 2008 2:23 (3600 seconds)
```

**Related****Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform**

N/A

**Description**

## 5.20 show ipv6 dhcp conflict

Use this command to display the DHCPv6 address conflicts.

**show ipv6 dhcp conflict**

**Parameter****Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults**

N/A

**Command**

Privileged EXEC mode

**Mode****Usage Guide**

N/A

**Configuration** The following example displays the DHCPv6 address conflicts.

**Examples**

```
Ruijie# show ipv6 dhcp conflict
2008:50::2    declined
2108:50::2    declined
2008:50::3    declined
2008:50::4    declined
2108:50::4    declined
2008:50::5    declined
```

**Related****Commands**

| Command                         | Description               |
|---------------------------------|---------------------------|
| <b>clear ipv6 dhcp conflict</b> | Clears address conflicts. |

**Platform**

N/A

**Description**

## 5.21 show ipv6 dhcp interface

Use this command to display the DHCPv6 interface information.

**show ipv6 dhcp interface** [ *interface-name* ]

| Parameter   | Parameter             | Description              |
|-------------|-----------------------|--------------------------|
| Description | <i>interface-name</i> | Sets the interface name. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** If the *interface-name* is not specified, all DHCPv6 interface information is displayed. If the *interface-name* is specified, the specified interface information is displayed.

**Configuration** The following example displays the DHCPv6 interface information.

**Examples**

```
Ruijie# show ipv6 dhcp interface
VLAN 1 is in server mode
  Server pool dhcp-pool
  Rapid-Commit: disable
```

| Related  | Command | Description |
|----------|---------|-------------|
| Commands | N/A     | N/A         |

**Platform** N/A

**Description**

## 5.22 show ipv6 dhcp pool

Use this command to display the DHCPv6 pool information.

**show ipv6 dhcp pool** [ *poolname* ]

| Parameter   | Parameter       | Description                   |
|-------------|-----------------|-------------------------------|
| Description | <i>poolname</i> | Defines the DHCPv6 pool name. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Mode**

**Usage Guide** If the *poolname* is not specified, all DHCPv6 interface information is displayed. If the *poolname* is specified, the specified interface information is displayed.

**Configuration** The following example displays the DHCPv6 pool information.

```

Examples
Ruijie# show ipv6 dhcp pool
DHCPv6 pool: dhcp-pool
  DNS server: 2011:1::1
  DNS server: 2011:1::2
  Domain name: example.com
    
```

| Related  | Command | Description |
|----------|---------|-------------|
| Commands | N/A     | N/A         |

**Platform** N/A

**Description**

### 5.23 show ipv6 dhcp relay destination

Use this command to display the destination information about DHCPv6 Relay Agent.

**show ipv6 dhcp relay destination** { *all* | *interface-type interface-number* }

| Parameter description | Parameter                                        | Description                                                                                 |
|-----------------------|--------------------------------------------------|---------------------------------------------------------------------------------------------|
|                       | <i>all</i>                                       | Displays information about all configured destination addresses and relay exits.            |
|                       | <i>interface-type</i><br><i>interface-number</i> | Displays the relay destination address and relay exit configured for a specified interface. |

**Defaults** N/A

**Command mode** Privileged EXEC mode

**Usage guideline** Use this command to show the relay destination address to which DHCPv6 packets sent from a client are forwarded through a specified relay exit (optional) by an interface for which the relay function has been enabled by Relay Agent.

```

Examples
The following example displays all the relay destination addresses.
Ruijie# show ipv6 dhcp relay destination all
Interface:VLAN 1
Destination address(es)          Output Interface
3001::2
ff02::1:2                        VLAN 2
    
```

| Related  | Command | Description |
|----------|---------|-------------|
| commands | N/A     | N/A         |

**Platform** N/A  
**description**

## 5.24 show ipv6 dhcp relay statistics

Use this command to display the packet sending and receiving condition with the DHCPv6 Relay function enabled.

**show ipv6 dhcp relay statistics**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A.      | N/A.        |

**Defaults** N/A.

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A.

**Configuration Examples** The following example displays the packet sending and receiving condition with the DHCPv6 Relay function enabled.

```
Ruijie# show ipv6 dhcp relay statistics
Packets dropped          : 2
  Error                  : 2
  Excess of rate limit   : 0
Packets received        : 28
  SOLICIT                : 0
  REQUEST                : 0
  CONFIRM                : 0
  RENEW                  : 0
  REBIND                 : 0
  RELEASE                : 0
  DECLINE                : 0
  INFORMATION-REQUEST   : 14
  RELAY-FORWARD          : 0
  RELAY-REPLY            : 14
Packets sent            : 16
  ADVERTISE              : 0
  RECONFIGURE            : 0
  REPLY                  : 8
  RELAY-FORWARD          : 8
  RELAY-REPLY            : 0
```

| Related  | Command                                       | Description                         |
|----------|-----------------------------------------------|-------------------------------------|
| Commands | <code>clear ipv6 dhcp relay statistics</code> | Clears the statistical information. |

**Platform** N/A

**Description**

## 5.25 show ipv6 dhcp server statistics

Use this command to display the DHCPv6 server statistics.

**show ipv6 dhcp server statistics**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** N/A

**Command** Privileged EXEC mode

**Mode**

**Usage Guide** This command is used to display the DHCPv6 server statistics.



**Configuration** The following example displays the DHCPv6 server statistics.

**Examples**

```
Ruijie# show ipv6 dhcp server statistics
DHCPv6 server statistics:

Packet statistics:
DHCPv6 packets received:          7
Solicit received:                  7
Request received:                  0
Confirm received:                  0
Renew received:                    0
Rebind received:                   0
Release received:                  0
Decline received:                  0
Relay-forward received:            0
Information-request received:      0
Unknown message type received:     0
Error message received:            0

DHCPv6 packet sent:                0
Advertise sent:                    0
Reply sent:                         0
Relay-reply sent:                  0
Send reply error:                  0
Send packet error:                 0

Binding statistics:
Bindings generated:                0
IAPD assigned:                     0
IANA assigned:                     0

Configuration statistics:
DHCPv6 server interface:           1
DHCPv6 pool:                       0
DHCPv6 iapd binding:               0
```

**Related****Commands**

| Command               | Description         |
|-----------------------|---------------------|
| <b>ipv6 dhcp pool</b> | Sets a DHCPv6 pool. |

**Platform**

N/A

**Description**

## 5.26 show ipv6 local pool

Use this command to display the local prefix pool configuration and usage.

**show ipv6 local pool** [*poolname* ]

| Parameter   | Parameter       | Description                |
|-------------|-----------------|----------------------------|
| Description | <i>poolname</i> | The local prefix pool name |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** This command is used to display the local prefix pool configuration and usage.

**Configuration Examples** The following example displays all local prefix pool information.

```
Ruijie#show ipv6 local pool
Pool                               Prefix
Free           In use
client-prefix-pool                2001:db8::/64
65536           0
```

| Field  | Description                   |
|--------|-------------------------------|
| Pool   | The local address pool name.  |
| Prefix | The prefix and prefix length. |
| Free   | The available prefix.         |
| In use | The prefix in use.            |

The following example displays the information about the specified local prefix pool.

```
Ruijie#show ipv6 local pool client-prefix-pool
Prefix is 2001:db8::/64 assign /80 prefix
1 entries in use, 65535 available
Prefix                               Interface
2001:db8::/80                        GigabitEthernet 0/0
```

| Field     | Description                            |
|-----------|----------------------------------------|
| Prefix    | The assigned prefix and prefix length. |
| Interface | The assigning interface.               |

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 6 DNS Commands

### 6.1 clear host

Use this command to clear the dynamically learned host name.

**clear host** [ \* | *host-name* ]

| Parameter Description | Parameter        | Description                                       |
|-----------------------|------------------|---------------------------------------------------|
|                       | <i>host-name</i> | Deletes the specified dynamic domain name buffer. |
|                       | *                | Deletes all dynamic domain name buffer.           |

**Defaults** N/A

**Command Mode** Privileged EXEC mode.

**Usage Guide** You can obtain the mapping record of the host name buffer table in two ways: 1) the **ip host** static configuration, 2) the DNS dynamic learning. Execute this command to delete the host name records learned by the DNS dynamically.

**Configuration Examples** The following configuration deletes the dynamically learned mapping records from the host name-IP address buffer table.

```
Ruijie(config)#clear host *
```

| Related Commands | Command           | Description                          |
|------------------|-------------------|--------------------------------------|
|                  | <b>show hosts</b> | Displays the host name buffer table. |

**Platform Description** N/A

### 6.2 ip domain-lookup

Use this command to enable DNS domain name resolution. Use the **no** form of this command to disable the DNS domain name resolution function. Use the default form of this command to restore the default settings.

**ip domain-lookup**

**no ip domain-lookup**

**default ip domain-lookup**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** This function is enabled by default.

**Command Mode** Global configuration mode.

**Usage Guide** N/A

**Configuration** The following example disables the DNS domain name resolution function.

**Examples** Ruijie(config)# no ip domain-lookup

| Related Commands | Command           | Description                                         |
|------------------|-------------------|-----------------------------------------------------|
|                  | <b>show hosts</b> | Displays the DNS related configuration information. |

**Platform Description** N/A

## 6.3 ip host

Use this command to configure the mapping of the host name and the IP address. Use the **no** form of the command to remove the host list.

**ip host** *host-name ip-address*

**no ip host** *host-name ip-address*

| Parameter Description | Parameter         | Description                     |
|-----------------------|-------------------|---------------------------------|
|                       | <i>host-name</i>  | The host name of the equipment  |
|                       | <i>ip-address</i> | The IP address of the equipment |

**Defaults** N/A

**Command Mode** Global configuration mode.

**Usage Guide** N/A

**Configuration** The following example configures IPv4 address 192.168.5.243 for domain name www.test.com.

**Examples** Ruijie(config)# ip host www.test.com 192.168.5.243

| Related Commands | Command | Description       |
|------------------|---------|-------------------|
|                  |         | <b>show hosts</b> |

**Platform** N/A  
**Description**

## 6.4 ip name-server

Use this command to configure the IP address of the domain name server. Use the **no** form of this command to delete the configured domain name server.

**ip name-server** [ **oob** ] { *ip-address* | *ipv6-address* } [ **via** *mgmt-name* ]

**no ip name-server** [ **oob** ] { *ip-address* | *ipv6-address* } [ **via** *mgmt-name* ]

| Parameter Description | Parameter           | Description                                 |
|-----------------------|---------------------|---------------------------------------------|
|                       |                     | <b>oob</b>                                  |
|                       | <i>ip-address</i>   | The IP address of the domain name server.   |
|                       | <i>ipv6-address</i> | The IPv6 address of the domain name server. |
|                       | <b>via</b>          | Configures MGMT port.                       |
|                       | <i>mgmt-name</i>    | Specifies the MGMT port in <b>oob</b> mode. |

**Defaults** No domain name server is configured by default.

**Command Mode** Global configuration mode.

**Usage Guide** Add the IP address of the DNS server. Once this command is executed, the equipment will add a DNS server. When the device cannot obtain the domain name from a DNS server, it will attempt to send the DNS request to subsequent servers until it receives a response.  
 Up to 6 DNS servers are supported. You can delete a DNS server with the *ip-address* option or all the DNS servers.

**Configuration Examples** The following example configures the IPv4 and IPv6 DNS servers.

```
Ruijie(config)# ip name-server 192.168.5.134 via mgmt 2/0
Ruijie(config)# ip name-server 2001:0DB8::250:8bff:fee8:f800
2001:0DB8:0:f004::1 via mgmt 2/0
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  |         |             |

|                   |                                                     |
|-------------------|-----------------------------------------------------|
| <b>show hosts</b> | Displays the DNS related configuration information. |
|-------------------|-----------------------------------------------------|

**Platform** N/A

**Description**

## 6.5 ipv6 host

Use this command to configure the mapping of the host name and the IPv6 address by manual. Use the **no** form of the command to remove the host list.

**ipv6 host** *host-name ipv6-address*

**no ipv6 host** *host-name ipv6-address*

| Parameter Description | Parameter           | Description                       |
|-----------------------|---------------------|-----------------------------------|
|                       | <i>host-name</i>    | The host name of the equipment    |
|                       | <i>ipv6-address</i> | The IPv6 address of the equipment |

**Defaults** N/A

**Command Mode** Global configuration mode.

**Usage Guide** To delete the host list, use the **no ipv6 host** *host-name ipv6-address* command.

**Configuration** The following example configures the IPv6 address for the domain name.

**Examples** Ruijie(config)# ipv6 host switch 2001:0DB8:700:20:1::12

| Related Commands | Command           | Description                                         |
|------------------|-------------------|-----------------------------------------------------|
|                  | <b>show hosts</b> | Displays the DNS related configuration information. |

**Platform** N/A

**Description**

## 6.6 show hosts

Use this command to display DNS configuration.

**show hosts** [ *hostname* ]

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|-----------------------|-----------|-------------|

|                       |                                                 |
|-----------------------|-------------------------------------------------|
| <code>hostname</code> | Displays the specified domain name information, |
|-----------------------|-------------------------------------------------|

**Defaults** All domain name information is displayed by default.

**Command** Privileged EXEC mode.

**Mode**

**Usage Guide** This command is used to display the DNS related configuration information.

**Configuration**

```
Ruijie# show hosts
```

**Examples**

```
Name servers are:
192.168.5.134 static
```

| Host           | type    | Address       | TTL (sec) |
|----------------|---------|---------------|-----------|
| switch         | static  | 192.168.5.243 | ---       |
| www.ruijie.com | dynamic | 192.168.5.123 | 126       |

| Field        | Description                                                   |
|--------------|---------------------------------------------------------------|
| Name servers | Domain name server                                            |
| Host         | Domain name                                                   |
| type         | Resolution type:<br>Static resolution and dynamic resolution. |
| Address      | IP address corresponding to the domain name                   |
| TTL          | TTL of entries corresponding to the domain name/IP address.   |

**Related  
Commands**

| Command               | Description                                                  |
|-----------------------|--------------------------------------------------------------|
| <b>ip host</b>        | Configures the host name and IP address mapping by manual.   |
| <b>ipv6 host</b>      | Configures the host name and IPv6 address mapping by manual. |
| <b>ip name-server</b> | Configures the DNS server.                                   |

**Platform** N/A

**Description**

# 7 FTP Server Commands

## 7.1 ftp-server enable

Use this command to enable the FTP server. Use the **default** form of this command to restore the default setting.


**ftp-server enable**  
**default ftp-server enable**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** This command is used to enable the FTP server to connect the FTP client to upload/download the files.

 To enable the FTP client to access to the FTP server files, this command shall be co-used with the **ftp-server topdir** command.

**Configuration Examples** The following example enables the FTP Server and confines the FTP client access to the syslog subdirectory:

```
Ruijie(config)# ftp-server topdir /syslog
Ruijie(config)# ftp-server enable
```

Ruijie(config)# ftp-server enableThe following example disables the FTP Server:

```
Ruijie(config)# no ftp-server enable
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A



## 7.2 ftp-server login timeout

Use this command to set the timeout interval for login to the FTP server. Use the **no** or **default** form of this command to restore the default setting.

**ftp-server login timeout** *time*

**no ftp-server login timeout**

**default ftp-server login timeout**

| Parameter Description | Parameter   | Description                                                                                              |
|-----------------------|-------------|----------------------------------------------------------------------------------------------------------|
|                       | <i>time</i> | Sets the timeout interval for login to the FTP server, in the range from 1 to 30 in the unit of minutes. |

**Defaults** The default is 2 minutes.

**Command Mode** Global configuration mode

**Usage Guide** The timeout interval refers to the maximum time when your account is allowed online after you login to the server. If you don't perform authentication again before the timeout interval expires, you will be forced offline.

**Configuration Examples** The following example sets the timeout interval for login to the FTP server to 5 minutes.

```
Ruijie(config)# ftp-server login timeout 5
```

The following example restores the default setting.

```
Ruijie(config)# no ftp-server login timeout
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 7.3 ftp-server login times

Use this command to set the number of login attempts. Use the **no** or **default** form of this command to restore the default setting.

**ftp-server login times** *time*

**no ftp-server login times**

**default ftp-server login times**

|                               |                                                                                                                                                                                 |                                                               |
|-------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------|
| <b>Parameter Description</b>  | <b>Parameter</b>                                                                                                                                                                | <b>Description</b>                                            |
|                               | <i>time</i>                                                                                                                                                                     | Sets the number of login attempts, in the range from 1 to 10. |
| <b>Defaults</b>               | The default is 3.                                                                                                                                                               |                                                               |
| <b>Command Mode</b>           | Global configuration mode                                                                                                                                                       |                                                               |
| <b>Usage Guide</b>            | The number of login attempts refers to the maximum count you are allowed to perform authentication. If the number of your login attempts exceeds 3, you will be forced offline. |                                                               |
| <b>Configuration Examples</b> | The following example sets the number of login attempts to 5.                                                                                                                   |                                                               |
|                               | <pre>Ruijie(config)# ftp-server login times 5</pre>                                                                                                                             |                                                               |
|                               | The following example restores the default setting.                                                                                                                             |                                                               |
|                               | <pre>Ruijie(config)# no ftp-server login times</pre>                                                                                                                            |                                                               |
| <b>Related Commands</b>       | <b>Command</b>                                                                                                                                                                  | <b>Description</b>                                            |
|                               | N/A                                                                                                                                                                             | N/A                                                           |
| <b>Platform Description</b>   | N/A                                                                                                                                                                             |                                                               |

## 7.4 ftp-server timeout

Use this command to set the FTP session idle timeout. Use the **no** or **default** form of this command to restore the default setting.

**ftp-server timeout** *time*

**no ftp-server timeout**


**default ftp-server timeout**

|                              |                  |                                                                                    |
|------------------------------|------------------|------------------------------------------------------------------------------------|
| <b>Parameter Description</b> | <b>Parameter</b> | <b>Description</b>                                                                 |
|                              | <i>time</i>      | Sets the session idle timeout, in the range from 1 to 3600 in the unit of minutes. |

**Defaults** The default is 10 minutes.

**Command Mode** Global configuration mode.

**Usage Guide** Use this command to set the FTP session idle timeout. If the session is idle, the FTP server deems the session connection is invalid and disconnects with the user.

 The session idle time refers to the time for the FTP session between two FTP operations.

**Configuration** The following example sets the session idle timeout to 5 minutes:

**Examples**

```
Ruijie(config)# ftp-server timeout 5
```

The following example restores the default setting.

```
Ruijie(config)# no ftp-server timeout
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 7.5 ftp-server topdir

Use this command to set the directory range for the FTP client to access to the FTP server files. Use the **no** or **default** form of this command to restore the default setting.

- ftp-server topdir** *directory*
- no ftp-server topdir**
- default ftp-server topdir**

**Parameter Description**

| Parameter        | Description             |
|------------------|-------------------------|
| <i>directory</i> | Sets the top-directory. |

**Defaults** No top-directory is configured by default.

**Command Mode** Global configuration mode.

**Usage Guide** The FTP server top directory specifies the directory range of the files accessed by the client. Can the FTP client accesses to the files on the FTP server with the top directory correctly specified. Without this command configured, FTP client fails to access to any file or directory on the FTP server.

**Configuration Examples** The following example enables the FTP Server and confines the FTP client access to the syslog subdirectory.

```
Ruijie(config)# ftp-server topdir /syslog
```

```
Ruijie(config)# ftp-server enable
```

The following example restores the default setting.

```
Ruijie(config)# no ftp-server topdir
```

#### Related Commands

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

#### Platform Description

N/A

## 7.6 ftp-server username password

Use this command to set the login username and password for the FTP server. Use the **no** form of this command to restore the default setting.

**ftp-server username** *username* **password** [*type*] *password*

**no ftp-server username** *username*

**default ftp-server username** *username*

#### Parameter Description

| Parameter       | Description              |
|-----------------|--------------------------|
| <i>username</i> | Sets the login username. |
| <i>password</i> | Sets the log password    |

**Defaults** No username or password is set by default.


**Command  
Mode** Global configuration mode

**Usage Guide** Use this command to set the login username for the FTP server. To log in to the FTP server, the correct username and password shall be provided.

The maximum length of the username is 64 characters and the spaces are not allowed in the middle of the username. The username consists of letters, semiangle number and semiangle mark. Ten usernames can be configured for the FTP server at most.

The password must contain letters or numbers. Spaces before or behind the password are allowed but will be ignored. The spaces within are part of the password.

The plaintext password is in the range from 1 to 25 characters. The encrypted password is in the range from 4 to 52 characters.

 The anonymous user login is not supported on the FTP server. The client fails to pass the identity verification if the username is removed.

**Configuration** The following example sets the username to user:

**Examples**

```
Ruijie(config)# ftp-server username user password pass
```

The following example restores the default setting:

```
Ruijie(config)# no ftp-server username user
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 7.7 show ftp-server

Use this command to show the status information of the FTP server.

**show ftp-server**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** The FTP server status information includes:

- Enabled/Disabled server
- The FTP server top directory
- The FTP server user information, including username, password and connection number. If connection is set up, the IP address, port, transmission type, active/passive mode is shown

**Configuration Examples** The following example displays the related status information of the FTP server:

**Examples**

```
Ruijie#show ftp-server
ftp-server information
=====
enable : Y
topdir : tmp:/
timeout: 10min
```

```

username:aaaa          password:(PLAIN)bbbb          connect num[2]
[0]trans-type:BINARY (ctrl)server IP:192.168.21.100[21]
client IP:192.168.21.26[3927]
[1]trans-type:ASCII (ctrl)server IP:192.168.21.100[21]
client IP:192.168.21.26[3929]

username:a1           password:(PLAIN)bbbb          connect num[0]
username:a2           password:(PLAIN)bbbb          connect num[0]
username:a3           password:(PLAIN)bbbb          connect num[0]
username:a4           password:(PLAIN)bbbb          connect num[0]
username:a5           password:(PLAIN)bbbb          connect num[0]
username:a6           password:(PLAIN)bbbb          connect num[0]
username:a7           password:(PLAIN)bbbb          connect num[0]
username:a8           password:(PLAIN)bbbb          connect num[0]
username:a9           password:(PLAIN)bbbb          connect num[0]
    
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform  
Description**

N/A

## 8 FTP CLIENT Commands

### 8.1 copy flash

Use this command to upload the file from the server to the device through FTP Client.

**copy flash:** *[ local-directory/ ] local-file ftp://username:password@dest-address [ /remote-directory ] / remote-file*

| Parameter Description | Parameter               | Description                                                                                                                                                                                                                                                                                                                         |
|-----------------------|-------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <i>username</i>         | The username for logging into FTP Server. It is limited to 40 bytes and must not contain ":", "@", "/" and space, neither can it be omitted.                                                                                                                                                                                        |
|                       | <i>password</i>         | The password for logging into FTP Server. It is limited to 32 bytes and must not contain ":", "@", "/" and space, neither can it be omitted.                                                                                                                                                                                        |
|                       | <i>dest-address</i>     | IP address of the target FTP Server.                                                                                                                                                                                                                                                                                                |
|                       | <i>remote-directory</i> | File directory of FTP Server. It is optional and limited to 255 bytes. No space or Chinese character is supported. If left blank, it implies the current directory of FTP server.                                                                                                                                                   |
|                       | <i>remote-file</i>      | Filename on the remote server. It is limited to 255 bytes and doesn't support space or Chinese character.                                                                                                                                                                                                                           |
|                       | <i>local-directory</i>  | Directory of local folder (optional). If this directory is specified, this directory must have been created beforehand. This command doesn't support automatic directory creation. If left blank, it implies the current directory on the local device. It is limited to 255 bytes and doesn't support space or Chinese characters. |
|                       | <i>local-file</i>       | Filename on the local device. It is limited to 255 bytes and doesn't support space or Chinese character.                                                                                                                                                                                                                            |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example uploads the file named "local-file" in directory "home" of local device to directory "root" on the FTP Server whose user name is user, password is pass and IP address is 192.168.23.69, and changes the filename to "remote-file".

**Examples**

```
Ruijie# copy flash:home/local-file
ftp://user:pass@192.168.23.69/root/remote-file
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 8.2 copy ftp

Use this command to download the file from the server to the device through FTP Client.

```
copy ftp://username:password@dest-address [ /remote-directory ] / remote-file
flash:[ local-directory/ ] local-file]
```

**Parameter Description**

| Parameter               | Description                                                                                                                                                                                                                                                                                                                         |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>username</i>         | The username for logging into FTP Server. It is limited to 40 bytes and must not contain ":", "@", "/" and space, neither can it be omitted.                                                                                                                                                                                        |
| <i>password</i>         | The password for logging into FTP Server. It is limited to 32 bytes and must not contain ":", "@", "/" and space, neither can it be omitted.                                                                                                                                                                                        |
| <i>dest-address</i>     | IP address of the target FTP Server.                                                                                                                                                                                                                                                                                                |
| <i>remote-directory</i> | File directory of FTP Server. It is optional and limited to 255 bytes. No space or Chinese character is supported. If left blank, it implies the current directory of FTP server.                                                                                                                                                   |
| <i>remote-file</i>      | Filename on the remote server. It is limited to 255 bytes and doesn't support space or Chinese character.                                                                                                                                                                                                                           |
| <i>local-directory</i>  | Directory of local folder (optional). If this directory is specified, this directory must have been created beforehand. This command doesn't support automatic directory creation. If left blank, it implies the current directory on the local device. It is limited to 255 bytes and doesn't support space or Chinese characters. |
| <i>local-file</i>       | Filename on the local device. It is limited to 255 bytes and doesn't support space or Chinese character.                                                                                                                                                                                                                            |



|                               |                                                                                                                                                                                                                                                                  |
|-------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Defaults</b>               | N/A                                                                                                                                                                                                                                                              |
| <b>Command Mode</b>           | Privileged EXEC mode                                                                                                                                                                                                                                             |
| <b>Usage Guide</b>            | N/A                                                                                                                                                                                                                                                              |
| <b>Configuration Examples</b> | The following example uses username of "user" and password of "pass" to download a file named "remote-file" from the directory "root" on FTP Server with IP address 192.168.23.69 to directory "home" on the local device, and changes the name to "local-file". |

```
Ruijie# copy ftp://user:pass@192.168.23.69/root/remote-file flash:home/local-file
```

The following example uploads a file named "local-file" from directory "home" on the local device to directory "root" on FTP Server, and changes the name to "remote-file".

```
Ruijie# copy flash:home/local-file ftp://user:pass@192.168.23.69/root/remote-file
```

| Related Commands | Command                | Description                               |
|------------------|------------------------|-------------------------------------------|
|                  | <code>copy tftp</code> | Uses the TFTP protocol to transfer files. |

|                             |     |
|-----------------------------|-----|
| <b>Platform Description</b> | N/A |
|-----------------------------|-----|

### 8.3 ftp-client ascii

Use this command to use ASCII mode for FTP transfer.

Use the **no** or **default** form of this command to restore the default setting.

**ftp-client [ vrf vrfname ] ascii**

**no ftp-client [ vrf vrfname ] ascii**

**default ftp-client [ vrf vrf-name ]**

| Parameter Description | Parameter                 | Description                                              |
|-----------------------|---------------------------|----------------------------------------------------------|
|                       | <code>vrf vrf-name</code> | Configures the file transfer mode for the specified VRF. |

|                      |                                                                                                                                                                                          |
|----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Defaults</b>      | The default FTP transfer mode is binary.                                                                                                                                                 |
| <b>Command Mode</b>  | Global configuration mode                                                                                                                                                                |
| <b>Usage Guide</b>   | The <b>default</b> command is used to restore the FTP client setting. Specifically, data connection is in PASV mode and file transfer BINARY. The client source IP address is not bound. |
| <b>Configuration</b> | The following example configures ASCII FTP transfer.                                                                                                                                     |

**Examples**

```
Ruijie (config)# ftp-client ascii
```

The following example configures ASCII FTP transfer for *vrf-name*.

```
Ruijie(config)# ftp-client vrf vrf-name ascii
```

The following example configures binary FTP transfer.

```
Ruijie(config)# no ftp-client ascii
```

The following example configures binary FTP transfer for *vrf-name*.

```
Ruijie(config)# no ftp-client vrf vrf-name ascii
```

The following example restores the default setting of the FTP Client.

```
Ruijie(config)# default ftp-client
```

The following example restores the default setting of the FTP Client vrf-name,

```
Ruijie(config)# default ftp-client vrf vrf-name
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 8.4 ftp-client port

Use this command to configure PORT mode used for FTP data connection. Use the **no** or **default** form of this command to restore the default setting.

**ftp-client [ vrf vrf-name ] port**  
**no ftp-client [ vrf vrf-name ] port**  
**default ftp-client [ vrf vrf-name ]**

| Parameter Description | Parameter           | Description |
|-----------------------|---------------------|-------------|
|                       | <b>vrf vrf-name</b> |             |

**Defaults** The default is PASV mode for FTP data connection.

**Command Mode** Global configuration mode.

**Usage Guide** This command is used to configure the connection mode to PORT mode, in which the server will actively connect with the client.  
 The **default** command is used to restore the FTP client setting. Specifically, data connection is in PASV mode and file transfer BINARY. The client source IP address is not bound.

**Configuration Examples** The following example configures PORT mode used for FTP data connection

```
Ruijie (config)# ftp-client port
```

The following example configures PORT mode used for FTP *vrf-name* data connection.

```
Ruijie(config)# ftp-client vrf vrf-name port
```

The following example configures PASV mode for FTP data connection.

```
Ruijie(config)# no ftp-client port
```

The following example configures PASV mode used for FTP *vrf-name* data connection.

```
Ruijie(config)# no ftp-client vrf vrf-name port
```

The following example restores the default setting of the FTP Client.

```
Ruijie(config)# default ftp-client
```

The following example restores the default setting of the FTP Client vrf-name,

```
Ruijie(config)# default ftp-client vrf vrf-name
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 8.5 ftp-client source

Use this command to bind FTP Client with the source IP address of client and use this IP address to communicate with server. Use the **no** form of this command to disable source IP address binding. Use the **default** form of this command to restore the default setting.

**ftp-client** [ vrf *vrf-name* ] **source** { *ip-address* | *ipv6-address* | *interface* }

**no ftp-client** [ vrf *vrf-name* ] **source**

**default ftp-client** [ vrf *vrf-name* ]

**Parameter Description**

| Parameter           | Description                                           |
|---------------------|-------------------------------------------------------|
| vrf <i>vrf-name</i> | VRF name. The default is the public network instance. |

**Defaults** By default, the IP address is not bound with the client locally. Instead, it is selected by the route.

**Command Mode** Global configuration mode

**Usage Guide** The **default** command is used to restore the FTP client setting. Specifically, data connection is in PASV mode and file transfer BINARY. The client source IP address is not bound. The **ftp-client** [ vrf *vrfname* ] **source-address** {*ip-address* | *ipv6-address*} command will be converted to this command automatically

**Configuration Examples** The following example binds FTP Client with source IP address 192.168.23.236.

```
Ruijie(config)# ftp-client source 192.168.23.236
```

The following example binds FTP Client with source IP address 2003:0:0:0::2.

```
Ruijie(config)# ftp-client source 2003:0:0:0::2
```

The following example binds FTP Client *vrf-name* with source IP address 192.168.23.236.

```
Ruijie(config)# ftp-client vrf vrf-name source 192.168.23.236
```

The following example binds FTP Client *vrf-name* with source IP address 2003:0:0:0::2.

```
Ruijie(config)# ftp-client vrf vrf-name source 2003:0:0:0::2
```

The following example disables source IP address binding.

```
Ruijie(config)# no ftp-client source
```

The following example disables source IP address binding.

```
Ruijie(config)# no ftp-client vrf vrf-name source
```

The following example restores the default setting of the FTP Client.

```
Ruijie(config)# default ftp-client
```

The following example restores the default setting of the FTP Client *vrf-name*,

```
Ruijie(config)# default ftp-client vrf vrf-name
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform  
Description**

N/A

## 9 TFTP Server Commands

### 9.1 tftp-server enable

Use this command to enable the TFTP server.

Use the **no** form of this command to disable the TFTP server.

**tftp-server enable**

**no tftp-server enable**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** The TFTP server is disabled by default.

**Command** Global configuration mode

**Modes**

**Usage Guide** Only with the TFTP server enabled and the top directory configured meanwhile, TFTP clients are able to upload or download files.

**Configuration Examples** The following example enables the TFTP server and sets the top directory of the TFTP server to **/syslog**.

```
Ruijie(config)# tftp-server topdir /syslog
Ruijie(config)# tftp-server enable
```

The following example disables the TFTP server.

```
Ruijie(config)# no tftp-server enable
```

**Platform Description** N/A

### 9.2 tftp-server topdir

Use this command to configure the top directory for TFTP clients.

Use the **no** or **default** form of this command to restore the default setting.

**tftp-server topdir** *directory*

**no tftp-server topdir**

**default tftp-server topdir**

| Parameter Description | Parameter        | Description                                                                 |
|-----------------------|------------------|-----------------------------------------------------------------------------|
|                       | <i>directory</i> | The top directory for TFTP clients to access. "/" means the root directory. |

**Defaults** By default, the top directory is **/flash**.

**Command** Global configuration mode

**Modes**

**Usage Guide** The top directory on the TFTP server defines what files and folders the client is able to access. And the client cannot access the TFTP server before a top directory is correctly configured for the server.

**Configuration Examples** The following example enables the TFTP servicer and sets the top directory for TFTP clients to **/syslog**.

```
Ruijie(config)# tftp-server topdir /syslog
Ruijie(config)# tftp-server enable
```

The following example restores the default top directory.

```
Ruijie(config)# no tftp-server topdir
```

**Platform Description** N/A

### 9.3 show tftp-server

Use this command to display the configuration of the TFTP server.

**show tftp-server**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Modes** Global configuration mode/Privileged configuration mode/Interface configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example displays the progress of downloading the TFTP client.

```
Ruijie# show tftp-server
tftp-server information
-----
enable : Y
topdir : flash:/
```

**Platform** N/A

**Description**

## 9.4 show tftp-server updating-list

Use this command to display the progress of downloading the TFTP client.

**show tftp-server updating-list**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command** Global configuration mode/Privileged configuration mode/Interface configuration mode

**Modes**

**Usage Guide** This command is supported only on AM5528 products.

**Configuration** The following example displays the progress of downloading the TFTP client.

**Examples**

```
Ruijie# show tftp-server updating-list
IP Address           Interface           File Name           TX           Elapsed
-----
171.208.208.2       GigabitEthernet 0/7  main_map552.bin     6.28392%    00:00:05
```

**Platform Description** N/A





## 10 TCP Commands

### 10.1 ip tcp keepalive

Use this command to enable the TCP keepalive function. Use the **no** form of this command to restore the default setting,

```
ip tcp keepalive [ interval num1 ] [ times num2 ] [ idle-period num3 ]
```

| Parameter Description | Parameter                      | Description                                                                                                                                                              |
|-----------------------|--------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <b>interval</b> <i>num1</i>    | The interval of sending the keepalive packet, in the range from 1 to 120 in the unit of seconds, The default is 75.                                                      |
|                       | <b>times</b> <i>num2</i>       | Keepalive packet sending times, in the range from 1 to 10. The default is 6.                                                                                             |
|                       | <b>idle-period</b> <i>num3</i> | Idle time, the time period during which the peer end does not send any packet to the local end, in the range from 60 to 1800 in the unit of seconds. The default is 900. |

**Defaults** The function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** The keepalive function enables TCP to detect whether the peer end is operating properly. Suppose the keepalive function is enabled together with default **interval**, **times** and **idle-period** settings. TCP begins to send the keepalive packet at an interval of 75 seconds if it does not receive any packet from the peer end in 900 seconds. The TCP connection is considered invalid and then disconnected automatically if the device sends the keepalive packet for six consecutive times without receiving any TCP packet from the peer end. This command applies to both IPv4 and IPv6 TCP.

**Configuration Examples** The following example enables the TCP keepalive function on the device and sets the **idle-period** and **interval** to 180 and 60 respectively. If the device sends the keepalive packet for four consecutive times without receiving any TCP packet from the peer end, the TCP connection is considered invalid.

```
Ruijie(config)# ip tcp keepalive interval 60 times 4 idle-period 180
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 10.2 ip tcp mss

Use this command to set the upper limit of the MSS value. Use the **no** form of this command to restore the default setting.

**ip tcp mss** *max-segment-size*

**no ip tcp mss**

| Parameter Description | Parameter               | Description                                                       |
|-----------------------|-------------------------|-------------------------------------------------------------------|
|                       | <i>max-segment-size</i> | Upper limit of the MSS value in the range from 68 to 10,000 bytes |

**Defaults** The default MSS = Outgoing IPv4/v6 MTU- IPv4/v6 header-TCP header.

**Command Mode** Global configuration mode

**Usage Guide** This command is used to limit the maximum value of MSS for the TCP connection to be created. The negotiated MSS cannot exceed the configured value. You can use this command to reduce the maximum value of MSS. However, this configuration is not needed in general. This command applies to both IPv4 and IPv6 TCP.

**Configuration Examples** The following example sets the upper limit of the MSS value to 1,300 bytes.

```
Ruijie(config)# ip tcp mss 1300
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 10.3 ip tcp path-mtu-discovery

Use this command to enable Path Maximum Transmission Unit (PMTU) discovery function for TCP in global configuration mode. Use the **no** form of this command to restore the default setting.

**ip tcp path-mtu-discovery** [ **age-timer** *minutes* | **age-timer infinite** ]

**no ip tcp path-mtu-discovery**

| Parameter Description | Parameter                       | Description                                                                                                                      |
|-----------------------|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------|
|                       | <b>age-timer</b> <i>minutes</i> | The time interval for further discovery after discovering PMTU. Its value ranges from 10 to 30 minutes. The default value is 10. |
|                       | <b>age-timer infinite</b>       | No further discovery after discovering PMTU                                                                                      |

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** Based on RFC1191, the TCP path MTU function improves the network bandwidth utilization and data transmission when the user uses TCP to transmit the data in batch. Enabling or disabling this function takes no effect for existent TCP connections and is only effective for TCP connections to be created. This command applies to only IPv4 TCP. This function is enabled for IPv6 TCP constantly and cannot be disabled. According to RFC1191, after discovering the PMTU, the TCP uses a greater MSS to detect the new PMTU at a certain interval, which is specified by the parameter **age-timer**. If the PMTU discovered is smaller than the MSS negotiated between two ends of the TCP connection, the device will be trying to discover the greater PMTU at the specified interval until the PMTU value reaches the MSS or the user stops this timer. Use the parameter **age-timer infinite** to stop this timer.

**Configuration** The following example enables PMTU discovery.

**Examples** Ruijie(config)# ip tcp path-mtu-discovery

| Related Commands | Command | Description          |
|------------------|---------|----------------------|
|                  |         | <b>show tcp pmtu</b> |

**Platform Description** N/A

## 10.4 ip tcp send-reset

Use this command to enable the device to send the reset packet when receiving the TCP port unreachable packet. Use the **no** form of this command to disable this function,

**ip tcp send-reset**  
**no ip tcp send-reset**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       |           | N/A         |

**Defaults** This function is enabled by default.

**Command Mode** Global configuration mode

**Usage Guide** In general, when dispatching the TCP packet, the TCP module replies a reset packet automatically to disconnect the TCP connection with the peer end if the TCP connection that this packet belongs to is not found. However, flooding TCP port unreachable packets pose an attack threat to the device. This command can be used to disable the device from sending the reset packet when receiving the TCP port unreachable packet. This command applies to both IPv4 and IPv6 TCP.

**Configuration Examples** The following example disables the device from sending the reset packet when receiving the TCP port unreachable packet.

```
Ruijie(config)# no ip tcp send-reset
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A

## 10.5 ip tcp synwait-time

Use this command to set the timeout value for SYN packets (the maximum time from SYN transmission to successful three-way handshake). Use the **no** form of this command to restore the default setting.

**ip tcp synwait-time** *seconds*

**no ip tcp synwait-time** *seconds*

**Parameter Description**

| Parameter      | Description                                                                      |
|----------------|----------------------------------------------------------------------------------|
| <i>seconds</i> | Timeout value for SYN packets in the range from 5 to 300 in the unit of seconds. |

**Defaults** The default is 20.

**Command Mode** Global configuration mode

**Usage Guide** If there is an SYN attack in the network, reducing the SYN timeout value can prevent resource consumption, but it takes no effect for successive SYN attacks. When the device actively requests a connection with an external device, reducing the SYN timeout value can shorten the time for the user to wait, such as telnet login. For poor network conditions, the timeout value can be increased properly. This command applies to both IPv4 and IPv6 TCP.

**Configuration Examples** The following example set the timeout value for SYN packets to 10 seconds.

```
Ruijie(config)# ip tcp syntime-out 10
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 10.6 ip tcp window-size

Use this command to change the size of receiving buffer and sending buffer for TCP connections. Use the **no** form of this command to restore the default setting.

**ip tcp window-size** *size*

**no ip tcp window-size**

| Parameter Description | Parameter   | Description |
|-----------------------|-------------|-------------|
|                       | <i>size</i> |             |

**Defaults** The default is 65535.

**Command Mode** Global configuration mode

**Usage Guide** The TCP receiving buffer is used to buffer the data received from the peer end. These data will be subsequently read by application programs. Generally, the window size of TCP packets implies the size of free space in the receiving buffer. For connections involving a large bandwidth and mass data, increasing the size of receiving buffer will remarkably improve TCP transmission performance.

**Configuration Examples** The following example sets the TCP window size to 16386 bytes.

```
Ruijie(config)# ip tcp window-size 16386
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 10.7 show ipv6 tcp connect

Use this command to display the current IPv6 TCP connection information.

```
show ipv6 tcp connect [ local-ipv6 X:X:X:X::X ] [ local-port num ] [ peer-ipv6 X:X:X:X::X ]
[ peer-port num ]
```

Use this command to display the current IPv6 TCP connection statistics.

```
show ipv6 tcp connect statistics
```

| Parameter Description | Parameter                    | Description                             |
|-----------------------|------------------------------|-----------------------------------------|
|                       | <b>local-ipv6</b> X:X:X:X::X | Local IPv6 address                      |
|                       | <b>local-port</b> num        | Local port                              |
|                       | <b>peer-ipv6</b> X:X:X:X::X  | Peer IPv6 address                       |
|                       | <b>peer-port</b> num         | Peer port                               |
|                       | <b>statistics</b>            | Displays IPv6 TCP connection statistics |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration Examples** The following example displays the current IPv6 TCP connection information.

```
Ruijie#show ipv6 tcp connect
Number Local Address      Foreign Address      State      Process name
1      :::22          :::0                LISTEN     rg-sshd
2      :::23          :::0                LISTEN     rg-telnetd
3      1000::1:23    1000::2:64201      ESTABLISHED rg-telnetd
```

The following example displays the current IPv6 TCP connection statistics.

```
Ruijie#show ipv6 tcp connect statistics
State      Count
-----
ESTABLISHED 1
SYN_SENT   0
SYN_RECV   0
FIN_WAIT1  0
FIN_WAIT2  0
TIME_WAIT  0
CLOSED     0
CLOSE_WAIT 0
LAST_ACK   0
LISTEN     1
CLOSING    0
Total: 2
```

| Related | Command | Description |
|---------|---------|-------------|
|---------|---------|-------------|

| Commands |     |
|----------|-----|
| N/A      | N/A |

**Platform** N/A

**Description**

## 10.8 show ipv6 tcp pmtu

Use this command to display information about IPv6 TCP PMTU.

**show ipv6 tcp pmtu** [ **local-ipv6** X:X:X:X::X ] [ **local-port** num ] [ **peer-ipv6** X:X:X:X::X ] [ **peer-port** num ]

| Parameter Description | Parameter                    | Description        |
|-----------------------|------------------------------|--------------------|
|                       | <b>local-ipv6</b> X:X:X:X::X | Local IPv6 address |
|                       | <b>local-port</b> num        | Local port         |
|                       | <b>peer-ipv6</b> X:X:X:X::X  | Peer IPv6 address  |
|                       | <b>peer-port</b> num         | Peer port          |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration Examples** The following example information about IPv6 TCP PMTU.

```
Ruijie# show ipv6 tcp pmtu
```

| Number | Local Address | Foreign Address | PMTU |
|--------|---------------|-----------------|------|
| 1      | 1000::1:23    | 1000::2.13560   |      |

| Field           | Description                                                                         |
|-----------------|-------------------------------------------------------------------------------------|
| Number          | Number                                                                              |
| Local Address   | Local address and port number. The number after the last colon is the port number.  |
| Foreign Address | Remote address and port number. The number after the last colon is the port number. |
| PMTU            | Path MTU.                                                                           |

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 10.9 show ipv6 tcp port

Use this command to display the current IPv6 TCP port status.

**show ipv6 tcp port** [ *num* ]

| Parameter Description | Parameter  | Description |
|-----------------------|------------|-------------|
|                       | <i>num</i> | Port number |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the current IPv6 TCP port status.

**Examples**

```
Ruijie#show ipv6 tcp port
TCP connections on port 23:
Number Local Address Foreign Address State
1      1000::1:23    1000::2:64571 ESTABLISHED
Total: 1

TCP connections on port 2650:
Number Local Address Foreign Address State
Total: 0
```

| Field           | Description                     |
|-----------------|---------------------------------|
| Number          | Number                          |
| Local Address   | Local address and port number.  |
| Foreign Address | Remote address and port number. |



|       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|-------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| State | <p>Current status of the TCP connection. There are eleven possible states:</p> <p>CLOSED: The connection has been closed.</p> <p>LISTEN: Listening state</p> <p>SYNSENT: In the three-way handshake phase when the SYN packet has been sent out.</p> <p>SYNRCVD: In the three-way handshake phase when the SYN packet has been received.</p> <p>ESTABLISHED: The connection has been established.</p> <p>FINWAIT1: The local end has sent the FIN packet.</p> <p>FINWAIT2: The FIN packet sent by the local end has been acknowledged.</p> <p>CLOSEWAIT: The local end has received the FIN packet from the peer end.</p> <p>LASTACK: The local end has received the FIN packet from the peer end, and then sent its own FIN packet.</p> <p>CLOSING: The local end has sent the FIN packet from the peer end, and received the FIN packet from the peer end before the ACK packet for the peer end to respond with this FIN packet is received.</p> <p>TIMEWAIT: The FIN packet sent by the local end has been acknowledged, and the local end has also acknowledged the FIN packet.</p> |
|-------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform  
Description**

N/A

## 10.10 show tcp connect

Use this command to display basic information about the current TCP connections.

**show tcp connect** [ **local-ip** *a.b.c.d* ] [ **local-port** *num* ] [ **peer-ip** *a.b.c.d* ] [ **peer-port** *num* ]

Use this command to display the current IPv4 TCP connection statistics.

**show tcp connect statistics**

**Parameter  
Description**

| Parameter                      | Description                              |
|--------------------------------|------------------------------------------|
| <b>local-ip</b> <i>a.b.c.d</i> | Local IP address.                        |
| <b>local-port</b> <i>num</i>   | Local port.                              |
| <b>peer-ip</b> <i>a.b.c.d</i>  | Peer IP address.                         |
| <b>peer-port</b> <i>num</i>    | Peer port.                               |
| <b>statistics</b>              | Displays IPv4 TCP connection statistics. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the current IPv4 TCP connection information.

**Examples**

```
Ruijie#show tcp connect
Number Local Address      Foreign Address      State      Process name
1      0.0.0.0:22              0.0.0.0:0           LISTEN     rg-sshd
2      0.0.0.0:23              0.0.0.0:0           LISTEN     rg-telnetd
3      1.1.1.1:23              1.1.1.2:64201       ESTABLISHED rg-telnetd
```

| Field           | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|-----------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Number          | Sequence number.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Local Address   | The Local address and port number. The number after the last "." is the port number. For example, in "2002::2.23" and "192.168.195.212.23", "23" is the port number.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Foreign Address | The remote address and port number. The number after the last "." is the port number. For example, in "2002::2.23" and "192.168.195.212.23", "23" is the port number.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| State           | <p>Current status of the TCP connection. There are eleven possible states:</p> <p>CLOSED: The connection has been closed.</p> <p>LISTEN: Listening state</p> <p>SYNSENT: In the three-way handshake phase when the SYN packet has been sent out.</p> <p>SYNRCVD: In the three-way handshake phase when the SYN packet has been received.</p> <p>ESTABLISHED: The connection has been established.</p> <p>FINWAIT1: The local end has sent the FIN packet.</p> <p>FINWAIT2: The FIN packet sent by the local end has been acknowledged.</p> <p>CLOSEWAIT: The local end has received the FIN packet from the peer end.</p> <p>LASTACK: The local end has received the FIN packet from the peer end, and then sent its own FIN packet.</p> <p>CLOSING: The local end has sent the FIN packet from the peer end, and received the FIN packet from the peer end before the ACK packet for the peer end to respond with this FIN packet is received.</p> <p>TIMEWAIT: The FIN packet sent by the local end has been acknowledged, and the local end has also acknowledged the</p> |

|              |               |
|--------------|---------------|
|              | FIN packet.   |
| Process name | Process name. |

The following example displays the current IPv4 TCP connection statistics.

```
Ruijie#show tcp connect statistics
State          Count
-----
ESTABLISHED 1
SYN_SENT      0
SYN_RECV      0
FIN_WAIT1     0
FIN_WAIT2     0
TIME_WAIT     0
CLOSED        0
CLOSE_WAIT    0
LAST_ACK      0
LISTEN        1
CLOSING       0
Total: 2
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

### 10.11 show tcp parameter

Use this command to show TCP parameters.

**show tcp parameter**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example shows TCP parameters.

**Examples**

```
Ruijie#show tcp parameter
Hash table information:
  Established hash bucket size: 16384
  Bind hash bucket size: 16384
Memory information:
  Global memory limit: low=92160, pressure=122880, high=184320 (unit: pages)
  Per-socket receive buffer size: min=4096, default=87380, max=3932160 (unit:
bytes)
  Per-socket send buffer size: min=4096, default=16384, max=3932160 (unit:
bytes)
  Current allocated memory: 0
  Current memory pressure flag: 0
SYN specific information:
  Max SYN_RECV sockets per LISTEN socket: 65535
  Max SYN retries: 5
  Max SYN ACK retries: 5
Timewait specific information:
  Max timewait sockets: 180000
  Current timewait sockets: 0
  Timewait recycle: 0
  Reuse timewait port: 0
Keepalive information:
  Keepalive on: 0
  Idle period: 900 seconds
  Interval: 75 seconds
  Max probes: 6
MTU probing:
  Enable mtu probing: 0
FIN specific information:
  FIN_WAIT_2 timeout: 60 seconds
Orphan socket information:
  Max orphans: 16384
  Max orphan retries: 0
Current orphans: 0
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform  
Description**

N/A

## 10.12 show tcp pmtu

Use this command to display information about TCP PMTU.

```
show tcp pmtu [ local-ip a.b.c.d ] [ local-port num ] [ peer-ip a.b.c.d ] [ peer-port num ]
```

| Parameter Description | Parameter                      | Description       |
|-----------------------|--------------------------------|-------------------|
|                       | <b>local-ip</b> <i>a.b.c.d</i> | Local IP address. |
|                       | <b>local-port</b> <i>num</i>   | Local port.       |
|                       | <b>peer-ip</b> <i>a.b.c.d</i>  | Peer IP address.  |
|                       | <b>peer-port</b> <i>num</i>    | Peer port.        |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays PMTU of IPv4 TCP connection.

**Examples**

```
Ruijie# show tcp pmtu
Number  Local Address          Foreign Address          PMTU
1       192.168.195.212.23     192.168.195.112.13560  1440
```

| Field           | Description                                                                                                                                                               |
|-----------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Number          | Sequence number.                                                                                                                                                          |
| Local Address   | The local address and the port number. The number after the last "." is the port number. For example, in "2002::2.23" and "192.168.195.212.23", "23" is the port number.  |
| Foreign Address | The remote address and the port number. The number after the last "." is the port number. For example, in "2002::2.23" and "192.168.195.212.23", "23" is the port number. |
| PMTU            | PMTU value.                                                                                                                                                               |

| Related Commands | Command                          | Description                              |
|------------------|----------------------------------|------------------------------------------|
|                  | <b>ip tcp path-mtu-discovery</b> | Enables the TCP PMTU discovery function. |

**Platform Description** N/A

## 10.13 show tcp port

Use this command to display information about the current TCP port.

**show tcp port** [ *num* ]

| Parameter Description | Parameter  | Description |
|-----------------------|------------|-------------|
|                       | <i>num</i> | Port number |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the current IPv4 TCP port status.

```

Examples
Ruijie#show tcp port
TCP connections on port 23:
Number  Local Address Foreign Address  State
1       1.1.1.1:23    1.1.1.2:64571   ESTABLISHED
Total: 1

TCP connections on port 2650:
Number  Local Address Foreign Address  State
Total: 0
    
```

Tcpv6 listen on 23 have total 1 connections.

| Field           | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|-----------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Foreign Address | Remote address                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| State           | Status of the current TCP connection. There are eleven possible states:<br>CLOSED: The connection has been closed.<br>LISTEN: Listening state<br>SYNSENT: In the three-way handshake phase when the SYN packet has been sent.<br>SYNRCVD: In the three-way handshake phase when the SYN packet has been received.<br>ESTABLISHED: The connection has been established.<br>FINWAIT1: The local end has sent the FIN packet.<br>FINWAIT2: The FIN packet sent by the local end has been acknowledged.<br>CLOSEWAIT: The local end has received the FIN packet from the peer end. |

|  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|--|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p>LASTACK: The local end has received the FIN packet from the peer end, and then sent its own FIN packet.</p> <p>CLOSING: The local end has sent the FIN packet from the peer end, and received the FIN packet from the peer end before the ACK packet for the peer end to respond with this FIN packet is received.</p> <p>TIMEWAIT: The FIN packet sent by the local end has been acknowledged, and the local end has also acknowledged the FIN packet.</p> |
|--|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 10.14 show tcp statistics

Use this command to show TCP statistics on received packets, three way handshake and time-wait.  
**show tcp parameter**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example shows TCP parameters.

### Examples

```
Ruijie#show tcp statistics
TCP Packets
  Received: 1103
  Errors : 0(checksum: 0)
Three way handshake
  Request queue overflow: 0
  Accept backlog full: 0
  Web authentication limit per user: 0
  Failed to alloc memory for request sock: 0
```

```
Failed to create open request child: 0
SYN ACK retransmits: 0
Timeouted requests: 0
Time-wait
Time-wait bucket table overflow: 0
```

Field Description

| Field               | Description                                                                                                                                                                                                                                                                                                                                    |
|---------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| TCP Packets         | Normal packets and error packets                                                                                                                                                                                                                                                                                                               |
| Three way handshake | Three way handshake information, including session request count, server-client connection count, three way handshake failure count caused by Web authentication limit, TCP socket failure count caused by memory shortage, sub-session failure count, packet retransmission count and session failure count caused by retransmission timeout. |
| Time-wait           | Session in TIMEWAIT state                                                                                                                                                                                                                                                                                                                      |

Related Commands

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

Platform Description

N/A



## 11 IPv4/IPv6 REF Commands

### 11.1 clear ip ref packet statistics

Use this command to clear IPv4 Ruijie Express Forwarding (REF) packet statistics.

**clear ip ref packet statistics**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration Examples** The following example clears IPv4 REF packet statistics.

```
Ruijie #clear ip ref packet statistics
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

### 11.2 clear ipv6 ref packet statistics

Use this command to clear IPv6 REF packet statistics.

**clear ipv6 ref packet statistics**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example clears IPv6 REF packet statistics.

**Examples**

```
Ruijie #clear ipv6 ref packet statistics
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 11.3 hash-disturb

Use this command to enable hash disturbance factor. Use the **no** form of this command to disable settings.

**hash-disturb** *string*

**no hash-disturb**

| Parameter Description | Parameter     | Description                 |
|-----------------------|---------------|-----------------------------|
|                       | <i>string</i> | Enables disturbance factor. |

**Defaults** Hash disturbance factor is disabled by default.

**Command Mode** REF load balancing enhanced profile configuration mode

**Usage Guide** N/A

**Configuration** The following example enables hash disturbance factor.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# ip-ref-load-balance-profile
Ruijie(ref-ip-config-load-balance-profile)# hash-disturb A
Ruijie(ref-ip-config-load-balance-profile)#
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 11.4 hash-symmetrical

Use this command to enable hash symmetrical factor. Use the **no** form of this command to disable settings.

**hash-symmetrical** { **ipv4** | **ipv6** | **fcoe** }

**no hash-symmetrical { ipv4 | ipv6 | fcoe }**

|                               |                                                                                                                                                                                                                             |                                                   |
|-------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------|
| <b>Parameter</b>              | <b>Parameter</b>                                                                                                                                                                                                            | <b>Description</b>                                |
| <b>Description</b>            | <b>ipv4</b>                                                                                                                                                                                                                 | Enables hash symmetrical factor for IPv4 packets. |
|                               | <b>ipv6</b>                                                                                                                                                                                                                 | Enables hash symmetrical factor for IPv6 packets. |
|                               | <b>fcoe</b>                                                                                                                                                                                                                 | Enables hash symmetrical factor for FCoE packets. |
| <b>Defaults</b>               | The defaults vary with different products.                                                                                                                                                                                  |                                                   |
| <b>Command Mode</b>           | REF load balancing enhanced profile configuration mode                                                                                                                                                                      |                                                   |
| <b>Usage Guide</b>            | N/A                                                                                                                                                                                                                         |                                                   |
| <b>Configuration Examples</b> | The following example disables hash symmetrical factor for IPv6 and FCoE packets.                                                                                                                                           |                                                   |
| <b>Examples</b>               | <pre>Ruijie# configure terminal Ruijie(config)# ip-ref-load-balance-profile Ruijie(ref-ip-config-load-balance-profile)# no hash-symmetrical ipv6 Ruijie(ref-ip-config-load-balance-profile)# no hash-symmetrical fcoe</pre> |                                                   |
| <b>Related Commands</b>       | <b>Command</b>                                                                                                                                                                                                              | <b>Description</b>                                |
|                               | N/A                                                                                                                                                                                                                         | N/A                                               |
| <b>Platform</b>               | N/A                                                                                                                                                                                                                         |                                                   |
| <b>Description</b>            |                                                                                                                                                                                                                             |                                                   |

## 11.5 ip ref load-sharing original

Use this command to configure the algorithm that is used for load balancing during forwarding based on the source and destination IPv4 addresses. Use the **no** form of this command to restore the default setting.

**ip ref load-sharing original**

**no ip ref load-sharing original**

|                     |                                                                                                     |                    |
|---------------------|-----------------------------------------------------------------------------------------------------|--------------------|
| <b>Parameter</b>    | <b>Parameter</b>                                                                                    | <b>Description</b> |
| <b>Description</b>  | N/A                                                                                                 | N/A                |
| <b>Defaults</b>     | The default algorithm is based on the destination IPv4 address.                                     |                    |
| <b>Command Mode</b> | Global configuration mode                                                                           |                    |
| <b>Usage Guide</b>  | The REF is responsible for data forwarding and supports two load balancing algorithms. One is based |                    |

on destination IP addresses and the other is based on the source and destination IP addresses. When IP packets are forwarded on multiple paths, for example, when load balancing based on destination IP addresses is configured, the REF forwards packets based on a path matching the destination IP address of packets. By default, load balancing based on destination IP addresses is used.

**Configuration Examples** The following example configures the load balancing algorithm based on source and destination IP addresses.

```
Ruijie(config)# ip ref load-sharing original
```

The following example configures the load balancing algorithm based on destination IP addresses of packets.

```
Ruijie(config)# no ip ref load-sharing original
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 11.6 ip ref load-balance

Use this command to configure ECMP load balancing algorithm. Use the **no** or **default** form of this command to restore the default setting.

```
ip ref load-balance [ src-dst-ip | src-ip | src-ip-src-dst-l4port | src-dst-ip-src-dst-l4port ]  
no ip ref load-balance
```

| Parameter Description | Parameter                        | Description                                                                                                                                                                                                                                                                                                       |
|-----------------------|----------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <b>src-dst-ip</b>                | Configures ECMP load balancing based on the source and destination IP address. The packets containing the same source and destination IP address are routed over the same link. This algorithm is recommended for a layer-3 network scenario.                                                                     |
|                       | <b>src-ip</b>                    | Configures ECMP load balancing based on the source IP address. The packets containing the same source IP address are routed over the same link.                                                                                                                                                                   |
|                       | <b>src-ip-src-dst-l4port</b>     | Configures ECMP load balancing based on the source IP address, layer-4 source port and layer-4 destination port. The packets containing the same the source IP address, layer-4 source port and layer-4 destination port are routed over the same link. The other packets are evenly distributed over ECMP paths. |
|                       | <b>src-dst-ip-src-dst-l4port</b> | Configures ECMP load balancing based on the source IP address, destination IP address, layer-4 source port and layer-4 destination port.                                                                                                                                                                          |

**Defaults** ECMP load balancing is based on the source and the destination IP address by default.

**Command Mode** Global configuration mode

**Usage Guide**

**Configuration** The following example configures ECMP load balancing based on the destination IP address.

**Examples**

```
Ruijie(config)# ip ref load-balance dst-ipe
```

The following example restores the default ECMP load balancing algorithm.

```
Ruijie(config)# no ip ref load-balance
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 11.7 ip ref hash-elasticity enable

Use this command to enable ECMP elastic hash. Use the **no** or **default** form of this command to restore the default setting.

- ip ref hash-elasticity enable**
- no ip ref hash-elasticity enable**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** ECMP elastic hash is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** N/A

**Configuration** The following example enables ECMP elastic hash.

**Examples**

```
ip ref hash-elasticity enable
```

The following example disables ECMP elastic hash.

```
no ip ref hash-elasticity enable
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 11.8 ipv6 ref load-sharing original

Use this command to configure the algorithm that is used for load balancing during forwarding based on the source and destination IPv6 addresses. Use the **no** form of this command to restore the default setting.

**ipv6 ref load-sharing original**  
**no ipv6 ref load-sharing original**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** The default algorithm is based on the destination IPv6 address.

**Command Mode** Global configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example restores the algorithm that is used for load balancing during forwarding to the default setting.

```
Ruijie(config)#no ipv6 ref load-sharing original
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A.  
**Description**

## 11.9 show ip ref adjacency

Use this command to display the information about the specified adjacent node or all adjacent nodes.  
**show ip ref adjacency [ glean | local | ip-address | interface interface\_type interface\_number | discard | statistics ]**

| Parameter   | Parameter    | Description                                               |
|-------------|--------------|-----------------------------------------------------------|
| Description | <b>glean</b> | Aggregate adjacent node, which is used for a direct route |

|                         |                                                      |
|-------------------------|------------------------------------------------------|
| <b>local</b>            | Local adjacent node, which is used by the local host |
| <i>ip-address</i>       | Next-hop IP address                                  |
| <i>interface_type</i>   | Interface type                                       |
| <i>interface_number</i> | Interface number                                     |
| <b>discard</b>          | Displays discarded adjacent nodes.                   |
| <b>statistics</b>       | Statistics                                           |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** This command can be used to display the information about the adjacent node table in the current REF module. By specifying parameters, the information about the aggregate adjacent node, local adjacent node, adjacent node of the specified IP address, adjacent node associated with the specified interface, and all adjacent nodes can be displayed.

**Configuration Examples** The following example displays the information about all adjacent nodes in the adjacent node table.

```
Ruijie#show ip ref adjacency
id state      type    rfct chg ip          interface          linklayer(header
data)
1  unresolved mcast  1    0  224.0.0.0
9  resolved  forward 1    0  192.168.50.78 GigabitEthernet 0/0 00 25 64 C5
9D 6A 00 D0 F8 98 76 54 08 00
7  resolved  forward 1    0  192.168.50.200 GigabitEthernet 0/0 00 04 5F 87
69 66 00 D0 F8 98 76 54 08 00
6  unresolved glean  1    0  0.0.0.0          GigabitEthernet 0/0
4  unresolved local  3    0  0.0.0.0          Local 1
```

Description of fields:

| Field | Description                                                                                                                                                      |
|-------|------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| id    | Adjacent node ID                                                                                                                                                 |
| state | Adjacent node state:<br>Unresolved<br>Resolved                                                                                                                   |
| type  | Adjacent node type<br>Local: local adjacency<br>Forward: forward adjacency<br>Discard: discard adjacency<br>Glean: glean adjacency<br>Mcast: multicast adjacency |
| rfct  | Reference count of the adjacent node                                                                                                                             |
| chg   | Whether the adjacent node is on the changing link.                                                                                                               |

|           |                                 |
|-----------|---------------------------------|
| ip        | IP address of the adjacent node |
| interface | Interface                       |
| linklayer | Layer 2 head                    |

| Related Commands | Command                  | Description                                               |
|------------------|--------------------------|-----------------------------------------------------------|
|                  | <b>show ip ref route</b> | Displays all route information in the current REF module. |

**Platform** N/A

**Description**

## 11.10 show ip ref exact-route

This command is used to display the IPv4 REF exact route.

**show ip ref exact-route** [ **oob** | **vrf vrf\_name** ] *source\_ipaddress dest\_ipaddress*

| Parameter Description | Parameter               | Description                                                                                                                                  |
|-----------------------|-------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <b>oob</b>              | Out of band, namely, the network that the management interface belongs to, supported only by the device supporting the management interface. |
|                       | <b>vrf vrf_name</b>     | VRF name, supported only by the VRF-supported device.                                                                                        |
|                       | <i>source_ipaddress</i> | Source IP address of the packet                                                                                                              |
|                       | <i>dest_ipaddress</i>   | Destination IP address of the packet                                                                                                         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** This command is used to specify the source and the destination IP address of the IP packets, and to display the path of forwarding the current packet with REF

**Configuration Examples** The following example displays the IPv4 REF exact route from 192.168.217.74 to 192.168.13.1.

```
Ruijie# show ip ref exact-route 192.168.217.74 192.168.13.1
192.168.217.74 --> 192.168.13.1 (vrf global):
id state   type    rfct chg ip           interface      linklayer(header
data)
9  resolved forward 1     0   192.168.17.1 GigabitEthernet 0/0 00 25 64 C5 9D
6A 00 D0 F8 98 76 54 08 00
```

Description of fields:

| Field | Description  |
|-------|--------------|
| id    | Adjacency ID |



|           |                                                                                                                                                              |
|-----------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| state     | Adjacency state:<br>Unresolved<br>Resolved                                                                                                                   |
| type      | Adjacency type<br>Local: local adjacency<br>Forward: forward adjacency<br>Discard: discard adjacency<br>Glean: glean adjacency<br>Mcast: multicast adjacency |
| rfct      | Reference count of the adjacency                                                                                                                             |
| chg       | Whether the adjacency is on the changing link.                                                                                                               |
| ip        | Adjacency IP address                                                                                                                                         |
| interface | Interface                                                                                                                                                    |
| linklayer | Layer 2 head                                                                                                                                                 |

| Related  | Command                  | Description                                                 |
|----------|--------------------------|-------------------------------------------------------------|
| Commands | <b>show ip ref route</b> | Displays all routing information in the current REF module. |

**Platform** N/A

**Description**

## 11.11 show ip ref packet statistics

Use this command to display IPv4 REF packet statistics.

**show ip ref packet statistics**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays IPv4 REF packet statistics.

**Examples**

```
Ruijie #show ip ref pkt-statistic
ref packet statistic:
  bad head      : 0
  lookup fib fail : 0
```

```

local adj      : 0
glean adj     : 0
forward       : 0
redirect      : 0
punt adj      : 0
outif not in ef : 0
ttl expiration : 0
no ip routing : 0

```

| Field           | Description                                                          |
|-----------------|----------------------------------------------------------------------|
| total recved    | Number of total packets received by REF                              |
| bad head        | Number of the packets with false header                              |
| lookup fib fail | Number of the packets with failed REF routing                        |
| drop adj        | Number of the packets matching the dropped adjacency                 |
| local adj       | Number of the packets matching the local adjacency                   |
| glean adj       | Number of the packets matching the gleaned adjacency                 |
| forward         | Number of the packets matching the forwarded adjacency               |
| no ip routing   | Number of the packets not allowed to be forwarded and sent to local. |

#### Related Commands

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 11.12 show ip ref resolve-list

Use this command to display the IPv4 REF resolution information.

**show ip ref resolve-list**

#### Parameter Description

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** N/A

**Command** Privileged EXEC mode

**Mode****Usage Guide** N/A**Configuration** The following example displays IPv4 REF resolution information.**Examples**

```
Ruijie#show ip ref resolve-list
IP                res_state flags interface
1.1.1.1          unres    1    GigabitEthernet 0/0
```

| Field     | Description                                          |
|-----------|------------------------------------------------------|
| IP        | IP address                                           |
| res_state | unres: unresolved<br>res: resolved                   |
| flags     | 0: related to adjacency<br>1: unrelated to adjacency |
| interface | Interface                                            |

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A**Description**

## 11.13 show ip ref route

Use this command to display all the routing information in the IPv4 REF table.

**show ip ref route [ oob | vrf vrf\_name ] [ default | ip mask | statistics ]**

**Parameter  
Description**

| Parameter           | Description                                                                                                                                  |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------|
| <b>oob</b>          | Out of band, namely, the network that the management interface belongs to, supported only by the device supporting the management interface. |
| <b>vrf vrf_name</b> | VRF name, supported only by the VRF-supported device.                                                                                        |
| <b>default</b>      | Specifies the default route.                                                                                                                 |
| <i>ip</i>           | Specifies the destination IP address of the route                                                                                            |
| <i>mask</i>         | Specifies the mask of the route.                                                                                                             |
| <b>statistics</b>   | Statistics                                                                                                                                   |

**Defaults** N/A**Command** Privileged EXEC mode**Mode**

**Usage Guide** This command is used to display the related routing information on the current REF table, and specify the default route and all the routing information matching IP/MASK.

**Configuration** The following example displays all the routing information in the IPv4 REF table.

**Examples**

```
Ruijie#show ip ref route
Codes: * - default route
      # - zero route

ip      mask      weight path-id  next-hop  interface
255.255.255.255 255.255.255.255 1 4 0.0.0.0 Local 0
224.0.0.0      240.0.0.0      1 1 224.0.0.0
224.0.0.0      255.255.255.0  1 4 0.0.0.0 Local 0
192.168.50.0   255.255.255.0   1 6 0.0.0.0 FastEthernet 0/0
192.168.50.255 255.255.255.255 1 2 0.0.0.0
192.168.50.200 255.255.255.255 1 7 192.168.50.200 FastEthernet 0/0
192.168.50.122 255.255.255.255 1 4 0.0.0.0 Local 0
192.168.50.78 255.255.255.255 1 9 192.168.50.78 FastEthernet 0/0
```

| Field     | Description            |
|-----------|------------------------|
| ip        | Destination IP address |
| mask      | Mask                   |
| path-id   | Adjacent identity      |
| next-hop  | Address of next hop    |
| weight    | Routing weight         |
| interface | Egress                 |

**Related Commands**

| Command                 | Description                                                |
|-------------------------|------------------------------------------------------------|
| show ip ref exact-route | Displays the accurate REF forwarding path of an IP packet. |

**Platform** N/A

**Description**

## 11.14 show ipv6 ref adjacency

Use this command to display the information about the IPv6 adjacent node.

**show ipv6 ref adjacency** [**glean** | **local** | *ipv6-address* | **interface** *interface\_type interface\_number* | **discard** | **statistics** ]

**Parameter Description**

| Parameter    | Description                                               |
|--------------|-----------------------------------------------------------|
| <b>glean</b> | Aggregate adjacent node, which is used for a direct route |
| <b>local</b> | Local adjacent node, which is used by the local host      |

|                         |                                    |
|-------------------------|------------------------------------|
| <i>ipv6-address</i>     | Next-hop IP address                |
| <i>interface_type</i>   | Interface type                     |
| <i>interface_number</i> | Interface number                   |
| <b>discard</b>          | Displays discarded adjacent nodes. |
| <b>statistics</b>       | Statistics                         |

**Defaults** N/A

**Command** Privileged EXEC mode

**Mode**

**Usage Guide** This command can be used to display the information about the adjacent node table in the privileged EXEC mode and global configuration mode.

**Configuration** The following example displays the information about the IPv6 adjacent node..

**Examples**

```
Ruijie#show ipv6 ref adjacency
id  state      type  rfct chg ip  interface  linklayer(header
data)
1   unresolved glean  1   0  ::  GigabitEthernet 0/0
2   unresolved local  2   0  ::1 Local 1
```

Description of fields:

| Field                  | Description                                                                                                                                                      |
|------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| id                     | Adjacent node ID                                                                                                                                                 |
| state                  | Adjacent node state:<br>Unresolved<br>Resolved                                                                                                                   |
| type                   | Adjacent node type<br>Local: local adjacency<br>Forward: forward adjacency<br>Discard: discard adjacency<br>Glean: glean adjacency<br>Mcast: multicast adjacency |
| rfct                   | Reference count of the adjacent node                                                                                                                             |
| chg                    | Whether the adjacent node is on the changing link.                                                                                                               |
| ip                     | IP address of the adjacent node                                                                                                                                  |
| interface              | Interface                                                                                                                                                        |
| linklayer(header data) | Layer 2 head                                                                                                                                                     |

For distributed routers, id is divided into two fields, namely, gid and lid, standing for global adjacent node ID and local adjacent node ID respectively.

**Related**

**Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 11.15 show ipv6 ref exact-route

This command is used to display the IPv6 REF exact route.

**show ipv6 ref exact-route** [ **oob** | **vrf** *vrf\_name* ] *source-ipv6-address destination-ipv6-address*

| Parameter          | Parameter                       | Description                                                                                                                                  |
|--------------------|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b> | <b>oob</b>                      | Out of band, namely, the network that the management interface belongs to, supported only by the device supporting the management interface. |
|                    | <b>vrf</b> <i>vrf_name</i>      | VRF name, supported only by the VRF-supported device.                                                                                        |
|                    | <i>source-ipv6-address</i>      | Source IP address of the packet                                                                                                              |
|                    | <i>destination-ipv6-address</i> | Destination IP address of the packet                                                                                                         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration Examples** The following example displays the IPv4 REF exact route from 2001:db8:1::1 to 3001:db8:2::2.

```
Ruijie#show ipv6 exact-route 2001:db8:1::1 3001:db8:2::2
2001:db8:1::1 --> 3001:db8:2::2 (vrf global):
ID state      type  rfct chg ip interface          linklayer(header data)
3  unresolve  glean  1   0   :: GigabitEthernet 0/0
```

Description of fields:

| Field | Description                                    |
|-------|------------------------------------------------|
| id    | Adjacent node ID                               |
| state | Adjacent node state:<br>Unresolved<br>Resolved |

|                        |                                                                                                                                                                  |
|------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| type                   | Adjacent node type<br>Local: local adjacency<br>Forward: forward adjacency<br>Discard: discard adjacency<br>Glean: glean adjacency<br>Mcast: multicast adjacency |
| rfct                   | Reference count of the adjacent node                                                                                                                             |
| chg                    | Whether the adjacent node is on the changing link.                                                                                                               |
| ip                     | IP address of the adjacent node                                                                                                                                  |
| interface              | Interface                                                                                                                                                        |
| linklayer(header data) | Layer 2 head                                                                                                                                                     |

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 11.16 show ipv6 ref packet statistics

Use this command to display IPv6 REF packet statistics.

**show ipv6 ref packet statistics**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays IPv6 REF packet statistics.

**Examples** Ruijie#show ipv6 ref packet statistics

```
ref packet statistic:
  bad head      : 0
  lookup fib fail : 0
  local adj     : 0
  glean adj     : 0
```

```

forward      : 0
redirect     : 0
hop-limit expiration : 0
no ipv6 unicast-routing : 0

```

| Field           | Description                                                          |
|-----------------|----------------------------------------------------------------------|
| bad head        | Number of the packets with false header                              |
| lookup fib fail | Number of the packets with failed REF routing                        |
| drop adj        | Number of the packets matching the dropped adjacency                 |
| local adj       | Number of the packets matching the local adjacency                   |
| glean adj       | Number of the packets matching the gleaned adjacency                 |
| forward         | Number of the packets matching the forwarded adjacency               |
| no ip routing   | Number of the packets not allowed to be forwarded and sent to local. |

#### Related Commands

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

#### Description

## 11.17 show ipv6 ref resolve-list

This command is used to display the IPv6 REF resolution information.

**show ipv6 ref resolve-list**

#### Parameter Description

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays IPv6 REF resolution information.



**Examples**

```
Ruijie#show ipv6 ref resolve-list
IP           res_state flags interface
1000::1      unres     1     GigabitEthernet 0/0
```

| Field     | Description                                          |
|-----------|------------------------------------------------------|
| IP        | IPv6 address                                         |
| res_state | unres: unresolved<br>res: resolved                   |
| flags     | 0: related to adjacency<br>1: unrelated to adjacency |
| interface | Interface                                            |

**Related****Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform**

N/A

**Description**

## 11.18 show ipv6 ref route

Use this command to display all the routing information in the IPv6 REF table.

**show ipv6 ref route [ oob | vrf *vrf-name* ] [ default | statistics | prefix/len ]**

**Parameter Description**

| Parameter                  | Description                                                                                                                                  |
|----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|
| <b>oob</b>                 | Out of band, namely, the network that the management interface belongs to, supported only by the device supporting the management interface. |
| <b>vrf <i>vrf_name</i></b> | VRF name, supported only by the VRF-supported device.                                                                                        |
| <b>default</b>             | Specifies the default route.                                                                                                                 |
| <b>statistics</b>          | Statistics                                                                                                                                   |
| <b>prefix/len</b>          | Displays the route with the specified prefix (X:X:X:X:/<0-128>).                                                                             |

**Defaults**

N/A

**Command Mode**

Privileged EXEC mode

**Usage Guide**

This command is used to display all routing information in the IPv6 REF table. If there is no VRF parameter, information about the global REF table is displayed; if there is VRF parameter, information about the specified VRF table is displayed. The command can also be used to display information

about the default route, the route with the specified prefix, and statistics of all types of routes.

**Configuration** The following example displays all the routing information in the REF IPv6 table.

**Examples**

```
Ruijie#show ipv6 ref route
Codes: * - default route
prefix/len          weight path_id next_hop interface
2001:da8:ffe:2::/64    1      3      ::      GigabitEthernet 0/0
2001:da8:ffe:2::3/128  1      2      :::1    Local 1
fe80::/10            1      6      ::      Null 0
fe80::21a:a9ff:fe3b:fa41/128  1      2      :::1    Local 1
```

| Field      | Description                    |
|------------|--------------------------------|
| prefix/len | IPv6 prefix and prefix length. |
| path-id    | Adjacent identity              |
| next-hop   | Address of next hop            |
| weight     | Routing weight                 |
| interface  | Interface                      |

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 11.19 show ip ref load-balance

Use this command to display ECMP load balancing configuration.

**show ip ref load-balance**

**Parameter**  
**Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays ECMP load balancing configuration..

**Examples**

```
Ruijie#
Ruijie#show ip ref load-balance
  load-balance          : src-dst-ip.
  hash-elasticity      : enable.
Ruijie#
```

| Field           | Description                                                    |
|-----------------|----------------------------------------------------------------|
| load-balance    | ECMP load balancing algorithm                                  |
| hash-elasticity | Enable: Enable elastic hash.<br>Disable: Disable elastic hash. |

**Related****Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform**

N/A

**Description**



## IP Routing Commands

---

1. RIP Commands
2. OSPF v2 Commands
3. OSPFv3 Commands
4. IS-IS Commands
5. BGP4 Commands
6. PBR Commands
7. VRF Commands
8. RIPng Commands
9. NSM Commands
10. Protocol-independent Commands

# 1 RIP Commands

## 1.1 address-family

Use this command to configure the RIP protocol in address family configuration sub-mode. Use the **no** form of this command to restore the default setting.

**address-family ipv4 vrf** *vrf-name*

**no address-family ipv4 vrf** *vrf-name*

| Parameter Description | Parameter                  | Description                                                  |
|-----------------------|----------------------------|--------------------------------------------------------------|
|                       | <b>vrf</b> <i>vrf-name</i> | Specifies the VRF name associated with the sub-mode command. |

**Defaults** The address family of the RIP protocol is not configured by default.

**Command Mode** Route configuration mode

**Usage Guide** Use the **address-family** command to enter the address family configuration sub-mode. The prompt is (config-router-af) #. When you specify the VRF associated with the sub-mode for the first time, the RIP instance corresponding to the VRF will be created. In the sub-mode, you can configure the VRF RIP routing information.

To remove the address family sub-mode and return to the route configuration mode, use the **exit-address-family** or **exit** command.

**Configuration Examples** The following example creates a VRF with the name of vpn1 and creates its RIP instance.

```
Ruijie(config)# ip vrf vpn1
Ruijie(config-vrf)# exit
Ruijie(config)# interface fastEthernet 1/0
Ruijie(config-if-FastEthernet 0/1)# ip vrf forwarding vpn1
Ruijie(config-if-FastEthernet 0/1)# ip address 192.168.1.1 255.255.255.0
Ruijie(config)# router rip
Ruijie(config-router)# address-family ipv4 vrf vpn1
Ruijie(config-router)# network 192.168.1.0
Ruijie(config-router)# exit-address-family
```

| Related Commands | Command                    | Description                                      |
|------------------|----------------------------|--------------------------------------------------|
|                  | <b>exit-address-family</b> | Exits the address family configuration sub-mode. |
|                  | <b>ip vrf</b>              | Creates a VRF.                                   |

**Platform** N/A  
**Description**

## 1.2 auto-summary

Use this command to enable automatic summary of RIP routes. Use the **no** form of this command to disable this function

**auto-summary**  
**no auto-summary**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** Automatic summary of RIP routes is enabled by default

### Command

**Mode** Routing progress configuration mode


**Usage Guide** Automatic RIP route summary means the subnet routes will be automatically summarized into the routes of the classified network when they traverse through the subnet. Automatic route summary is enabled by default for RIPv1 and RIPv2.

Automatic RIP route summary improves the flexibility and effectiveness of the network. If the summarized route exists, the sub-routes contained in the summarized route cannot be seen in the routing table, reducing the size of the routing table significantly.

Advertising the summarized route is more efficient than advertising individual routes in light of the following factors:

- The summarized route is always processed preferentially when you query the RIP database.
- Any sub-route is ignored when you query the RIP database, reducing the processing time.
- If you want to learn the specific sub-routes instead of the summarized route, disable the automatic route summary function. Only when RIPv2 is configured, the automatic route summary function can be disabled. For the RIPv1, the automatic route summary function is always enabled.

---

 The range of the supernet route is wider than that of the classful network. Therefore, this command takes no effect on the supernet route.

---

**Configuration** The following example disables automatic route summary of RIPv2.

```
Ruijie (config)# router rip
Ruijie (config-router)# version 2
Ruijie (config-router)# no auto-summary
```

| Related Commands | Command | Description    |
|------------------|---------|----------------|
|                  |         | <b>version</b> |

**Platform** N/A  
**Description**

### 1.3 bfd all-interfaces

Use this command to enable all interfaces running RIP to use the BFD function. Use the **no** form of this command to restore the default setting.

**bfd all-interfaces**  
**no bfd all-interfaces**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       |           | N/A         |

**Defaults** BFD is not configured by default.

**Command Mode** Routing process configuration mode

**Usage Guide** With the BFD function enabled on the RIP, one BFD session will be established for the RIP routing information source (the source address of the RIP route update packet). Once the BFD neighbor fails, the RIP routing information will be invalid directly and no longer join routing or forwarding. You can also use the interface configuration mode command **ip rip bfd [disable]** to enable or disable the BFD function on the specified interface, which takes precedence over the command **bfd all-interfaces** in the routing process configuration mode.

#### Configuration

**Examples** N/A

| Related Commands | Command                       | Description                                                                                     |
|------------------|-------------------------------|-------------------------------------------------------------------------------------------------|
|                  | <b>route ip</b>               | Creates the RIP routing process and enters the routing process configuration mode.              |
|                  | <b>ip rip bfd [ disable ]</b> | Configures a specified interface running RIP to enable or disable link detection using the BFD. |

**Platform** N/A  
**Description**

## 1.4 default-information originate

Use this command to generate a default route in the RIP process. Use the **no** form of this command to delete the generated default route.

**default-information originate** [**always**] [**metric** *metric-value*] [**route-map** *map-name* ]

**no default-information originate** [ **always**] [**metric**] [**route-map** *map-name*]

| Parameter Description | Parameter                         | Description                                                                                              |
|-----------------------|-----------------------------------|----------------------------------------------------------------------------------------------------------|
|                       | <b>always</b>                     | (Optional) Enables RIP to generate the default route, no matter whether the default route exists or not. |
|                       | <b>metric</b> <i>metric-value</i> | (Optional) The original metric value of the default route with the value range 1-15 of metric-value.     |
|                       | <b>route-map</b> <i>map-name</i>  | (Optional) Name of the associated route-map. Route-map is not associated by default.                     |

**Defaults** No default route is generated by default.  
The default metric value is 1.

### Command

**Mode** Routing process configuration mode


### Usage Guide


By default, RIP will not advertise the default route if the default route exists in the routing table of the router. In this case, use the **default-information originate** command to notify the neighbor of the default route.

With the parameter **always** configured, no matter whether the default route exists in the RIP routing process or not, the default route will be advertised to the neighbor but is not shown in the local routing table. You can use the **show ip rip database** command to view the RIP routing information database to confirm whether the default route is generated.

Use the parameter **route-map** to control more about the default route advertised to RIP. For example, use the **set metric** command to set the metric value of the default route.

The route-map set metric rule takes precedence over the parameter metric value configuration of the default route. If the parameter metric is not configured, the default metric value is used by the default route.

 If the default route can be generated in the RIP process by using this command, RIP will not learn the default route advertised from the neighbor.

 For the default route generated by using the **ip default-network** command, the **default-information originate** command is required to add the default route to RIP.

**Configuration** The following example generates a default route to the RIP routing table.

**Examples**

```
Ruijie(config-router)# default-information originate always
```

### Related

| Command | Description |
|---------|-------------|
|---------|-------------|



| Commands                          |                                                       |
|-----------------------------------|-------------------------------------------------------|
| <b>ip rip default-information</b> | Notifies the default route through an interface.      |
| <b>redistribute</b>               | Redistributes the routes from other protocols to RIP. |

**Platform** N/A

**Description**

## 1.5 default-metric

Use this command to define the default RIP metric value. Use the **no** form of this command to restore the default setting.

**default-metric** *metric-value*

**no default-metric**

| Parameter Description | Parameter           | Description                                                                                                                                                  |
|-----------------------|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <i>metric-value</i> | Indicates the default metric value with the range from 1 to 16. If the metric value is greater than or equal to 16, the RGNOS regards the route unreachable. |

**Defaults** The default is 1.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** This command needs to work with the command **redistribute**. When the routes are redistributed to the RIP routing process from a routing protocol process, the route metric value cannot be converted due to the incompatibility of the metric calculation mechanisms for different protocols. During the conversion, therefore, it is required to redefine the metric values of redistributed routes in the RIP routing domain. If there is no clear definition of the metric value in redistributing a routing protocol process, the RIP uses the metric value defined with **default-metric**. If the metric value is defined, this value overwrites the metric value defined with default-metric. If this command is not configured, the default value of default-metric is 1.

**Configuration Examples** The following example enables the RIP routing protocol to redistribute the routes learned by the OSPF routing protocol, whose initial RIP metric value is set to 3.

```
Ruijie (config)# router rip
Ruijie (config-router)# default-metric 3
Ruijie (config-router)# redistribute ospf 100
```

**Related Commands**

| Command             | Description                               |
|---------------------|-------------------------------------------|
| <b>redistribute</b> | Redistributes the routes from one routing |

|  |                                   |
|--|-----------------------------------|
|  | domain to another routing domain. |
|--|-----------------------------------|

**Platform** N/A  
**Description**

## 1.6 distance

Use this command to set the management distance of the RIP route. Use the **no** form of this command to restore the default setting.

**distance** *distance* [ *ip-address wildcard* ]  
**no distance** [ *distance ip-address wildcard* ]

| Parameter Description | Parameter         | Description                                                                                              |
|-----------------------|-------------------|----------------------------------------------------------------------------------------------------------|
|                       | <i>distance</i>   | Sets the management distance of a RIP route, an integer in the range from 1 to 255.                      |
|                       | <i>ip-address</i> | Indicates the prefix of the source IP address of the route.                                              |
|                       | <i>wildcard</i>   | Defines the comparison bit of the IP address, where 0 means accurate matching and 1 means no comparison. |

**Defaults** The default is 120.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** Use this command to set the management distance of the RIP route. You can use this command to create several management distances with source address prefixes. When the source address of the RIP route is within the range specified by the prefixes, the corresponding management distance is applied; otherwise, the route uses the management distance configured by the RIP.

**Configuration Examples** The following example sets the management distance of the RIP route to 160, and specifies the management distance of the route learned from 192.168.2.1 as 123.

```
Ruijie(config)# router rip
Ruijie(config-router)# distance 160
Ruijie(config-router)# distance 123 192.168.12.1 0.0.0.0
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 1.7 distribute-list in

Use this command to control route update for route filtering. Use the **no** form of this command to restore the default setting.

**distribute-list** { [ *access-list-number* | *name* ] | **prefix** *prefix-list-name* [ **gateway** *prefix-list-name* ] | [ **gateway** *prefix-list-name* ] } **in** [ *interface-type* *interface-number* ]

**no distribute-list** { [ *access-list-number* | *name* ] | **prefix** *prefix-list-name* [ **gateway** *prefix-list-name* ] | [ **gateway** *prefix-list-name* ] } **in** [ *interface-type* *interface-number* ]

### Parameter Description

| Parameter                                        | Description                                                                     |
|--------------------------------------------------|---------------------------------------------------------------------------------|
| <i>access-list-number</i>   <i>name</i>          | Specifies the ACL. Only the routes that are allowed by the ACL can be accepted. |
| <b>prefix</b> <i>prefix-list-name</i>            | Uses the prefix list to filter the routes.                                      |
| <b>gateway</b> <i>prefix-list-name</i>           | Uses the prefix list to filter the source of the routes.                        |
| <i>interface-type</i><br><i>interface-number</i> | (Optional) Applies the distribution list only to a specified interface.         |

**Defaults** The distribution list is not defined by default.

**Command Mode** Routing process configuration mode

**Usage Guide** To deny receiving some specified routes, you can process all the received route update packets by configuring the route distribute control list.  
Without any interface specified, the system will process the route update packets received on all the interfaces.

**Configuration Examples** The following example enables RIP to control the routes received from the FastEthernet 0/0, only permitting the routes starting with 172.16.

```
Ruijie (config)# router rip
Ruijie (config-router)# network 200.168.23.0
Ruijie (config-router)# distribute-list 10 in fastethernet 0/0
Ruijie (config-router)# no auto-summary
Ruijie (config-router)# access-list 10 permit 172.16.0.0 0.0.255.255
```

### Related Commands

| Command            | Description              |
|--------------------|--------------------------|
| <b>access-list</b> | Defines the ACL rule.    |
| <b>prefix-list</b> | Defines the prefix list. |

**Platform Description** N/A

## 1.8 distribute-list out

Use this command to control route update advertisement for filtering routes. Use the **no** form of this command to restore the default setting.

**distribute-list** { [ *access-list-number* | *name* ] | **prefix** *prefix-list-name* } **out** [ *interface* [ [ **bgp** | **connected** | **isis** [ *area-tag* ] | **ospf** *process-id* | **rip** | **static** ] ]

**no distribute-list** { [ *access-list-number* | *name* ] | **prefix** *prefix-list-name* } **out** [ *interface* [ [ **bgp** | **connected** | **isis** [ *area-tag* ] | **ospf** *process-id* | **rip** | **static** ] ]

### Parameter Description

| Parameter                               | Description                                                                                                                                                        |
|-----------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>access-list-number</i>   <i>name</i> | Specifies the ACL.                                                                                                                                                 |
| <b>prefix</b> <i>prefix-list-name</i>   | Uses the prefix list to filter routes.                                                                                                                             |
| <i>interface</i>                        | (Optional) Applies route update advertisement control to a specified interface in the distribution list.                                                           |
| <b>bgp</b>                              | (Optional) Applies route update advertisement control to only routes introduced from bgp in this distribution list.                                                |
| <b>connected</b>                        | (Optional) Applies route update advertisement control to only connected routes in this distribution list.                                                          |
| <b>isis</b> [ <i>area-tag</i> ]         | (Optional) Applies route update advertisement control to only routes introduced from ISIS in this distribution list. <i>area-tag</i> specifies an ISIS instance.   |
| <b>ospf</b> <i>process-id</i>           | (Optional) Applies route update advertisement control to only routes introduced from OSPF in this distribution list. <i>process-id</i> specifies an OSPF instance. |
| <b>rip</b>                              | (Optional) Applies route update advertisement control to only RIP routes in this distribution list.                                                                |
| <b>static</b>                           | (Optional) Applies route update advertisement control to only static routes in this distribution list.                                                             |

**Defaults** No route update advertisement is configured by default.

### Command

**Mode** Routing process configuration mode

**Usage Guide** If this command relates to none of optional parameters, route update advertisement control applies to all interfaces. If this command relates to interface options, route update advertisement control applies to only the specified interface. If this command relates to other route process parameters, route update advertisement control applies to only the specific route process.

**Configuration** The following example advertises only the 192.168.12.0/24 route.

### Examples

```
Ruijie (config)# router rip
Ruijie (config-router)# network 200.4.4.0
Ruijie (config-router)# network 192.168.12.0
```

```
Ruijie (config-router)# distribute-list 10 out
Ruijie (config-router)# version 2
Ruijie (config-router)#access-list 10 permit 192.168.12.0 0.0.0.255
```

#### Related Commands

| Command             | Description                      |
|---------------------|----------------------------------|
| <b>access-list</b>  | Defines the ACL rule.            |
| <b>prefix-list</b>  | Defines the prefix list.         |
| <b>redistribute</b> | Configures route redistribution. |

**Platform** N/A  
**Description**

## 1.9 enable mib-binding

Use this command to bind a MIB with a specified RIP instance. Use the **no** form of this command to restore the default setting

**enable mib-binding**

**no enable mib-binding**

#### Parameter Description

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** By default, the MIB is bound with the RIP instance of the default VRF.

#### Command

**Mode** Routing process configuration mode.

**Usage Guide** As RIP MIB does not have RIP instance information, you can only operate only one RIP instance using SNMP. By default, RIP MIB is bound with the RIP instance of the default VRF. You can only operate this RIP instance. If you want to operate another RIP instance of a specified VRF through SNMP, you can use this command to bind the MIB with this instance.

**Configuration** The following example operates the RIP instance of a specified VRF, vpn1.

#### Examples

```
Ruijie(config)# router rip
Ruijie(config-router)# address-family ipv4 vrf vpn1
Ruijie(config-router-af)# enable mib-binding
```

#### Related Commands

| Command            | Description                               |
|--------------------|-------------------------------------------|
| <b>show ip rip</b> | Displays the global configuration of RIP. |

**Platform** N/A

**Description**

## 1.10 exit-address-family

Use this command to exit the address family configuration mode

**exit-address-family**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** N/A

**Command**

**Mode** Address family configuration mode

**Usage Guide** Use this command to exit the address family configuration mode.  
The abbreviation of this command is exit.

**Configuration** The following example enters or exits the address family configuration mode.

**Examples**

```
Ruijie(config-router)# address-family ipv4 vrf vpn1
Ruijie(config-router-af)# exit-address-family
```

**Related Commands**

| Command               | Description                                       |
|-----------------------|---------------------------------------------------|
| <b>address-family</b> | Enters the address family configuration sub-mode. |

**Platform** N/A

**Description**

## 1.11 fast-reroute

Use this command to enable the RIP FRR (Fast Reroute) function for the device. Use the **no** form of this command to restore the default setting.

**fast-reroute route-map** *route-map-name*

**no fast-reroute**

**Parameter Description**

| Parameter             | Description                                      |
|-----------------------|--------------------------------------------------|
| <i>route-map-name</i> | Specifies the backup path through the route map. |

**Defaults** This function is disabled by default.

**Command****Mode** Routing process configuration mode**Usage Guide**

Use the **route-map** command to specify the backup path for the matched routes.

It is recommended to enable the BFD function when the RIP fast reroute function is enabled. BFD allows the device to detect the link fault faster, so as to reduce the interruption time. In the scenario where the port is up/down, it is recommended to configure **carrier-delay 0** in interface configuration mode to achieve the fastest switchover speed, reducing the interruption time.

Currently, the restrictions of the RIP FRR are as follows:

Only one backup next hop is generated for each route.

The backup next hop is not generated for the ECMP route.

**Configuration**

The following example enables FRR for RIP instance 1 and associates route map *fast reroute*.

**Examples**

```
Ruijie(config)# route-map fast-reroute
match interface gigabitEthernet 0/2
set fast-reroute backup-interface GigabitEthernet 0/1 backup-nexthop
192.168.1.1
Ruijie(config)# router rip
Ruijie(config-router)# fast-reroute route-map fast-reroute
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform**

N/A

**Description**

## 1.12 graceful-restart

Use this command to configure the RIP graceful restart (GR) function for a device. Use the **no** form of this command to restore the default configuration.

**graceful-restart** [ **grace-period** *grace-period* ]

**no graceful-restart** [ **grace-period** ]

**Parameter  
Description**

| Parameter               | Description                                                                                                                                                                                   |
|-------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>graceful-restart</b> | Enables the GR function.                                                                                                                                                                      |
| <b>grace-period</b>     | (Optional) Configures the grace period.                                                                                                                                                       |
| <i>grace-period</i>     | (Optional) Indicates the user-defined GR period.<br>The default value is the smaller value between twice the update time and 60 seconds.<br>The range is from 1 to 1,800. The unit is second. |

**Defaults** This function is enabled by default.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** The GR function is configured on the RIP instances. Different parameters can be configured for different RIP instances.

The GR period refers to the time from the startup to the end of RIP GR. During this period, the forwarding table remains unchanged and the RIP route is restored to the state before protocol restart. When the GR period expires, RIP exits the GR state and performs normal RIP operation.

The **graceful-restart grace-period** command enables users to modify GR period. Note: Make sure that GR is completed before the RIP route is validate and after an RIP route update cycle elapses. If an improper value is configured, non-stop data forwarding cannot be ensured during the GR process. For example, if the GR period is longer than the time when the neighbor's route is unavailable and GR is not completed before the route is validated, then the neighbor is not re-informed of the route and forwarding of the neighbor's route is terminated when it is validated, which results in data forwarding interruption. Therefore, unless otherwise specified, it is not recommended to adjust the GR period. If the period needs to changed, determine that the grace period is longer than the route update cycle and shorter than the time when the route is unavailable in combination with the configuration of the **timers basic** command.

 During the RIP GR period, the network must be stable.

**Configuration Examples** The following example enables the RIP GR function and configures the GR period parameters of the GR function.

```
Ruijie(config)# router rip
Ruijie(config-router)# graceful-restart grace-period 90
```

**Related Commands**

| Command             | Description            |
|---------------------|------------------------|
| <b>timers basic</b> | Configures RIP timers. |

**Platform** N/A

**Description**

## 1.13 ip rip authentication key-chain

Use this command to enable RIP authentication and specify the keychain used for RIP authentication. Use the **no** form of this command to restore the default setting.

**ip rip authentication key-chain** *name-of-keychain*

**no ip rip authentication key-chain**

**Parameter**

| Parameter | Description |
|-----------|-------------|
|-----------|-------------|



|                    |                                                                                                                       |
|--------------------|-----------------------------------------------------------------------------------------------------------------------|
| <b>Description</b> |                                                                                                                       |
|                    | <i>name-of-keychain</i> Indicates the name of the keychain, which specifies the keychain used for RIP authentication. |

**Defaults** The keychain is not associated by default.

**Command**

**Mode** Interface configuration mode

**Usage Guide** If the keychain is specified in the interface configuration, use the key chain global configuration command to define the keychain. Otherwise, RIP data packet authentication fails. RIPv2 instead of RIPv1 supports authentication of the RIP data packet.

**Configuration Examples** The following example enables RIP authentication on the fastEthernet 0/1 with the associated keychain ripchain.

```
Ruijie (config)#interface fastEthernet 0/1
Ruijie (config-if-FastEthernet 0/1)#ip rip authentication key-chain ripchain
```

Meanwhile, use the **key chain** command to define this keychain in global configuration mode.

```
Ruijie(config)#key chain ripchain
Ruijie(config-keychain)#key 1
Ruijie(config-keychain-key)#key-string Hello
```

**Related Commands**

| Command                                    | Description                                                                                                                                          |
|--------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>ip rip authentication mode</b>          | Defines the RIP authentication mode.                                                                                                                 |
| <b>ip rip authentication text-password</b> | Enables RIP authentication, and sets the password string of RIP plaintext authentication. RIP data packet authentication is supported only by RIPv2. |
| <b>ip rip receive version</b>              | Defines the version of RIP packets received on the interface.                                                                                        |
| <b>ip rip send version</b>                 | Defines the version of RIP packets sent on the interface.                                                                                            |
| <b>key chain</b>                           | Defines the keychain and enters keychain configuration mode.                                                                                         |

**Platform Description** N/A

## 1.14 ip rip authentication mode

Use this command to define the RIP authentication mode. Use the **no** form of this command to restore the default setting.

**ip rip authentication mode { text | md5 }**

**no ip rip authentication mode**

| Parameter Description | Parameter   | Description                                                |
|-----------------------|-------------|------------------------------------------------------------|
|                       | <b>text</b> | Configures RIP authentication as plaintext authentication. |
|                       | <b>md5</b>  | Configures RIP authentication as MD5 authentication.       |

**Defaults** It is plaintext authentication by default.

**Command**

**Mode** Interface configuration mode

**Usage Guide** During the RIP authentication configuration process, the RIP authentication modes of all devices requiring exchange of RIP routing information must be the same. Otherwise, RIP packet exchange will fail.

If the plaintext authentication mode is adopted, but the password string of the plaintext authentication or the associated keychain is not configured, no authentication occurs. In the same way, if the MD5 authentication mode is adopted, but the associated keychain is not configured, no authentication occurs.

RIPv2 instead of RIPv1 supports authentication of the RIP data packet.

**Configuration** The following example configures the RIP authentication mode on the fastEthernet 0/1 as MD5.

**Examples**

```
Ruijie (config)#interface fastEthernet 0/1
Ruijie (config-if-FastEthernet 0/1)# ip rip authentication mode md5
```

**Related Commands**

| Command                                    | Description                                                                                                                                                   |
|--------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>ip rip authentication key-chain</b>     | Enables the RIP authentication mode and specifies the keychain used for RIP authentication. Only RIPv2 supports authentication of the RIP data packet.        |
| <b>ip rip authentication text-password</b> | Enables the RIP authentication mode, and sets the password string of RIP plaintext authentication. Only RIPv2 supports authentication of the RIP data packet. |
| <b>key chain</b>                           | Defines the keychain and enters the keychain configuration mode                                                                                               |

**Platform** N/A

**Description**

## 1.15 ip rip authentication text-password

Use this command to enable RIP authentication and set the password string of RIP plaintext

authentication. Use the **no** form of this command to restore the default setting.

**ip rip authentication text-password** [ 0 | 7 ] *password-string*

**no ip rip authentication text-password**

| Parameter Description | Parameter              | Description                                                                                 |
|-----------------------|------------------------|---------------------------------------------------------------------------------------------|
|                       | 0                      | Specifies that the key is displayed as plaintext.                                           |
|                       | 7                      | Specifies that the key is displayed as cipher text.                                         |
|                       | <i>password-string</i> | Indicates the password string of the plaintext authentication, in the length of 1-16 bytes. |

**Defaults** No password string of RIP plaintext authentication is configured by default.

#### Command

**Mode** Interface configuration mode

#### Usage Guide

This command works only in plaintext authentication mode.

To enable the RIP plaintext authentication function, use this command to configure the corresponding password string, or use the associated key chain to obtain the password string. The latter takes the precedence over the former one.

RIPv1 does not support RIP authentication but RIPv2 does.

**Configuration Examples** The following example enables the RIP plaintext authentication on fastEthernet 0/1 and sets the password string to hello.

```
Ruijie(config)#interface fastEthernet 0/1
Ruijie(config-if-FastEthernet 0/1)# ip rip authentication text-password hello
```

#### Related Commands

| Command                                | Description                                                                                                                     |
|----------------------------------------|---------------------------------------------------------------------------------------------------------------------------------|
| <b>ip rip authentication mode</b>      | Defines the RIP authentication mode.                                                                                            |
| <b>ip rip authentication key-chain</b> | Enables the RIP authentication mode and specifies the keychain used for RIP authentication. Only RIPv2 supports authentication. |

**Platform** N/A

**Description**

## 1.16 ip rip bfd

Use the **ip rip bfd** [ **disable** ] command to configure the specified interface running RIP to enable or disable link detection using the BFD. Use the **no** form of this command to restore the default setting.

**ip rip bfd** [ **disable** ]

**no ip rip bfd**

| Parameter Description | Parameter      | Description                                                                                        |
|-----------------------|----------------|----------------------------------------------------------------------------------------------------|
|                       | <b>disable</b> | Disables the specified interface running RIP and uses the BFD mechanism to perform link detection. |

**Defaults** Interfaces running RIP are not configured by default. The BFD configuration in RIP process configuration mode is a reference.

**Command**

**Mode** Interface configuration mode

**Usage Guide** The priority of the interface is higher that of the `bfd all-interfaces` command in process configuration mode.

You can use the `ip rip bfd` command to enable the BFD to perform link detection on the specified interface according to the actual environment or use the `bfd all-interfaces` command to configure all interfaces running RIP and enable the BFD to perform link detection. In addition, you can use the `ip rip bfd disable` command to disable the BFD detection function on the specified interface.

**Configuration**

**Examples** N/A

| Related Commands | Command                   | Description                                                                        |
|------------------|---------------------------|------------------------------------------------------------------------------------|
|                  | <b>route ip</b>           | Enables the RIP routing process and enters the routing process configuration mode. |
|                  | <b>bfd all-interfaces</b> | Configures all interfaces running RIP to use the BFD to perform link detection.    |

**Platform** N/A

**Description**

## 1.17 ip rip default-information

Use this command to advertise the default route through a RIP interface. Use the **no** form of this command to restore the default setting.

**ip rip default-information** { **only** | **originate** } [**metric** *metric-value* ]

**no ip rip default-information**

| Parameter Description | Parameter        | Description                                          |
|-----------------------|------------------|------------------------------------------------------|
|                       | <b>only</b>      | Notifies the default route rather than other routes. |
|                       | <b>originate</b> | Notifies the default route and other routes.         |


|                                   |                                                                             |
|-----------------------------------|-----------------------------------------------------------------------------|
| <b>metric</b> <i>metric-value</i> | Specifies the metric value of the default route, in the range from 1 to 15. |
|-----------------------------------|-----------------------------------------------------------------------------|

**Defaults** No default route is configured by default. The default metric value is 1.

**Command**

**Mode** Interface configuration mode

**Usage Guide** After you configure this command on a specified interface, a default route is generated and notified through the interface. If the **ip rip default-information** command of the interface and the **default-information originate** command of the RIP process are configured at the same time, only the default route of the interface is advertised.

 RIP will no longer learn the default route notified by the neighbor if any interface is configured with the ip rip default-information command.

**Configuration** The following example creates a default route which is notified on ethernet0/1 only.

**Examples**

```
Ruijie(config)#interface ethernet 0/1
Ruijie(config-if-Ethernet 0/1)#ip rip default-information only
```

**Related Commands**

| Command                              | Description                                   |
|--------------------------------------|-----------------------------------------------|
| <b>default-information originate</b> | Generates a default route in the RIP process. |

**Platform** N/A

**Description**

## 1.18 ip rip receive enable

Use this command to enable RIP to receive the RIP data package on a specified interface. Use the **no** form of this command to restore the default setting.

**ip rip receive enable**

**no ip rip receive enable**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** RIP packages can be received through the interface by default.

**Command**

**Mode** Interface configuration mode

**Usage Guide** To prevent an interface from receiving RIP packets, use the **no** form of this command in interface configuration mode. This command works on interfaces configured with this command. You can use the **default** form of this command to enable the interface to receive the RIP data package.

**Configuration** The following example prohibits receiving RIP data packages on fastEthernet 0/1.

**Examples**

```
Ruijie (config)# interface fastEthernet 0/1
Ruijie (config-if-FastEthernet 0/1)# no ip rip receive enable
```

**Related Commands**

| Command                   | Description                                                  |
|---------------------------|--------------------------------------------------------------|
| <b>ip rip send enable</b> | Enables or disables the interface to send RIP data packages. |
| <b>passive-interface</b>  | Configures a passive RIP interface.                          |

**Platform** N/A

**Description**

## 1.19 ip rip receive version

Use this command to define the version of RIP packets received on an interface. Use the **no** form of this command to restore the default setting.

**ip rip receive version [ 1 ] [ 2 ]**

**no ip rip receive version**

**Parameter Description**

| Parameter | Description                             |
|-----------|-----------------------------------------|
| <b>1</b>  | (Optional) Receives only RIPv1 packets. |
| <b>2</b>  | (Optional) Receives only RIPv2 packets. |

**Defaults** The default behavior depends on the configuration with the version command.

**Command**

**Mode** Interface configuration mode

**Usage Guide** This command overwrites the default configuration of the **version** command. It affects only RIP packet receiving through the interface and allows RIPv1 and RIPv2 packets to be received on the interface at the same time. If the command is configured without parameters, data package receiving depends on the configuration of the version.

**Configuration** The following example enables receiving both RIPv1 and RIPv2 data packages.

**Examples**

```
Ruijie (config)#interface fastEthernet 0/1
Ruijie (config-if-FastEthernet 0/1)# ip rip receive version 1 2
```

**Related**

| Command | Description |
|---------|-------------|
|---------|-------------|

| Commands       |                                                                                |
|----------------|--------------------------------------------------------------------------------|
| <b>version</b> | Defines the default version of the RIP packets received/sent on the interface. |

**Platform** N/A

**Description**

## 1.20 ip rip send enable

Use this command to enable RIP to send a RIP data package on a specified interface. Use the **no** form of this command to restore the default setting.

**ip rip send enable**

**no ip rip send enable**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** RIP packages can be sent through the interface by default.

**Command**

**Mode** Interface configuration mode

**Usage Guide** To prevent an interface from sending RIP packets, use the **no** form of this command in interface configuration mode. This command works on interfaces configured with this command. You can use the **default** form of this command to enable the interface to send the RIP data package.

**Configuration** The following example prohibits sending RIP data packages on fastEthernet 0/1.

**Examples**

```
Ruijie (config)# interface fastEthernet 0/1
Ruijie (config-if-FastEthernet 0/1)# no ip rip send enable
```

| Related Commands | Command                      | Description                                                 |
|------------------|------------------------------|-------------------------------------------------------------|
|                  | <b>ip rip receive enable</b> | Enables or disables receiving RIP packets on the interface. |
|                  | <b>passive-interface</b>     | Configures a passive RIP interface.                         |

**Platform** N/A

**Description**

## 1.21 ip rip send supernet-routes

Use this command to enable RIP to send the supernet route on a specified interface. Use the **no** form

of this command to disable this function.

**ip rip send supernet-routes**

**no ip rip send supernet-routes**


| Parameter<br>Description | Parameter | Description |
|--------------------------|-----------|-------------|
|                          | N/A       | N/A         |

**Defaults** This function is enabled by default.

**Command**

**Mode** Interface configuration mode

**Usage Guide** When the RIPv1 router monitors a RIPv2 router response packet and if the supernet routing information is monitored, incorrect route information is learned because the RIPv1 ignores the subnet mask of the routing information. In this case, you are advised to use the **no** form of this command on the RIPv2 router to disable advertising the supernet route on the corresponding interface. This command works only on interfaces configured with this command.

 This command is only valid upon sending the RIPv2 packets on the interface and it is used to control sending the supernet route.

**Configuration** The following example disables sending RIP supernet routes on the fastEthernet 0/1 interface.

**Examples**

```
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if-FastEthernet 0/1)# no ip rip send supernet-routes
```

**Related  
Commands**

| Command                   | Description                                                   |
|---------------------------|---------------------------------------------------------------|
| <b>version</b>            | Defines the RIP version                                       |
| <b>ip rip send enable</b> | Enables or disables sending the RIP package on the interface. |

**Platform** N/A

**Description**

## 1.22 ip rip send version

Use this command to define the version of the RIP packets sent on the interface. Use the **no** form of this command to restore the default setting.

**ip rip send version [ 1 ] [ 2 ]**

**no ip rip send version**

| Parameter<br>Description | Parameter | Description |
|--------------------------|-----------|-------------|
|--------------------------|-----------|-------------|



|   |                                         |
|---|-----------------------------------------|
| 1 | (Optional) Receives only RIPv1 packets. |
| 2 | (Optional) Receives only RIPv2 packets. |

**Defaults** The default behavior depends on the configuration with the version command.

**Command**

**Mode** Interface configuration mode

**Usage Guide** This command overwrites the default configuration of the **version** command. It affects only RIP packet sending through the interface and allows RIPv1 and RIPv2 packages sent on the interface at the same time. If the command is configured without parameters, package receiving depends on the configuration of the version.

**Configuration Examples** The following example enables sending both RIPv1 and RIPv2 packages on the fastEthernet 0/1 interface.

```
Ruijie (config)# interface fastEthernet 0/1
Ruijie (config-if-FastEthernet 0/1)# ip rip send version 1 2
```

**Related Commands**

| Command        | Description                                                                     |
|----------------|---------------------------------------------------------------------------------|
| <b>version</b> | Defines the default version of the RIP packets received/sent on the interfaces. |

**Platform** N/A

**Description**

## 1.23 ip rip split-horizon

Use this command to enable split horizon. Use the **no** form of this command to disable this function.

**ip rip split-horizon [ poisoned-reverse ]**

**no ip rip split-horizon [ poisoned-reverse ]**

**Parameter Description**

| Parameter               | Description                                             |
|-------------------------|---------------------------------------------------------|
| <b>poisoned-reverse</b> | (Optional) Enables split horizon with poisoned reverse. |

**Defaults** This function is enabled by default.

**Command**

**Mode** Interface configuration mode

**Usage Guide** When multiple devices are connected to the IP broadcast network and run a distance vector routing protocol, the split horizon mechanism is required to prevent loop. The split horizon prevents the

device from advertising routing information from the interface that learns that information, which optimizes routing information exchange between multiple devices.

For non-broadcast multi-path access networks (such as frame relay and X.25), split horizon may cause some devices to be unable to learn all routing information. Split horizon may need to be disabled in this case. If an interface is configured the secondary IP address, attentions shall be paid also for split horizon.

If the **poisoned-reverse** parameter is configured, split horizon with poisoned reverse is enabled. In this case, devices still advertise the route information through the interface from which the route information is learned. However, the metric value of the route information is set to unreachable.

The RIP routing protocol is a distance vector routing protocol, and the split horizon issue shall be cautioned in practical applications. If it is unsure whether split horizon is enabled on the interface, use the show ip rip command to judge. This function makes no influence on the neighbor defined with the **neighbor** command.

**Configuration** The following example disables the RIP split horizon function on the interface fastethernet 0/0.

**Examples**

```
Ruijie (config)# interface fastethernet 0/1
Ruijie (config-if)# no ip rip split-horizon
```

**Related  
Commands**

| Command                       | Description                                                                |
|-------------------------------|----------------------------------------------------------------------------|
| <b>neighbor (RIP)</b>         | Defines the IP address of the neighbor of RIP.                             |
| <b>validate-update-source</b> | Enables the source address authentication of the RIP route update message. |

**Platform** N/A

**Description**

## 1.24 ip rip subvlan

Use this command to enable RIP on super VLANs. Use the **no** form of this command to restore the default setting.

**ip rip subvlan [all | vid]**

**no ip rip subvlan**

**Parameter  
Description**

| Parameter | Description                                                     |
|-----------|-----------------------------------------------------------------|
| all       | Indicates that packets are allowed to be sent to all sub VLANs. |
| vid       | Specifies the sub VLAN ID. The value ranges from 1 to 4094.     |

**Defaults** The default setting takes effect only on super VLANs with RIP disabled.

**Command**

**Mode** Interface configuration mode

**Usage Guide** In normal cases, a super VLAN contains multiple sub VLANs. Multicast packets of a super VLAN are also sent to its sub VLANs. In this case, when RIPng multicast packets are sent over a super VLAN containing multiple sub VLANs, the RIPng multicast packets are replicated multiple times, and the device processing capability is insufficient. As a result, a large number of packets are discarded, causing the neighbor down error. In most scenarios, the RIPng function does not need to be enabled on a super VLAN. Therefore, the RIPng function is disabled by default. However, in some scenarios, the RIPng function must be run on the super VLAN, but packets only need to be sent to one sub VLAN. In this case, run this command to specify a particular sub VLAN. You must be cautious in configuring packet transmission to all sub VLANs, as the large number of sub VLANs may cause a device processing bottleneck, which will lead to the neighbor down error.

**Configuration** The following example sends the RIP multicast packets to sub VLAN 1024 of super VLAN 300.

**Examples**

```
Ruijie(config)# interface vlan 300
Ruijie(config-if-VLAN 300)# ip rip subvlan 1024
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A

## 1.25 ip rip summary-address

Use this command to configure port-level convergence through an interface. Use the **no** form of this command to disable this function.

**ip rip summary-address** *ip-address ip-network-mask*

**no ip rip summary-address** *ip-address ip-network-mask*

**Parameter Description**

| Parameter              | Description                                                                  |
|------------------------|------------------------------------------------------------------------------|
| <i>ip-address</i>      | Indicates the IP addresses to be converged.                                  |
| <i>ip-network-mask</i> | Indicates the subnet mask of the specified IP address for route convergence. |

**Defaults** The RIP routes are automatically converged to the classful network edge by default.

**Command**

**Mode** Interface configuration mode

**Usage Guide** The **ip rip summary-address** command converges an IP address or a subnet on a specified port.

RIP routes are automatically converged to the classful network edge. The classful subnet can be configured through only port convergence.

**i** The summary range configured by this command cannot be a super class network, that is, the configured mask length is greater than or equal to the natural mask length of the network.

**Configuration Examples** The following example disables the automatic route convergence function of RIPv2. Interface convergence is configured so that fastEthernet 0/1 advertises the converged route 172.16.0.0/16.

```
Ruijie (config)# interface fastEthernet 0/1
Ruijie (config-if-FastEthernet 0/1)# ip rip summary-address 172.16.0.0
255.255.0.0
Ruijie (config-if-FastEthernet 0/1)# ip address 172.16.1.1 255.255.255.0
Ruijie (config)# router rip
Ruijie (config-router)# network 172.16.0.0
Ruijie (config-router)# version 2
Ruijie (config-router)# no auto-summary
```

**Related Commands**

| Command             | Description                                      |
|---------------------|--------------------------------------------------|
| <b>auto-summary</b> | Enables the automatic convergence of RIP routes. |

**Platform** N/A

**Description**

## 1.26 ip rip triggered

Use this command to enable triggered RIP based on links. Use the **no** form of this command to restore the default setting.

- ip rip triggered**
- ip rip triggered retransmit-timer *timer***
- ip rip triggered retransmit-count *count***
- no ip rip triggered**
- no ip rip triggered retransmit-timer**
- no ip rip triggered retransmit-count**

**Parameter Description**

| Parameter                            | Description                                                                                                                                                               |
|--------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>retransmit-timer <i>timer</i></b> | Configures the interval at which the Update Request and Update Response packets are retransmitted. The range is from 1 to 3,600. The unit is second. The default is five. |
| <b>retransmit-count <i>count</i></b> | Configures the maximum times that the Update Request and Update Response packets are retransmitted. The range is from 1 to 3600. The default is 36.                       |

**Defaults** This function is disabled by default.

**Command**

**Mode** Interface configuration mode

**Usage Guide** Triggered RIP (TRIP) is the extension of RIP on the wide area network (WAN), mainly used for demand-based links.

With the TRIP function enabled, RIP no longer sends route updates periodically and sends route updates to the WAN interface only if:


Update Request packets are received.


RIP routing information is changed.


Interface state is changed.

The router is started.


As periodical RIP update is disabled, the confirmation and retransmission mechanism is required to ensure that update packets are sent and received successfully over the WAN. The **retransmit-timer** and **retransmit-count** commands can be used to specify the retransmission interval and maximum retransmission times for request and update packets.


 The function can be enabled in the case of the following conditions: a) The interface has only one neighbor. b) There are multiple neighbors but they interact information using unicast packets. You are advised to enable the function for link layer protocols such as PPP, frame relay, and X.25.

 You are advised to enable split horizon with poison reverse on the interface enabled with the function; otherwise invalid routing information might be left.

 Make sure that the function is enabled on all routers on the same link; otherwise the function will be invalid and the routing information cannot be exchanged correctly.

 The function cannot be enabled at the same time with BFD and RIP functions.

 To enable the function, make sure that the RIP configuration is the same on both ends of the link, such as RIP authentication and the RIP version supported by the interface.

 If this function is enabled on this interface, the source address of packets on this interface will be checked no matter whether the source IP address verification function (validate-update-source) is enabled.

**Configuration** The following example enables TRIP and sets the retransmission interval and maximum

**Examples** retransmission time to 10 seconds and 18 respectively for Update Request and Update Response packets.

```
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if-FastEthernet 0/1)# ip rip triggered
Ruijie(config-if-FastEthernet 0/1)# ip rip triggered retransmit-timer 10
Ruijie(config-if-FastEthernet 0/1)# ip rip triggered retransmit-count 18
```

| Related Commands | Command                      | Description                                                      |
|------------------|------------------------------|------------------------------------------------------------------|
|                  | <b>show ip rip database</b>  | Displays the summarized routing information of the RIP database. |
|                  | <b>show ip rip interface</b> | Displays the RIP interface information.                          |
|                  | <b>ip rip split-horizon</b>  | Configures RIP split horizon.                                    |

**Platform** N/A  
**Description**

## 1.27 ip rip v2-broadcast

Use this command to send RIPv2 packets in broadcast rather than multicast mode. Use the **no** form of this command to restore the default setting.

**ip rip v2-broadcast**  
**no ip rip v2-broadcast**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** The default behavior depends on the configuration of the version command.

### Command

**Mode** Interface configuration mode

**Usage Guide** This command overwrites the default of the **version** command. This command affects only sending RIP packets on the interface. This command allows RIPv1 and RIPv2 packages sent on the interface simultaneously. If this command is configured without parameters, package receiving depends on the version setting.

**Configuration** The following example sends RIPv2 packets in broadcast mode on the fastEthernet 0/1 interface.

**Examples**

```
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if-FastEthernet 0/1)# no ip rip split-horizon
```

| Related Commands | Command        | Description                                                                        |
|------------------|----------------|------------------------------------------------------------------------------------|
|                  | <b>version</b> | Defines the default version of the RIP packets received and sent on the interface. |

**Platform** N/A  
**Description**

## 1.28 neighbor

Use this command to define the IP address of a RIP neighbor. Use the **no** form of this command to restore the default setting.

**neighbor** *ip-address*

**no neighbor** *ip-address*

| Parameter Description | Parameter         | Description                                                                                                         |
|-----------------------|-------------------|---------------------------------------------------------------------------------------------------------------------|
|                       | <i>ip-address</i> | Indicates the IP address of the neighbor. The IP address must be that of the network connected to the local device. |

**Defaults** The neighbor is not defined by default.

### Command

**Mode** Routing process configuration mode

**Usage Guide** By default, RIPv1 uses the IP broadcast address (255.255.255.255) to advertise routing information, and RIPv2 uses the multicast address 224.0.0.9 to do so. If you do not want to allow all the devices on the broadcast network or non-broadcast multi-path access network to receive routing information, use the **passive-interface** command to configure related interfaces as passive interfaces and then define only some neighbors who can receive the routing information. This command has no impact on the receiving of RIP information. The passive interface is configured. No request packet is sent after the interface is enabled.

**Configuration** The following example creates a VRF with the name of vpn1 and creates its RIP instance.

### Examples

```
Ruijie(config)# router rip
Ruijie(config-router)# passive-interface default
Ruijie(config-router)# neighbor 192.168.1.2
```

| Related Commands | Command                  | Description                                      |
|------------------|--------------------------|--------------------------------------------------|
|                  | <b>passive-interface</b> | Configures the interface as a passive interface. |

**Platform** N/A

**Description**

## 1.29 network

Use this command to define the list of networks to be advertised in the RIP routing process. Use the **no** form of this command to delete the defined network.

**network** *network-number* [ *wildcard* ]

**no network** *network-number* [ *wildcard* ]

| Parameter Description | Parameter             | Description                                                                                                                                                                                          |
|-----------------------|-----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <i>network-number</i> | Indicates the network number of the directly-connected network. The network number is a natural one. All interfaces whose IP addresses belong to that natural network can send/receive RIP packages. |
|                       | <i>wildcard</i>       | Defines the IP address comparing bit: 0 refers to accurate matching, and 1 refers to no comparison.                                                                                                  |

**Defaults** N/A

**Command**

**Mode** Routing process configuration mode

**Usage Guide** The *network-number* and *wildcard* parameters can be configured simultaneously to enable the IP address of the interface within the IP address range to join RIP running. Without the *wildcard* parameter, RGOS make the interface IP address within the classful address range join the RIP running. Only when the IP address of an interface is in the network list defined by RIP, RIP route update packets can be received and sent on the interface.

**Configuration Examples** The following example defines two network numbers associated with RIP and allows the interface IP address between 192.168.12.0/24 and 172.16.0.0/24 to join RIP running.

```
Ruijie (config)# router rip
Ruijie (config-router)# network 192.168.12.0
Ruijie (config-router)# network 172.16.0.0 0.0.0.255
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

### 1.30 offset-list

Use this command to increase the metric value of received or sent RIP routes. Use the **no** form of this command to restore the default setting.

**offset-list** { *access-list-number* | *name* } { **in** | **out** } *offset* [ *interface-type interface-number* ]

**no offset-list** { *access-list-number* | *name* } { **in** | **out** } *offset* [ *interface-type interface-number* ]

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|-----------------------|-----------|-------------|



|                                  |                                                                                       |
|----------------------------------|---------------------------------------------------------------------------------------|
| <i>access-list-number   name</i> | Specifies the ACL.                                                                    |
| <b>in</b>                        | Modifies the metric of the received routes using the ACL.                             |
| <b>out</b>                       | Modifies the metric of the sent routes using the ACL.                                 |
| <i>offset</i>                    | Indicates the offset of changed metric values. The value is in the range from 0 to16. |
| <i>interface-type</i>            | Applies the ACL to a specified interface.                                             |
| <i>interface-number</i>          | Specifies the interface number.                                                       |

**Defaults** No offset is specified by default.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** If a RIP route matches against both the offset-list of the specified interface and the global offset-list, it will increase the metric value of the offset-list of the specified interface.

**Configuration** The following example increases the metric of the RIP routes by 7 in the range specified by ACL 7.

**Examples**

```
Ruijie (config-router)# offset-list 7 out 7
```

The following example increases the metric of the RIP routes by 7 in the range specified by ACL 7 and learned by fastethernet 0/1.

```
Ruijie (config-router)# offset-list 8 in 7 fastethernet 0/1
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 1.31 output-delay

Use this command to modify the delay to send RIP update packets. Use the **no** form of this command to restore the default setting.

**output-delay** *delay*

**no output-delay**

**Parameter Description**

| Parameter    | Description                                                                                       |
|--------------|---------------------------------------------------------------------------------------------------|
| <i>delay</i> | Sets the delay to send RIP update packets, in the range from 8 to 50 in the unit of milliseconds. |

**Defaults** No sending delay is configured by default.

**Command****Mode** Routing process configuration mode**Usage Guide** In normal cases, the size of a RIP update packet is 512 bytes including 25 routes. If the number of updated routes is greater than 25, update packets will be sent through multiple routes. Note that the update packets should be sent as fast as possible.

However, when a high-speed device sends a large number of packets to a low-speed device, the low-speed device may not process all the packets timely, resulting in packet loss. In this case, you can use this command to increase the delay to send packets on the high-speed device so that the low-speed device can process all the update packets.

**Configuration** The following example sets the delay to send RIP update packets to 30 milliseconds.**Examples**

```
Ruijie(config)# router rip
Ruijie(config-router)# output-delay 30
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A**Description**

## 1.32 passive-interface

Use this command to disable the function of sending update packets on an interface. Use the **no** form of this command to restore the default setting.

**passive-interface** { **default** | *interface-type interface-num* }**no passive-interface** { **default** | *interface-type interface-num* }**Parameter Description**

| Parameter                           | Description                                    |
|-------------------------------------|------------------------------------------------|
| <b>default</b>                      | Sets all interfaces to the passive interfaces. |
| <i>interface-type interface-num</i> | Indicates the interface type and number.       |

**Defaults** Interfaces are set to the non passive interfaces by default.**Command****Mode** Routing process configuration mode**Usage Guide** The **passive-interface default** command sets all interfaces to the passive interfaces. You can use **no passive-interface interface-type interface-num** command to set specified interfaces as non-passive interfaces.

After you set an interface to the passive interface, RIP route update packets will no longer be sent but

can be received through the interface. In this case, route update packets can be sent to a specified neighbor through the interfaces by using the **neighbor** command. You can use the **ip rip send enable** and **ip rip receive enable** commands to control whether route update packets can be sent or received through the interface.

**Configuration Examples** The following example sets all interfaces to the passive interfaces and then sets ethernet0/1 to the non-passive interface.

```
Ruijie(config-router)# passive-interface default
Ruijie(config-router)# no passive-interface gigabitEthernet 0/1
```

#### Related Commands

| Command                      | Description                                                 |
|------------------------------|-------------------------------------------------------------|
| <b>ip rip receive enable</b> | Enables or disables receiving RIP packets on the interface. |
| <b>ip rip send enable</b>    | Enables or disables sending RIP packets on the interface.   |

**Platform** N/A

**Description**

## 1.33 redistribute

Use this command to redistribute external routes in route configuration mode. Use the **no** form of this command to restore the default setting.

```
redistribute { bgp | connected | isis [ area-tag ] | ospf process-id | static } [ { level-1 | level-1-2 | level-2 } ] [ match { internal | external [ 1|2 ] | nssa-external [ 1|2 ] } ] [ metric metric-value ] [ route-map route-map-name ]
```

```
no redistribute { bgp | connected | isis [ area-tag ] | ospf process-id | static } [ { level-1 | level-1-2 | level-2 } ] [ match { internal | external [ 1|2 ] | nssa-external [ 1|2 ] } ] [ metric metric-value ] [ route-map route-map-name ]
```

#### Parameter Description

| Parameter                                          | Description                                                                                                              |
|----------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------|
| <b>bgp</b>                                         | Is redistributed from bgp.                                                                                               |
| <b>connected</b>                                   | Is redistributed from a connected route.                                                                                 |
| <b>isis</b> <i>area-tag</i>                        | Is redistributed from ISIS and specifies an ISIS instance through area-tag.                                              |
| <b>ospf</b> <i>process-id</i>                      | Is redistributed from OSPF and specifies an OSPF instance through process-id. The value is in the range from 1 to 65535. |
| <b>static</b>                                      | Is redistributed from static routes.                                                                                     |
| <b>level-1</b>   <b>level-1-2</b>   <b>level-2</b> | Is used when ISIS route redistribution is configured and specifies a route with a specific level for redistribution.     |
| <b>match</b>                                       | Is used when OSPF route redistribution is configured and filters a                                                       |

|                                        |                                                                                                                                                              |
|----------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                        | route with a specific level for redistribution.                                                                                                              |
| <b>metric</b> <i>metric-value</i>      | Sets the metric value of the redistributed route and specifies the metric value by using the metric-value parameter. The value is in the range from 1 to 16. |
| <b>route-map</b> <i>route-map-name</i> | Sets the redistribution filtering rule.                                                                                                                      |

**Defaults**

By default:

All the routes of the sub types of the instance are redistributed when you configure redistributing OSPF.

The routes of Level-2 sub-types of the instance are redistributed when you configure ISIS redistribution.

All the routes of the protocol are redistributed for other routing protocols.

The metric of the redistributed routes is 1 by default.

The route-map is not associated.

**Command****Mode**

Routing process configuration mode

**Usage Guide**

This command is executed to redistribute external routes to RIP.

It is unnecessary to convert the metric of one routing protocol into that of another routing protocol for route redistribution, since different routing protocols use different metric measurement methods. For RIP, the metric value is calculated based on hop counts; for OSPF, the metric value is calculated based on bandwidths. Therefore, their metrics are not comparable. However, a symbolic metric value must be set for route redistribution. Otherwise, route redistribution will fail.

When you configure ISIS route redistribution without the level parameter, only level-2 routes are redistributed by default. If the redistribution configuration is initialized with the level parameter, then all routes with level configured are redistributed. When the configuration is saved and level 1 and level 2 are configured at the same time, level 1 and level 2 are combined into the level-1-2 parameter to be saved.

When you configure redistribution of OSPF routes without the match parameter, the OSPF routes of all sub types are redistributed by default. Then the first configured match parameter is used as the original one. Only the routes matching the specific type can be redistributed. The no form of this command restores the setting to the default value.

The rule of configuring the no form of the redistribute command is as follows:

1. If the no form of this command specifies certain parameters, the parameters must be restored to the default configuration.
2. If the **no** form of this command does not specify any parameter, the command must be deleted.

Assume that the following configurations are available.


```
redistribute isis 112 level-2
```

You can use the no redistribute isis 112 level-2 command to modify the configuration.

According to the preceding rule, this command only restores the level-2 parameter to the default value. However, level-2 is also the default parameter value. Therefore, the configuration is still be saved as redistribute isis 112 level-2 after you use the no form of this command.

To delete this command, use the following command:

no redistribute isis 112

 The redistribute command cannot redistribute the default route of other protocol to the RIP process. To this end, use the **default-information originate** command.

**Configuration** The following example redistributes static routes to RIP.

**Examples** Ruijie(config-router)# redistribute static

| Related Commands | Command                              | Description                                               |
|------------------|--------------------------------------|-----------------------------------------------------------|
|                  | <b>default-metric</b> <i>metric</i>  | Sets the default metric of the route to be redistributed. |
|                  | <b>default-information originate</b> | Generates the default route in the RIP process.           |

**Platform** N/A

**Description**

### 1.34 router rip

Use this command to create the RIP routing process and enter the routing process configuration mode. Use the **no** form of this command to restore the default setting.

**router rip**

**no router rip**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** No RIP process is running by default.

**Command**

**Mode** Global configuration mode

**Usage Guide** One RIP routing process must be defined with one network number. If a dynamic routing protocol runs on asynchronous lines, configure the **async default routing** command on the asynchronous interface.

**Configuration Examples** The following example creates the RIP routing process and enters the routing process configuration mode.

```
Ruijie (config)# router rip
Ruijie(config-router)#
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|------------------|---------|-------------|

|                      |                                                |
|----------------------|------------------------------------------------|
| <b>network (RIP)</b> | Defines the network number of the RIP process. |
|----------------------|------------------------------------------------|

**Platform** N/A

**Description**

## 1.35 show ip rip

Use this command to display the RIP process information.

**show ip rip [ vrf vrf-name ]**

| Parameter Description | Parameter    | Description                                                       |
|-----------------------|--------------|-------------------------------------------------------------------|
|                       | vrf vrf-name | ( Optional ) Displays the RIP information with the specified VRF. |

**Defaults** N/A

**Command**

**Mode** Privileged EXEC mode/ Global configuration mode/ Routing process configuration mode

**Usage Guide** It is used to display the three timers, routing distribution status, routing re-distribution status, interface RIP version, RIP interface and network range, metric, and distance of the RIP process quickly. If the VRF is specified, the name of VRF and VRF ID are displayed.

**Configuration Examples** The following example displays the basic information of the RIP process such as the update time and management distance.

```
Ruijie#show ip rip
Routing Protocol is "rip"
  Sending updates every 10 seconds,
  Invalid after 20 seconds, flushed after 10 seconds
  Outgoing update filter list for all interface is: not set
  Incoming update filter list for all interface is: not set
  Default redistribution metric is 2
  Redistributing: connected
  Default version control: send version 2, receive version 2
    Interface          Send  Recv
    FastEthernet 0/1      2    2
    FastEthernet 0/2      2    2
  Routing for Networks:
    192.168.26.0 255.255.255.0
    192.168.64.0 255.255.255.0
  Distance: (default is 50)
  Graceful-restart enabled
  Restart grace period 60 secs
```

```
Current Restart remaining time 16 secs
```

The following example specifies the VRF and displays the corresponding basic information of RIP instance.

```
Ruijie(config-router)# sh ip rip vrf 1
VRF 1 VRF-id:1
Routing Protocol is "rip"
  Sending updates every 30 seconds, next due in 4 seconds
  Invalid after 180 seconds, flushed after 120 seconds
  Outgoing update filter list for all interface is: not set
  Incoming update filter list for all interface is: not set
  Default redistribution metric is 1
  Redistributing:
  Default version control: send version 1, receive any version
  Routing for Networks:
  Distance: (default is 120)
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A

### 1.36 show ip rip database

Use this command to display the route summary information in the RIP routing database.

**show ip rip database** [ *vrf vrf-name* ] [ *network-number network-mask* ] [ *count* ]

**Parameter Description**

| Parameter             | Description                                                                                |
|-----------------------|--------------------------------------------------------------------------------------------|
| <i>vrf vrf-name</i>   | ( Optional ) Displays the RIP routing information of specified VRF.                        |
| <i>network-number</i> | ( Optional ) Indicates the ID of the subnet on which route information is to be displayed. |
| <i>network-mask</i>   | Indicates the subnet mask. It must be specified if the network number is specified.        |
| <b>count</b>          | ( Optional ) Displays the abstract of the route statistics in the RIP database.            |

**Command**

**Mode** Privileged EXEC mode/ Global configuration mode/ Routing process configuration mode

**Usage Guide** Only when the related sub-routes are converged, the converged address entries appear in the RIP

routing database. When the last sub-route information in the converged address entries becomes invalid, the converged address information will be deleted from the database.

**Configuration** The following example displays all converged address entries in the RIP routing database.

**Examples**

```
Ruijie# show ip rip database
192.168.1.0/24    auto-summary
192.168.1.0/30    directly connected, Loopback 3
192.168.1.8/30    directly connected, FastEthernet 0/1
192.168.121.0/24  auto-summary
192.168.121.0/24  redistributed
[1] via 192.168.2.22, FastEthernet 0/2
192.168.122.0/24  auto-summary
192.168.122.0/24
[1] via 192.168.4.22, Serial 0/1 00:28 permanent
```

The following example displays the converged address entries related with 192.168.121.0/24 in the RIP routing database.

```
Ruijie# show ip rip database 192.168.121.0 255.255.255.0
192.168.121.0/24  redistributed
[1] via 192.168.2.22, FastEthernet 0/1
```

The following example displays the statistical information summary of various routes in the RIP routing database.

```
Ruijie# show ip rip database count
           All      Valid  Invalid
database      5        5        0
auto-summary  5         5         0

connected     1         1         0
rip           4         4         0
```

**Related Commands**

| Command            | Description                                                                 |
|--------------------|-----------------------------------------------------------------------------|
| <b>show ip rip</b> | Displays the information of the currently-running routing protocol process. |

**Platform** N/A

**Description**

## 1.37 show ip rip external

Use this command to display the information of the external routes redistributed by the RIP protocol.

**show ip rip external [ bgp | connected | isis [ process-id ] | ospf process-id | static ] [ vrf vrf-name ]**



| Parameter Description | Parameter                     | Description                                                                                                           |
|-----------------------|-------------------------------|-----------------------------------------------------------------------------------------------------------------------|
|                       | <b>bgp</b>                    | Displays redistributed BGP routes.                                                                                    |
|                       | <b>connected</b>              | Displays redistributed directly-connected routes.                                                                     |
|                       | <b>isis <i>process-id</i></b> | Displays redistributed ISIS routes. The process-id parameter indicates ISIS process ID.                               |
|                       | <b>ospf <i>process-id</i></b> | Displays redistributed OSPF routes. The process-id parameter indicates OSPF process ID. The range is from 1 to 65535. |
|                       | <b>static</b>                 | Displays redistributed static routes.                                                                                 |
|                       | <b>vrf <i>vrf-name</i></b>    | Displays the RIP external route of the specified VRF ( optional ).                                                    |

**Defaults** N/A

**Command**

**Mode** Privileged EXEC mode/ Global configuration mode/ Routing process configuration mode

**Usage Guide** N/A

**Configuration** The following example displays direct routes redistributed by the RIP process.

**Examples**

```
Ruijie# show ip rip external
Protocol connected route:
[connected] 192.100.3.0/24 metric=0
    nhop=0.0.0.0, if=2
[connected] 192.101.1.0/24 metric=0
    nhop=0.0.0.0, if=3
Protocol static route:
[static] 10.1.1.1/32 metric=0
    nhop=0.0.0.0, if=4096
[static] 10.1.2.1/32 metric=0
    nhop=0.0.0.0, if=4096
Protocol ospf 1 route:
[ospf] 1.1.1.1/32 metric=2
    nhop=192.100.3.2, if=2
[ospf] 90.1.1.1/32 metric=2
    nhop=192.100.3.2, if=2
```

**Related Commands**

| Command            | Description                                                                 |
|--------------------|-----------------------------------------------------------------------------|
| <b>show ip rip</b> | Displays the information of the currently running routing protocol process. |
| <b>ip vrf</b>      | Creates a VRF.                                                              |

**Platform Description** N/A

## 1.38 show ip rip interface

Use this command to display the RIP interface information.

***show ip rip interface [ vrf vrf-name ] [ interface-type interface-number ]***

| Parameter Description | Parameter                                  | Description                                                              |
|-----------------------|--------------------------------------------|--------------------------------------------------------------------------|
|                       | <b>vrf vrf-name</b>                        | Displays the RIP interface of specified VRF ( optional ).                |
|                       | <b>[ interface-type interface-number ]</b> | Displays the specified interface type and interface number ( optional ). |

**Defaults** N/A

### Command

**Mode** Privileged EXEC mode/ Global configuration mode/ Routing process configuration mode

**Usage Guide** This command is used to display the information about RIP interfaces. If no RIP interface exists, no information is displayed.

**Configuration** The following example displays the RIP interface information.

### Examples

```
Ruijie# show ip rip interface
FastEthernet 0/1 is up, line protocol is up
Routing Protocol: RIP
Receive RIPv2 packets only
Send RIPv2 packets only
Recv RIP packet total: 0
Send RIP packet total: 3
Passive interface: Disabled
Split Horizon with Poisoned Reverse: Enabled
Triggered RIP Enabled:
Retransmit-timer: 5, Retransmit-count: 36
V2 Broadcast: Disabled
Multicast registe: Registered
Interface Summary Rip:
Not Configured
Authentication mode: Text
Authentication key-chain: ripk1
Authentication text-password: ruijie
Default-information: only, metric 5
IP interface address:
192.168.64.100/24, next update due in 14 seconds
2.2.1.1/24, next update due in 24 seconds
  neighbor 2.2.1.6, next update due in 3 seconds
  neighbor 2.2.1.77, next update due in 13 seconds
```

```
2.2.2.57/24, next update due in 16 seconds
```

If the BFD has been configured for RIP, the BFD information is also displayed.

```
Ruijie#show ip rip interface
Serial 0/1 is up, line protocol is up
  Routing Protocol: RIP
    Receive RIPv1 and RIPv2 packets
    Send RIPv1 packets only
    Receive RIP packet: Enabled
    Send RIP packet: Enabled
    Send RIP supernet routes: Enabled
    Recv RIP packet total: 0
    Send RIP packet total: 3
    Passive interface: Disabled
  Split Horizon: Enabled
  Triggered RIP Disabled
    BFD: Enabled
    V2 Broadcast: Disabled
    Multicast registe: Registered
  Interface Summary Rip:
    Not Configured
  IP interface address:
    2.2.2.111/24, next update due in 14 seconds
```

**Related Commands**

| Command            | Description                                                                 |
|--------------------|-----------------------------------------------------------------------------|
| <b>show ip rip</b> | Displays the information of the currently running routing protocol process. |

**Platform** N/A

**Description**

### 1.39 show ip rip peer

Use this command to show the RIP peer information. RIP records a summary for the RIP routing information source learnt ( source addresses of RIP route update packets ) for the convenience of user monitoring. This routing information source is called RIP neighbor information.

**show ip rip peer** [ *ip-address* ] [ **vrf** *vrf-name* ]

**Parameter Description**

| Parameter                  | Description                                                       |
|----------------------------|-------------------------------------------------------------------|
| <i>ip-address</i>          | ( Optional ) Displays the IP address of a specified RIP neighbor. |
| <b>vrf</b> <i>vrf-name</i> | ( Optional ) Displays the RIP interface of a specified VRF.       |

**Defaults** N/A

**Command****Mode** Privileged EXEC mode/ Global configuration mode/ Routing process configuration mode**Usage Guide** This command is used to display the RIP neighbor information. If no RIP neighbor exists, no information will be displayed.**Configuration** The following example displays the RIP neighbor information.**Examples**

```
Ruijie# show ip rip peer
Peer 192.168.3.2:
  Local address: 192.168.3.1
  Input interface: GigabitEthernet 0/2
  Peer version: RIPv1
  Received bad packets: 3
  Received bad routes: 0
  BFD session state up
```

**Related Commands**

| Command            | Description                                                               |
|--------------------|---------------------------------------------------------------------------|
| <b>show ip rip</b> | Displays the information of the routing protocol process that is running. |

**Platform** N/A**Description**

## 1.40 timers basic

Use this command to adjust the RIP clock. Use the **no** form of this command to restore the default setting.

**timers basic** *update invalid flush***no timers basic****Parameter Description**

| Parameter      | Description                                                                                                                                                                                                                                                                                                                                                     |
|----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>update</i>  | Indicates the route update time in seconds. The update keyword defines the period at which the device sends route update packets. Each time an update packet is received, the "Invalid" and "Flush" clocks are reset. By default, a route update packet is sent every 30 seconds.                                                                               |
| <i>invalid</i> | Indicates the route invalid time in seconds, starting from the last valid update packet. The "invalid" defines the period when the route in the routing table becomes invalid due to no update. The invalid period of route shall be at least three times the route update period. If no update packet is received within the route invalid period, the related |

|              |                                                                                                                                                                                                                                                       |
|--------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|              | route becomes invalid and enters into the "invalid" state. If an update packet is received within the period, the clock resets. By default, the Invalid time is 180 seconds.                                                                          |
| <i>flush</i> | Indicates the route flushing time in seconds, starting when a RIP route enters into the invalid status. When the flush time is due, the routes in the invalid status will be cleared out of the routing table. The default Flush time is 120 seconds. |


**Defaults** By default, the update time is 30 seconds, the invalid time is 180 seconds, and the flushing time is 120 seconds.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** Adjusting the above clocks may speed up routing protocol convergence and fault recovery. Devices connected to the same network must have consistent RIP clock values. Adjustment of RIP clocks is not recommended unless otherwise specified.

To check the current RIP clock parameters, use the **show ip rip** command.

 If you set the clock to a small value on low-speed links, some risks will be caused because numerous update packets may use up the bandwidth. In general, the clocks can be configured with smaller values on Ethernet or the lines of above 2 Mbit/s to reduce the convergence time of routes.

**Configuration Examples** The following example enables the RIP update packets that are sent every 10 seconds. If no update packet is received within 30 seconds, related routes become invalid and enter the invalid status. When another 90s elapses, they will be cleared.

```
Ruijie (config)# router rip
Ruijie (config-router)# timers basic 10 30 90
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A

## 1.41 validate-update-source

Use this command to validate the source address of the received RIP route update packet. Use the **no** form of the command to disable this function.

**validate-update-source**

**no validate-update-source**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** This function is enabled by default.

### Command

**Mode** Routing process configuration mode

**Usage Guide** You can validate the source address of the RIP route update packet. The validation aims to ensure that the RIP routing process receives only the route update packets from the same IP subnet neighbor.

Disabling split horizon on the interface causes the RIP routing process to enable update message source address validation, no matter whether it has been configured with the **validate-update-source** command in routing process configuration mode.

In addition, for the ip unnumbered interface, the RIP routing process does not implement update message source address validation, no matter whether it has been configured with the command **validate-update-source**.

**Configuration** The following example disables verification of the source IP address of the update packet.

### Examples

```
Ruijie (config)# router rip
Ruijie (config-router)# no validate-update-source
```

### Related Commands

| Command                 | Description                               |
|-------------------------|-------------------------------------------|
| <b>ip split-horizon</b> | Enables split horizon.                    |
| <b>ip unnumbered</b>    | Defines the IP unnumbered interface.      |
| <b>neighbor (RIP)</b>   | Defines the IP address of a RIP neighbor. |

**Platform** N/A

### Description

## 1.42 version

Use this command to define the RIP version of a device. Use the **no** form of this command to restore the default setting.

**version { 1 | 2 }**

**no version**

| Parameter Description | Parameter | Description                |
|-----------------------|-----------|----------------------------|
|                       | 1         | Defines the RIP version 1. |
|                       | 2         | Defines the RIP version 2. |

**Defaults** The route update packets of RIPv1 and are received by default, but only the RIPv1 route update packets are sent.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** This command defines the RIP version running on the device. It is possible to redefine the messages of which RIP version are processed on every interface by using the **ip rip receive version** and **ip rip send version** commands.

**Configuration** The following example configures the RIP version as version 2.

**Examples**

```
Ruijie (config)# router rip
Ruijie (config-router)# version 2
```

**Related  
Commands**

| Command                       | Description                                                   |
|-------------------------------|---------------------------------------------------------------|
| <b>ip rip receive version</b> | Defines the version of RIP packets received on the interface. |
| <b>ip rip send version</b>    | Defines the version of RIP packets sent on the interface.     |
| <b>show ip rip</b>            | Displays RIP information.                                     |

**Platform  
Description** N/A

## 2 OSPFv2 Commands

### 2.1 area

Use this command to configure the specified OSPF area. Use the **no** form of this command to restore the default setting.

**area** *area-id*

**no area** *area-id*

| Parameter Description | Parameter      | Description                                                               |
|-----------------------|----------------|---------------------------------------------------------------------------|
|                       | <i>area-id</i> | ID of the OSPF area. The value can be a decimal integer or an IP address. |

**Defaults** No OSPF area is configured by default.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** Use the no form of this command to remove the specified OSPF area and its configuration, including the area-based **area authentication**, **area default-cost**, **area filter-list**, and **area nssa** commands.

- Do not remove the OSPF area configuration under the following conditions:
- Virtual links exist in the backbone area. The virtual links must be removed at first.
- The corresponding network area command exists in any area. All network segment commands added to an area must be removed at first.

**Configuration** The following example removes the configuration of OSPF area 2.

**Examples**

```
Ruijie(config)# router ospf 2
Ruijie(config-router)# no area 2
```

| Related Commands | Command             | Description                                                                    |
|------------------|---------------------|--------------------------------------------------------------------------------|
|                  | <b>network area</b> | Defines the interface where OSPF runs and the belonging area of the interface. |

**Platform Description** N/A



## 2.2 area authentication

Use this command to enable OSPF area authentication. Use the **no** form of this command to restore the default setting.

**area** *area-id* **authentication** [ **message-digest** ]

**no area** *area-id* **authentication**

| Parameter Description | Parameter             | Description                                                                                      |
|-----------------------|-----------------------|--------------------------------------------------------------------------------------------------|
|                       | <i>area-id</i>        | Specifies ID of the area enabled with OSPF. The value can be a decimal integer or an IP address. |
|                       | <b>message-digest</b> | (Optional) Enables MD5 (message digest 5) authentication mode.                                   |

**Defaults** No authentication is enabled by default.

### Command

**Mode** Routing process configuration mode

### Usage Guide

The RGOS software supports three authentication types:

1) 0, no authentication. The authentication type in the OSPF packet is 0 when this command is not executed to enable OSPF authentication. 2) 1, plain text authentication mode. When this command is configured, the message-digest option is not used. 3) 2, MD5 authentication mode. When this command is configured, the message-digest option is used.

All devices in the same OSPF area must use the same authentication type. If authentication is enabled, the authentication password must be configured on an interface connecting neighbors. You can use the **ip ospf authentication-key** command to configure the plain text authentication password, and the **ip ospf message-digest-key** command to configure the MD5 authentication password in interface configuration mode.

**Configuration Examples** The following example uses MD5 authentication and the authentication password backbone in area 0 (backbone area) of the OSPF routing process.

```
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if-FastEthernet 0/1)# ip address 192.168.12.1 255.255.255.0
Ruijie(config-if-FastEthernet 0/1)# ip ospf message-digest-key 1 md5 backbone
Ruijie(config)# router ospf 1
Ruijie(config-router)# network 192.168.12.0 0.0.0.255 area 0
Ruijie(config-router)# area 0 authentication message-digest
```

### Related Commands

| Command                           | Description                                          |
|-----------------------------------|------------------------------------------------------|
| <b>ip ospf authentication-key</b> | Defines the OSPF plain text authentication password. |
| <b>ip ospf message-digest-key</b> | Defines the OSPF MD5 authentication password.        |

|                          |                         |
|--------------------------|-------------------------|
| <b>area virtual-link</b> | Defines a virtual link. |
|--------------------------|-------------------------|

**Platform** N/A

**Description**

## 2.3 area default-cost

Use this command to define the cost ( OSPF metric ) of the default aggregate route advertised to the stub area or not-so-stubby area ( NSSA ) in routing process configuration mode. Use the **no** form of this command to restore the default setting.

**area** *area-id* **default-cost** *cost*

**no area** *area-id* **default-cost**

| Parameter Description | Parameter      | Description                                                                                                  |
|-----------------------|----------------|--------------------------------------------------------------------------------------------------------------|
|                       | <i>area-id</i> | ID of the stub area or NSSA                                                                                  |
|                       | <i>cost</i>    | Cost of the default aggregate route advertised to the stub area or NSSA.<br>The range is from 0 to 16777215. |

**Defaults** The default is 1.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** This command takes effect only on the Area Border Router ( ABR ) of the stub area or the ABR/Autonomous System Border Router ( ASBR ) of the NSSA. The ABR can advertise a Link State Advertisement ( LSA ) indicating the default route in the stub area. The ABR/ASBR can advertise an LSA indicating the default route in the NSSA. You can use the **area default-cost** command to modify the LSA cost.

**Configuration** The following example sets the cost of the default aggregate route to 50.

**Examples**

```
Ruijie(config)# router ospf 1
Ruijie(config-router)# network 172.16.0.0 0.0.255.255 area 0
Ruijie(config-router)#network 192.168.12.0 0.0.0.255 area 1
Ruijie(config-router)# area 1 stub
Ruijie(config-router)# area 1 default-cost 50
```

**Related Commands**

| Command          | Description                       |
|------------------|-----------------------------------|
| <b>area stub</b> | Sets an OSPF area as a stub area. |
| <b>area nssa</b> | Sets an OSPF area as an NSSA.     |

**Platform** N/A

## Description

## 2.4 area filter-list

Use this command to filter the inter-area routes on the ABR. Use the **no** form of this command to restore the default setting.

**area** *area-id* **filter-list** { **access** *acl-name* | **prefix** *prefix-name* } { **in** | **out** }

**no area** *area-id* **filter-list** { **access** *acl-name* | **prefix** *prefix-name* } { **in** | **out** }

### Parameter Description

| Parameter              | Description                                                    |
|------------------------|----------------------------------------------------------------|
| <i>area-id</i>         | Area ID                                                        |
| <i>acl-name</i>        | Name of an Access Control List ( ACL )                         |
| <i>prefix-name</i>     | Prefix-list name                                               |
| <b>in</b>   <b>out</b> | Applies the ACL rule to the routes incoming/outgoing the area. |

**Defaults** No filtering is configured by default.

### Command

**Mode** Routing process configuration mode

**Usage Guide** This command can be configured only on an ABR.

You can use this command when it is required to filter the inter-area routes on the ABR.

**Configuration** The following example sets area 1 to learn only the inter-area routes of 172.22.0.0/8.

### Examples

```
Ruijie# configure terminal
Ruijie(config)# access-list 1 permit 172.22.0.0 0.255.255.255
Ruijie(config)# router ospf 100
Ruijie(config-router)# area 1 filter-list access 1 in
```

### Related Commands

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

### Description

## 2.5 area nssa

Use this command to set an OSPF area as an NSSA in routing process configuration mode. Use the **no** form of this command to delete the NSSA or the NSSA configuration.

**area** *area-id* **nssa** [ **no-redistribution** ] [ **default-information-originate** [ **metric** *value* ]

[ **metric-type** *type* ] ] [ **no-summary** ] [ **translator** [ **stability-interval** *seconds* | **always** ] ]

```
no area area-id nssa [ no-redistribution ] [ default-information-originate [ metric value ]
[ metric-type type ] ] [ no-summary ] [ translator [ stability-interval | always ] ]
```

**Parameter  
Description**

| Parameter                                | Description                                                                                                                                                                             |
|------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>area-id</i>                           | NSSAID                                                                                                                                                                                  |
| <b>no-redistribution</b>                 | Imports the routing information to a common area other than the NSSA for the NSSA ABR.                                                                                                  |
| <b>default-information originate</b>     | Generates and imports the default Type 7 LSA to the NSSA. This option takes effect only on the NSSA ABR or ASBR.                                                                        |
| <b>metric <i>value</i></b>               | Sets the metric of the generated default LSA. The range is from 0 to 16777214. The default value is 1.                                                                                  |
| <b>metric-type <i>type</i></b>           | Sets the type of the generated LSA to N-1 or N-2. The default value is N-2.                                                                                                             |
| <b>no-summary</b>                        | Prevents the NSSA ABR from sending summary LSAs ( Type-3 LSA ).                                                                                                                         |
| <b>translator</b>                        | Configures the translator for the NSSA ABR.                                                                                                                                             |
| <b>stability-interval <i>seconds</i></b> | Configures the stability interval in seconds for the NSSA ABR that functions as a translator to change to a non-translator. The range is from 0 to 2147483647. The default value is 40. |
| <b>always</b>                            | Configures that an NSSA ABR always functions as a translator. The NSSA ABR is the backup translator by default.                                                                         |

**Defaults** No NSSA is defined by default.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** The default-information-originate parameter is used to generate the default Type-7 LSA. However, on the NSSA ABR, the default Type-7 LSA will always be generated; On the ASBR (which is not an ABR at the same time), the default Type-7 LSA is generated only when the default route exists in the routing table.

The no-redistribution parameter prevents the OSPF from advertising the external routes imported with the redistribute command to the NSSA on the ASBR. This option is generally used when the NSSA device is both an ASBR and an ABR.

To reduce the number of LSAs sent to the NSSA, you can configure the no-summary parameter on the ABR to prevent it from advertising summary LSAs (Type-3 LSAs) to the NSSA. In addition, you can use the area default-cost command on the NSSA ABR to configure the cost of the default route advertised to the NSSA. By default, this cost is 1.

If an NSSA has multiple ABRs, the ABR with the greatest ID is selected as the Type-7 or Type-5 translator. To configure that an NSSA ABR always functions as a translator, you can use the translator always parameter. If the translator role of an ABR is taken away by another ABR, the ABR still possesses the conversion capability within stability-interval. If the ABR fails to take back its translator role when stability-interval expires, the LSA that changes from Type-7 to Type-5 will be

removed from the autonomous domain.

To avoid route loops, Type-5 LSAs generated from Type-7 convergence will be eliminated immediately after the current device stopped serving as a translator, with no need to wait until the stability-interval expires.

In a same NSSA, you are recommended to configure the **translator always** parameter on only one ABR.

**Configuration** The following example sets area 1 as an NSSA on all routers of the area.

**Examples**

```
Ruijie(config)#router ospf1
Ruijie(config-router)#network 172.16.0.0 0.0.255.255 area0
Ruijie (config-router)#network 192.168.12.0 0.0.0.255 area 1
Ruijie(config-router)# area1nssa
```

**Related  
Commands**

| Command                  | Description                                                                           |
|--------------------------|---------------------------------------------------------------------------------------|
| <b>area default-cost</b> | Defines the cost (OSPF metric) of the default aggregate route advertised to the NSSA. |

**Platform** N/A

**Description**

## 2.6 area range

Use this command to configure inter-area route aggregation for OSPF. Use the **no** form of this command to delete route aggregation. Use the **no** form with the cost parameter to restore the default metric of the aggregate route, but not delete route aggregation.

**area area-id range ip-address net-mask [ advertise | not-advertise ] [ cost cost ]**

**no area area-id range ip-address net-mask [ cost ]**

**Parameter  
Description**

| Parameter                        | Description                                                                                                     |
|----------------------------------|-----------------------------------------------------------------------------------------------------------------|
| <i>area-id</i>                   | ID of the area where the aggregate route is injected into. The value can be a decimal integer or an IP address. |
| <i>ip address net-mask</i>       | Network segment whose routes are to be aggregated                                                               |
| <b>advertise   not-advertise</b> | Whether to advertise the aggregate route                                                                        |
| <b>cost cost</b>                 | Sets the priority of the interface. The range is from 0 to 16777215.                                            |

**Defaults**

No inter-area route aggregation is configured by default.

The configured aggregation range is advertised by default.

The default metric of the aggregate route depends on whether the device is compatible with RFC1583. If yes, the default metric is the smallest cost of the aggregate route. If no, the default metric is the largest cost of the aggregate route.

**Command****Mode** Routing process configuration mode

**Usage Guide** This command takes effect only on the ABR to aggregate multiple routes of an area into a route and advertise it to other areas. Route combination occurs only on the border of an area. The devices inside an area see the specific routing information, but the devices outside the area see only one aggregate route. The advertise and not-advertise options can set whether to advertise the aggregate route for filtering and masking. The aggregate route is advertised by default. You can use the cost option to set the metric of the aggregate route. You can define route aggregate in multiple areas to simplify the routes in the whole OSPF routing area. This improves the network forwarding performance, especially in large networks. The area range of route aggregation is determined according to the longest match when multiple aggregate routes with direct inclusion relationships are configured.

**Configuration** The following example aggregate the routes of area 1 into a route 172.16.16.0/20.**Examples**

```
Ruijie(config)#router ospf 1
Ruijie(config-router)#network 172.16.0.0 0.0.15.255area0
Ruijie((config-router)#network 172.16.17.0 0.0.15.255area1
Ruijie(config-router)#area1range 172.16.16.0 255.255.240.0
```

**Related Commands**

| Command                | Description                                               |
|------------------------|-----------------------------------------------------------|
| <b>discard-route</b>   | Enables a discarded route to be added to a routing table. |
| <b>summary-address</b> | Configures the OSPF external route aggregation.           |

**Platform** N/A**Description**

## 2.7 area stub

Use this command to set an OSPF area as a stub area or full stub area. Use the **no** form of this command to restore the default setting.

**area** *area-id* **stub** [ **no-summary** ]**no area** *area-id* **stub** [ **no-summary** ]**Parameter Description**

| Parameter         | Description                                                                                                                                                                 |
|-------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>area-id</i>    | Stub area ID                                                                                                                                                                |
| <b>no-summary</b> | (Optional) Prevents the ABR from advertising the network summary link to the stub area. Here the stub area is called the full stub area. Only the ABR needs this parameter. |

**Defaults** No stub area is defined by default.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** All devices in the OSPF stub area must be configured with the `area stub` command. The ABR only sends three types of link state advertisement (LSA) to the stub area: 1) type 1, device LSA; 2) type 2, network LSA; 3) type 3, network summary LSA. For the routing table, the devices in the stub area can learn only the routes inside the OSPF routing domain, including the internal default routes generated by the ABR.

To configure a full stub area, use the `area stub` command with the `no-summary` keyword on the ABR. The devices in the full stub area can learn only the routes in the local area and the internal default routes generated by the ABR.

Two commands can configure an OSPF area as a stub area: the `area stub` and `area default-cost` commands. All devices connected to the stub area must be configured with the `area stub` command, but the `area default-cost` command can be executed only on the ABR. The `area default-cost` command defines the initial cost (metric) of the internal default route.

**Configuration** The following example sets area 1 as the stub area on all devices in area 1.

**Examples**

```
Ruijie(config)# router ospf1
Ruijie(config-router)# network 172.16.0.0 0.0.255.255 area 0
Ruijie (config-router)# network 192.168.12.0 0.0.0.255 area 1
Ruijie(config-router)# area 1 stub
```

**Related  
Commands**

| Command                  | Description                                                                                      |
|--------------------------|--------------------------------------------------------------------------------------------------|
| <b>area default-cost</b> | Defines the cost (OSPF metric value) of the default aggregate route advertised to the stub area. |

**Platform** N/A

**Description**

## 2.8 area virtual-link

Use this command to define the OSPF virtual link in routing process configuration mode. Use the **no** form of this command to restore the default setting.

```
area area-id virtual-link router-id [ authentication [ message-digest | null ] ] [ dead-interval
{ seconds | minimal hello-multiplier multiplier } ] [ hello-interval seconds ] [ retransmit-interval
seconds ] [ transmit-delay seconds ] [ [ authentication-key [ 0|7 ] key ] | [ message-digest-key
key-id md5 [ 0|7 ] key ] ]
no area area-id virtual-link router-id [ authentication ] [ dead-interval ] [ hello-interval ]
[ retransmit-interval ] [ transmit-delay ] [ [ authentication-key ] | [ message-digest-key key-id ] ]
```

| Parameter<br>Description | Parameter                                                       | Description                                                                                                                                                                                                                                                                                                                                            |
|--------------------------|-----------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                          | <i>area-id</i>                                                  | ID of the OSPF transition area. The value can be a decimal integer or an IP address.                                                                                                                                                                                                                                                                   |
|                          | <i>router-id</i>                                                | ID of the router neighboring to the virtual link. It can be viewed with the show ip ospf command.                                                                                                                                                                                                                                                      |
|                          | <b>dead-interval</b> <i>seconds</i>                             | (Optional) Defines the time to declare neighbor loss in seconds. The range is 0 to 2147483647. This value must be consistent with that of the neighbor.                                                                                                                                                                                                |
|                          | <b>minimal</b>                                                  | Enables the Fast Hello function and sets the death clock to 1 second.                                                                                                                                                                                                                                                                                  |
|                          | <b>hello-multiplier</b>                                         | Multiplies dead-interval with hello-interval in the Fast-Hello function.                                                                                                                                                                                                                                                                               |
|                          | <i>multiplier</i>                                               | Specifies the number of Hello packets that are sent every second in the Fast Hello function. The range is from 3 to 20.                                                                                                                                                                                                                                |
|                          | <b>hello-interval</b> <i>seconds</i>                            | (Optional) Defines the interval at which the HELLO packet is sent by the OSPF to the virtual link in seconds. The range is from 1 to 65535. This value must be consistent with that of the neighbor.                                                                                                                                                   |
|                          | <b>retransmit-interval</b> <i>seconds</i>                       | (Optional) OSPF LSA retransmission interval in seconds. The range is from 0 to 65535. The parameter setting must consider the round-trip time of packets on the link.                                                                                                                                                                                  |
|                          | <b>transmit-delay</b> <i>seconds</i>                            | (Optional) OSPF LSA transmission delay in seconds. The range is from 0 to 65535. This value adds the LSA keep alive period. When the LSA keep alive period reaches a threshold, the LSA will be refreshed.                                                                                                                                             |
|                          | <b>authentication-key</b> [0 7] <i>key</i>                      | (Optional) Defines the OSPF plain text authentication key. The plain text authentication key between neighbors must be the same. The service password-encryption command enables the key to be displayed in encrypted manner.<br>0 indicates that the key is displayed in plain text.<br>7 indicates that the key is displayed in cipher text.         |
|                          | <b>message-digest-key</b><br><i>key-id</i> md5 [0 7] <i>key</i> | (Optional) Defines the OSPF MD5 authentication key and key ID. The MD5 authentication key ID and key between neighbors must be the same. The service password-encryption command enables the key to be displayed in encrypted manner.<br>0 indicates that the key is displayed in plain text.<br>7 indicates that the key is displayed in cipher text. |
|                          | <b>authentication</b>                                           | Sets the authentication type to plain text.                                                                                                                                                                                                                                                                                                            |
|                          | <b>message-digest</b>                                           | Sets the authentication type to MD5.                                                                                                                                                                                                                                                                                                                   |
|                          | <b>null</b>                                                     | Sets the authentication type to no authentication.                                                                                                                                                                                                                                                                                                     |

**Defaults**

The following are the default values:

dead-interval: 40seconds

hello-interval: 10seconds

retransmit-interval: 5seconds

transmit-delay: 1second



authentication: null

The Fast Hello function is disabled by default.

The other parameters do not have default values.

### Command

**Mode** Routing process configuration mode

### Usage Guide

A virtual link can connect an area to the backbone area, or another non-backbone area. In the OSPF routing domain, all areas must connect to the backbone area. If an area disconnects from the backbone area, a virtual link to the backbone area is required. Otherwise, the network communication will become abnormal. The virtual link is created between two ABRs. The area that belongs to both ABRs is called the transition area, which can never be a stub area or NSSA.

The router-id parameter indicates the ID of OSPF neighbor router and can be displayed with the show ip ospf neighbor command. You can configure the loopback address as the router ID.

The area virtual-link command defines only the authentication key for a virtual link. You can use the area authentication command to enable the OSPF packet authentication in areas connected over the virtual link in routing process configuration mode.

OSPF supports the Fast Hello function.

If the Fast Hello function is enabled, the OSPF can discover neighbors and detects invalid neighbors quickly. You can enable the OSPF Fast Hello function by specifying the keywords minimal and hello-multiplier, and the multiplier parameter. You can set the death clock to 1 second in minimal and hello-multiplier to a value equal to or greater than 2. In this case, the Hello packet sending interval is less than 1 second.

The hello-interval field of a Hello packet received by a virtual link is omitted if the Fast Hello function is enabled on the virtual link and the hello-interval field is set to 0 for Hello packets advertised from the virtual link.

No matter the Fast Hello function is enabled or not, the values of dead-interval must be consistent on both ends of a virtual link. The values of hello-multiplier on both ends can be different if at least one Hello packet can be received within dead-interval. You can use the show ip ospf virtual-links command to monitor dead-interval and hello-interval configured for a virtual link.

For the Fast Hello function, you can only configure either the **dead-interval minimal hello-multiplier** parameter or the **hello-interval** parameter.

**Configuration** The following example sets area 1 as the transition area to establish virtual link with neighbor 2.2.2.2.

### Examples

```
Ruijie(config)# router ospf 1
Ruijie(config-router)# network 172.16.0.0 0.0.15.255 area0
Ruijie(config-router)# network 172.16.17.0 0.0.15.255 area1
Ruijie(config-router)#area1 virtual-link2.2.2.2
```

The following example sets area 1 as the transition area to establish a virtual link with neighbor 1.1.1.1. This virtual link connects area 10 and the backbone area, and works with the OSPF packet authentication inMD5 mode.

```
Ruijie(config)# routerospf1
Ruijie(config-router)# network172.16.17.0 0.0.15.255area1
```

```
Ruijie(config-router)# network 172.16.252.0 0.0.0.255 area 10
Ruijie(config-router)# area 0 authentication message-digest
Ruijie(config-router)# area 1 virtual-link 1.1.1.1 message-digest-key 1 md5 hello
```

The following example sets area 1 as the transition area to establish a virtual link with neighbor 1.1.1.1, enables the Fast Hello function on this virtual link, and sets the multiplier to 3.

```
Ruijie(config)# router ospf 1
Ruijie(config-router)# network 172.16.17.0 0.0.15.255 area 1
Ruijie(config-router)# network 172.16.252.0 0.0.0.255 area 10
Ruijie(config-router)# area 1 virtual-link 1.1.1.1 dead-interval minimal
hello-multiplier 3
```

#### Related Commands

| Command                           | Description                                                                     |
|-----------------------------------|---------------------------------------------------------------------------------|
| <b>area authentication</b>        | Enables the OSPF area packet authentication and define the authentication mode. |
| <b>show ip ospf</b>               | Displays the OSPF process information, including the router ID.                 |
| <b>show ip ospf virtual-links</b> | Monitors information about a virtual link.                                      |

**Platform** N/A

**Description**

## 2.9 auto-cost

Use this command to enable the auto-cost function and set the reference bandwidth according to the reference bandwidth. Use the **no** form of this command to restore the default setting.

**auto-cost** [ **reference-bandwidth** *ref-bw* ]

**no auto-cost** [ **reference-bandwidth** ]

#### Parameter Description

| Parameter     | Description                                               |
|---------------|-----------------------------------------------------------|
| <i>ref-bw</i> | Reference bandwidth, in the range from 1 to 4294967 Mbps. |

**Defaults** The default is 100Mbps.

#### Command

**Mode** Routing process configuration mode

#### Usage Guide

By default, the cost of an OSPF interface is equal to the reference value of the auto cost divided by the interface bandwidth.

Run the **auto-cost** command to obtain the reference value of the auto cost. The default value is 100 Mbps.

Run the **bandwidth** command to set the interface bandwidth.

The costs of OSPF interfaces on several typical lines are as follows:

64Kbps serial line: The cost is 1562.

E1 line: The cost is 48.

10M Ethernet: The cost is 10.

100M Ethernet: The cost is 1.

If you run the **ip ospf cost** command to configure the cost of an interface, the configured cost will automatically overwrite the cost that is computed based on the auto cost.

**Configuration** The following example configures the reference bandwidth as 10 Mbps.

**Examples**

```
Ruijie(config)# routerospf1
Ruijie(config-router)# network172.16.10.0 0.0.0.255 area0
Ruijie(config-router)# auto-costreference-bandwidth10
```

**Related  
Commands**

| Command             | Description                                                                        |
|---------------------|------------------------------------------------------------------------------------|
| <b>show ip ospf</b> | Displays the OSPF global configuration information                                 |
| <b>ip ospf cost</b> | Sets the cost value of the OSPF interface.                                         |
| <b>bandwidth</b>    | Sets the interface bandwidth. This setting does not affect data transmission rate. |

**Platform** N/A

**Description**

## 2.10 bdf all-interfaces

Use this command to enable Bidirectional Forwarding Detection (BFD) on all OSPF interfaces. Use the **no** form of this command to restore the default setting.

**bdf all-interfaces**

**no bdf all-interfaces**

**Parameter  
Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** BDF is disabled by default.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** OSPF dynamically discovers the neighbors through Hello packets. With the BFD function enabled, one BFD session will be established for the neighbors that match the FULL rules and the status of the neighbors will be detected through the BFD mechanism. Once the BFD neighbor fails, the OSPF will converge with the network immediately.

You can also use the **ip ospf bfd [ disable ]** command in interface configuration mode to enable or

disable the BFD function on the specified interface, which takes precedence over the **bfd all-interfaces** command in routing process configuration mode.

```

Configuration Ruijie(config)# router ospf 1
Examples Ruijie(config-router)# bfd all-interfaces
    
```

| Related Commands | Command              | Description                                                                       |
|------------------|----------------------|-----------------------------------------------------------------------------------|
|                  | <b>router ospf</b>   | Creates the OSPF routing process and enters routing process configuration mode.   |
|                  | <b>ip ospf bfd ]</b> | Enables the specified interface running OSPF or disabling BFD for link detection. |

**Platform** N/A  
**Description**

## 2.11 capability opaque

Use this command to enable Opaque LSA. Use the **no** form of this command to disable this function.  
**capability opaque**  
**no capability opaque**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** Opaque LSA is enabled by default.

**Command Mode** Routing process configuration mode.

**Usage Guide** N/A

```

Configuration The following example disables Opaque LSA capability.
Examples Ruijie(config)# router ospf 1
Ruijie(config-router)# no capability opaque
    
```

| Related Commands | Command             | Description                                |
|------------------|---------------------|--------------------------------------------|
|                  | <b>show ip ospf</b> | Displays the global configuration of OSPF. |

**Platform** N/A  
**Description**

## 2.12 clear ip ospf process

Use this command to clear and restart the OSPF instance.

**clear ip ospf ( *process-id* ) process**

| Parameter Description | Parameter         | Description                                                                                                                                                                                                                                                                     |
|-----------------------|-------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <i>process-id</i> | OSPF instance ID.<br>When the ID is specified, the command clears data related to the specified instance and restarts the OSPF instance.<br>When no ID is specified, the command clears data related to all running OSPF instances and restarts all the running OSPF instances. |

**Defaults** The rule recommended in the RFC 1583 is used by default.

### Command

**Mode** Privileged EXEC mode

**Usage Guide** Resetting the entire OSPF process causes that all neighbors are re-established and OSPF is greatly affected. Therefore, you are prompted to confirm the execution for deliberation.

**Configuration** The following example clears data of OSPF instance 1 and restarts OSPF instance 1.

**Examples** Ruijie#clearipospflprocess

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 2.13 compatible rfc1583

Use this command to determine the RFC 1583 or RFC 2328 rule for selecting the optimal route among route table several routes to the same destination out of the Autonomous System (AS).

**compatible rfc1583**

**no compatible rfc1583**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** The RFC 1583 rule is used by default.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** N/A

**Configuration** The following example determines the best route with the RFC 2328 rule.

```
Ruijie(config)# routerospf1
Ruijie(config-router)# nocompatibleRFC1583
```

**Related Commands**

| Command             | Description                                        |
|---------------------|----------------------------------------------------|
| <b>show ip ospf</b> | Displays the OSPF global configuration information |

**Platform** N/A

**Description**

## 2.14 default-information originate

Use this command to generate a default route to be injected into the OSPF routing domain in routing process configuration mode. Use the **no** form of this command to restore the default setting.

**default-information originate** [ **always** ] [ **metric** *metric* ] [ **metric-type** *type* ] [ **route-map** *map-name* ]

**no default-information originate** [ **always** ] [ **metric** ] [ **metric-type** ] [ **route-map** *map-name* ]

**Parameter Description**

| Parameter                        | Description                                                                                                                                                                                                                                      |
|----------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>always</b>                    | (Optional) Generates the default route unconditionally, no matter whether the default route exists locally or not.                                                                                                                               |
| <b>metric</b> <i>metric</i>      | (Optional) Initial metric of the default route in the range from 0 to 16777214                                                                                                                                                                   |
| <b>metric-type</b> <i>type</i>   | (Optional) Type of the default route. There are two type of OSPF external routes: type 1, different metrics on different devices; type 2, same metric on different devices. An external route of type 1 is more trustworthy than that of type 2. |
| <b>route-map</b> <i>map-name</i> | Associated route map name. No route map is associated by default.                                                                                                                                                                                |

**Defaults** No default route is generated by default.  
 The default value of metric is 1.  
 The default value of metric-type is 2.

**Command** Routing process configuration mode

**Mode**


**Usage Guide** When the **redistribute** or **default-information** command is executed, the OSPF-enabled device automatically turns into the ASBR. The ASBR cannot generate the default route automatically or advertise it to all the devices in the OSPF routing domain. The ASBR can generate the default route with the **default-information originate** command in routing process configuration mode. If the **always** parameter is used, the OSPF routing process advertises an external default route to neighbors, no matter the default route exists or not. However, the local device does not display the default route. To make sure whether the default route is generated, use the **show ip ospf database** command to display the OSPF link state database. The external link identified with 0.0.0.0 indicates the default route. You can use the **show ip route** command on the OSPF neighbor to display the default route.

The metric of the external default route can be defined only with the **default-information originate** command.

There are two types of OSPF external routes: type 1 external routes have changeable routing metrics, while type 2 external routes have constant routing metrics. For two parallel routes with the same route metric to the same destination network, the type 1 route takes precedence over the type 2 route. As a result, the **show ip route** command displays only the type 1 route.

This command generates a default route of Type-5 LSA, which will not be flooded to the NSSA area. To generate a default route in the NSSA area, use the **area nssa default-information-originate** command.

The routers in the stub area cannot generate external default routes.

 The range of set metric is 0 to 16777214 for the associated route map. If the value exceeds the range, introducing a route fails.

**Configuration Examples** The following example configures that OSPF generates an external default route and injects it to the OSPF routing domain. The default route is of type 1 and the metric 50.

```
Ruijie(config)#routerospf 1
Ruijie(config-router)#network172.16.24.0 0.0.0.255 area 0
Ruijie(config-router)#default-information originate
alwaysmetric50metric-type1
```

**Related Commands**

| Command                      | Description                                      |
|------------------------------|--------------------------------------------------|
| <b>show ip ospf database</b> | Displays OSPF link state database.               |
| <b>show ip route</b>         | Displays the IP route table.                     |
| <b>redistribute</b>          | Redistributes routes of other routing processes. |

**Platform Description** N/A

## 2.15 default-metric

Use this command to set the **default metric** of OSPF redistribution route. Use the **no** form of this command to restore the default setting.

**default-metric** *metric*

**no default-metric**

| Parameter Description | Parameter     | Description                                                                     |
|-----------------------|---------------|---------------------------------------------------------------------------------|
|                       | <i>metric</i> | Default metric of the OSPF redistribution route in the range from 1 to 16777214 |

**Defaults** The default metric is not configured by default.

### Command

**Mode** Routing process configuration mode

**Usage Guide** The **default-metric** command must work with the **redistribute** command in routing process configuration mode to modify the initial metric of all redistributed routes. The configuration result of the **default-metric** command does not take effect for the external routes injected into the OSPF routing domain with the **default-information originate** command.

**Configuration** The following example configures the default metric of the OSPF redistribution route as 50.

### Examples

```
Switch(config)# router rip
Ruijie(config-router)# network 192.168.12.0
Switch(config-router)# version 2
Ruijie(config-router)# exit
Ruijie(config)# router ospf 1
Ruijie(config-router)# network 172.16.10.0 0.0.0.255 area 0
Switch(config-router)# default-metric 50
Ruijie(config-router)# redistribute rip subnets
```

| Related Commands | Command             | Description                                          |
|------------------|---------------------|------------------------------------------------------|
|                  | <b>redistribute</b> | Redistributes the routes of other routing processes. |
|                  | <b>show ip ospf</b> | Displays the OSPF global configuration information.  |

**Platform** N/A

**Description**



## 2.16 discard-route

Use this command to enable adding the discard-route into the core route table. Use the **no** form of this command to disable this function.

**discard-route** { **internal** | **external** }

**no discard-route** { **internal** | **external** }

| Parameter Description | Parameter       | Description                                                                  |
|-----------------------|-----------------|------------------------------------------------------------------------------|
|                       | <b>internal</b> | Enables adding the discard-route generated with the area range command       |
|                       | <b>external</b> | Enables adding the discard-route generated with the summary-address command. |

**Defaults** Adding the discard-route is enabled by default.

### Command

**Mode** Routing process configuration mode

**Usage Guide** After route aggregation, the range may exceed the actual network range of the route table, and sending the data to the nonexistent network may cause loops or increase router loads. To prevent this situation, the discard-route is added to the route table on the ABR or the ASBR. The discard-route is generated automatically and will not be transmitted.

**Configuration** The following example disables adding the discard routes generated with the area range command.

### Examples

```
Ruijie(config)# router ospf 1
Ruijie(config-router)# no discard-route internal
```

| Related Commands | Command                | Description                                                      |
|------------------|------------------------|------------------------------------------------------------------|
|                  | <b>area range</b>      | Configures the route aggregation between OSPF areas.             |
|                  | <b>summary-address</b> | Configures the route aggregation out of the OSPF routing domain. |

**Platform** N/A

**Description**

## 2.17 distance ospf

Use this command to set the Administration Distance (AD) of different types of OSPF routes. Use the **no** form of this command to restore the default setting.

**distance** { *distance* | **ospf** { [ **intra-area** *distance* ] [ **inter-area** *distance* [ **route-map** *map-name* ] ] }

[ **external** *distance* ] } }  
**no distance** [ **ospf** ]

**Parameter Description**

| Parameter                         | Description                                                     |
|-----------------------------------|-----------------------------------------------------------------|
| <i>distance</i>                   | Sets the route AD in the range from 1 to 255.                   |
| <b>intra-area</b> <i>distance</i> | Sets the AD of the intra-area route in the range from 1 to 255. |
| <b>inter-area</b> <i>distance</i> | Sets the AD of the inter-area route in the range from 1 to 255. |
| <b>External</b> <i>distance</i>   | Sets the AD of the external route in the range from 1 to 255.   |

**Defaults**

The default value is 110.  
 The default intra-area distance is 110.  
 The default inter-area distance is 110.  
 The default external distance is 110.

**Command**

**Mode** OSPF Routing process configuration mode

**Usage Guide** This command is used to specify different ADs for different types of OSPF routes.

**Configuration** The following example sets the OSPF external route AD to 160.

**Examples**

```
Ruijie(config)# routerospf1
Ruijie(config-router)# distance ospf external 160
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 2.18 distribute-list in

Use this command to configure LSA filtering. Use the **no** form of this command to restore the default setting.

**distribute-list** { [ *access-list-number* | *name* ] | **prefix** *prefix-list-name* [ **gateway** *prefix-list-name* ] | **route-map** *route-map-name* } **in** [ *interface-type* *interface-number* ]  
**no distribute-list** { [ *access-list-number* | *name* ] | **prefix** *prefix-list-name* [ **gateway** *prefix-list-name* ] | **route-map** *route-map-name* } **in** [ *interface-type* *interface-number* ]

**Parameter Description**

| Parameter                               | Description                  |
|-----------------------------------------|------------------------------|
| <i>access-list-number</i>   <b>name</b> | Uses the ACL filtering rule. |

|                                                  |                                                      |
|--------------------------------------------------|------------------------------------------------------|
| <b>gateway</b> <i>prefix-list-name</i>           | Uses the gateway filtering rule.                     |
| <b>Prefix</b> <i>prefix-list-name</i>            | Uses the prefix-list filtering rule.                 |
| <b>route-map</b> <i>route-map-name</i>           | Uses the route-map filtering rule.                   |
| <i>interface-type</i><br><i>interface-number</i> | Configures the LSA route filtering on the interface. |

**Defaults** No filtering is configured by default.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** This configuration filters the received LSAs, and only those matching the filtering conditions are involved in the Shortest Path First (SPF) calculation to generate the corresponding routes. It does not affect the link status database or the route table of the neighbors. It only affects the routing entries calculated by local OSPF. This function is used to control routes that enter the ABR or ASBR.

The following route-map rules will be supported if the route-map parameter is configured:

**match interface**

**match ip address**

**match ip address prefix-list**

**match ip next-hop**

**match ip next-hop prefix-list**

**match metric**

**match route-type**

**match tag**

Filtering routes by using the **distribute-list in** command affects forwarding of local routes, but does not affect route computation based on LSAs. Therefore, if route filtering is configured on the ABR, Type 3 LSAs will still be generated and advertised to other areas because routes can still be computed based on LSAs. As a result, black-hole routes are generated. In this case, you can run the **area filter-list** or **area range** (containing the **not-advertise** parameter) command on the ABR to prevent generation of black-hole routes.

**Configuration** The following example configures LSA filtering.

**Examples**

```
Ruijie(config)# access-list3permit172.16.0.00.0.127.255
Ruijie(config)# router ospf 25
Ruijie(config-router)# distribute-list 3 in ethernet 0/1
```

**Related  
Commands**

| Command                    | Description                    |
|----------------------------|--------------------------------|
| <b>distribute-list out</b> | Filters redistribution routes. |

**Platform** N/A

**Description**

## 2.19 distribute-list out

Use this command to configure filtering redistribution routes. The function is similar to that of the **redistribute** command. Use the **no** form of this command to restore the default setting.

**distribute-list** { [ *access-list-number* | *name* ] | **prefix** *prefix-list-name* } **out** [ **bgp** | **connected** | **isis** [ *area-tag* ] | **ospf** *process-id* | **rip** | **static** ]

**no distribute-list** { [ *access-list-number* | *name* ] | **prefix** *prefix-list-name* } **out** [ **bgp** | **connected** | **isis** [ *area-tag* ] | **ospf** *process-id* | **rip** | **static** ]

| Parameter Description | Parameter                                                                         | Description                          |
|-----------------------|-----------------------------------------------------------------------------------|--------------------------------------|
|                       | <code>access-list-number   name</code>                                            | Uses the ACL filtering rule.         |
|                       | <code>prefix prefix-list-name</code>                                              | Uses the prefix-list filtering rule. |
|                       | <code>bgp   connected   isis [ area-tag ]   ospf process-id   rip   static</code> | Source of the routes to be filtered  |

**Defaults** No filtering is configured by default.

### Command

**Mode** Routing process configuration mode

### Usage Guide

Similar to the `redistribute route-map` command, the `distribute-list out` command filters the routes that other protocols redistribute to the OSPF. However, the `distribute-list out` command does not redistribute routes by itself. It works with the `redistribute` command in most cases. The ACL filtering rule and the prefix-list filtering rule cannot coexist in the configuration, that is, the two rules cannot be configured at the same time for routes from the same source.

**Configuration** The following example filters the redistributed static routes.

### Examples

```
Ruijie(config)# routerospf1
Ruijie(config)# redistribute static subnets
Ruijie(config-router)# distribute-list 22 outstatic
Ruijie(config-router)# distribute-list prefix jjj out static
% Access-list filter exists, please de-config first
```

### Related

#### Commands

| Command                   | Description                                      |
|---------------------------|--------------------------------------------------|
| <b>distribute-list in</b> | Configures LSA filtering.                        |
| <b>redistribute</b>       | Redistributes routes of other routing processes. |

### Platform

N/A

### Description

## 2.20 enable mib-binding

Use this command to bind the Management Information Base (MIB) with the specified OSPFv2 process. Use the **no** form of this command to restore the default setting.

**enable mib-binding**

**no enable mib-binding**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** The MIB is bound with the OSPFv2 process with the smallest ID by default.

### Command

**Mode** Routing process configuration mode

**Usage Guide** OSPFv2 MIB has no OSPFv2 process information, so the user operates a sole OSPFv2 process by SNMP. By default, OSPFv2 MIB is bound with the OSPFv2 process with the smallest ID. User operations take effect for this process.

To operate the specified OSPF process over Simple Network Management Protocol(SNMP), use this command to bind the MIB to SNMP.

**Configuration** The following example operates OSPFv2 process 100 over SNMP:

### Examples

```
Ruijie(config)# routerospf100
Ruijie(config-router)# enable mib-binding
```

| Related Commands | Command             | Description                                         |
|------------------|---------------------|-----------------------------------------------------|
|                  | <b>show ip ospf</b> | Displays the OSPF global configuration information. |
|                  | <b>enable traps</b> | Configures the OSPF TRAP function.                  |

**Platform** N/A

**Description**

## 2.21 enable traps

The OSPFv2 process supports 16 kinds of TRAP packets, which are classified into four categories. Use this command to enable sending the specified TRAP messages. Use the **no** form of this command to restore the default setting.

**enable traps** [ **error** [ **IfAuthFailure** | **IfConfigError** | **IfRxBadPacket** | **VirtIfAuthFailure** | **VirtIfConfigError** | **VirtIfRxBadPacket** ] ] **Isa** [ **LsdbApproachOverflow** | **LsdbOverflow** | **MaxAgeLsa** | **OriginateLsa** ] ] **retransmit** [ **IfTxRetransmit** | **VirtIfTxRetransmit** ] ] **state-change**

[ IfStateChange | NbrRestartHelperStatusChange | NbrStateChange | NssaTranslatorStatusChange | RestartStatusChange | VirtIfStateChange | VirtNbrRestartHelperStatusChange | VirtNbrStateChange ] ]  
 no enable traps [ error [ IfAuthFailure | IfConfigError | IfRxBadPacket | VirtIfAuthFailure | VirtIfConfigError | VirtIfRxBadPacket ] ] | isa [ LsdbApproachOverflow | LsdbOverflow | MaxAgeLsa | OriginateLsa ] | retransmit [ IfTxRetransmit | VirtIfTxRetransmit ] | state-change [ IfStateChange | NbrRestartHelperStatusChange | NbrStateChange | NssaTranslatorStatusChange | RestartStatusChange | VirtIfStateChange | VirtNbrRestartHelperStatusChange | VirtNbrStateChange ] ]

Parameter  
Description

| Parameter                                                                   | Description                                                                                                                               |
|-----------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|
| <b>error</b>                                                                | Configures all traps switches related to errors. Use this parameter to set the following specified error traps switches.                  |
|                                                                             | <b>Ifauthfailure</b>   Interface authentication error                                                                                     |
|                                                                             | <b>Ifconfigerror</b>   Interface parameter configuration error                                                                            |
|                                                                             | <b>Ifrxbadpacket</b>   Error packets received on the interface                                                                            |
|                                                                             | <b>Virtifauthfailure</b>   Authentication error on the virtual interface                                                                  |
|                                                                             | <b>Virtifconfigerror</b>   Parameter configuration error on the virtual interface                                                         |
| <b>isa</b>                                                                  | Configures all traps switches related to the LSA. Use this parameter to set the following specified LSA traps switches.                   |
|                                                                             | <b>Lsdbapproachoverflow</b>   External LSA count has reached the 90% of the upper limit.                                                  |
|                                                                             | <b>Lsdboverflow</b>   External LSA count has reached the upper limit.                                                                     |
|                                                                             | <b>Maxagelsa</b>   LSA reaching the aging time                                                                                            |
|                                                                             | <b>Originatelsa</b>   Generates new LSA                                                                                                   |
| <b>retransmit</b>                                                           | Configures all traps switches related to the retransmission. Use this parameter to set the following specified retransmit traps switches. |
|                                                                             | <b>Iftxretransmit</b>   Packet retransmission on the interface                                                                            |
|                                                                             | <b>Virtiftxretransmit</b>   Packet retransmission on the virtual interface                                                                |
| <b>state-change</b>                                                         | Configures all traps switches related to the state change. Use this parameter to set the following specified state-change switches.       |
|                                                                             | <b>Ifstatechange</b>   Interface state change                                                                                             |
|                                                                             | <b>NbrRestartHelperStatusChange</b>   State change during the neighbor GR process                                                         |
|                                                                             | <b>Nbrstatechange</b>   Neighbor state change                                                                                             |
|                                                                             | <b>NssaTranslatorStatusChange</b>   State change of the NSSA translator                                                                   |
| <b>RestartStatusChange</b>   State change of the GR Restarter on the device |                                                                                                                                           |

|  |                                              |                                                  |
|--|----------------------------------------------|--------------------------------------------------|
|  | <b>Virtifstatechange</b>                     | State change on the virtual interface            |
|  | <b>VirtNbrRestartHelper<br/>StatusChange</b> | Status change of the virtual neighbor GR process |
|  | <b>Virtnbrstatechange</b>                    | State change on the virtual neighbor             |

**Defaults** All TRAP switches are disabled by default.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** The **snmp-server enable traps ospf** command must be configured before you configure this command, for it is limited by the **snmp-server** command.  
This command is not limited by the binding of process and MIB, allowing to enable the TRAP switch for different processes simultaneously.

**Configuration** The following example enables all TRAP switches of OSPFv2 process 100.

**Examples**

```
Ruijie(config)# routerospf100
Ruijie(config-router)# enable traps
```

**Related  
Commands**

| Command                              | Description                                         |
|--------------------------------------|-----------------------------------------------------|
| <b>show ip ospf</b>                  | Displays the OSPF global configuration information. |
| <b>enable mib-binding</b>            | Binds the OSPFv2 process with MIB.                  |
| <b>snmp-server enable traps ospf</b> | Enables the OSPF TRAP notification function.        |

**Platform** N/A

**Description**

## 2.22 fast-reroute

Use this command to enable the OSPF FRR (Fast Reroute) function for the device. Use the **no** form of this command to restore the default setting.

**fast-reroute** { lfa | downstream-paths | route-map *route-map-name* }

**no fast-reroute** { lfa [ downstream-paths ] | route-map }

**Parameter  
Description**

| Parameter                              | Description                                             |
|----------------------------------------|---------------------------------------------------------|
| <b>lfa</b>                             | Enables the LFA (loop-free alternate) path computation. |
| <b>downstream-paths</b>                | Enables the downstream path computation.                |
| <b>route-map</b> <i>route-map-name</i> | Specifies the backup path through the route map.        |

**Defaults** The FRR function is disabled by default.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** If the **ifa** parameter is configured, computation of the loop-free standby path is enabled. In this case, you can use the interface mode command to specify the path protection mode of the interface. It is recommended that computation of the loop-free standby path be disabled if any of the following case exists on the network:

1. Virtual links exist.
2. Alternative ABRs exist.
3. An ASBR is also an ABR.
4. Multiple ASBRs advertise the same external route.

If both **ifa** and **downstream-paths** are configured, computation of the downstream path is enabled. If **route-map** is configured, a standby path can be specified for a matched route through the route-map.

When the OSPF fast reroute function is used, it is recommended that BFD be enabled at the same time so that the device can quickly detect any link failure and therefore shorten the forwarding interruption time. If the interface is up or down, to shorten the forwarding interruption time during OSPF fast reroute, you can configure **carrier-delay 0** in L3 interface configuration mode to achieve the fastest switchover speed.

**Configuration** The following example enables FRR for OSPF instance 1 and associates route map *fast reroute*.

**Examples**

```
Ruijie(config)# route-map fast-reroute
Ruijie(config-route-map)# match ip address 1
Ruijie(config-route-map)# set fast-reroute backup-nexthop GigabitEthernet 0/1
backup-nexthop 192.168.1.2
Ruijie(config)# router ospf 1
Ruijie(config-router)# fast-reroute route-map fast-reroute
```

**Related  
Commands**

| Command                        | Description                               |
|--------------------------------|-------------------------------------------|
| <b>graceful-restart helper</b> | Enables the OSPF graceful-restart helper. |

**Platform**

N/A

**Description**

## 2.23 graceful-restart

Use this command to enable the graceful restart (GR) of OSPF on the device. Use the **graceful-restart grace-period** command to configure the grace period parameter and enable the OSPF GR function. Use the **no** form of this command to disable this function.

**graceful-restart [ grace-period *grace-period* | inconsistent-lsa-checking ]**



**no graceful-restart [ graceful-period ]**

| Parameter Description | Parameter                               | Description                                                                                                                                                                                              |
|-----------------------|-----------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <b>grace-period</b> <i>grace-period</i> | Indicates the grace period, which is the maximum time from occurrence of an OSPF failure to completion of the OSPF GR. The value of the graceperiod varies from 1s to 1800s. The default value is 120s.  |
|                       | <b>inconsistent-lsa-checking</b>        | Enables topological change detection. If any topological change is detected, OSPF exits the GR process to complete convergence. After GR is enabled, topological change detection is enabled by default. |

**Defaults** This function is enabled by default.

**Command**

**Mode** Routing process configuration mode

**Usage Guide**

GR is configured based on the OSPF instance. Different instances could be configured with different parameters according to the actual situation.

The graceful restart interval is the longest time between the OSPF restart and the graceful restart. In this period, you can perform link status reconstruction to restore the OSPF status to the original. With the interval times out, the OSPF will exit GR and perform common OSPF operations.

The GR interval is 120 seconds set with the graceful-restart command, and the graceful-restart grace-period command allows you to change the interval explicitly.

GR is unavailable when the Fast Hello function is enabled.

**Configuration** The following example enables GR for the OSPF instance 1 and sets the restart interval for GR.

**Examples**

```
Ruijie(config)# router ospf 1
Ruijie(config-router)# graceful-restart
Ruijie(config-router)# graceful-restart grace-period 60
```

**Related Commands**

| Command                        | Description                               |
|--------------------------------|-------------------------------------------|
| <b>graceful-restart helper</b> | Enables the OSPF graceful-restart helper. |

**Platform** N/A

**Description**

## 2.24 graceful-restart helper

Use this command to enable the graceful restart helper function. Use the **no** form of this command to restore the default setting.

**graceful-restart helper disable**

**no graceful-restart helper disable**

**graceful-restart helper** { **strict-lsa-checking** | **internal-lsa-checking** }  
**no graceful-restart helper** { **strict-lsa-checking** | **internal-lsa-checking** }

**Parameter Description**

| Parameter                    | Description                                                                                                                                                                                                                                      |
|------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>disable</b>               | Prohibits a device from acting as a GR helper for another device.                                                                                                                                                                                |
| <b>strict-lsa-checking</b>   | Indicates that changes in Type 1 to Type 5 and Type 7 LSAs will be checked during the period that the device acts as a GR helper to determine whether the network changes. If the network changes, the device will stop acting as the GR helper. |
| <b>internal-lsa-checking</b> | Indicates that changes in Type 1 to Type 3 LSAs will be checked during the period that the device acts as a GR helper to determine whether the network changes. If the network changes, the device will stop acting as the GR helper.            |

**Defaults**

The GR helper is enabled by default.

The router enabled with the GR helper does not check the LSA change by default.

**Command**

**Mode**

Routing process configuration mode

**Usage Guide**

This command is used to configure the GR helper capability of a router. When a neighbor router implements GR, it sends a Grace-LSA to notify all neighbor routers. If the GR helper function is enabled on the local router, the local router becomes the GR helper on receiving the Grace-LSA, and helps the neighbor to complete GR. The **disable** option indicates that GR helper is not provided for any device that implements GR.

After a device becomes the GR helper, the network changes are not detected by default. If any change takes place on the network, the network topology converges after GR is completed. If you wish that network changes can be quickly detected during the GR process, you can configure **strict-lsa-checking** to check Type 1 to 5 and Type 7 LSAs that indicate the network information or **internal-lsa-checking** to check Type 1 to 3 LSAs that indicate internal routes of the AS domain. When the network scale is large, it is recommended that you disable the LSA checking options (**strict-lsa-checking** and **internal-lsa-checking**) because regional network changes may trigger termination of GR and consequently reduce the convergence of the entire network.

**Configuration**

The following example disables the GF helper and modifies the policy of checking network changes.

**Examples**

```
Ruijie(config)# router ospf1
Ruijie(config-router)# graceful-restart helper disable
Ruijie(config-router)# no graceful-restart helper disable
Ruijie(config-router)# graceful-restart helper
strict-lsa-checking
```

**Related**

**Commands**

| Command | Description |
|---------|-------------|
|---------|-------------|

|                         |                           |
|-------------------------|---------------------------|
| <b>graceful-restart</b> | Enables GR on the device. |
|-------------------------|---------------------------|

**Platform** N/A

**Description**

## 2.25 ip ospf authentication

Use this command to configure the authentication type. Use the **no** form of this command to restore the default setting.

**ip ospf authentication [ message-digest | null ]**

**no ip ospf authentication**

| Parameter          | Parameter             | Description                                  |
|--------------------|-----------------------|----------------------------------------------|
| <b>Description</b> | <b>message-digest</b> | Enables MD5 authentication on the interface. |
|                    | <b>null</b>           | Enables no authentication.                   |

**Defaults** No authentication mode is configured and that of the local area is used on the interface by default.

**Command**

**Mode** Interface configuration mode

**Usage Guide** Plaintext authentication is applicable when **no** option is used with the command. Note that the no form of this command restores the default value. Whether authentication is used actually depends on authentication mode configured for the local area of the interface. If authentication mode is configured as **null**, no authentication is enabled. When both the interface and its area are configured with authentication, the one for the interface takes precedence.

**Configuration** The following example configures MD5 authentication for OSPF on fastEthernet 0/1.

**Examples**

```
Ruijie (config)#interface fastEthernet0/1
Ruijie(config-if-FastEthernet 0/1)# ipaddress172.16.1.1
255.255.255.0
Ruijie(config-if-FastEthernet 0/1)# ip ospf authentication
message-digest
```

| Related Commands | Command                           | Description                                                              |
|------------------|-----------------------------------|--------------------------------------------------------------------------|
|                  | <b>area authentication</b>        | Enables authentication and defines authentication mode in the OSPF area. |
|                  | <b>ip ospf authentication-key</b> | Configures the plain text authentication key.                            |
|                  | <b>ip ospf message-digest-key</b> | Configures the MD5 authentication key.                                   |

**Platform** N/A

**Description**

## 2.26 ip ospf authentication-key

Use this command to configure the OSPF plain text authentication key in interface configuration mode. Use the **no** form of this command to restore the default setting.

**ip ospf authentication-key** [ 0 | 7 ] *key*

**no ip ospf authentication-key**

### Parameter Description

| Parameter  | Description                              |
|------------|------------------------------------------|
| 0          | Displays the key in plain text.          |
| 7          | Displays the key in cipher text.         |
| <i>key</i> | Key containing at most eight characters. |

**Defaults** It is disabled by default.

### Command

**Mode** Interface configuration mode

**Usage Guide** The **ip ospf authentication-key** command configures the key that will be inserted in all OSPF packet headers. As a result, if the keys are inconsistent, the OSPF neighbor relationship cannot be established between two devices directly connected, and thus route information exchange is impossible.

The keys may vary by interface, but the devices that are connected to the same physical network segment must use the same key.

To enable the OSPF area authentication, execute the area authentication command in routing process configuration mode.

The authentication can be enabled separately on an interface by executing the ip ospf authentication command in interface configuration mode. When both the interface and the area are configured with authentication, the one for the interface takes precedence.

**Configuration** The following example configures the OSPF authentication key ospfauth for fast Ethernet 0/1.

### Examples

```
Ruijie (config)#interfacefastEthernet0/1
Ruijie(config-if-FastEthernet 0/1)# ipaddress172.16.1.1
255.255.255.0
Ruijie(config-if-FastEthernet 0/1)# ip ospf authentication-key ospfauth
```

### Related Commands

| Command                       | Description                                                             |
|-------------------------------|-------------------------------------------------------------------------|
| <b>area authentication</b>    | Enables OSPF area authentication and defines authentication mode        |
| <b>ip ospf authentication</b> | Enables authentication on the interface and defines authentication mode |

**Platform** N/A

## Description

## 2.27 ip ospf bfd

Use this command to enable or disable the BFD on the specified OSPF interface. Use the **no** form of this command to restore the default setting.

**ip ospf bfd [ disable ]**

**no ip ospf bfd**

Parameter  
Description

| Parameter      | Description                                   |
|----------------|-----------------------------------------------|
| <b>disable</b> | Disables BFD on the specified OSPF interface. |

## Defaults

BFD is not configured by default, and the BFD configuration in OSPF process configuration mode shall prevail.

## Command

## Mode

Interface configuration mode

## Usage Guide

The interface-based configuration takes precedence over the **bfd all-interfaces** command used in process configuration mode.

Based on the actual environment, you can run the **ip ospf bfd** command to enable BFD on a specified interface for link detection, or run the **bfd all-interfaces** command in OSPF process configuration mode to enable BFD on all interface of the OSPF process, or run the **ospf bfd disable** command to disable BFD on a specified interface.

## Configuration

```
Ruijie(config)# interface fastethernet 0/1
```

## Examples

```
Ruijie(config-if-FastEthernet 0/1)# ip address 172.16.1.1 255.255.255.0
```

```
Ruijie(config-if-FastEthernet 0/1)# ip ospf bfd
```

Related  
Commands

| Command                   | Description                                                                     |
|---------------------------|---------------------------------------------------------------------------------|
| <b>router ospf</b>        | Creates the OSPF routing process and enters routing process configuration mode. |
| <b>bfd all-interfaces</b> | Enables the BFD on all OSPF interfaces.                                         |

## Platform

N/A

## Description

## 2.28 ip ospf cost

Use this command to configure the cost (OSPF metric) of the OSPF interface for sending a packet in interface configuration mode. Use the **no** form of this command to restore the default setting.

**ip ospf cost** *cost*

**no ip ospf cost**

**Parameter  
Description**

| Parameter   | Description                                      |
|-------------|--------------------------------------------------|
| <i>cost</i> | OSPF interface cost in the range from 0 to 65535 |

**Defaults**

The default interface cost is calculated as follows:

Reference bandwidth/Bandwidth

The reference bandwidth is 100 Mbps by default.

**Command**

**Mode**

Interface configuration mode

**Usage Guide**

By default, the OSPF interface cost is 100Mbps/Bandwidth, where Bandwidth is the interface bandwidth configured with the bandwidth command in interface configuration mode.

The default costs of different types of lines are as follows:

- 64K serial line: 1562
- E1 line: 48
- 10M Ethernet: 10
- 100M Ethernet: 1

The OSPF cost configured with the **ip ospf cost** command will overwrite the default configuration.

**Configuration**

The following example configures the OSPF cost of fastEthernet 0/1 to100.

**Examples**

```
Ruijie(config)# interfacefastEthernet0/1
Ruijie(config-if-FastEthernet 0/1)# ipospfcost100
```

**Related  
Commands**

| Command             | Description                                                                                 |
|---------------------|---------------------------------------------------------------------------------------------|
| <b>bandwidth</b>    | Specifies the interface bandwidth. This setting does not affect the data transmission rate. |
| <b>show ip ospf</b> | Displays the OSPF global configuration information                                          |

**Platform**

N/A

**Description**

## 2.29 ip ospf database-filter all out

Use this command to stop advertising LSAs of an interface, that is, the LSA update packets are not sent on the interface. Use the **no** form of the command to restore the default setting.

**ip ospf database-filter all out**

**no ip ospf database-filter****Parameter  
Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults**

This function is disabled and all LSA update packets can be sent on the interface by default.

**Command****Mode**

Interface configuration mode

**Usage Guide**

To stop sending LSA update packets on the interface, enable this function on the interface. Then, the device maintains the neighboring connections and accepts LSAs from neighbors, but stops sending LSAs to neighbors.

**Configuration**

The following example stops sending LSA update packets of fastEthernet 0/1.

**Examples**

```
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if-FastEthernet 0/1)# ip address 172.16.10.1 255.255.255.0
Ruijie(config-if-FastEthernet 0/1)# ip ospf database-filter all out
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform**

N/A

**Description**

## 2.30 ip ospf dead-interval

Use this command to configure the interval for determining the death of an interface neighbor in interface configuration mode. Use the **no** form of this command to restore the default setting.

**ip ospf dead-interval** { *seconds* | **minimal hello-multiplier** *multiplier* }

**no ip ospf dead-interval**

**Parameter  
Description**

| Parameter                                 | Description                                                                                                      |
|-------------------------------------------|------------------------------------------------------------------------------------------------------------------|
| <i>seconds</i>                            | Defines the interval for determining the neighbor death in seconds. The range is from 0 to 2,147,483,647.        |
| <b>minimal</b>                            | Indicates that the Fast Hello function is enabled to set the dead interval to 1s.                                |
| <b>hello-multiplier</b> <i>multiplier</i> | Indicates the number of Hello packets sent per second in the Fast Hello function. The value ranges from 3 to 20. |

**Defaults**

The value of dead-interval is 4 times the interval configured with the **ip ospf hello-interval** command

by default.

### Command

**Mode** Interface configuration mode

### Usage Guide

The OSPF dead interval is contained in the Hello packet. If OSPF does not receive a Hello packet from a neighbor within the dead interval, it declares that the neighbor is invalid and deletes this neighbor record from the neighbor list. By default, the dead interval is four times the Hello interval. If the Hello interval is modified, the dead interval is modified automatically.

When using this command to manually modify the dead interval, pay attention to the following issues:

1. The dead interval cannot be shorter than the Hello interval.
2. The dead interval must be the same on all routers in the same network segment.

OSPF supports the Fast Hello function.

After the OSPF Fast Hello function is enabled, OSPF finds neighbors and detects neighbor failures faster. You can enable the OSPF Fast Hello function by specifying the **minimal** and **hello-multiplier** keywords and the **multiplier** parameter. The **minimal** keyword indicates that the death interval is set to 1s, and **hello-multiplier** indicates the number of Hello packets sent per second. In this way, the interval at which the Hello packet is sent decreases to less than 1s.

If the Fast Hello function is configured for a virtual link, the Hello interval field of the Hello packet advertised on the virtual link is set to 0, and the Hello interval field of the Hello packet received on this virtual link is ignored.

No matter whether the Fast Hello function is enabled, the death interval must be consistent and the **hello-multiplier** values can be inconsistent on routers at both ends of the virtual link. Ensure that at least one Hello packet can be received within the death interval.

Run the **show ip ospf virtual-links** command to monitor the death interval and Fast Hello interval configured for the virtual link.

The **dead-interval minimal hello-multiplier** and **hello-interval** parameters introduced for the Fast Hello function cannot be configured simultaneously.

### Configuration

The following example configures the interval for determining the death of the OSPF neighbor on fastEthernet 0/1 to 30 seconds.

### Examples

```
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if-FastEthernet 0/1)# ip address 172.16.10.1 255.255.255.0
Ruijie(config-if-FastEthernet 0/1)# ip ospf dead-interval 30
```

The following example configures the value of hello-multiplier to 3.

```
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if-FastEthernet 0/1)# ip address 172.16.10.1 255.255.255.0
Ruijie(config-if-FastEthernet 0/1)# ip ospf dead-interval minimal hello-multiplier 3
```

### Related

### Commands

| Command | Description |
|---------|-------------|
|---------|-------------|



|                               |                                                              |
|-------------------------------|--------------------------------------------------------------|
| <b>ip ospf hello-interval</b> | Specifies the interval at which the OSPF sends Hello packets |
| <b>show ip ospf interface</b> | Displays OSPF interface information.                         |

**Platform** N/A

**Description**

## 2.31 ip ospf disable all

Use this command to prevent the specified interface from generating OSPF packets. Use the **no** form of this command to restore the default setting.

**ip ospf disable all**

**no ip ospf disable all**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** OSPF packets are generated on the specified interface by default.

**Command**

**Mode** Interface configuration mode

**Usage Guide** The interface configured with this command will ignore whether the network areas are matched. After this command is configured, an interface will not generate OSPF packets even if the interface belongs to the network; therefore, the interface does not receive or send any OSPF packets or participate in OSPF calculation.

**Configuration** The following example prevents the specified interface from generating OSPF packets.

**Examples**

```
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if-FastEthernet 0/1)# ip address 172.16.10.1 255.255.255.0
Ruijie(config-if-FastEthernet 0/1)# ip ospf disable all
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 2.32 ip ospf fast-reroute protection

Use this command to specify the loop-free alternate (LFA) protection mode for an interface. Use the

**no** form of this command to restore the default setting.

**ip ospf fast-reroute protection { node | link-node | disable }**

**no ip ospf fast-reroute protection**

| Parameter Description | Parameter        | Description                       |
|-----------------------|------------------|-----------------------------------|
|                       | <b>node</b>      | Enables LFA node protection.      |
|                       | <b>link-node</b> | Enables LFA link node protection. |
|                       | <b>disable</b>   | Disables LFA protection.          |

**Defaults** LFA node protection is enabled by default.

#### Command

**Mode** Interface configuration mode

**Usage Guide** Enabling the **fast-reroute lfa** command in OSPF process configuration mode will enable OSPF fast reroute and generate a backup route for the master route according to the specified LFA protection mode in interface configuration mode. By default, link protection is enabled on each OSPF interface. In this protection mode, the failure of a master link does not affect forwarding on the backup route. Use the **node** parameter to enable node protection for an interface, that is, the neighbor node of a master link does not affect forwarding on the backup route. Similarly, use the **link-node** parameter to protect the link and neighbor link of a master route at the same time. Use the **disable** parameter to disable the LFA protection function for an interface, that is, a backup entry is not generated for the routes with this interface as the next hop.

**Configuration Examples** The following example sets OSPF LFA fast reroute to link and node protection:

```
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if-FastEthernet 0/1)# ip address 172.16.10.1 255.255.255.0
Ruijie(config-if-FastEthernet 0/1)# ip ospf fast-reroute protection link-node
```

| Related Commands | Command             | Description                |
|------------------|---------------------|----------------------------|
|                  | <b>fast-reroute</b> | Enables OSPF fast reroute. |

**Platform Description** N/A

## 2.33 ip ospf fast-reroute no-eligible-backup

Use this command in interface configuration mode to exclude an OSPF interface as a backup interface in OSPF fast reroute calculation. Use the **no** form of this command to restore the default

setting.

**ip ospf fast-reroute no-eligible-backup**  
**no ip ospf fast-reroute no-eligible-backup**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** An OSPF interface can serve as a backup interface by default.

**Command**

**Mode** Interface configuration mode

**Usage Guide** If the remaining bandwidth of an interface is small or if the interface and its active interface may fail at the same time, the interface cannot be used as a standby interface. Therefore, you need to run this command in interface configuration mode to prevent this interface from becoming a standby interface during OSPF fast reroute computation. After this command is executed, the standby interface is selected from other interface.

This command does not take effect if **fast-reroute route-map** is configured.

**Configuration Examples** The following example excludes FastEthernet 0/1 as a backup interface in OSPF fast reroute calculation.

```
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if-FastEthernet 0/1)# ip address 172.16.10.1 255.255.255.0
Ruijie(config-if-FastEthernet 0/1)# ip ospf fast-reroute no-eligible-backup
```

| Related Commands | Command             | Description                |
|------------------|---------------------|----------------------------|
|                  | <b>fast-reroute</b> | Enables OSPF fast reroute. |

**Platform**

**Description** N/A

## 2.34 ip ospf hello-interval

Use this command to set the interval for sending Hello packets in interface configuration mode. Use the **no** form of this command to restore the default setting.

**ip ospf hello-interval** *seconds*  
**no ip ospf hello-interval**

| Parameter Description | Parameter      | Description                                                                  |
|-----------------------|----------------|------------------------------------------------------------------------------|
|                       | <i>seconds</i> | Interval for sending Hello packets in seconds. The range is from 1 to 65535. |

**Defaults** The defaults are as follows:  
 10seconds for Ethernet  
 10secondsfor PPP or HDLC encapsulated interfaces  
 10seconds for frame relay PTP interfaces  
 30seconds for non-frame relay PTP sub-interface and X.25 interfaces

**Command**

**Mode** Interface configuration mode

**Usage Guide** The interval of sending the Hello packets is included in the Hello packet. A shorter interval means that OSPF detects the topological change faster, which will increase network traffic. The Hello packet sending intervals for all the devices in the same network segment must be the same. To manually modify the interval to determine neighbor death, ensure that the Hello packet sending interval cannot be greater than dead-interval of the neighbor.

**Configuration** The following example configures the interval of sending the Hello packets on fastEthernet 0/1 to15.

**Examples**

```
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if-FastEthernet 0/1)# ip address172.16.10.1 255.255.255.0
Ruijie(config-if-FastEthernet 0/1)# ip ospf hello-interval15
```

**Related Commands**

| Command                      | Description                                                       |
|------------------------------|-------------------------------------------------------------------|
| <b>ip ospf dead-interval</b> | Sets the interval for determining the death of the OSPF neighbor. |

**Platform** N/A

**Description**

## 2.35 ip ospf message-digest-key

Use this command to configure the MD5 authentication key in interface configuration mode. Use the **no** form of this command to restore the default setting.

**ip ospf message-digest-key** *key-id* **md5** [ **0** | **7** ] *key*

**no ip ospf message-digest-key** *key-id*

**Parameter Description**

| Parameter     | Description                              |
|---------------|------------------------------------------|
| <i>key</i>    | Key of up to 16 characters               |
| <b>0</b>      | Displays the key in plain text.          |
| <b>7</b>      | Displays the key in cipher text.         |
| <i>key-id</i> | Key identifier in the range from1 to 255 |

**Defaults** No MD5 key is configured by default.

**Command**

**Mode** Interface configuration mode

**Usage Guide** The **ip ospf message-digest-key** command configures the key that will be inserted in all OSPF packet headers. As a result, if the keys are inconsistent, the OSPF neighboring relationship cannot be established between two devices directly connected, and thus route information exchange is impossible.

The keys can be different for different interfaces, but the devices that are connected to the same physical network segment must be configured with the same key. For neighbors, the same key identifier must correspond to the same key.

To enable OSPF area authentication, execute the **area authentication** command in routing process configuration mode. The authentication can be enabled separately on an interface by executing the **ip ospf authentication** command in interface configuration mode. When both the interface and the area are configured with authentication, the one for the interface takes precedence.

The RGOS software supports smooth modification of MD5 authentication keys, which shall be added before deleted. When an MD5 authentication key of the device is added, the device will regard other devices have not had new keys and thus send multiple OSPF packets by using different keys, till it confirms that the neighbors have been configured with new keys. When all devices have been configured with new keys, it is possible to delete the old key.

**Configuration Examples** The following example adds a new OSPF authentication key "hello5" with key ID 5 for fastEthernet 0/1.

```
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if-FastEthernet 0/1)# ip address 172.16.24.2 255.255.255.0
Ruijie(config-if-FastEthernet 0/1)# ip ospf authentication message-digest
Ruijie(config-if-FastEthernet 0/1)# ip ospf message-digest-key 10 md5 hello10
Ruijie(config-if-FastEthernet 0/1)# ip ospf message-digest-key 5md5 hello5
```

When all neighbors are added with new keys, the old keys shall be deleted for all devices.

```
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if-FastEthernet 0/1)# no ip ospf message-digest-key10md5
hello10
```

**Related Commands**

| Command                       | Description                                                              |
|-------------------------------|--------------------------------------------------------------------------|
| <b>area authentication</b>    | Enables OSPF area authentication and defines authentication mode.        |
| <b>ip ospf authentication</b> | Enables authentication on the interface and defines authentication mode. |

**Platform Description** N/A

## 2.36 ip ospf mtu-ignore

Use this command to disable the MTU check when an interface receives the database description packet. Use the **no** form of this command to restore the default setting.

**ip ospf mtu-ignore**

**no ip ospf mtu-ignore**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** MTU check is disabled by default.

### Command

**Mode** Interface configuration mode

**Usage Guide** After receiving the database description packet, the device will check whether the MTU of the neighbor interface is the same as its own MTU. If the received database description packet indicates an MTU greater than the interface's MTU, the neighboring relationship cannot be established. This can be fixed by disabling the MTU check.

**Configuration** The following example disables the MTU check function on fastEthernet 0/1.

### Examples

```
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if-FastEthernet 0/1)# ip ospf mtu-ignore
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 2.37 ip ospf network

Use this command to configure the OSPF network type in interface configuration mode. Use the **no** form of this command to restore the default setting.

**ip ospf network { broadcast | non-broadcast | point-to-multipoint [ non-broadcast ] | point-to-point }**

**no ip ospf network**

| Parameter Description | Parameter        | Description                                       |
|-----------------------|------------------|---------------------------------------------------|
|                       | <b>broadcast</b> | Sets the OSPF network type as the broadcast type. |

|                                                      |                                                                                                                                                                                                           |
|------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>non-broadcast</b>                                 | Sets the OSPF network type as the non-broadcast multi-path access type, i.e. NBMA network.                                                                                                                |
| <b>point-to-multipoint</b><br><b>[non-broadcast]</b> | Sets the OSPF network type as the point-to-multipoint type.<br>The value is the point-to-multipoint broadcast type by default. The non-broadcast option means the point-to-multipoint non-broadcast type. |
| <b>point-to-point</b>                                | Sets the OSPF network type as the point-to-point type.                                                                                                                                                    |

**Defaults**

The default configurations are as follows:

PTP network type: Point-to-Point Protocol(PPP), Serial Line Internet Protocol(SLIP), frame relay point-to-point (PTP) sub-interface, X.25 PTP sub-interface encapsulation

NBMA network type: frame relay (except for PTP sub-interface), X.25 encapsulation (except for PTP sub-interface)

Broadcast network type: Ethernet encapsulation

By default, the network type is the point-to-multipoint network type.

**Command****Mode**

Interface configuration mode

**Usage Guide**

The broadcast type requires that the interface must have the broadcast capability.

The P2P type requires that the interfaces are interconnected in one-to-one manner.

The NBMA type requires full-meshed connections, and all interconnected routers can directly communicate with each other.

The P2MP type does not raise any requirement.

**Configuration**

The following example configures the frame relay interface network as the P2P type.

**Examples**

```
Ruijie(config)# interface Serial 1/0
Ruijie(config-Serial 1/0)# ip address 172.16.24.4 255.255.255.0
Ruijie(config-Serial 1/0)# encapsulation frame-relay
Ruijie(config-Serial 1/0)# ip ospf network point-to-point
```

The following example configures the frame relay interface network as the NBMA type.

```
Ruijie(config)# interface Serial 1/0
Ruijie(config-Serial 1/0)# ip address 172.16.24.4 255.255.255.0
Ruijie(config-Serial 1/0)# encapsulation frame-relay
Ruijie(config-Serial 1/0)# ip ospf network non-broadcast
Ruijie(config-Serial 1/0)# exit
Ruijie(config)# router ospf 20
Ruijie(config-router)# neighbor 172.16.24.2 priority 1 poll-interval 150
```

**Related  
Commands**

| Command                | Description                                                |
|------------------------|------------------------------------------------------------|
| <b>dialer map ip</b>   | Defines the mapping between IP address and dialing number. |
| <b>frame-relay map</b> | Defines the mapping between IP address and                 |

|                        |                                                                                                                     |
|------------------------|---------------------------------------------------------------------------------------------------------------------|
|                        | frame DLCI.                                                                                                         |
| <b>neighbor</b> (OSPF) | Defines the IP address of neighbor applicable to NBMA network type and point-to-multipoint non-broadcast type only. |
| <b>X25 map</b>         | Defines the mapping between IP address and X.25 network address.                                                    |

**Platform** N/A

**Description**

## 2.38 ip ospf priority

Use this command to configure the OSPF priority in interface configuration mode. Use the **no** form of this command to restore the default setting.

**ip ospf priority** *priority*

**no ip ospf priority**

| Parameter Description | Parameter       | Description                                                         |
|-----------------------|-----------------|---------------------------------------------------------------------|
|                       | <i>priority</i> | Sets the OSPF priority of the interface in the range from 0 to 255. |

**Defaults** The default is 1.

**Command**

**Mode** Interface configuration mode

**Usage Guide** The interface priority is included in the Hello packet. When DR/BDR election occurs in the OSPF broadcast type network, the device with higher priority will become the DR or BDR. If the devices have the same priority, the one with higher ID will become the DR or BDR. The device with priority 0 cannot become DR or BDR. This command is valid only for OSPF broadcast and non-broadcast network types.

**Configuration** The following example configures the priority of fastethernet 0/1 as 0.

**Examples**

```
Switch(config)#interface fastethernet 0/1
Ruijie(config-if-FastEthernet 0/1)# ipospfpriority0
```

| Related Commands | Command                | Description                                   |
|------------------|------------------------|-----------------------------------------------|
|                  | <b>ip ospf network</b> | Configures the network type of the interface. |

**Platform** N/A

**Description**



## 2.39 ip ospf retransmit-interval

Use this command to define the interval for sending the link state update (LSU) packet on the interface in interface configuration mode. Use the **no** form of this command to restore the default setting.

**ip ospf retransmit-interval** *seconds*

**ip ospf retransmit-interval**

| Parameter Description | Parameter      | Description                                                                                                                                                              |
|-----------------------|----------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <i>seconds</i> | Interval for sending the LSU packets in seconds. The range is from 1 to 65535. This interval must be greater than the round trip delay of packets between two neighbors. |

**Defaults** The default is 5.

### Command

**Mode** Interface configuration mode

**Usage Guide** After the device sends an LSU packet, the LSU packet stays in the transmission buffer queue. If no confirmation from the neighbor is obtained in the interval defined with the **ip ospf retransmit-interval** command, the LSU will be sent once again.

In serial lines or virtual links, the retransmission interval shall be slightly larger. The LSU packet retransmission interval of virtual links is defined with the area virtual-link command followed with the keyword retransmit-interval.

**Configuration Examples** The following example configures the LSU packet retransmission interval on fastEthernet 0/1 as 10 seconds.

```
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if-FastEthernet 0/1)# ip ospf retransmit-interval 10
```

| Related Commands | Command                  | Description                   |
|------------------|--------------------------|-------------------------------|
|                  | <b>area virtual-link</b> | Defines an OSPF virtual link. |

**Platform** N/A

**Description**

## 2.40 ip ospf source-check-ignore

Use this command to disable the source address check in the point-to-point link. Use the **no** form of this command to restore the default setting

**ip ospf source-check-ignore**

**no ip ospf source-check-ignore****Parameter  
Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** This function is enabled by default.

**Command**

**Mode** Interface configuration mode

**Usage Guide** For OSPF, the source address of the received packet is required to be in the same network segment with the receiving interface. However, in a point-to-point link, the addresses of two ends of the link are individually set, and they are not required to be in the same network segment. The peer address is informed during the process of point-to-point link negotiation; therefore, OSPF will check whether the source address of the packet is the informed one. If no, the OSPF regards this packet as illegal and drops it. In some applications, the addresses informed during the negotiation are shielded. You need to disable the source address check to ensure the normal establishment of OSPF neighbors. The source address check shall be never enabled, especially for the unnumbered interfaces.

**Configuration** The following example disables the source address check function in the point-to-point link.

**Examples**

```
Ruijie(config)# interface serial 1/0
Ruijie(config-if)# ip ospf source-check-ignore
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 2.41 ip ospf subvlan

Use this command to enable OSPF on super VLANs. Use the **no** form of this command to restore the default setting.

**ip ospf subvlan [all | vid]**

**no ip ospf subvlan**

**Parameter  
Description**

| Parameter | Description                                                     |
|-----------|-----------------------------------------------------------------|
| all       | Indicates that packets are allowed to be sent to all sub VLANs. |
| vid       | Specifies the sub VLAN ID. The value ranges from 1 to 4094.     |

**Defaults** The default setting takes effect only on super VLANs with OSPFv3 disabled.

**Command****Mode** Interface configuration mode

**Usage Guide** In normal cases, a super VLAN contains multiple sub VLANs. Multicast packets of a super VLAN are also sent to its sub VLANs. In this case, when OSPF multicast packets are sent over a super VLAN containing multiple sub VLANs, the OSPF multicast packets are replicated multiple times, and the device processing capability is insufficient. As a result, a large number of packets are discarded, causing the neighbor down error. In most scenarios, the OSPF function does not need to be enabled on a super VLAN. Therefore, the OSPF function is disabled by default. However, in some scenarios, the OSPF function must be run on the super VLAN, but packets only need to be sent to one sub VLAN. In this case, run this command to specify a particular sub VLAN. You must be cautious in configuring packet transmission to all sub VLANs, as the large number of sub VLANs may cause a device processing bottleneck, which will lead to the neighbor flap.

**Configuration** The following example sends OSPF multicast packets to sub VLAN 1024 of super VLAN 300.

**Examples**

```
Ruijie(config)# interface vlan 300
Ruijie(config-if-VLAN 300)# ip ospf subvlan 1024
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 2.42 ip ospf transmit-delay

Use this command to define the LSU packet transmission delay in interface configuration mode. Use the **no** form of this command to restore the default setting.

**ip ospf transmit delay** *seconds*

**no ip ospf transmit delay**

**Parameter Description**

| Parameter      | Description                                                            |
|----------------|------------------------------------------------------------------------|
| <i>seconds</i> | LSU packet transmission delay in seconds in the range from 1 to 65535. |

**Defaults** The default is 1.

**Command****Mode** Interface configuration mode

**Usage Guide** Before the LSU packet is transmitted, the Age field in all the LSAs of the packet will be increased by the value defined with the **ip ospf transmit-delay** command in interface configuration mode. The configuration of this parameter shall consider the transmission and line transmission delay of the interface. For low-rate lines, the transmission delay of the interface shall be slightly larger. The LSU packet transmission delay of the virtual link is defined with the **area virtual-link** command followed with the keyword **retransmit-interval**.

The RGOS software will resend or request resending the LSA with Age up to 3600. If no update is obtained in time, the aged LSA will be cleared from the link state database.

**Configuration** The following example configures the transmission delay of fastEthernet 0/1 as 10.

**Examples**

```
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if-FastEthernet 0/1)# ip ospf transmit-delay 10
```

**Related Commands**

| Command                  | Description                   |
|--------------------------|-------------------------------|
| <b>area virtual-link</b> | Defines an OSPF virtual link. |

**Platform** N/A  
**Description**

## 2.43 ispf enable

Use this command to enable the ISPF function. Use the **no** form of this command to disable the ISPF function.

**ispf enable**

**no ispf enable**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** ISPF is disabled by default.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** OSPF adopts the SPF algorithm to calculate the network topology within an area. SPF algorithm is run for each area independently, Incremental SPF algorithm (ISPF) is an area-based algorithm, If the topology changes, the ISPF algorithm will calculate only the affected nodes of the topology rather than calculating the entire tree, which speeds up the OSPF route convergence and saves CPU resources.

Because the ISPF algorithm is not shared among routers, each router within the same network can have a unique ISPF algorithm. To ensure a faster OSPF convergence, the ISPF function should be

enabled on every router within the network.

Enabling ISPF function only affects the choice of topology calculating algorithm for OSPF. So you can configure the delay time for the ISPF with the **timers spf** command and the **timers throttle spf** command as well.

**Configuration** The following example enables the ISPF function.

**Examples**

```
Ruijie(config)# router ospf 1
Ruijie(config-router)# ispf enable
```

The following example enables the ISPF function on the specified VRF.

```
Ruijie(config)# router ospf 1 vrf vpn1
Ruijie(config-router)# ispf enable
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform**

N/A

**Description**

## 2.44 log-adj-changes

Use this command to enable the logging of the neighbor state changes. Use the **no** form of the command to disable this function.

**log-adj-changes [ detail ]**

**no log-adj-changes [ detail ]**

**Parameter  
Description**

| Parameter     | Description                    |
|---------------|--------------------------------|
| <b>detail</b> | Records the detail of changes. |

**Defaults**

This function is enabled by default. Without the detail parameter, the system records the logs that the neighbor enters or exits the full state.

**Command**

**Mode**

Routing process configuration mode

**Usage Guide**

N/A

**Configuration** The following example logs the neighbor state changes.

**Examples**

```
Ruijie(config)# router ospf 1
Ruijie(config-router)# log-adj-changes detail
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
|---------|-------------|

|                     |                                                     |
|---------------------|-----------------------------------------------------|
| <b>show ip ospf</b> | Displays the OSPF global configuration information. |
|---------------------|-----------------------------------------------------|

**Platform** N/A

**Description**

## 2.45 max-concurrent-dd

Use this command to specify the maximum number of DD packets that can be processed (initiated or accepted) at the same time. Use the **no** form of this command to restore the default setting.

**max-concurrent-dd** *number*

**no max-concurrent-dd**

| Parameter Description | Parameter     | Description                                               |
|-----------------------|---------------|-----------------------------------------------------------|
|                       | <i>number</i> | Maximum number of DD packets in the range from 1 to 65535 |

**Defaults** The default is 5.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** When a router is exchanging data with multiple neighbors, its performance will be affected. This command is configured to limit the maximum number of DD packets that each OSPF instance can have at the same time.

**Configuration** The following example sets the maximum number of DD packets to 4.

**Examples** After the configuration, the device can initiate to interact with four neighbors and can concurrently accept the interaction. That is, the device can interact with a maximum of eight neighbors.

```
Ruijie(config)# routerospf10
Ruijie(config-router)# max-concurrent-dd4
```

| Related Commands | Command                              | Description                                                                                            |
|------------------|--------------------------------------|--------------------------------------------------------------------------------------------------------|
|                  | <b>router ospf max-concurrent-dd</b> | Sets the maximum number of neighbors allowed in concurrent interaction for all OSPF routing processes. |

**Platform** N/A

**Description**

## 2.46 max-metric

Use this command to set the maximum metric of the router-lsa, so that this routing device will not firstly be used as the transmission node by other devices in SPF computing. Use the **no** form of this command to restore the default setting.

```
max-metric router-lsa [external-lsa [ max-metric-value ]][ include-stub ][ on-startup [ seconds ]][ summary-lsa [ max-metric-value ]]
no max-metric router-lsa [external-lsa [ max-metric-value ]][ include-stub ][ on-startup [ seconds ]][ summary-lsa [ max-metric-value ]]
```

| Parameter Description | Parameter               | Description                                                                                            |
|-----------------------|-------------------------|--------------------------------------------------------------------------------------------------------|
|                       | <b>router-lsa</b>       | Configures the maximum metric (0XFFFF) of non-stub links in the Router LSA.                            |
|                       | <b>external-lsa</b>     | Uses the maximum metric instead of the external-lsa metric (including the Type-5 and Type-7).          |
|                       | <i>max-metric-value</i> | Maximum metric of the LAS. The range is 1 to 16777215. The default value is 16711680,                  |
|                       | <b>include-stub</b>     | Configures the maximum metric of the stub links in the Router LSA.                                     |
|                       | <b>on-startup</b>       | Advertises the maximum metric when the routing device starts up.                                       |
|                       | <i>seconds</i>          | Interval of advertising the maximum metric. The range is 5 to 86400. The default value is 600 seconds. |
|                       | <b>summary-lsa</b>      | Uses the maximum metric to replace the summary LSA metric. (including Type-3 and Type-4)               |

**Defaults** The normal metric LSAs are used by default.

### Command

**Mode** Routing process configuration mode

### Usage Guide

With the **max-metric router-lsa** command enabled, the maximum metric of non-stub links in the Router LSA generated by the routing device is set. The link's normal metric is restored after canceling this configuration or reaching the timer.

By default, with this command enabled, the normal metric of the stub links is still advertised, which is the output interface cost. If the **include-stub** parameter is configured, the maximum metric of the stub links will be advertised.

When the device acts as an ABR, if no interval flow transmission is expected, use the **summary-lsa** parameter to set the summary LSA as the maximum metric.

When the device acts as an ASBR device, if no external flow transmission is expected, use the **external lsa** parameter to set the external LSA as the maximum metric.

The **max-metric router-lsa** command is usually used in the following scenes:

The device is restarted, which generally makes the IGP protocol converge faster, so that other devices attempt forwarding the dataflow through the new started-up device. If the current device remains establishing a BGP routing table, the packets sent to these networks will be discarded due to

some BGP routings have not been learned. In this case, use the **on-startup** parameter to set certain delay, so that this device can serve as a transmission node after restarting.

The device is added into the network without being used for dataflow transmission. If the backup path exists, the current device is not used for the dataflow transmission. Otherwise, this device is still used to transmit the dataflow.

Remove the device from the network gracefully. With this command enabled, the current device advertises the maximum metric to all devices, as that the other devices in this network can choose the backup path to for the dataflow transmission before the current device is removed.

**i** For the OSPF implementation in the earlier versions (RFC 1247 or earlier versions), the links with the maximum metric (0xFFFF) in the LSA will not participate in the SPF calculation, that is, no dataflow will be sent to the router that have generated these LSAs.

**Configuration** The following example configures the LSA maximum metric as 100 seconds after starting the device.

**Examples**

```
Ruijie(config)# router ospf 20
Ruijie(config-router)# max-metric router-lsa on-startup 100
```

**Related Commands**

| Command             | Description                               |
|---------------------|-------------------------------------------|
| <b>show ip ospf</b> | Displays the OSPF related configurations. |

**Platform** N/A

**Description**

## 2.47 neighbor

Use this command to define the OSPF neighbor in routing process configuration mode. Use the **no** form of this command to restore the default setting.

**Neighbor** *ip-address* [ **poll-interval** *seconds* ] [ **priority** *priority* ] [ **cost** *cost* ] ]  
**no neighbor** *ip-address* [ [ **poll-interval** ] [ **priority** ] ] [ *cost* ] ]

**Parameter Description**

| Parameter                           | Description                                                                                                                                                                                                                                                          |
|-------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>ip address</i>                   | IP address of the neighbor                                                                                                                                                                                                                                           |
| <b>poll-interval</b> <i>seconds</i> | (Optional) Specifies the interval of polling neighbors in seconds. The range is from 0 to 2147483647.<br>Only the non-broadcast (NBMA) network type supports this option.                                                                                            |
| <b>priority</b> <i>priority</i>     | (Optional) Configures the priority of non-broadcast network neighbors. The range is from 0 to 255. Only the non-broadcast (NBMA) network type supports this option.                                                                                                  |
| <b>cost</b> <i>cost</i>             | (Optional) Configures the cost to each neighbor in point-to-multipoint network, not defined by default, where the cost configured on the interface will be used. The range is from 0 to 65535.<br>Only the point-to-multipoint [non-broadcast] network type supports |



|  |              |
|--|--------------|
|  | this option. |
|--|--------------|

**Defaults** No neighbor is defined by default.  
 The default neighbor polling interval is 120 seconds.  
 The default NBMA neighbor priority is 0.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** The RGOS software must explicitly configure the neighbor information for every non-broadcast network neighbor. The IP address of a neighbor must be the master IP address of that neighbor interface.

In the NBMA network, if the neighbor device becomes inactive, in other words, if the Hello packet is not received within the device dead-interval, the OSPF will send more Hello packets to the neighbor. The interval at which the Hello packets are sent is called the polling interval. When the OSPF starts to work for the first time, it sends Hello packets only to the neighbor whose priority is not 0, so that the neighbor whose priority is set as 0 will not participate in the DR/BDR election. When the DR/BDR is generated, the DR/BDR sends the Hello packets to all neighbors to establish the neighbor relationship.

Since the point-to-multipoint non-broadcast network has no broadcast capability, neighbors cannot be found dynamically. So, it is required to use this command to manually configure neighbor. In addition, it is possible to configure the cost to each neighbor through the cost option for the point-to-multipoint network type.

**Configuration Examples** The following example declares an OSPF non-broadcast network neighbor, with the IP address 172.16.24.2, priority 1 and polling interval 150 seconds.

```
Ruijie(config)# routerospf 20
Ruijie(config-router)# network 172.16.24.0 0.0.0.255 area 0
Ruijie(config-router)# neighbor 172.16.24.2 priority 1 poll-interval 150
```

**Related Commands**

| Command                 | Description                  |
|-------------------------|------------------------------|
| <b>ip ospf priority</b> | Sets the interface priority. |
| <b>ip ospf network</b>  | Sets the network type        |

**Platform Description** N/A

## 2.48 nsr

Use this command to enable the nonstop routing (NSR) function for the OSPF instance. Use the **no** form of this command to disable the NSR function.

**nsr**  
**no nsr**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** NSR is disabled by default.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** NSR enables the device to recover link state and regenerate routes without the assistance from neighbors during active/standby switchover of distributed devices or VSU system. The backup information includes adjacencies and OSPF state.

You need to enable either NSR or GR in the same OSPF process. That is, the NSR feature will be disabled after the GR feature is enabled. Similarly, the GR feature will be disabled after NSR is enabled, and the GR Helper capability is still supported.

The active/standby switchover of distributed devices or VSU system takes a period of time. If the OSPF dead interval is less than the switchover period, OSPF neighbors will be disconnected and the services will be interrupted. It is recommended to configure the OSPF dead interval longer than its default value. It is not recommended to enable the Fast Hello feature after NSR is enabled, because OSPF dead interval is less than 1 second when the Fast Hello feature is enabled and the OSPF neighbors are disconnected and NSR becomes ineffective.

**Configuration** The following example enables NSR.

**Examples**

```
Ruijie(config)#router ospf 1
Ruijie(config-router)# nsr
```

| Related Commands | Command            | Description                       |
|------------------|--------------------|-----------------------------------|
|                  | <b>router ospf</b> | Creates the OSPF routing process. |

**Platform** N/A

**Description**

## 2.49 network area

Use this command to define which interfaces run OSPF and the OSPF areas they belong to in routing process configuration mode. Use the **no** form of this command to restore the default setting.

**network** *ip-address wildcard area area-id*

**no network** *ip-address wildcard area area-id*

| Parameter Description | Parameter         | Description                 |
|-----------------------|-------------------|-----------------------------|
|                       | <i>ip-address</i> | IP address of the interface |

|                 |                                                                                                                                                          |
|-----------------|----------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>wildcard</i> | Defines the comparison bits in the IP address, with 0 for exact match and 1 for no comparison                                                            |
| <i>area-id</i>  | OSPF area identifier. An OSPF area is always associated with an address range. For easy of management, a subnet can be used as the OSPF area identifier. |

**Defaults** No OSPF area is configured by default.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** The ip-address and wildcard parameters allow associating multiple interfaces with one OSPF area. To run OSPF on an interface, it is required to include the primary IP address and secondary IP address of the interface in the IP address range defined by the network area command. You can determine the OSPF process that the interface takes part in by the means of the best match if the IP address of the interface matches the IP address ranges defined by the network command in multiple OSPF processes.

**Configuration** The following example defines:

**Examples** Three areas: 0, 1 and 172.16.16.0

The interfaces whose IP addresses fall into the 192.168.12.0/24 range to area 1

The interfaces whose IP addresses fall into the 172.16.16.0/20 range to area 2

The remaining interface being assigned to area 0.

```
Ruijie(config)# routerospf 20
Ruijie(config-router)# network172.16.16.0
0.0.15.255 area172.16.16.0
Ruijie(config-router)# network192.168.12.0
0.0.0.255 area 1
Ruijie(config-router)# network0.0.0.0 255.255.255.255 area0
```

**Related  
Commands**

| Command            | Description                       |
|--------------------|-----------------------------------|
| <b>router ospf</b> | Creates the OSPF routing process. |

**Platform** N/A

**Description**

## 2.50 overflow database

Use this command to configure the maximum number of LSAs supported by the current OSPF instance. Use the **no** form of this command to restore the default setting.

**overflow database** *number* [ **hard** | **soft** ]

**no overflow database**

| Parameter Description | Parameter          | Description                                                                                                                                           |
|-----------------------|--------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <i>number</i>      | Maximum number of LSAs. The range is from 1 to 4294967294.                                                                                            |
|                       | <b>hard   soft</b> | hard: shuts down the OSPF instance when the number of LSAs exceeds that number.<br>soft: issues an alarm when the number of LSAs exceeds that number. |

**Defaults** The maximum number of LSAs supported by the current OSPF instance is not restricted by default.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** To shut down the OSPF instance when the number of LSAs exceeds that number, use the hard parameter; otherwise, use the soft parameter.

**Configuration Examples** The following example configures that OSPF instance 10 will be shut down when there are more than 10 LSAs.

```
Ruijie(config)# router ospf 10
Ruijie(config-router)# overflow database 10 hard
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 2.51 overflow database external

Use this command to configure the maximum number of external LSAs and the waiting time from the overflow state to the normal state. Use the **no** form of this command to restore the default setting.

**overflow database external** *max-dbsize* *wait-time*

**no overflow database external**

| Parameter Description | Parameter         | Description                                                                                                                              |
|-----------------------|-------------------|------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <i>max-dbsize</i> | Maximum number of external LSAs (the value shall be the same for all routing devices in the same AS). The range is from 0 to 2147483647. |
|                       | <i>wait-time</i>  | Waiting time of the routing device from the overflow status to normal status. The range is from 0 to 2147483647.                         |

**Defaults** The maximum number of external-LSAs is not restricted by default.





If the maximum number of external-LSAs is restricted, the normal status cannot be restored when the

maximum number is exceeded.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** When the number of external-LSAs exceeds the value of max-db size, the device enters the overflow state. Then no more external-LSA will be loaded and the external-LSAs generated locally will be cleared. After wait-time expires, the device restores to the normal state and external-LSAs are reloaded.

-  When using this function, ensure that all routers of the OSPF backbone area and common areas use the same max-db size value. Otherwise, the following situations occur:
-  The link status is inconsistent on the entire network and neighbors fail to achieve the Full state.
-  Incorrect routes occur, including loops.
-  AS-External-LSAs may be frequently retransmitted.

**Configuration Examples** The following example configures that the maximum number of external LSAs is 10, and it turns to the overflow status upon timeout, and the time interval attempting to restore from the overflow state to the normal state is 3 seconds.

```
Ruijie(config)# routerospf10
Ruijie(config-router)# overflow database external10 3
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 2.52 overflow memory-lack

Use this command to allow OSPF to enter the OVERFLOW state when the memory lacks. Use the **no** form of this command to disable this function.

- overflow memory-lack**
- no overflow memory-lack**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** This function is enabled by default

**Command** Routing process configuration mode

**Mode**

**Usage Guide** The action of OSPF entering the OVERFLOW state is to discard the newly-learned external route and effectively prevent the memory from increasing.

It is possible that enabling this function causes the route loop in the whole network. To reduce that possibility, OSPF will generate a default route directing to the NULL port and this default route will exist in the OVERFLOW state.

Use the **clear ip ospf process** command to reset the OSPF and remove the OSPF OVERFLOW state.

Use the no form of this command to prevent the OSPF to enter the OVERFLOW state when the memory is insufficient, which may result in the constantly consumption of the memory resources. If the memory is exhausted to some degree, the OSPF instance will stop and all learned routes will be removed.

**Configuration Examples** The following example prevents the OSPF from entering the OVERFLOW state when the memory is insufficient.

```
Ruijie(config)# router ospf 1
Ruijie(config-router)# no overflow memory-lack
```

**Related Commands**

| Command                       | Description                    |
|-------------------------------|--------------------------------|
| <b>clear ip ospf process</b>  | Resets the OSPF instances.     |
| <b>show ip protocols ospf</b> | Displays the OSPF information. |

**Platform** N/A

**Description**

## 2.53 passive-interface

Use this command to configure the specified network interface or all interface as the passive interfaces. Use the **no** form of this command to restore the default setting.

**passive-interface** { **default** | *interface-type interface-number* | *interface-type interface-number ip-address* }

**no passive-interface** { **default** | *interface-type interface-number* | *interface-type interface-number ip-address* }

**Parameter Description**

| Parameter                                                             | Description                                                       |
|-----------------------------------------------------------------------|-------------------------------------------------------------------|
| <i>interface-type</i><br><i>interface-number</i>                      | Interface to be set as a passive interface                        |
| <b>default</b>                                                        | Sets all the interfaces as passive interfaces                     |
| <i>interface-type</i><br><i>interface-number</i><br><i>ip-address</i> | Sets the address of the specified interface as a passive address. |

**Defaults** No interface is configured as a passive interface by default. All interfaces are allowed to receive or send OSPF packets.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** To prevent other devices in the network from dynamically learning the routing information of the device, set the specified network interface of this device as a passive interface or the IP address of the specified network interface as a passive address

**Configuration Examples** The following example configures fastEthernet 0/1 as a passive interface and the IP address of the interface 1.1.1.1 as the passive address.

```
Ruijie(config)# routerospf 30
Ruijie(config-router)# passive-interface fastEthernet 0/1
Ruijie(config-router)# passive-interface fastEthernet 0/1 1.1.1.1
```

**Related Commands**

| Command                       | Description                                              |
|-------------------------------|----------------------------------------------------------|
| <b>show ip ospf interface</b> | Displays the configuration information of the interface. |

**Platform** N/A

**Description**

## 2.54 redistribute

Use this command to redistribute the external routing information. Use the **no** form of this command to restore the default setting.

**redistribute** { **bgp** | **connected** | **isis** [ *area-tag* ] | **ospf** *process-id* | **rip** | **static** } [ { **level-1** | **level-1-2** | **level-2** } ] [ **match** { **internal** | **external** [ 1|2 ] | **nssa-external** [ 1|2 ] } ] [ **metric** *metric-value* ] [ **metric-type** { 1|2 } ] [ **route-map** *route-map-name* ] [ **subnets** ] [ **tag** *tag-value* ]

**no redistribute** { **bgp** | **connected** | **isis** [ *area-tag* ] | **ospf** *process-id* | **rip** | **static** } [ { **level-1** | **level-1-2** | **level-2** } ] [ **match** { **internal** | **external** [ 1|2 ] | **nssa-external** [ 1|2 ] } ] [ **metric** *metric-value* ] [ **metric-type** { 1|2 } ] [ **route-map** *route-map-name* ] [ **subnets** ] [ **tag** *tag-value* ]

**Parameter Description**

| Parameter                       | Description                                                                                       |
|---------------------------------|---------------------------------------------------------------------------------------------------|
| <b>bgp</b>                      | Redistribution from bgp                                                                           |
| <b>connected</b>                | Redistribution from direct routes                                                                 |
| <b>isis</b> [ <i>area-tag</i> ] | Redistribution from an IS-IS instance specified in <i>area-tag</i>                                |
| <b>ospf</b> <i>process-id</i>   | Redistribution from an ospf instance specified in <i>process-id</i> in the range from 1 to 65,535 |
| <b>rip</b>                      | Redistribution from rip                                                                           |

|                                        |                                                                                                                                                                                    |
|----------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>static</b>                          | Redistribution from static routes                                                                                                                                                  |
| <b>level-1   level-1-2   level-2</b>   | Configures IS-IS route redistribution. The parameter specifies a level, and routes of this level will be redistributed. Only level-2 IS-IS routes can be redistributed by default. |
| <b>match</b>                           | Filters specified routes for configuring OSPF route redistribution. By default, all the OSPF routes are redistributed.                                                             |
| <b>metric</b> <i>metric-value</i>      | Specifies the metric of an OSPF external LSA in the range from 0 to 16777214.                                                                                                      |
| <b>metric-type</b> {1 2}               | Sets the external routing type as E-1 or E-2.                                                                                                                                      |
| <b>route-map</b> <i>route-map-name</i> | Redistribution filter rule                                                                                                                                                         |
| <b>subnets</b>                         | Redistributes the routes of non standard networks.                                                                                                                                 |
| <b>tag</b> <i>tag-value</i>            | Sets the tag value of the routes redistributed to the OSPF in the range from 0 to 4294967295.                                                                                      |

**Defaults**

Redistribution configuration is not supported by default.

If you configure OSPF redistribution, all subtype routes of the instance are redistributed.

If you configure ISIS redistribution, all level-2 subtype routes of the instance are redistributed.

In other cases, all routings of this type are redistributed.

The default metric of the redistribution BGP route is 1. The default metric of LSAs generated by routes of other types is 20.

The default value of metric-type is E-2.

No route-map is associated by default.

**Command****Mode**

Route configuration mode


**Usage Guide**


After the command is configured, the router will become an ASBR, and the related routing information is imported into the OSPF domain and broadcasted to other OSPF routers through type-5 LSAs.

When you configure is route redistribution without the level parameter, level-2 routes can be redistributed by default. In initial redistribution configuration that carries the level parameter, routes of the specified level can be redistributed. When you save the configuration containing both level 1 and level 2, they are merged into level-1-2 for convenience. For details, see the configuration examples.

When you configure OSPF router distribution without the match parameter, the OSPF routes of all sub types are redistributed by default. Then the first configured match parameter is used as the original one. Only the routes matching the specific type can be redistributed. Use the no form of this command to restore the default configuration.

When you filter routes for redistribution by following the route-map rule, the match rule of the route-map rule is specific for the original redistribution parameters. The route-map rule works only when the redistributed OSPF routes follow the match rule.

 The range of set metric is from 0 to 16777214 for the associated route-map. If the value exceeds the range, introducing a route fails.

 The following are the rules for configuring the no form of the redistribute command:1. If the **no** form specifies some parameters, restore their default values.2. If the **no** form contains no



parameter, delete the whole command. If the following configuration exists: redistribute isis 112 level-2 You can use the no redistribute isis 112 level-2 command to modify the configuration. According to preceding rules, this command restores the level-2 parameter to the default value, namely level-2. Therefore, the configuration remains the same after the no form of the preceding command is executed. redistribute isis 112 level-2 To delete the whole command, use the following command: no redistribute isis 112

**Configuration Examples** The following example redistributes routes of **ospf2** and **isis** isis-001 to the OSPF area.

```
Ruijie(config)# router ospf1
Ruijie(config-router)# redistribute ospf 2 subnets
Ruijie(config-router)# redistribute ospf2match
external 1 internal
Ruijie(config-router)# redistribute isisis-001
Ruijie(config-router)# redistribute isisis-001 level-1
```

The following example displays the output of the **show run** command.

```
router ospf 1
redistribute ospf 2 match external 1 internal subnets
redistribute isis isis-001 level-1-2
```

**Related Commands**

| Command                | Description                                                                   |
|------------------------|-------------------------------------------------------------------------------|
| <b>summary-address</b> | Configures the aggregate route for the external route of the OSPF route area. |
| <b>default-metric</b>  | Sets the default metric of the OSPF redistribution route.                     |

**Platform** N/A

**Description**

## 2.55 router ospf

Use this command to create the OSPF routing process in global configuration mode. Use the **no** form of this command to restore the default setting.

**router ospf**

**router ospf** *process-id* [ **vrf** *vrf-name* ]

**no router ospf** *process-id*

**Parameter Description**

| Parameter         | Description                                                                          |
|-------------------|--------------------------------------------------------------------------------------|
| <i>process-id</i> | ID of an OSPF process. If the process ID is not configured, process 1 is configured. |
| <i>vrf-name</i>   | VRF of the configured OSPF process for products that support the VRF.                |

**Defaults** No OSPF routing process exists by default.

**Command**

**Mode** Global configuration mode

**Usage Guide** Based on the original implementation, the RGOS10.1 adds the routing process ID to multi-instance OSPF. Different OSPF instances are mutually independent and can be approximately considered as two routing protocols that run independently.

**Configuration** The following example creates the OSPF routing process 10 within the specified vrf: vpn\_1.

**Examples**

```
Ruijie(config)# router ospf10 vrf: vpn_1
```

**Related Commands**

| Command                  | Description                                |
|--------------------------|--------------------------------------------|
| <b>show ip protocols</b> | Displays the routing protocol information. |
| <b>show ip ospf</b>      | Displays the OSPF information.             |

**Platform** N/A

**Description**

## 2.56 router ospf max-concurrent-dd

Use this command to specify the maximum number of DD packets that can be processed (initiated or accepted) at the same time. Use the **no** form of this command to restore the default setting.

**router ospf max-concurrent-dd** *number*

**no router ospf max-concurrent-dd**

**Parameter Description**

| Parameter     | Description                                                |
|---------------|------------------------------------------------------------|
| <i>number</i> | Maximum number of DD packets in the range from 1 to 65535. |

**Defaults** The default is 10.

**Command**

**Mode** Global configuration mode

**Usage Guide** When a routing device is exchanging data with multiple neighbors, its performance will be affected. This command is configured to limit the maximum number of DD packets that each OSPF instance can have (initiated or accepted) at the same time.

**Configuration** The following example sets the maximum number of DD packets to 4.

**Examples** After the configuration, the device can initiate to interact with four neighbors and can concurrently accept the interaction. That is, the device can interact with a maximum of eight neighbors.

```
Ruijie# configure terminal
Ruijie(config)# router ospfmax-concurrent-dd4
```

#### Related Commands

| Command                  | Description                                                                                            |
|--------------------------|--------------------------------------------------------------------------------------------------------|
| <b>max-concurrent-dd</b> | Sets the maximum number of the neighbors that the OSPF routing process can concurrently interact with. |

**Platform** N/A  
**Description**

## 2.57 router-id

Use this command to set the router ID. Use the **no** form of this command to restore the default setting.

**router-id** *router-id*  
**no router-id**

#### Parameter Description

| Parameter        | Description                  |
|------------------|------------------------------|
| <i>router-id</i> | Router ID in IP address form |

#### Defaults

The OSPF routing process will select the maximal interface IP address as the router ID by default. If the loopback interface of an IP address is not configured, the OSPF routing process will select the maximum IP address among all its physical interfaces as the router ID.

#### Command

**Mode** Routing process configuration mode

#### Usage Guide

You can configure any IP address as the router ID. However, the router ID should be unique. Note that once the router ID changes, the OSPF protocol will do a lot of processing. Therefore, it is not recommended to change the router ID. The device can be changed only when no LSA is generated.

**Configuration** The following example modifies the router ID to 0.0.0.36.

#### Examples

```
Ruijie(config)# router ospf 20
Ruijie(config-router)# router-id0.0.0.36
```

#### Related Commands

| Command                  | Description                                |
|--------------------------|--------------------------------------------|
| <b>show ip protocols</b> | Displays the routing protocol information. |

**Platform** N/A  
**Description**

## 2.58 show ip ospf

Use this command to display the OSPF information.

**show ip ospf** [ *process-id* ]

| Parameter Description | Parameter         | Description     |
|-----------------------|-------------------|-----------------|
|                       | <i>process-id</i> | OSPF process ID |

**Defaults** N/A

### Command

**Mode** Privileged EXEC mode

**Usage Guide** This command displays the information of the OSPF routing process.

**Configuration** The following example displays the output of the **show ip ospf** command.

### Examples

```
Ruijie# show ip ospf
Routing Process "ospf 1" with ID 1.1.1.1
Domain ID type 0x0105, value 0x010101010101
Process uptime is 4 minutes
Process bound to VRF default
Memory Overflow is enabled.
Router is not in overflow state now.
Conforms to RFC2328, and RFC1583Compatibility flag isenabled
Supports only single TOS(TOS0) routes
Enable two-way-maintain
Supports opaque LSA
Supports Graceful Restart
This router is an ASBR (injecting external routing information)
Originating router-LSAs with maximum metric
Condition:on startup for 100 seconds, State:inactive
Advertise stub links with maximum metric in router-LSAs
Advertise summary-LSAs with metric 16711680
Advertise external-LSAs with metric 16711680
Unset reason:timer expired, Originated for 100 seconds
Unset time:00:02:02.080, Time elapsed: 00:23:54.656
SPF schedule delay 5 secs, Hold time between two SPFs 10 secs
Initial LSA throttle delay 0 msec
Minimum hold time for LSA throttle 5000 msec
Maximum wait time for LSA throttle 5000 msec
Lsa Transmit Pacing timer 40 msec, 10 LS-Upd
Minimum LSA arrival 1000 msec
Pacing lsa-group:240 secs
```

```

Number of incoming current DD exchange neighbors 0/5
Number of outgoing current DD exchange neighbors 0/5
Number of external LSA 4. Checksum 0x0278E0
Number of opaque AS LSA 0. Checksum 0x000000
Number of non-default external LSA 4
External LSA database is unlimited.
Number of LSA originated 6
Number of LSA received 2
Log Neighbor Adjacency Changes :Enabled
Graceful-restart disabled
Graceful-restart helper support enabled
Number of areas attached to this router: 1
BFD enabled
Area 0 (BACKBONE)
Number of interfaces in this area is 1(1)
Number of fully adjacent neighbors in this area is 1
Area has no authentication
SPF algorithm last executed 00:01:26.640 ago
SPF algorithm executed 4 times
Number of LSA 3. Checksum 0x0204bf
Area 1 (NSSA)
Number of interfaces in this area is 1(1)
Number of fully adjacent neighbors in this area is 0
Number of fully adjacent virtual neighbors through this area is 0
Area has no authentication
SPF algorithm last executed 02:09:23.040 ago
SPF algorithm executed 4 times
Number of LSA 6. Checksum 0x028638
NSSA Translator State is disabled, Stability Interval expired in 00:00:03
    
```

| Field                    | Description                                                                                                                                                         |
|--------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Router ID                | ID of a router.                                                                                                                                                     |
| Process uptime           | Effective time of the current OSPF process (the process does not take effect when device-id is 0.0.0.0)                                                             |
| Bou to VRF               | VRF of the current OSPF                                                                                                                                             |
| Conforms to RFC2328      | Same as the RFC2328                                                                                                                                                 |
| RFC1583Compatibilit flag | Whether the RFC1583 or RFC2328 is adopted for the calculation of external routes.<br>This policy is used in the selection of best ASBR and in the route comparison. |

|                                         |                                                                                                                                                  |
|-----------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|
| Support Tos                             | Supports Only TOS0.                                                                                                                              |
| Supports opaque LSA                     | Supports opaque-LSA.                                                                                                                             |
| Graceful-restart                        | GR Restart capability described in the RFC3623 Graceful Restart                                                                                  |
| Graceful-restart helper                 | GR Help capability described in the RFC3623 Graceful Restart                                                                                     |
| Router Type                             | OSPF device type, including normal, ABR, and ASBR                                                                                                |
| SPF Delay                               | Delay before the SPF calculation is invoked after the topology change is received                                                                |
| SPF-holdtime                            | Minimum holdtime between two SPF calculations                                                                                                    |
| LsaGroupPacing                          | Parameter used for LSA pacing, checksum calculation, and aging interval                                                                          |
| Incomming current DD exchange neighbors | Number of neighbors under interaction. The incoming neighbors are those entering the exstart status for the first time.                          |
| Outgoing current DD exchange neighbors  | Number of neighbors under interaction. The outgoing neighbors are those exiting from the higher status to the exstart status for re-interaction. |
| Number of external LSA                  | Number of external LSAs stored in the database                                                                                                   |
| External LSA Checksum Sum               | Checksum sum of external LSAs stored in the database                                                                                             |
| Number of opaque LSA                    | Number of external LSAs stored in the database                                                                                                   |
| Opaque LSA Checksum Sum                 | Checksum sum of external LSAs stored in the database                                                                                             |
| Number of non-default external LSA      | Number of external LSAs with non-default routes                                                                                                  |
| External LSA database limit             | Limit of external LSA number                                                                                                                     |
| Exit database overflow state interval   | Time of exiting the overflow status                                                                                                              |
| Database overflow state                 | Whether the current OSPF process is in the overflow status                                                                                       |
| Number of LSA originated                | Number of LSAs generated                                                                                                                         |
| Number of LSA received                  | Number of LSAs received                                                                                                                          |
| Log Neighbor Adjacency Changes          | Whether the record switch for neighbor status change is enabled                                                                                  |

|                                                              |                                                                                                                             |
|--------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------|
| Number of areas attached to this router                      | Total number of areas on the devices                                                                                        |
| Area type                                                    | Area type, including normal, stub, and nssa                                                                                 |
| Number of interfaces in this area                            | Number of interfaces in this area                                                                                           |
| Number of fully adjacent neighbors in this area              | Number of Full neighbors of the area                                                                                        |
| Number of fully adjacent virtual neighbors through this area | Number of Full neighbors with virtual connections in the area. It is effective only in the non-backbone default-type areas. |
| Area authentication                                          | Authentication mode of the area                                                                                             |
| SPF algorithm last executed                                  | Time from the previous SPF calculation to the current time                                                                  |
| SPF algorithm executed times                                 | Times of SPF calculations                                                                                                   |
| Number of LSA                                                | Total number of LSAs in this area                                                                                           |
| Checksum Sum                                                 | Checksum sum of the LSAs in the area                                                                                        |
| NSSATranslatorState                                          | Whether to convert the NSSA LSA to External LSA. It is effective on the ABR OSPF process in the NSSA.                       |
| BFD enabled                                                  | Enables BFD for OSPF.                                                                                                       |

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 2.59 show ip ospf border-routers

Use this command to display the OSPF internal routing table on the ABR/ASBR.

**show ip ospf [*process-id*] border-routers**

**Parameter Description**

| Parameter         | Description     |
|-------------------|-----------------|
| <i>process-id</i> | OSPF process ID |

**Defaults** N/A

**Command**

**Mode** Privileged EXEC mode

**Usage Guide** This command displays the OSPF internal routes from the local routing device to the ABR or ASBR. The OSPF internal routing table is different from the one displayed with the show ip route command. The OSPF internal routing table has the destination address of the router ID instead of the destination network.

**Configuration** The following example displays the output of the **show ip ospf border-mrouters** command.

**Examples**

```
Ruijie# show ip ospf border-routers
OSPF internal Routing Table
Codes:i - Intra-area route, I - Inter-area route
i 1.1.1.1 [2] via 10.0.0.1, FastEthernet 0/1, ABR, ASBR, Area 0.0.0.1 select
The following table describes fields in the output.
```

| Field            | Description                                                                              |
|------------------|------------------------------------------------------------------------------------------|
| Codes            | Route type code, where “i” means intra-area routes, while “I” means inter-area routes.   |
| I                | Intra-area routes                                                                        |
| 1.1.1.1          | Displays the OSPF ID of the border device.                                               |
| [2]              | Displays the cost to the border device.                                                  |
| via 10.0.0.1     | Displays the next-hop gateway to the border device.                                      |
| FastEthernet 0/1 | Displays the interface to the border device.                                             |
| ABR, ASBR        | Displays the type of the border device, including ABR, ASBR, or both.                    |
| Area 0.0.0.1     | Displays the area that learns the route.                                                 |
| select           | Indicates the currently selected optimal path when there are multiple paths to the ASBR. |

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 2.60 show ip ospf database

Use this command to display the OSPF link state database information. Use the **no** form of this command to restore the default setting. Different formats of the command will display different LSA information.



**show ip ospf** [ *process-id* [ *area-id* | *ip-address* ] ] **database** [ { **asbr-summary** | **external** | **network** | **nssa-external** | **opaque-area** | **opaque-as** | **opaque-link** | **router** | **summary** } ] [ { **adv-router** | *ip-address* | **self-originate** } | *link-state-id* | **brief** ] [ **database-summary** | **max-age** | **detail** ]

| Parameter Description | Parameter               | Description                                                                            |
|-----------------------|-------------------------|----------------------------------------------------------------------------------------|
|                       | <i>area-id</i>          | (Optional) Displays the area ID.                                                       |
|                       | <b>adv-device</b>       | (Optional) Displays the LSA information generated by the specified advertising device. |
|                       | <i>link-state-id</i>    | (Optional) Displays the LSA information of the specified OSPF link state identifier.   |
|                       | <b>self-originate</b>   | (Optional) Displays the LSA information generated by the device itself.                |
|                       | <b>Max-age</b>          | (Optional) Displays the LSAs aged.                                                     |
|                       | <b>router</b>           | (Optional) Displays the OSPF device LSA information.                                   |
|                       | <b>network</b>          | (Optional) Displays the OSPF network LSA information.                                  |
|                       | <b>summary</b>          | (Optional) Displays the OSPF summary LSA information.                                  |
|                       | <b>asbr-summary</b>     | (Optional) Displays the ASBR summary LSA information.                                  |
|                       | <b>external</b>         | (Optional) Displays the OSPF external LSA information.                                 |
|                       | <b>nssa-external</b>    | (Optional) Displays the category 7 OSPF external LSA information.                      |
|                       | <b>opaque-area</b>      | (Optional) Displays type 10 LSAs.                                                      |
|                       | <b>opaque-as</b>        | (Optional) Displays type 11 LSAs.                                                      |
|                       | <b>opaque-link</b>      | (Optional) Displays type 9 LSAs.                                                       |
|                       | <b>database-summary</b> | (Optional) Displays the statistics of LSAs of the link state database.                 |
|                       | <b>detail</b>           | Displays detailed information of LSAs of the OSPF.                                     |
|                       | <b>brief</b>            | Displays the brief information of the LSAs of the specified type.                      |

**Defaults** N/A

**Command**

**Mode** Privileged EXEC mode

**Usage Guide** When the OSPF link state database is very large, you should display the information on the link state database by item. Proper use of commands may help OSPF troubleshooting.

**Configuration** The following example displays the output of the **show ip ospf database** command.

```

Examples
Ruijie# show ip ospf database
OSPF Device with ID (1.1.1.1) (Process ID 1)
Device Link States (Area 0.0.0.0)
Link ID      ADV Device    Age  Seq#      CkSum  Link count
1.1.1.1      1.1.1.1      2   0x80000011 0x6f39  2
3.3.3.3      3.3.3.3      120 0x80000002 0x26ac  1
Network Link States (Area 0.0.0.0)
Link ID      ADV Device    Age  Seq#      CkSum
    
```

```

192.88.88.27  1.1.1.1      120  0x80000001  0x5366
Summary Link States (Area 0.0.0.0)
Link ID      ADV Device    Age  Seq#      CkSum  Route
10.0.0.0    1.1.1.1      2   0x80000003 0x350d 10.0.0.0/24
100.0.0.0   1.1.1.1      2   0x8000000c 0x1ecb 100.0.0.0/16
Device Link States (Area 0.0.0.1 [NSSA])
Link ID      ADV Device    Age  Seq#      CkSum  Link count
1.1.1.1     1.1.1.1      2   0x80000001 0x91a2 1
      Summary Link States (Area 0.0.0.1 [NSSA])
Link ID      ADV Device    Age  Seq#      CkSum  Route
100.0.0.0   1.1.1.1      2   0x80000001 0x52a4 100.0.0.0/16
192.88.88.0 1.1.1.1      2   0x80000001 0xbb2d 192.88.88.0/24
NSSA-external Link States (Area 0.0.0.1 [NSSA])
Link ID      ADV Device    Age  Seq#      CkSum  Route      Tag
20.0.0.0    1.1.1.1      1   0x80000001 0x033c  E2 20.0.0.0/24  0
100.0.0.0   1.1.1.1      1   0x80000001 0x9469  E2 100.0.0.0/28  0
AS External Link States
Link ID      ADV Device    Age  Seq#      CkSum  Route      Tag
20.0.0.0    1.1.1.1      380 0x8000000a 0x7627  E2 20.0.0.0/24  0
100.0.0.0   1.1.1.1      620 0x8000000a 0x0854  E2 100.0.0.0/28  0

```

The following table describes the fields in the output of the **show ip ospf database** command.

| Field                     | Description                                                                             |
|---------------------------|-----------------------------------------------------------------------------------------|
| OSPF Device with ID       | Displays the Router ID.                                                                 |
| Device Link States        | Displays the device LSA information.                                                    |
| Net Link States           | Displays the network LSA information.                                                   |
| Summary Net Link States   | Displays the summary network LSA information.                                           |
| NSSA-external Link States | Displays the type 7 autonomous external LSA information.                                |
| AS External Link States   | Displays the type 5 autonomous external LSA information.                                |
| Link ID                   | Displays the Link ID.                                                                   |
| ADV Device                | Displays the ID of the device that advertises the LSAs.                                 |
| Age                       | Displays the keepalive period of the LSA.                                               |
| Seq#                      | Displays the sequence number of the LSA, which is used to check aged or duplicate LSAs. |
| Cksum                     | Displays the checksum of LSAs.                                                          |
| Link-Count                | Displays the number of links in the device LSA information.                             |
| Route                     | Displays the device information included in the LSA.                                    |
| Tag                       | Displays the tag of the LSA.                                                            |

The following example displays the output the **show ip ospf database asbr-summary** command.

```

Ruijie# show ip ospf database asbr-summary
      OSPF Device with ID (1.1.1.35) (Process ID 1)
        ASBR-Summary Link States (Area 0.0.0.1)
LS age: 47
Options: 0x2 (*|-|-|-|-|E|-)
LS Type: ASBR-summary-LSA
Link State ID: 3.3.3.3 (AS Boundary Device address)
Advertising Device: 1.1.1.1
LS Seq Number: 80000001
Checksum: 0xbe8c
Length: 28
Network Mask: /0
      TOS: 0 Metric: 1

```

The following table describes the fields in the output of the **show ip ospf database asbr-summary** command.

| Field                  | Description                                                      |
|------------------------|------------------------------------------------------------------|
| OSPF Device with ID    | Displays the router ID.                                          |
| AS Summary Link States | Displays the summary LSA information in the AS.                  |
| LS age                 | Displays the keepalive period of the LSA.                        |
| Options                | Option                                                           |
| LS Type                | Displays the type of the LSA.                                    |
| Link State ID          | Displays the link ID of the LSA.                                 |
| AdvertisingRouter      | Displays the device advertising the LSA.                         |
| LS Seq Number          | Displays the sequence number of the LSA.                         |
| Checksum               | Displays the checksum of the LSAs.                               |
| Length                 | Displays the length (in bytes) of the LSA.                       |
| Network Mask           | Displays the network mask of the route corresponding to the LSA. |
| TOS                    | TOS value, which can be only 0 now.                              |
| Metric                 | Displays the metric of the route corresponding to the LSA.       |

The following example displays the output of the **show ip ospf database external** command.

```

Ruijie# show ip ospf database external
      OSPF Device with ID (1.1.1.35) (Process ID 1)
        AS External Link States
LS age: 752
Options: 0x2 (*|-|-|-|-|E|-)
LS Type: AS-external-LSA
Link State ID: 20.0.0.0 (External Network Number)
Advertising Device: 1.1.1.1
LS Seq Number: 8000000a

```

```
Checksum: 0x7627
Length: 36
Network Mask: /24
    Metric Type: 2 (Larger than any link state path)
    TOS: 0
    Metric: 20
    Forward Address: 0.0.0.0
    External Route Tag: 0
```

The following table describes the fields in the output of the **show ip ospf database external** command.

| Field                          | Description                                                                                                                                                                                 |
|--------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| OSPF Device with ID            | Displays the router ID.                                                                                                                                                                     |
| Type-5 AS External Link States | Displays autonomous external LSA information.                                                                                                                                               |
| LS age                         | Displays the keepalive period of the LSA.                                                                                                                                                   |
| Options                        | Option                                                                                                                                                                                      |
| LS Type                        | Displays the type of the LSA.                                                                                                                                                               |
| Link State ID                  | Displays the link ID of the LSA.                                                                                                                                                            |
| Advertising Router             | Displays the device advertising the LSA                                                                                                                                                     |
| LS Seq Number                  | Displays the sequence number of the LSA.                                                                                                                                                    |
| Checksum                       | Displays the checksum of the LSAs.                                                                                                                                                          |
| Length                         | Displays the length (in bytes) of the LSA.                                                                                                                                                  |
| Network Mask                   | Displays the network mask of the route corresponding to the LSA.                                                                                                                            |
| Metric Type                    | Indicates the external link type.                                                                                                                                                           |
| TOS                            | TOS value, which can be 0 only now.                                                                                                                                                         |
| Metric                         | Displays the metric of the route corresponding to the LSA.                                                                                                                                  |
| Forward Address                | IP address through which traffic is forwarded to the destination network. If this address is 0.0.0.0, the data traffic will be forwarded to the device that generates the link state.       |
| External Route Tag             | External route tag. Each external route has a 32-byte route tag. The OSPF does not use the route tag by itself, but it will be used by other routing processes to redistribute OSPF routes. |

The following example displays the output of the **show ip ospf database network** command:

```
Ruijie# show ip ospf database network
OSPF Router with ID (1.1.1.1) (Process ID 1)
Network Link States (Area 0.0.0.0)
LS age: 572
Options:0x2 (*|-|-|-|-|E|-)
LS Type:network-LSA
```

```

Link State ID:192.88.88.27 (address of Designated Router)
Advertising Router:1.1.1.1
LS Seq Number: 80000001
Checksum:0x5366
Length: 32
Network Mask: /24
Attached Router:1.1.1.1
Attached Router:3.3.3.3

```

The following table describes the fields in the output of the **show ip ospf database network** command.

| Field               | Description                                                                                                     |
|---------------------|-----------------------------------------------------------------------------------------------------------------|
| OSPF Router with ID | Displays the router ID corresponding to the follow-up information and the process ID corresponding to the OSPF. |
| Network LinStates   | Displays the network LSA information.                                                                           |
| LS age              | Displays the keepalive period of the LSA.                                                                       |
| Options             | Option                                                                                                          |
| LS Type             | Displays the type of the LSA.                                                                                   |
| Link State ID       | Displays the link ID of the LSA.                                                                                |
| Advertising Device  | Displays the device advertising the LSA.                                                                        |
| LS Seq Number       | Displays the sequence number of the LSA.                                                                        |
| Checksum            | Displays the checksum of LSAs.                                                                                  |
| Length              | Displays the length (in bytes) of the LSA.                                                                      |
| Network Mask        | Displays the network mask of the network corresponding to the LSA.                                              |
| Attached Router     | Displays the device that is connected with the network.                                                         |

The following example displays the output of the **show ip ospf database device** command:

```

Ruijie# show ip ospf database router
OSPF Router with ID (1.1.1.1) (Process ID 1)
Router Link States (Area 0.0.0.0)
LS age: 322
Options:0x2 (*|---|---|E|)
Flags:0x3 :ABR ASBR
LS Type:router-LSA
Link State ID:1.1.1.1
Advertising Router:1.1.1.1
LS Seq Number: 80000012
Checksum:0x6d3a
Length: 48
Number of Links: 2
Link connected to:Stub Network
(Link ID) Network/subnet number: 100.0.1.1
(Link Data) Network Mask: 255.255.255.255

```

```
Number of TOS metrics: 0
TOS 0 Metric: 0
```

The following table describes the fields in the output of the **show ip ospf database device** command.

| Field                 | Description                                                  |
|-----------------------|--------------------------------------------------------------|
| OSPF Device with ID   | Displays the router ID.                                      |
| Device Link States    | Displays the device LSA information.                         |
| LS age                | Displays the keepalive period of the LSA.                    |
| Options               | Option                                                       |
| Flag                  | Flag                                                         |
| LS Type               | Displays the type of the LSA.                                |
| Link State ID         | Displays the link ID of the LSA.                             |
| Advertising Router    | Displays the device advertising the LSA.                     |
| LS Seq Number         | Displays the sequence number of the LSA.                     |
| Checksum              | Displays the checksum of LSAs.                               |
| Length                | Displays the length (in bytes) of the LSA.                   |
| Number of Links       | Displays the number of links associated with the device.     |
| Link connected to     | Displays what the link is connected to and the network type. |
| (Link ID)             | Link identifier                                              |
| (Link Data)           | Link data                                                    |
| Number of TOS metrics | TOS value, supporting TOS0 only                              |
| TOS 0 Metrics         | TOS0 metric                                                  |

The following example displays the output of the **show ip ospf database summary** command:

```
Ruijie# show ip ospf database summary
      OSPF Device with ID (1.1.1.1) (Process ID 1)
        Summary Link States (Area 0.0.0.0)
LS age: 499
Options: 0x2 (*|-|-|-|-|E|-)
LS Type: summary-LSA
Link State ID: 10.0.0.0 (summary Network Number)
```

```
Advertising Device: 1.1.1.1
LS Seq Number: 80000004
Checksum: 0x330e
Length: 28
Network Mask: /24
    TOS: 0 Metric: 11
```

The following table describes the fields in the output of the **show ip ospf database summary** command.

| Field                   | Description                                                      |
|-------------------------|------------------------------------------------------------------|
| OSPF Router with ID     | Displays the router ID.                                          |
| Summary Net Link States | Displays the summary network LSA information.                    |
| LS age                  | Displays the keepalive period of the LSA.                        |
| Options                 | Option                                                           |
| LS Type                 | Displays the type of the LSA.                                    |
| Link State ID           | Displays the link ID of the LSA.                                 |
| Advertising Router      | Displays the device advertising the LSA.                         |
| LS Seq Number           | Displays the sequence number of the LSA.                         |
| Checksum                | Displays the checksum of LSAs.                                   |
| Length                  | Displays the length (in bytes) of the LSA.                       |
| Network Mask            | Displays the network mask of the route corresponding to the LSA. |
| TOS                     | TOS value, supporting only 0 now                                 |
| Metric                  | Displays the metric of the route corresponding to the LSA.       |

The following example displays the output of the **show ip ospf database nssa-external** command:

```
Ruijie# show ip ospf database nssa-external
    OSPF Device with ID (1.1.1.1) (Process ID 1)
NSSA-external Link States (Area 0.0.0.1 [NSSA])
LS age: 1
Options: 0x0 (*|-|-|-|-|-|-)
LS Type: AS-NSSA-LSA
Link State ID: 20.0.0.0 (External Network Number For NSSA)
Advertising Device: 1.1.1.1
```

```

LS Seq Number: 80000001
Checksum: 0x033c
Length: 36
Network Mask: /24
    Metric Type: 2 (Larger than any link state path)
    TOS: 0
    Metric: 20
    NSSA: Forward Address: 100.0.2.1
    External Route Tag: 0

```

The following table describes the fields in the output of the **show ip ospf database nssa-external** command.

| Field                     | Description                                                                                                                                                                           |
|---------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| OSPF Router with ID       | Displays the router ID.                                                                                                                                                               |
| NSSA-external Link States | Displays the type 7 autonomous external LSA information.                                                                                                                              |
| LS age                    | Displays the keepalive period of the LSA.                                                                                                                                             |
| Options                   | Option                                                                                                                                                                                |
| LS Type                   | Displays the type of the LSA.                                                                                                                                                         |
| Link State ID             | Displays the link ID of the LSA.                                                                                                                                                      |
| Advertising Router        | Displays the device advertising the LSA.                                                                                                                                              |
| LS Seq Number             | Displays the sequential number of the LSA.                                                                                                                                            |
| Checksum                  | Displays the checksum of the LSAs.                                                                                                                                                    |
| Length                    | Displays the length (in bytes) of the LSA.                                                                                                                                            |
| Network Mask              | Displays the network mask of the route corresponding to the LSA.                                                                                                                      |
| Metric Type               | Displays the metric type.                                                                                                                                                             |
| TOS                       | TOS value, which can be 0 only now.                                                                                                                                                   |
| Metric                    | Displays the metric of the route corresponding to the LSA.                                                                                                                            |
| NSSA:Forward Address      | IP address through which traffic is forwarded to the destination network. If this address is 0.0.0.0, the data traffic will be forwarded to the device that generates the link state. |



|                    |                                                                                                                                                                                             |
|--------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| External Route Tag | External route tag. Each external route has a 32-byte route tag. The OSPF does not use the route tag by itself, but it will be used in redistributing OSPF routes by other routing process. |
|--------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

The following example displays the output of the **show ip ospf database external** command:

```
Ruijie# show ip ospf database external
      OSPF Device with ID (1.1.1.1) (Process ID 1)
      AS External Link States
LS age: 1290
Options: 0x2 (*|-|-|-|-|E|-)
LS Type: AS-external-LSA
Link State ID: 20.0.0.0 (External Network Number)
Advertising Device: 1.1.1.1
LS Seq Number: 8000000a
Checksum: 0x7627
Length: 36
Network Mask: /24
      Metric Type: 2 (Larger than any link state path)
      TOS: 0
      Metric: 20
      Forward Address: 0.0.0.0
      External Route Tag: 0
```

The following table describes the fields in the output of the **show ip ospf database external** command.

| Field                          | Description                                              |
|--------------------------------|----------------------------------------------------------|
| OSPF Device with ID            | Displays the router ID.                                  |
| Type-7 AS External Link States | Displays the type 7 autonomous external LSA information. |
| LS age                         | Displays the keepalive period of the LSA.                |
| Options                        | Option                                                   |
| LS Type                        | Displays the type of the LSA.                            |
| Link State ID                  | Displays the link ID of the LSA.                         |
| Advertising Router             | Displays the device advertising the LSA.                 |
| LS Seq Number                  | Displays the sequence number of the LSA.                 |

|                    |                                                                                                                                                                                             |
|--------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Checksum           | Displays the checksum of the LSAs.                                                                                                                                                          |
| Length             | Displays the length (in bytes) of the LSA.                                                                                                                                                  |
| Network Mask       | Displays the network mask of the route corresponding to the LSA.                                                                                                                            |
| Metric Type        | Displays the metric type.                                                                                                                                                                   |
| TOS                | TOS value, which can be 0 only now.                                                                                                                                                         |
| Metric             | Displays the metric of the route corresponding to the LSA.                                                                                                                                  |
| Forward Address    | IP address through which traffic is forwarded to the destination network. If this address is 0.0.0.0, the data traffic will be forwarded to the device that generates the link state.       |
| External Route Tag | External route tag. Each external route has a 32-byte route tag. The OSPF does not use the route tag by itself, but it will be used in redistributing OSPF routes by other routing process. |

The following example displays the output of the **show ip ospf database database-summary** command:

```
Ruijie# show ip ospf database database-summary
OSPF process 1:
Device Link States      : 4
Network Link States    : 2
Summary Link States    : 4
ASBR-Summary Link States : 0
AS External Link States : 4
NSSA-external Link States: 2
```

The following table describes the fields in the output of the command **show ip ospf database database-summary**.

| Field             | Description                             |
|-------------------|-----------------------------------------|
| OSPF Process      | OSPF process ID                         |
| Router Link       | Number of device LSAs in the area       |
| Network Link      | Number of network LSAs in the area      |
| Summary Link      | Number of summary LSAs in the area      |
| ASBR-Summary Link | Number of ASBR summary LSAs in the area |
| AS External Link  | Number of NSSA LSAs in the area         |

|                    |                                 |
|--------------------|---------------------------------|
| NSSA-external Link | Number of NSSA LSAs in the area |
|--------------------|---------------------------------|

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 2.61 show ip ospf interface

Use this command to display the OSPF-associated interface information.

**show ip ospf [ process-id ] interface [ interface-type interface-number | brief ]**

**Parameter Description**

| Parameter               | Description                                  |
|-------------------------|----------------------------------------------|
| <i>process-id</i>       | OSPF process ID                              |
| <i>interface-type</i>   | (Optional) type of the specified interface   |
| <i>interface-number</i> | (Optional) number of the specified interface |
| brief                   | Displays the summary of the interface.       |

**Defaults** N/A

**Command**

**Mode** Privileged EXEC mode

**Usage Guide** This command displays the OSPF information on the interface.

**Configuration** The following example displays the output of the **show ip ospf interface fastEthernet 0/1** command:

**Examples**

```
Ruijie# show ip ospf interface fastEthernet0/1
FastEthernet 0/1 is up, line protocol is up
Internet Address 192.88.88.27/24, Ifindex 4, Area 0.0.0.0, MTU 1500
Matching network config: 192.88.88.0/24
Process ID 1, Router ID 1.1.1.1, Network Type BROADCAST, Cost: 1
Transmit Delay is 1 sec, State DR, Priority 1,BFD enabled
Designated Router (ID) 1.1.1.1, Interface Address 192.88.88.27
Backup Designated Router (ID) 3.3.3.3, Interface Address 192.88.88.72
Timer intervals configured,Hello 10,Dead 40,Wait 40,Retransmit 5
Hello due in 00:00:03
Neighbor Count is 1, Adjacent neighbor count is 1
Crypt Sequence Number is 70784
Hello received 1786 sent 1787, DD received 13 sent 8
```

```
LS-Req received 2 sent 2, LS-Upd received 29 sent 53
LS-Ack received 46 sent 23, Discarded 1
```

The following table describes the fields in the output of the **show ip ospf interface serial 1/0** command.

| Field                        | Description                                                                    |
|------------------------------|--------------------------------------------------------------------------------|
| FastEthernet 0/1 State       | State of the network interface; UP means normal working and Down means faults. |
| Internet Address             | Interface IP address                                                           |
| Area                         | OSPF area of the interface                                                     |
| MTU                          | Corresponding MTU                                                              |
| Matching network config      | Network area configured for the corresponding OSPF                             |
| Process ID                   | Corresponding process ID                                                       |
| Router ID                    | OSPF router id                                                                 |
| Network Type                 | OSPF network type                                                              |
| Cost                         | OSPF interface cost                                                            |
| Transmit Delay is            | OSPF interface transmit delay                                                  |
| State                        | DR/BDR state ID                                                                |
| Priority                     | Priority of the interface                                                      |
| Designated Router(ID)        | DR ID of the interface                                                         |
| DR's Interface address       | Address of the DR of the interface                                             |
| Backup designated device(ID) | Router ID of the BRD of the interface                                          |
| BDR's Interface address      | Address of the BDR of the interface                                            |
| Time intervals configured    | Hello, Dead, Wait, and Retransmit intervals of the interface                   |
| Hello due in                 | Time when the previous Hello is sent                                           |
| Neighbor count               | Total number of neighbors                                                      |
| Adjacent neighbor count      | Number of Full neighbors                                                       |
| Crypt Sequence Number        | The corresponding md5 authentication number of the interface                   |
| Hello received send          | Statistics on the Hello packets sent and received                              |
| DD received send             | Statistics on the DD packets sent and received                                 |
| LS-Req received send         | Statistics on the LS request packets sent and received                         |
| LS-Upd received send         | Statistics on the LS update packets sent and received                          |
| LS-Ack received send         | Statistics on the LS response packets sent and received                        |
| Discard                      | Statistics on the discarded OSPF packets                                       |
| BFD enabled                  | Enables BFD for OSPF.                                                          |

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 2.62 show ip ospf ispf

Use this command to display the ISPF calculation count in the OSPF area.

**show ip ospf [ *process-id* ] ispf**

| Parameter Description | Parameter         | Description |
|-----------------------|-------------------|-------------|
|                       | <i>process-id</i> |             |

**Defaults** N/A

**Command**

**Mode** Privileged EXEC mode

**Usage Guide** This command displays the ISPF calculation count in the OSPF area within the last 30 minutes and total ISPF calculation count by now.

**Configuration** The following displays the ISPF calculation count in the OSPF area.

**Examples**

```
Ruijie# show ip ospf 1 ispf
```

```
OSPF process 1:
```

```
Area_id      30min_counts  Total_counts
0             32             1235
1             6              356
```

Field Description:

| Field        | Description                                                         |
|--------------|---------------------------------------------------------------------|
| Area_id      | OSPF area ID.                                                       |
| 30min_counts | ISPF calculation count in the OSPF area within the last 30 minutes. |
| Total_counts | Total count of ISPF calculation.                                    |

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 2.63 show ip ospf neighbor

Use this command to display the OSPF neighbor list.

```
show ip ospf [ process-id ] neighbor [ statistics ] { [ interface-type interface-number ] | [ neighbor-id ]
| [ detail ] }
```

| Parameter Description | Parameter                                        | Description                                                             |
|-----------------------|--------------------------------------------------|-------------------------------------------------------------------------|
|                       | <b>detail</b>                                    | (Optional) Displays the neighbor details.                               |
|                       | <i>interface-type</i><br><i>interface-number</i> | (Optional) Displays the neighbor information of the specified interface |
|                       | <i>neighbor-id</i>                               | (Optional) Displays the information of the specified neighbor           |
|                       | <b>statistics</b>                                | (Optional) Displays the neighbor statistics.                            |

**Defaults** N/A

### Command

**Mode** Privileged EXEC mode

**Usage Guide** This command displays neighbor information usually used to check whether the OSPF is running normally.

**Configuration** The following example displays the output of the **show ip ospf neighbor** command.

### Examples

```
Ruijie# show ip ospf neighbor
OSPF process 1, 1 Neighbors, 1 is Full:
Neighbor ID   Pri   State     BFD State   Dead Time   Address           Interface
3.3.3.3       1     Full/BDR  Up           00:00:32    192.88.88.72     FastEthernet 0/1

Ruijie# show ip ospf neighbor detail
Neighbor 3.3.3.3, interface address 192.88.88.72
In the area 0.0.0.0 via interface FastEthernet 0/1
Neighbor priority is 1, State is Full, 11 state changes
DR is 192.88.88.27, BDR is 192.88.88.72
Options is 0x52 (*|O|-|EA|-|-|E|-)
Dead timer due in 00:00:32
Neighbor is up for 05:11:27
Database Summary List 0
Link State Request List 0
Link State Retransmission List 0
Crypt Sequence Number is 0
Thread Inactivity Timer on
Thread Database Description Retransmission off
Thread Link State Request Retransmission off
```

```
Thread Link State Update Retransmission off
Thread Poll Timer on
Graceful-restart helper disabled
BFD session state up
```

The following table describes the fields in the output of the **show ip ospf neighbor** command.

| Field                         | Description                                                                                                                                                                                                                                                                               |
|-------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Neighbor ID                   | Neighbor ID                                                                                                                                                                                                                                                                               |
| Pri                           | Neighbor priority (for selection of DR)                                                                                                                                                                                                                                                   |
| State                         | Neighbor status                                                                                                                                                                                                                                                                           |
| Dead Time                     | Remaining time for the neighbor to enter the Dead status                                                                                                                                                                                                                                  |
| Address                       | Interface address of the neighbor                                                                                                                                                                                                                                                         |
| Interface                     | Interface of the neighbor                                                                                                                                                                                                                                                                 |
| interface address             | Interface address of the neighbor device                                                                                                                                                                                                                                                  |
| In the area                   | Displays the area that learns the neighbor.                                                                                                                                                                                                                                               |
| via interface                 | Displays the interface that learns the neighbor                                                                                                                                                                                                                                           |
| Neighbor priority             | Priority of the neighbor OSPF                                                                                                                                                                                                                                                             |
| State                         | OSPF neighbor connection state. FULL means the stable state; DR indicates that the neighbor is the designated device; BDR indicates that the neighbor is the backup designated device; DROTHER indicates that the neighbor is not a DR/BDR. Point-to-point network type has no DR or DBR. |
| State changes times           | Times of state changes                                                                                                                                                                                                                                                                    |
| Dead Time                     | Dead time of the neighbor                                                                                                                                                                                                                                                                 |
| DR                            | Interface address of the DR elected by the neighbor device (that is, the DR field of the Hello packet)                                                                                                                                                                                    |
| BDR                           | Interface address of the BDR elected by the neighbor device (that is, the BDR field of the Hello packet)                                                                                                                                                                                  |
| Options                       | Hello packet E-bit option, where 0 indicates that the area is a STUB area; 2 indicates that the area is not a STUB area.                                                                                                                                                                  |
| Dead timer due in             | Dead time of the neighbor device                                                                                                                                                                                                                                                          |
| Neighbor up time              | Period from when the device is discovered till now                                                                                                                                                                                                                                        |
| Database Summary List         | Statistics on the neighbor DD packets                                                                                                                                                                                                                                                     |
| LinkState Request List        | Statistics on the neighbor LS request packets                                                                                                                                                                                                                                             |
| LinkState Retransmission List | Statistics on the neighbor re-transmit packets                                                                                                                                                                                                                                            |
| Crypt Sequence Number         | Area MD5 authentication code                                                                                                                                                                                                                                                              |

|                                            |                                                                         |
|--------------------------------------------|-------------------------------------------------------------------------|
| Thread Inactivity Timer                    | Status of invalid neighbor timer                                        |
| Thread Database Description Retransmission | Status of DD packet timer of the interface                              |
| ThreadLinkState Request Retransmission     | Status of LS request packet timer of the interface                      |
| ThreadLinkState Update Retransmission      | Status of LS update packet timer of the interface                       |
| Thread Poll Timer                          | Poll Timer start status of the static neighbor                          |
| Graceful-restart helper                    | Whether it is able to function as the GR Helper of a specified neighbor |

| <b>Related Commands</b> | Command | Description |
|-------------------------|---------|-------------|
|                         | N/A     | N/A         |

**Platform** N/A  
**Description**

## 2.64 show ip ospf route

Use this command to display the OSPF routes.

**show ip ospf [ process-id ] route [ count | ip-address mask ]**

| <b>Parameter Description</b> | Parameter              | Description                                                                 |
|------------------------------|------------------------|-----------------------------------------------------------------------------|
|                              | <i>process-id</i>      | OSPF process ID. All OSPF routes will be displayed without an ID specified. |
|                              | <b>count</b>           | Statistics of various OSPF routes                                           |
|                              | <i>ip-address mask</i> | Statistics of routes which have a specified prefix and mask.                |

**Defaults** N/A

**Command Mode** Privileged mode

**Usage Guide** This command displays the OSPF routing information. The count option displays the OSPF routing statistics.



**Configuration** The following example displays the output of the **show ip ospf route** command.

```

Examples OSPF process 1:
Codes: C - connected, D - Discard , O - OSPF,
IA - OSPF inter area N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external
type 2
E1 - OSPF external type 1, E2 - OSPF external type 2
E2 100.0.0.0/24 [1/20] via 192.88.88.126, FastEthernet 0/1
C 192.88.88.0/24 [1] is directly connected, FastEthernet 0/1, Area 0.0.0.1
    
```

The following table describes the fields in the output of the **show ip ospf route** command.

| Field        | Description                                               |
|--------------|-----------------------------------------------------------|
| codes        | Route type and corresponding abbreviation and description |
| 100.0.0.0/24 | Route prefix                                              |
| [1]          | Route cost                                                |
| via          | Route next hop and interface                              |

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 2.65 show ip ospf spf

Use this command to display the routing count in the OSPF area.

**show ip ospf [ process-id ] spf**

| Parameter Description | Parameter         | Description     |
|-----------------------|-------------------|-----------------|
|                       | <i>process-id</i> | OSPF process ID |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** This command displays the routing counts within the latest 30 minutes in the OSPF area and current routing total counts.

**Configuration** The following example displays the output of the **show ip ospf [process-id] spf** command:

```

Examples Ruijie# show ip ospf 1 spf

OSPF process 1:
    
```

| Area_id | 30min_counts | Total_counts |
|---------|--------------|--------------|
| 0       | 32           | 1235         |
| 1       | 6            | 356          |

The following table describes the fields in the output of the **show ip ospf [process-id] spf** command.

| Field        | Description                                      |
|--------------|--------------------------------------------------|
| Area_id      | OSPF area ID                                     |
| 30min_counts | OSPF routing counts within the latest 30 minutes |
| Total_counts | Total counts of the OSPF routing till now        |

#### Related Commands

| Command             | Description                |
|---------------------|----------------------------|
| <b>show ip ospf</b> | Displays the OSPF summary. |

**Platform** N/A  
**Description**

## 2.66 show ip ospf summary-address

Use this command to display the converged route of all redistributed routes.

**show ip ospf [process-id] summary-address**

#### Parameter Description

| Parameter         | Description                                                                                               |
|-------------------|-----------------------------------------------------------------------------------------------------------|
| <i>process-id</i> | ID of the OSPF process. All OSPF routing processes will be displayed if this parameter is not configured. |

**Defaults** N/A

#### Command

**Mode** Privileged EXEC mode

**Usage Guide** This command is valid only on the NSSA ABR, and displays only the routes with local aggregation operations.

**Configuration** The following example displays the output of the **show ip ospf summary-address** command:

#### Examples

```
Ruijie# show ip ospf summary-address
OSPF Process 1, Summary-address:
172.16.0.0/16, Metric 20, Type 2, Tag 0, Match count 3, advertise
```

| Field           | Description                               |
|-----------------|-------------------------------------------|
| Summary Address | IP address to be aggregated               |
| Summary Mask    | Mask to be aggregated                     |
| Advertise       | Whether to advertise the aggregated route |

|                    |                                                             |
|--------------------|-------------------------------------------------------------|
| Status             | Whether the aggregation range takes effect                  |
| Aggregated subnets | Number of external routes included in the aggregation range |

#### Related Commands

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 2.67 show ip ospf topology

Use this command to display topology information for OSPF SPF calculation.

**show ip ospf** [ *process-id* [ *area-id* ] ] **topology** [ **adv-router** *adv-router-id* [ *router-id* ]  
| *self-originate* [ *router-id* ] ]

#### Parameter Description

| Parameter             | Description                                                                                                                             |
|-----------------------|-----------------------------------------------------------------------------------------------------------------------------------------|
| <i>process-id</i>     | OSPF process ID.                                                                                                                        |
| <i>area-id</i>        | Displayed area ID                                                                                                                       |
| <b>topology</b>       | Displays a specified OSPF process and topology information summary of an area.                                                          |
| <b>adv-router</b>     | Displays topology information of a specified device. This specified device must be a directly connected neighbor of the current device. |
| <b>self-originate</b> | Displays topology information of the current device.                                                                                    |

**Defaults** N/A

#### Command

**Mode** Privileged EXEC mode

**Usage Guide** This command helps users to understand OSPF SPF calculation topology information and troubleshoot faults caused by topology planning. If the user enables fast reroute calculation, this command displays information related to fast reroute calculation.

**Configuration** The following example displays the result of the show **ip ospf topology** command:

#### Examples

```
Ruijie# show ip ospf topology
OSPF Router with ID (1.1.1.1) (Process ID 1)
Router Topology States (Area 0.0.0.0)
+1.1.1.1
  +2.2.2.2
    +4.4.4.4
      +3.3.3.3
```

```

+4.4.4.4

+2.2.2.2
  +1.1.1.1
    +3.3.3.3
  +4.4.4.4
    +3.3.3.3

+3.3.3.3
  +1.1.1.1
    +2.2.2.2
  +4.4.4.4
+2.2.2.2

```

The following example displays the result of the **show ip ospf topology self-originate** command:

```

Ruijie# show ip ospf topology self-originate
OSPF Router with ID (1.1.1.1) (Process ID 1)
Router Topology States (Area 0.0.0.0)
1.1.1.1
  Self to Destination Metric: 0
Parent Node: -
Child Node:2.2.2.2
  Primary next-hop: -
  Backup next-hop: -
  Backup Neighbor: -

2.2.2.2
  Self to Destination Metric: 1
Parent Node: 1.1.1.1
Child Node:-
  Primary next-hop: FastEthernet 0/1 via 10.0.0.1
  Backup next-hop: FastEthernet 0/2 via 10.0.1.1
  Backup Neighbor: 2.2.2.2
Neighbor to Destination Metric: 0
Neighbor to Self Metric: 10
Neighbor to Primary Neighbor: 0
Self to Neighbor Metric: 1

```

The description of every field displayed by **show ip ospf topology self-originate** is as follows:

| Field                      | Description                                                    |
|----------------------------|----------------------------------------------------------------|
| Self to Destination Metric | Metric from the root node to the current destination node      |
| Parent Node                | Parent node of the current destination node                    |
| Child Node                 | Chile node of the current destination node                     |
| Primary next-hop           | Primary next hop for reaching the current the destination node |

|                                |                                                                 |
|--------------------------------|-----------------------------------------------------------------|
| Backup next-hop                | Backup next hop for reaching the current the destination node   |
| Backup Neighbor                | Backup neighbor for reaching the current the destination node   |
| Neighbor to Destination Metric | Metric from the backup neighbor to the current destination node |
| Neighbor to Self Metric        | Metric from the backup neighbor to the root node                |
| Neighbor to Primary Neighbor   | Metric from the backup neighbor to the primary neighbor         |
| Self to Neighbor Metric        | Metric from the root node to the backup neighbor                |

#### Related Commands

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 2.68 show ip ospf virtual-link

Use this command to display the OSPF virtual link information.

**show ip ospf [ *process-id* ] virtual-link [ *ip-address* ]**

#### Parameter Description

| Parameter         | Description                                                                                               |
|-------------------|-----------------------------------------------------------------------------------------------------------|
| <i>process-id</i> | ID of the OSPF process. All OSPF routing processes will be displayed if this parameter is not configured. |
| <i>ip-address</i> | Associated ID of a virtual link neighbor                                                                  |

**Defaults** N/A

#### Command

**Mode** Privileged EXEC mode

**Usage Guide** If no virtual link is configured, the command displays the neighbor status and other related information. The show ip ospf neighbor command does not display the neighbor of the virtual link.

**Configuration** The following is the output of the **show ip ospf virtual-links** command:

#### Examples

```
Ruijie# show ip ospf virtual-links
Virtual Link VLINK0 to device 1.1.1.1 is up
Transit area 0.0.0.1 via interface FastEthernet 0/1
Local address 10.0.0.37/32
Remote address 10.0.0.27/32
Transmit Delay is 1 sec, State Point-To-Point,
```

```
Timer intervals configured, Hello 10, Dead 40, Wait 40, Retransmit 5
Hello due in 00:00:05
Adjacency state Full
```

The following table describes the fields in the output.

| Field                         | Description                                                 |
|-------------------------------|-------------------------------------------------------------|
| Virtual Link VLINK0 to router | Displays the virtual link neighbors and their status.       |
| Virtual Link State            | Displays the virtual link state.                            |
| Transit area                  | Displays the transit area of the virtual link.              |
| via interface                 | Displays the associated interface of the virtual link.      |
| Local address                 | Local interface address                                     |
| Remote Address                | Peer interface address                                      |
| Transmit Delay                | Displays the transmit delay of the virtual link.            |
| State                         | Interface state                                             |
| Time intervals configured     | Hello, Dead, Wait, and Retransmit interval of the interface |
| Adjacency State               | Neighbor state, where FULL means the stable state           |

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 2.69 summary-address

Use this command to configure the aggregate route out of the OSPF routing domain. Use the **no** form of this command to restore the remove the aggregate route.

**summary-address** *ip-address net-mask* [ **not-advertise** | **tag value** | **cost cost** ]

**no summary-address** *ip-address net-mask* [ **not-advertise** | **tag** | **cost** ]

**Parameter Description**

| Parameter            | Description                                                                                                    |
|----------------------|----------------------------------------------------------------------------------------------------------------|
| <i>ip address</i>    | IP address of the aggregate route                                                                              |
| <i>net-mask</i>      | Network mask of the aggregate route                                                                            |
| <b>not-advertise</b> | Does not advertise the aggregate route. If the parameter is not configured, the aggregate route is advertised. |
| <b>tag value</b>     | Sets the tag value of an aggregate route. The range is from 0 to 4,294,967,295.                                |
| <b>cost cost</b>     | Cost value of the aggregate route. The range is from 0 to 16,777,214.                                          |

**Defaults** No aggregate route is configured by default.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** When routes are redistributed by another routing process into the OSPF routing process, every route is advertised to the OSPF-enabled device separately in external LSAs. If the incoming routes are continuous addresses, the autonomous border device can advertise only one aggregate route, reducing the scale of routing table greatly.

Unlike the **area range** command, the **area range** command aggregates inter-OSPF-area routes, while the **summary-address** command aggregates external routes of the OSPF routing domain. For the NSSA, the **summary-address** command is valid only on the NSSA ABR now, and aggregates only redistributed routes.

**Configuration** The following example generates an external aggregate route 100.100.0.0/16.

**Examples**

```
Ruijie(config)# router ospf20
Ruijie(config-router)# summary-address100.100.0.0 255.255.0.0
Ruijie(config-router)# redistribute static subnets
Ruijie(config-router)# network200.2.2.0 0.0.0.255 area 1
Ruijie(config-router)# network172.16.24.0 0.0.0.255area 0
Ruijie(config-router)# arealnssa
```

**Related Commands**

| Command             | Description                                                  |
|---------------------|--------------------------------------------------------------|
| <b>area-range</b>   | Configures route convergence on the OSPF area border device. |
| <b>redistribute</b> | Redistributes routes of other routing processes.             |

**Platform** N/A

**Description**

## 2.70 timers lsa arrival

Use this command to configure the time delay for the same LSA received. Use the **no** form of this command to restore the default setting.

**timers lsa arrival arrival-time**

**no timers lsa arrival**

**Parameter Description**

| Parameter           | Description                                                                                                       |
|---------------------|-------------------------------------------------------------------------------------------------------------------|
| <i>arrival-time</i> | Configures the time delay when receiving the same LSA. The range is from 0 to 600000 in the unit of milliseconds. |

**Defaults** The default is 1000.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** No action is done when the same LSA is received within the specified time.

**Configuration** The following example configures the time delay for the same LSA as 2seconds.

**Examples**

```
Ruijie(config)# routerospf1
Ruijie(config-router)# timers arrival-time 2000
```

**Related  
Commands**

| Command             | Description                    |
|---------------------|--------------------------------|
| <b>show ip ospf</b> | Displays the OSPF information. |

**Platform** N/A

**Description**

## 2.71 timers pacing lsa-group

Use this command to configure the LSA grouping and then refresh the whole groups as well as the update interval for the aged link state. Use the **no** form of this command to restore the default setting.

**timers pacing lsa-group** *seconds*

**no timers pacing lsa-group**

**Parameter  
Description**

| Parameter      | Description                                                                                                                      |
|----------------|----------------------------------------------------------------------------------------------------------------------------------|
| <i>seconds</i> | Parameter used for LSA pacing, checksum calculation, and aging interval.<br>The range is from 10 to 1800 in the unit of seconds. |

**Defaults** The default is 30.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** Each LSA has its own update and aging time (LSA age). If you update and age LSAs separately, many CPU resources will be consumed. To effectively use CPU resources, you can update LSAs of a device in batches.

You can use this command to modify the value of seconds, whose default value is 240 seconds. This parameter needs not to be adjusted often. The optimal group pacing interval is inversely proportional to the number of LSAs that need to be calculated. For example, if you have approximately 10000 LSAs in the database, decreasing the pacing interval would be better. If the switch has a small database (40 to 100 LSAs), increasing the pacing interval to 10 to 20 minutes might be better.



**Configuration** The following example configures the pacing time as 120 seconds.

**Examples**

```
Ruijie(config)# deviceospf 20
Ruijie (config-router)# timers paing lsa-group 120
```

**Related  
Commands**

| Command             | Description                    |
|---------------------|--------------------------------|
| <b>show ip ospf</b> | Displays the OSPF information. |

**Platform**

N/A

**Description**

## 2.72 timers pacing lsa-transmit

Use this command to transmit the LSA grouping updating. Use the **no** form of this command to restore the default setting.

**timers pacing lsa-transmit** *transmit-time transmit-count*

**no timers pacing lsa-transmit**

**Parameter  
Description**

| Parameter             | Description                                                                        |
|-----------------------|------------------------------------------------------------------------------------|
| <i>transmit-time</i>  | Configures the interval of sending the LSA grouping. The range is from 10 to 1000. |
| <i>transmit-count</i> | Configures the number of LS-UPD packets per group. The range is from 1 to 200.     |

**Defaults**

The default configurations are as follows:

Transmit-time: 40 milliseconds.

Transmit-count: 1

**Command****Mode**

Routing process configuration mode

**Usage Guide**

If there are a large number of LSAs and the load on the system is heavy, you can properly use the **transmit-time** and **transmit-count** to inhibit the flooding LS-UPD packet number in the network.

If the CPU and network bandwidth loads are not too much, reduce **transimi-time** and increase **transimit-count** to quicken the environment convergence.

**Configuration**

The following example sets the interval of sending the LS-UPD packets as 50ms, the packets number as 20.

**Examples**

```
Ruijie(config)# routerospf1
Ruijie(config-router)# timers pacing lsa-transmit 50 20
```

**Related**

| Command | Description |
|---------|-------------|
|---------|-------------|

| Commands            |                                                                 |
|---------------------|-----------------------------------------------------------------|
| <b>show ip ospf</b> | Displays the OSPF process information, including the router ID. |

**Platform** N/A

**Description**

## 2.73 timers spf

Use this command to configure the delay for SPF calculation after the OSPF receives the topology change as well as the interval between two SPF calculations. Use the **no** form of this command to restore the default setting.

**timers spf** *spf-delay* *spf-holdtime*

**no timers spf**

| Parameter Description | Parameter           | Description                                                                                                                                                                                                                 |
|-----------------------|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <i>spf-delay</i>    | Defines the SPF calculation waiting period in seconds. The range is from 0 to 2147483647. After receiving the topology change, the OSPF routing process must wait for the specified period to start the SPF calculation.    |
|                       | <i>spf-holdtime</i> | Defines the interval between two SPF calculations in seconds. The range is from 0 to 2147483647. When the waiting time is up but the interval between two calculations is still elapsing, the SPF calculation cannot start. |

**Defaults** For the RGOS not supporting the `timers throttle spf` command, the default values are as follows:

`spf-delay`: 5seconds;

`spf-holdtime`: 10 seconds.

For the RGOS supporting the `timers throttle spf` command, by default, the `timers spf` command takes no effect. `spf-delay` depends on the default configuration of the `timers throttle spf` command.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** Smaller values of *spf-delay* and *spf-holdtime* mean that OSPF adapts to the topology change faster, and the network convergence period is shorter, but this will occupy more CPU of the router.

 The configurations of the **timers spf command** and the `timers throttle spf` command may overwrite each other.

**Configuration Examples** The following example configures the delay and holdover period of the OSPF as 3 and 9 seconds respectively.

```
Ruijie(config)# deviceospf20
```

```
Ruijie(config-router)# timersspf 3 9
```

**Related  
Commands**

| Command                    | Description                                                                                                                                              |
|----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>show ip ospf</b>        | Displays the configuration information of the ospf.                                                                                                      |
| <b>timers throttle spf</b> | Configures the exponential back off delay for SPF calculation. The command is recommended to replace the timers spf command because it is more powerful. |

**Platform** N/A

**Description**

## 2.74 timers throttle lsa all

Use this command to configure the exponential back off algorithm for the LSA. Use the **no** form of this command to restore the default setting.

**timers throttle lsa all** *delay-time hold-time max-wait-time*

**no timers throttle lsa all**

**Parameter  
Description**

| Parameter            | Description                                                                                                                                                  |
|----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>delay-time</i>    | Configures the time delay of generating the LSA first. The range is from 1 to 600000.                                                                        |
| <i>hold-time</i>     | Configures the minimum interval of refreshing the LSA between the first time and second time. The range is from 1 to 600000.                                 |
| <i>max-wait-time</i> | Configures the maximum interval of successive refreshing the LSA., which determines whether the LSA is refreshed successively. The range is from 1 to 600000 |

**Defaults**

The default configurations are as follows:

**Delay-time:** 0 millisecond,

**Hold-time:** 5000 milliseconds,


**Max-wait-time:** 5000 milliseconds.

**Command**
**Mode**

Routing process configuration mode

**Usage Guide**

If high convergence performance is required for the link change, the value of delay-time can be relatively small. if you expect to reduce the CPU consumption, increase appropriately several values.

 The value of hold-time cannot be smaller than that of delay-time, and the value of max-wait-time cannot be smaller than that of hold-time.

**Configuration Examples** The following example configures the first delay as 10ms, hold-time as 1second and the longest delay as 5seconds.

```
Ruijie(config)# routerospf1
Ruijie(config-router)# timers throttle lsa all 10 1000 5000
```

**Related Commands**

| Command             | Description                                        |
|---------------------|----------------------------------------------------|
| <b>show ip ospf</b> | Displays the configuration information of the ospf |

**Platform** N/A  
**Description**

## 2.75 timers throttle route

Use this command to configure the delay time of route calculation on receiving the ASBR summary LSA and the external summary LSA. Use the **no** form of this command to restore the default setting.

**timers throttle route { inter-area *ia-delay* | ase *ase-delay* }**

**no timers throttle route { inter-area | ase }**

**Parameter Description**

| Parameter         | Description                                                                                                                                                                                                                                              |
|-------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>inter-area</b> | Calculates the inter area routes.                                                                                                                                                                                                                        |
| <i>ia-delay</i>   | Sets the delay time of the inter-area route calculation, in the range from 0 to 600,000 in the unit of milliseconds. On receiving the ASBR summary LSA, the router will not calculate the inter-area routes until the <i>ia-delay</i> time runs out.     |
| <b>ase</b>        | Calculates the external routes.                                                                                                                                                                                                                          |
| <i>ase-delay</i>  | Defines the delay time of the external route calculation, in the range from 0 to 600,000 in the unit of milliseconds. On receiving the external summary LSA, the router will not calculate the external routes until the <i>ase-delay</i> time runs out. |

**Defaults** The default values are as follows:  
 ia-delay: 0,  
 ase-delay: 0,

**Command**

**Mode** Routing process configuration mode

**Usage Guide** The default setting is recommended if the network needs to be fast converged. For the instable network where multiple inter-area and external routes exist, if you want to optimize the route

calculation and save the CPU resources, increase the delay time.

**Configuration** The following example sets the .delay time of the inter-area route calculation to one second.

**Examples**

```
Ruijie(config)# router ospf 1
Ruijie(config-router)# timers throttle route inter-area 1000
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform**

N/A

**Description**

## 2.76 timers throttle spf

Use this command to configure the topology change information for OSPF, including the delay for SPF calculation as well as the interval between two SPF calculations in routing process configuration mode. Use the **no** form of this command to restore the default setting.

**timers throttle spf** *spf-delay spf-holdtime spf-max-waittime*

**no timers throttle spf**

**Parameter  
Description**

| Parameter               | Description                                                                                                                                                                                                                             |
|-------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>spf-delay</i>        | Defines the SPF calculation waiting period, in the unit of milliseconds, in the range from 1 to 600,000. After receiving the topology change, the OSPF routing process must wait for the specified period to start the SPF calculation. |
| <i>spf-holdtime</i>     | Defines the interval between two SPF calculations in seconds in the range from 1 to 600,000.                                                                                                                                            |
| <i>spf-max-waittime</i> | Defines the maximum interval between two SPF calculations, in milliseconds in the range from 1 to 60,000.                                                                                                                               |

**Defaults**

The default configurations are as follows:

spf-delay: 1000ms;

spf-holdtime: 5000ms;

spf-max-waittime: 10000ms.

**Command**

**Mode**

Routing process configuration mode

**Usage Guide**

The *spf-delay* parameter indicates the delay time of the topology change to the SPF calculation.

The *spf-holdtime* parameter indicates the minimum interval between two SPF calculations. Then, the interval of the consecutive SPF calculations is at least twice as the last interval until it reaches to *spf-max-waittime*. If the interval between two SPF calculations has exceeded the required value, the

SPF calculation will restart from spf-holdtime.

Smaller spf-delay and spf-holdtime values can make the topology converge faster. A greater spf-max-waittime value can reduce the system resource consumption of SPF calculation. Those configurations can be flexibly adjusted according to the actual stability of the network topology. Compared with the timers spf command, this command is more flexible. It speeds up the SPF calculation convergence, and reduces the system resource consumption of SPF calculation due to the topology change. To this end, the timers throttle spf command is recommended.

- i** The value of spf-holdtime cannot be smaller than the value of spf-delay, or the value of spf-holdtime will be set to be equal to the value of spf-delay;
- The value of spf-max-waittime cannot be smaller than the value of spf-holdtime, or the value of spf-max-waittime will be set to be equal to the value of spf-holdtime automatically;
- The configurations of the timers spf command and the timers throttle spf command may overwrite each other.
- If both the timers spf command and the timers throttle spf command are not configured, the default value of the timers throttle spf command is used.

**Configuration Examples** The following example configures the delay and holdtime and the maximum time interval of the OSPF as 5ms, 1000ms and 90000ms respectively. If the topology changes consecutively, the SPF calculation intervals are: 5ms, 1second, 3 seconds, 7 seconds, 15 seconds, 31 seconds, 63 seconds, 89 seconds, 179 seconds, 179+90seconds...

```
Ruijie(config)# routerospf20
Ruijie(config-router)# timersspf 5 1000 90000
```

**Related Commands**

| Command      | Description                                                                                                                                                                                   |
|--------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| show ip ospf | Displays the configuration information of OSPF                                                                                                                                                |
| timers spf   | Configures the SPF calculation delay. This command is supported in versions earlier than RGOS 10.4. It is recommended to replace the timers spf command with the timers throttle spf command. |

**Platform** N/A

**Description**

## 2.77 two-way-maintain

Use this command to enable the OSPF two-way-maintain function. Use the **no** form of this command to disable this function.

- two-way-maintain**
- no two-way-maintain**

| Parameter | Parameter | Description |
|-----------|-----------|-------------|
|-----------|-----------|-------------|

|                    |     |     |
|--------------------|-----|-----|
| <b>Description</b> |     |     |
|                    | N/A | N/A |

**Defaults** This function is enabled by default.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** In the large-scale network, partial packets delay or dropped may exist due to much CPU and memory are occupied caused by lots of packet transmission. If the Hello packets are handled over dead-interval, the corresponding adjacency will be disconnected. In this case, you can enable the two-way-maintain function for the packets such as DD, LSU, LSR and LSAck packets from a neighbor in the network (except for the Hello packets), avoiding the neighbor invalidation caused by delayed or dropped Hello packets.

**Configuration** The following example disables the OSPF two-way-maintain function.

**Examples**

```
Ruijie(config)# routerospf1
Ruijie(config-router)# notwo-way-maintain
```

|                         |                |                                                    |
|-------------------------|----------------|----------------------------------------------------|
| <b>Related Commands</b> | <b>Command</b> | <b>Description</b>                                 |
|                         | show ip ospf   | Displays the configuration information of the OSPF |

**Platform Description** N/A

### 3 OSPFv3 Commands

#### 3.1 area authentication

Use this command to configure OSPFv3 area authentication. Use the **no** form of this command to restore the default setting.

**area** *area-id* **authentication ipsec spi** *spi* [ **md5** | **sha1** ] [ **0** | **7** ] *key*  
**no area** *area-id* **authentication**

| Parameter Description | Parameter      | Description                                                                     |
|-----------------------|----------------|---------------------------------------------------------------------------------|
|                       | <i>area-id</i> | Specifies an area ID.<br>It can be an integer or the prefix of an IPv4 address. |
|                       | <i>spi</i>     | Specifies a security parameter index, in the range from 256 to 4294967295.      |
|                       | <b>md5</b>     | Specifies a message digest 5 (MD5) authentication mode.                         |
|                       | <b>sha1</b>    | Specifies a secure hash algorithm 1 (SHA1) authentication mode.                 |
|                       | <b>0</b>       | Indicates that a key is displayed in a plain-text format.                       |
|                       | <b>7</b>       | Indicates that a key is displayed in a cipher-text format.                      |
|                       | <i>key</i>     | Specifies an authentication key.                                                |

**Defaults** Authentication is not performed by default.

**Command Mode** Routing process configuration mode

**Usage Guide** RGOS supports three authentication modes:

- null authentication mode, which is configured when authentication is not needed
- MD5 authentication mode
- SHA1 authentication mode

If OSPFv3 area authentication is configured, the configuration takes effect on all interfaces ( except for those of virtual links ) in the area. Interface authentication configuration, however, takes precedence over area authentication configuration.

**Configuration Examples** The following example specifies MD5 authentication for area 1 where OSPFv3 routing processes reside, and sets the authentication password to aaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaa.

```
Ruijie(config-router)# area 1 authentication ipsec spi 300 md5
aaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaa
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|------------------|---------|-------------|



|                                         |                                        |
|-----------------------------------------|----------------------------------------|
| <b>ipv6 ospf authentication</b>         | Specifies interface authentication.    |
| <b>area virtual-link authentication</b> | Specifies virtual link authentication. |

**Platform** N/A

**Description**

## 3.2 area default-cost

Use this command to set the cost of the default route for the ABR in the stub/NSSA area. Use the **no** form of this command to restore the default setting.

**area** *area-id* **default-cost** *cost*

**no area** *area-id* **authentication**

| Parameter Description | Parameter      | Description                                                                      |
|-----------------------|----------------|----------------------------------------------------------------------------------|
|                       | <i>area-id</i> | Area ID of the stub/NSSA area.<br>It can be an integer or an IPv4 prefix.        |
|                       | <i>cost</i>    | Cost of the default route of the stub/NSSA area in the range from 0 to 16777215. |

**Defaults** The default cost is 1.

**Command Mode** Routing process configuration mode.

**Usage Guide** This command can only work in the ABR connected to the stub area.

**Configuration Examples** The following example sets the cost of the default route of stub/NSSA area 50 to 100.

```

ipv6 router ospf 1
area 50 stub
area 50 default-cost 100

```

| Related Commands | Command          | Description       |
|------------------|------------------|-------------------|
|                  | <b>area stub</b> | Sets a stub area. |

**Platform** N/A

**Description**

## 3.3 area encryption

Use this command to enable encryption authentication for an OSPFv3 area. Use the **no** form of this command to restore the default setting.

**area** *area-id* **encryption ipsec spi** *spi* **esp null** [ **md5** | **sha1** ] [ **0** | **7** ] *key*  
**no area** *area-id* **encryption**

**Parameter Description**

| Parameter      | Description                                                                     |
|----------------|---------------------------------------------------------------------------------|
| <i>area-id</i> | Specifies an area ID.<br>It can be an integer or the prefix of an IPv4 address. |
| <i>spi</i>     | Specifies a security parameter index, in the range from 256 to 4294967295.      |
| <b>null</b>    | Specifies the null encryption mode.                                             |
| <b>md5</b>     | Specifies the MD5 authentication mode.                                          |
| <b>sha1</b>    | Specifies the SHA1 authentication mode.                                         |
| <b>0</b>       | Indicates that a key is displayed in the plain-text format.                     |
| <b>7</b>       | Indicates that a key is displayed in the cipher-text format.                    |
| <i>Key</i>     | Specifies an authentication key.                                                |

**Defaults** Encryption authentication is not performed by default.

**Command Mode** Routing process configuration mode

**Usage Guide** RGOS supports the null encryption mode and two authentication modes: MD5 and SHA1. If encryption authentication is configured for an OSPFv3 area, the configuration takes effect on all interfaces (except for those of virtual links) in the area. Encryption authentication configuration on interfaces, however, takes precedence over that of the OSPFv3 area.

**Configuration Examples** The following example specifies null encryption and MD5 authentication for area 1 where OSPFv3 routing processes reside, and sets the authentication password to

```
aaaaaaaaaaaaaaaaaaaaaaaaaaaaa.
Ruijie(config-router)# area 1 encryption ipsec spi 300 esp null md5
aaaaaaaaaaaaaaaaaaaaaaaaaaaaa
```

**Related Commands**

| Command                             | Description                                       |
|-------------------------------------|---------------------------------------------------|
| <b>ipv6 ospf encryption</b>         | Specifies interface encryption authentication.    |
| <b>area virtual-link encryption</b> | Specifies virtual link encryption authentication. |

**Platform Description** N/A

### 3.4 area nssa

Use this command to configure an NSSA area. Use the **no** form of this command to remove the

NSSA area configuration.

```
area area-id nssa [ no-redistribution ] [ default-information-originate [ metric value ]
[ metric-type type ] ] [ no-summary ] [ translator [ stability-interval seconds | always ] ]
no area area-id nssa [ no-redistribution ] [ default-information-originate [ metric ] [ metric-type ] ]
[ no-summary ] [ translator [ stability-interval | always ] ]
```

**Parameter  
Description**

| Parameter                            | Description                                                                                                                                                                                                    |
|--------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>area-id</i>                       | ID of the NSSA area.                                                                                                                                                                                           |
| <b>no-redistribution</b>             | (Optional) Used when the router is an NSSA Area Border Router (ABR) and you want the redistribute command to import routes only into the normal areas, but not into the NSSA area.                             |
| <b>default-information-originate</b> | (Optional) Used to generate a Type 7 default into the NSSA area. This keyword takes effect only on the NSSA ABR or the NSSA Autonomous System Boundary Router (ASBR).                                          |
| <b>metric value</b>                  | (Optional) Specifies the OSPF default LSA metric. The range is from 0 to 16,777,214, and the default value is 1.                                                                                               |
| <b>metric-type type</b>              | (Optional) Specifies the OSPF metric type for default routes. The value can be 1 or 2 and the default value is 2.                                                                                              |
| <b>no-summary</b>                    | (Optional) Allows an area to be an NSSA but not have summary routes injected into it.                                                                                                                          |
| <b>translator</b>                    | (Optional) Configures the NSSA ABR translator.                                                                                                                                                                 |
| <b>stability-interval seconds</b>    | (Optional) Configures the stability interval after the role of an NSSA ABR is changed from translator to non-translator. The range is from 0 to 2,147,483,647, the default value is 40 and the unit is second. |
| <b>always</b>                        | (Optional) Configures the NSSA ABR to be always translator. The default NSSA ABR is a non-translator.                                                                                                          |

**Defaults** No NSSA area is defined by default.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** The **default-information-originate** parameter is used to generate a default Type 7 LSA. There is a small difference between NSSA ABR and NSSA ASBR on which this command can take effect. On the ABR, the Type-7 default route generates no matter whether a default route exists in the routing table, while on the ASBR, the Type-7 default route generates only when a default routes exists in the routing table.

The **no-redistribution** parameter is used when the router is an NSSA Area Border Router (ABR) and you want the redistribute command to import routes only into the normal areas, but not into the NSSA area. This parameter is generally used on the device acting as both ASBR and ABR in NSSA area to prevent the routes from being imported into the NSSA area.

The **no-summary** parameter allows an area to be an NSSA but not have summary LSAs injected into

it.

In an NSSA area involving two or more ABR devices, by default, the ABR of larger router ID is elected as the translator for Type-7 to Type-5 translation. You can configure the **translator always** parameter to specify an ABR to be always the translator.

When the translator of an ABR device is replaced, the ABR still has the translation capability within the **stability-interval** time. After the stability-interval timer expires and the ABR is not elected as the translator again, then the LSAs translated from Type-7 to Type-5 will be removed from the AS.

To prevent route loop, the Type-5 LSAs aggregated by the Type-7 are removed once the ABR device loses the translator capability, instead of waiting for the stability-interval expiration.

It is recommended to configure the **translator always** parameter on only one ABR device in an NSSA area.

**Configuration** The following example sets the area 1 as an NSSA area.

**Examples**

```
Ruijie(config)# ipv6 router ospf 1
Ruijie(config-router)# area 1 nssa
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform  
Description**

N/A

### 3.5 area-range

Use this command to set the range of the converged inter-area addresses. Use the **no** form of this command to restore the default setting.

**area** *area-id* **range** *ipv6-prefix/prefix-length* [ **advertise**|**not-advertise** ]

**no area** *area-id* **range** *ipv6-prefix/prefix-length*

**Parameter  
Description**

| Parameter                        | Description                                                                                     |
|----------------------------------|-------------------------------------------------------------------------------------------------|
| <i>area-id</i>                   | ID of the area in which the addresses are converged.<br>It can be an integer or an IPv4 prefix. |
| <i>ipv6-prefix/prefix-length</i> | Range of the converged addresses.                                                               |
| <b>advertise</b>                 | Advertises the range of converged addresses.                                                    |
| <b>not-advertise</b>             | The range of the converged addresses is not advertised.<br>By default, the function is enabled. |

**Defaults** No converged inter-area address range is defined by default.

**Command  
Mode** Routing process configuration mode

**Usage Guide** This command applies only to ABR. Use this command to converge multiple routes of an area into one route and advertise it to other areas. This command applies only to ABR. Use this command to converge multiple routes of an area into one route and advertise it to other areas. The routing information combination only takes place on the area border. The specific routing information is seen on the intra-area routers, but only one converged route can be seen on the devices in other areas. By configuring the two options of advertise and not-advertise, you can decide whether to advertise the convergence range to enable blocking and filtering. By default, the range is advertised to the outside. The option cost can be used to set the metric value of convergence routing. A number of route convergence commands can be defined. In this way, the number of the routes in the OSPF AS is reduced. Particularly for a large network, the forwarding performance will be improved. When a number of routes are converged, and the containment relationship exists between items, the area range converged is determined by the longest match principle.

**Configuration** The following example converges the routes in area 1.

**Examples**

```
ipv6 router ospf 1
area 1 range 2001:abcd:1:2::/64
```

| Related Commands | Command | Description           |
|------------------|---------|-----------------------|
|                  |         | <b>summary-prefix</b> |

**Platform** N/A  
**Description**

### 3.6 area stub

Use this command to create a stub area or set its attributes. Use the **no** form of this command to restore the default setting.

**area area-id stub [ no-summary ]**  
**no area area-id stub [ no-summary ]**

| Parameter Description | Parameter         | Description                                                                                                                                                                        |
|-----------------------|-------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       |                   | <i>area-id</i>                                                                                                                                                                     |
|                       | <b>no-summary</b> | This option applies only to the ABR in the stub area, indicating that the ABR only advertises the type 3 LSA indicating the default route to the stub area, not other type 3 LSAs. |

**Defaults** No stub area is defined by default.

**Command** Routing process configuration mode

**Mode**

**Usage Guide** If an area is at the end of an entire network, it can be designed as the stub area, in which all the routers must execute the `area stub` command. If the area is designed as the stub area, it cannot learn the AS external routing information (type 5 LSAs). In practical application, the external routing information takes a large proportion of the link state database, so the devices in the stub area can only learn very little routing information, thus reducing the system resources required for the running of the OSPFv3 protocol.

By default, a type 3 LSA advertisement indicating default routing on the ABR in the stub area is generated, then the devices in the stub area can get to the outside of the AS.

If a totally stub area needs to be configured, just select the keyword **no-summary** when executing the `area stub` command on the ABR.

**Configuration** The following example enables the ABR in stub area 10 to advertise the default route to the stub area.

**Examples**

```
ipv6 router ospf 1
area 10 stub
area 10 stub no-summary
```

**Related Commands**

| Command                        | Description                                          |
|--------------------------------|------------------------------------------------------|
| <code>area default-cost</code> | Sets the cost of the default route in the stub area. |

**Platform** N/A

**Description**




### 3.7 area virtual-link

Use this command to create a virtual link or set its parameters. Use the **no** form of this command to restore the default setting.

```
area area-id virtual-link router-id [ hello-interval seconds ] [ dead-interval seconds ]
[ retransmit-interval seconds ] [ transmit-delay seconds ] [ instance instance-id ] [ authentication
ipsec spi spi [ md5 | sha1 ] [ 0 | 7 ] key ] [ encryption ipsec spi spi esp null [ md5 | sha1 ] [ 0 | 7 ]
key ]
no area area-id virtual-link router-id [ hello-interval ] [ dead-interval ] [ retransmit-interval ]
[ transmit-delay ] [ instance ] [ authentication ] [ encryption ]
```

**Parameter Description**

| Parameter                            | Description                                                                                                                          |
|--------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------|
| <i>area-id</i>                       | ID of the area in which the virtual link is located.<br>It can be an integer or an IPv6 prefix.                                      |
| <i>Router-id</i>                     | Neighbor router ID of the virtual link.                                                                                              |
| <b>hello-interval</b> <i>seconds</i> | Sets the interval to send the hello message on the local virtual link interface in the range from 1 to 65535 in the unit of seconds. |

|                                                                                        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|----------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>dead-interval</b> <i>seconds</i>                                                    | Interval for the local interface of the virtual link to wait before considering that the neighbor fails.<br>It is in the range from 1 to 65535 in the unit of seconds.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>retransmit-interval</b> <i>seconds</i>                                              | Interval for retransmitting LSA on the local interface of the virtual link .<br>The range is from 1 to 65535 in the unit of seconds.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>transmit-delay</b> <i>seconds</i>                                                   | Delay on the local interface of the virtual link in sending LSA.<br>The range is from 1 to 65535 in the unit of seconds.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>instnace</b> <i>instance-id</i>                                                     | Specifies the instance corresponding to the virtual link. No virtual link can be established between different instances. Range: 0.-255                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>authentication ipsec spi</b><br><i>spi [ md5   sha1 ] [ 0   7 ] key</i>             | Specifies OSPFv3 authentication.<br><br> Authentication configuration on two neighboring devices must be consistent. The <b>service password-encryption</b> command enables a key to be displayed in the cipher-text format.<br><br><i>spi</i> specifies a security parameter index, in the range from 256 to 4294967295.<br><b>md5</b> specifies the MD5 authentication mode.<br><b>sha1</b> specifies the SHA1 authentication mode.<br>0 indicates that a key is displayed in the plain-text format.<br>7 indicates that a key is displayed in the cipher-text format.<br><i>key</i> specifies an authentication key.                                                                 |
| <b>encryption ipsec spi spi</b><br><b>esp null [ md5  sha1 ] [ 0 7 ]</b><br><i>key</i> | Specifies OSPFv3 encryption authentication.<br><br> Authentication configuration on two neighboring devices must be consistent. The <b>service password-encryption</b> command enables a key to be displayed in the cipher-text format.<br><br><i>spi</i> specifies a security parameter index, in the range from 256 to 4294967295.<br><b>null</b> specifies the null encryption mode.<br><b>md5</b> specifies the MD5 authentication mode.<br><b>sha1</b> specifies the SHA1 authentication mode.<br>0 indicates that a key is displayed in the plain-text format.<br>7 indicates that a key is displayed in the cipher-text format.<br><i>key</i> specifies an authentication key. |
| <b>authentication ipsec spi</b><br><i>spi [ md5   sha1 ] [ 0   7 ] key</i>             | Specifies OSPFv3 authentication.<br><br> Authentication configuration on two neighboring devices must be consistent. The <b>service password-encryption</b> command enables a key to be displayed in the cipher-text format.<br><br><i>spi</i> specifies a security parameter index, in the range from 256 to 4294967295.<br><b>md5</b> specifies the MD5 authentication mode.<br><b>sha1</b> specifies the SHA1 authentication mode.<br>0 indicates that a key is displayed in the plain-text format.<br>7 indicates that a key is displayed in the cipher-text format.                                                                                                              |

|  |                                             |
|--|---------------------------------------------|
|  | <i>key</i> specifies an authentication key. |
|--|---------------------------------------------|

**Defaults**


No virtual link is defined by default  
hello-interval: 10 seconds;  
dead-interval: four times of the hello-interval;  
retransmit-interval: five seconds;  
transmit-interval: one second.  
Authentication and encryption are not performed by default.


**Command Mode**

Routing process configuration mode

**Usage Guide**

In the OSPFv3 AS, all the areas must be connected with the backbone area to ensure that they can learn the routes of the whole OSPFv3 AS. If an area cannot be directly connected with the backbone area, it can connect it through a virtual link.

 The virtual link shall not be in the stub/NSSA area.

 **dead-interval**, **dead-interval** and **instance** shall be configured consistently on both sides of the virtual link neighbors, otherwise neighboring relationship cannot be set up between the virtual neighbors.

**Configuration** The following example configures a virtual link.

**Examples**

```
Ruijie(config)# ipv6 router ospf 1
Ruijie(config-router)# area 1 virtual-link 192.1.1.1
```

**Related Commands**

| Command                             | Description                                      |
|-------------------------------------|--------------------------------------------------|
| <b>show ipv6 ospf</b>               | Displays the OSPFv3 routing process information. |
| <b>show ipv6 ospf neighbor</b>      | Displays the OSPFv3 neighbor information.        |
| <b>show ipv6 ospf virtual-links</b> | Displays the OSPFv3 virtual link information.    |

**Platform** N/A

**Description**

### 3.8 auto-cost

The metric of the OSPFv3 protocol is the interface-based bandwidth. Use this command to enable the bandwidth-based interface metric calculation or modify the reference bandwidth. Use the **no** form of this command to restore the default setting.

**auto-cost** [ **reference-bandwidth** *ref-bw* ]

**no auto-cost** [ **reference-bandwidth** ]



| Parameter Description | Parameter                                   | Description                                              |
|-----------------------|---------------------------------------------|----------------------------------------------------------|
|                       | <b>reference-bandwidth</b><br><i>ref-bw</i> | Reference bandwidth in the range from 1 to 4294967 Mbps. |

**Defaults** The interface metric is calculated based on the reference bandwidth, which is 100Mbps.

**Command Mode** Routing process configuration mode

**Usage Guide** Use **no auto-cost reference-bandwidth** to restore it to the default reference bandwidth. You can use **ipv6 ospf cost** in the interface configuration mode to set the cost of the specified interface, and it takes precedence over the metric calculated based on the reference bandwidth.

**Configuration Examples** The following example changes the reference bandwidth to 10M.

```
ipv6 router ospf 1
auto-cost reference-bandwidth 5
```

| Related Commands | Command               | Description                                      |
|------------------|-----------------------|--------------------------------------------------|
|                  | <b>ipv6 ospf cost</b> | Sets the cost of an interface.                   |
|                  | <b>show ipv6 ospf</b> | Displays the OSPFv3 routing process information. |

**Platform Description** N/A

### 3.9 bdf all-interfaces

Use this command to enable the BDF on all OSPFv3 interfaces. Use this command to enable the BDF on all OSPFv3 interfaces in the routing configuration mode. Use the **no** form of this command to restore the default setting.

**bdf all-interfaces**

**no bdf all-interfaces**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** Routing process configuration mode.

**Usage Guide** The OSPFv3 protocol dynamically discovers the neighbors through the Hello packets. With the BFD function enabled, BFD sessions will be established for the neighbors that match the FULL rules and the status of the neighbors will be detected through the BFD mechanism. Once the BFD neighbor fails, the OSPFv3 will perform the network convergence immediately.

You can also use the interface configuration mode command **ipv6 ospf bfd [disable]** to enable or disable the BFD function on the specified interface, which takes precedence over the command **bfd all-interfaces** in the routing process configuration mode.

**Configuration** N/A

**Examples**

| Related Commands | Command                                   | Description                                                                               |
|------------------|-------------------------------------------|-------------------------------------------------------------------------------------------|
|                  | <b>ipv6 router ospf</b> <i>process-id</i> | Enables the OSPFv3 routing process and enter into the routing process configuration mode. |
|                  | <b>ipv6 ospf bfd [ disable ]</b>          | Enables or disable the BFD on the specified OSPFv3 interfaces.                            |

**Platform** N/A

**Description**

### 3.10 clear ipv6 ospf process

Use this command to clear and restart the OSPF process.

**clear ipv6 ospf { process | process-id }**

| Parameter Description | Parameter         | Description                                   |
|-----------------------|-------------------|-----------------------------------------------|
|                       | <i>process-id</i> | OSPF process ID, in the range from 1 to 65535 |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** In normal case, it is not necessary to use this command.

Use the parameter *process-id* to clear only one specific OSPFv3 instance. If no *process-id* is specified, all the OSPFv3 instances will be cleared.

**Configuration** The following example restarts the OSPF process.

**Examples**

```
enble
clear ipv6 ospf process
```

| Related | Command | Description |
|---------|---------|-------------|
|---------|---------|-------------|

|                 |     |     |
|-----------------|-----|-----|
| <b>Commands</b> |     |     |
|                 | N/A | N/A |

**Platform** N/A

**Description**

### 3.11 default-information originate

Use this command to generate a default route to the OSPFv3 routing domain in the routing process mode. Use the **no** form of this command to restore the default setting.

**default-information originate** [ **always** ] [ **metric** *metric* ] [ **metric-type** *type* ] [ **route-map** *map* ]

**no default-information originate** [ **always** ] [ **metric** ] [ **metric-type** ] [ **route-map** *map* ]

| Parameter Description | Parameter                      | Description                                                                                                                                                                               |
|-----------------------|--------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <b>always</b>                  | ( Optional ) It makes OSPFv3 generate the default route unconditionally, no matter whether the default route exists locally or not.                                                       |
|                       | <b>metric</b> <i>metric</i>    | (Optional) Initial metric value of the default route, in the range from 0 to 16777214                                                                                                     |
|                       | <b>metric-type</b> <i>type</i> | (Optional) Type of the default route. There are two type of OSPF external routes: type 1, different metrics seen on different routers; type 2, the same metric seen on different routers. |
|                       | <b>route-map</b> <i>map</i>    | Associated route-map name, no associated route-map by default                                                                                                                             |

**Defaults**

No default route is created;  
 The initial metric value is 1;  
 The default route type is type 2.

**Command Mode**

Routing process configuration mode

**Usage Guide**

When the **redistribute** or **default-information** command is executed, the OSPFv3-enabled router automatically turns into the autonomous system border router ( ASBR ). But the ASBR cannot generate the default route automatically or advertise it to all the routers in the OSPFv3 routing domain. The ASBR generates default routes by default. It is required to configure with the routing process configuration command **default-information originate**.

If the **always** parameter is used, the OSPF routing process advertises an external default route to the neighbors, no matter whether the default route in the core routing table exists or not. However, the local router does not display the default route. To make sure whether the default route is generated, execute **show ipv6 ospf database** to observe the OSPF link state database. The execution of the **show ipv6 route** command on the OSPF neighbor will display the default route.

The metric of the external default route can be defined only with the **default-information originate** command and cannot be set with the **default-metric** command.

There are two types of OSPFv3 external routes: type 1 external routes have changeable routing metrics, while type 2 external routes have constant routing metrics. For two parallel routes with the same route metric to the same destination network, type 1 takes precedence over type 2. As a result, the **show ipv6 route** command displays only the type 1 route.

This command generates a default route of Type-5 LSA, which will not be flooded to the NSSA area. To generate a default route in the NSSA area, use the **area nssa default-information-originate** command.

**Configuration** The following example generates a default route.

**Examples**

```
Ruijie(config)# ipv6 router ospf 1
Ruijie(config-router)# default-information originate always
```

**Related Commands**

| Command                        | Description                                          |
|--------------------------------|------------------------------------------------------|
| <b>redistribute</b>            | Redistribute routes.                                 |
| <b>show ipv6 ospf</b>          | Displays the OSPFv3 routing process information.     |
| <b>show ipv6 ospf database</b> | Displays the OSPFv3 link state database information. |

**Platform** N/A

**Description**

## 3.12 default-metric

Use this command to set the default metric for the routes to be redistributed. Use the **no** form of this command to restore the default setting

**default-metric** *metric-value*

**no default-metric**

**Parameter Description**

| Parameter           | Description                                                                            |
|---------------------|----------------------------------------------------------------------------------------|
| <i>metric-value</i> | Default metric for the routes to be redistributed.<br>Its range is from 1 to 16777214. |

**Defaults** The default is 20.

**Command**

**Mode** The default route type is type 2.

**Usage Guide** This command can be used together with **redistribute** to set the default metric for the routes to be redistributed. But this command does not apply to two types of routes:

- The **default route generated** with default-information originate;

- The redistributed direct route, for which 20 is always the default metric value.

**Configuration** The following example sets the default metric for the routes to be redistributed to 10.

**Examples**

```
Ruijie(config)# ipv6 router ospf 1
Ruijie(config-router)# default-metric 10
```

**Related  
Commands**

| Command               | Description                                      |
|-----------------------|--------------------------------------------------|
| <b>redistribute</b>   | Redistributes the routes.                        |
| <b>show ipv6 ospf</b> | Displays the OSPFv3 routing process information. |

**Platform** N/A

**Description**

### 3.13 distance

Use this command to set the management distance corresponding to different types of OSPFv3 routes. Use the **no** form of this command to restore the default setting.

**distance** { *distance* | **ospf** { **intra-area** *distance* | **inter-area** *distance* | **external** *distance* } }

**no distance** [ **ospf** ]

**Parameter  
Description**

| Parameter                         | Description                                                                       |
|-----------------------------------|-----------------------------------------------------------------------------------|
| <i>distance</i>                   | Sets the management distance of the route, in the range from 1 to 255.            |
| <b>intra-area</b> <i>distance</i> | Sets the management distance of the intra-area route, in the range from 1 to 255. |
| <b>inter-area</b> <i>distance</i> | Sets the management distance of the inter-area route, in the range from 1 to 255. |
| <b>external</b> <i>distance</i>   | Sets the management distance of the external route, in the range from 1 to 255.   |

**Defaults**

The default value is 110.

Management distance of the intra-area route :110,

Management distance of the inter-area route :110

Management distance of the external-area route: 110.



**Command  
Mode**

Routing process configuration mode.

**Usage Guide**

This command is used to specify different management distances for different types of OSPFv3 routes. The management distance of the route is used for the comparison of routing priority, the

smaller the management distance is, the higher the routing priority.

-  The priority of the route generated by different OSPFv3 processes must be compared using the management distance.
-  Setting the management distance as 255 indicates the routing entry is unreliable and will not for the packet forwarding.

**Configuration** the following example sets the OSPFv3 external route management distance to 160.

**Examples**

```
Ruijie(config)# ipv6 router ospf 20
Ruijie(config-router)# distance ospf external 160
```

| Related Commands | Command | Description      |
|------------------|---------|------------------|
|                  |         | ipv6 router ospf |

**Platform** N/A

**Description**

### 3.14 distribute-list in

Use this command to filter routes that are computed based on Link State Advertisement (LSA). Use the **no** form of this command to restore the default setting.

**distribute-list** { *name* | **prefix-list** *prefix-list-name* } **in** [ *interface-type* *interface-number* ]

**no distribute-list** { *name* | **prefix-list** *prefix-list-name* } **in** [ *interface-type* *interface-number* ]

| Parameter Description | Parameter                                        | Description                                                    |
|-----------------------|--------------------------------------------------|----------------------------------------------------------------|
|                       |                                                  | <i>name</i>                                                    |
|                       | <b>prefix-list</b> <i>prefix-list-name</i>       | Specifies a prefix list filtering rule.                        |
|                       | <i>interface-type</i><br><i>interface-number</i> | Specifies an interface on which LSA-based routes are filtered. |

**Defaults** Routes are not filtered by default.

**Command Mode** Routing process configuration mode

**Usage Guide** Filter the routes computed based on LSA. Only the routes meeting filtering conditions can be forwarded. Route filtering does not affect the link state database and the routing tables of the neighbors. The ACL and prefix list filtering rules cannot be set at the same time. You can set only the ACL filtering rule or the prefix list filtering rule for a specific interface.

The routing filtering rules affect only forwarding of local routes but not route computation based on LSA. When route filtering is configured on an ABR, LSA can still compute routes and generate and send inter-area LSAs with prefixes to other areas. This will cause blackhole routes. To prevent the

generation of blackhole routes, you can run the **area range** command with the **not-advertise** keyword.

**Configuration** The following example filters routes that are computed based on Link State Advertisement (LSA).

**Examples**

```
Ruijie(config)# ipv6 prefix-list aaa seq 10 permit 2001::/64
Ruijie(config)# ipv6 router ospf 25
Ruijie(config-router)# redistribute rip metric 100
Ruijie(config-router)# distribute-list prefix-list aaa in ethernet 0/1
```

**Related  
Commands**

| Command           | Description                              |
|-------------------|------------------------------------------|
| <b>area range</b> | Configures route aggregation in an area. |

**Platform**

N/A

**Description**

### 3.15 distribute-list out

Use this command to filter routes that are re-distributed. This command has the similar function as the **redistribute** command. Use the **no** form of this command to restore the default setting.

**distribute-list** { *name* | **prefix-list** *prefix-list-name* } **out** [ **bgp** | **connected** | **isis** [ *area-tag* ] | **ospf** *process-id* | **rip** | **static** ]

**no distribute-list** { *name* | **prefix-list** *prefix-list-name* } **out** [ **bgp** | **connected** | **isis** [ *area-tag* ] | **ospf** *process-id* | **rip** | **static** ]

**Parameter  
Description**

| Parameter                                                                                                                          | Description                                              |
|------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------|
| <i>name</i>                                                                                                                        | Specifies the ACL filtering rule.                        |
| <b>prefix-list</b> <i>prefix-list-name</i>                                                                                         | Specifies the prefix list filtering rule.                |
| <b>bgp</b>   <b>connected</b>   <b>isis</b><br>[ <i>area-tag</i> ]   <b>ospf</b> <i>process-id</i><br>  <b>rip</b>   <b>static</b> | Specifies the source from which the routes are filtered. |

**Defaults**

Routes are not filtered by default.

**Command  
Mode**

Routing process configuration mode

**Usage Guide**

The **distribute-list out** command has the similar function as the **redistribute route-map** command. It can be used to filter the routes that are re-distributed based on other protocols into an OSPFv3 area. It does not directly re-distribute routes but works with the **redistribute** command to re-distribute routes. The ACL and prefix list filtering rules cannot be configured at the same time. You can set only the ACL filtering rule or the prefix list filtering rule to filter the routes from a specific source.

**Configuration** The following example filters static routes that are re-distributed.

**Examples**

```
Ruijie(config)# ipv6 router ospf 1
Ruijie(config-router)# redistribute static subnets
Ruijie(config-router)# distribute-list prefix-list jjj out static
```

**Related  
Commands**

| Command             | Description                                                        |
|---------------------|--------------------------------------------------------------------|
| <b>redistribute</b> | Re-distributes routes that are carried by other routing processes. |

**Platform** N/A

**Description**

### 3.16 enable mib-binding

Use this command to bind MIB to a specific OSPFv3 process. Use the **no** form of this command to restore the default setting.

**enable mib-binding**

**no enable mib-binding**

**Parameter  
Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** MIB is bound to an OSPFv3 process with the smallest process number by default.

**Command  
Mode** Routing process configuration mode

**Usage Guide** OSPFv3 MIB has no configuration information about OSFPv3 processes. You can operate only one OSFPv3 process through SNMP. OSFPv3 MIB is bound to the OSFPv3 process with the smallest process number by default. Users' operations take effect on this process.

To operate a specific OSFPv3 process through SNMP, you can bind OSFPv3 MIB to the process.

**Configuration  
Examples** The following example enables users to operate the OSPFv3 process with the process number of 100 through SNMP.

```
Ruijie(config)# ipv6 router ospf 100
Ruijie(config-router)# enable mib-binding
```

**Related  
Commands**

| Command               | Description                                       |
|-----------------------|---------------------------------------------------|
| <b>show ipv6 ospf</b> | Displays global OSPFv3 configuration information. |
| <b>enable traps</b>   | Enables the OSPFv3 trap function.                 |



**Platform** N/A  
**Description**

### 3.17 enable traps

OSPFv3 processes support eight types of trap information, which are classified into two categories. Use this command to send specific trap information. Use the **no** form of this command to restore the default setting.

```
enable traps [ error [ IfConfigError | IfRxBadPacket | VirtIfConfigError | VirtIfRxBadPacket ] |
state-change [ IfStateChange | NbrStateChange | NssaTranslatorStatusChange |
VirtIfStateChange | VirtNbrStateChange ] ]
no enable traps [ error [ IfConfigError | IfRxBadPacket | VirtIfConfigError | VirtIfRxBadPacket ] |
state-change [ IfStateChange | NbrStateChange | NssaTranslatorStatusChange |
VirtIfStateChange | VirtNbrStateChange ] ]
```

**Parameter Description**

| Parameter                                                               | Description                                                                                                              |
|-------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------|
| <b>Error</b>                                                            | Configures all error-related trap types. This keyword can also specify the following types of error traps:               |
|                                                                         | <b>IfConfigError</b> Specifies an interface parameter error;                                                             |
|                                                                         | <b>IfRxBadPacket</b> Specifies incorrect packets received by an interface;                                               |
|                                                                         | <b>VirtIfConfigError</b> Specifies a parameter error on a virtual interface;                                             |
|                                                                         | <b>VirtIfRxBadPacket</b> Specifies incorrect packets received by a virtual interface.                                    |
| <b>state-change</b>                                                     | Configures all traps related to state change. This keyword can also specify the following traps related to state change: |
|                                                                         | <b>IfStateChange</b> Specifies state change of an interface;                                                             |
|                                                                         | <b>NbrStateChange</b> Specifies state change of a neighbor;                                                              |
|                                                                         | <b>NssaTranslatorStatusChange</b> Specifies status change of the NSSA translator.                                        |
|                                                                         | <b>VirtIfStateChange</b> Specifies state change of a virtual interface;                                                  |
| <b>VirtNbrStateChange</b> Specifies state change of a virtual neighbor. |                                                                                                                          |

**Defaults** All traps are disabled by default.

**Command** Routing process configuration mode

**Mode**

**Usage Guide** Before configuring this command, you must run the **snmp-server enable traps ospf** command; otherwise, OSPFv3 trap information cannot be sent correctly. This is because the function of this command is restricted by the **snmp-server** command.

You can synchronously enable the trap function of different processes even if MIB is not bound to these processes.

**Configuration** The following example enables all traps of OSPFv3 process 100.

**Examples**

```
Ruijie(config)#ipv6 router ospf 100
Ruijie(config-router)# enable traps
```

**Related Commands**

| Command                              | Description                                       |
|--------------------------------------|---------------------------------------------------|
| <b>show ipv6 ospf</b>                | Displays global OSPFv3 configuration information. |
| <b>enable mib-binding</b>            | Binds MIB to an OSPFv3 process.                   |
| <b>snmp-server enable traps ospf</b> | Enables OSPFv3 to send trap information.          |

**Platform** N/A

**Description**

### 3.18 graceful-restart

Use this command to enable the OSPFv3 graceful restart (GR) function and to set the GR period. Use the **no** form of this command to restore the default setting.

**graceful-restart [ grace-period *grace-period* | inconsistent-lsa-checking ]**

**no graceful-restart [ *graceful-period* ]**

**Parameter Description**

| Parameter                               | Description                                                                                                                                                                                                                                             |
|-----------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>grace-period</b> <i>grace-period</i> | Configures the GR period. The GR period is the longest interval that lasts from the moment when OSPFv3 fails to the moment when OSPFv3 gracefully restarts.<br>The GR period is in the range from 1 to 1800 in the unit of seconds. The default is 120. |
| <b>inconsistent-lsa-checking</b>        | Configures the topology change detection. Once the topology change is detected, the device will exit GR and finish the convergence, This function is enabled by default after GR is enabled.                                                            |

**Defaults** This function is enabled by default.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** GR is configured based on the OSPFv3 instance. Different instances could be configured with different parameters.

Use this command to configure the GR period. The GR period is the longest interval that lasts from the moment when OSPFv3 fails to the moment that OSPFv3 gracefully restarts. In this period, the device will perform link reconstruction to restore OSPFv3. When the GR period expires, OSPFv3 exits GR and finishes regular operation.

To enable the GR function and set the GR period to the 120 seconds, use the **graceful-restart** command. To modify the GR period, use the **graceful-restart grace-period** command. Topology stability is indispensable for uninterrupted forwarding. If topology changes, OSPFv3 finishes convergence instead of continuing GR to avoid long time interruption

- 1) Disabling the topology change detection: If the topology cannot converge in time in the hot backup process, the long term forwarding interruption may occur.
- 2) Enabling the topology change detection: Forwarding interruption may occur but the interruption time is much shorter than the time it takes to disable topology detection.

It is not recommended to disable the topology change detection. In some scenario where long term forwarding interruption does not occur, disabling the topology change detection minimizes the forwarding interruption time.

The GR function is unavailable when the Fast Hello function is enabled.

**Configuration** The following example enables GR for OSPFv3 instance 1 and sets the GR period to 60 seconds.

**Examples**

```
Ruijie(config)# ipv6 router ospf 1
Ruijie(config-router)# graceful-restart
Ruijie(config-router)# graceful-restart grace-period 60
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

### 3.19 graceful-restart helper

Use this command to enable the OSPFv3 graceful restart helper function. Use the **no** form of this command to disable this function.

**graceful-restart helper disable**  
**no graceful-restart helper disable**

Use this command configure the topology change detection method of OSPFv3 GR helper. Use the **no** form of this command to cancel the configuration.

**graceful-restart helper { strict-lsa-checking | internal-lsa-checking }**  
**no graceful-restart helper { strict-lsa-checking | internal-lsa-checking }**

**Parameter**

| Parameter | Description |
|-----------|-------------|
|-----------|-------------|

| Description                  |                                                                                                                                                                  |
|------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>disable</b>               | Disables the device to assist other devices in performing GR.                                                                                                    |
| <b>strict-lsa-checking</b>   | Checks the change of the LSA of types 1-5 and 7 to judge whether the network topology changes. If the topology changes, the GR helper function will be disabled. |
| <b>internal-lsa-checking</b> | Checks the change of the LSA of types 1–3 to judge whether the network topology changes. If the topology changes, the GR helper function will be disabled.       |

**Defaults** The GR helper is enabled by default.  
The device where the GR helper is enabled does not check the LSA change by default.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** Use this command to enable the GR helper function. When one neighbor device performs graceful restart, the Grace-LSA is advertised to all neighbors. If the device enabled with the GR helper receives the Grace-LSA, it will become the GR Helper to help the neighbors perform GR. The **disable** option means that it is not allowed to perform the GR helper function for any device in GR. The GR helper does not perform the network change detection by default. The convergence is not performed again until the GR is implemented even if the network changes. Use the **strict-lsa-checking** or **internal-lsa-checking** command to enable the device to detect the change of network topology during the GR. The former checks any LSA (types 1-5,7) that stands for the network information, the latter checks the LSA that stands for the AS inner-area route. In the large scale network, it is not recommended to enable the LSA check option because the partial network changes trigger the ending of the GR, decreasing the convergence speed of the entire network.

**Configuration Examples** The following example disables the GF helper function of the OSPFv3 instance 1 and modifies the topology change detection policy.

```
Ruijie(config)# ipv6 router ospf 1
Ruijie(config-router)# graceful-restart helper disable
Ruijie(config-router)# no graceful-restart helper disable
Ruijie(config-router)# graceful-restart helper strict-lsa-checking
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

### 3.20 ipv6 ospf area

Use this command to enable the interface to participate in the OSPFv3 routing process. Use the **no**

form of this command to restore the default setting.

**ipv6 ospf** *process-id* **area** *area-id* [ **instance** *instance-id* ]

**no ipv6 ospf** *process-id* **area** [ **instance** *instance-id* ]

| Parameter Description | Parameter                          | Description                                                                              |
|-----------------------|------------------------------------|------------------------------------------------------------------------------------------|
|                       | <i>process-id</i>                  | OSPF process ID.                                                                         |
|                       | <b>area</b> <i>area-id</i>         | OSPFv3 area in which the interface participates. It can be an integer or an IPv4 prefix. |
|                       | <b>instance</b> <i>instance-id</i> | Configures the specific OSPFv3 instance on the interface.                                |

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode.

**Usage Guide** You can use this command to enable the OSPFv3 on an interface, and then configure the OSPFv3 process with **ipv6 router ospf**. It will be automatically started after this command is used., it will be automatically started after this command is used.

Use **no ipv6 ospf area** to disable the specified interface to participate in the OSPFv3 routing process.

Use **no ipv6 router ospf** to disable all the interfaces to participate in the OSPFv3 routing process.

The neighbor relationship can only be established between the routers with the same instance ID.

After this command is configured, all the prefix information on the interface will be used in the operation of the OSPFv3.

**Configuration Examples** The following example starts the OSPFv3 process on int fastethernet 0/0 for the specified area of the specified instance.

```
int fastethernet 0/0
ipv6 ospf 1 area 2 instance 2
```

| Related Commands | Command                         | Description                                |
|------------------|---------------------------------|--------------------------------------------|
|                  | <b>ipv6 router ospf</b>         | Starts the OSPFv3 routing process.         |
|                  | <b>passive-interface</b>        | Setsthe a passive interface.               |
|                  | <b>show ipv6 ospf interface</b> | Displays the OSPFv3 interface information. |

**Platform Description** N/A

### 3.21 ipv6 ospf authentication

Use this command to configure OSPFv3 interface authentication. Use the **no** form of this command to restore the default setting.

**ipv6 ospf authentication** [ **null** | **ipsec spi** *spi* [ **md5** | **sha1** ] [ **0** | **7** ] *key* ] [ **instance** *instance-id* ]

**no ipv6 ospf authentication** [ instance *instance-id* ]

| Parameter Description | Parameter   | Description                                                                |
|-----------------------|-------------|----------------------------------------------------------------------------|
|                       | <b>null</b> | Indicates that authentication is not performed.                            |
|                       | <i>spi</i>  | Specifies a security parameter index, in the range from 256 to 4294967295. |
|                       | <b>md5</b>  | Specifies the MD5 authentication mode.                                     |
|                       | <b>sha1</b> | Specifies the SHA1 authentication mode.                                    |
|                       | <b>0</b>    | Indicates that a key is displayed in the plain-text format.                |
|                       | <b>7</b>    | Indicates that a key is displayed in the cipher-text format.               |
|                       | <i>key</i>  | Specifies an authentication key.                                           |


**Defaults** Authentication is not performed by default.

**Command Mode** Interface configuration mode

**Usage Guide** RGOS supports three authentication modes:

- null authentication mode, which is configured when authentication is not needed
- MD5 authentication mode
- SHA1 authentication mode

---

 OSPFv3 authentication parameters configured on interconnected interfaces must be consistent.

**Configuration Examples** The following example specifies MD5 authentication in OSPFv3 interface configuration mode and sets the authentication password to aaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaa.

```
Ruijie(config-if)# ipv6 ospf authentication ipsec spi 300 md5
aaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaa
```

| Related Commands | Command                                 | Description                            |
|------------------|-----------------------------------------|----------------------------------------|
|                  | <b>ipv6 ospf authentication</b>         | Specifies interface authentication.    |
|                  | <b>area virtual-link authentication</b> | Specifies virtual link authentication. |

**Platform Description** N/A

### 3.22 ipv6 ospf bfd

Use this command to enable or disable the BFD on the specified OSPFv3-enabled interface. Use the **no** form of this command to restore the default setting.

**ipv6 ospf bfd** [ dsable ] [ instance *instance-id* ]  
**no ipv6 ospf bfd** [ instance *instance-id* ]

| Parameter Description | Parameter                   | Description                                                                            |
|-----------------------|-----------------------------|----------------------------------------------------------------------------------------|
|                       | disable                     | Disables the BFD function on the specified OSPF interface.                             |
|                       | instance <i>instance-id</i> | Configures the specified OSPFv3 instance on the interface, in the range from 0 to 255. |

**Defaults** No configuration is made by default. The BFD configuration in the OSPFv3 process configuration mode will apply.

**Command**

**Mode** Interface configuration mode.

**Usage Guide** The command `ipv6 ospf bfd` in the interface configuration mode takes precedence over the `bfd all-interfaces` command in the routing process configuration mode. You can use this command to enable the BFD on the specified interface according to the actual environment, also can use the command `bfd all-interfaces` in the OSPFv3 process configuration mode to enable the BFD function on all OSPFv3 interfaces and use the command `ip v6 ospf bfd disable` to disable the BFD on the specified interface.

**Configuration Examples**

```
Ruijie(config)# int fastethernet 0/0
Ruijie(config-if-fastethernet 0/0)# ipv6 ospf bfd
```

| Related Commands | Command                                         | Description                                                                              |
|------------------|-------------------------------------------------|------------------------------------------------------------------------------------------|
|                  | <code>ipv6 router ospf <i>process-id</i></code> | Starts the OSPFv3 routing process and enter into the routing process configuration mode. |
|                  | <code>bfd all-interfaces</code>                 | Enables the BFD on all OSPFv3 interfaces.                                                |

**Platform** N/A

**Description**

### 3.23 ipv6 ospf cost

Use this command to set the cost of the interface. Use the **no** form of this command to restore the default setting

**ipv6 ospf cost** *cost* [ **instance** *instance-id* ]

**no ipv6 ospf cost** [ **instance** *instance-id* ]

| Parameter Description | Parameter                          | Description                                                      |
|-----------------------|------------------------------------|------------------------------------------------------------------|
|                       | <i>Cost</i>                        | Cost of interface, in the range from 0 to 65535.                 |
|                       | <b>instance</b> <i>instance-id</i> | Configures the specific OSPFv3 instance on the interface, in the |

|  |                      |
|--|----------------------|
|  | range from 0 to 255. |
|--|----------------------|

**Defaults** The default interface cost is the reference bandwidth/Bandwidth (100Mbps by default).

**Command Mode** Interface configuration mode.

**Usage Guide** By default, the cost of the OSPFv3 interface is 100Mbps/Bandwidth, in which the Bandwidth is the bandwidth of the interface and configured with the command **bandwidth** in the interface configuration mode.

The default costs of OSPFv3 interfaces for several typical lines are:

- 64K serial line: 1562;
- E1 line: 48
- 10M Ethernet: 10
- 100M Ethernet: 1

The OSPFv3 cost configured with the command **ipv6 ospf cost** will overwrite the default configuration.

**Configuration** The following example sets the cost of the interface to 1:

**Examples**

```
Ruijie(config)# int fastethernet 0/0
Ruijie(config-if)# ipv6 ospf cost 1
```

| Related Commands | Command               | Description                                                      |
|------------------|-----------------------|------------------------------------------------------------------|
|                  |                       | <b>show ipv6 ospf interface</b>                                  |
|                  | <b>ipv6 ospf area</b> | Sets the interface to participate in the OSPFv3 routing process. |

**Platform** N/A

**Description**

### 3.24 ipv6 ospf dead-interval

Use this command to set a dead interval of neighbors on an interface. If no hello packet is received from a neighbor within the interval, the neighboring relationship is considered to fail. Use the **no** form of this command to restore the default setting

**ipv6 ospf dead-interval** { *seconds* | **minimal hello-multiplier** *multiplier* } [ **instance** *instance-id* ]  
**no ipv6 ospf dead-interval** [ **instance** *instance-id* ]

| Parameter Description | Parameter | Description    |
|-----------------------|-----------|----------------|
|                       |           | <i>seconds</i> |




|                                                      |                                                                                                                                                                                              |
|------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>minimal hello-multiplier</b><br><i>multiplier</i> | Enables the fast hello function, which takes 1s as the dead interval of neighbors.<br><i>Multiplier</i> specifies the number of hello packets sent in one second, in the range from 3 to 20. |
| <b>instance</b> <i>instance-id</i>                   | Configures the specific OSPFv3 instance on the interface, in the range from 0 to 255.                                                                                                        |

**Defaults** If the fast hello function is not enabled, the dead interval of neighbors is four times longer than the hello interval.

 If the hello interval is changed, the dead interval of neighbors varies automatically.

**Command Mode** Interface configuration mode

**Usage Guide** The dead interval of neighbors must be longer than the hello interval.  
The OSPFv3 fast hello function allows OSPFv3 to fast discovery neighbors and detect whether neighboring relationships are valid. To enable the OSPFv3 fast hello function, you can specify the **minimal** and **hello-multiplier** keywords and the *multiplier* parameter in this command. **minimal** specifies the deal interval of neighbors to be 1s; **hello-multiplier** specifies the number of times that hello packets are sent in a second. Therefore, this configuration reduces the hello interval to be shorter than 1s.  
If an interface is enabled with the fast hello function, the **hello-interval** field of hello packets to be advertised by this interface is set to 0, and that of hello packets received from this interface is omitted.

 **dead-interval**, **minimal**, and **hello-multiplier** that are introduced to enable the fast hello function cannot be configured together with **hello-interval**.

No matter whether the fast hello function is configured, the dead interval of neighbors on the interconnected interfaces of neighbors must be consistent. The values of **hello-multiplier** on the interconnected interfaces can be different but you must ensure that at least one hello packet is received within the dead interval of neighbors.

You can use the **show ipv6 ospf interface** command to monitor the dead interval of neighbors and the fast hello interval on an interface.

**Configuration Examples** The following example sets the dead interval of neighbors to 60 seconds on an interface.

```
Ruijie(config)# int fastethernet 0/0
Ruijie(config-if)# ipv6 ospf dead-interval 60
```

| Related Commands | Command                         | Description                                     |
|------------------|---------------------------------|-------------------------------------------------|
|                  | <b>ipv6 ospf hello-interval</b> | Sets the interval for sending the Hello message |

|                                 |                                                                 |
|---------------------------------|-----------------------------------------------------------------|
|                                 | on an interface.                                                |
| <b>show ipv6 ospf interface</b> | Displays the OSPFv3 interface information.                      |
| <b>ipv6 ospf area</b>           | Sets the interface to participate in the OSPFv3 routing process |

**Platform** N/A

**Description**

### 3.25 ipv6 ospf encryption

Use this command to enable OSPFv3 encryption authentication on an interface. Use the **no** form of this command to restore the default setting.

**ipv6 ospf encryption [ null | ipsec spi spi esp null [ md5 | sha1 ] [ 0 | 7 ] key ]**

**no ipv6 ospf encryption**


**Parameter Description**

| Parameter   | Description                                                                |
|-------------|----------------------------------------------------------------------------|
| <b>null</b> | Indicates that encryption authentication is not performed.                 |
| <i>spi</i>  | Specifies a security parameter index, in the range from 256 to 4294967295. |
| <b>null</b> | Specifies the null encryption mode.                                        |
| <b>md5</b>  | Specifies the MD5 authentication mode.                                     |
| <b>sha1</b> | Specifies the SHA1 authentication mode.                                    |
| <b>0</b>    | Indicates that a key is displayed in the plain-text format.                |
| <b>7</b>    | Indicates that a key is displayed in the cipher-text format.               |
| <i>key</i>  | Specifies an authentication key.                                           |

**Defaults** Encryption authentication is not performed by default.

**Command Mode** Interface configuration mode

**Usage Guide** RGOS supports the null encryption mode and two authentication modes: MD5 and SHA1.

 OSPFv3 encryption authentication parameters configured on interconnected interfaces must be consistent.

**Configuration Examples** The following example specifies null encryption and MD5 authentication in OSPFv3 interface configuration mode and sets the authentication password to aaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaa.

```
Ruijie(config-if)# ipv6 ospf encryption ipsec spi 300 esp null md5
aaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaa
```

**Related Commands**

| Command | Description |
|---------|-------------|
|---------|-------------|

|                                     |                                                   |
|-------------------------------------|---------------------------------------------------|
| <b>area encryption</b>              | Specifies area encryption authentication.         |
| <b>area virtual-link encryption</b> | Specifies virtual link encryption authentication. |

**Platform** N/A

**Description**

### 3.26 ipv6 ospf hello-interval

Use this command to set the interval for the interface to send the Hello message. Use the **no** form of this command to restore the default setting

**ipv6 ospf hello-interval** *seconds* [ **instance** *instance-id* ]

**no ipv6 ospf hello-interval** [ **instance** *instance-id* ]

**Parameter Description**

| Parameter                          | Description                                                                                     |
|------------------------------------|-------------------------------------------------------------------------------------------------|
| <i>seconds</i>                     | Interval for sending the Hello message.<br>Its range is from 1 to 65535 in the unit of seconds. |
| <b>instance</b> <i>instance-id</i> | Configures the specific OSPFv3 instance on the interface.                                       |

**Defaults**

The broadcast network and point-to-point network :10 seconds. The point-to-multipoint network and NBMA network :30 seconds.

**Command**

**Mode**

Interface configuration mode.

**Usage Guide**

The same hello sending intervals must be set for the neighbors, otherwise the normal adjacency cannot be established.



The dead-interval minimal hello-multiplier and hello-interval parameters for Fast Hello cannot be configured simultaneously.

**Configuration**

The following example sets the interval for the interface to send the Hello message to 20 seconds.

**Examples**

```
ipv6 ospf hello-interval 20
```

**Related Commands**

| Command                         | Description                                                              |
|---------------------------------|--------------------------------------------------------------------------|
| <b>ipv6 ospf dead-interval</b>  | Sets the interval for the interface to consider that the neighbor fails. |
| <b>show ipv6 ospf interface</b> | Displays the OSPFv3 interface information.                               |
| <b>ipv6 ospf area</b>           | Sets the interface to participate in the OSPFv3 routing process.         |

**Platform** N/A

**Description**

### 3.27 ipv6 ospf mtu-ignore

Use this command to ignore the MTU check when an interface receives the database description message. Use the **no** form of this command to restore the default setting.

**ipv6 ospf mtu-ignore** [ **instance** *instance-id* ]

**no ipv6 ospf mtu-ignore** [ **instance** *instance-id* ]

| Parameter Description | Parameter                          | Description                                                                           |
|-----------------------|------------------------------------|---------------------------------------------------------------------------------------|
|                       | <b>instance</b> <i>instance-id</i> | Configures the specific OSPFv3 instance on the interface, in the range from 0 to 255. |

**Defaults** The MTU check is enabled by default.

#### Command

**Mode** Interface configuration mode.

**Usage Guide** After receiving the database description message, the OSPFv3 device will check whether the MTU of neighbor interface is the same as its own MTU. If the received database description message indicates an MTU greater than its own interface's MTU, the neighbor relationship cannot be established. This can be fixed by disabling the MTU check.

**Configuration** The following example disables the MTU check function on the ethernet 1/0.

**Examples**

```
Ruijie(config)# interface ethernet 1/0
Ruijie(config-if)# ipv6 ospf mtu-ignore
```

| Related Commands | Command                 | Description                                  |
|------------------|-------------------------|----------------------------------------------|
|                  | <b>ipv6 router ospf</b> | Starts the OSPFv3 routing process.           |
|                  | <b>ipv6 mtu</b>         | Sets the value of IPv6 MTU of the interface. |

**Platform** N/A

**Description**

### 3.28 ipv6 ospf neighbor

Use this command to configure the OSPFv3 neighbor manually. Use the **no** form of this command to restore the default setting.

**ipv6 ospf neighbor** *ipv6-address* [ [ **cost** <1-65535> ] [ **poll-interval** <0-2147483647> | **priority** <0-255> ] ] [ **instance** *instance-id* ]

**no ipv6 ospf neighbor** *ipv6-address* [ [ **cost** <1-65535> ] [ **poll-interval** < 0-2147483647 > | **priority** < 0-255 > ] ] [ **instance** *instance-id* ]

| Parameter Description | Parameter                           | Description                                                                                                                                                                                                                                                                 |
|-----------------------|-------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <b>cost</b> <i>cost</i>             | (Optional) Configures the cost to each neighbor in point-to-multipoint network. It is not defined by default, where the cost configured on the interface will be used. It ranges from 1 to 65535.<br>Only the networks of the point-to-multipoint type support this option. |
|                       | <b>poll-interval</b> <i>seconds</i> | (Optional) Interval for polling the neighbors (in seconds), which ranges from 1 to 2147483647.<br>Only the networks of the non-broadcast (NBMA) type support this option.                                                                                                   |
|                       | <b>priority</b> <i>priority</i>     | (Optional) Configures the priority value of non-broadcast network neighbors, which ranges from 0 to 255.<br>Only the non-broadcast (NBMA) type network supports this option.                                                                                                |
|                       | <b>instance</b> <i>instance-id</i>  | (Optional) Configures the specific OSPFv3 instance on the interface, which ranges from 0 to 255.                                                                                                                                                                            |

**Defaults** No neighbor is defined;  
Neighbor polling interval: 120 seconds;  
Priority value of non-broadcast network neighbor: 0.

**Command**

**Mode** Interface configuration mode.

**Usage Guide** You can set relevant parameters for the neighbors depending on the actual network type.

**Configuration** The following example shows how to configure the OSPFv3 neighbor in NBMA network as follows:

**Examples** IPv6 address: fe80::2d0:f8ff:fe22:3533, priority value: 1, polling interval: 150 seconds.

```
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if)# ipv6 ospf network non-broadcast
Ruijie(config-if)# ipv6 ospf neighbor fe80::2d0:f8ff:fe22:3533 priority 1
poll-interval 150
```

**Related Commands**

| Command                   | Description                              |
|---------------------------|------------------------------------------|
| <b>ipv6 ospf priority</b> | Sets the priority value of an interface. |
| <b>ipv6 ospf network</b>  | Sets the network type of an interface.   |

**Platform** N/A

**Description**

### 3.29 ipv6 ospf network

Use this command to set the network type of the interface. Use the **no** form of this command to restore the default setting.

```

ipv6 ospf network { broadcast | non-broadcast | point-to-point | point-to-multipoint
[ non-broadcast ] } [ instance instance-id ]
no ipv6 ospf network [ broadcast | non-broadcast | point-to-point | point-to-multipoint
[ non-broadcast ] ] [ instance instance-id ]
    
```

| Parameter Description | Parameter                                | Description                                                                                     |
|-----------------------|------------------------------------------|-------------------------------------------------------------------------------------------------|
|                       | <b>broadcast</b>                         | Specifies the broadcast network type.                                                           |
|                       | <b>non-broadcast</b>                     | Specifies the non-broadcast network type.                                                       |
|                       | <b>point-to-point</b>                    | Specifies the point-to-point network type.                                                      |
|                       | <b>point-to-multipoint</b>               | Specifies the point-to-multipoint network type.                                                 |
|                       | <b>point-to-multipoint non-broadcast</b> | Specifies the point-to-multipoint non-broadcast network type.                                   |
|                       | <b>instance instance-id</b>              | Configures the specific OSPFv3 instance on the interface with the valid id range from 0 to 255. |

**Defaults** Point-to-point network type: PPP, SLIP, frame relay point-to-point sub-interface and X.25 point-to-point sub-interface encapsulation.  
 NBMA network type: frame relay(except for the point-to-point sub-interface) and X.25 encapsulation (except for the point-to-point sub-interface)  
 Broadcast network type: Ethernet encapsulation.  
 The point-to-multipoint network type is not the default type.

**Command Mode** Interface configuration mode.

**Usage Guide** You can set the network type of the interface according to the actual link type applied and the topology.

**Configuration Examples** The following example sets the network type of the interface that participates in the OSPFv3 to point-to-point.

```

ipv6 ospf network point-to-point
    
```

| Related Commands | Command                         | Description                                                      |
|------------------|---------------------------------|------------------------------------------------------------------|
|                  | <b>ipv6 ospf priority</b>       | Sets the interface priority.                                     |
|                  | <b>show ipv6 ospf interface</b> | Displays the OSPFv3 interface information.                       |
|                  | <b>ipv6 ospf area</b>           | Sets the interface to participate in the OSPFv3 routing process. |

**Platform Description** N/A

### 3.30 ipv6 ospf priority

Use this command to set the interface priority. Use the **no** form of this command to restore the default setting.

**ipv6 ospf priority** *number-value* [ **instance** *instance-id* ]

**no ipv6 ospf priority** [ **instance** *instance-id* ]

| Parameter Description | Parameter                          | Description                                                                           |
|-----------------------|------------------------------------|---------------------------------------------------------------------------------------|
|                       | <i>number-value</i>                | The priority of the interface.<br>Its range is from 0 to 255.                         |
|                       | <b>instance</b> <i>instance-id</i> | Configures the specific OSPFv3 instance on the interface. Its range is from 0 to 255. |

**Defaults** The default priority is 1.

**Command Mode** Interface configuration mode.

**Usage Guide** In the broadcast network type, it is necessary to elect the DR/BDR. In electing the DR/BDR, the device of a higher priority is preferred. If several devices are of the same priority, the one with the largest router-ID is preferred.  
The device with the priority level of 0 does not participate in the election of DR/BDR.

**Configuration Examples** The following example disables the interface from being elected as the DR/BDR.

```
Ruijie(config)# interface ethernet 1/0
Ruijie(config-if)# ipv6 ospf priority 0
```

| Related Commands | Command                            | Description                                               |
|------------------|------------------------------------|-----------------------------------------------------------|
|                  | <b>ipv6 ospf network</b>           | Sets the network type of an interface.                    |
|                  | <b>router-id</b>                   | Sets the ID of a router.                                  |
|                  | <b>show ipv6 ospf interface</b>    | Displays the OSPFv3 interface information.                |
|                  | <b>instance</b> <i>instance-id</i> | Configures the specific OSPFv3 instance on the interface. |

**Platform Description** N/A

### 3.31 ipv6 ospf retransmit-interval

Use this command to set the interval for the interface to retransmit the LSA. Use the **no** form of this

command to restore the default setting.

**ipv6 ospf retransmit-interval** *seconds* [ **instance** *instance-id* ]

**no ipv6 ospf retransmit-interval** [ **instance** *instance-id* ]

| Parameter Description | Parameter                          | Description                                                                                  |
|-----------------------|------------------------------------|----------------------------------------------------------------------------------------------|
|                       | <i>seconds</i>                     | Interval for retransmitting the LSA.<br>Its range is from 1 to 65535 in the unit of seconds. |
|                       | <b>instance</b> <i>instance-id</i> | Configures the specific OSPFv3 instance on the interface.                                    |

**Defaults** The default is five seconds.

**Command**

**Mode** Interface configuration mode.

**Usage Guide** To ensure the reliability of the routing information transmission, the LSA sent to the neighbor shall be acknowledged by the neighbor. You can use this command to set the interval for the acknowledgement by the neighbor. If no acknowledgement is received within the specified period, the LSA information will be retransmitted.

**Configuration Examples** The following example sets the interval for retransmitting the LSA to 10 seconds.

**Examples**

```
Ruijie(config)# interface ethernet 1/0
Ruijie(config-if)# ipv6 ospf retransmit-interval 10
```

| Related Commands | Command                         | Description                                                      |
|------------------|---------------------------------|------------------------------------------------------------------|
|                  | <b>show ipv6 ospf interface</b> | Displays the OSPFv3 interface information.                       |
|                  | <b>ipv6 ospf area</b>           | Sets the interface to participate in the OSPFv3 routing process. |

**Platform** N/A

**Description**

### 3.32 ipv6 ospf subvlan

Use this command to enable OSPFv3 on super VLANs. Use the **no** form of this command to restore the default settings.

**ipv6 ospf subvlan** [**all** | *vid*]

**no ipv6 ospf subvlan**

| Parameter | Parameter | Description |
|-----------|-----------|-------------|
|-----------|-----------|-------------|



| Description |                                                                 |
|-------------|-----------------------------------------------------------------|
| all         | Indicates that packets are allowed to be sent to all sub VLANs. |
| vid         | Specifies the sub VLAN ID. The value ranges from 1 to 4094.     |

**Defaults** The default settings take effect only on super VLANs with OSPFv3 disabled.

**Command Mode** Interface configuration mode.

**Usage Guide** In normal cases, a super VLAN contains multiple sub VLANs. Multicast packets of a super VLAN are also sent to its sub VLANs. In this case, when OSPF multicast packets are sent over a super VLAN containing multiple sub VLANs, the OSPF multicast packets are replicated multiple times, and the device processing capability is insufficient. As a result, a large number of packets are discarded, causing the neighbor down error. In most scenarios, the OSPF function does not need to be enabled on a super VLAN. Therefore, the OSPF function is disabled by default. However, in some scenarios, the OSPF function must be run on the super VLAN, but packets only need to be sent to one sub VLAN. In this case, run this command to specify a particular sub VLAN. You must be cautious in configuring packet transmission to all sub VLANs, as the large number of sub VLANs may cause a device processing bottleneck, which will lead to the neighbor down error.

**Configuration Examples** The following example sends the OSPF multicast packets to sub VLAN 1024 of super VLAN 300.

```
Ruijie(config)# interface vlan 300
Ruijie(config-if-VLAN 300)# ipv6 ospf subvlan 1024
```

### 3.33 ipv6 ospf transmit-delay

Use this command to set the delay on the interface in sending the LSA. Use the **no** form of this command to restore the default setting.

**ipv6 ospf transmit-delay** *seconds* [ **instance** *instance-id* ]

**no ipv6 ospf transmit-delay** [ **instance** *instance-id* ]

| Parameter Description | Parameter                          | Description                                                                                   |
|-----------------------|------------------------------------|-----------------------------------------------------------------------------------------------|
|                       | <i>seconds</i>                     | The delay in sending LSA.<br>Its range is from 1 to 65535 in the unit of seconds.             |
|                       | <b>instance</b> <i>instance-id</i> | Configures the ID of a specific OSPFv3 instance on the interface, in the range from 0 to 255. |

**Defaults** The default is one.

**Command Mode** Interface configuration mode.

**Usage Guide** Use this command to set the delay on the interface in transmitting the LSA.

**Configuration** The following example sets the delay on the interface in transmitting the LSA.

**Examples**

```
Ruijie(config)# interface ethernet 1/0
Ruijie(config-if)# ipv6 ospf transmit-delay 2
```

**Related  
Commands**

| Command                         | Description                                |
|---------------------------------|--------------------------------------------|
| <b>show ipv6 ospf interface</b> | Displays the OSPFv3 interface information. |

**Platform** N/A

**Description**

### 3.34 ipv6 router ospf

Use this command to start the OSPFv3 routing process. Use the **no** form of this command to restore the default setting.

**ipv6 router ospf**

**ipv6 router ospf** *process-id* [ **vrf** *vrf-name* ]

**no ipv6 router ospf** *process-id*

**Parameter  
Description**

| Parameter         | Description                                                                                              |
|-------------------|----------------------------------------------------------------------------------------------------------|
| <i>process-id</i> | OSPFv3 process ID number. Without the process number configured, it indicates that process 1 is started. |
| <i>vrf-name</i>   | Specifies the VRF that OSPFv3 process belongs to.                                                        |

**Defaults** No OSPFv3 routing process is started.

**Command**

**Mode** Global configuration mode.

**Usage Guide** After the OSPFv3 process is started, the routing process configuration mode is entered. At present, our products support up to 32 OSPFv3 processes.

**Configuration** The following example starts OSPFv3 process in the specified VRF VPN1.

**Examples**

```
Ruijie(config)# ipv6 router ospf 1 vrf vpn_1
```

**Related  
Commands**

| Command               | Description                                                           |
|-----------------------|-----------------------------------------------------------------------|
| <b>ipv6 ospf area</b> | Configures an interface to participate in the OSPFv3 routing process. |

|                       |                                                  |
|-----------------------|--------------------------------------------------|
| <b>show ipv6 ospf</b> | Displays the OSPFv3 routing process information. |
|-----------------------|--------------------------------------------------|

**Platform** N/A

**Description**

### 3.35 ipv6 router ospf max-concurrent-dd

Use this command to set the maximum concurrent interacting neighbors allowed in all OSPFv3 routing processes. Use the **no** form of this command to restore the default setting.

**ipv6 router ospf max-concurrent-dd** *number*

**no ipv6 router ospf max-concurrent-dd**

| Parameter Description | Parameter     | Description                                                             |
|-----------------------|---------------|-------------------------------------------------------------------------|
|                       | <i>number</i> | Maximum concurrent interacting neighbors, in the range from 1 to 65535. |

**Defaults** The default is 5.

**Command Mode** Global configuration mode

**Usage Guide** When a router is exchanging data with multiple neighbors at the same time which affects its performance, by configuring this command, the maximum concurrent interacting neighbors allowed in all OSPFv3 routing processes can be restricted.

**Configuration Examples** The following example sets the maximum concurrent interacting neighbors allowed in all OSPFv3 routing processes to 4. The result is that in the interaction between a large number of neighbors, interactions with up to 4 neighbors are allowed to be initiated on this device concurrently, and interactions initiated by up to 4 neighbors are allowed to be received concurrently. That is, interaction with up to 8 neighbors is allowed on this device.

```
Ruijie#conf terminal
Ruijie(config)#ipv6 router ospf max-concurrent-dd 4
```

| Related Commands | Command                  | Description                                                               |
|------------------|--------------------------|---------------------------------------------------------------------------|
|                  | <b>max-concurrent-dd</b> | Sets the maximum concurrent interacting neighbors in the OSPFv3 processes |

**Platform** N/A

**Description**

### 3.36 log-adj-changes

Use this command to enable the logging of adjacency changes. Use the **no** form of this command to restore the default setting.

**log-adj-changes**

**no log-adj-changes**

| Parameter Description | Parameter     | Description                           |
|-----------------------|---------------|---------------------------------------|
|                       | <b>detail</b> | Displays details of adjacency changes |

**Defaults** By default, the adjacency state log on the entry of or exit from the FULL state is output.

**Command** Routing process configuration mode

**Mode**

**Usage Guide** N/A

**Configuration** The following example turns on the log of adjacency state change.

```
Ruijie(config)# router ospf 1
Ruijie(config)# log-adj-changes detail
```

| Related Commands | Command               | Description                                        |
|------------------|-----------------------|----------------------------------------------------|
|                  | <b>show ipv6 ospf</b> | Displays the OSPF global configuration information |

**Platform** N/A

**Description**

### 3.37 max-concurrent-dd

Use this command to set the maximum number of DD packets that can be processed concurrently in the OSPFv3 routing process. Use the **no** form of this command to restore the default setting.

**max-concurrent-dd** *number*

**no max-concurrent-dd**

| Parameter Description | Parameter     | Description                                                                                    |
|-----------------------|---------------|------------------------------------------------------------------------------------------------|
|                       | <i>number</i> | Maximum number of DD packets that can be processed concurrently, in the range from 1 to 65535. |

**Defaults** The default is 5.

**Command****Mode** Routing process configuration mode.**Usage Guide** When a router is exchanging data with multiple neighbors at the same time which affects its performance, by configuring this command, the maximum concurrent interacting neighbors allowed in each OSPFv3 instance can be restricted.**Configuration Examples** The following example sets the maximum concurrent interacting neighbors allowed in the current OSPFv3 routing process to 4. The result is that in the interaction between a large number of neighbors, interactions with up to 4 neighbors are allowed to be initiated on this device concurrently, and interactions initiated by up to 4 neighbors are allowed to be received concurrently. That is, interaction with up to 8 neighbors is allowed on this device.

```
router ipv6 ospf 1
max-concurrent-dd 4
```

**Related Commands**

| Command                                   | Description                                                                        |
|-------------------------------------------|------------------------------------------------------------------------------------|
| <b>ipv6 router ospf max-concurrent-dd</b> | Sets the maximum concurrent interacting neighbors allowed in the OSPFv3 processes. |

**Platform** N/A**Description**

### 3.38 passive-interface

Use this command to set the passive interface. Use the **no** form of this command to restore the default setting.

**passive-interface** { **default** | *interface-type interface-number* }

**no passive-interface** { **default** | *interface-type interface-number* }

**Parameter Description**

| Parameter                                        | Description                                    |
|--------------------------------------------------|------------------------------------------------|
| default                                          | Sets all the interfaces to passive ones.       |
| <i>interface-type</i><br><i>interface-number</i> | Sets the specified interface to a passive one. |

**Defaults** No passive interface is set by default.**Command Mode** Routing process configuration mode**Usage Guide** After an interface is set to a passive one, it no longer receives or sends the hello message. This command applies to the interfaces participating in the OSPFv3 but not to the virtual links.

**Configuration** The following example enables only the VLAN1 interface to participate in the OSPFv3 process.

**Examples**

```
passive-interface default
no passive-interface vlan 1
```

**Related  
Commands**

| Command                        | Description                                                           |
|--------------------------------|-----------------------------------------------------------------------|
| <b>ipv6 ospf area</b>          | Configures an interface to participate in the OSPFv3 routing process. |
| <b>show ipv6 ospf</b>          | Displays the OSPFv3 routing process information.                      |
| <b>show ipv6 ospf neighbor</b> | Displays the OSPFv3 neighbor information.                             |

**Platform** N/A

**Description**

### 3.39 redistribute

Use this command to start the route redistribution in order to import the routing information of other routing protocols to the OSPFv3 routing process. Use the **no** form of this command to restore the default setting.

```
redistribute { bgp | connected | isis [ area-tag ] | ospf process-id | rip | static } [ { level-1 | level-1-2 | level-2 } ] match { internal | external [ 1|2 ] | nssa-external [ 1 | 2 ] } | metric metric-value | metric-type { 1|2 } | route-map route-map-name | tag tag-value ]
no redistribute { bgp | connected | isis [ area-tag ] | ospf process-id | rip | static } [ { level-1 | level-1-2 | level-2 } ] match { internal | external [ 1|2 ] | nssa-external [ 1 | 2 ] } | metric | metric-type { 1|2 } | route-map route-map-name | tag tag-value ]
```

**Parameter  
Description**

| Parameter                                          | Description                                                                                                 |
|----------------------------------------------------|-------------------------------------------------------------------------------------------------------------|
| <b>bgp</b>                                         | The bgp protocol is redistributed.                                                                          |
| <b>connected</b>                                   | The directly connected route is redistributed.                                                              |
| <b>isis</b> [ <i>area-tag</i> ]                    | The isis is redistributed. The area-tag specifies a particular isis instance.                               |
| <b>ospf</b> <i>process-id</i>                      | The ospf is redistributed. The process-id specifies a particular ospf instance within the range of 1-65535. |
| <b>rip</b>                                         | The rip is redistributed.                                                                                   |
| <b>static</b>                                      | The static route is redistributed.                                                                          |
| <b>level-1</b>   <b>level-1-2</b>   <b>level-2</b> | It is used in the IS-IS route redistribution only and redistributes the routes at a specified level. .      |
| <b>match</b>                                       | It is used in the OSPFv3 route redistribution only and filters specific routes for redistribution;          |

|                                      |                                                                                                                                                                                                                                                          |
|--------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                      | <p>internal: inter-area and intra-area routes.</p> <p>external [1 2]: E1, E2 or all external routes.</p> <p>Nssa-external [ 1   2 ]: N1, N2 or all external routes of the NSSA area.</p> <p>All sub-type OSPFv3 routes are redistributed by default.</p> |
| <b>metric</b> <i>metric-value</i>    | Specifies the metric for the OSPFv3 external 2 LSA with <i>metric-value</i> . Its range is 0 to 16777214.                                                                                                                                                |
| <b>metric-type</b> { 1 2 }           | Set the metric type for the external route to E-1 or E-2.                                                                                                                                                                                                |
| <b>route-map</b> <i>map-map-name</i> | <p>Specifies the routing policy for route redistribution.</p> <p>The name of map-tag can be composed of up to 32 characters.</p> <p>No route-map is associated by default.</p>                                                                           |
| <b>tag</b> <i>tag-value</i>          | Specifies the tag value redistributed to the OSPFv3 inner route, in the range of 0 to 4294967295.                                                                                                                                                        |

**Defaults**

The function is disabled by default;

Metric-type: 2;

Level-2 routes are redistributed in the ISIS redistribution

OSPFv3 routes of all sub-types are redistributed in the OSPFv3 redistribution

No route-map is associated

**Command****Mode**

Routing process configuration mode

**Usage Guide**

When a device supports multiple routing protocols, the coordination between these protocols becomes an important task. The device can run the protocols at the same time, so it should redistribute the protocols. This is applicable to all IP routing protocols.

The parameters level-1, level-2 or level-1-2 can be configured in the redistribution of the ISIS routes to indicate the level of the routes in the redistribution. By default, the level-2 ISIS routes are redistributed

When redistributing OSPFv3 routes, you can configure *match* to redistribute the routes of the corresponding sub-type among the redistributed OSPFv3 routes. All types of OSPFv3 routes are redistributed by default.

The *match* parameter of route-map is specific to the source of routes. The parameters *tag*, *metric* and *metric-type* of the set rule of route-map take precedence over the ones configured for the redistribute command.



The metric value of the route-map associated should be in the range of 0 to 16777214. If the metric value is not in this range, the route cannot be introduced.

The rules for the **no** form of the **redistribute** command are as follows:

If some parameters are specified in the no command, restore their default settings;

If no parameters are specified in the **no** command, delete the whole command.

For example, if the configuration is made below:

Now modify the configuration with the command no redistribute isis 112 level-2

According to the above rules, the command only restores level-2 to default and level-2 is default per se, so after the above no command is executed, the configuration remains as

redistribute isis 112 level-2

To delete the whole command, use the command below

**Configuration** The following example redistributes the direct route and associates route-map test :

**Examples**

```
ipv6 router ospf 1
redistribute connect metric 10 route-map test
```

The associated route-map is configured as follows:

```
route-map test permit 10
match metric 20
set metric 30
```

The effect of the above configuration is to set the metric value which is 20 of the redistributed routes to 30, and that of other routes to 10

**Related Commands**

| Command                              | Description                                                |
|--------------------------------------|------------------------------------------------------------|
| <b>default-information originate</b> | Sets the default route to be redistributed.                |
| <b>default-metric</b>                | Sets the default metric for the route to be redistributed. |
| <b>summary-prefix</b>                | Sets the converged address range of the external route.    |
| <b>show ipv6 ospf</b>                | Displays the OSPFv3 routing process information.           |
| <b>show ipv6 ospf database</b>       | Displays the OSPFv3 link state database information.       |

**Platform** N/A

**Description**

### 3.40 router-id

Use this command to set the router ID (device ID). Use the **no** form of this command to restore the default setting.

**router-id** *router-id*

**no router-id**

**Parameter Description**

| Parameter        | Description                                  |
|------------------|----------------------------------------------|
| <i>router-id</i> | ID of the device in the IPv4 address format. |

**Defaults**

The OSPFv3 routing process, the largest IPv4 address of all loopback interfaces is elected as the router ID; If there is no loopback interface with an IPv4 address, the OSPFv3 process will elect the largest IPv4 of all other interfaces as the router ID

**Command**

Routing process configuration mode



**Mode**

**Usage Guide** Each device that runs the OSPFv3 process shall be identified with a router ID. Router ID is in the format of IPv4 address.

Any IPv4 address can be set as the router ID, but the router ID of every routers in the AS must be unique. If multiple OSPFv3 processes are running on the same device, the router ID of every process must be unique. Note that the change of the router ID results in considerable processing work in the protocol. Therefore, it is not recommended to change any router ID without proper reason. A prompt will be given to ask whether you are sure to modify the router ID. It is recommended that you specify a router ID once an OSPFv3 process starts before configuring other parameters for the process

**Configuration** The following example sets the ID of the device that participates in the OSPFv3 process to 1.1.1.1.

**Examples**

```
router-id 1.1.1.1
```

**Related Commands**

| Command                   | Description                                      |
|---------------------------|--------------------------------------------------|
| <b>ipv6 ospf priority</b> | Sets the interface priority.                     |
| <b>show ipv6 ospf</b>     | Displays the OSPFv3 routing process information. |

**Platform** N/A

**Description**

### 3.41 summary-prefix

Use this command to configure the converged route outside the OSPFv3 routing domain in the routing process configuration mode. Use the **no** form of this command to restore the default settings.

**summary-prefix** *ipv6-prefix/prefix-length* [ **not-advertise** ] [ **tag number** ] [ **cost cost** ]

**no summary-prefix** *ipv6-prefix/prefix-length* [ **not-advertise** ] [ **tag** ] [ **cost** ]

**Parameter Description**

| Parameter                        | Description                                                                                        |
|----------------------------------|----------------------------------------------------------------------------------------------------|
| <i>ipv6-prefix/prefix-length</i> | Address range of the converged route                                                               |
| <b>not-advertise</b>             | Does not advertise the converged route to neighbors. Absence of this parameter means to advertise. |
| <b>tag number</b>                | Tag value redistributed to the OSPFv3 inner route, in the range from 0 to 4294967295.              |
| <b>cost cost</b>                 | Cost value of converged route, in the range from 0 to 16777214.                                    |

**Defaults** No converged route is configured by default.

**Command** Routing process configuration mode.

**Mode**

**Usage Guide** When routes are redistributed by another routing process into the OSPFv3 routing process, every route is advertised to the OSPFv3-enabled device separately in the form of external link state. If the incoming routes are continuous addresses, the autonomous system border device can advertise only one converged route, thus reducing the scale of routing table greatly.

It is different from the **area range** command. The area range involves the convergence of routes between OSPFv3 areas, while the **summary-prefix** involves the convergence of external routes of the OSPFv3 routing domain.

Configuring the **summary-prefix** command on the ASBR can perform convergence for only redistributed routes; while configuring this command on the NSSA ABR translator can perform convergence for the redistributed routes and the Type-5 routes translated from Type-7.

**Configuration** The following example configures the external route within the 2001:DB8::/64 to the converged route 2001:DB8::/64 to advertise it.

**Examples**

```
summary-prefix 2001 :DB8 : : /64
```

**Related Commands**

| Command             | Description                                            |
|---------------------|--------------------------------------------------------|
| <b>area-range</b>   | Configures route convergence between the OSPFv3 areas. |
| <b>redistribute</b> | Redistributes the routes in other routing process.     |

**Platform** N/A

**Description**

### 3.42 show ipv6 ospf

Use this command to display the information of the OSPFv3 process.

**show ipv6 ospf** [ *process-id* ]

**Parameter Description**

| Parameter         | Description             |
|-------------------|-------------------------|
| <i>process-id</i> | OSPF process ID number. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the information about the OSPFv3 process.

**Examples**

```
Ruijie# show ipv6 ospf
Routing Process "OSPFv3 (1)" with ID 1.1.1.1
```

```

Process uptime is 24 minutes
Enable two-way-maintain
SPF schedule delay 5 secs, Hold time between SPF's 10 secs
Initial LSA throttle delay 0 msec
Minimum hold time for LSA throttle 5000 msec
Maximum wait time for LSA throttle 5000 msec
Lsa Transmit Pacing timer 40 msec, 1 LS-Update
LSA interval 5 secs, Minimum LSA arrival 1000 msec
Pacing lsa-group: 30 secs
Number of incoming current DD exchange neighbors 0/5
Number of outgoing current DD exchange neighbors 0/5
Number of external LSA 0. Checksum Sum 0x0000
Number of AS-Scoped Unknown LSA 0
Number of LSA originated 11
Number of LSA received 4
Log Neighbor Adjacency Changes : Enabled
Number of areas in this router is 2
Area BACKBONE(0)
Number of interfaces in this area is 1(1)
SPF algorithm executed 4 times
Number of LSA 3. Checksum Sum 0x1DDF1
Number of Unknown LSA 0

Area 0.0.0.1 (NSSA)
Number of interfaces in this area is 1(1)
SPF algorithm executed 5 times
Number of LSA 7. Checksum Sum 0x445FE
Number of Unknown LSA 0
    
```

**Related Commands**

| Command                              | Description                                                                                                                                     |
|--------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>ipv6 router ospf</b>              | Starts the OSPFv3 routing process.                                                                                                              |
| <b>default-information originate</b> | Sets the default route to be redistributed.                                                                                                     |
| <b>default-metric</b>                | Sets the default metric for the route to be redistributed.                                                                                      |
| <i>router-id</i>                     | Sets the OSPFv3 routing process ID                                                                                                              |
| <b>timers spf</b>                    | Sets the delay and the minimum and maximum intervals for the OSPFv3 to perform SPF calculation after receiving the topology change information. |

**Platform** N/A  
**Description**

### 3.43 show ipv6 ospf database

Use this command to display the database information of the OSPFv3 process

**show ipv6 ospf** [ *process-id* ] **database** [ *lsa-type* [ *adv-router router-id* ] ]

| Parameter Description | Parameter                   | Description                                                                                                                                                                                                                                                      |
|-----------------------|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <i>process-id</i>           | OSPF process ID number                                                                                                                                                                                                                                           |
|                       | <i>lsa-type</i>             | The LSA types are as follows:<br>NSSA-external-LSA, AS-external-LSAs, Link-LSAs, Inter-Area-Prefix-LSAs, Inter-Area-Router-LSAs, Intra-Area-Prefix-LSAs, Network-LSAs, Router-LSAs<br>If this parameter is not specified, all LSA information will be displayed. |
|                       | <i>adv-router router-id</i> | Displays the LSA information generated by the specified router.                                                                                                                                                                                                  |

**Defaults** N/A

**Command Mode** Privileged EXEC mode.

**Usage Guide** N/A

**Configuration** The following example displays the information about the OSPFv3 process database.

#### Examples

```
Ruijie# show ipv6 ospf database
OSPFv3 Router with ID (1.1.1.1) (Process 1)
Link-LSA (Interface FastEthernet 1/0)
Link State ID   ADV Router   Age Seq#       CkSum Prefix
0.0.0.2         1.1.1.1     197 0x80000001 0x7cd8 0
0.0.0.5         2.2.2.2     206 0x80000001 0x8c86 0
                Link-LSA (Interface Loopback 1)
Link State ID   ADV Router   Age Seq#       CkSum Prefix
0.0.64.1       1.1.1.1     82 0x80000001 0xb760 0
                Router-LSA (Area 0.0.0.0)
Link State ID   ADV Router   Age Seq#       CkSum Link
0.0.0.0         1.1.1.1     17 0x80000006 0x62a1 1
0.0.0.0         2.2.2.2     156 0x80000003 0x8653 1
                Network-LSA (Area 0.0.0.0)
Link State ID   ADV Router   Age Seq#       CkSum
0.0.0.5         2.2.2.2     157 0x80000001 0xf8f6
                Router-LSA (Area 0.0.0.1)
Link State ID   ADV Router   Age Seq#       CkSum Link
0.0.0.0         1.1.1.1     17 0x80000002 0x0529 0
                Inter-Area-Prefix-LSA (Area 0.0.0.1)
Link State ID   ADV Router   Age Seq#       CkSum
```

|                 |            |     |            |           |
|-----------------|------------|-----|------------|-----------|
| 0.0.0.1         | 1.1.1.1    | 77  | 0x80000002 | 0x83b4    |
| AS-external-LSA |            |     |            |           |
| Link State ID   | ADV Router | Age | Seq#       | CkSum     |
| 0.0.0.1         | 1.1.1.1    | 1   | 0x80000001 | 0x6035 E2 |

| Related Commands | Command | Description             |
|------------------|---------|-------------------------|
|                  |         | <b>ipv6 router ospf</b> |

**Platform** N/A  
**Description**

### 3.44 show ipv6 ospf interface

Use this command to display the OSPFv3 interface information.

**show ipv6 ospf** [ *process- id* ] **interface** [ *interface-type interface-number* | **brief** ]

| Parameter Description | Parameter          | Description                                      |
|-----------------------|--------------------|--------------------------------------------------|
|                       |                    | <i>interface-type</i><br><i>interface-number</i> |
|                       | <i>process- id</i> | OSPFv3 process ID                                |
|                       | <b>brief</b>       | Displays the interface summary.                  |

**Defaults** N/A

**Command Mode** Privileged EXEC mode.

**Usage Guide** N/A

**Configuration Examples** The following example displays the information about the OSPFv3 interface.

```
Ruijie# show ipv6 ospf interface
FastEthernet 1/0 is up, line protocol is up
Interface ID 2
IPv6 Prefixes
fe80::2d0:22ff:fe22:2223/64 (Link-Local Address)
OSPFv3 Process (1), Area 0.0.0.0, Instance ID 0
Router ID 1.1.1.1, Network Type BROADCAST, Cost: 1
Transmit Delay is 1 sec, State BDR, Priority 1
Designated Router (ID) 2.2.2.2
Interface Address fe80::c800:eff:fe84:1c
Backup Designated Router (ID) 1.1.1.1
Interface Address fe80::2d0:22ff:fe22:2223
```

```
Timer interval configured, Hello 10, Dead 40, Wait 40, Retransmit 5
Hello due in 00:00:02
Neighbor Count is 1, Adjacent neighbor count is 1
Hello received 26 sent 26, DD received 5 sent 4
LS-Req received 1 sent 1, LS-Upd received 3 sent 6
LS-Ack received 6 sent 2, Discarded 0
```

| Related Commands | Command               | Description                                                 |
|------------------|-----------------------|-------------------------------------------------------------|
|                  |                       | <b>ipv6 router ospf</b>                                     |
|                  | <b>ipv6 ospf area</b> | Enables the interface to participate in the OSPFv3 process. |

**Platform** N/A

**Description**

### 3.45 show ipv6 ospf neighbor

Use this command to display the neighbor information of the OSPFv3 process.

**show ipv6 ospf** [ *process-id* ] **neighbor** [ **interface-type** *interface-number* [ **detail** ] ] *neighbor-id* [ **detail** | **statistics** ]

| Parameter Description | Parameter                                        | Description                          |
|-----------------------|--------------------------------------------------|--------------------------------------|
|                       |                                                  | <i>process-id</i>                    |
|                       | <b>detail</b>                                    | Displays details about the neighbor. |
|                       | <i>interface-type</i><br><i>interface-number</i> | Interface type and interface number  |
|                       | <i>neighbor-id</i>                               | Neighbor's router ID                 |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following command displays the brief information about the OSPFv3 neighbor.

**Examples**

```
Ruijie# show ipv6 ospf neighbor
OSPFv3 Process (1) , 1 Neighbors, 1 is Full:
Neighbor ID Pri State Dead Time Interface Instance ID
2.2.2.2 1 Full/DR 00:00:33 FastEthernet 1/0 0
Ruijie# show ipv6 ospf neighbor detail
```

```
Neighbor 2.2.2.2, interface address fe80::c800:eff:fe84:1c
In the area 0.0.0.0 via interface FastEthernet 1/0
Neighbor priority is 1, State is Full, 6 state changes
DR is 2.2.2.2 BDR is 1.1.1.1
Options is 0x000013 (-|R|-|-|E|V6)
Dead timer due in 00:00:36
Database Summary List 0
Link State Request List 0
Link State Retransmission List 0
BFD session state up
```

**Related  
Commands**

| Command                         | Description                                                 |
|---------------------------------|-------------------------------------------------------------|
| <b>ipv6 router ospf</b>         | Starts the OSPFv3 routing process.                          |
| <b>ipv6 ospf area</b>           | Enables the interface to participate in the OSPFv3 process. |
| <b>area virtual-link</b>        | Configures the OSPFv3 virtual link.                         |
| <b>show ipv6 ospf interface</b> | Displays the OSPFv3 interface information.                  |

**Platform** N/A

**Description**

### 3.46 show ipv6 ospf restart

Use this command to display the OSPFv3 graceful restart configuration.

**show ipv6 ospf [ *process-id* ] restart**

**Parameter  
Description**

| Parameter         | Description               |
|-------------------|---------------------------|
| <i>process-id</i> | OSPFv3 process ID number. |

**Defaults** N/A

**Command  
Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the restarter status.

**Examples**

```
Ruijie# show ipv6 ospf restart
Routing Process is ospf 1
Graceful-restart enabled
Restart grace period 120 secs
Current Restart status is plannedRestart
```

```
Current Restart remaining time 50 secs
Graceful-restart helper support enabled
```

The following example displays the helper status.

```
Ruijie# show ipv6 ospf restart
Routing Process is ospf 1
Neighbor 10.1.1.2, interface addr 10.1.1.2
In the area 0.0.0.0 via interface GigabitEthernet 6/0/0
Graceful-restart helper enabled
Current helper status is helping
Current helper remaining time 50 secs
```

**Related Commands**

| Command                 | Description                        |
|-------------------------|------------------------------------|
| <b>ipv6 router ospf</b> | Starts the OSPFv3 routing process. |

**Platform** N/A  
**Description**

### 3.47 show ipv6 ospf route

Use this command to display the OSPFv3 route information.

**show ipv6 ospf [ process- id ] route [ count ]**

**Parameter Description**

| Parameter          | Description                   |
|--------------------|-------------------------------|
| <i>process- id</i> | OSPFv3 process ID number.     |
| <b>count</b>       | Total number of OSPFv3 routes |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration Examples** The following example displays the information about OSPFv3 routes.

```
Ruijie# show ipv6 ospf route
OSPFv3 Process (1)
Codes: C - connected, D - Discard, O - OSPF, IA - OSPF inter area
       N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
       E1 - OSPF external type 1, E2 - OSPF external type 2
Destination Metric Next-hop
E2 2001:DB8:1::/64 1/20 via fe80::c800:eff:fe84:1c, FastEthernet 1/0
```



```
O 2001:DB8:2::/64 11 via fe80::c800:eff:fe84:1c, FastEthernet 1/0,
Area 0.0.0.0
```

**Related  
Commands**

| Command                 | Description                        |
|-------------------------|------------------------------------|
| <b>ipv6 router ospf</b> | Starts the OSPFv3 routing process. |

**Platform** N/A  
**Description**

### 3.48 show ipv6 ospf summary-prefix

Use this command to display the external route convergence information of OSPFv3

**show ipv6 ospf [ *process-id* ] summary-prefix**

**Parameter  
Description**

| Parameter         | Description              |
|-------------------|--------------------------|
| <i>process-id</i> | OSPFv3 process ID number |

**Defaults** N/A

**Command  
Mode** Privileged EXEC mode.

**Usage Guide** N/A

**Configuration** The following example displays the external route convergence information of OSPFv3.

**Examples**

```
Ruijie# show ipv6 ospf summary-prefix
OSPFv3 Process 1, Summary-prefix:
2001:db8::/64, Metric 16777215, Type0, Tag0, Match count0, advertise
```

**Related  
Commands**

| Command                 | Description                                                      |
|-------------------------|------------------------------------------------------------------|
| <b>ipv6 router ospf</b> | Starts the OSPFv3 routing process.                               |
| <b>summary-prefix</b>   | Configures the converge route outside the OSPFv3 routing domain. |

**Platform** N/A  
**Description**

### 3.49 show ipv6 ospf topology

Use this command to display the topology information about each area of OSPFv3.

**show ipv6 ospf** [ *process- id* ] **topology** [ **area** *area-id* ]

| Parameter Description | Parameter          | Description              |
|-----------------------|--------------------|--------------------------|
|                       | <i>process- id</i> | OSPFv3 process ID number |
|                       | <i>area-id</i>     | Area ID                  |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following command displays the topology information about each area of OSPFv3.

```

Ruijie# show ipv6 ospf topology
OSPFv3 Process (1)
OSPFv3 paths to Area (0.0.0.0) routers
Router ID      Bits  Metric  Next-Hop
Interface
1.1.1.1        B   --
2.2.2.2        EB  1       2.2.2.2/fe80::21a:a9ff:fe41:5b06
GigabitEthernet 0/6

OSPFv3 paths to Area (0.0.0.1) routers
Router ID      Bits  Metric  Next-Hop
Interface
1.1.1.1        V B   --
2.2.2.2        VEB 1       2.2.2.2/fe80::21a:a9ff:fe41:5b06
GigabitEthernet 0/6
    
```

| Related Commands | Command                 | Description                                    |
|------------------|-------------------------|------------------------------------------------|
|                  | <b>ipv6 router ospf</b> | Starts the OSPFv3 routing process.             |
|                  | <b>area range</b>       | Configures the address range of the OSPF area. |

**Platform Description** N/A

### 3.50 show ipv6 ospf virtual-links

Use this command to display the virtual link information of the OSPFv3 process

**show ipv6 ospf [ *process-id* ] virtual-links**

| Parameter Description | Parameter         | Description              |
|-----------------------|-------------------|--------------------------|
|                       | <i>process-id</i> | OSPFv3 process ID number |

**Defaults** N/A

**Command Mode** Privileged EXEC mode.

**Usage Guide** N/A

**Configuration** The following command displays the information about the OSPFv3 virtual link.

**Examples**

```
Ruijie# show ipv6 ospf virtual-links
Virtual Link VLINK1 to router 2.2.2.2 is down
  Transit area 0.0.0.1 via interface FastEthernet 1/0, instance ID 0
  Local address *
  Remote address 3333::1/128
  Transmit Delay is 1 sec, State Down,
  Timer intervals configured, Hello 10, Dead 40, Wait 40, Retransmit 5

  Hello due in 00:00:08

  Adajcency state Full
```

| Related Commands | Command                        | Description                               |
|------------------|--------------------------------|-------------------------------------------|
|                  | <b>ipv6 router ospf</b>        | Starts the OSPFv3 routing process.        |
|                  | <b>area virtual-link</b>       | Configures the OSPFv3 virtual link.       |
|                  | <b>show ipv6 ospf neighbor</b> | Displays the OSPFv3 neighbor information. |

**Platform Description** N/A

### 3.51 timers lsa arrival

Use this command to configure a delay for receiving repeated LSAs. Use the **no** form of this command to restore the default setting.

**timers lsa arrival *arrival-time***

**no timers lsa arrival**

| <b>Parameter Description</b>  | <table border="1"> <thead> <tr> <th>Parameter</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td><i>arrival-time</i></td> <td>Specifies the delay for receiving repeated LSAs. The range is from 0 to 600000 in the unit of milliseconds.</td> </tr> </tbody> </table> | Parameter | Description | <i>arrival-time</i>   | Specifies the delay for receiving repeated LSAs. The range is from 0 to 600000 in the unit of milliseconds. |
|-------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------|-------------|-----------------------|-------------------------------------------------------------------------------------------------------------|
| Parameter                     | Description                                                                                                                                                                                                                                                                   |           |             |                       |                                                                                                             |
| <i>arrival-time</i>           | Specifies the delay for receiving repeated LSAs. The range is from 0 to 600000 in the unit of milliseconds.                                                                                                                                                                   |           |             |                       |                                                                                                             |
| <b>Defaults</b>               | The default is 1000.                                                                                                                                                                                                                                                          |           |             |                       |                                                                                                             |
| <b>Command Mode</b>           | Routing process configuration mode                                                                                                                                                                                                                                            |           |             |                       |                                                                                                             |
| <b>Usage Guide</b>            | Configure the device not to process repeated LSAs received within the specific delay.                                                                                                                                                                                         |           |             |                       |                                                                                                             |
| <b>Configuration Examples</b> | The following example sets the delay for receiving repeated LSAs to 2 seconds.<br><pre>Ruijie(config)# ipv6 router ospf 1 Ruijie(config-router)# timers lsa arrival 2000</pre>                                                                                                |           |             |                       |                                                                                                             |
| <b>Related Commands</b>       | <table border="1"> <thead> <tr> <th>Command</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td><b>show ipv6 ospf</b></td> <td>Displays OSPFv3 process information, including identifiers of routing devices.</td> </tr> </tbody> </table>                              | Command   | Description | <b>show ipv6 ospf</b> | Displays OSPFv3 process information, including identifiers of routing devices.                              |
| Command                       | Description                                                                                                                                                                                                                                                                   |           |             |                       |                                                                                                             |
| <b>show ipv6 ospf</b>         | Displays OSPFv3 process information, including identifiers of routing devices.                                                                                                                                                                                                |           |             |                       |                                                                                                             |
| <b>Platform Description</b>   | N/A                                                                                                                                                                                                                                                                           |           |             |                       |                                                                                                             |

### 3.52 timers pacing lsa-group

Use this command to set an LSA group pace interval. Use the **no** form of this command to restore the default setting.

**timers pacing lsa-group** *seconds*

**no timers pacing lsa-group**

| <b>Parameter Description</b> | <table border="1"> <thead> <tr> <th>Parameter</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>seconds</td> <td>Specifies the LSA group pace interval. The range is from 10 to 1800 in the unit of seconds. The default value is 30.</td> </tr> </tbody> </table> | Parameter | Description | seconds | Specifies the LSA group pace interval. The range is from 10 to 1800 in the unit of seconds. The default value is 30. |
|------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------|-------------|---------|----------------------------------------------------------------------------------------------------------------------|
| Parameter                    | Description                                                                                                                                                                                                                                                                |           |             |         |                                                                                                                      |
| seconds                      | Specifies the LSA group pace interval. The range is from 10 to 1800 in the unit of seconds. The default value is 30.                                                                                                                                                       |           |             |         |                                                                                                                      |
| <b>Defaults</b>              | The default is 30.                                                                                                                                                                                                                                                         |           |             |         |                                                                                                                      |
| <b>Command Mode</b>          | Routing process configuration mode                                                                                                                                                                                                                                         |           |             |         |                                                                                                                      |
| <b>Usage Guide</b>           | Each LSA has its own lifetime, that is, LSA aging time. An LSA existing for 1800s will be refreshed so that the living time of the LSA will not exceed its aging time. This ensures that normal LSAs are not                                                               |           |             |         |                                                                                                                      |

cleared due to timeout of aging time. If update and aging operations of each LSA are separately computed, a large number of CPU resources will be consumed.

To effectively utilize CPU resources, configure the device to group LSAs for uniform refreshment. The time for refreshing a group of LSAs is called an LSA group pace interval. Grouping refreshment is to put the LSAs to be refreshed within an LSA group pace interval into a group and refresh them uniformly.

When the number of LSAs is fixed, a longer LSA group pace interval will allow the CPU to process more LSAs when the timer expires for one time. To keep the stability of the CPU, you are recommended not to set an over long LSA group pace interval. This prevents the CPU from processing excessive LSAs when the timer expires each time. If the CPU processes a large number of LSAs each time, it is recommended to shorten the LSA group pace interval. For example, if the database has 10000 LSAs, you need to reduce the LSA group pace interval. If it has only 40 to 100 LSAs, you can adjust the group pace interval to 10 through 20 minutes.

**Configuration** The following example sets the LSA group pace interval to 120 seconds.

**Examples**

```
Ruijie(config)# ipv6 router ospf 1
Ruijie(config-router)#timers pacing lsa-group 120
```

**Related  
Commands**

| Command               | Description                                |
|-----------------------|--------------------------------------------|
| <b>show ipv6 ospf</b> | Displays OSPFv3 configuration information. |

**Platform** N/A  
**Description**

### 3.53 timers pacing lsa-transmit

Use this command to set an interval for sending LSA groups. Use the **no** form of this command to restore the default setting.

**timers pacing lsa-transmit** *transmit-time transmit-count*

**no timers pacing lsa-transmit**

**Parameter  
Description**

| Parameter             | Description                                                                                              |
|-----------------------|----------------------------------------------------------------------------------------------------------|
| <i>transmit-time</i>  | Specifies the interval for sending LSA groups. The range is from 10 to 1000 in the unit of milliseconds. |
| <i>transmit-count</i> | Specifies the number of LS-UPD packets in an LSA group. The range is from 1 to 200.                      |

**Defaults** The default transmit-time is 40 and the transmit-count is 1.

**Command  
Mode** Routing process configuration mode

**Usage Guide** There are usually a lot of LSAs on a network; therefore, the load of the device is very high. Setting proper **transmit-time** and **transmit-count** values can restrict flooding of LS-UPD packets on the network.

When the CPU load is not high and network bandwidth usage is not large, you can reduce the **transmit-time** value and increase the **transmit-count** value to accelerate route convergence.

**Configuration Examples** The following example sets the interval for sending LS-UPDs to 50 milliseconds and the specified 20 packets to be sent each time.

```
Ruijie(config)# ipv6 router ospf 1
Ruijie(config-router)# timers pacing lsa-transmit 50 20
```

**Related Commands**

| Command               | Description                          |
|-----------------------|--------------------------------------|
| <b>show ipv6 ospf</b> | Displays OSPFv3 process information. |

**Platform** N/A  
**Description**

### 3.54 timers spf

Use this command to set the delay and interval for the OSPFv3 to calculate SPF after receiving the topology change. Use the **no** format of this command to restore the default setting.

**timers spf** *delay holdtime*

**no timers spf**

**Parameter Description**

| Parameter           | Description                                                                                                                                                                                                                                 |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>spf-delay</i>    | Defines the waiting time for the SPF calculation, which ranges from 0 to 2147483647 seconds. After receiving the topology change information, the OSPF routing process has to waiting for a given period before making the SPF calculation. |
| <i>spf-holdtime</i> | Defines the interval between two SPF calculations, which ranges from 0 to 2147483647 seconds. If the interval has not passed even if the waiting time has elapsed, no SPF calculation can be made yet.                                      |

**Defaults** There are two default situations: 1. The versions earlier than RGOS 10.4 do not support the command **timers throttle spf**. The system default is **timers spf 5 10**. 2. The RGOS 10.4 and the later versions do support the command **timers throttle spf**, where **timer spf** takes no effect by default. The delay for SPF calculation is subject to the default setting of the command **timers throttle spf**. Refer to the description of the command.

**Command Mode** Routing process configuration mode

**Usage Guide** The smaller the *spf-delay* and *spf-holdtime*, the shorter time the OSPF takes to adapt to the topology change, but the more CPU time will be used of the router.

 The **timer spf** configuration and the **timers throttle spf** configuration will overwrite each other.

**Configuration Examples** The following example sets the delay and holdtime of the OSPFv3 to 3 seconds and 9 seconds respectively.

```
Ruijie(config)# ipv6 router ospf 20
Ruijie(config-router)# timers spf 3 9
```

**Related Commands**

| Command                    | Description                                                     |
|----------------------------|-----------------------------------------------------------------|
| <b>clear ipv6 ospf</b>     | Restarts part of the function of the OSPFv3.                    |
| <b>show ipv6 ospf</b>      | Displays the OSPFv3 routing process information.                |
| <b>timers throttle spf</b> | Configures the exponential backoff delay of the SPF calculation |

**Platform** N/A

**Description**

### 3.55 timers throttle lsa all

Use this command to configure an exponential backoff algorithm for generating LSAs. Use the **no** form of this command to restore the default setting.

**timers throttle lsa all** *delay-time hold-time max-wait-time*

**no timers throttle lsa all**

**Parameter Description**


| Parameter            | Description                                                                                                                                                                                                                        |
|----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>delay-time</i>    | Specifies a shortest LSA generation delay, in milliseconds (the first batch of LSAs is usually generated immediately).<br>The range is from 0 to 600000 in the unit of milliseconds.                                               |
| <i>hold-time</i>     | Specifies a shortest interval between the first two times of LSA refreshment, in milliseconds.<br>The range is from 1 to 600000 in the unit of milliseconds                                                                        |
| <i>max-wait-time</i> | Specifies a longest interval for consecutive two times of LSA refreshment, in milliseconds. The value is used to determine whether LSAs are refreshed consecutively.<br>The range is from 1 to 600000 in the unit of milliseconds. |

**Defaults** The default *delay-time* is 0, *hold-time* is 5000 and *max-wait-time* is 5000.

**Command** Routing process configuration mode

**Mode**

**Usage Guide** If high route convergence capability is needed when links are changed, set a small *delay-time* value. To reduce CPU consumption, you can properly increase the values of the parameters.

 The *hold-time* value cannot be smaller than the *delay-time* value and must be smaller than or equal to the *max-wait-time* value.

**Configuration Examples** The following example sets *delay-time* to 10 milliseconds, *hold-time* to one second, and *max-wait-time* to five seconds.

```
Ruijie(config)# ipv6 router ospf 1
Ruijie(config-router)# timers throttle lsa all 10 1000 5000
```

**Related Commands**

| Command                     | Description                          |
|-----------------------------|--------------------------------------|
| <code>show ipv6 ospf</code> | Displays OSPFv3 process information. |

**Platform** N/A

**Description**

### 3.56 timers throttle route

Use this command to configure the delay time of route calculation on receiving the ASBR summary LSA and the external summary LSA. Use the **no** form of this command to restore the default setting.

**timers throttle route** { **inter-area** *ia-delay* | **ase** *ase-delay* }

**no timers throttle route** { **inter-area** | **ase** }

**Parameter Description**

| Parameter         | Description                                                                                                                                                                                                                                          |
|-------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>inter-area</b> | Calculates the inter area routes.                                                                                                                                                                                                                    |
| <i>ia-delay</i>   | Sets the delay time of the inter-area route calculation, in the range from 0 to 600000 in the unit of milliseconds. On receiving the ASBR summary LSA, the router will not calculate the inter-area routes until the <i>ia-delay</i> time runs out.  |
| <b>ase</b>        | Calculates the external routes.                                                                                                                                                                                                                      |
| <i>ase-delay</i>  | Sets the delay time of the external route calculation, in the range from 0 to 600000 in the unit of milliseconds. On receiving the external summary LSA, the router will not calculate the external routes until the <i>ase-delay</i> time runs out. |

**Defaults** The default *ia-delay* is 0 and *ase-delay* is 0.

**Command** Routing process configuration mode



**Mode**

**Usage Guide** The default setting is recommended if the network needs to be fast converged. For the instable network where multiple inter-area and external routes exist, if you want to optimize the route calculation and save the CPU resources, increase the delay time.

**Configuration** The following example sets the delay time of the inter-area route calculation to one second.

**Examples**

```
Ruijie(config)# ipv6 router ospf 1
Ruijie(config-router)# timers throttle route inter-area 1000
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

### 3.57 timers throttle spf

Use this command to configure, the delay for SPF calculation as well as the minimum and maximum intervals between two SPF calculations after receiving the topology change information for OSPFv3 in the routing process configuration mode. Use the **no** form of this command to restore the default setting.

**timers throttle spf** *spf-delay spf-holdtime spf-max-waittime*

**no timers throttle spf**

**Parameter Description**

| Parameter               | Description                                                                                                                                         |
|-------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>spf-delay</i>        | Specifies an SPF calculation delay after the topology change information is received.<br>The range is from 1 to 600000 in the unit of milliseconds. |
| <i>spf-holdtime</i>     | Specifies a shortest interval between two SPF calculations.<br>The range is from 1 to 600000 in the unit of milliseconds.                           |
| <i>spf-max-waittime</i> | Specifies a longest interval between two SPF calculations.<br>The range is from 1 to 600000 in the unit of milliseconds.                            |

**Defaults** The default *spf-delay* is 1000. *spf-holdtime* is 5000 and *spf-max-waittime* is 10000.

**Command**

**Mode** Routing process configuration mode.

**Usage Guide** *Spf-delay* refers to the delay from the topology change to the SPF calculation. *Spf-holdtime* refers to the minimum interval between the first and the second SPF calculations. Then, the interval of the consecutive SPF calculations is at least twice as the last interval till it reaches to *spf-max-waittime*. If

the interval between two SPF calculations has exceeded the required minimum value, the interval of SPF calculation will re-start from *spf-holdtime*.

Smaller *spf-delay* and *spf-holdtime* value can make the topology convergence faster. Greater *spf-max-waittime* value can reduce the SPF calculations. Those configuration are flexible according to the actual stability of the network topology.

Compared with the timers spf command, this command is more flexible. It not only speeds up the SPF convergence calculation, but also reduces the system resources consumption of SPF calculation as the topology changes continuously. Therefore, the timers throttle spf command is recommended.

- i The spf-holdtime cannot be smaller than spf-delay, or the spf-holdtime will be set to be equal to spf-delay;
- i The spf-max-waittime cannot be smaller than spf-holdtime, or the spf-max-waittime will be set to be equal to spf-holdtime automatically;
- i The configuration of the timers spf command and of the timers throttle spf command are overwritten each other.
- i With neither timers spf command nor timers throttle spf command configured, the default value refers to the default of the timers throttle spf command

**Configuration Examples** The following example configures the delay and holdtime and the maximum time interval of the OSPFv3 as 5ms, 1000ms and 90000ms respectively. If the topology changes consecutively, the time for SPF calculation is: five milliseconds, one second, three seconds, seven seconds, 15 seconds, 31 seconds, 63 seconds, 89 seconds, 179 seconds, 179+90 seconds.....

```
Ruijie(config)# ipv6 router ospf 20
Ruijie(config-router)# timers spf 5 1000 90000
```

**Related Commands**

| Command                | Description                                            |
|------------------------|--------------------------------------------------------|
| <b>clear ipv6 ospf</b> | Restarts part of the OSPFv3 function.                  |
| <b>show ipv6 ospf</b>  | Displays the routing process information of the OSFPv3 |
| <b>timers spf</b>      | Configures the SPF calculation delay .                 |

**Platform** N/A  
**Description**

### 3.58 two-way-maintain

Use this command to enable two-way OSPFv3 maintenance. Use the **no** form of this command to disable this function.

**two-way-maintain**  
**no two-way-maintain**

| Parameter | Parameter | Description |
|-----------|-----------|-------------|
|-----------|-----------|-------------|

|                    |     |     |
|--------------------|-----|-----|
| <b>Description</b> |     |     |
|                    | N/A | N/A |

**Defaults** Two-way OSPFv3 maintenance is enabled by default.

**Command Mode** Routing process configuration mode

**Usage Guide** Sometimes, there are a lot of sent and received packets on a network, occupying large CPU and memory resources. As a result, some packets cannot be processed immediately or are directly lost. If hello packets from a neighbor cannot be processed within the dead interval of neighbors, the connection with the neighbor will be interrupted due to connection timeout. If two-way OSPFv3 maintenance is enabled and a large number of packets exist on the network, besides hello packets, the two-way neighboring relationship between the device and the neighbor can also be maintained by DD, LSU, LSR, and LSAck packets from the neighbor. This prevents the neighboring relationship from failing due to receiving delay or discarding of hello packets.

**Configuration** The following example disables two-way OSPFv3 maintenance.

**Examples**

```
Ruijie(config)# ipv6 router ospf 1
Ruijie(config-router)# no two-way-maintain
```

|                         |                       |                                                   |
|-------------------------|-----------------------|---------------------------------------------------|
| <b>Related Commands</b> | <b>Command</b>        | <b>Description</b>                                |
|                         | <b>show ipv6 ospf</b> | Displays global OSPFv3 configuration information. |

**Platform Description** N/A

## 4 IS-IS Commands

### 4.1 address-family ipv6

Use this command to enter the **address-family ipv6** mode. Use the **no** form of this command to delete all configurations in the **address-family ipv6**.

**address-family ipv6** [ *unicast* ]

**no address-family ipv6** [ *unicast* ]

| Parameter Description | Parameter      | Description                  |
|-----------------------|----------------|------------------------------|
|                       | <i>unicast</i> | IPv6 unicast address prefix. |

**Defaults** By default, no address-family ipv6 is configured.

**Command Mode** IS-IS routing process configuration mode

**Usage Guide** This command is used for the IPv6 special configurations.  
To exit to the IS-IS routing process configuration mode, use the **exit-address-family** command.

#### Configuration

##### Examples

```
Ruijie(config)# router isis
Ruijie(config-router)# address-family ipv6 unicast
```

| Related Commands | Command             | Description                         |
|------------------|---------------------|-------------------------------------|
|                  | exit-address-family | Exits the address-family ipv6 mode. |

**Platform Description** N/A

### 4.2 adjacency-check

Use this command to detect protocols supported by the adjacency in the Hello packets. Use the **no** form of this command is to cancel this detection.

**adjacency-check**

**no adjacency-check**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|-----------------------|-----------|-------------|

|     |     |
|-----|-----|
| N/A | N/A |
|-----|-----|

**Defaults** By default, this detection is enabled.

**Command Mode** IS-IS routing process configuration mode or address-family ipv6 mode

**Usage Guide** N/A

**Configuration Examples**

```
Ruijie(config)# router isis
Ruijie(config-router)# adjacency-check
Ruijie(config-router)# address-family ipv6
Ruijie(config-router-af)# adjacency-check
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

### 4.3 area-password

Use this command to set the plain-text authentication password for the Level-1 area. Use the **no** form of this command to cancel the password set.

**area-password** [ 0 | 7 ] *password-string* [ **send-only** ]  
**no area-password** [ **send-only** ]

| Parameter Description  | Parameter | Description                                                                                                                                                         |
|------------------------|-----------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                        | <b>0</b>  |                                                                                                                                                                     |
| <b>7</b>               |           | Indicates that the key is displayed in ciphertext.                                                                                                                  |
| <i>password-string</i> |           | Indicates the password string for plaintext authentication. The string can contain up to 126 characters.                                                            |
| <b>send-only</b>       |           | Indicates that the plaintext authentication password is only used to authenticate sent Hello packets in Level-1 areas. Received Hello packets are not authenticate. |

**Defaults** By default, no authentication password is set.

**Command Mode** IS-IS routing process configuration mode

**Usage Guide** Run this command to enable authentication of received LSPs, CSNPs, and PSNPs in Level-1 areas

and include authentication information in these packets before they are sent. All IS-IS devices in an area must be configured with the same password.

This command does not take effect if the **authentication mode** command is executed. You need to first delete the previous command configuration.

To delete the password, run the **no area-password** command. If you run the **no area-password send-only** command, only the **send-only** setting is canceled. If you run the **area-password psw send-only** and **no area-password send-only** commands in sequence, the configuration is changed to **area-password psw**.

**Configuration Examples** The following example specifies the authentication in the IS-IS area using the plaintext mode with the password being *redgiant* and the password applicable to the packets sent only, but not to the packets received.

```
Ruijie(config)# router isis
Ruijie(config-router)# area-password redgiant send-only
```

**Related Commands**

| Command                    | Description                              |
|----------------------------|------------------------------------------|
| <b>domain-password</b>     | Sets the Level-2 domain password.        |
| <b>authentication mode</b> | Specifies the IS-IS authentication mode. |

**Platform Description** N/A

## 4.4 authentication key-chain

Use this command to specify the key-chain used by the IS-IS authentication. Use the **no** form of this command to cancel the key-chain specified.

**authentication key-chain** *name-of-chain* [ **level-1** | **level-2** ]

**no authentication key-chain** *name-of-chain* [ **level-1** | **level-2** ]

**Parameter Description**

| Parameter            | Description                                            |
|----------------------|--------------------------------------------------------|
| <i>name-of-chain</i> | Key-chain name with the maximum length being 255.      |
| <b>level-1</b>       | Specifies the authentication key-chain of the Level-1. |
| <b>level-2</b>       | Specifies the authentication key-chain of the Level-2. |

**Defaults** By default, the authentication key-chain is not specified.

**Command Mode** IS-IS routing process configuration mode

**Usage Guide** If the **key chain** command is not used to configure the corresponding key-chain, the authentication will not be performed. In addition, to make the IS-IS key-chain authentication effective, you need to configure the **authentication mode** command at the same time.

This key-chain can apply to the plain-text authentication mode and MD5 encrypted authentication mode. You can use the **authentication mode** command to set the authentication mode.

The length of the password key-string in the key-chain shall not be larger than 80 characters if the plain-text authentication mode is used, otherwise this configuration will fail.

Only one key-chain is used at one time. So, when configuring this command, the said key-chain will be replaced by the new specified one.

If the Level is not specified, the key-chain will apply to both Level-1 and Level-2.

The key-chain specified by this command works on the LSP, CSNP and PSNP packets. The IS-IS will send or receive the password that belongs to this key-chain.

There may contain multiple passwords in the key-chain. When sending the packets, use the password with small number first. While receiving the packets, the packet will be received as long as the password of this packet received corresponds to any password in the key-chain.

**Configuration** The following example specifies the authentication in the IS-IS area using the key-chain named *kc*:

**Examples**

```
Ruijie(config)# router isis
Ruijie(config-router)# authentication key-chain kc level-1
```

**Related  
Commands**

| Command                         | Description                                                                                          |
|---------------------------------|------------------------------------------------------------------------------------------------------|
| <b>authentication mode</b>      | Specifies the IS-IS authentication mode.                                                             |
| <b>authentication send-only</b> | Specifies the IS-IS authentication applicable to the sent packets only, but not to packets received. |
| <b>key-chain</b>                | Configures the key-chain.                                                                            |

**Platform** N/A

**Description**

## 4.5 authentication mode

Use this command to specify the mode of IS-IS authentication. Use the **no** form of this command to cancel the specified IS-IS authentication mode.

**authentication mode** { **md5** | **text** } [ **level-1** | **level-2** ]

**no authentication mode** { **md5** | **text** } [ **level-1** | **level-2** ]

**Parameter  
Description**

| Parameter      | Description                                                     |
|----------------|-----------------------------------------------------------------|
| <b>md5</b>     | Specifies the MD5 authentication mode to use.                   |
| <b>text</b>    | Specifies the plain-text authentication mode to use.            |
| <b>level-1</b> | Specifies the authentication mode taking effect on the Level-1. |
| <b>level-2</b> | Specifies the authentication mode taking effect on the Level-2. |

**Defaults** By default, the authentication mode is not specified.

**Command Mode** IS-IS routing process configuration mode

**Usage Guide** To make the key-chain configured by the **authentication key-chain** command effective, you must use the **authentication mode** command to specify the authentication mode.

If no Level is specified, the authentication mode specified is applicable to both Level-1 and Level-2.

When configuring the **authentication mode** command, if the **area-password** or **domain-password** command has been executed to configure the plaintext authentication before, the said commands will be overwritten by the new command.

If the **authentication mode** command has been configured, the **area-password** or **domain-password** will not be configured successfully, you need to delete the **authentication mode** command first.

**Configuration Examples** The following example specifies authentication in the IS-IS area to be the MD5 authentication mode.

```
Ruijie(config)# router isis
Ruijie(config-router)# authentication mode md5 level-1
```

**Related Commands**

| Command                         | Description                                                                                              |
|---------------------------------|----------------------------------------------------------------------------------------------------------|
| <b>area-password</b>            | Sets the area plaintext authentication password.                                                         |
| <b>authentication key-chain</b> | Specifies the key-chain used by the IS-IS authentication.                                                |
| <b>authentication send-only</b> | Specifies the IS-IS authentication applicable to the packets sent only, but not to the packets received. |
| <b>domain-password</b>          | Sets the domain plaintext authentication password.                                                       |

**Platform Description** N/A

## 4.6 authentication send-only

Use this command to specify the IS-IS authentication only applicable to the packets sent, but not to the packets received. Use the **no** form of this command to perform the authentication on the packets received.

**authentication send-only [ level-1 | level-2 ]**

**no authentication send-only [ level-1 | level-2 ]**

**Parameter Description**

| Parameter      | Description                                        |
|----------------|----------------------------------------------------|
| <b>level-1</b> | Specifies setting <b>send-only</b> on the Level-1. |
| <b>level-2</b> | Specifies setting <b>send-only</b> on the Level-2. |



- Defaults** By default, this command is not configured. If the IS-IS authentication is configured, the authentication will be performed on the packets both sent and received.
- Command** IS-IS routing process configuration mode
- Mode**
- Usage Guide** With this command configured, the IS-IS will set the authentication password in the packets sent, however, the authentication will not be performed on the packets received. It can apply to the following two occasions: 1. before deploying the IS-IS authentication for all devices in the network. 2. before changing the authentication password or authentication mode. Before the above two tasks start, you need to configure the **authentication send-only** command first to make each device perform no authentication on the packets received, so as to avoid the network oscillation caused during the subsequent authentication password deployment. After the deployment of the entire network authentication finished, execute the **no isis authentication send-only** command to cancel the **send-only** authentication mode.
- This command can apply to the plain-text authentication mode and MD5 authentication mode. You can use the **authentication mode** command to set the authentication mode.
- If the Level is not specified, the authentication mode specified is applicable to both Level-1 and Level-2.

**Configuration** The following example specifies the authentication in the IS-IS area to be the **send-only** mode.

**Examples**

```
Ruijie(config)# router isis
Ruijie(config-router)# authentication send-only level-1
```

**Related Commands**

| Command                         | Description                                   |
|---------------------------------|-----------------------------------------------|
| <b>authentication key-chain</b> | Specifies the IS-IS authentication key-chain. |
| <b>authentication mode</b>      | Specifies the mode of IS-IS authentication.   |
| <b>key-chain</b>                | Configures the key-chain.                     |

**Platform** N/A

**Description**

## 4.7 bfd all-interfaces

Use this command to configure all interfaces running the IS-IS protocol to conduct BFD link detection.  
**bfd all-interfaces [anti-congestion]**

Use the **no** form of this command to configure all interfaces running the IS-IS protocol to not conduct BFD link detection.

**no bfd all-interfaces [anti-congestion]**

**Parameter**

| Parameter | Description |
|-----------|-------------|
|-----------|-------------|

| Description |                 |                                |
|-------------|-----------------|--------------------------------|
|             | anti-congestion | IS-IS BFD anti-flapping option |

**Defaults** The IS-IS support for BFD is disabled on all interfaces by default.

**Command Mode** IS-IS routing process configuration mode

**Default Level** 14

**Usage Guide** There are two methods for enabling or disabling the IS-IS support for BFD on interfaces.

Method 1: In IS-IS routing process configuration mode, run the [ **no** ] **bfd all-interfaces [anti-congestion]** command to enable or disable the IS-IS support for BFD on all interfaces running the IS-IS protocol.



Method 2: In interface configuration mode, run the **isis bfd [disable | anti-congestion]** command to enable or disable the IS-IS support for BFD on a specified interface.

In normal cases, the BFD function enables to send detection packets to detect the link status at an interval of several milliseconds. When a link exception such as link interruption occurs, the BFD function enables to rapidly detect the link exception, and notify a device running the IS-IS protocol to delete neighbors and delete neighbor availability information from LSP packets. The device running the IS-IS protocol performs route re-calculation and generates a new route, to bypass the failure link, thereby implementing fast convergence. With the introduction of some new technologies such as the Multi-Service Transport Platform (MSTP), link congestion easily occurs in peak hours. When congestion occurs, the BFD function allows to rapidly detect a link exception, notify a device running the IS-IS protocol to delete a neighbor and delete neighbor availability information from LSP packets, and perform link switching to bypass the congested link. The interval for an IS-IS neighbor to send a Hello detection packet is 10 seconds and the timeout time is 30 seconds. When an exception is detected via the BFD function, IS-IS Hello packets can be normally received, an IS-IS neighbor relationship can be rapidly established, and the route is restored to pass the congested link. Then, BFD is performed again. If there is still a link exception, link switching is performed again, and the process repeats. The route switches between the congested link and other links and flapping occurs.


The anti-flapping function can be enabled to prevent route flapping in the case of link congestion. After the anti-flapping function is enabled, if a link is congested, the IS-IS neighbor status keeps alive but the neighbor availability information in LSP packets is deleted, and the route switches to a non-congested link. After the link is restored, that is, congestion is removed, the neighbor availability information is restored in LSP packets, and the route switches back to the originally congested link, thereby preventing route flapping.

When IS-IS anti-flapping is enabled, the BFD anti-flapping command (**bfd up-dampening**) must be configured on an interface. The two commands must be configured simultaneously. If only one of them is configured, the anti-flapping function does not take effect or a network exception is incurred.

For details about how to enable the BFD anti-flapping function on an interface, see the configuration example of the ISIS BFD command.

-  Before the IS-IS support for BFD is configured, a BFD session must be configured on an interface.
-  When the BFD anti-flapping command is configured on an interface, if the IS-IS support for BFD is

already configured on the interface, the anti-flapping function must be enabled for a device running the IS-IS protocol.

-  When the IS-IS anti-flapping option is configured, the BFD anti-flapping command must be configured on an interface.

**Configuration** The following example configures all interfaces running the IS-IS protocol to conduct BFD.

**Examples**

```
Ruijie(config)# router isis 123
Ruijie(config-router)# bfd all-interface
```

## 4.8 clear clns neighbors

Use this command to clear all IS-IS neighbor relation tables.

**clear clns neighbors**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       |           | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** This command is used in the condition of needing to refresh the IS-IS neighbor relation table immediately.

**Configuration** The following example clears all IS-IS neighbor relation tables.

**Examples**

```
Ruijie# clear clns neighbors
```

| Related Commands | Command | Description       |
|------------------|---------|-------------------|
|                  |         | <b>clear isis</b> |

**Platform Description** N/A

## 4.9 clear isis \*

Use this command to clear the data structure of all IS-ISs.

**clear isis \***

| <b>Parameter Description</b> | Parameter | Description |
|------------------------------|-----------|-------------|
|                              | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** This command is used in the condition of needing to refresh the LSP immediately. For example, after executing the **area-password** and **domain-password** commands, the previous LSPs still exist in this router, you can use this command to clear these LSPs.

**Configuration Examples** Ruijie# `clear isis *`

| <b>Related Commands</b> | Command                           | Description                 |
|-------------------------|-----------------------------------|-----------------------------|
|                         | <code>clear clns neighbors</code> | Clears all IS-IS neighbors. |

**Platform Description** N/A

### 4.10 clear isis counter

Use this command to clear various statistics of IS-IS.

`clear isis [ tag ] counter`

| <b>Parameter Description</b> | Parameter  | Description    |
|------------------------------|------------|----------------|
|                              | <i>tag</i> | IS-IS instance |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration Examples** The following example clears various statistics of IS-IS.

Ruijie# `clear isis counter`

| <b>Related Commands</b> | Command | Description |
|-------------------------|---------|-------------|
|                         |         |             |

|                     |                                          |
|---------------------|------------------------------------------|
| <b>clear isis *</b> | Clears the data structure of all IS-ISs. |
|---------------------|------------------------------------------|

**Platform** N/A

**Description**

## 4.11 default-information originate

Use this command to generate a default routing information and advertise it by LSP. Use the **no** form of this command to delete the default routing information from LSP.

**default-information originate** [ **route-map** *map-name* ]

**no default-information originate** [ **route-map** *map-name* ]

| Parameter          | Parameter       | Description                                                                                                            |
|--------------------|-----------------|------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b> | <i>map-name</i> | (Optional) Associated route-map's name, with the maximum length being 32. By default, the route-map is not associated. |

**Defaults** By default, there is no default route.

**Command** IS-IS routing process configuration mode or address-family ipv6 mode.

**Mode**

**Usage Guide** The default route is not generated in the Level-2 domain. Use this command to allow the default route to enter the Level-2 domain.

**Configuration** The following example generates a default routing information and advertises it by LSP

**Examples**

```
Ruijie(config)# router isis
Ruijie(config-router)# default-information originate
Ruijie(config-router)# address-family ipv6
Ruijie(config-router-af)# default-information originate
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 4.12 distance

Use this command to set the management distance of the IS-IS routes. Use the **no** form of this command to restore the default settings.

**distance** *my-cost*

**no distance**

| Parameter<br>Description | Parameter | Description    |
|--------------------------|-----------|----------------|
|                          |           | <i>my-cost</i> |

**Defaults** By default, the distance is 115.

**Command Mode** IS-IS routing process configuration mode or IS-IS address-family ipv6 configuration mode

**Usage Guide** Use this command to configure the management distance of the IS-IS routes. The shorter the management distance, the more reliable the routing information is.

**Configuration** The following example sets the management distance of the IS-IS routes.

```
Ruijie(config)# router isis
Ruijie(config-router)# distance 100
```

| Related<br>Commands | Command | Description        |
|---------------------|---------|--------------------|
|                     |         | <b>isis metric</b> |

**Platform** N/A  
**Description**

### 4.13 domain-password

Use this command to set the plain-text authentication password of Level-2 domain. Use the **no** form of this command to cancel the password configured.

**domain-password** [ 0 | 7 ] *password-string* [ **send-only** ]  
**no domain-password** [ **send-only** ]

| Parameter<br>Description | Parameter              | Description                                                                                                                                                          |
|--------------------------|------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                          |                        | <b>0</b>                                                                                                                                                             |
|                          | <b>7</b>               | Indicates that the key is displayed in ciphertext.                                                                                                                   |
|                          | <i>password-string</i> | Indicates the password string for plaintext authentication. The string can contain up to 126 characters.                                                             |
|                          | <b>send-only</b>       | Indicates that the plaintext authentication password is only used to authenticate sent Hello packets in Level-1 areas. Received Hello packets are not authenticated. |

**Defaults** By default, no authentication password is set.

**Command** IS-IS routing process configuration mode  
**Mode**

**Usage Guide** Run this command to enable authentication of received LSPs, CSNPs, and PSNPs in Level-2 domains and include authentication information in these packets before they are sent. All IS-IS devices in a Level-2 domain must be configured with the same password.

This command does not take effect if the **authentication mode** command is executed. You need to first delete the previous command configuration.

To delete the password, run the **no domain-password** command. If you run the **no domain-password send-only** command, only the **send-only** setting is canceled. If you run the **domain-password psw send-only** and **no domain-password send-only** commands in sequence, the configuration is changed to **domain-password psw**.

**Configuration** Ruijie(config)# **router isis**

**Examples** Ruijie(config-router)# **domain-password redgiant**

**Related Commands**

| Command                    | Description                                                  |
|----------------------------|--------------------------------------------------------------|
| <b>area-password</b>       | Sets the plain-text authentication password of Level-1 area. |
| <b>authentication mode</b> | Specifies the IS-IS authentication mode.                     |

**Platform** N/A  
**Description**

## 4.14 enable mib-binding

Use this command to bind MIBs with an IS-IS process. Use the **no** form of this command to unbind the MIB from the IS-IS process.

**enable mib-binding**

**no enable mib-binding**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** By default, MIBs are bound with IS-IS process 1.

**Command** IS-IS routing process configuration mode  
**Mode**

**Usage Guide** By default, MIBs are bound with IS-IS process 1. The IS-IS process support multiple processes. The administrator can use this command to bind MIBs with the IS-IS process.

**Configuration** The following example binds the MIB with an IS-IS process.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# router isis
Ruijie(config-router)# enable mib-binding
```

**Related Commands**

| Command                                | Description                                                 |
|----------------------------------------|-------------------------------------------------------------|
| <b>graceful-restart helper disable</b> | Disables the IS-IS GR Help capability.                      |
| <b>isis hello-interval</b>             | Sets the interval of sending Hello packets.                 |
| <b>isis hello-multiplier</b>           | Sets the Hello holdtime multiplier for the IS-IS interface. |

**Platform** N/A

**Description**

## 4.15 enable traps

Use this command to enable the system to send one or multiple types of IS-IS trap packets. Use the **no** form of this command to disable the system to send IS-IS trap packets.

**enable traps** { **all** | *traps set* }

**no enable traps** { **all** | *traps set* }

**Parameter Description**

| Parameter        | Description                                        |
|------------------|----------------------------------------------------|
| <b>all</b>       | Indicates all types of IS-IS trap packets.         |
| <i>traps set</i> | Indicates the specified type of IS-IS trap packet. |

**Defaults** By default, no IS-IS trap is sent.

**Command Mode** IS-IS routing process configuration mode

**Usage Guide** There are 18 types of IS-IS packets. The IS-IS packets can be classified into multiple sets. Each set includes several types of trap packets. To enable the system to send the IS-IS trap packet, you need to enable the global IS-IS trap using the **snmp-server enable traps isis** command, specify the host to receive the IS-IS trap packets, and use the **enable traps** { **all** | *traps set* } command to specify the type of IS-IS trap packet to be sent.

**Configuration Examples** The following example enables the system to send all IS-IS trap packets to the host of IP address 192.168.1.1.

```
Ruijie# configure terminal
Ruijie(config)#snmp-server enable traps isis
Ruijie(config)#snmp-server host 10.1.1.1 traps version 2c public
```



```
Ruijie(config)#router isis
Ruijie(config-router)# enable traps all
```

**Related Commands**

| Command                                | Description                                                 |
|----------------------------------------|-------------------------------------------------------------|
| <b>graceful-restart helper disable</b> | Disables the IS-IS GR Help capability.                      |
| <b>isis hello-interval</b>             | Sets the interval of sending Hello packets.                 |
| <b>isis hello-multiplier</b>           | Sets the Hello holdtime multiplier for the IS-IS interface. |

**Platform** N/A

**Description**

### 4.16 exit-address-family

Use this command to exit IS-IS address family IPv6 configuration mode and return to IS-IS routing process configuration mode.

**exit-address-family**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** N/A

**Command Mode** IS-IS address-family IPv6 configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example exits IS-IS address family IPv6 configuration mode.

```
Ruijie (config-router-af)#exit-address-family
Ruijie (config-router)#
```

**Related Commands**

| Command                                | Description                                                 |
|----------------------------------------|-------------------------------------------------------------|
| <b>graceful-restart helper disable</b> | Disables the IS-IS GR Help capability.                      |
| <b>isis hello-interval</b>             | Sets the interval of sending Hello packets.                 |
| <b>isis hello-multiplier</b>           | Sets the Hello holdtime multiplier for the IS-IS interface. |

**Platform** N/A

**Description**

## 4.17 graceful-restart

Use this command to enable the IS-IS GR Restart capability. Use the **no** form of this command to disable this capability.

**graceful-restart**

**no graceful-restart**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** IS-IS GR is enabled by default.

**Command Mode** IS-IS routing process configuration mode

**Usage Guide** Use this command to enable the IS-IS GR Restart capability. As long as the network conditions remain unchanged, IS-IS can be restarted and restored to the pre-restart state without impact on data forwarding.

**Configuration** The following example enables the IS-IS GR Restart capability.

**Examples**

```
Ruijie(config)# router isis
Ruijie(config-router)# graceful-restart
```

| Related Commands | Command                                | Description                                                 |
|------------------|----------------------------------------|-------------------------------------------------------------|
|                  | <b>graceful-restart helper disable</b> | Disables the IS-IS GR Help capability.                      |
|                  | <b>isis hello-interval</b>             | Sets the interval of sending Hello packets.                 |
|                  | <b>isis hello-multiplier</b>           | Sets the Hello holdtime multiplier for the IS-IS interface. |

**Platform** N/A

**Description**

## 4.18 graceful-restart grace-period

Use this command to configure the maximal interval for the graceful-restart. Use the **no** form of this command to restore the default interval.

**graceful-restart grace-period** *seconds*

**no graceful-restart grace-period**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|-----------------------|-----------|-------------|

|                |                                                                                             |
|----------------|---------------------------------------------------------------------------------------------|
| <i>seconds</i> | Time interval allowed for the device graceful-restart, in the range of 1 to 65,535 seconds. |
|----------------|---------------------------------------------------------------------------------------------|

**Defaults** The default value is 300 seconds.

**Command Mode** IS-IS routing process configuration mode

**Usage Guide** N/A

**Configuration** The following example sets the interval of the grace-restart to 40 seconds.

**Examples**

```
Ruijie(config)# router isis
Ruijie(config-router)# graceful-restart grace-period 40
```

| Related Commands | Command                           | Description                                              |
|------------------|-----------------------------------|----------------------------------------------------------|
|                  | <b>graceful-restart</b>           | Enables the IS-IS GR Restart capability.                 |
|                  | <b>show isis graceful-restart</b> | Displays the status information of the IS-IS GR Restart. |

**Platform** N/A

**Description**

## 4.19 graceful-restart helper disable

Use this command to disable the IS-IS GR Helper capability. Use the **no** form of this command to enable this capability.

- graceful-restart helper disable**
- no graceful-restart helper disable**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** IS-IS GR Helper capacity is enabled by default.

**Command Mode** IS-IS routing process configuration mode

**Usage Guide** To disable the IS-IS GR Helper capability, execute this command. In this case, the IS-IS will ignore the request of graceful-restarting the device.

**Configuration** The following example disables the IS-IS GR Helper capability.

**Examples**

```
Ruijie(config)# router isis
```

```
Ruijie(config-router)# graceful-restart helper disable
```

| Related Commands | Command | Description             |
|------------------|---------|-------------------------|
|                  |         | <b>graceful-restart</b> |

**Platform** N/A

**Description**

## 4.20 hello padding

Use this command to pad IS-IS Hello packets.

**hello padding [ multi-point | point-to-point ]**

Use the **no** form of this command to cancel the padding of IS-IS Hello packets.

**no hello padding [ multi-point | point-to-point ]**

| Parameter Description | Parameter             | Description                         |
|-----------------------|-----------------------|-------------------------------------|
|                       |                       | <b>multi-point</b>                  |
|                       | <b>point-to-point</b> | Pads Hello packets of the P2P type. |

**Defaults** Padding is enabled for Hello packets of the LAN type and P2P type by default.

**Command Mode** IS-IS routing process configuration mode

**Default Level** 14

**Usage Guide** Hello packets can be padded to notify a neighbor of the MTU supported by the local device. You can use this command to set whether to pad all Hello packets sent by the IS-IS process. You can also separately specify the type of Hello packets for padding, for example, you can set not to pad all Hello packets of the LAN type or not to pad all Hello packets of the P2P type.

The **isis hello padding** command is available in interface configuration mode. Hello packets sent by a specific interface are not padded if the padding of such Hello packets is cancelled in IS-IS routing process configuration mode or the padding of Hello packets sent by the interface is cancelled in interface configuration mode.

**Configuration** The following example configures to cancel the padding of Hello packets of the P2P type.

**Examples**

```
Ruijie(config)# router isis
Ruijie(config-router)# no hello padding point-to-point
```

## 4.21 hostname dynamic

Use this command to replace the System ID of the router with the destination router's hostname.

Use the **no** form of this command to cancel this replacement.

**hostname dynamic**

**no hostname dynamic**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** By default, the hostname dynamic function is disabled.

**Command Mode** IS-IS routing process configuration mode

**Usage Guide** With this command configured, the hostname of the destination router replaces the System ID. The System IDs shown in the execution of the command such as **show isis database**, **show isis neighbors** are all replaced by the hostname of the destination router.

**Configuration Examples** Ruijie(config)# **router isis**

Ruijie(config-router)# **hostname dynamic**

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 4.22 ignore-lsp-errors

Use this command to ignore the LSP checksum errors. Use the **no** form of this command to not ignore the LSP checksum errors.

**ignore-lsp-errors**

**no ignore-lsp-errors**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** By default, the LSP checksum errors are not ignored.

**Command** IS-IS routing process configuration mode  
**Mode**

**Usage Guide** When the local IS-IS receives a LSP, it will calculate the checksum of LSP received and compare the calculated checksum with that in the LSP packets. By default, if the checksum in the LSP packets is different from the checksum calculated, this LSP will be discarded without processing. If we execute the ignore-lsp-errors command to ignore the checksum errors, the LSP packets with the incorrect checksum will be processed as the normal packets.

**Configuration Examples**

```
Ruijie(config)# router isis
Ruijie(config-router)# ignore-lsp-errors
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 4.23 ip router isis

Use this command to enable the IPv4 IS-IS on the specified interface. Use the **no** form of this command to disable the IPv4 IS-IS routing on the specified interface.

**ip router isis** [ tag ]

**no ip router isis** [ tag ]

**Parameter Description**

| Parameter | Description          |
|-----------|----------------------|
| tag       | IS-IS instance name. |

**Defaults** By default, the Ipv4 IS-IS is disabled on the interface.

**Command** Interface configuration mode  
**Mode**

**Usage Guide** Use this command to enable the IS-IS IPv4 routing protocol on the interface. The **no** form of this command disables the IS-IS IPv4 routing.

If the **no ipv4 unicast-routing** is executed in global configuration mode, the IS-IS will disable the IPv4 routing function on all interfaces, namely execute the **no ipv4 router isis** [tag] on all interfaces automatically, while other IS-IS configurations will remain unchanged.

**Configuration Examples**

```
Ruijie(config)# interface GigabitEthernet 0/1
Ruijie(config-if)# ip router isis
```

| Related Commands | Command                 | Description                              |
|------------------|-------------------------|------------------------------------------|
|                  | <b>ipv6 router isis</b> | Enables the IPv6 IS-IS on the interface. |
|                  | <b>router isis</b>      | Creates IS-IS instances.                 |

**Platform** N/A

**Description**

## 4.24 ipv6 router isis

Use this command to enable the IPv6 IS-IS routing on the specified interface. This command must be configured in the IS-IS configuration. The interface will run on the IS-IS instance named with Tag. If this IS-IS instance is inexistent or this IS-IS instance is not enabled and not initialized, the interface will not enable the IS-IS routing.

Use the **no** form of this command to disable the IPv6 IS-IS routing on the specified interface.

**ipv6 router isis** [ tag ]

**no ipv6 router isis** [ tag ]

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       |           | tag         |

**Defaults** By default, the Ipv6 IS-IS routing is not supported on the interface.

**Command Mode** Interface configuration mode

**Usage Guide** Configure this command to enable the IS-IS IPv6 routing protocol on the interface. The **no** form of this command disables the IS-IS IPv6 routing.

If the **no ipv6 unicast-routing** is executed in the global configuration mode, the IS-IS will disable the IPv6 routing function on all interfaces, namely execute the **no ipv6 router isis** [ tag ] on all interfaces automatically, while other IS-IS configurations will remain unchanged.

**Configuration Examples** Ruijie(config)# **interface GigabitEthernet 0/1**

Ruijie(config-if)# **ipv6 router isis**

| Related Commands | Command               | Description                              |
|------------------|-----------------------|------------------------------------------|
|                  | <b>ip router isis</b> | Enables the IPv4 IS-IS on the interface. |
|                  | <b>router isis</b>    | Creates IS-IS instances.                 |

**Platform** N/A

**Description**

## 4.25 isis authentication key-chain

Use this command to set the key-chain used by the IS-IS interface authentication. Use the **no** form of this command to cancel the specified key-chain.

**isis authentication key-chain** *name-of-chain* [ **level-1** | **level-2** ]

**no isis authentication key-chain** *name-of-chain* [ **level-1** | **level-2** ]

| Parameter Description | Parameter            | Description                                            |
|-----------------------|----------------------|--------------------------------------------------------|
|                       | <i>name-of-chain</i> | Key-chain name with the maximum length being 255.      |
|                       | <b>level-1</b>       | Specifies the authentication key-chain of the Level-1. |
|                       | <b>level-2</b>       | Specifies the authentication key-chain of the Level-2. |

**Defaults** By default, no IS-IS interface authentication key-chain is specified.

**Command** Interface configuration mode

**Mode**

**Usage Guide** If the **key chain** command is not used to configure the corresponding key-chain, the authentication will not be performed. In addition, to make the IS-IS key-chain authentication effective, you need to configure the **isis authentication mode** command at the same time.

This key-chain can apply to the plain-text authentication mode and MD5 encrypted authentication mode. You can use the **isis authentication mode** command to set the authentication mode.

The length of the password key-string in the key-chain shall not be larger than 254 characters if the plain-text authentication mode is used, otherwise this configuration will fail.

Only one key-chain is used at one time. So, when configuring this command, the said key-chain will be overwritten by the new specified one.

If the Level is not specified, the key-chain will apply to both Level-1 and Level-2.

The key-chain specified by this command works on the Hello packets. The IS-IS will send or receive the password that belongs to this key-chain.

There may contain multiple passwords in the key-chain. When sending the packets, use the password with small number first. While receiving the packets, the packet will be received as long as the password of this packet received corresponds to any password in the key-chain.

The authentication commands configured in the IS-IS configuration mode such as authentication key-chain are effective to the LSP, SNP packets, but take no effect on the IS-IS interface.

**Configuration Examples** The following example specifies the authentication key-chain of the interface GigabitEthernet 0/1 named as *kc*.

```
Ruijie(config)# interface GigabitEthernet 0/1
Ruijie(config-if)# isis authentication key-chain kc
```

**Related Commands**

| Command                         | Description                           |
|---------------------------------|---------------------------------------|
| <b>isis authentication mode</b> | Specifies the mode of IS-IS interface |



|                                      |                                                                                                                    |
|--------------------------------------|--------------------------------------------------------------------------------------------------------------------|
|                                      | authentication.                                                                                                    |
| <b>isis authentication send-only</b> | Specifies the IS-IS interface authentication only applicable to the packets sent, but not to the packets received. |
| <b>key-chain</b>                     | Configures the key-chain.                                                                                          |

**Platform** N/A

**Description**

## 4.26 isis authentication mode

Use this command to specify the mode of IS-IS interface authentication. Use the **no** form of this command to remove the configuration.

**isis authentication mode** { md5 | text } [ level-1 | level-2 ]

**no isis authentication mode** { md5 | text } [ level-1 | level-2 ]

**Parameter Description**

| Parameter      | Description                                                                |
|----------------|----------------------------------------------------------------------------|
| <b>md5</b>     | Specifies the MD5 authentication mode.                                     |
| <b>text</b>    | Specifies the plain-text authentication mode.                              |
| <b>level-1</b> | Specifies the interface authentication mode to take effect on the Level-1. |
| <b>level-2</b> | Specifies the interface authentication mode to take effect on the Level-2. |

**Defaults** By default, no interface authentication mode is specified.

**Command** Interface configuration mode

**Mode**

**Usage Guide** To make the key-chain configured by the **isis authentication key-chain** command take effect, you must use the **isis authentication mode** command to specify the authentication mode. If the Level is not specified, the authentication mode specified will apply on both Level-1 and Level-2. When configuring the **isis authentication mode** command, if the isis password has been executed, the set command will be overwritten by this command. If the **isis authentication mode** command has been executed, the **isis password** will not be configured successfully. So, you need to delete the **isis authentication mode** command first.

**Configuration** The following example specifies the authentication mode on the Level-2 of the interface

**Examples** GigabitEthernet 0/1 to be the MD5 authentication mode.

```
Ruijie(config)# interface GigabitEthernet 0/1
Ruijie(config-if)# isis authentication mode md5 level-2
```

| Related Commands | Command                              | Description                                                                                                      |
|------------------|--------------------------------------|------------------------------------------------------------------------------------------------------------------|
|                  | <b>isis authentication key-chain</b> | Specifies the key-chain used by the IS-IS interface authentication.                                              |
|                  | <b>isis authentication send-only</b> | Specifies the IS-IS interface authentication to only apply on the packets sent, but not on the packets received. |
|                  | <b>key-chain</b>                     | Configures the key-chain.                                                                                        |
|                  | <b>isis password</b>                 | Sets the plain-text authentication password for the packets transmit on the IS-IS interface.                     |

**Platform** N/A

**Description**

## 4.27 isis authentication send-only

Use this command to specify the IS-IS interface authentication to only apply to the packets sent and not to the packets received. Use the **no** form of this command to restore the authentication of packets received on the interface.

**isis authentication send-only [ level-1 | level-2 ]**

**no isis authentication send-only [ level-1 | level-2 ]**

| Parameter Description | Parameter      | Description                                               |
|-----------------------|----------------|-----------------------------------------------------------|
|                       | <b>level-1</b> | Set the <b>send-only</b> on the Level-1 of the interface. |
|                       | <b>level-2</b> | Set the <b>send-only</b> on the Level-2 of the interface. |

**Defaults** By default, this command is not configured. If the IS-IS interface authentication has been configured, then the authentication will be performed on the packets sent and recieved at the same time.

**Command Mode** Interface configuration mode

**Usage Guide** With this command configured, the IS-IS will set the authentication password in the Hello packets sent from the interface, however, the authentication will not be performed on the Hello packets received. It can apply to the following two occasions: 1. before deploying the IS-IS interface authentication for all devices in the network. 2. before changing the authentication password or authentication mode. Before the above two tasks start, you need to configure the **isis authentication send-only** command first to make each device perform no authentication on the Hello packets received, so as to avoid the network oscillation caused during the subsequent IS-IS interface authentication deployment. After the deployment of the entire network authentication finished, execute the **no isis authentication send-only** command to cancel the **send-only** authentication mode.

This command can apply to the plain-text authentication mode and MD5 authentication mode. You

can use the **isis authentication mode** command to set the mode used by the IS-IS interface authentication.

If the Level is not specified, the authentication mode specified is applicable to the Level-1 and Level-2.

**Configuration Examples** The following example specifies the authentication on the Level-1 of the interface GigabitEthernet 0/1 using send-only authentication mode.

```
Ruijie(config)# interface GigabitEthernet 0/1
Ruijie(config-if)# isis authentication send-only level-1
```

**Related Commands**

| Command                              | Description                                                         |
|--------------------------------------|---------------------------------------------------------------------|
| <b>isis authentication key-chain</b> | Specifies the key-chain used by the IS-IS interface authentication. |
| <b>isis authentication mode</b>      | Specifies the mode of the IS-IS interface authentication.           |
| <b>key-chain</b>                     | Configures the key-chain.                                           |

**Platform** N/A

**Description**

## 4.28 isis bfd

Use this command to enable association between IS-IS and BFD on an interface.

**isis bfd [ disable | anti-congestion]**

Use the **no** form of this command to disable association between IS-IS and BFD on an interface.

**no isis bfd [ disable | anti-congestion]**

**Parameter Description**

| Parameter              | Description                                                 |
|------------------------|-------------------------------------------------------------|
| <b>disable</b>         | Disables association between IS-IS and BFD on an interface. |
| <b>anti-congestion</b> | Indicates the IS-IS BFD anti-flapping option.               |

**Defaults** If the **bfd all-interfaces** command is configured, association between IS-IS and BFD is enabled on an interface.

If the **bfd all-interfaces** command is not configured, association between IS-IS and BFD is disabled on an interface.

By default, the anti-flapping function is disabled.

**Command Mode** Interface configuration mode

**Default Level** 14

**Usage Guide** There are two methods for enabling or disabling association between IS-IS and BFD on interfaces.




Method 1: In IS-IS routing process configuration mode, run the [ **no** ] **bfd all-interfaces [anti-congestion]** command to enable or disable association between IS-IS and BFD on all interfaces running the IS-IS protocol.

Method 2: In interface configuration mode, run the **isis bfd [disable | anti-congestion]** command to enable or disable association between IS-IS and BFD on a specified interface.

In normal cases, the device with the BFD function enabled sends detection packets to detect the link status at an interval of several milliseconds. When a link exception such as link interruption occurs, the device with the BFD function enabled rapidly detects the link exception and informs a device running the IS-IS protocol to delete neighbors and delete neighbor availability information from LSP packets. The device running the IS-IS protocol performs route re-calculation and generates a new route, to bypass the failed link, thereby implementing fast convergence. With the introduction of some new technologies such as the Multi-Service Transport Platform (MSTP), link congestion easily occurs in peak hours. When congestion occurs, the device with the BFD function enabled rapidly detects a link exception, informs a device running the IS-IS protocol to delete a neighbor and delete neighbor availability information from LSP packets, and performs link switching to bypass the congested link. The interval for an IS-IS neighbor to send a Hello detection packet is 10 seconds, and the timeout time is 30 seconds. When an exception is detected via the BFD function, IS-IS Hello packets can be normally received, the IS-IS neighbor relationship can be rapidly reestablished, and the route is restored to pass the congested link. Then, BFD is performed again. If there is still a link exception, link switching is performed repeatedly. The route switches between the congested link and other links and flapping occurs.

The anti-flapping function can be enabled to prevent route flapping in the case of link congestion. After the anti-flapping function is enabled, if a link is congested, the IS-IS neighbor keeps alive but the neighbor availability information in LSP packets is deleted, and the route switches to a non-congested link. After the link is restored, that is, congestion is eliminated, the neighbor availability information is restored in LSP packets, and the route switches back to the originally congested link, thereby preventing route flapping.

When IS-IS anti-flapping is enabled, the BFD anti-flapping command (**bfd up-dampening**) must be configured on an interface. The two commands must be configured simultaneously. If only one of them is configured, the anti-flapping function does not take effect or a network exception is incurred.

- 
-  Before association between IS-IS and BFD is configured, a BFD session must be configured on an interface.
  -  When the BFD anti-flapping command is configured on an interface, if association between IS-IS and BFD is already configured on the interface, the anti-flapping function must be enabled for a device running the IS-IS protocol.
  -  When the IS-IS anti-flapping option is configured, the BFD anti-flapping command must be configured on an interface.
- 

**Configuration** 1. The following example disables association between IS-IS and BFD on GigabitEthernet 0/1.

**Examples** Ruijie(config)# interface GigabitEthernet 0/1

```
Ruijie(config-if)# no switchport
Ruijie(config-if)# isis bfd disable
```

2. The following example enables the IS-IS BFD anti-flapping option and configures the BFD anti-flapping command on GigabitEthernet 0/1.

```
Ruijie(config)# interface GigabitEthernet 0/1
Ruijie(config-if)# no switchport
Ruijie(config-if)# isis bfd anti-congestion
Ruijie(config-if)# bfd up-dampening 60000
```

## 4.29 isis circuit-type

Use this command to set the circuit-type for the IS-IS interface. Use the **no** form of this command to restore the default settings.

**isis circuit-type { level-1 | level-1-2 | level-2-only }**

**no isis circuit-type**

### Parameter Description

| Parameter           | Description                                         |
|---------------------|-----------------------------------------------------|
| <b>level-1</b>      | Forms the Level-1 adjacency.                        |
| <b>level-2-only</b> | Forms the Level-2 adjacency.                        |
| <b>level-1-2</b>    | Forms the Level-1-2 adjacency.                      |
| <b>external</b>     | Uses the interface as an external domain interface. |

**Defaults** By default, the circuit-type is Level-1-2.

**Command Mode** Interface configuration mode

**Usage Guide** If the circuit type is set to Level-1 or Level-2-only, IS-IS will only send PDUs of the corresponding Level.

If the system type is set to Level-1 or Level-2-only, IS-IS only processes the instances of the corresponding Level, and the interface only sends the PDUs of the same Level specified by the **is-type** and **circuit-type** commands.

If the interface is set to **external**, the interface will work as an external domain interface and IS-IS will not send PDUs of the corresponding Level.

**Configuration Examples** Ruijie(config)# **interface GigabitEthernet 0/1**

```
Ruijie(config-if)# isis circuit-type level-2-only
```

### Related Commands

| Command          | Description                       |
|------------------|-----------------------------------|
| <b>isis-type</b> | Sets the Level of IS-IS instance. |

**Platform** N/A  
**Description**

### 4.30 isis csnp-interval

Use this command to set the interval for broadcasting the CSNP packets on the IS-IS interface, with the unit being second. Use the **no** form of this command to restore the default interval.

**isis csnp-interval** *interval* [ **level-1** | **level-2** ]  
**no isis csnp-interval** [ *interval* ] [ **level-1** | **level-2** ]

| Parameter Description | Parameter       | Description                                                                                   |
|-----------------------|-----------------|-----------------------------------------------------------------------------------------------|
|                       | <i>interval</i> | Interval for sending the CSNP packets in the range of 0 to 65535, with the unit being second. |
|                       | <b>level-1</b>  | Interval for sending the CSNP packets configured only on the Level-1.                         |
|                       | <b>level-2</b>  | Interval for sending the CSNP packets configured only on the Level-2.                         |

**Defaults** By default, in the broadcast network, the interval for sending the CSNP packets is 10 seconds. While in the P2P interface network, no CSNP packet is sent by default.  
 When using this command without the parameter Level-1 and Level-2, the new setting is defaulted to be applicable to the Level-1 and Level-2 at the time.

**Command Mode** Interface configuration mode

**Usage Guide** Configure this command to change the interval for sending the CSNP packets. By default, the DIS on the broadcast network sends the CSNP packets every 10 seconds.  
 For the P2P interface network, by default, the CSNP packets will only be sent at the beginning of adjacency formation. If the interface is set to mesh-groups, you can configure the periodic sending of the CSNP packets.  
 If the csnp-interval is set to 0, no CSNP packets will be sent.

**Configuration Examples**

```
Ruijie(config)# interface GigabitEthernet 0/1
Ruijie(config-if)# isis csnp-interval 20
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 4.31 isis hello-interval

Use this command to set the interval for sending Hello packets on the interface, with the unit being second. Use the **no** form of this command to restore the default interval.

**isis hello-interval** { *interval* | **minimal** } [ **level-1** | **level-2** ]

**no isis hello-interval** [ **level-1** | **level-2** ]

| Parameter Description | Parameter       | Description                                                        |
|-----------------------|-----------------|--------------------------------------------------------------------|
|                       | <i>interval</i> | Interval for sending the Hello packet, in the range of 1 to 65536. |
|                       | <b>minimal</b>  | The holdtime is set to the minimal value 1.                        |
|                       | <b>level-1</b>  | This interval applies on the Level-1.                              |
|                       | <b>level-2</b>  | This interval applies on the Level-2.                              |

**Defaults** By default, the interval value is 10 seconds, which is applicable to the Level-1 and Level-2 at the same time.

When using this command without the parameter Level-1 and Level-2, the new setting is defaulted to be applicable to the Level-1 and Level-2 at the time.

**Command Mode** Interface configuration mode

**Usage Guide** Configure this command to change the interval for sending Hello packets. By default, the multiplier of the Hello holdtime is 3, and the DIS in broadcast network sends Hello packets at an interval which is three times of non-DIS. If this IS is elected as DIS on this interface, the interface will send Hello packets every 3.3 seconds by default.

If the key word "minimal" is used, then the "holdtime" in Hello packets will be set to 1, and hello interval will be calculated based on the hello-multiplier. For example, if hello-multiplier is configured to 4 and "isis hello-interval minimal" is configured at the same time, the value of hello-interval shall be 1s/4 (250ms).

By default, the CPU protection is enabled on the switch, so that the number of packets corresponding to the destination group addresses of ISIS (AllISSystems, AllL1ISSystems, AllL2ISSystems) is limited when they are sent to the CPU, for example , the default limited value is 400pps. The number of packets received by the switch may be larger than the default value if there are many neighbors or the interval for sending Hello packets is short, resulting in continual vibration of the adjacent relation. In this case, you need to raise the limit of IS-IS packets using the global commands **cpu-protect type isis-is pps**, **cpu-protect type isis-l1is pps** and **cpu-protect type isis-l2is pps**.

**Configuration Examples** The following example sets the interval for sending Hello packets on the interface.

```
Ruijie(config)# interface GigabitEthernet 0/1
Ruijie(config-if)# isis hello-interval 5 level-1
```

The following example sets the Holdtime for sending Hello packets on the interface to the minimum value 1.

```
Ruijie(config)# interface GigabitEthernet 0/1
```

```
Ruijie(config-if)# isis hello-interval minimal
```

**Related  
Commands**

| Command                      | Description                                  |
|------------------------------|----------------------------------------------|
| <b>isis hello-multiplier</b> | Sets the multiplier of the Hello hold timer. |

**Platform** N/A

**Description**

## 4.32 isis hello-multiplier

Use this command to set the multiplier of Hello hold timer. Use the **no** form of this command to restore the default settings.

**isis hello-multiplier** *multiplier-number* [ **level-1** | **level-2** ]

**no isis hello-multiplier** [ *multiplier-number* ] [ **level-1** | **level-2** ]

**Parameter  
Description**

| Parameter                | Description                                |
|--------------------------|--------------------------------------------|
| <i>multiplier-number</i> | Multiplier value in the range of 2 to 100. |

**Defaults** By default, the multiplier is 3..

**Command  
Mode** Interface configuration mode

**Usage Guide** Use this command to set the multiplier of Hello holdtime. The holdtime value in the Hello packet is the product of hello-interval and this multiplier.

**Configuration**

```
Ruijie(config)# router isis
```

**Examples**

```
Ruijie(config-router)# isis hello-multiplier 5
```

**Related  
Commands**

| Command                    | Description                                      |
|----------------------------|--------------------------------------------------|
| <b>isis hello-interval</b> | Sets the interval for sending the Hello packets. |

**Platform** N/A

**Description**

## 4.33 isis hello padding

Use this command to specify the filling mode for the IS-IS Hello packets. Use the **no** form of this command to fill no IS-IS Hello packets.

**isis hello padding**



**no isis hello padding**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       |           | N/A         |

**Command Mode** Interface configuration mode

**Usage Guide** Fill the IS-IS Hello packets to advertise the MTU supported to the neighbors. Hello packets can be padded to notify a neighbor of the MTU supported by the local device. In IS-IS routing process configuration mode, the corresponding **hello padding** command also exists. Hello packets sent by a specific interface are not padded if the padding of such Hello packets is cancelled in IS-IS routing process configuration mode or the padding of Hello packets sent by the local interface is cancelled in interface configuration mode.

**Configuration** The following example fills no IS-IS Hello packets.

```
Ruijie(config)# interface GigabitEthernet 0/1
Ruijie(config-if)# no isis hello padding
```

| Related Commands | Command | Description                |
|------------------|---------|----------------------------|
|                  |         | <b>isis hello-interval</b> |

**Platform Description** N/A

### 4.34 isis lsp-interval

Use this command to set the interval for the LSP PDU transmission. Use the **no** form of this command to restore the default interval.

**isis lsp-interval** *milliseconds* [ **level-1** | **level-2**]

**no isis lsp-interval** [ **level-1** | **level-2**]

| Parameter Description | Parameter      | Description                               |
|-----------------------|----------------|-------------------------------------------|
|                       |                | <i>milliseconds</i>                       |
|                       | <b>level-1</b> | Applies the setting only to Level-1 LSPs. |
|                       | <b>level-2</b> | Applies the setting only to Level-2 LSPs. |

**Defaults** By default, the lsp-interval is 33ms.

**Command** Interface configuration mode  
**Mode**

**Usage Guide** N/A

**Configuration** The following example sets the interval for the LSP PDU transmission to 100.

**Examples**

```
Ruijie(config)# interface GigabitEthernet 0/1
Ruijie(config-if)# isis lsp-interval 100
```

**Related  
Commands**

| Command                         | Description                                              |
|---------------------------------|----------------------------------------------------------|
| <b>isis retransmit-interval</b> | Sets the LSP retransmission interval in the P2P network. |

**Platform** N/A  
**Description**

## 4.35 isis mesh-group

Use this command to add the interface to the specified mesh-group. Use the **no** form of this command to separate the interface from the mesh-group.

**isis mesh-group** { **blocked** | *mesh-group-id* }  
**no isis mesh-group**

**Parameter  
Description**

| Parameter            | Description                                                                                              |
|----------------------|----------------------------------------------------------------------------------------------------------|
| <b>blocked</b>       | Blocks all LSP forwarding on the interface.                                                              |
| <i>mesh-group-id</i> | Adds the interface to the mesh-group of specified mesh-group-id with the range being 1 to 4,294,967,295. |

**Defaults** By default, the interface is not added to any mesh-group.

**Command** Interface configuration mode  
**Mode**

**Usage Guide** Mesh-groups can control the exceeding and redundant LSP spreading in the NBMA network. In the normal condition, the IS-IS router spreads out the LSP from all interfaces except for the receiving one, that is, if a router is configured multiple subinterfaces, the LSP will be sent from all subinterfaces and the neighbors will receive many same LSPs, which wastes a large number of CPU and bandwidth. The IS-IS mesh-group allows grouping the router interfaces, so if a LSP is received by one subinterface in the group, this LSP will not be spread out through other subinterfaces in the group. And if the router receives the LSP from the interface out of the group, it will spread out the LSP from other interfaces as usual.

If you need to configure the **mesh-group** on the IS-IS interface, use the **isis csnp-interval** command

to configure the interval for sending the non-0 CSNP packets, so as to send the CNSP packets regularly to synchronize the LSP and ensure the integrity of LSP synchronization between neighbors in network.

**Configuration** Ruijie#**configure terminal**

**Examples** Ruijie (config)# **interface GigabitEthernet 0/1**  
Ruijie (config-if)#**isis mesh-group 1**

| Related Commands | Command | Description                        |
|------------------|---------|------------------------------------|
|                  |         | <b>isis network point-to-point</b> |

**Platform** N/A

**Description**

## 4.36 isis metric

Use this command to set the metric for the interface. Use the **no** form of this command to restore the default metric.

**isis metric** *metric* [ **level-1** | **level-2** ]

**no isis metric** [ *metric* ] [ **level-1** | **level-2** ]

| Parameter Description | Parameter      | Description                                       |
|-----------------------|----------------|---------------------------------------------------|
|                       |                | <i>metric</i>                                     |
|                       | <b>level-1</b> | Sets this metric to apply on the Level-1 circuit. |
|                       | <b>level-2</b> | Sets this metric to apply on the Level-2 circuit. |

**Defaults** By default, the metric is 10, which applies on both Level-1 and Level-2 circuit.

**Command Mode** Interface configuration mode

**Usage Guide** The Metric value is in the TLV of the IP reachable information and is applied to the SPF calculation. The greater metric value means the more routing cost on this interface and the longer path calculated by SPF.

This value is effective only when the metric-style includes narrow.

**Configuration Examples** Ruijie (config)# **interface GigabitEthernet 0/1**  
Ruijie (config-if)#**isis metric 1**

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  |         |             |

|                         |                                              |
|-------------------------|----------------------------------------------|
| <b>metic-style</b>      | Sets the metric type.                        |
| <b>isis wide-metric</b> | Sets the wide metric of the IS-IS interface. |

**Platform** N/A

**Description**

## 4.37 isis network point-to-point

Use this command to set the IS-IS Broadcast interface to the Point-to-Point type. Use the **no** form of this command to restore the interface type to the Broadcast.

**isis network point-to-point**

**no isis network point-to-point**

| Parameter          | Parameter             | Description                    |
|--------------------|-----------------------|--------------------------------|
| <b>Description</b> | <b>point-to-point</b> | Point-to-Point type interface. |

**Defaults** By default, it is Broadcast type.

**Command** Interface configuration mode

**Mode**

**Usage Guide** N/A

**Configuration** Ruijie(config)# interface GigabitEthernet 0/1

**Examples** Ruijie(config-if)# isis network point-to-point

| Related Commands | Command                | Description                                             |
|------------------|------------------------|---------------------------------------------------------|
|                  | <b>isis mesh-group</b> | Adds the IS-IS interface into the specified mesh group. |

**Platform** N/A

**Description**

## 4.38 isis password

Use this command to set the plain-text authentication password for the Hello packet transmitted on the interface. Use the **no** form of this command to remove the configurations.

**isis password password-string [ send-only ] [ level-1 | level-2 ]**

**no isis password [ send-only ] [ level-1 | level-2 ]**

| Parameter | Parameter | Description |
|-----------|-----------|-------------|
|-----------|-----------|-------------|

|                    |                                                                                                                                         |
|--------------------|-----------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b> |                                                                                                                                         |
| <b>0</b>           | Indicates that the key is displayed in plaintext.                                                                                       |
| <b>7</b>           | Indicates that the key is displayed in ciphertext.                                                                                      |
| password-string    | Indicates the password string for plaintext authentication. The string can contain up to 126 characters.                                |
| <b>send-only</b>   | Indicates that the plaintext authentication password is only used to authenticate sent packets. Received packets are not authenticated. |
| <b>level-1</b>     | Applies the setting to the Level-1 circuit type.                                                                                        |
| <b>level-2</b>     | Applies the setting to the Level-2 circuit type.                                                                                        |

**Defaults** By default, both the passwords on the Level-1 and Level-2 are not configured.

**Command Mode** Interface configuration mode

**Usage Guide** This command is used to set the plain-text authentication password for the Hello packets transmitted on the interface. Use the **no** form of this command to clear the passwords. When the Level is not specified, the authentication password configured is by default applicable to every Level. If the **isis authentication mode** command has been executed, this command will not be configured successfully. To configure this command, you need to delete the **isis authentication mode** command first.

Running the **no isis password send-only** command can only disable the **send-only** option.

**Configuration Examples**

```
Ruijie(config)# interface GigabitEthernet 0/1
Ruijie(config-if)# isis password redgiant
```

| <b>Related Commands</b> | Command                  | Description                                               |
|-------------------------|--------------------------|-----------------------------------------------------------|
|                         | isis authentication mode | Specifies the mode of the IS-IS interface authentication. |

**Platform Description** N/A

### 4.39 isis priority

Use this command to set the priority for the DIS election on the LAN. Use the **no** form of this command to restore the default priority.

**isis priority** *value* [ **level-1** | **level-2** ]  
**no isis priority** [ *value* ] [ **level-1** | **level-2** ]

| <b>Parameter Description</b> | Parameter | Description |
|------------------------------|-----------|-------------|
|                              |           |             |

|                |                                                 |
|----------------|-------------------------------------------------|
| <i>value</i>   | Value of the priority in the range of 0 to 127. |
| <b>level-1</b> | Applies to the Level-1 circuit.                 |
| <b>level-2</b> | Applies to the Level-2 circuit.                 |

**Defaults** The default priority value is 64 and it is applied on both Level-1 and Leve-2 circuit.

**Command Mode** Interface configuration mode

**Usage Guide** Use this command to change the priority value in the Hello of LAN.  
 The low priority value has the lower priority in the DIS election than the high priority value.  
 This command takes no effect on the Point-to-Point network interface.  
 The **no isis priority** command is used to restore the priority to the default value no matter whether the parameter is followed. If you want to modify the configured priority, you can either use the **isis priority** command with parameter specified to overwrite the configured command directly, or configure a new parameter after restoring the priority to the default value.

```

Configuration Ruijie# configure terminal
Examples Ruijie(config)# interface GigabitEthernet 0/1
    Ruijie(config-if)# isis priority 127 level-1
    
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

### 4.40 isis psnp-interval

Use this command to set the minimum transmission interval of PSNP packets.

**isis psnp-interval** *seconds* [ **level-1** | **level-2** ]

Use the **no** form of this command to cancel the specified minimum transmission interval of PSNP packets.

**no isis psnp-interval** [ **level-1** | **level-2** ]

| Parameter Description | Parameter      | Description                                                    |
|-----------------------|----------------|----------------------------------------------------------------|
|                       | seconds        | seconds                                                        |
| <b>level-1</b>        | <b>level-1</b> | Indicates that the configuration takes effect only at Level-1. |
| <b>level-2</b>        | <b>level-2</b> | Indicates that the configuration takes effect only at Level-2. |

**Defaults** This command is not configured by default. The default minimum transmission interval is 2 seconds and takes effect both at Level-1 and Level-2.

**Command Mode** Interface configuration mode

**Default Level** 14

**Usage Guide** PSNP packets are used to request for LSP packets or respond to received LSP packets in a point-to-point network. In both cases, it is recommended to send PSNP packets rapidly. If there are excessive LSP packets but the device performance is poor, you can set the PSNP packet transmission interval and LSP retransmission time to larger values, to reduce the device load.

**Configuration Examples** The following example sets the PSNP packet transmission interval to 5 seconds for Interface GigabitEthernet 0/1 at Level-2.

```
Ruijie(config)# interface GigabitEthernet 0/1
Ruijie(config-if)# isis psnp-interval 5 level-2
```

## 4.41 isis retransmit-interval

Use this command to set the LSP retransmission interval. Use the **no** form of this command to restore the default interval.

**isis retransmit-interval** *seconds* [ **level-1** | **level-2** ]

**no isis retransmit-interval** [ **level-1** | **level-2** ]

| Parameter Description | Parameter      | Description                                                                                        |
|-----------------------|----------------|----------------------------------------------------------------------------------------------------|
|                       | <i>seconds</i> | Indicates the LSP retransmission interval. The value range is 0 to 65,535, in the unit of seconds. |
|                       | <b>level-1</b> | Applies the setting only to Level-1 LSPs.                                                          |
|                       | <b>level-2</b> | Applies the setting only to Level-2 LSPs.                                                          |

**Defaults** The default value is 5s.

**Command Mode** Interface configuration mode

**Usage Guide** Use this command to configure the LSP retransmission interval. In a P2P network, after a device sends an LSP, if the device receives no PSNP response within the time specified by this command, it will resend the LSP. If the retransmission interval is set to 0, the LSP will not be resent.

The following example sets the LSP retransmission interval to 10s.

**Configuration Examples**

```
Ruijie(config)# interface serial 0/1
Ruijie(config-if)# isis retransmit-interval 10 level-2
```

| Related Commands | Command | Description              |
|------------------|---------|--------------------------|
|                  |         | <b>isis lsp-interval</b> |

**Platform** N/A

**Description**

## 4.42 isis subvlan

Use this command to enable IS-IS on super VLANs. Use the **no** form of this command to restore the default setting.

**isis subvlan** [**all** | *vid*]

**no isis subvlan**

| Parameter Description | Parameter  | Description                                                 |
|-----------------------|------------|-------------------------------------------------------------|
|                       |            | <i>all</i>                                                  |
|                       | <i>vid</i> | Specifies the sub VLAN ID. The value ranges from 1 to 4094. |

**Defaults** The default setting takes effect only on super VLANs with IS-IS disabled.

**Command Mode** Interface configuration mode.

**Usage Guide** In normal cases, a super VLAN contains multiple sub VLANs. Multicast packets of a super VLAN are also sent to its sub VLANs. In this case, when IS-IS multicast packets are sent over a super VLAN containing multiple sub VLANs, the IS-IS multicast packets are replicated multiple times, and the device processing capability is insufficient. As a result, a large number of packets are discarded, causing the neighbor down error. In most scenarios, the IS-IS function does not need to be enabled on a super VLAN. Therefore, the IS-IS function is disabled by default. However, in some scenarios, the IS-IS function must be run on the super VLAN, but packets only need to be sent to one sub VLAN. In this case, run this command to specify a particular sub VLAN. You must be cautious in configuring packet transmission to all sub VLANs, as the large number of sub VLANs may cause a device processing bottleneck, which will lead to the neighbor down error.

**Configuration Examples** The following example sends the IS-IS multicast packets to sub VLAN 1024 of super VLAN 300.

```
Ruijie(config)# interface vlan 300
Ruijie(config-if-VLAN 300)# isis subvlan 1024
```



## 4.43 isis three-way-handshake disable

Use this command to disable three-way handshake for point-to-point network. Use the **no** form of this command to enable three-way handshake for point-to-point network.

**isis three-way-handshake disable**

**no isis three-way-handshake disable**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** By default, three-way handshake is enabled.

**Command Mode** Interface configuration mode

**Usage Guide** In the point-to-point network, three-way handshake is enabled by default. That is to say, the IS-IS neighbor can be established only after three-way handshake is successful. You can use this command to cancel three-way handshake negotiation to accelerate IS-IS neighbor establishment or for the the device not supporting three-way handshake.

**Configuration** The following example disables three-way handshake on interface GigabitEthernet 0/0.

**Examples**

```
Ruijie(config)#int GigabitEthernet 0/0
Ruijie(config-if)# isis network point-to-point
Ruijie(config-if)# isis three-way-handshake disable
```

| Related Commands | Command            | Description                             |
|------------------|--------------------|-----------------------------------------|
|                  | <b>metric-type</b> | Sets the metric type.                   |
|                  | <b>isis metric</b> | Sets the metric value of the interface. |

**Platform Description** N/A

## 4.44 isis wide-metric

Use this command to set the wide metric of the interface. Use the **no** form of this command to restore the default wide metric.

**isis wide-metric** *metric* [ **level-1** | **level-2** ]

**no isis wide-metric** [ *metric* ] [ **level-1** | **level-2** ]

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|-----------------------|-----------|-------------|

|                |                                                   |
|----------------|---------------------------------------------------|
| <i>metric</i>  | Metric value in the range of 1 to 16,777,241.     |
| <b>level-1</b> | Sets this Metric to apply on the Level-1 circuit. |
| <b>level-2</b> | Sets this Metric to apply on the Level-2 circuit. |

**Defaults** By default, the metric value is 10 and it is applicable to both Level-1, Level-2 circuit.

**Command Mode** Interface configuration mode

**Usage Guide** The Metric value is in the TLV of the IP reachable information and is applied to the SPF calculation. The greater metric value means the more routing cost on this interface and the longer path calculated by SPF.  
This value is effective only when the metric-style includes wide.

**Configuration** Ruijie(config)# **interface GigabitEthernet 0/1**

**Examples** Ruijie(config-if)#**isis wide-metric 1000**

**Related Commands**

| Command            | Description                             |
|--------------------|-----------------------------------------|
| <b>metric-type</b> | Sets the metric type.                   |
| <b>isis metric</b> | Sets the metric value of the interface. |

**Platform** N/A

**Description**

## 4.45 is-type

Use this command to specify the level for the IS-IS process. Use the **no** form of this command to restore the default level for IS-IS process.

**is-type { level-1 | level-1-2 | level-2-only }**

**no is-type**

**Parameter Description**

| Parameter           | Description                                                      |
|---------------------|------------------------------------------------------------------|
| <b>level-1</b>      | Specifies the IS-IS process running on the Level-1 only.         |
| <b>level-1-2</b>    | Specifies the IS-IS process running on both Level-1 and Level-2. |
| <b>level-2-only</b> | Specifies the IS-IS process running on the Level-2 only.         |

**Defaults** By default, the IS-IS process runs on Level-1-2.

**Command Mode** IS-IS routing process configuration mode

**Usage Guide** Changing the is-type enables or disables the route of one Level.

**Configuration** Ruijie(config)# **router isis**  
**Examples** Ruijie(config-router)# **is-type level-1**

| Related Commands | Command | Description              |
|------------------|---------|--------------------------|
|                  |         | <b>isis circuit-type</b> |

**Platform** N/A  
**Description**

### 4.46 log-adjacency-changes

Use this command to log the changes of the IS adjacency status in case of debug disabled. Use the **no** form of this command to disable this function.

**log-adjacency-changes**  
**no log-adjacency-changes**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       |           | N/A         |

**Defaults** By default, this function is enabled.

**Command Mode** IS-IS routing process configuration mode

**Usage Guide** You can also use the **debug** command to log the changes of the IS adjacency status. But using the IS-IS debug command will exhaust large numbers of resources.

**Configuration** Ruijie(config)# **router isis**  
**Examples** Ruijie(config-router)# **log-adjacency-changes**

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  |         | N/A         |

**Platform** N/A  
**Description**

## 4.47 lsp-fragments-extend

Use this command to enable the LSP fragment extension mode for a level. Use the **no** form of this command to disable the LSP fragment extension mode for a level.

**lsp-fragments-extend** [ level-1 | level-2 ] [compatible rfc3786]

**no lsp-fragments-extend** [ level-1 | level-2 ] [compatible rfc3786]

| Parameter Description | Parameter         | Description                                                   |
|-----------------------|-------------------|---------------------------------------------------------------|
|                       | <b>level-1</b>    | Enables the LSP fragment extension mode for the Level-1 only. |
|                       | <b>level-2</b>    | Enables the LSP fragment extension mode for the Level-2 only. |
|                       | <b>compatible</b> | Compatible with RFC3786                                       |
|                       | <b>rfc3786</b>    | The older version of extended LSP implementation.             |

**Defaults** By default, LSP fragment extension is disabled.  
If no level is specified, the LSP fragment extension mode is enabled for both Level-1 and Level-2.

**Command Mode** IS-IS routing process configuration mode

**Usage Guide** The originating LSP can be divided up to 256 fragments. After the 256 fragments are filled, the subsequent link state information, such as the neighbor and IP routing, will be discarded, resulting in network problem.  
To avoid the above problem, you can enable the LSP fragment extension function, and configure the additional system ID using the **virtual-system** command.  
If there are other vendor's device supporting RFC3786 standard in the network, you need to display the link state database of the device when enabling or disabling the **compatible** option. If there is indeed the vendor's device, you can use the **clear isis \*** command to clear the remaining LSP packets to trigger the system to update the link state database.

**Configuration Examples** The following example enables the LSP fragment extension mode for the Level-2.

```
Ruijie(config)# router isis
Ruijie(config-router)# lsp-fragments-extend level-2
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 4.48 Isp-gen-interval

Use this command to set the minimal interval of the LSP generation. Use the **no** form of this command to restore the default value.

**Isp-gen-interval** [ **level-1** | **level-2** ] *maximum-interval* [*initial-interval* *hold-interval*]

**no Isp-gen-interval** [ **level-1** | **level-2** ]

| Parameter Description | Parameter               | Description                                                                                                                                                                        |
|-----------------------|-------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <b>level-1</b>          | Applies the configuration only to Level-1.                                                                                                                                         |
|                       | <b>level-2</b>          | Applies the configuration only to Level-2.                                                                                                                                         |
|                       | <i>maximum-interval</i> | Indicates the maximum interval for generating two consecutive LSP packets. The value range is <b>1</b> to <b>65535</b> (in seconds). The default value is <b>5</b> .               |
|                       | <i>initial-interval</i> | Indicates the waiting time for generating an LSP packet for the first time. The value range is <b>0</b> to <b>60000</b> (in milliseconds). The default value is <b>50</b> .        |
|                       | <i>hold-interval</i>    | Indicates the minimum interval for generating an LSP packet for the second time. The value range is <b>10</b> to <b>60000</b> (in milliseconds). The default value is <b>200</b> . |

**Defaults** By default, this command is not configured and the interval of the minimal generation is 5s, it is effective on both Level-1 and Level-2

**Command Mode** IS-IS routing process configuration mode

**Usage Guide** The LSP packet generation interval refers to the interval for generating two different LSP packets. A smaller generation interval indicates faster network convergence, which, however, will be accompanied by frequent flooding on the network.

The waiting time for generating an LSP packet for the first time is the initial interval. If the network becomes unstable, the LSP packet regeneration interval is changed to be less than the maximum interval, and the interval for generating an LSP packet for the second time becomes the hold interval. A corresponding penalty will be added to this interval: The next interval for regenerating a LSP packet doubles the previous interval for generating the same LSP packet, until the regeneration interval reaches the maximum interval. Subsequent LSP packets will be generated at the maximum interval. When the network becomes stable, the LSP packet regeneration interval becomes greater than the maximum interval, and the waiting time for LSP packet generation is restored to the initial interval.

Link changes have high requirements for convergence. The initial interval can be set to a small value. The preceding parameters can also be adjusted to larger values to reduce CPU consumption. The value of **initial-interval** cannot be greater than that of **maximum-interval**. Otherwise, the value of **initial-interval** will be used as the value of **maximum-interval**.

The value of **hold-interval** cannot be greater than that of **maximum-interval**. Otherwise, the value of **hold-interval** will be used as the value of **maximum-interval**.

The value of **initial-interval** cannot be greater than that of **hold-interval**. Otherwise, the value of **initial-interval** will be used as the value of **hold-interval**.

**Configuration Examples** The following example sets the minimum interval for generating two duplicate LSP packets to 10 seconds, the interval for generating a duplicate LSP packet for the first time to 100 ms, and the interval for generating a duplicate LSP packet for the second time to 200 ms.

```
Ruijie(config)# router isis
Ruijie(config-router)# lsp-gen-interval 10 100 200
```

The following example sets the minimum interval for generating two duplicate LSP packets to 5 seconds.

```
Ruijie(config)# router isis
Ruijie(config-router)# lsp-gen-interval 5
```

**Related Commands**

| Command                     | Description                              |
|-----------------------------|------------------------------------------|
| <b>lsp-refresh-interval</b> | Configures the interval for LSP refresh. |

**Platform** N/A  
**Description**

## 4.49 lsp-length originate

Use this command to set the maximum length for transmitting LSP packets.

**lsp-length originate** *size* [ **level-1** | **level-2** ]

Use the **no** form of this command to restore the default value.

**no lsp-length originate** [ **level-1** | **level-2** ]

**Parameter Description**

| Parameter      | Description                                                                                                        |
|----------------|--------------------------------------------------------------------------------------------------------------------|
| <i>size</i>    | Specifies the maximum length for transmitting LSP packets. The value range is <b>512</b> to <b>16000</b> in bytes. |
| <b>level-1</b> | Indicates that the configuration takes effect only at Level-1.                                                     |
| <b>level-2</b> | Indicates that the configuration takes effect only at Level-2.                                                     |

**Defaults** The default value of the maximum length for transmitting LSP packets is **1492**. If no level is specified, the default value is **level-1-2**, that is, the configuration takes effect at both Level-1 and Level-2.

**Command Mode** IS-IS routing process configuration mode

**Default Level** 14

**Usage Guide** In principle, the length of LSP and SNP packets cannot be greater than the interface MTU. Otherwise, LSP packets and SNP packets are directly discarded upon being sent.

**Configuration** The following example sets the maximum length for transmitting LSP packets at Level-2 to 1498 bytes.

**Examples**

```
Ruijie(config)# router isis 1
Ruijie(config-router)# lsp-length originate 1498 level-2
```

## 4.50 lsp-length receive

Use this command to set the maximum length for receiving LSP packets.

**lsp-length receive** *size*

Use the **no** form of this command to restore the default value.

**no lsp-length receive**

| Parameter Description | Parameter   | Description                                                                                                                  |
|-----------------------|-------------|------------------------------------------------------------------------------------------------------------------------------|
|                       | <i>size</i> | Specifies the maximum length of LSP packets. The value range is <b>1,492</b> to <b>16,000</b> in bytes according to the RFC. |

**Defaults** The default value is **1492**.

**Command Mode** IS-IS routing process configuration mode

**Default Level** 14

**Usage Guide** This command is used to control the maximum length of LSP packets that can be received by the local device. In fact, to prevent a route convergence failure, intermediate nodes need to receive LSP packets with the maximum length of the interface MTU as long as the memory permits. In this sense, this command seems nominal. The maximum length for receiving LSP packets cannot be less than the maximum length for transmitting LSP packets. If the maximum length for receiving LSP packets is less than the maximum length for transmitting LSP packets, the maximum length for receiving LSP packets is automatically adjusted to the maximum length for transmitting LSP packets.

**Configuration** The following example configures the maximum length for receiving LSP packets to 1498 bytes.

**Examples**

```
Ruijie(config)# router isis
Ruijie(config-router)# lsp-length receive 1498
```

## 4.51 lsp-refresh-interval

Use this command to set the LSP refresh interval. Use the **no** form of this command to restore the

default value.

**lsp-refresh-interval** *interval*

**no lsp-refresh-interval**

**Parameter  
Description**

| Parameter       | Description                                                             |
|-----------------|-------------------------------------------------------------------------|
| <i>interval</i> | LSP refresh interval in the range of 1 to 65535 with unit being second. |

**Defaults** By default, the lsp-refresh-interval is 900 seconds.

**Command  
Mode** IS-IS routing process configuration mode

**Usage Guide** If the LSP stable status lasts for the time of refresh interval, LSP will refresh this LSP and update the LSP version and publish it.  
It should be noted that the lsp-refresh-interval must be less than the max lifetime.

**Configuration** Ruijie(config)# **router isis**

**Examples** Ruijie(config-router)# **lsp-refresh-interval 600**

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform  
Description** N/A

## 4.52 max-area-addresses

Use this command to set the maximal number of area address allowed. Use the **no** form of this command to restore the default value.

**max-area-addresses** *value*

**no max-area-addresses**

**Parameter  
Description**

| Parameter    | Description                                                         |
|--------------|---------------------------------------------------------------------|
| <i>value</i> | The maximal number of area address allowed, in the range of 3 to 6. |

**Defaults** By default, the max-area-addresses is 3.

**Command  
Mode** IS-IS routing process configuration mode

**Usage Guide** For the IS routers of Level-1, only the ones with the same max-area-addresses are allowed to establish the adjacency relation.



**Configuration** Ruijie(config)# **router isis**  
**Examples** Ruijie(config-router)# **max-area-addresses 5**

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  |         | <b>net</b>  |

**Platform** N/A  
**Description**

### 4.53 maximum-paths

Use this command to set the maximum number of IS-IS equal-cost routing entries in the routing table.  
**maximum-paths** *maximum*

Use the **no** form of this command to restore the default value.  
**no maximum-paths**

| Parameter Description | Parameter | Description    |
|-----------------------|-----------|----------------|
|                       |           | <i>maximum</i> |

**Defaults** The default value is **2**.

**Command Mode** IS-IS routing process configuration mode, IS-IS address-family IPv6 configuration mode

**Default Level** 14

**Usage Guide** This command is used by the IS-IS protocol to control the number of IS-IS equal-cost routing entries in the routing table. The routing table itself also has a command for controlling the number of equal-cost routing entries. The effective number of equal-cost routing entries is the smaller of the two values.

**Configuration Examples** The following example sets the maximum number of IS-IS IPv4 equal-cost routing entries in the routing table to **5**.  

```
Ruijie(config)# router isis
Ruijie(config-router)# maximum-paths 5
```

The following example sets the maximum number of IS-IS IPv6 equal-cost routing entries in the routing table to **6**.  

```
Ruijie(config)# router isis
```

```
Ruijie(config-router)# address-family ipv6
Ruijie(config-router-af)# maximum-paths 6
```

## 4.54 max-lsp-lifetime

Use this command to set the maximum value of the LSP lifetime. Use the **no** form of this command to restore the default value.

**max-lsp-lifetime** *value*

**no max-lsp-lifetime**

### Parameter Description

| Parameter    | Description                                                                            |
|--------------|----------------------------------------------------------------------------------------|
| <i>value</i> | Maximum value of the LSP lifetime in the range of 1 to 65,535, with unit being second. |

### Defaults

By default, the max-lsp-lifetime is 1200 seconds.

### Command Mode

IS-IS routing process configuration mode

### Usage Guide

It should be noted that the max-lsp-lifetime must be greater the lsp-refresh-interval 300.

### Configuration Examples

```
Ruijie(config)# router isis
```

```
Ruijie(config-router)# max-lsp-lifetime 1500
```

### Related Commands

| Command                     | Description                              |
|-----------------------------|------------------------------------------|
| <b>lsp-refresh-interval</b> | Configures the interval for LSP refresh. |

### Platform

N/A

### Description

## 4.55 metric-style

Use this command to set the metric style. Use the **no** form of this command to restore the default metric style.

**metric-style** { **narrow** [ **transition** ] | **wide** [ **transition** ] | **transition** } [ **level-1** | **level-1-2** | **level-2** | ]

**no metric-style** { **narrow** [ **transition** ] | **wide** [ **transition** ] | **transition** } [ **level-1** | **level-1-2** | **level-2** | ]

### Parameter Description

| Parameter | Description |
|-----------|-------------|
|-----------|-------------|

|                   |                                                                                       |
|-------------------|---------------------------------------------------------------------------------------|
| <b>narrow</b>     | Uses the old metric style with the router interface metric ranging from 1 to 63.      |
| <b>wide</b>       | Uses the new metric style with the router interface metric ranging from 1 to 16777214 |
| <b>transition</b> | Allows the router to send and receive the new and old metric style.                   |
| <b>level-1</b>    | This metric-style on the Level-1 circuit.                                             |
| <b>level-2</b>    | This metric-style applies on the Level-2 circuit.                                     |
| <b>level-1-2</b>  | This metric-style applies on the Level-1-2 circuit.                                   |

**Defaults** By default, the metric-style is narrow.

**Command** IS-IS routing process configuration mode

**Mode**

**Usage Guide** The metric value of the interface is specified by the **isis metric** *metric* when the metric-style is set to narrow, while the metric value is specified by the **isis wide-metric** *metric* in case that the metric-style is set to wide or **transition**.

**Configuration** Ruijie(config)# **router isis**  
**Examples** Ruijie(config-router)# **metric-style wide**

| Related Commands | Command                 | Description                            |
|------------------|-------------------------|----------------------------------------|
|                  |                         | <b>isis metric</b>                     |
|                  | <b>isis wide-metric</b> | Sets the wide metric of the interface. |

**Platform** N/A

**Description**

## 4.56 multi-topology

Use this command to enable IS-IS to support IPv6 unicast topology. Use the **no** form of this command to restore the default setting.

**multi-topology [ transition ]**  
**no multi-topology [ transition ]**

| Parameter Description | Parameter | Description       |
|-----------------------|-----------|-------------------|
|                       |           | <b>transition</b> |

**Defaults** By default, multitopology is not configured, namely, IS-IS does not support IPv6 unicast topology.

**Command** IS-IS address-family IPv6 configuration mode

**Mode**

- Usage Guide**
1. When this command is not configured, IPv4 and IPv6 share the same IS-IS physical topology, which is also called default topology.
  2. If the **transition** parameter is not specified, the device runs in multi-topology mode, the IS-IS v4 process works in the default topology while the IS-IS v6 process works in the IPv6 unicast topology.
  3. If the **transition** parameter is specified, the device runs in multi-topology transition mode and the IS-IS v6 process runs in both the default topology and IPv6 unicast topology.

The above three configurations are exclusive.

The device which runs in multi-topology transition mode can transmit the multi-topology TLV and the default topology TLV. The multi-topology transition mode can be applied in incremental deployment to ensure smooth network migration. However, this mode may cause leaking of routes between the default topology and IPv6 unicast topology. Be careful to configure multi-topology transition mode, as this configuration may lead to network problems such as route blackhole and network loop.

Before you configure this command, you need to set the metric style as wide or transition mode. Configuring the metric style as narrow and configuring only one Level to support wide or transition mode will disable the multitopology routing (MTR) function.

**Configuration** The following example configures multi-topology.

**Examples**

```
Ruijie(config)# router isis
Ruijie(config-router)# address-family ipv6
Ruijie(config-router-af)# multi-topology
```

**Related Commands**

| Command            | Description              |
|--------------------|--------------------------|
| <b>router isis</b> | Creates IS-IS instances. |

**Platform** N/A  
**Description**

### 4.57 net

Use this command to set the IS-IS NET (Network Entry Title) address. Use the **no** form of this command to delete this NET address.

- net** *net-address*  
**no net** *net-address*

**Parameter Description**

| Parameter          | Description                                                                                                                                            |
|--------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>net-address</i> | The format of net-address is shown as below:<br>XX..XXXX.YYYY.YYYY.YYYY.00, the XX...XXXX is the area address and the YYYY.YYYY.YYYY is the system ID. |

**Defaults** By default, no NET address is set.

**Command** IS-IS routing process configuration mode

**Mode**

**Usage Guide** This command is used to set the Area ID and System ID for the IS-IS. Up to three NET addresses are allowed to be set by default, namely three addresses with different Area can be set. However, the System ID must be the same.

**Configuration** Ruijie(config)# **router isis**

**Examples** Ruijie(config-router)# **net** 49.0000.0001.0002.0003.00

**Related Commands**

| Command            | Description              |
|--------------------|--------------------------|
| <b>router isis</b> | Creates IS-IS instances. |

**Platform** N/A

**Description**

## 4.58 passive-interface

Use this command to configure the passive interface. Use the **no** form of this command to remove the passive interface.

**passive-interface** [ **default** ] { *interface-type interface-number* }

**no passive-interface** [ **default** ] { *interface-type interface-number* }

**Parameter Description**

| Parameter               | Description                                      |
|-------------------------|--------------------------------------------------|
| <b>default</b>          | Configures IS-IS disabled interfaces as passive. |
| <i>interface-type</i>   | Indicates the interface type.                    |
| <i>interface-number</i> | Indicates the interface number.                  |

**Defaults** The passive interface is not configured by default.

**Command** IS-IS routing process configuration mode

**Mode**

**Usage Guide** Use this command to disable the interface to receive and send the IS-IS packets, but to advertise the IP address of the interface.

After the **default** option is configured, if the number of IS-IS disabled interfaces exceeds 255, the first 255 interfaces are configured as passive and the remaining interfaces are non-passive.

**Configuration** The following example configures interface GigabitEthernet 0/0 as passive.

**Examples** Ruijie(config)# **router isis** 1

```
Ruijie(config-router)# passive-interface GigabitEthernet 0/0
```

#### Related Commands

| Command            | Description              |
|--------------------|--------------------------|
| <b>router isis</b> | Creates IS-IS instances. |

Platform N/A

Description

## 4.59 redistribute

Use this command to redistribute the routes from one routing protocol into another routing protocol.

Use the **no** form of this command to delete the redistribution.

```
redistribute { bgp | ospf process-id match { internal | external [ 1 | 2 ] | nssa-external [ 1 | 2 ] } | rip | connected | static } [ metric metric-value ] [ metric-type type-value ] [ route-map map-tag ] [ level-1 | level-1-2 | level-2 ]
```

```
no redistribute { bgp | ospf process-id [ match { internal | external [ 1 | 2 ] | nssa-external [ 1 | 2 ] } ] | rip | connected | static } [ metric metric-value ] [ metric-type { internal | external } ] [ route-map map-tag ] [ level-1 | level-1-2 | level-2 ]
```

#### Parameter Description

| Parameter                                                                                     | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|-----------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>process-id</i>                                                                             | OSPF process ID, in the range of 1 to 65535.                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>match</b> { <b>internal</b>   <b>external</b> [ 1   2 ]   <b>nssa-external</b> [ 1   2 ] } | Redistributes the OSPF routes to perform the filtering on the subtype of the OSPF routes. If the match option is not specified, all routes of the ospf subtype by default are received. If the 1 or 2 followed by the <b>match external</b> is not specified, then redistribute the route of the OSPF <b>external1</b> and <b>external 2</b> . if the 1 or 2 following the <b>match nssa-external</b> is not specified, then redistribute the routes of OSPF <b>nssa-external 1</b> and <b>nssa-external 2</b> . |
| <b>metric</b> <i>metric-value</i>                                                             | Sets the metric value of redistributing the route, in the range of 0 to 4261412864.<br>If the metric option is not specified, the external metric value is used.                                                                                                                                                                                                                                                                                                                                                 |
| <b>metric-type</b> { <b>internal</b>   <b>external</b> }                                      | Sets the metric type of redistributing the route.<br><b>internal</b> : use the internal metric type.<br><b>external</b> : use the external metric type.<br>If the metric-type is not specified, the <b>internal</b> type is used by default.                                                                                                                                                                                                                                                                     |
| <b>route-map</b> <i>map-tag</i>                                                               | Sets the route-map during the external routes redistribution, which is used to filter the redistributed routes or set attributions of the routes.<br>The name of <i>map-tag</i> shall not be over 32 characters.<br>No route-map is configured by default.                                                                                                                                                                                                                                                       |
| <b>level-1</b>   <b>level-1-2</b>   <b>level-2</b>                                            | Specifies the Level of receiving the redistributed routing information.<br>If the Level is not specified, it is defaulted to be redistributed into the Level-2 .                                                                                                                                                                                                                                                                                                                                                 |

|  |                                                                                                                                                                                                                      |
|--|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p>The format is shown as below:</p> <p><b>level-1:</b> redistribute into the Level-1</p> <p><b>level-1-2:</b> redistribute into both Level-1 and Level-2.</p> <p><b>level-2:</b> redistribute into the Level-2.</p> |
|--|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

**Defaults** By default, no redistribution is configured.

**Command Mode** IS-IS routing process configuration mode , IS-IS address-family ipv6 mode

**Usage Guide** Configure "**no redistributbue { bgp | ospf processs-id | rip | connected | static }**" to disable protocol redistribution. If "**no redistribute**" is followed by any other parameter, it means that this parameter is restored to the default setting instead of disabling protocol redistribution. For example: "**no redistribute bgp**" will disable bgp redistribution, while "**no redistribute bgp route-map aa**" will disable route-map aa filtering during redistribution instead of disabling bgp redistribution. The routing information will be placed into the IP External Reachability Information TLV of LSP when redistributing external route in the IPv4 mode. The routing information will be placed to the IPv6 Reachable TLV of LSP when redistributing external route in the IPv6 mode. In the old version of some vendors, after configuring the **metric-type** to the **external**, the redistributed route metric will be added by 64 and then perform the routing according to the metric value during the routing calculation, which violates the protocol. In actual application, the priority of the external route may be higher than that of the internal route. When connecting with these old version of some vendors, the related configuration (such as the **metric** or the **metric-type**) of each device can be modified to ensure that the priority of the internal route is higher than the external.

The following example sets the metric value to 10.

**Configuration Examples**

```
Ruijie(config)# router isis
Ruijie(config-router)# redistribute ospf 1 metric 10 level-1
```

| Related Commands | Command                                               | Description                                                                |
|------------------|-------------------------------------------------------|----------------------------------------------------------------------------|
|                  | <b>redistribute isis [ tag ] level-2 into level-1</b> | Redistributes the reachable routing information from Level-2 into Level-1. |
|                  | <b>redistribute isis [ tag ] level-1 into level-2</b> | Redistributes the reachable routing information from Level-1 into Level-2. |
|                  | <b>route-map</b>                                      | Configures the route map.                                                  |

**Platform Description** N/A

## 4.60 redistribute isis level-1 into level-2

Use this command to redistribute the Level-1 reachable routing information of the IS-IS instance into

the Level-2 of current instance. Use the **no** form of this command to disable this redistribution.

**redistribute isis** [ *tag* ] **level-1 into level-2** [ **route-map** *route-map-name* | **distribute-list** *access-list-name* ]

**no redistribute isis** [ *tag* ] **level-1 into level-2** [ **route-map** *route-map-name* | **distribute-list** *access-list-name* ]

| Parameter Description | Parameter                                      | Description                                                                                                                                                                                                                                                                                                                                                                                                          |
|-----------------------|------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <i>tag</i>                                     | Name of the IS-IS instance.                                                                                                                                                                                                                                                                                                                                                                                          |
|                       | <b>route-map</b> <i>route-map-name</i>         | Sets the route map during the route redistribution, which is used to filter the redistributed route and set attributions of this route.<br>Name of the <i>route-map-name</i> shall not be over 32 characters.<br>No <b>route-map</b> is configured by default.                                                                                                                                                       |
|                       | <b>distribute-list</b> <i>access-list-name</i> | Uses the <b>distribute-list</b> to filter the redistributed routes.<br>Access-list-name is the prefix list associated, it can be the standard, extended or naming prefix list. The format is shown as below:<br>{<1-99>   <100-199>   <1300-1999>   <2000-2699>   <i>acl-name</i> }<br>In the IS-IS <b>address-family ipv6</b> mode, you can use only the naming prefix list with the format being <i>acl-name</i> . |

**Defaults** If the IS-IS Level-2 instance exists, all IS-IS Level-1 routes are by default redistributed into the IS-IS Level-2 instance.

**Command Mode** IS-IS routing process configuration mode or IS-IS **address-family ipv6** mode.

**Usage Guide** Use the **route-map** or **distribute-list** to filter the Level-1 route of the specified instance to be redistributed. Only the route that meets the condition can be redistributed into the Level-1 of current instance.

 You can only choose one of the two parameters **route-map** and **distribute-list**.

Configure the **no distribute isis** [ *tag* ] **level-2 into level-1** to disable the specified instance redistribution. If the **no redistribute** is followed by any other parameters, it means that this parameter is restored to the default setting instead of disabling the specified instance redistribution.

For example: "**no redistribute isis tag1 level-1 into level-2**" will disable the isis tag1 redistribution, while "**no redistribute isis tag1 level-1 into level-2 route-map aa**" will disable route-map aa filtering during redistribution instead of disabling the isis tag1 redistribution.

**Configuration Examples**

```
Ruijie(config)# router isis aa
Ruijie(config-router)# redistribute isis bb level-1 into level-2
```

| Related Commands | Command             | Description                                |
|------------------|---------------------|--------------------------------------------|
|                  | <b>redistribute</b> | Redistributes the routing information from |



|                                               |                                                                            |
|-----------------------------------------------|----------------------------------------------------------------------------|
|                                               | another routing protocol.                                                  |
| <b>redistribute isis level-2 into level-1</b> | Redistributes the reachable routing information from Level-2 into Level-1. |

**Platform** N/A

**Description**

## 4.61 redistribute isis level-2 into level-1

Use this command to redistribute the Level-2 reachable routing information of the IS-IS instance into the Level-1 of current instance. Use the **no** form of this command to remove the redistribution.

**redistribute isis** [ *tag* ] **level-2 into level-1** [ **route-map** *route-map-name* | **distribute-list** *access-list-name* | **prefix** *ip-address net-mask* ]

**no redistribute isis** [ *tag* ] **level-2 into level-1** [ **route-map** *route-map-name* | **distribute-list** *access-list-name* | **prefix** *ip-address net-mask* ]

**Parameter Description**

| Parameter                                      | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>tag</i>                                     | Name of the IS-IS instance to be redistributed.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>route-map</b> <i>route-map-name</i>         | Sets the route map during the route redistribution, which is used to filter the redistributed routes and set attributions of the routes. Name of the <i>route-map-name</i> shall not be over 32 characters. <ul style="list-style-type: none"> <li>No route-map is configured by default.</li> </ul>                                                                                                                                                                                                                                       |
| <b>distribute-list</b> <i>access-list-name</i> | <ul style="list-style-type: none"> <li>Uses the distribute-list to filter the redistributed routes.</li> <li>Access-list-name is the prefix list associated, it can be the standard, extended or naming prefix list. The format is shown as below: <ul style="list-style-type: none"> <li>{&lt;1-99&gt;   &lt;100-199&gt;   &lt;1300-1999&gt;   &lt;2000-2699&gt;   <i>acl-name</i>}</li> <li>In the IS-IS address-family ipv6 mode, you can use only the naming prefix list with the format being <i>acl-name</i>.</li> </ul> </li> </ul> |

**Defaults** N/A

**Command Mode** IS-IS routing process configuration mode or IS-IS **address-family ipv6** mode.

**Usage Guide** Use the **route-map** or **distribute-list** to filter the Level-2 route of the specified instance to be redistributed. Only the route that meets the condition can be redistributed into the Level-1 of current instance.

 You can only choose one of the two parameters **route-map** and **distribute-list**.

Configure the **no redistribute isis** [ *tag* ] **level-2 into level-1** to disable the specified instance redistribution. If the **no redistribute** is followed by any other parameters, it means that this parameter is restored to the default setting instead of disabling the specified instance redistribution.

For example: "**no redistribute isis tag1 level-2 into level-1**" will disable the isis *tag1* redistribution, while "**no redistribtue isis tag1 level-2 into level-1 route-map a**" will disable route-map *aa* filtering during redistribution instead of disabling the isis *tag1* redistribution.

**Configuration** Ruijie(config)# router isis aa

**Examples** Ruijie(config-router)# redistribute isis bb level-2 into level-1

**Related  
Commands**

| Command                                       | Description                                                                |
|-----------------------------------------------|----------------------------------------------------------------------------|
| <b>redistribute</b>                           | Redistributes the routing information from another routing protocol.       |
| <b>redistribute isis level-1 into level-2</b> | Redistributes the reachable routing information from Level-1 into Level-2. |

**Platform** N/A

**Description**

## 4.62 router isis

Use this command to create the IS-IS instance. Use the **no** form of this command to delete this instance.

**router isis** [ *tag* ]

**no router isis** [ *tag* ]

**Parameter  
Description**

| Parameter  | Description   |
|------------|---------------|
| <i>tag</i> | Instance name |

**Defaults** By default, no IS-IS instance is configured.

**Command** Global configuration mode

**Mode**

**Usage Guide** Use this command to initialize the IS-IS instance and enter the IS-IS routing process configuration mode.

The IS-IS instance will not be executed unless one NET address is configured at least.

When enabling the IS-IS routing process with the parameter *tag*, the parameter *tag* will be used as well when disabling the IS-IS routing process.

By default, the CPU protection is enabled on the switch, so that the number of packets corresponding to the destination group addresses of ISIS (AllISSystems, AllL1ISSystems, AllL2ISSystems) is limited when they are sent to the CPU, for example , the default limited value is 400pps. The number of packets received by the switch may be larger than the default value if there are many neighbors or the interval for sending Hello packets is short, resulting in continual vibration of the adjacent relation. In this case, you need to raise the limit of IS-IS packets using the global commands **cpu-protect type**

**isis-is pps, cpu-protect type isis-l1is pps** and **cpu-protect type isis-l2is pps**.

```

Configuration  Ruijie# configure terminal
Examples       Ruijie(config)# router isis
    
```

| Related Commands | Command                 | Description                                               |
|------------------|-------------------------|-----------------------------------------------------------|
|                  | <b>ip router isis</b>   | Enables the IS-IS IPv4 routing protocol on the interface. |
|                  | <b>ipv6 router isis</b> | Enables the IS-IS IPv6 routing protocol on the interface. |
|                  | <b>net</b>              | Sets the NET address.                                     |

**Platform** N/A

**Description**

### 4.63 set-overload-bit

Use this command to instruct a neighbor not to use the local IS-IS node as a transit device for forwarding data.

**set-overload-bit [ on-startup *seconds* ] [ suppress { [ interlevel ] [ external ] } ] [ level-1 | level-2 ]**

Use the **no** form of this command to disable the function of instructing a neighbor not to use the local IS-IS node as a transit device for forwarding data.


**no set-overload-bit [ level-1 | level-2 ]**

| Parameter Description | Parameter                        | Description                                                                                                                                                                                                                           |
|-----------------------|----------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <b>on-startup <i>seconds</i></b> | Indicates that an IS-IS node automatically enters the OVERLOAD state after restart.<br><b>seconds</b> is the duration of the IS-IS node in the OVERLOAD state after restart. The value range is <b>5</b> to <b>86,400</b> in seconds. |
|                       | <b>suppress</b>                  | Indicates that internal routes (IS-IS inter-area routes and intra-area routes) or external routes are not advertised to neighbors when the IS-IS node is in the OVERLOAD state.                                                       |
|                       | <b>interlevel</b>                | Indicates that IS-IS inter-area routes and intra-area routes are not advertised to neighbors when the IS-IS node is in the OVERLOAD state. It is used in combination with the <b>suppress</b> keyword.                                |
|                       | <b>external</b>                  | Indicates that external routes are not advertised to neighbors when the IS-IS node is in the OVERLOAD state. It is used in combination with the <b>suppress</b> keyword.                                                              |
|                       | <b>level-1</b>                   | Sends LSP packets that carry the OVERLOAD bit only to Level-1 neighbors.                                                                                                                                                              |

|                |                                                                          |
|----------------|--------------------------------------------------------------------------|
| <b>level-2</b> | Sends LSP packets that carry the OVERLOAD bit only to Level-2 neighbors. |
|----------------|--------------------------------------------------------------------------|

|                      |                                                                                                                                                                                                                                                                                                                                                                                                              |
|----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Defaults</b>      | The function of instructing a neighbor not to use the local IS-IS node as a transit device for forwarding data is disabled by default.                                                                                                                                                                                                                                                                       |
| <b>Command Mode</b>  | IS-IS routing process configuration mode                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Default Level</b> | 14                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Usage Guide</b>   | <p>This command forces a IS-IS node to set the OVERLOAD bit in non-virtual LSP packets, to instruct IS-IS neighbors not to use the local node as a transit device.</p> <p>If the <b>on-startup</b> keyword is carried, the device automatically enters the OVERLOAD state after restart. If the <b>on-startup</b> keyword is not carried, the device immediately enters the OVERLOAD state upon restart.</p> |

---

 The **on-startup** keyword takes effect for only one level.

---

The OVERLOAD bit is mainly used in the following cases:

- Device overload

The overload of the local IS-IS node, for example, memory insufficiency or CPU full load, may cause incomplete routes in the local routing table or no resource for data forwarding. You can set the OVERLOAD bit in LSP packets to instruct neighbors not to use the local node as a transit device.

In this case, the **on-startup** keyword is not carried in the configuration. The OVERLOAD bit is manually set or cancelled. You must manually cancel this command after the local IS-IS node restores to the normal state. Otherwise, the local IS-IS node is always in the OVERLOAD state

- Instantaneous black hole

In the scenario described in RFC3277, the IS-IS converges faster than BGP does. After an IS-IS node restarts, the route fails instantaneously, that is, instantaneous black hole occurs. You can set the OVERLOAD bit in LSP packets to instruct neighbors not to use the local node as a transit device till the specified timer expires.

In this case, the configuration must carry the **on-startup** field. The OVERLOAD bit is automatically set or cancelled by the IS-IS node based on the configuration.

After the **on-startup** field is selected, the IS-IS node automatically enters the instantaneous black hole state after restart. After a new neighbor relationship is established, the IS-IS node immediately sends the LSP packet that carries the OVERLOAD bit to notify the neighbor that the local device enters the instantaneous black hole state (or OVERLOAD state) and that the local node cannot be used as a transit device.

When the specified timer expires, the IS-IS node immediately sends the LSP packet without the OVERLOAD bit to notify the neighbor that the local device is no longer in the instantaneous state (or OVERLOAD state) and can be used as a transit device.

The timer time needs to be set based on the number of routes in the network. If there are many routes, set it to a large value; if there are a few routes, set it to a small value.

- The local IS-IS node is not intended to be used for forwarding real data

If the local IS-IS node needs to be connected to the production network for testing or other function requirements and it is not intended to be used for forwarding real data in the network, you can set the OVERLOAD bit in LSP packets to instruct neighbors not to use the local device as a transit device.

In this case, the **on-startup** field is not carried in the configuration and the OVERLOAD bit is manually set or cancelled.

You can configure **suppress** as required to restrict the routing information carried in LSP packets in the OVERLOAD state, for example, suppress internal routes and external routes and advertise only local direct routes.

**Configuration Examples** The following example sets an IS-IS node to immediately enter the instantaneous black hole state after restart till the specified timer expires (set the specified waiting time to 300 seconds) and advertises only local direct routes to neighbors.

```
Ruijie(config)# router isis
Ruijie(config-router)#set-overload-bit on-startup 300 suppress interlevel
external
```

The following example connects the local IS-IS node to the production network as a test device and set its not to forward real data of the production network, to avoid impact on production.

```
Ruijie(config)# router isis
Ruijie(config-router)#set-overload-bit suppress interlevel external
```

## 4.64 spf-interval

Use this command to set the minimal interval for the SPF calculation. Use the **no** form of this command to restore the default minimal interval.

**spf-interval** [ **level-1** | **level-2** ] *maximum-interval* [*initial-interval* *hold-interval*]

**no spf-interval** [ **level-1** | **level-2** ]

| Parameter Description | Parameter               | Description                                                                                                                                                                              |
|-----------------------|-------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <b>level-1</b>          | Applies the configuration only to Level-1.                                                                                                                                               |
|                       | <b>level-2</b>          | Applies the configuration only to Level-2.                                                                                                                                               |
|                       | <i>maximum-interval</i> | Indicates the maximum interval for performing two consecutive SPF calculations. The value range is <b>1</b> to <b>120</b> (in seconds). The default value is <b>10</b> .                 |
|                       | <i>initial-interval</i> | Indicates the waiting time for performing the SPF calculation for the first time. The value range is <b>0</b> to <b>60000</b> (in milliseconds). The default value is <b>50</b> .        |
|                       | <i>hold-interval</i>    | Indicates the minimum interval for performing the SPF calculation for the second time. The value range is <b>10</b> to <b>60000</b> (in milliseconds). The default value is <b>200</b> . |

**Defaults** By default, this command is not configured.  
 The default SPF interval is 10 seconds, which takes effect at both Level-1 and Level-2.

**Command Mode** IS-IS routing process configuration mode

**Usage Guide** Increasing the maximum interval for performing SPF calculations can avoid frequent SPF calculations and waste of CPU resources. However, a larger minimum interval also leads to slower responses to route changes.

The waiting time for performing the SPF calculation for the first time is the initial interval. If the network becomes unstable, the SPF calculation interval is less than the maximum interval, and the interval for performing the SPF calculation for the second time becomes the hold interval. A corresponding penalty is added to this interval: The next interval for the SPF calculation doubles the previous interval for the same SPF calculation, until the SPF calculation interval reaches the maximum interval. Subsequent SPF calculations are performed at the maximum interval. When the network becomes stable, the interval for performing the SPF calculation becomes greater than the maximum interval, and the waiting time for performing the SPF calculation is restored to the initial interval.

Link changes have high requirements for convergence. The initial interval can be set to a small value. The preceding parameters can also be adjusted to larger values to reduce CPU consumption.

The value of **initial-interval** cannot be greater than that of **maximum-interval**. Otherwise, the value of **initial-interval** will be used as the value of **maximum-interval**.

The value of **hold-interval** cannot be greater than that of **maximum-interval**. Otherwise, the value of **hold-interval** will be used as the value of **maximum-interval**.

The value of **initial-interval** cannot be greater than that of **hold-interval**. Otherwise, the value of **initial-interval** will be used as the value of **hold-interval**.

**Configuration Examples** The following example sets the maximum interval for generating two duplicate SPF packets to 5 seconds, the interval for generating a duplicate SPF packet for the first time to 100 ms, and the interval for generating a duplicate SPF packet for the second time to 200 ms.

```
Ruijie(config)# router isis
Ruijie(config-router)# spf-interval 5 100 200
```

The following example sets the maximum interval for generating two duplicate SPF packets to 10 seconds.

```
Ruijie(config)# router isis
Ruijie(config-router)# spf-interval 10
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 4.65 summary-address

Use this command to configure the IPv4 aggregation route. Use the **no** form of this command to delete the aggregation route.

**summary-address** *ip-address net-mask* [ **level-1** | **level-2** | **level-1-2** ] [*metric number*]

**no summary-address** *ip-address net-mask*

| Parameter Description | Parameter         | Description                                                                            |
|-----------------------|-------------------|----------------------------------------------------------------------------------------|
|                       | <i>ip-address</i> | Indicates the IP address of the summary route.                                         |
|                       | <i>net-mask</i>   | Indicates the subnet mask of the summary route.                                        |
|                       | <b>level-1</b>    | Applies the setting only to Level-1.                                                   |
|                       | <b>level-2</b>    | Applies the setting only to Level-2. By default, the setting takes effect for Level-2. |
|                       | <b>level-1-2</b>  | Applies the setting to Level-1 and Level-2.                                            |
|                       | <i>number</i>     | Indicates the metric of the summary route.                                             |

**Defaults** By default, no aggregation route is configured.

**Command Mode** IS-IS routing process configuration mode

**Usage Guide** With the aggregation route configured, if there is any reachable address or reachable network segment route in the aggregation route, it will publish the aggregation route instead of the detailed route.

**Configuration** Ruijie(config)# **router isis**

**Examples** Ruijie(config-router)# **summary-address** 10.10.0.0/24 **level-1-2**

| Related Commands | Command               | Description                            |
|------------------|-----------------------|----------------------------------------|
|                  | <b>summary-prefix</b> | Configures the IPv6 aggregation route. |

**Platform Description** N/A

## 4.66 summary-prefix

Use this command to configure the IPv6 aggregation route. Use the **no** form of this command to delete the aggregation route.

**summary-prefix** *ipv6-prefix/prefix-length* [ **level-1** | **level-2** | **level-1-2** ]

**no summary-address** *ipv6-prefix/prefix-length*

| Parameter Description | Parameter                          | Description                                                                              |
|-----------------------|------------------------------------|------------------------------------------------------------------------------------------|
|                       | <i>ipv6-prefix / prefix-length</i> | Aggregation network address and the IP prefix length of the aggregation network address. |
|                       | <b>level-1</b>                     | Applies to the Level-1 only.                                                             |
|                       | <b>level-2</b>                     | Applies to the Level-2 only.                                                             |
|                       | <b>level-1-2</b>                   | Applies to both Level-1 and Level-2.                                                     |

**Defaults** By default, no aggregation route is configured.

**Command** Address-family ipv6 mode

**Mode**

**Usage Guide** With the aggregation route configured, if there is any reachable address or reachable network segment route in the aggregation route, it will publish the aggregation route instead of the detailed route.

**Configuration** Ruijie(config)# **router isis**

**Examples** Ruijie(config-router)# **address-family ipv6**

Ruijie (config-router-af)# **summary-prefix 1000::/96 level-1-2**

| Related Commands | Command                | Description                            |
|------------------|------------------------|----------------------------------------|
|                  | <b>summary-address</b> | Configures the IPv4 aggregation route. |

**Platform** N/A

**Description**

## 4.67 two-way-maintain

Use this command to enable the IS-IS two-way maintenance function.

**two-way-maintain**

Use the **no** form of this command to disable the IS-IS two-way maintenance function.

**no two-way-maintain**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** The IS-IS two-way maintenance function is enabled by default.

**Command** IS-IS routing process configuration mode



**Mode****Default Level** 14

**Usage Guide** In a large-scale network, a large number of packets are sent and received, which occupies lots of CPU and memory resources, causing the delay or discarding of some IS-IS packets. If the time required for processing hello packets exceeds the neighbor relationship maintenance duration, the corresponding neighbor relationship times out and is removed. When the two-way maintenance function is enabled, if a large number of packets exist on the network, the LSP packets, CSNP packets, and PSNP packets from a neighbor in addition to hello packets can also be used to maintain the two-way relationship with the neighbor, preventing the neighbor failure caused by delay or discarding of hello packets.

**Configuration** The following example disables the IS-IS two-way maintenance function.

**Examples**

```
Ruijie(config)# router isis 1
Ruijie(config-router)# no two-way-maintain
```

## 4.68 virtual-system

Use this command to configure an additional system ID for fragment extension. Use the **no** form of this command to remove the additional system ID.

**virtual-system** *system-id*

**no virtual-system** *system-id*

**Parameter Description**

| Parameter        | Description                                  |
|------------------|----------------------------------------------|
| <i>system-id</i> | Additional system ID. The length is 6 bytes. |

**Defaults** No additional system ID is configured by default.

**Command** IS-IS routing process configuration mode

**Mode**

**Usage Guide** Use this command to configure an additional system ID for LSP fragment extension. The system must be enabled with fragment extension mode and configured with the additional system ID to enable LSP fragment extension.

**Configuration** The following example configures an additional system ID for fragment extension.

**Examples**

```
Ruijie(config)# router isis
Ruijie(config-router)# virtual-system 0000.0000.0034
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description****4.69 vrf**

Use this command to bind the IS-IS process with a VRF instance. Use the **no** form of this command to unbind the IS-IS process from the VRF instance.

**vrf** *vrf-name*

**no vrf** *vrf-name*

**Parameter Description**

| Parameter       | Description                                             |
|-----------------|---------------------------------------------------------|
| <i>vrf-name</i> | VRF instance name. The VRF instance must be configured. |

**Defaults**

No IS-IS process is bound with the VRF instance.

**Command**

IS-IS routing process configuration mode

**Mode****Usage Guide**

Before you configure this command, the specified VRF instance must be configured. If you want to build the IS-IS v6 neighbor, the multi-protocol VRF and IPv6 protocol must be enabled.

The following restrictions are for binding IS-IS process with VRF instance:

1. The IS-IS process in the same non-default VRF instance must be configured with a different system ID. The IS-IS process in the different VRF instance can be configured with the same system ID.
2. An IS-IS process can be bound with only one VRF instance. A VRF instance can be bound with multiple IS-IS processes.
3. If a VRF instance bound with an IS-IS changes, the IS-IS enabled interfaces which are bound with the VRF instance and the redistribute configuration in IS-IS routing process configuration mode will be removed.

**Configuration**

The following example binds an IS-IS process with a VRF instance.

**Examples**

```
Ruijie(config)#vrf definition vrf_1
Ruijie(config-vrf)#address-family ipv4
Ruijie(config-vrf-af)#exit-address-family

Ruijie(config)# router isis
Ruijie(config-router)# vrf vrf_1
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform**

N/A

**Description**

## 4.70 show clns is-neighbors

Use this command to display all IS neighbors to provide the adjacency relationship of routers.

**show clns [ tag ] is-neighbors [ interface-type interface-number ] [ detail ]**

| Parameter Description | Parameter                                        | Description                                      |
|-----------------------|--------------------------------------------------|--------------------------------------------------|
|                       | <i>tag</i>                                       | Specifies the IS-IS instance.                    |
|                       | <i>interface-type</i><br><i>interface-number</i> | Specifies the name of interface.                 |
|                       | <b>detail</b>                                    | Displays detailed information of all interfaces. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode, global configuration mode or interface configuration mode.

**Usage Guide** N/A

**Configuration Examples** The output results of the **show clns is-neighbors detail** command are displayed as below:

```

Examples
Area (null):
System Id Type IP Address State Holdtime Circuit Interface
r1 L1 1.0.0.2 Up 9 r1.01 GigabitEthernet 0/0
L2 1.0.0.2 Up 9 r1.01 GigabitEthernet 0/0
Adjacency ID: 1
Uptime: 00:00:54
Area Address(es): 49.1111

SNPA: 00d0.f8bc.de08

IPv6 Address(es): fe80::2a9:15ff:fe36:5413

Level-1 MTID: Standard

Level-2 MTID: Standard

Level-1 Protocols Supported: IPv4
Level-2 Protocols Supported: IPv4
    
```

| Related Commands | Command                    | Description                                                                                                    |
|------------------|----------------------------|----------------------------------------------------------------------------------------------------------------|
|                  | <b>show clns neighbors</b> | Displays all IS neighbors to provide the router information and the adjacency relationship of terminal system. |

**Platform** N/A  
**Description**

### 4.71 show clns neighbors

Use this command to display all IS neighbors to provide the router information and the adjacency relationship of terminal system.

**show clns** [ *tag* ] **neighbors** [ *interface-type interface-number* ] [ **detail** ]

| Parameter Description | Parameter                                        | Description                                      |
|-----------------------|--------------------------------------------------|--------------------------------------------------|
|                       | <i>tag</i>                                       | Specifies the IS-IS instance.                    |
|                       | <i>interface-type</i><br><i>interface-number</i> | Specifies the name of the interface.             |
|                       | <b>detail</b>                                    | Displays detailed information of all interfaces. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode, global configuration mode or interface configuration mode.

**Usage Guide** N/A

**Configuration Examples** The following example displays all IS neighbors to provide the router information and the adjacency relationship of terminal system.

```
Ruijie# show clns neighbors detail

Area (null):
System Id      SNPA                State Holdtime  Type Protocol Interface
r1             00d0.f8bc.de08     Up    7          L1  IS-IS  GigabitEthernet 0/0
               Up    9          L2  IS-IS  GigabitEthernet 0/0

Adjacency ID: 1
Uptime: 00:01:40
Area Address(es): 49.1111
IP Address(es): 1.0.0.2
IPv6 Address(es): fe80::2a9:15ff:fe36:5413
Level-1 MTID: Standard
Level-2 MTID: Standard
Level-1 Protocols Supported: IPv4, IPv6
Level-2 Protocols Supported: IPv4, IPv6
BFD(IPv4) session state: Up
BFD(IPv6) session state: Up
```

| Related | Command | Description |
|---------|---------|-------------|
|---------|---------|-------------|

|                               |                                                                         |
|-------------------------------|-------------------------------------------------------------------------|
| <b>Commands</b>               |                                                                         |
| <b>show clns is-neighbors</b> | Displays all IS neighbors to provide the router adjacency relationship. |

**Platform** N/A

**Description**

## 4.72 show isis counter

Use this command to display various statistics of IS-IS.

**show isis [ tag ] counter**

|                              |                  |                               |
|------------------------------|------------------|-------------------------------|
| <b>Parameter Description</b> | <b>Parameter</b> | <b>Description</b>            |
|                              | <i>tag</i>       | Specifies the IS-IS instance. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode, global configuration mode or interface configuration mode.

**Usage Guide** N/A

**Configuration Examples** The output results of the **show clns neighbors details** are displayed as below:

```
Ruijie# show isis counter
Area (null):
IS-IS Level-1 isisSystemCounterEntry:
isisSysStatCorrLSPs: 0
isisSysStatAuthTypeFails: 0
isisSysStatAuthFails: 0
isisSysStatLSPDbaseOloads: 0
isisSysStatManAddrDropFromAreas: 0
isisSysStatAttmptToExMaxSeqNums: 0
isisSysStatSeqNumSkips: 0
isisSysStatOwnLSPPurges: 0
isisSysStatIDFieldLenMismatches: 0
isisSysStatMaxAreaAddrMismatches: 0
isisSysStatPartChanges: 0
isisSysStatSPFRuns: 30
IS-IS Level-2 isisSystemCounterEntry:
isisSysStatCorrLSPs: 0
isisSysStatAuthTypeFails: 0
isisSysStatAuthFails: 0
isisSysStatLSPDbaseOloads: 0
```

```
isisSysStatManAddrDropFromAreas: 0
isisSysStatAttmptToExMaxSeqNums: 0
isisSysStatSeqNumSkips: 0
isisSysStatOwnLSPPurges: 0
isisSysStatIDFieldLenMismatches: 0
isisSysStatMaxAreaAddrMismatches: 0
isisSysStatPartChanges: 0
isisSysStatSPFRuns: 30
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

### 4.73 show isis database

Use this command to display the LSP database.

**show isis** [ *tag* ] **database** [ *FLAGS* | *LEVEL* | *LSPID* ]

| Parameter Description | Parameter    | Description                                                                                                                                                                             |
|-----------------------|--------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <i>tag</i>   | Specifies the IS-IS instance.                                                                                                                                                           |
|                       | <i>FLAGS</i> | The format is displayed as below:<br>detail verbose<br>detail: detailed information<br>Verbose: more detailed information than the detail.                                              |
|                       | <i>LEVEL</i> | The format is displayed as below:<br>I1   I2   level-1   level-2<br>I1 and level-1: specify the LSP database of the Level-1.<br>I2 and level-2: specify the LSP database of the Level-2 |
|                       | <i>LSPID</i> | Specifies the ID number of LSP to show the corresponding LSP information only.                                                                                                          |
|                       | <i>tag</i>   | Specifies the IS-IS instance.                                                                                                                                                           |

**Defaults** N/A

**Command Mode** Privileged EXEC mode, global configuration mode or interface configuration mode.

**Usage Guide** N/A

**Configuration** The output results of the **show isis database detail** command are displayed as below:

**Examples**

```
Ruijie# show isis database detail
Area (null):
IS-IS Level-1 Link State Database:
LSPID          LSP Seq Num  LSP Checksum  LSP Holdtime  ATT/P/OL
Ruijie.00-00 * 0x00000007  0xCDD5        1011           0/0/0
  Area Address: 49.1111
  NLPID:        0xCC
  Hostname:     Ruijie
  IP Address:   1.0.0.1
  Metric: 10    IS r1.01
  Metric: 10    IP 1.0.0.0 255.255.255.0
r1.00-00       0x00000006  0xA771        1032           0/0/0
  Area Address: 49.1111
  NLPID:        0xCC
  Hostname:     r1
  IP Address:   1.0.0.2
  Metric: 10    IS r1.01
  Metric: 10    IP 1.0.0.0 255.255.255.0
r1.01-00       0x00000002  0x062A        989            0/0/0
  Metric: 0     IS r1.00
  Metric: 0     IS Ruijie.00

IS-IS Level-2 Link State Database:
LSPID          LSP Seq Num  LSP Checksum  LSP Holdtime  ATT/P/OL
Ruijie.00-00 * 0x0000000A  0xC7D8        1033           0/0/0
  Area Address: 49.1111
  NLPID:        0xCC
  Hostname:     Ruijie
  IP Address:   1.0.0.1
  Metric: 10    IS r1.01
  Metric: 10    IP 1.0.0.0 255.255.255.0
r1.00-00       0x00000006  0xA771        1032           0/0/0
  Area Address: 49.1111
  NLPID:        0xCC
  Hostname:     r1
  IP Address:   1.0.0.2
  Metric: 10    IS r1.01
  Metric: 10    IP 1.0.0.0 255.255.255.0
r1.01-00       0x00000002  0x062A        989            0/0/0
  Metric: 0     IS r1.00
  Metric: 0     IS Ruijie.00
```

**Related**

| Command | Description |
|---------|-------------|
|---------|-------------|

|                 |     |     |
|-----------------|-----|-----|
| <b>Commands</b> |     |     |
|                 | N/A | N/A |

**Platform** N/A

**Description**

## 4.74 show isis graceful-restart

Use this command to display the status information related to the IS-IS GR.

**show isis [ tag ] graceful-restart**

|                              |                  |                     |
|------------------------------|------------------|---------------------|
| <b>Parameter Description</b> | <b>Parameter</b> | <b>Description</b>  |
|                              | tag              | IS-IS instance name |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/ global configuration mode/ interface configuration mode

**Usage Guide** N/A

**Configuration** The following example displays the GR information of the IS-IS.

**Examples** Ruijie(config)# show isis graceful-restart

```
Area (null):
  Graceful-restart Helper: enabled
  Level 1:
    GigabitEthernet 0/0: RR received: 0
  Level 2:
    GigabitEthernet 0/0: RR received: 0
  Graceful-restart: enabled
  Graceful-period: 400s, Level timer: 60s, Interface timer: 3s
  Instance GR status: not restarting
```

|                         |                                        |                                                       |
|-------------------------|----------------------------------------|-------------------------------------------------------|
| <b>Related Commands</b> | <b>Command</b>                         | <b>Description</b>                                    |
|                         | <b>graceful-restart</b>                | Enables the IS-IS GR Restart capability.              |
|                         | <b>graceful-restart grace-period</b>   | Configures the maximum interval of the grace-restart. |
|                         | <b>graceful-restart helper disable</b> | Disables the IS-IS GR Help capability.                |
|                         | <b>graceful-restart</b>                | Enables the IS-IS GR Restart capability.              |



**Platform** N/A  
**Description**

### 4.75 show isis hostname

Use this command to display the mapping relation between the router name and system ID.

**show isis [ tag ] hostname**

| Parameter Description | Parameter | Description                   |
|-----------------------|-----------|-------------------------------|
|                       | tag       | Specifies the IS-IS instance. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/ global configuration mode/ interface configuration mode

**Usage Guide** N/A

**Configuration**

```

Ruijie# show isis hostname

  System ID      Dynamic Hostname      Area (null)
* 5555.5555.5555 Ruijie
  1111.1111.1111 R1

  System ID      Dynamic Hostname      Area 1
* 4444.4444.4444 Ruijie
  2222.2222.2222 R2
    
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

### 4.76 show isis ipv6 topology

Use this command to display information about the IPv6 unicast topology to which an IS-IS router is connected.

**show isis [ tag ] ipv6 topology [ I1 | I2 | level-1 | level-2 ]**

---

| Parameter Description | Parameter      | Description                            |
|-----------------------|----------------|----------------------------------------|
|                       | <i>tag</i>     | IS-IS instance                         |
|                       | <b>I1</b>      | Topology of a specified Level-1 router |
|                       | <b>level-1</b> | Topology of a specified Level-1 router |
|                       | <b>I2</b>      | Topology of a specified Level-2 router |
|                       | <b>level-2</b> | Topology of a specified Level-2 router |

**Command Mode** Privileged EXEC mode, global configuration mode, and interface configuration mode

**Default Level** 14

**Usage Guide** N/A

**Configuration Examples** The following example displays the IPv6 unicast topology information.

```
Ruijie#show isis ipv6 topology
Area (null):
IS-IS paths to level-1 routers
System Id   Metric   Next-Hop   SNPA           Interface
r1          10      r1         00d0.f822.33ad GigabitEthernet 0/0
Ruijie      --
IS-IS paths to level-2 routers
System Id   Metric   Next-Hop   SNPA           Interface
r1          10      r1         00d0.f822.33ad GigabitEthernet 0/0
Ruijie      --
```

Field description:

| Field     | Description    |
|-----------|----------------|
| Area      | Instance tag   |
| System Id | System ID      |
| Metric    | Metric value   |
| Next-Hop  | Next hop       |
| SNPA      | SNPA address   |
| Interface | Interface name |

## 4.77 show isis interface

Use this command to display the information about IS-IS interface.

**show isis** [ *tag* ] **interface** [ *interface-type interface-number* ] [ *counter* ]

| Parameter Description | Parameter  | Description                        |
|-----------------------|------------|------------------------------------|
|                       | <i>tag</i> | Specifies the IS-IS instance name. |

|                                                  |                               |
|--------------------------------------------------|-------------------------------|
| <i>interface-type</i><br><i>interface-number</i> | Specifies the Interface name. |
|--------------------------------------------------|-------------------------------|

**Command** Privileged EXEC mode, global configuration mode or interface configuration mode.

**Mode**

**Usage Guide** N/A

**Configuration** The following example displays the IS-IS interface.

**Examples**

```
Ruijie# show isis interface
Area (null):
VLAN 1 is up, line protocol is up
  Routing Protocol: IS-IS ((null))
    Network Type: Broadcast
    Circuit Type: level-1-2
    Local circuit ID: 0x01
    Extended Local circuit ID: 0x00000001
    Local SNPA: 00d0.f822.33ab
    IP interface address:
      1.0.0.1/24
    Level-1 Metric: 10/10, Priority: 64, Circuit ID: r1.01

    Level-1 Timer intervals configured, Hello: 10s, Lsp: 33ms, Psnp: 2s, Csnp:10s,
    Retransmit:5s

    Level-1 LSPs in queue: 0

    Level-1 LSPs flood: 5

    Number of active level-1 adjacencies: 1
    Level-2 Metric: 10/10, Priority: 64, Circuit ID: r1.01

    Level-2 Timer intervals configured, Hello: 10s, Lsp: 33ms, Psnp: 2s, Csnp:10s,
    Retransmit:5s

    Level-2 LSPs in queue: 0

    Level-2 LSPs flood: 5

    Number of active level-2 adjacencies: 1
    Next IS-IS LAN Level-1 Hello in 5 seconds
    Next IS-IS LAN Level-2 Hello in 5 seconds
    BFD Enabled (Anti-congestion)
    Eligible to backup traffic
```

The following example displays the statistics of the IS-IS interface.

```
Ruijie# show isis interface counter
```

```

Area (null):
GigabitEthernet 1/1/0:
  IS-IS LAN Level-1 isisCircuitCounterEntry:
    isisCircAdjChanges: 4
    isisCircNumAdj: 2
    isisCircInitFails: 0
    isisCircRejAdjs: 0
    isisCircIDFieldLenMismatches: 0
    isisCircMaxAreaAddrMismatches: 0
    isisCircAuthTypeFails: 0
    isisCircAuthFails: 0
    isisCircLanDesISChanges: 1
  IS-IS LAN Level-2 isisCircuitCounterEntry:
    isisCircAdjChanges: 4
    isisCircNumAdj: 2
    isisCircInitFails: 0
    isisCircRejAdjs: 0
    isisCircIDFieldLenMismatches: 0
    isisCircMaxAreaAddrMismatches: 0
    isisCircAuthTypeFails: 0
    isisCircAuthFails: 0
    isisCircLanDesISChanges: 1
  IS-IS Level-1 isisPacketCounterEntry:
    isisPacketCountIIHello in/out: 187/278
    isisPacketCountLSP in/out: 10/7
    isisPacketCountCSNP in/out: 0/92
    isisPacketCountPSNP in/out: 0/0
    isisPacketCountUnknown in/out: 0/0
  IS-IS Level-2 isisPacketCounterEntry:
    isisPacketCountIIHello in/out: 186/286
    isisPacketCountLSP in/out: 17/9
    isisPacketCountCSNP in/out: 1/91
    isisPacketCountPSNP in/out: 0/0
    isisPacketCountUnknown in/out: 0/0
    
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform  
Description**

N/A

## 4.78 show isis mesh-groups

Use this command to display the mesh-group configurations on each interface.

**show isis** [ *tag* ] **mesh-groups**

| Parameter Description | Parameter  | Description                   |
|-----------------------|------------|-------------------------------|
|                       | <i>tag</i> | Specifies the IS-IS instance. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode, global configuration mode or interface configuration mode.

N/A

**Usage Guide**

**Configuration** The following example displays the mesh groups.

**Examples**

```
Ruijie# show isis mesh-groups
Mesh group (blocked)
FastEthernet 1/1
Mesh group 1 :
FastEthernet 1/0
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 4.79 show isis neighbors

Use this command to display the IS-IS neighbors..

**show isis** [ *tag* ] **neighbors** [ *detail* ]

| Parameter Description | Parameter     | Description                                          |
|-----------------------|---------------|------------------------------------------------------|
|                       | <i>tag</i>    | Displays the IS-IS instance.                         |
|                       | <i>detail</i> | Displays the detailed information of all interfaces. |

**Defaults** N/A

**Command** Privileged EXEC mode, global configuration mode or interface configuration mode.

**Mode**

**Usage Guide** N/A

**Configuration** The following example displays details of IS-IS neighbors.

**Examples**

```
Ruijie# show isis neighbors detail

Area (null):
System Id  Type  IP Address  State  Holdtime  Circuit  Interface
r1         L1   1.0.0.2    Up     9         r1.01   GigabitEthernet 0/0
           L2   1.0.0.2    Up     9         r1.01   GigabitEthernet 0/0

Adjacency ID: 1
Uptime: 00:06:25
Area Address(es): 49.1111
SNPA: 00d0.f8bc.de08
IPv6 Address(es): fe80::2a9:15ff:fe36:5413
Level-1 MTID: Standard
Level-2 MTID: Standard
Level-1 Protocols Supported: IPv4, IPv6
Level-2 Protocols Supported: IPv4, IPv6
BFD(IPv4) session state: Up
BFD(IPv6) session state: Up
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

### 4.80 show isis virtual-neighbors

Use this command to display the virtual system neighbor information of an IS-IS system.

**show isis [ tag ] virtual-neighbors**

**Parameter Description**

| Parameter  | Description     |
|------------|-----------------|
| <i>tag</i> | IS-IS instance. |

**Command Mode** Privileged EXEC mode, global configuration mode, and interface configuration mode

**Default Level** 14

**Usage Guide** N/A

**Configuration Examples**

```
Ruijie# show isis virtual-neighbors

Area (null):
Virtual System Id      Type      State
1111.1111.1111        L1        DOWN
                      L2        UP
2222.2222.2222        L1        DOWN
                      L2        UP
```

Field description:

| Field             | Description                                                                                   |
|-------------------|-----------------------------------------------------------------------------------------------|
| Area              | Instance tag                                                                                  |
| Virtual System Id | Virtual system ID                                                                             |
| Type              | Neighbor type                                                                                 |
| State             | Neighbor status. <b>UP</b> indicates the level at which the extended LSP fragment is created. |

## 4.81 show isis protocol

Use this command to display relevant protocol information about an IS-IS system.

**show isis [ tag ] protocol**

**Parameter Description**

| Parameter | Description     |
|-----------|-----------------|
| tag       | IS-IS instance. |

**Command Mode** Privileged EXEC mode, global configuration mode, and interface configuration mode

**Default Level** 14

**Usage Guide** N/A

**Configuration Examples** The following example displays relevant protocol information about an IS-IS system.

```
Ruijie# show isis protocol
IS-IS Router: (null)
  Binding VRF: vrf
  Mib-Binding: off
  System ID: 0000.0000.0036 IS-type: level-1-2
  Virtual System ID:
    1111.1111.1111, 2222.2222.2222
  Manual area address(es):
```

```

49.0001, 49.0003
Interfaces supported by IS-IS:
  GigabitEthernet 0/0, GigabitEthernet 0/1
Redistributing IPv4:
  isis 1, isis 2
Redistributing IPv6:
  isis 3, isis 4
Distance: 115
Generate narrow metrics: Level-1-2
Accept narrow metrics:   Level-1-2
Generate wide metrics:   none
Accept wide metrics:     none
Two-way-maintain: enable
    
```

Field description:

| Field                         | Description                                                                     |
|-------------------------------|---------------------------------------------------------------------------------|
| IS-IS Router                  | Instance tag                                                                    |
| Binding VRF                   | Name of the VRF bound to the instance                                           |
| Mib-Binding                   | Indicates whether the instance is bound with SNMP.                              |
| System ID                     | System ID                                                                       |
| IS-type                       | Level type supported by the instance                                            |
| Virtual System ID             | Extended system ID                                                              |
| Manual area address(es)       | Area ID                                                                         |
| Interfaces supported by IS-IS | Interface associated with the instance                                          |
| Redistributing IPv4           | Source of redistributed IPv4 routes                                             |
| Redistributing IPv6           | Source of redistributed IPv6 routes                                             |
| Distance                      | IS-IS management weight                                                         |
| Generate narrow metrics       | Type of the generated narrow metrics                                            |
| Accept narrow metrics         | Type of the accepted narrow metrics                                             |
| Generate wide metrics         | Type of the generated wide metrics                                              |
| Accept wide metrics           | Type of the accepted wide metrics                                               |
| Two-way-maintain              | Indicates whether the two-way maintenance function is enabled for the instance. |

## 4.82 show isis topology

Use this command to display the topology of the IS-IS router connection.

**show isis [ tag ] topology [WORD | all] [ I1 | I2 | level-1 | level-2 ]**

Parameter  
Description

| Parameter | Description                   |
|-----------|-------------------------------|
| tag       | Specifies the IS-IS instance. |



|                       |                                                                                  |
|-----------------------|----------------------------------------------------------------------------------|
| <i>WORD</i>           | System ID or host name.                                                          |
| <b>self-originate</b> | Displays the topology of the device.                                             |
| <b>all</b>            | Displays the topology whose root node is the local device or the IS-IS neighbor. |
| <b>l1</b>             | Specifies the topology of Level-1.                                               |
| <b>level-1</b>        | Specifies the topology of Level-1.                                               |
| <b>l2</b>             | Specifies the topology of Level-2.                                               |
| <b>level-2</b>        | Specifies the topology of Level-2.                                               |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/ global configuration mode/ interface configuration mode

**Usage Guide** N/A

**Configuration** The following example displays all IS-IS neighbors:

```

Examples Ruijie#show isis topology
Area (null):
IS-IS paths to level-1 routers
System Id    Metric  Next-Hop  SNPA          Interface
r1           10     r1        00d0.f822.33ad GigabitEthernet 0/0
Ruijie      --
IS-IS paths to level-2 routers
System Id    Metric  Next-Hop  SNPA          Interface
r1           10     r1        00d0.f822.33ad GigabitEthernet 0/0
Ruijie      --
    
```

| <b>Related Commands</b> | Command | Description |
|-------------------------|---------|-------------|
|                         | N/A     | N/A         |

**Platform Description** N/A

## 5 BGP4 Commands

### 5.1 address-family ipv4

Use this command to enter IPv4 address family configuration mode to configure BGP configuration mode. Use the **no** or **default** form of this command to exit BGP address configuration mode.

**address-family ipv4 [unicast|multicast]**

**no address-family ipv4 [unicast|multicast]**

**default address-family ipv4 [ unicast ]**

| Parameter   | Parameter      | Description                                    |
|-------------|----------------|------------------------------------------------|
| Description | <b>unicast</b> | Optional, detailed IPv4 unicast address prefix |

**Defaults** The configuration mode is unicast address prefix by default.

#### Command

**Mode** BGP configuration mode

**Usage** In BGP address configuration mode, use the standard IPv4 address for the configuration.

**Guide** To return to BGP configuration mode, run the command **exit-address-family**.

#### Configuration

The following example enters the IPv4 address family configuration mode.

#### Examples

```
Ruijie(config)# router bgp 65000
Ruijie(config-router)# address-family ipv4
```

| Related  | Command                    | Description     |
|----------|----------------------------|-----------------|
| Commands | <b>exit-address-family</b> | Exits the mode. |

#### Platform

**Description** None

### 5.2 address-family ipv4 vrf

Use this command to enter the IPv4 VRF address family configuration mode to configure BGP and enable the exchange of route information of a VRF. Use the **no** or **default** form of this command to restore the default setting.

**address-family ipv4 vrf vrf-name**

**no address-family ipv4 vrf vrf-name**

**default address-family ipv4 vrf vrf-name**

| Parameter   | Parameter       | Description |
|-------------|-----------------|-------------|
| Description | <i>vrf-name</i> | VRF name    |

**Defaults** No vrf is defined by default.

**Command**

**Mode** BGP configuration mode

You can execute this command to configure or exit the exchange of route information between PEs and CEs.

**Usage**

To return to BGP configuration mode, run the **exit-address-family** command.

**Guide**

If IPv4 VRF and IPv6 VRF address family modes of the same VRF are activated at the same time, and the same neighbor is activated in two address family modes, the neighbor's global commands will be displayed in both address family modes at the same time, while its address family commands will be displayed only under respective address family modes.

**Configuration**

The following example enters the IPv4 VRF address family configuration mode.

**Examples**

```
Ruijie(config)# router bgp 65000
Ruijie(config-router)# address-family ipv4 vrf vpn1
```

**Related**

**Commands**

| Command                    | Description                   |
|----------------------------|-------------------------------|
| <b>exit-address-family</b> | Exits the configuration mode. |

**Platform**

**Description** N/A

## 5.3 address-family ipv6

Use this command to enter IPv6 address family configuration mode and enable the exchange of IPv6 route information. Use the **no** or **default** form of this command to restore the default setting. Use the **exit-address-family** command to exit BGP address-family configuration mode.

**address-family ipv6 [unicast]**

**no address-family ipv6 [unicast]**

**default address-family ipv6 [ unicast ]**

| Parameter   | Parameter      | Description                                                      |
|-------------|----------------|------------------------------------------------------------------|
| Description | <b>unicast</b> | Optional, enters IPv6 unicast address-family configuration mode. |

**Defaults** The configuration mode is unicast address prefix by default.

**Command**

**Mode** BGP configuration mode or BGP Scope configuration mode

**Usage** You can use this command not only to enter IPv6 address-family configuration mode of the BGP to configure the IPv6 neighbors, but also activate neighbors in IPv6 address-family configuration mode after configuring IPv6 neighbors in BGP configuration mode.

**Guide** The **exit-address-family** command is used to return to BGP configuration mode.

**Configuration Examples**

The following example enters the IPv6 address family configuration mode.

```
Ruijie(config)# router bgp 65000
Ruijie(config-router)# address-family ipv6
```

**Related Commands**

| Command                    | Description     |
|----------------------------|-----------------|
| <b>exit-address-family</b> | Exits the mode. |

**Platform**

**Description** None

## 5.4 address-family ipv6 vrf

Use this command to enter BGP configuration mode, enable the IPv6 route information exchange function under a vrf. Use **no** or **default** form of this command to restore the default setting. Use the **exit-address-family** command to exit BGP address configuration mode.

**address-family ipv6 vrf** *vrf-name*

**no address-family ipv6 vrf** *vrf-name*

**default address-family ipv6 vrf** *vrf-name*

**Parameter Description**


| Parameter       | Description |
|-----------------|-------------|
| <i>vrf-name</i> | VRF name    |

**Defaults** No vrf address family is defined by default.

**Command Mode** BGP configuration mode

**Usage Guide** You can use this command to start configuring (or quit) the exchange of BGP route information between PE or MCE device and CE.

You can use the exit-address-family command to return to BGP configuration mode.

 If ipv4 vrf and ipv6 vrf address family modes of the same vrf are activated at the same time, and same neighbor is activated in two address family modes, the neighbor's global commands will be displayed in both the address family modes at the same time, while its address family commands will only be displayed under respective address family mode.

**Configuration Examples** The following example enters the IPv6 VRF address family configuration mode.

```
Ruijie(config)# router bgp 65000
```

```
Ruijie(config-router)# address-family ipv6 vrf vpn1
```

| Configuration Examples | Command | Description                |
|------------------------|---------|----------------------------|
|                        |         | <b>exit-address-family</b> |

Platform N/A

Description

## 5.5 address-family l2vpn

Use this command to enter the L2VPN address family configuration mode and enable the exchange of L2VPN route information between BGP neighbors. Use the **no** or **default** form of this command to restore the default settings.

**address-family l2vpn {evpn}**

**no address-family l2vpn {evpn }**

**default address-family l2vpn {evpn }**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       |           | <b>evpn</b> |

Defaults No L2VPN address family is defined by default.

Command

Mode BGP configuration mode / BGP scope global configuration mode

Usage

Guide Use the **exit-address-family** command to exit the L2VPN address family configuration mode.

Configuration Examples The following example enters the L2VPN VPLS address family configuration mode.

```
Ruijie(config)# router bgp 100
Ruijie(config-router)# address-family l2vpn vpls
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  |         | N/A         |

Platform

Description N/A

## 5.6 advertise ipv4 unicast

Use this command to configure IPv4 VRF re-distribution. Use the **no** form of this command to disable the IPv4 VRF re-distribution. Use the **default** form of this command to restore the default settings.

**advertise ipv4 unicast**

**no advertise ipv4 unicast**

**default advertise ipv4 unicast**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** The IPv4 VRF re-distribution function is disabled by default.

### Command

**Mode** BGP L2VPN EVPN address family mode.

Limitations on re-distribution of IPv4 unicast routes into BGP:

1. The re-distribution of IPv4 unicast routes into BGP function can only take effect in BGP L2VPN EVPN address family mode.
2. Only after the VXLAN module has advertised the L3 virtual MAC address, the IPv4 unicast routes can be re-distributed.
3. Only after the route-target import attribute of EVI instance matches the route-target attribute of VRF, the IPv4 unicast routes can be re-distributed.
4. The non-VRF IPv4 unicast routes cannot be re-distributed.

### Usage

### Guide

The following example configures the re-distribution of IPv4 unicast routes into BGP.

### Configuration

### Examples

```
Ruijie(config)# router bgp 65000
Ruijie(config-router)# address-family l2vpn evpn
Ruijie(config-router-af)# advertise ipv4 unicast
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

### Platform

**Description** N/A

## 5.7 advertise ipv6 unicast

Use this command to configure IPv4 VRF re-distribution. Use the **no** form of this command to disable the IPv4 VRF re-distribution. Use the **default** form of this command to restore the default settings.

**advertise ipv6 unicast**

**no advertise ipv6 unicast**

**default advertise ipv6 unicast**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** The IPv6 VRF re-distribution function is disabled by default.

**Command**

**Mode** BGP L2VPN EVPN address family mode.

Limitations on re-distribution of IPv6 unicast routes into BGP:

1. The re-distribution of IPv6 unicast routes into BGP function can only take effect in BGP L2VPN EVPN address family mode.
2. Only after the VXLAN module has advertised the L3 virtual MAC address, the IPv6 unicast routes can be re-distributed.
3. Only after the route-target import attribute of EVI instance matches the route-target attribute of VRF, the IPv6 unicast routes can be re-distributed.
4. The non-VRF IPv6 unicast routes cannot be re-distributed.

**Usage**

**Guide**

The following example configures the re-distribution of IPv6 unicast routes into BGP.

**Configuration**

**Examples**

```
Ruijie(config)# router bgp 65000
Ruijie(config-router)# address-family l2vpn evpn
Ruijie(config-router-af)# advertise ipv6 unicast
```

**Related**

**Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform**

**Description** N/A

## 5.8 aggregate-address (IPv4)

Use this command to set the aggregate IPv4 route. Use the **no** or **default** form of this command to restore the default setting.

**aggregate-address** *ip-address mask* [**as-set**] [**summary-only**] [**attribute-map** *map-tag* ]

**no aggregate-address** *ip-address mask*

**default aggregate-address** *ip-address mask*

| Parameter   | Parameter         | Description                       |
|-------------|-------------------|-----------------------------------|
| Description | <i>ip address</i> | IP address of the aggregate route |

|                      |                                                                           |
|----------------------|---------------------------------------------------------------------------|
| <i>mask</i>          | Mask of the aggregate route                                               |
| <b>as-set</b>        | Keeps the AS path information of the path in the aggregate address range. |
| <b>summary-only</b>  | Advertises only the aggregate route.                                      |
| <b>attribute-map</b> | Configures the routing policy to control the route attribute.             |
| <i>map-tag</i>       | Route map name. Up to 32 characters is allowed.                           |

**Defaults** The address aggregation is not configured by default.

**Command Mode** BGP configuration mode, IPv4 address family configuration mode, or IPv4 VRF address family configuration mode

**Usage Guide** The BGP-enabled device will advertise all path information both before and after aggregation by default. Use the **aggregate-address summary-only** command to advertise the aggregate route only.

The following example sets the aggregate IPv4 route.

**Configuration Examples**

```
Ruijie(config)# router bgp 65000
Ruijie(config-router)# aggregate-address 10.0.0.0
255.0.0.0 as-set
```

| Related Commands | Command           | Description               |
|------------------|-------------------|---------------------------|
|                  | <b>router bgp</b> | Enables the BGP protocol. |

**Platform Description** None

## 5.9 bgp advertise non-transitive extcommunity

Use this command to allow carried non-transitive extcommunity when BGP is notifying EBGp neighbors of a route. Use the **no** or **default** form of this command to restore the default setting.

- bgp advertise non-transitive extcommunity**
- no bgp advertise non-transitive extcommunity**
- default bgp advertise non-transitive extcommunity**


| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** Non-transitive extcommunity is removed when notifying EBGp neighbors of a route.

**Command Mode** BGP configuration mode / Scope global configuration mode



**Usage Guide** By default, when notifying EBGP neighbors of a route, neighbors will not be notified of extcommunity with the "non-transitive" flag. This configuration can enable the notification of non-transitive extcommunity.

 Non-transitive extcommunity will be carried when notifying alliance EBGP or IBGP neighbors of a route.

**Configuration** The following example allows carried non-transitive extcommunity.

**Examples**

```
Ruijie(config)# router bgp 65000
Ruijie(config-router)# bgp advertise non-transitive extcommunity
```

| Configuration Examples | Command | Description |
|------------------------|---------|-------------|
|                        |         | router bgp  |

**Platform** N/A

**Description**

## 5.10 bgp always-compare-med

Use this command to compare Multi Exit Discriminator (MED) all the time. Use the **no** or **default** form of this command to restore the default setting.

**bgp always-compare-med**

**no bgp always-compare-med**

**default bgp always-compare-med**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** MED of peer paths from the same AS is compared by default.

**Command**

**Mode** BGP configuration mode / Scope global configuration mode

**Usage Guide**

The MED value is compared for paths of peers from the same AS by default. This command can be used to allow comparing MED values for paths from different ASs. If there are multiple valid paths to the same destination, the one with lower MED value has higher priority.

This command is not recommended unless you are sure that different ASs are using the same IGP and routing method.

**Configuration** The following example compares Multi Exit Discriminator (MED) all the time.

**Examples**

```
Ruijie(config)# router bgp 65000
```

```
Ruijie (config-router) # bgp always-compare-med
```

### Related Commands

| Command                                  | Description                                                                                        |
|------------------------------------------|----------------------------------------------------------------------------------------------------|
| <b>show ip bgp</b>                       | Displays the BGP route entry.                                                                      |
| <b>bgp bestpath med confed</b>           | Compares the MED value of paths of peers from different ASs when selecting the optimal path.       |
| <b>bgp bestpath med missing-as-worst</b> | Sets the priority of the path without MED attribute as the lowest when selecting the optimal path. |
| <b>bgp deterministic-med</b>             | Compares paths of peers from the same AS when selecting the optimal path.                          |

### Platform

**Description** None

## 5.11 bgp asnotation dot

Use this command to modify the displaying mode of the 4-byte AS notation and the matching type of the regular expression as the dot mode (that is, two dotted decimal numbers). Use the **no** or **default** form of this command to restore the default setting.

**bgp asnotation dot**

**no bgp asnotation dot**

**default bgp asnotation dot**

### Parameter Description

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

### Defaults

The 4-byte AS notation is shown in decimal digit, and the regular expression also matches the 4-byte AS notation with decimal digit by default.

### Command


**Mode** BGP configuration mode / Scope global configuration mode

### Usage Guide

Our devices support two modes of representing the 4-byte AS notation. One is decimal digit, and the other one is dot mode which represents the 65536 with 1.0. The decimal format is same as the default format, which represents the 4-byte AS notation with decimal digits. The dot mode displays the 4-byte AS notation in the format of ([two high bytes.] two low bytes). If the [two high bytes.] is zero, it will not be displayed. That is, the AS notation represented as 65536 in decimal is 1.0 in the dot mode. In another example, the AS notation is 65534 represented in decimal, while it is represented as 65534 in the dot mode without the zero in front.

No matter which mode will be adopted to display the 4-byte AS notation, both modes can be used when entering the configuration commands. But the representation and displaying mode of the 4-byte AS notation in the regular expression must be the same. Otherwise, the matching will fail. After executing the **bgp asnotation** command, you must use the clear ip bgp \* to perform the

resetting, so as to re-match the filtering condition of the regular expression.

 The AS notation is represented as 1 to 65535 no matter using decimal or dot mode.

### Configuration Examples

The following example modifies the showing mode of the 4-byte AS notation.

```
Ruijie(config)# router bgp 1.0
Ruijie(config-router)# bgp asnotation dot
```

### Related Commands

| Command                    | Description                                       |
|----------------------------|---------------------------------------------------|
| <b>show ip bgp summary</b> | Displays the related information of BGP neighbor. |

### Platform

**Description** None

## 5.12 bgp bestpath as-path ignore

Use this command to disregard the length of the AS path. Use the **no** or **default** form of this command to restore the default setting.

**bgp bestpath as-path ignore**

**no bgp bestpath as-path ignore**

**default bgp bestpath as-path ignore**

### Parameter Description

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

### Defaults

The AS path length is considered in choosing the optimal path by default.

### Command Mode

**Mode** BGP configuration mode / Scope global configuration mode

### Usage Guide

BGP will not take the length of the AS path into account when it selects the optimal path as specified in RFC1771. In general, the shorter the length of the AS path, the higher the path priority is. Hence, we take the length of the AS path into account when we select the optimal path. You can determine whether it is necessary to take the length of the AS path into account when you select the optimal path according to the actual condition.

### Configuration Examples

The following example disregard the length of the AS path.

```
Ruijie(config)# router bgp 65000
Ruijie(config-router)# bgp bestpath as-path ignore
```

### Related Commands

| Command            | Description                   |
|--------------------|-------------------------------|
| <b>show ip bgp</b> | Displays the BGP route entry. |

**Platform**  
**Description**        None

## 5.13 bgp bestpath as-path multipath-relax

Use this command to enable AS path multipath-relax (only comparing the AS path length) for BGP multipathing load. Use the **no** or **default** form of this command to restore the default setting.

**bgp bestpath as-path multipath-relax**  
**no bgp bestpath as-path multipath-relax**  
**default bgp bestpath as-path multipath-relax**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Command Mode**        BGP requires that AS path attributes must be the same when calculating equal-cost multipath (ECMP) by default.

**Defaults**            BGP configuration mode / Scope global configuration mode

**Usage Guide**        BGP compares AS path attributes in a precise way when selecting the optimal path as ECMP by default. Only paths with same AS path attributes can constitute equal-cost paths. As a result, BGP multipathing load balancing cannot be implemented in an application scenario. After AS path multipath-relax is enabled, only the AS path length is compared, allowing the implementation of BGP multipathing load balancing.

**Configuration Examples**        The following example enables AS path multipath-relax for BGP multipathing load.

```
Ruijie(config)# router bgp 65530
Ruijie(config-router)# bgp bestpath as-path multipath-relax
```

| Related Commands | Command            | Description                   |
|------------------|--------------------|-------------------------------|
|                  | <b>router bgp</b>  | Enables BGP.                  |
|                  | <b>show ip bgp</b> | Displays BGP routing entries. |

**Platform**            None  
**Description**

## 5.14 bgp bestpath compare-confed-aspath

Use this command to compare the AS path length of the confederation from the same external routes when selecting the optimal path, with smaller AS path in the confederation for higher path priority. Use the **no** or **default** form of this command to restore the default setting.

**bgp bestpath compare-confed-aspath**

**no bgp bestpath compare-confed-aspath**

**default bgp bestpath compare-confed-aspath**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** The AS path of the EBGP peer routes inside the same confederation is not compared by default when selecting the optimal path. Instead, the routing method is implemented.

**Command**

**Mode** BGP configuration mode / Scope global configuration mode

**Usage** During the selection of the same routing information from the peer of the internal EBGP By default, the AS path of the confederation is not compared. This command is used to compare the AS path of the confederation.

**Guide**

Note that if a route contain no AS path of the confederation, it is impossible to implement the AS path comparison for that route.

**Configuration Examples**

The following example compares the AS path length of the confederation.

```
Ruijie(config)# router bgp 65000
Ruijie(config-router)# bgp bestpath compare-confed-aspath
```

| Related Commands | Command              | Description                   |
|------------------|----------------------|-------------------------------|
|                  | <b>show ip bgp</b>   | Displays the BGP route entry. |
|                  | <b>bgp router-id</b> | Sets the BGP Device ID.       |

**Platform**

**Description** None

## 5.15 bgp bestpath compare-routerid

Use this command to compare the router ID of the same external routes when selecting the optimal path, with smaller router ID for higher path priority. Use the **no** or **default** form of this command to restore the default setting.

**bgp bestpath compare-routerid**

**no bgp bestpath compare-routerid**

**default bgp bestpath compare-routerid**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

| <b>Defaults</b>               | If two paths received from different EBGP peers have the same path, the first one is considered with higher priority by default.                                                                                                                                                                                                    |         |             |                    |                               |                      |                         |
|-------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------|-------------|--------------------|-------------------------------|----------------------|-------------------------|
| <b>Command</b>                |                                                                                                                                                                                                                                                                                                                                     |         |             |                    |                               |                      |                         |
| <b>Mode</b>                   | BGP configuration mode / Scope global configuration mode                                                                                                                                                                                                                                                                            |         |             |                    |                               |                      |                         |
| <b>Usage</b>                  | If two paths with identical path attributes are received from different EBGP peers during the selection of the optimal path, we will select the optimal path according to the sequence of receiving the paths by default. You can select the path with smaller Device ID as the optimal path by configuring the following commands. |         |             |                    |                               |                      |                         |
| <b>Guide</b>                  |                                                                                                                                                                                                                                                                                                                                     |         |             |                    |                               |                      |                         |
| <b>Configuration Examples</b> | <p>The following example compares the router ID of the same external routes.</p> <pre>Ruijie(config)# router bgp 65000 Ruijie(config-router)# bgp bestpath compare-routerid</pre>                                                                                                                                                   |         |             |                    |                               |                      |                         |
| <b>Related Commands</b>       | <table border="1"> <thead> <tr> <th>Command</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td><b>show ip bgp</b></td> <td>Displays the BGP route entry.</td> </tr> <tr> <td><b>bgp router-id</b></td> <td>Sets the BGP Device ID.</td> </tr> </tbody> </table>                                                              | Command | Description | <b>show ip bgp</b> | Displays the BGP route entry. | <b>bgp router-id</b> | Sets the BGP Device ID. |
| Command                       | Description                                                                                                                                                                                                                                                                                                                         |         |             |                    |                               |                      |                         |
| <b>show ip bgp</b>            | Displays the BGP route entry.                                                                                                                                                                                                                                                                                                       |         |             |                    |                               |                      |                         |
| <b>bgp router-id</b>          | Sets the BGP Device ID.                                                                                                                                                                                                                                                                                                             |         |             |                    |                               |                      |                         |
| <b>Platform</b>               |                                                                                                                                                                                                                                                                                                                                     |         |             |                    |                               |                      |                         |
| <b>Description</b>            | None                                                                                                                                                                                                                                                                                                                                |         |             |                    |                               |                      |                         |

## 5.16 bgp bestpath med confed

Use this command to compare the MED value of the path of the internal peer from AS confederation during selecting the optimal path. Use the **no** or **default** form of this command to restore the default setting.

**bgp bestpath med confed [missing-as-worst]**

**no bgp bestpath med confed [missing-as-worst]**

**default bgp bestpath med confed [ missing-as-worst ]**

| <b>Parameter</b>        | <table border="1"> <thead> <tr> <th>Parameter</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td><b>missing-as-worst</b></td> <td>Sets the priority of the path without MED attribute as the lowest.</td> </tr> </tbody> </table> |  | Parameter | Description | <b>missing-as-worst</b> | Sets the priority of the path without MED attribute as the lowest. |
|-------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|-----------|-------------|-------------------------|--------------------------------------------------------------------|
| Parameter               | Description                                                                                                                                                                                                                              |  |           |             |                         |                                                                    |
| <b>missing-as-worst</b> | Sets the priority of the path without MED attribute as the lowest.                                                                                                                                                                       |  |           |             |                         |                                                                    |
| <b>Description</b>      |                                                                                                                                                                                                                                          |  |           |             |                         |                                                                    |
| <b>Defaults</b>         | The MED value of the path of the peer inside the AS confederation is not compared by default when selecting the optimal path.                                                                                                            |  |           |             |                         |                                                                    |
| <b>Command</b>          |                                                                                                                                                                                                                                          |  |           |             |                         |                                                                    |
| <b>Mode</b>             | BGP configuration mode / Scope global configuration mode                                                                                                                                                                                 |  |           |             |                         |                                                                    |
| <b>Usage</b>            | The MED attribute of the path is transferred between the ASs inside the confederation. You may set                                                                                                                                       |  |           |             |                         |                                                                    |
| <b>Guide</b>            | always comparing this value.                                                                                                                                                                                                             |  |           |             |                         |                                                                    |

**Configuration Examples** The following example compares the MED value of the path of the internal peer.

```
Ruijie(config)# router bgp 65000
Ruijie(config-router)# bgp bestpath med confed
```

|                         | Command                                  | Description                                                                                        |
|-------------------------|------------------------------------------|----------------------------------------------------------------------------------------------------|
| <b>Related Commands</b> | <b>show ip bgp</b>                       | Displays the BGP route entry.                                                                      |
|                         | <b>bgp always-compare-med</b>            | Compares the MED value of paths of peers from different ASs when selecting the optimal path.       |
|                         | <b>bgp bestpath med missing-as-worst</b> | Sets the priority of the path without MED attribute as the lowest when selecting the optimal path. |
|                         | <b>bgp deterministic-med</b>             | Compares paths of peers from the same AS when selecting the optimal path.                          |

**Platform Description** None

### 5.17 bgp bestpath med missing-as-worst

Use this command to set the priority of the path without MED attribute as the lowest when selecting the optimal path. Use the **no** or **default** form of this command to restore the default setting.

- bgp bestpath med missing-as-worst**
- no bgp bestpath med missing-as-worst**
- default bgp bestpath med missing-as-worst**

|                              | Parameter | Description |
|------------------------------|-----------|-------------|
| <b>Parameter Description</b> | N/A       | N/A         |

**Defaults** If a path without MED attribute is received, the MED value of the path is 0 by default. Such route has the highest priority according to the above-mentioned rule.

**Command Mode** BGP configuration mode / Scope global configuration mode

**Usage Guide** The MED value of a path without MED attribute will be 0 by default. For the smaller the MED value, the higher the priority of the path is, the MED value of this path has the highest priority. This command can be used to figure the path without MED attribute has the lowest priority.

**Configuration Examples** The following example sets the priority of the path without MED attribute as the lowest.

```
Ruijie(config)# router bgp 65000
Ruijie(config-router)# bgp bestpath medmissing-as-worst
```

|  | Command | Description |
|--|---------|-------------|
|--|---------|-------------|

|                 |                                |                                                                                                    |
|-----------------|--------------------------------|----------------------------------------------------------------------------------------------------|
| <b>Commands</b> | <b>show ip bgp</b>             | Displays the BGP route entry.                                                                      |
|                 | <b>bgp always-compare-med</b>  | Compares the MED value of paths of peers from different ASs when selecting the optimal path.       |
|                 | <b>bgp bestpath med confed</b> | Sets the priority of the path without MED attribute as the lowest when selecting the optimal path. |
|                 | <b>bgp deterministic-med</b>   | Compares paths of peers from the same AS when selecting the optimal path.                          |

**Platform****Description** None

## 5.18 bgp bestpath multipath-compare-routerid

Use this command to enable the router ID comparison among multiple BGP paths. Load balancing can be implemented only when multiple paths (same router ID) are from the same device. Use the **no** form of this command to disable the router ID comparison among multiple BGP paths. Use the **default** form of this command to restore the default settings.

**bgp bestpath multipath-compare-routerid****no bgp bestpath multipath-compare-routerid****default bgp bestpath multipath-compare-routerid**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** The router ID comparison among multiple BGP paths is disabled by default.**Command Mode** BGP configuration mode, BGP Scope Global Configuration Mode**Default Level** 14**Usage Guide** N/A**Configuration Example** The following example enables the router ID comparison among multiple BGP paths.

```
Ruijie(config)# router bgp 65000
Ruijie(config-router)# bgp bestpath multipath-compare-routerid
```

**Verification** Run the **show running-config** command to display the BGP configuration.



## 5.19 bgp client-to-client reflection

Use this command to enable the route reflection function between clients on the device. Use the **no** or **default** form of this command disables the route reflection function between clients.

**bgp client-to-client reflection**

**no bgp client-to-client reflection**

**default bgp client-to-client reflection**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** This function is enabled without the client for route reflection by default.

### Command

**Mode** BGP configuration mode / Scope global configuration mode

### Usage Guide

In general, it is unnecessary to establish the connection relationship between the clients of the route reflector within the cluster, and the route reflector will reflect the route among clients.

However, if the full connection relationship is established for all clients, the function for the route reflector to reflect the client route can be disabled.

To disable the route reflection function, use the command **no bgp client-to-client reflection**.

### Configuration Examples

The following example shows how to enable the route reflection function between clients on the device.

```
Ruijie(config)# router bgp 65000
Ruijie(config-router)# no bgp client-to-client
reflection
```

### Related Commands

| Command                                | Description                                                                               |
|----------------------------------------|-------------------------------------------------------------------------------------------|
| <b>bgp cluster-id</b>                  | Configures the cluster ID of the route reflector.                                         |
| <b>neighbor route-reflector-client</b> | Configures the client of the route reflector and configure itself as the route reflector. |

### Platform

**Description** None

## 5.20 bgp cluster-id

Use this command to configure the cluster ID of the route reflector. Use the **no** or **default** form of this command to restore it to the default setting.

**bgp cluster-id** *cluster-id*

**no bgp cluster-id**

**default bgp cluster-id**

| Parameter         | Description                                                                                                                |
|-------------------|----------------------------------------------------------------------------------------------------------------------------|
| <i>cluster-id</i> | Cluster ID of the route reflector, an IP address of up to four bytes or an integer (must be entered in form of IP address) |

**Defaults** The cluster id is the router-id of the route reflector by default.

**Command**

**Mode** BGP configuration mode / Scope global configuration mode

**Usage** In general, one group is only configured with one route reflector. In this case, the Device ID of the route reflector can be used to identify this cluster. To increase the redundancy, you can set more than one route reflector within this cluster. In this case, you must configure the cluster ID, so that one route reflector can identify the route update from other route reflectors of this cluster.

**Configuration** The following example configures the cluster ID of the route reflector.

**Examples**

```
Ruijie(config)# router bgp 65000
Ruijie(config-router)# bgp cluster-id 10.0.0.1
```

| Command                                | Description                                                                                |
|----------------------------------------|--------------------------------------------------------------------------------------------|
| <b>bgp client-to-client reflection</b> | Configures the route reflection between clients.                                           |
| <b>neighbor route-reflector-client</b> | Configures the client of the route reflector and configures itself as the route reflector. |

**Related**  
**Commands**

**Platform**

**Description** None

## 5.21 bgp confederation identifier

Use this command to configure the AS confederation identifier. Use the **no** or **default** form of this command to restore the default setting.

**bgp confederation identifier** *as-number*

**no bgp confederation identifier**

**default bgp confederation identifier**

| Parameter        | Description                                                                                                                                                                                                                           |
|------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>as-number</i> | AS confederation identifier in the range from 1 to 65535<br>In the 10.4(3) or later versions, the 4-byte AS notation is supported, namely, the new range of the new AS notation is from 1 to 4294967295, which is represented as 1 to |

**Parameter**  
**Description**

|  |                          |
|--|--------------------------|
|  | 65535.65535 in dot mode. |
|--|--------------------------|

**Defaults** There is no confederation identifier by default

**Command**

**Mode** BGP configuration mode or BGP Scope Global configuration mode

**Usage Guide**

The confederation is a measure to reduce the connections of IBGP peers within the AS. One AS is divided into several sub ASs and one unified confederation ID (namely, confederation AS number) is set to constitute these sub ASs into a confederation. For the external confederation, the whole confederation is still considered as one AS, and only the confederation AS number is visible for the external network. Within the confederation, the full IBGP peer connection is still established among the BGP Speakers within the sub AS, and the EBGP connection is established among the BGP Speakers within the sub AS. Despite of the EBGP connections established between the BGP speakers in an AS, the next-hop, MED and local priority information remains unchanged in exchanging the information.

**Configuration Examples** The following example configures the AS confederation identifier.

```
Ruijie(config-router)# bgp confederation identifier 65000
```

**Related Commands**

| Command                        | Description                             |
|--------------------------------|-----------------------------------------|
| <b>bgp confederation peers</b> | Adds member AS of the AS confederation. |

**Platform**

**Description** None

## 5.22 bgp confederation peers

Use this command to configure member ASs of the AS confederation. Use the **no** or **default** form of this command to restore the default setting.

**bgp confederation peers** *as-number* [...*as-number*]

**no bgp confederation peers** *as-number* [...*as-number*]

**default bgp confederation peers** [ *as-number* [...*as-number*] ]

**Parameter Description**

| Parameter        | Description                                                                                                                                                                                                                                         |
|------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>as-number</i> | Member ASs in the confederation range from 1 to 65535.<br>In the 10.4(3) or later versions, the 4-byte AS notation is supported, namely, the new range of the new AS notation is from 1 to 4294967295, represented as 1 to 65535.65535 in dot mode. |

**Defaults** There is no confederation member by default.


**Command**

**Mode** BGP configuration mode or BGP Scope Global configuration mode

**Usage Guide**

The confederation is a measure to reduce the connections of BGP peers within the AS. One AS is divided into several sub ASs and one unified confederation ID (namely, confederation AS number) is set to constitute these sub ASs into a confederation. The whole external confederation is still considered as one AS, and only the confederation AS number is visible for the external network. Within the confederation, the full IBGP peer connection is still established among the BGP Speakers within the sub AS, and the EBGP connection is established among the BGP Speakers within the sub AS. Despite of the EBGP connections established between the BGP speakers in an AS, the next-hop, MED and local priority information remains unchanged in exchanging the information.

This command is used to specify the member AS of a confederation.

 This command can configure up to 25 members of a confederation at one time. For more members, enter them for several times.

**Configuration**

The following example configures member ASs of the AS confederation.

**Examples**

```
Ruijie(config-router)# bgp confederation peers 65000 65100
```

**Related Commands**

| Command                             | Description                              |
|-------------------------------------|------------------------------------------|
| <b>bgp confederation identifier</b> | Configures the confederation identifier. |

**Platform**

**Description** None

## 5.23 bgp dampening

Use this command to enable the routing attenuation and set the attenuation parameters in the address-family or routing configuration mode. Use the **no** or **default** form of this command to restore the default setting.

**bgp dampening** [*half-life* [*reusing suppressing duration*] | **route-map** *name*]

**no bgp dampening**

**default bgp dampening**

**Parameter Description**

| Parameter          | Description                                                                                                        |
|--------------------|--------------------------------------------------------------------------------------------------------------------|
| <i>half-life</i>   | Half-life period, ranging from 1 to 45 minutes                                                                     |
| <i>reusing</i>     | When the penalty value reaches this value, the routing suppression is cancelled. The value ranges from 1 to 10000. |
| <i>suppressing</i> | When the penalty value reaches this value, routing is suspended. The value ranges from 1 to 20000.                 |
| <i>duration</i>    | Maximum time for routing suppression, ranging from 1 to 255 minutes                                                |

|             |                                                                                             |
|-------------|---------------------------------------------------------------------------------------------|
| <i>name</i> | Route-map name, apply the routing attenuation to the specified route through the route-map. |
|-------------|---------------------------------------------------------------------------------------------|

**Defaults** This function is disabled by default.

**Command Mode** BGP configuration mode, BGP IPv4 unicast address-family configuration mode, BGP IPv4 VRF address-family configuration mode, BGP IPv6 unicast address-family configuration mode, BGP IPv6 VRF address-family configuration mode, BGP L2VPN EVPN address-family configuration mode and BGP Scope configuration mode

The **bgp dampening** command is used to suppress unstable EBGP routes and does not take effect to IBGP routes.

The BGP uses the penalty value to describe the route stability. A larger penalty value indicates a more unstable route. The penalty value increases by 1000 when route oscillation occurs (upon receiving withdraw packets).The penalty value does not increase when the upper limit is reached. The upper limit is determined based on the configured duration value and calculated using the following formula:  $Penalty\ upper\ limit = 2^{(Duration/Half-life)} \times Reusing$ . In addition, the penalty upper limit cannot be greater than 20000. Therefore, the duration, half-life, and reusing values need to be adjusted based on the network conditions. The relationship among these parameters are as follows:

**Usage** Half-life ≤ Duration

**Guide** Reusing ≤ Suppressing ≤ Penalty upper limit

You can also specify only the half-life value. In this case, the duration value is (half-life x 4), the reusing value is 750, and the suppressing value is 2000.

EBGP routes whose penalty value exceeds the suppressing value will be suppressed. Suppressed routes will not be used during BGP route election and will not be advertised to other BGP peers. If route oscillation occurs in suppressed routes, the penalty value will continue to increase until the penalty upper limit is reached.

The penalty value of suppressed routes will decrease by a half each time the half-life time passes. When the penalty value decreases to the reusing value, routes whose attribute is update in the last update will participate in BGP route election again. When the penalty value decreases to 0, routes whose attribute is withdraw in the last update will be deleted from the BGP route table.

**Configuration Examples** The following example enables the routing attenuation and set the attenuation parameters.

```
Ruijie(config-router)# bgp dampening 30 1500 10000 120
```

**Related Commands**

| Command                                     | Description                                                            |
|---------------------------------------------|------------------------------------------------------------------------|
| <b>clear ip bgp dampening</b>               | Clears the BGP suppression and cancels the suppression for the routes. |
| <b>show ip bgp dampening dampened-paths</b> | Displays the suppressed route information.                             |

**Platform**

**Description** None

## 5.24 bgp default ipv4-unicast

Use this command to set the IPv4 unicast address as the default address family. Use the **no** or **default** form of this command to restore the default setting.

**bgp default ipv4-unicast**

**no bgp default ipv4-unicast**

**default bgp default ipv4-unicast**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** The IPv4 unicast address is the default address family.

### Command

**Mode** BGP configuration mode or BGP Scope Global configuration mode

### Usage

**Guide** This command is used to set the default address family of BGP as the IPv4 unicast address.

**Configuration Examples** The following example sets the IPv4 unicast address as the default address family.

```
Ruijie(config-router)#bgp default ipv4-unicast
```

| Related Commands | Command                    | Description                   |
|------------------|----------------------------|-------------------------------|
|                  | <b>address-family ipv4</b> | Enters the IPv4 address mode. |

### Platform

**Description** None

## 5.25 bgp default local-preference

Use this command to set the default local-preference attribute value. Use the **no** or **default** form of this command to restore the default setting.

**bgp default local-preference *value***

**no bgp default local-preference**

**default bgp default local-preference**

| Parameter   | Parameter    | Description                                                 |
|-------------|--------------|-------------------------------------------------------------|
| Description | <i>value</i> | Local priority attribute, in the range from 0 to 4294967295 |

**Defaults** The local preference value is 100 by default.

**Command**

**Mode** BGP configuration mode or BGP Scope configuration mode.

**Usage** The BGP takes the local preference as the foundation to compare with the priority of the path learned from IBGP peers. The larger the local preference value, the higher the priority of the path is.

**Guide** The BGP speaker sends the external route received to the IBGP peers to add the local priority value.

**Configuration** The following example sets the default local-preference attribute value.

**Examples**

```
Ruijie(config-router)# bgp default local-preference 200
```

**Related****Commands**

| Command                                  | Description                                                                                                 |
|------------------------------------------|-------------------------------------------------------------------------------------------------------------|
| <b>show ip bgp</b>                       | Displays the BGP route entry.                                                                               |
| <b>bgp always-compare-med</b>            | Allows comparing the MED value of the path of the peer from different ASs when electing the optimal path.   |
| <b>bgp bestpath med confed</b>           | Allows comparing the MED value of paths of internal peers from AS community when electing the optimal path. |
| <b>bgp bestpath med missing-as-worst</b> | Allows setting the priority of the path without MED attribute as the lowest when electing the optimal path. |

**Platform**

**Description** None

## 5.26 bgp default route-target filter

Use this command to enable the route-target filtering. For the VPNv4 routes, filter the community attributes of the route-target by default. Use the **no** or **default** form of this command to disable this function.

**bgp default route-target filter**

**no bgp default route-target filter**

**default bgp default route-target filter**

**Parameter****Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults**

This function is enabled by default.

**Command****Mode**

BGP configuration mode, VPNv4/VPNv6 address-family configuration mode, BGP L2VPN EVPN address-family configuration mode or BGP Scope Global configuration mode.

**Usage****Guide**

After receiving the VPNv4 route, use the community attributes list of the route-target to filter and distribute different VRFs. With the no form of this command used, the BGP will receive all VPNv4 routes no matter whether these filtered VPNv4 routes will be received by route-target of local VRF.

With the PE route-reflector-client configured for the BGP, the VPNV4 route will not be processed through the route-target filtering. In this case, whether the BGP is enabled, the actions are the same without the route-target filtering.

**Configuration Examples**

The following example enables the route-target filtering.

```
Ruijie(config)# router bgp 65000
Ruijie(config-router)# no bgp default route-target filter
```

**Related Commands**

| Command                                | Description                                                                    |
|----------------------------------------|--------------------------------------------------------------------------------|
| <b>neighbor route-reflector-client</b> | Configures the route-reflector-client, and sets itself as the route reflector. |

**Platform**

**Description** N/A

## 5.27 bgp deterministic-med

Use this command to set comparing preferentially the MED values of peer paths from the same AS. By default, the comparison is based on the received order, and the one received the last is compared first. Use the **no** or **default** form of this command to restore the default setting.

**bgp deterministic med**

**no bgp deterministic med**

**default bgp deterministic-med**

| Parameter          | Parameter | Description |
|--------------------|-----------|-------------|
| <b>Description</b> | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command**

**Mode** BGP configuration mode or BGP Scope Global configuration mode

**Usage Guide**

They will be compared with each other according to the sequence the paths are received when the optimal path is selected by default. Execute the following operations in the BGP configuration mode to compare paths of peers from the same AS firstly:

**Configuration Examples**

The following example sets the comparing preferentially MED values.

```
Ruijie(config-router)# bgp deterministic med
```

**Related Commands**

| Command            | Description                   |
|--------------------|-------------------------------|
| <b>show ip bgp</b> | Displays the BGP route entry. |



|                                          |                                                                                                    |
|------------------------------------------|----------------------------------------------------------------------------------------------------|
| <b>bgp always-compare-med</b>            | Compares the MED value of paths of peers from different ASs when selecting the optimal path.       |
| <b>bgp bestpath med confed</b>           | Sets the priority of the path without MED attribute as the lowest when selecting the optimal path. |
| <b>bgp bestpath med missing-as-worst</b> | Compares paths of peers from the same AS when selecting the optimal path.                          |

**Platform****Description** None

## 5.28 bgp enforce-first-as

Use this command to reject the UPDATE messages whose first AS\_PATH path section is not the neighbor-configured AS number. Use the **no** or **default** form of this command to disable this function.

**bgp enforce-first-as****no bgp enforce-first-as****default bgp enforce-first-as**

| Parameter          | Parameter | Description |
|--------------------|-----------|-------------|
| <b>Description</b> | N/A       | N/A         |

**Defaults** This function is enabled by default.**Command****Mode** BGP configuration mode or BGP Scope Global configuration mode**Usage****Guide** The AS number of the device is put into the path section by default to update the update message.**Configuration****Examples**

The following example rejects the UPDATE messages whose first AS\_PATH path section is not the neighbor-configured AS number.

```
Ruijie(config-router)# bgp enforce-first-as
```

**Related****Commands**

| Command            | Description                   |
|--------------------|-------------------------------|
| <b>show ip bgp</b> | Displays the BGP route entry. |

**Platform****Description** None

## 5.29 bgp fast-external-fallover

When the network interface used in establishing the connection of the directly-connected EBGP peer fails, use this command to establish the BGP session connection quickly. Use the **no** or **default** form of this command to disable this function.

**bgp fast-external-fallover**

**no bgp fast-external-fallover**

**default bgp fast-external-fallover**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** This function is enabled by default.

**Command**

**Mode** BGP configuration mode or BGP Scope Global configuration mode

**Usage**

**Guide** This command takes effect only for the directly-connected EBGP neighbor.

**Configuration** The following example creates the fast BGP session.

**Examples**

```
Ruijie(config-router)# bgp faster-external-fallover
```

| Related  | Command           | Description               |
|----------|-------------------|---------------------------|
| Commands | <b>router bgp</b> | Enables the BGP protocol. |

**Platform**

**Description** None

## 5.30 bgp fast-reroute

Use this command to enable BGP Fast Reroute. Use the **no** or **default** form of this command to restore the default setting.

**bgp fast-reroute**

**no bgp fast-reroute**



**default bgp fast-reroute**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |



**Defaults** This function is disabled by default.

**Command** BGP configuration mode/ BGP IPv4 unicast address family configuration mode/ BGP IPv4 VRF address family configuration mode/ BGP scope global configuration mode.

**Mode**

-  The BGP Fast Reroute function is supported in the BGP IPv4 unicast address family configuration mode and the BGP IPv4 VRF address family configuration mode.
-  Only one backup route will be generated and the next-hop of this backup route cannot be the same as that of the preferred route.

**Usage Guide**

-  When ECMP is enabled, the FRR cannot generate backup route.
-  When this function is enabled in the BGP IPv4 VRF address family configuration mode, the priority of BGP FRR is lower than that of VPN FRR. So when the VPN FRR is enabled in IPv4 VRF configuration mode, BGP FRR does not take effect unless VPN FRR is unable to calculate the backup route.

**Configuration Examples**

The following example enables BGP Fast Reroute.

```
Ruijie(config)# router bgp 65530
Ruijie(config-router)# bgp faster-reroute
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform**

**Description** N/A

## 5.31 bgp graceful-restart

Use this command to enable the global BGP graceful restart function. Use the **no** or **default** form of this command to disable BGP graceful restart.

**bgp graceful-restart**

**no bgp graceful-restart**

**default bgp graceful-restart**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults**

By default, BGP graceful restart is enabled so as to help neighbors to perform graceful restart.

**Command**

**Mode**


BGP configuration mode or BGP Scope Global configuration mode

**Usage**

The ability of the BGP is advertised and negotiated through the ability field of the Open message.

**Guide** The ability is negotiated during initially setting up the connection. So both sides must reach the consistency of the ability. If it is not supported by any side, this router device will perform the GR incorrectly.

With the GR function enabled, the connected Open message will carry the GR ability field to perform the negotiation of the GR ability. To implement the GR correctly, the GR function must be enabled on both sides of the neighbors.

 This command does not take effect immediately on all BGP connections that are set up successfully. To negotiate the GR ability immediately, you need to restart the BGP connection to make the local device negotiate the GR ability with the Peer again by using the clear ip bgp command.

The BGP graceful-restart is used to forward data continuously of the whole network, it requires the device to keep the BGP routing entry valid and forward data continuously when restarting the BGP protocol. Supporting the continuous forwarding during the restarting is related to the hardware ability.

**Configuration Examples**

The following example enables the graceful restart function of the global BGP.

```
Ruijie(config)# router bgp 500
Ruijie(config-router)# bgp graceful-restart
```

**Related Commands**

| Command                                  | Description                                              |
|------------------------------------------|----------------------------------------------------------|
| <b>router bgp</b>                        | Enables the BGP protocol.                                |
| <b>bgp graceful-restart restart-time</b> | Configures the restart time of the BGP graceful-restart. |

**Platform**

**Description** N/A

## 5.32 bgp graceful-restart disable

Use this command to disable GR capability of a BGP address family. Use the **no** or **default** form of this command to restore the default setting.

**bgp graceful-restart disable**

**no bgp graceful-restart disable**

**default bgp graceful-restart disable**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults**

The function is enabled by default.

**Command Mode**

BGP configuration mode, IPv4 unicast address family mode, VPNv4 address family mode, VPNv4 address family mode, BGP L2VPN EVPN address-family configuration mode or BGP Scope

configuration mode

**Usage Guide** When BGP GR function is enabled, the GR capability for all address families is enabled by default, except for address families that do not support GR capability. After GR capability is enabled, you can use this command in the address family mode to disable the address family's GR capability. The Configuration of this command in BGP mode is effective on IPv4 Unicast address family. When BGP GP function is disabled, GR capability is disabled for all address families.

**Configuration** The following example disables the graceful restart function of the BGP IPv4 address family.

```
Examples Ruijie(config)# router bgp 65000
Ruijie(config-router)# bgp graceful-restart
Ruijie(config-router)# address-family ipv4
Ruijie(config-router-af)# bgp graceful-restart disable
```

| Configuration Examples | Command                     | Description                          |
|------------------------|-----------------------------|--------------------------------------|
|                        | <b>bgp graceful-restart</b> | Enables BGP's GR capability.         |
|                        | <b>address-family ipv4</b>  | Enters BGP IPv4 address family mode. |

**Platform** N/A  
**Description**

### 5.33 bgp graceful-restart restart-time

Use this command to configure the restart time of the BGP graceful-restart. Use the **no** or **default** form of this command to restore the default setting.

**bgp graceful-restart restart-time** *restart-time*

**no bgp graceful-restart restart-time**

**default bgp graceful-restart restart-time**

| Parameter Description | Parameter           | Description                                                                                                                                                                   |
|-----------------------|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <i>restart-time</i> | GR Restarter-hoped longest waiting time before re-establishing the connection between the GR Helper and the GR Restarter, in the range from 1 to 3600 in the unit of seconds. |

**Defaults** The default is 120.


**Command**

**Mode** BGP configuration mode or BGP Scope Global configuration mode.

**Usage Guide** The restart time is advertised by GR Restarter to GR Helper, it is GR Restarter-hoped longest waiting time before re-establishing the connection between GR Helper and GR Restarter. After this time, if the BGP connection with GR Restarter is not in Established status, GR Helper will consider

this BGP session failed and will restore the normal BGP. All the routing of the neighbor will be deleted during this period, affecting the data redistribution.

The restart time is advertised in the GR ability field of the BGP Open message. The GR restart time of the two ends of the session is not required to be the same, but it is recommended.

 This command does not take effect immediately on all BGP connections that are set up successfully. To advertise the newly set restart time to the GR helper, you need to restart the BGP connection to negotiate the GR ability again and advertise the restart time by using the `clear ip bgp` command. The configured restart time should not be greater than the Hold Time of the BGP peer, if so, the Hold time will be the restart time when the GR ability is advertised to the BGP peer.

The following example configures the restart time of the BGP graceful-restart.

### Configuration Examples

```
Ruijie(config)# router bgp 500
Ruijie(config-router)# bgp graceful-restart
Ruijie(config-router)# bgp graceful-restart restart-time 150
Ruijie(config-router)# no bgp graceful-restart restart-time
```

### Related Commands

| Command                     | Description                       |
|-----------------------------|-----------------------------------|
| <b>bgp graceful-restart</b> | Enables the BGP graceful-restart. |

### Platform Description

N/A

## 5.34 bgp graceful-restart stalepath-time

Use this command to configure the time to help the device keep the route valid when executing the BGP graceful-restart. Use the **no** or **default** form of this command to restore the default setting.

**bgp graceful-restart stalepath-time stalepath-time *time***

**no bgp graceful-restart stalepath-time**

**default bgp graceful-restart stalepath-time**

### Parameter Description

| Parameter   | Description                                                                                                                                           |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>time</i> | Longest time used to keep the stale route valid after restoring the connection with the neighbors, in the range from 1 to 3600 in the unit of seconds |

### Defaults

The default is 360.

### Command Mode

#### Mode

BGP configuration mode

### Usage

This command is configured for the parameters of the GR Helper. The stalepath-time is the longest

**Guide**

time of the GR Helper waiting to receive the EOR mark of the Restarter after restoring the connection with the GR Restarter. When the GR Helper detects that the connection with the GR Restarter fails, the original route of the Restarter is marked as the “Stale”. However these routes are still used for the routing calculation and forwarding.

The GR Helper updates the routes and cancels the “Stale” mark according to route updating information received from the GR Restarter. If routes marked as “Stale” are not updated in the stalepath-time period, they will be deleted. This mechanism is used to avoid failure in convergence of routes when the GR Helper fails to receive the EOR mark of the GR Restarter for a long time.

The following example configures the restart time of the BGP graceful-restart.

**Configuration Examples**

```
Ruijie(config)# router bgp 500
Ruijie(config-router)# bgp graceful-restart
Ruijie(config-router)# bgp graceful-restart stalepath-time 240
```

**Related****Commands**

| Command                     | Description                       |
|-----------------------------|-----------------------------------|
| <b>bgp graceful-restart</b> | Enables the BGP graceful-restart. |

**Platform**

N/A

**Description**

## 5.35 bgp initial-advertise-delay

Use this command to configure the delay period before a BGP device sends its initial updates to peers. Use the **no** form or **default** form of this command to restore the default setting.

**bgp initial-advertise-delay** *delay-time* [ *startup-time* ]

**no bgp initial-advertise-delay**

**default bgp initial-advertise-delay**

Use this command to enable the BGP delayed advertisement upon system restart. Thus, the route will be immediately sent after the prefix-list policy is matched. Use the **no** form or **default** form of this command to restore the default setting.

**bgp initial-advertise-delay prefix-list** *prefix-list-name*

**no bgp initial-advertise-delay prefix-list**

**default bgp initial-advertise-delay prefix-list**

**Parameter****Description**

| Parameter               | Description                                                                                                                                                                                   |
|-------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>delay-time</i>       | The delay period, in seconds, before a BGP device sends its updates. The range is from 1 to 600. The default value is 1 second.                                                               |
| <i>startup-time</i>     | The time for the BGP device restart. In the period, the neighbor does not send its updates to peers. The range is from 5 to 584,000. The unit is second and the default value is 600 seconds. |
| <i>prefix-list-name</i> | Name of the prefix-list. It cannot exceed 32 characters.                                                                                                                                      |

**Defaults** The initial advertisement delay is disabled by default.

**Command**

**Mode** BGP configuration mode

This command is used to configure parameters for delayed neighbor route advertisement during device restart.

**delay-time** indicates the longest time for sending a route to a neighbor after the BGP neighbor relationship is established. In normal cases, after the neighbor relationship is established, the first route is advertised immediately and subsequent routes are advertised based on the default time. For details, see the `neighbor advertisement-interval` command. **startup-time** indicates the configurable startup time and starts to count when the configuration command takes effect. Within the time specified by **startup-time**, routes to BGP neighbors are advertised periodically based on **delay-time**. This command can be used to change the route advertisement behavior from the BGP peer to neighbors after device restart.

**Usage Guide**

The prefix-list policy is configured to ensure that partial routes can be normally delivered. The prefix-list policy applies to distributed routes. Matched routes will be normally delivered without being affected by delayed advertisement. For details about the address family scope to which the prefix-list policy applies, see the `neighbor prefix-list` command.

This command is used by the administrator to adjust the BGP route advertisement behavior during device restart based on the hardware conditions, number of neighbors, number of routes, and actual deployment requirements.

**Configuration**

The following example configures initial delay to 60 seconds within 500 seconds after BGP restart.

**Examples**

```
Ruijie(config)# router bgp 500
Ruijie(config-router)# bgp initial-advertise-delay 60 500
```

**Related Commands**

| Command                     | Description                       |
|-----------------------------|-----------------------------------|
| <b>bgp graceful-restart</b> | Enables the BGP graceful-restart. |

**Platform** N/A

**Description**

## 5.36 bgp log-neighbor-changes

Use this command to log the BGP status changes without turning on debug. Use the **no** or **default** form of this command to disable this function.

**bgp log-neighbor-changes**

**no bgp log-neighbor-changes**

**default bgp log-neighbor-changes**

**Parameter**

| Parameter | Description |
|-----------|-------------|
|-----------|-------------|



|                      |                                                                                    |                           |
|----------------------|------------------------------------------------------------------------------------|---------------------------|
| <b>Description</b>   | N/A                                                                                | N/A                       |
| <b>Defaults</b>      | This function is enabled by default.                                               |                           |
| <b>Command</b>       |                                                                                    |                           |
| <b>Mode</b>          | BGP configuration mode or BGP Scope Global configuration mode                      |                           |
| <b>Usage</b>         | The debug command can also be used to log BGP status changes. But this command may |                           |
| <b>Guide</b>         | consume many resources.                                                            |                           |
| <b>Configuration</b> | The following example logs the BGP status changes without turning on debug.        |                           |
| <b>Examples</b>      | <pre>Ruijie(config-router)# bgp log-neighbor-changes</pre>                         |                           |
| <b>Related</b>       | <b>Command</b>                                                                     | <b>Description</b>        |
| <b>Commands</b>      | <code>router bgp</code>                                                            | Enables the BGP protocol. |
| <b>Platform</b>      |                                                                                    |                           |
| <b>Description</b>   | None                                                                               |                           |

## 5.37 bgp maxas-limit

Use this command to set the maximum number of ASs in the BGP AS-PATH attribute. Use the **no** or **default** form of the command to restore the default configuration.

**bgp maxas-limit** *number*

**no bgp maxas-limit**

**default bgp maxas-limit**

|                    | Parameter     | Description                                                                         |
|--------------------|---------------|-------------------------------------------------------------------------------------|
| <b>Parameter</b>   |               |                                                                                     |
| <b>Description</b> | <i>number</i> | The maximum number of ASs in the BGP AS-PATH attribute. The range is from 1 to 512. |

**Defaults** No maximum number of ASs is set by default.

**Command**

**Mode** BGP configuration mode/ BGP scope global configuration mode.

**Usage** The routes exceeding the AS number limit are discarded directly, After changing the configuration,

**Guide** use the **clear** command to reset the neighbor and make the configuration take effect.

**Configuration** The following example sets the maximum number of ASs in the BGP AS-PATH attribute to 100.

**Examples**

```
Ruijie(config-router)# bgp maxas-limit 100
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform**

**Description** N/A

## 5.38 bgp maximum-prefix

Use this command to restrict the maximum number of routes in the BGP global or specified VRF. Use the **no** or **default** form of the command to restore the default configuration.

**bgp maximum-prefix** *numbers* [ **vrf** *vrf-name* ]

**no bgp maximum-prefix** [ **vrf** *vrf-name* ]

**default bgp maximum-prefix** [ **vrf** *vrf-name* ]

| Parameter Description | Parameter       | Description                                            |
|-----------------------|-----------------|--------------------------------------------------------|
|                       | <i>vrf-name</i> | Indicates name of a specific VRF.                      |
|                       | <i>numbers</i>  | Indicates number of routes. Range: 1 to 4,294,967,295. |

**Defaults** The function is disabled by default.

**Command**

**Mode** BGP configuration mode/ BGP scope global configuration mode.

When a route advertisement in an address family causes the current number of BGP routes to exceed the maximum number, a prompt indicating route overflow in the global or specified VRF is displayed, and the BGP global or specified VRF is set to the overflow state.

The BGP routing information prefix may be introduced by **redistribute**, from a neighbor or from another VRF. In either case, once the BGP routing information prefix of an address family is introduced, the number of BGP global or specified VRF routes reaches the upper limit, the prefix will not increase and a prompt indicating route overflow in the global or specified VRF is displayed, and the BGP global or specified VRF is set to the overflow state.

**Usage****Guide**

Run the **show bgp** { *addressfamily* | **all** } **summary** command to check routing information base status.

If the address family enters the overflow state because the BGP routing information prefix reaches the upper limit, it can be adjusted by **maximum-prefix**.

For IPv4 unicast routes, the routing information prefix may still be received if it is in the overflow state in the following cases:

- 1) The routing information of the same routing prefix already exists in the routing information base;
- 2) A route that covers the prefix (except the default route) already exists in the routing information base, and the next hop of the route is different from the next hop of the newly received route prefix.

**Configuration** The following example sets the maximum number of routes to 100.

**Examples**

```
Ruijie(config)#router bgp 100
Ruijie(config-router)#bgp maximum-prefix 100
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform**

**Description** N/A

### 5.39 bgp mp-error-handle session-retain

Use this command to retain BGP sessions when BGP protocol detects errors in multi-protocol route attributes. Use the **no** or **default** form of this command to restore the default setting.

**bgp mp-error-handle session-retain [refresh-timer *time* ]**

**no bgp mp-error-handle session-retain**

**default bgp mp-error-handle session-retain**

**Parameter Description**

| Parameter                        | Description                                                                                                                                       |
|----------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>refresh-timer <i>time</i></b> | Configures the waiting time for auto route recovery.<br>The parameter ranges from 10 to 4294967296 in the unit of seconds.<br>The default is 120. |

**Defaults**

By default, BGP sessions will be interrupted when multi-protocol attribute errors are detected.

**Command Mode**

BGP configuration mode or BGP Scope Global configuration mode

**Usage Guide**

By default, when UPDATA packets are received from a neighbor, BGP sessions will be interrupted if multi-protocol attribute errors are detected, which will cause oscillation of routes of all the address families of the neighbor. An address family's route error will affect the stability of routes of other address families. After this command is configured, when an error of the route attribute of an address family occurs, all the route information of the address family and neighbor will be deleted, thus preventing impact on the BGP session and other protocol address families, improving BGP protocol's stability.

The option recovery-time is used to configure the waiting time for auto route recovery. To use the option, the neighbor must support the route refreshing capability. After recovery-time expires, BGP will send a route-refresh message to the neighbor's address family and re-notify the neighbor of the address family's all route information.

**Configuration Examples**

The following example retains BGP sessions when BGP protocol detects errors in multi-protocol route attributes.

```
Ruijie(config-router)# bgp mp-error-handle session-retain
```

| Configuration Examples | Command | Description |
|------------------------|---------|-------------|
|                        | N/A     | N/A         |

Platform N/A

Description

## 5.40 bgp nexthop trigger delay

Use this command to configure the delay time for updating the routing table when the nexthop of the BGP route changes. Use the **no** or **default** form of this command to restore the default setting.

**bgp nexthop trigger delay** *delay-time*

**no bgp nexthop trigger delay**

**default bgp nexthop trigger delay**

| Parameter Description | Parameter | Description       |
|-----------------------|-----------|-------------------|
|                       |           | <i>delay-time</i> |

Defaults The default is 5.

Command Mode BGP configuration mode, BGP IPv4/IPv6 Unicast address family configuration mode, BGP IPv4/IPv6 VRF address family configuration mode, BGP L2VPN EVPN address family configuration mode, BGP VPNv4/VPNv6 address family configuration mode or BGP Scope configuration mode.

Usage Guide This command is used to configure the delay time for updating the routing table when the nexthop changes, it takes effect when the bgp nexthop trigger enable switch is opened.

Configuration Examples The following example retains BGP sessions when BGP protocol detects errors in multi-protocol route attributes.

```
Ruijie(config-router)# bgp nexthop trigger delay 30
```

| Related Commands | Command | Description                       |
|------------------|---------|-----------------------------------|
|                  |         | <b>bgp nexthop trigger enable</b> |

Platform

Description None

## 5.41 bgp nexthop trigger enable

Use this command to enable the nexthop trigger update function. Use the **no** or **default** form of this command to disable this function.

**bgp nexthop trigger enable**

**no bgp nexthop trigger enable**

**default bgp nexthop trigger enable**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** This function is enabled by default.

**Command Mode** BGP configuration mode, BGP IPv4/IPv6 Unicast address-family configuration mode, BGP IPv4/IPv6 VRF address-family configuration mode, BGP L2VPN EVPN address family configuration mode, BGP VPNv4/VPNv6 address-family configuration mode or BGP Scope configuration mode.

**Usage**

**Guide** This command is used to enable the nexthop trigger update function.

**Configuration Examples** The following example enables the nexthop trigger update function.

```
Ruijie(config-router)# bgp nexthop trigger enable
```

| Related Commands | Command                          | Description                                                                  |
|------------------|----------------------------------|------------------------------------------------------------------------------|
|                  | <b>Bgp nexthop trigger delay</b> | Sets the delay time for updating the routing table when the nexthop changes. |

**Platform**

**Description** None

## 5.42 bgp notify unsupported-capability

Use this command to enable the neighbor address family capability detection function. Use the **no** or **default** form of this command to restore the default setting.

**bgp notify unsupported-capability**

**no bgp notify unsupported-capability**

**default bgp notify unsupported-capability**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** BGP configuration mode or BGP Scope Global configuration mode

**Usage Guide** When BGP neighbor address family capability negotiation is not fully consistent, neighbors can still be connected. After this command is configured, when an address family capability supported by the local device is not supported by the neighbor device, Notification packet that carries the address family that does not support the capability will be send.

**Configuration Examples** The following example enables the neighbor address family capability detection function.

```
Ruijie(config)# router bgp 65000
Ruijie(config-router)# bgp notify unsupported-capability
```

| Configuration Examples | Command                 | Description           |
|------------------------|-------------------------|-----------------------|
|                        | <code>router bgp</code> | Enables BGP protocol. |

**Platform Description** N/A

## 5.43 bgp redistribute-internal

Use this command to control BGP whether to allow redistributing routes learned from IBGP, such as RIP, OSPF and ISIS, to the IGP protocol. Use the **no** or **default** form of this command to disable this function.

**bgp redistribute-internal**

**no bgp redistribute-internal**

**default bgp redistribute-internal**

| Parameter          | Parameter | Description |
|--------------------|-----------|-------------|
| <b>Description</b> | N/A       | N/A         |

**Defaults** IBGP routes are allowed by default to be redistributed to the IGP protocol.

**Command Mode** BGP configuration mode, IPv4/IPv6 Unicast address family configuration mode, IPv4/IPv6 VRF address family configuration mode or BGP Scope configuration mode.

**Usage Guide** This command is used to control whether IBGP routes are allowed to be redistributed to the IGP protocol.

**Configuration** The following example enables the BGP to learn the redistributing routes from IBGP.

**Examples**

```
Ruijie(config-router)# bgp redistribute-internal
```

**Related  
Commands**

| Command             | Description                                        |
|---------------------|----------------------------------------------------|
| <b>redistribute</b> | Redistributes routes learned from other protocols. |

**Platform**

**Description** None

## 5.44 bgp router-id

Use this command to configure the ID-IP address of the device. Use the **no** or **default** form of this command to restore the default setting.

**bgp router-id** *ip-address*

**no bgp router-id**

**default bgp router-id**

**Parameter  
Description**

| Parameter         | Description |
|-------------------|-------------|
| <i>ip address</i> | IP address  |

**Defaults**

The loop-back interface of the device is selected preferentially by default. If it does not exist, the device route-id of the device is used.

**Command  
Mode**

BGP configuration mode, BGP IPv4/IPv6 VRF address family configuration mode or BGP Scope Global configuration mode.

**Usage  
Guide**

This command is used to configure IP address, the ID of the device when running the BGP protocol.

**Configuration**

The following example configures the ID-IP address of the device.

**Examples**

```
Ruijie(config-router)# bgp router-id 10.0.0.1
```

**Related  
Commands**

| Command                                     | Description                                                         |
|---------------------------------------------|---------------------------------------------------------------------|
| <b>show ip bgp dampening dampened-paths</b> | Displays the suppressed routing information.                        |
| <b>bgp dampening</b>                        | Enables the route dampening function and sets dampening parameters. |

**Platform**

**Description** None

## 5.45 bgp scan-rib disable

Use this command to update the routing table by event triggering. Use the **no** or **default** form of this command to restore the default setting.

**bgp scan-rib disable**

**no bgp scan-rib disable**

**default bgp scan-rib disable**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** Timely scan and update is enabled by default.

**Command Mode** BGP configuration mode, BGP IPv4/IPv6 Unicast address-family configuration mode, BGP IPv4/IPv6 VRF address family configuration mode, BGP VPNv4/VPNv6 address family configuration mode, BGP L2VPN EVPN address family configuration mode and BGP Scope configuration mode.

**Usage Guide** BGP provides two route update mechanisms: regular-scanning update and event-triggering update. Regular-scanning update indicates that BGP uses an internal timer to start scanning regularly and update the routing table. Event-triggering update indicates that BGP starts scanning and updates the routing table when the BGP configuration commands are changed due to user configuration or the next hop of a BGP route changes.

**Configuration Examples** The following example configures the timely scan for the BGP protocol.

```
Ruijie(config-router)# bgp scan-rib disable
```

| Related Commands | Command              | Description                                      |
|------------------|----------------------|--------------------------------------------------|
|                  | <b>bgp scan-time</b> | Configures the interval for the BGP timely scan. |

**Platform**

**Description** None

## 5.46 bgp scan-time

Use this command to configure the interval for the BGP timely scan. Use the **no** or **default** form of this command to restore the default setting.

**bgp scan-time *time***

**no bgp scan-time**

**default bgp scan-time**



| Parameter                        | Description                                                                                                                                                                                                                   |         |             |                                  |                                                  |
|----------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------|-------------|----------------------------------|--------------------------------------------------|
| <i>time</i>                      | Interval of the timely scan, in the range from 5 to 60 in the unit of seconds                                                                                                                                                 |         |             |                                  |                                                  |
| <b>Defaults</b>                  | The default is 60.                                                                                                                                                                                                            |         |             |                                  |                                                  |
| <b>Command Mode</b>              | BGP configuration mode, BGP IPv4/IPv6 Unicast address family configuration mode, BGP IPv4/IPv6 VRF address family configuration mode, BGP VPNv4/VPNv6 address family configuration mode, or BGP Scope configuration mode.     |         |             |                                  |                                                  |
| <b>Usage Guide</b>               | This command is used to configure the interval for the BGP timely scan; it takes effect when <code>bgp scan-rib enable</code> is configured.                                                                                  |         |             |                                  |                                                  |
| <b>Configuration Examples</b>    | The following example configures the interval for the BGP timely scan.<br><pre>Ruijie(config-router)# bgp scan-time 30</pre>                                                                                                  |         |             |                                  |                                                  |
| <b>Related Commands</b>          | <table border="1"> <thead> <tr> <th>Command</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td><code>bgp scan-rib enable</code></td> <td>Enables timely scan of the routing table by BGP.</td> </tr> </tbody> </table> | Command | Description | <code>bgp scan-rib enable</code> | Enables timely scan of the routing table by BGP. |
| Command                          | Description                                                                                                                                                                                                                   |         |             |                                  |                                                  |
| <code>bgp scan-rib enable</code> | Enables timely scan of the routing table by BGP.                                                                                                                                                                              |         |             |                                  |                                                  |
| <b>Platform Description</b>      | None                                                                                                                                                                                                                          |         |             |                                  |                                                  |

## 5.47 `bgp tcp-source-check disable`

Use this command to configure BGP's TCP source check function. Use **no** or **default** form of this command to disable this function.

**bgp tcp-source-check disable**

**no bgp tcp-source-check disable**

**default bgp tcp-source-check disable**

| Parameter | Description |
|-----------|-------------|
| -         | -           |

**Defaults** This function is enabled by default.

**Command Mode** BGP configuration mode or BGP Scope Global configuration mode

**Usage Guide** After TCP source check function is disabled, all TCP connection requests will be received. After TCP connection is established, if no neighbor peer is configured on the local device, Notification packet will be send to refuse the BGP connection.

**Configuration** The following example configures BGP's TCP source check function.

**Examples**

```
Ruijie(config)# router bgp 65000
Ruijie(config-router)# bgp tcp-source-check disable
```

| Configuration Examples | Command           | Description           |
|------------------------|-------------------|-----------------------|
|                        | <b>router bgp</b> | Enables BGP protocol. |

**Platform** N/A

**Description**

## 5.48 bgp timer accuracy-control

Use this command to configure BGP's internal timer accuracy control. Use **no** or **default** form of this command to restore the default setting.

**bgp timer accuracy-control**  
**no bgp timer accuracy-control**  
**default bgp timer accuracy-control**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | -         | -           |

**Defaults** This function is disabled by default.

**Command Mode** BGP configuration mode

**Usage Guide** By default, a deviation from the given time will occur on the BGP protocol's timer to prevent concurrent overtime of many timers. You can use this command to configure BGP protocol's timer to strictly implement the given time. It is recommended disabling this function unless necessary.

**Configuration** The following example configures BGP's internal timer accuracy control.

**Examples**

```
Ruijie(config)# router bgp 65000
Ruijie(config-router)# bgp timer accuracy-control
```

| Configuration Examples | Command           | Description           |
|------------------------|-------------------|-----------------------|
|                        | <b>router bgp</b> | Enables BGP protocol. |

**Platform** N/A

**Description**

## 5.49 bgp update-delay

Use this command to set the maximum delay time of the BGP Speaker before sending the first updating information to neighbors. The **no** or **default** form of the command restores it to the default value. During the BGP graceful-restart, this command is used to update the delay time.

**bgp update-delay** *delay-time*

**no bgp update-delay**

**default bgp update-delay**

| Parameter         | Description                                                                                                                                                                                                                                                                                                                   |
|-------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>delay-time</i> | Maximum delay time of the BGP Speaker before sending its route updating information, in the range from 0 to 3600 in the unit of seconds, 120 seconds by default. For BGP graceful-restart, it is the maximum time of waiting to receive the EOR message of all neighbors, in the range from 1 to 3600 in the unit of seconds. |

**Parameter**  
**Description**

**Defaults** The default is 120.

**Command**

**Mode** BGP configuration mode or BGP Scope Global configuration mode

With the BGP starting up, it first waits some time to connect with its neighbors, and then sends the updating message to these neighbors. After connecting with neighbors, the BGP does not send the updating message to them immediately, but waits some time to receive the updating routing message from all neighbors and then performs routing optimization calculation and finally advertises the route updating message to its neighbors, which improves the convergence time and reduces the calculation consumption. If the software sends the route updating information to its neighbors immediately, it may send the information again when it receives more optimized routes from other neighbors.

**Usage Guide**

The **bgp update-delay** command is used to adjust the initial waiting time of the software, which is the maximum time, from establishing the connection with the first neighbor to performing the routing optimization calculation and sending the route advertisement. When the BGP graceful-restart is enabled, this command is also used to set the maximum waiting time to receive EOR messages from all neighbors. You can increase this value if there are many neighbors or the routing information of the neighbors is huge. If the number of neighbors is 100 and the average amount of routes is 5000, the update sending time that each neighbor completes all the routing is 1 second, then the update of all the routing needs 100 seconds; if the number of neighbors increases to 200, the Update Delay time can be set to 240 seconds, ensuring that all the routing can be updated with the Update Delay period. The specific time is also related to data transmission rate.

**Configuration**  
**Examples**

The following example sets the update-delay time to 200 seconds.

```
Ruijie(config)# router bgp 500
Ruijie(config-router)# bgp graceful-restart
```

```
Ruijie(config-router)# bgp update-delay 200
```

| <b>Related Commands</b> | Command                     | Description                       |
|-------------------------|-----------------------------|-----------------------------------|
|                         | <b>bgp graceful-restart</b> | Enables the BGP graceful-restart. |

**Platform Description** None

## 5.50 clear bgp all

Use this command to reset all BGP address-families. The content to be reset depends on the further parameters .

**clear bgp all** [ *as number* ] [ **soft** ] [ **in** | **out** ]

| Parameter             | Description                                                                                                                                                                                                                                        |
|-----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>none parameter</i> | Resets peer sessions in all address-families.                                                                                                                                                                                                      |
| <i>as-number</i>      | Resets sessions with all members in the specified AS.<br>In the 10.4(3) or later versions, the 4-byte AS notation is supported, namely, the new range of the new AS notation is from 1 to 4294967295, represented as 1 to 65535.65535 in dot mode. |
| <b>in</b>             | Resets the received routing information.                                                                                                                                                                                                           |
| <b>out</b>            | Resets the redistributed routing information.                                                                                                                                                                                                      |
| <b>soft</b>           | Soft-resets all routing information received/sent from/to the specified peer.                                                                                                                                                                      |
| <b>soft in</b>        | Soft-resets the received routing information.                                                                                                                                                                                                      |
| <b>soft out</b>       | Soft-resets the distributed routing information.                                                                                                                                                                                                   |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** This command is used to reset sessions of all supported address-families, including the vrf session in every address-family.

**Configuration Examples** N/A

| <b>Related Commands</b> | Command                       | Description                             |
|-------------------------|-------------------------------|-----------------------------------------|
|                         | <b>clear bgp ipv4 unicast</b> | Resets the IPv4 unicast address-family. |

**Platform** None

## Description

## 5.51 clear bgp all peer-group

Use this command to reset BGP's specific peer group. The reset content is determined by further parameters.

**clear bgp all peer-group** *peer-group-name* [ **soft** ] [ **in** | **out** ]

### Parameter Description

| Parameter              | Description                                      |
|------------------------|--------------------------------------------------|
| <i>peer-group-name</i> | Resets a specific peer group.                    |
| <b>in</b>              | Resets received route information.               |
| <b>out</b>             | Resets allocated route information.              |
| <b>soft</b>            | Soft-resets received and sent route information. |
| <b>soft in</b>         | Soft-resets received route information.          |
| <b>soft out</b>        | Soft-resets allocated route information.         |

### Defaults

-

### Command Mode

Privileged EXEC mode

### Usage Guide

This command will reset replies of all supported address families, including reply connection included in vrf in each address family.

### Configuration

-

### Examples

### Configuration Examples

| Command                       | Description                                 |
|-------------------------------|---------------------------------------------|
| <b>clear bgp ipv4 unicast</b> | Resets BGP's IPv4 unicast address families. |

### Platform

-

### Description

## 5.52 clear bgp all update-group

Use this command to reset sessions of all members in an update-group.

**clear bgp all update-group** [ *update-group-index* | *peer-address* ] [ **soft** ] [ **in** | **out** ]

### Parameter Description

| Parameter                 | Description                                                      |
|---------------------------|------------------------------------------------------------------|
| <i>update-group-index</i> | Specifies the index of an update-group, in which the sessions of |

|                     |                                                                                      |
|---------------------|--------------------------------------------------------------------------------------|
|                     | members need to be reset.                                                            |
| <i>peer-address</i> | Specifies the update-group, to which a peer whose session needs to be reset belongs. |
| -                   | Resets BGP sessions directly if no option is carried.                                |
| <b>in</b>           | Resets received routing information.                                                 |
| <b>out</b>          | Resets distributed routing information.                                              |
| <b>soft</b>         | Soft-resets sent and received routing information.                                   |
| <b>soft in</b>      | Soft-resets received routing information.                                            |
| <b>soft out</b>     | Soft-resets distributed routing information.                                         |

**Command** Privileged EXEC mode

**Mode**

**Default Level** 14

**Usage Guide** This command is used to reset BGP sessions of all members in an update-group.

**Configuration Example** The following example resets routing information received by all peers in an update group to which the peer with the IP address of 1.1.1.1 belongs.

```
Ruijie# clear bgp all update-group 1.1.1.1 in
```

## 5.53 clear bgp ipv4 unicast

Use this command to reset BGP IPv4 unicast address families. The reset content is determined by further parameters.

**clear bgp ipv4 unicast** [ **vrf** *vrf-name* ] { \* | *as-number* | *peer-address* } [ **soft** ] [ **in** | **out** ]

| Parameter Description | Parameter           | Description                                            |
|-----------------------|---------------------|--------------------------------------------------------|
|                       | <i>vrf-name</i>     | VRF name                                               |
|                       | *                   | Resets all peer group sessions under address families. |
|                       | <i>as-number</i>    | Resets sessions with all members in the specified AS.  |
|                       | <i>peer-address</i> | Resets sessions with the specified peer.               |
|                       | <b>in</b>           | Resets received route information.                     |
|                       | <b>out</b>          | Resets allocated route information.                    |
|                       | <b>soft</b>         | Soft-resets received and sent route information.       |
|                       | <b>soft in</b>      | Soft-resets received route information.                |
|                       | <b>soft out</b>     | Soft-resets allocated route information.               |

**Defaults** N/A

**Command** Privileged EXEC mode

**Mode**

**Usage Guide** This command is the same as **clear ip bgp** in terms of the function and parameters.

**Configuration** N/A

**Examples**

| Configuration Examples | Command | Description |
|------------------------|---------|-------------|
|                        | N/A     | N/A         |

**Platform** N/A

**Description**

## 5.54 clear bgp ipv4 unicast dampening

Use this command to clear the flap information and disable route dampening.

**clear bgp ipv4 unicast [ vrf *vrf-name* ] dampening [ *ip-address* [ *mask* ] ]**

| Parameter       | Description                                |
|-----------------|--------------------------------------------|
| <i>vrf-name</i> | VRF name.                                  |
| -               | Clears the flap information of all routes. |
| <i>address</i>  | IP address                                 |
| <i>mask</i>     | Mask                                       |

**Defaults** N/A

**Command**

**Mode** Privileged EXEC mode

**Usage Guide** This command is used to clear the BGP route dampening information and release suppressed routes. This command can be used to restart the BGP route dampening.

**Configuration Examples** The following example clears the flap information and disables route dampening.

```
Ruijie# clear ip bgp dampening 192.168.0.0 255.255.0.0
```

| Related Commands | Command                                     | Description                                                    |
|------------------|---------------------------------------------|----------------------------------------------------------------|
|                  | <b>show ip bgp dampening dampened-paths</b> | Displays the suppressed routing information.                   |
|                  | <b>bgp dampening</b>                        | Enables the route dampening and sets the dampening parameters. |

**Platform**

**Description** None

## 5.55 clear bgp ipv4 unicast external

Use this command to reset all EBGp connections.

**clear bgp ipv4 unicast [ vrf *vrf-name* ] external [ soft ] [ in | out ]**

| Parameter       | Description                                                                   |
|-----------------|-------------------------------------------------------------------------------|
| <i>vrf-name</i> | VRF name.                                                                     |
| <b>in</b>       | Resets received route information.                                            |
| <b>out</b>      | Resets allocated route information.                                           |
| <b>soft</b>     | Soft-resets all routing information received/sent from/to the specified peer. |
| <b>soft in</b>  | Soft-resets the received routing information.                                 |
| <b>soft out</b> | Soft-resets the distributed routing information.                              |

**Defaults** N/A

**Command**

**Mode** Privileged EXEC mode

**Usage**

**Guide** This command is used to reset the specified external BGP connection.

**Configuration** The following example resets all EBGp connections.

**Examples** Ruijie# clear bgp ipv4 unicast external in

| Command                      | Description                        |
|------------------------------|------------------------------------|
| <b>clear ip bgp</b>          | Resets the BGP session.            |
| <b>show ip bgp neighbors</b> | Displays the neighbor information. |

**Related**

**Commands**

**Platform**

**Description** None

## 5.56 clear bgp ipv4 unicast flap-statistics

Use this command to clear the route flap information.

**clear bgp ipv4 unicast [ vrf *vrf-name* ] flap-statistics [ address [ mask ] ]**

| Parameter       | Description                       |
|-----------------|-----------------------------------|
| <i>vrf-name</i> | VRF name.                         |
| -               | Clears all route flap information |
| <i>address</i>  | IP address                        |
| <i>mask</i>     | Mask                              |

**Parameter**

**Description**



**Defaults** N/A

**Command**

**Mode** Privileged EXEC mode

**Usage Guide**

This command can be used only to clear the statistics of unsuppressed routes. It does not release the suppressed routes. To clear all route statistics and release the suppressed routes, run the **clear ip bgp dampening** command.

**Configuration**

The following example clears the route flap information.

**Examples**

```
Ruijie# clear bgp ipv4 unicast flap-statistics
```

**Related Commands**

| Command              | Description                                                         |
|----------------------|---------------------------------------------------------------------|
| <b>bgp dampening</b> | Enables the route dampening function and sets dampening parameters. |
| <b>show ip bgp</b>   | Displays the BGP route entry.                                       |

**Platform**

**Description** None

## 5.57 clear bgp ipv4 unicast peer-group

Use this command to reset the session with all members in the peer group.

**clear bgp ipv4 unicast [ vrf *vrf-name* ] peer-group *peer-group-name* [ soft ] [ in | out ]**

**Parameter Description**

| Parameter              | Description                                                                   |
|------------------------|-------------------------------------------------------------------------------|
| <i>vrf-name</i>        | VRF name                                                                      |
| <i>peer-group-name</i> | Name of the peer group                                                        |
| <b>in</b>              | Resets received route information.                                            |
| <b>out</b>             | Resets allocated route information.                                           |
| <b>soft</b>            | Soft-resets all routing information received/sent from/to the specified peer. |
| <b>soft in</b>         | Soft-resets for the received routing information.                             |
| <b>soft out</b>        | Soft-resets the distributed routing information.                              |

**Defaults** N/A

**Command**

**Mode** Privileged EXEC mode

**Usage**

This command resets the BGP session with all members in the peer group.

**Guide**

**Configuration** The following example resets the session with all members in the peer group.

**Examples** Ruijie# clear bgp ipv4 unicast peer-group my-group in

**Related  
Commands**

| Command      | Description                   |
|--------------|-------------------------------|
| clear ip bgp | Resets the BGP session.       |
| show ip bgp  | Displays the BGP route entry. |

**Platform**

**Description** None

## 5.58 clear bgp ipv4 unicast table-map

Use this command to update the table-map setting under the IPv4 unicast address family of BGP.

**clear bgp ipv4 unicast [ vrf *vrf-name* ] table-map**

**Parameter  
Description**

| Parameter       | Description |
|-----------------|-------------|
| <i>vrf-name</i> | VRF name    |

**Defaults** -

**Command  
Mode** Privileged EXEC mode

**Usage Guide** Re-apply table-map setting and update allocated core route table information.

**Configuration** -

**Examples**

**Parameter  
Description**

| Command      | Description                                 |
|--------------|---------------------------------------------|
| clear ip bgp | Resets BGP's IPv4 unicast address families. |

**Platform** -

**Description**

## 5.59 clear bgp ipv4 unicast update-group

Use this command to reset sessions of all members in an update-group in the IPv4 unicast address family.

```
clear bgp ipv4 unicast [ vrf vrf-name ] update-group [ update-group-index | peer-address ] [ soft ]
[ in | out ]
```

**Parameter  
Description**

| Parameter                 | Description                                                                                             |
|---------------------------|---------------------------------------------------------------------------------------------------------|
| <i>vrf-name</i>           | Specifies the name of a VRF instance. A global VRF instance is used if no VRF instance name is entered. |
| <i>update-group-index</i> | Specifies the index of an update-group, in which the sessions of members need to be reset.              |
| <i>peer-address</i>       | Specifies the update-group, to which a peer whose session needs to be reset belongs.                    |
| -                         | Resets BGP sessions directly if no option is carried.                                                   |
| <b>in</b>                 | Resets received routing information.                                                                    |
| <b>out</b>                | Resets distributed routing information.                                                                 |
| <b>soft</b>               | Soft-resets sent and received routing information.                                                      |
| <b>soft in</b>            | Soft-resets received routing information.                                                               |
| <b>soft out</b>           | Soft-resets distributed routing information.                                                            |

**Command  
Mode**

Privileged EXEC mode

**Default Level**

14

**Usage Guide**

This command is used to reset BGP sessions of all members in an update-group in the IPv4 unicast address family.

**Configuration  
Example**

The following example resets routing information received by all peers in an update group to which the peer with the IP address of 1.1.1.1 in the IPv4 unicast address family belongs.

```
Ruijie# clear bgp ipv4 unicast update-group 1.1.1.1 in
```

## 5.60 clear bgp ipv6 unicast

Use this command to reset BGP's IPv6 unicast address families.

```
clear bgp ipv6 unicast [ vrf vrf-name ] { * | as-number | peer-address } [ soft ] [ in | out ]
```

**Parameter  
Description**

| Parameter        | Description                                                                                                                                                                                     |
|------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>vrf-name</i>  | VRF name                                                                                                                                                                                        |
| *                | Resets all peer group sessions under address families.                                                                                                                                          |
| <i>as-number</i> | Resets sessions with all members in the specified AS.<br>In 10.4(3) or a later version, adds support for 4-byte AS numbers. The new AS number ranges from 1 to 4294967295, or 1 and 65535.65535 |

|                     |                                                  |
|---------------------|--------------------------------------------------|
|                     | in the dotted mode.                              |
| <i>peer-address</i> | Resets sessions with the specified peer.         |
| <b>in</b>           | Resets received routing information.             |
| <b>out</b>          | Resets distributed routing information.          |
| <b>soft</b>         | Soft-resets received and sent route information. |
| <b>soft in</b>      | Soft-resets received route information.          |
| <b>soft out</b>     | Soft-resets allocated route information.         |

**Defaults** -

**Command** Privileged EXEC mode

**Mode**

**Usage Guide** The function is similar with **clear bgp ipv4 unicast**, but applies to different address families.

**Configuration** -

**Examples**

| Configuration Examples | Command                       | Description                                 |
|------------------------|-------------------------------|---------------------------------------------|
|                        | <b>clear bgp ipv4 unicast</b> | Resets BGP's IPv4 unicast address families. |

**Platform** -

**Description**

## 5.61 clear bgp ipv6 unicast dampening

Use this command to clear flap information and disable route dampening.

**clear bgp ipv6 unicast [ vrf vrf-name ] dampening [ ip-address [ mask ] ]**

| Parameter Description | Parameter         | Description                          |
|-----------------------|-------------------|--------------------------------------|
|                       | <i>vrf-name</i>   | VRF name                             |
|                       | -                 | Clears all routes' flap information. |
|                       | <i>ip-address</i> | IP address                           |
|                       | <i>mask</i>       | Mask code                            |

**Command** Privileged EXEC mode

**Mode**

**Usage Guide** You can use this command to clear BGP's route flap information and disable route dampening. The command can restart BGP's route flap.

**Configuration** The following example clears flap information and disables route dampening.

**Examples**

**Configuration Examples**

| Command              | Description                                                         |
|----------------------|---------------------------------------------------------------------|
| <b>bgp dampening</b> | Enables the route dampening function and sets dampening parameters. |

**Platform** -

**Description**

## 5.62 clear bgp ipv6 unicast external

Use this command to reset all EBGP connection of IPv6 unicast address families.

**clear bgp ipv6 unicast [ vrf *vrf-name* ] external [ soft ] [ in | out ]**

**Parameter Description**

| Parameter       | Description                                      |
|-----------------|--------------------------------------------------|
| <i>vrf-name</i> | VRF name                                         |
| <b>in</b>       | Resets received routing information.             |
| <b>out</b>      | Resets distributed routing information.          |
| <b>soft</b>     | Soft-resets received and sent route information. |
| <b>soft in</b>  | Soft-resets received route information.          |
| <b>soft out</b> | Soft-resets allocated route information.         |

**Defaults** -

**Command Mode** Privileged EXEC mode

**Usage Guide** You can use this command to reset all the specified external BGP connection.

**Configuration** The following example resets all EBGP connection of IPv6 unicast address families.

**Examples**

```
Ruijie# clear bgp ipv6 unicast external in
```

**Configuration Examples**

| Command             | Description          |
|---------------------|----------------------|
| <b>clear ip bgp</b> | Resets BGP sessions. |

|                              |                                      |
|------------------------------|--------------------------------------|
| <b>show ip bgp neighbors</b> | Displays BGP neighbors' information. |
|------------------------------|--------------------------------------|

**Platform** -

**Description**

## 5.63 clear bgp ipv6 unicast flap-statistics

Use this command to clear IPv6 unicast address families' route flap statistics.

**clear bgp ipv6 unicast** [ *vrf vrf-name* ] **flap-statistics** [ *address* [ *mask* ] ]

| Parameter Description | Parameter       | Description                                      |
|-----------------------|-----------------|--------------------------------------------------|
|                       | <i>vrf-name</i> | VRF name                                         |
|                       | -               | Clears all route information's flap information. |
|                       | <i>address</i>  | IP address                                       |
|                       | <i>mask</i>     | Mask code                                        |

**Defaults** -

**Command Mode** Privileged EXEC mode

**Usage Guide** This command can only clear statistics of routes that are not damped and will not relieve damped routes. To clear statistics of all route information and relieve damped routes, use the **clear bgp ipv4 unicast dampening** command.

**Configuration Examples** The following example clears IPv6 unicast address families' route flap statistics.

**Examples** Ruijie# clear bgp ipv6 unicast flap-statistics

| Configuration Examples | Command              | Description                                                         |
|------------------------|----------------------|---------------------------------------------------------------------|
|                        | <b>bgp dampening</b> | Enables the route dampening function and sets dampening parameters. |
|                        | <b>show ip bgp</b>   | Displays BGP route entries.                                         |

**Platform** -

**Description**

## 5.64 clear bgp ipv6 unicast peer-group

Use this command to reset sessions with all members in the peer group.

**clear bgp ipv6 unicast** [ vrf *vrf-name* ] **peer-group** *peer-group-name* [ **soft** ] [ **in** | **out** ]

| Parameter Description | Parameter              | Description                                      |
|-----------------------|------------------------|--------------------------------------------------|
|                       | <i>vrf-name</i>        | VRF name                                         |
|                       | <i>peer-group-name</i> | Peer group name                                  |
|                       | <b>in</b>              | Resets received routing information.             |
|                       | <b>out</b>             | Resets distributed routing information.          |
|                       | <b>soft</b>            | Soft-resets received and sent route information. |
|                       | <b>soft in</b>         | Soft-resets received route information.          |
|                       | <b>soft out</b>        | Soft-resets allocated route information.         |

**Defaults** -

**Command Mode** Privileged EXEC mode

**Usage Guide** Use this command to reset BGP sessions with all members in the peer group.

**Configuration** The following example resets sessions with all members in the peer group.

**Examples** Ruijie# clear bgp ipv6 unicast peer-group my-group in

| Configuration Examples | Command             | Description                 |
|------------------------|---------------------|-----------------------------|
|                        | <b>clear ip bgp</b> | Resets BGP sessions.        |
|                        | <b>show ip bgp</b>  | Displays BGP route entries. |

**Platform** -

**Description**

## 5.65 clear bgp ipv6 unicast table-map

Use this command to update the table-map setting under the IPv6 unicast address family of BGP.

**clear bgp ipv6 unicast [ vrf *vrf-name* ] table-map**

| Parameter Description | Parameter       | Description |
|-----------------------|-----------------|-------------|
|                       | <i>vrf-name</i> | VRF name    |

**Defaults** -

**Command Mode** Privileged EXEC mode

**Usage Guide** -

**Configuration** -

**Examples**

| Configuration Examples | Command             | Description                                 |
|------------------------|---------------------|---------------------------------------------|
|                        | <b>clear ip bgp</b> | Resets BGP's IPv4 unicast address families. |

**Platform** -

**Description**

## 5.66 clear bgp ipv6 unicast update-group

Use this command to reset sessions of all members in an update-group in the IPv6 unicast address family.

**clear bgp ipv6 unicast [ vrf *vrf-name* ] update-group [ *update-group-index* | *neighbor-address* ] [ soft ] [ in | out ]**

| Parameter Description | Parameter                 | Description                                                                                             |
|-----------------------|---------------------------|---------------------------------------------------------------------------------------------------------|
|                       | <i>vrf-name</i>           | Specifies the name of a VRF instance. A global VRF instance is used if no VRF instance name is entered. |
|                       | <i>update-group-index</i> | Specifies the index of an update-group, in which the sessions of members need to be reset.              |
|                       | <i>neighbor-address</i>   | Specifies the update-group, to which a peer whose session needs to be reset belongs.                    |



|                 |                                                       |
|-----------------|-------------------------------------------------------|
| -               | Resets BGP sessions directly if no option is carried. |
| <b>in</b>       | Resets received routing information.                  |
| <b>out</b>      | Resets distributed routing information.               |
| <b>soft</b>     | Soft-resets sent and received routing information.    |
| <b>soft in</b>  | Soft-resets received routing information.             |
| <b>soft out</b> | Soft-resets distributed routing information.          |

**Command Mode** Privileged EXEC mode

**Default Level** 14

**Usage Guide** This command is used to reset BGP sessions of all members in an update-group in the IPv6 unicast address family.

**Configuration Example** The following example resets routing information received by all peers in an update group to which the peer with the IP address of 1111::1111 in the IPv6 unicast address family belongs.

```
Ruijie# clear bgp ipv6 unicast update-group 1111::1111 in
```

## 5.67 clear bgp l2vpn evpn

Use this command to reset BGP EVPN address families.

**clear bgp l2vpn evpn** { \* | *as-number* | *neighbor-address* } [ **soft** ] [ **in** | **out** ]

| Parameter Description | Parameter               | Description                                                                                                                                                                                                         |
|-----------------------|-------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | *                       | Resets all peer group sessions under address families.                                                                                                                                                              |
|                       | <i>as-number</i>        | Resets sessions with all members in the specified AS.<br>In 10.4(3) or a later version, adds support for 4-byte AS numbers. The new AS number ranges from 1 to 4294967295, or 1 and 65535.65535 in the dotted mode. |
|                       | <i>neighbor-address</i> | Resets sessions with the specified peer.                                                                                                                                                                            |
|                       | <b>in</b>               | Resets received route information.                                                                                                                                                                                  |
|                       | <b>out</b>              | Resets allocated route information.                                                                                                                                                                                 |
|                       | <b>soft</b>             | Soft-resets received and sent route information.                                                                                                                                                                    |
|                       | <b>soft in</b>          | Soft-resets received route information.                                                                                                                                                                             |
|                       | <b>soft out</b>         | Soft-resets allocated route information.                                                                                                                                                                            |

**Defaults** -

**Command Mode** Privileged EXEC mode

**Usage Guide** The function is similar with **clear bgp ipv4 unicast**, but applies to different address families.

**Configuration** -

**Examples**

| Configuration Examples | Command | Description                   |
|------------------------|---------|-------------------------------|
|                        |         | <b>clear bgp ipv4 unicast</b> |

**Platform** -

**Description**

## 5.68 clear bgp l2vpn evpn dampening

Use this command to clear flap information and disable route dampening.

**clear bgp l2vpn evpn dampening**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       |           | N/A         |

**Defaults** -

**Command Mode** Privileged EXEC mode

**Usage Guide** You can use this command to clear BGP's route flap information and relieve damped routes. The command can restart BGP's route flap.

**Configuration Examples** The following example clears flap information and disables route dampening.

```
Ruijie# clear bgp l2vpn evpn dampening
```

**Platform** N/A

**Description**

## 5.69 clear bgp l2vpn evpn external

Use this command to reset all EBGP connection of BGP EVPN address families.

**clear bgp l2vpn evpn external [ soft ] [ in | out ]**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       |           | <b>in</b>   |

|                 |                                                  |
|-----------------|--------------------------------------------------|
| <b>out</b>      | Resets allocated route information.              |
| <b>soft</b>     | Soft-resets received and sent route information. |
| <b>soft in</b>  | Soft-resets received route information.          |
| <b>soft out</b> | Soft-resets allocated route information.         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** You can use this command to reset all the specified external BGP connection.

**Configuration** The following example resets all EBGp connection of L2VPN EVPN address families.

**Examples** Ruijie# clear bgp l2vpn evpn external in

**Platform** N/A

**Description**

## 5.70 clear bgp l2vpn evpn flap-statistics

Use this command to clear BGP EVPN address families' route flap statistics.

**clear bgp l2vpn evpn flap-statistics**

| <b>Parameter Description</b>  | Parameter                                                                                                                                                                                                                               | Description |
|-------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------|
|                               | N/A                                                                                                                                                                                                                                     |             |
| <b>Defaults</b>               | N/A                                                                                                                                                                                                                                     |             |
| <b>Command Mode</b>           | Privileged EXEC mode                                                                                                                                                                                                                    |             |
| <b>Usage Guide</b>            | This command can only clear statistics of routes that are not damped and will not relieve damped routes. To clear statistics of all route information and relieve damped routes, use the <b>clear bgp l2vpn evpn dampening</b> command. |             |
| <b>Configuration Examples</b> | The following example clears L2VPN EVPN address families' route flap statistics.                                                                                                                                                        |             |
| <b>Examples</b>               | <pre>Ruijie# clear bgp l2vpn evpn flap-statistics</pre>                                                                                                                                                                                 |             |
| <b>Platform Description</b>   | N/A                                                                                                                                                                                                                                     |             |

## 5.71 clear bgp l2vpn evpn peer-group

Use this command to reset sessions of all members in the peer group.

**clear bgp l2vpn evpn peer-group** *peer-group-name* [ **soft** ] [ **in** | **out** ]

| <b>Parameter Description</b> | Parameter              | Description                                      |
|------------------------------|------------------------|--------------------------------------------------|
|                              | <i>peer-group-name</i> | Peer group name                                  |
|                              | <b>in</b>              | Resets received route information.               |
|                              | <b>out</b>             | Resets allocated route information.              |
|                              | <b>soft</b>            | Soft-resets received and sent route information. |
|                              | <b>soft in</b>         | Soft-resets received route information.          |
|                              | <b>soft out</b>        | Soft-resets allocated route information.         |
| <b>Defaults</b>              | N/A                    |                                                  |
| <b>Command Mode</b>          | Privileged EXEC mode   |                                                  |

**Usage Guide** Use this command to reset BGP sessions of all members in the peer group.

**Configuration Examples** The following example displays that the L2VPN EVPN address family soft-resets received route information of all members in the peer group my-group.

```
Ruijie# clear bgp l2vpn evpn peer-group my-group in
```

**Platform** N/A

**Description**

## 5.72 clear bgp l2vpn evpn update-group

Use this command to reset sessions of all members in an update-group of L2VPN EVPN address family.

**clear bgp l2vpn evpn update-group** [ *update-group-index* | *peer-address* ] [ **soft** ] [ **in** | **out** ]

| Parameter Description | Parameter                 | Description                                                                                |
|-----------------------|---------------------------|--------------------------------------------------------------------------------------------|
|                       | <i>update-group-index</i> | Specifies the index of an update-group, in which the sessions of members need to be reset. |
|                       | <i>peer-address</i>       | Specifies the update-group, to which a peer whose session needs to be reset belongs.       |
|                       | -                         | Resets BGP sessions directly if no option is carried.                                      |
|                       | <b>in</b>                 | Resets received routing information.                                                       |
|                       | <b>out</b>                | Resets distributed routing information.                                                    |
|                       | <b>soft</b>               | Soft-resets sent and received routing information.                                         |
|                       | <b>soft in</b>            | Soft-resets received routing information.                                                  |
|                       | <b>soft out</b>           | Soft-resets distributed routing information.                                               |

**Command Mode** Privileged EXEC mode

**Default Level** 14

**Usage Guide** This command is used to reset BGP sessions of all members in an update-group of L2VPN EVPN address family.

**Configuration Example** The following example resets routing information received by all peers in an update group of L2VPN EVPN address family to which the peer with the IP address of 1.1.1.1 belongs.

```
Ruijie# clear bgp l2vpn evpn update-group 1.1.1.1 in
```

## 5.73 clear evpn conflict mac

Use this command to clear MAC information and other statistics of conflicts occurring in EVPN.

**clear evpn conflict mac** [ *vni-id* ]

| Parameter Description | Parameter     | Description                                                                              |
|-----------------------|---------------|------------------------------------------------------------------------------------------|
|                       | <i>vni-id</i> | Clears MAC information and other statistics of conflicts occurring on a specified L2VNI. |

**Command Mode** Privileged EXEC mode

**Default Level** 14

**Usage Guide** This command is used to clear conflict MAC information and re-advertise the EVPN routes corresponding to the conflict MAC.

**Configuration Example** The following example clears all conflict MAC information.

**Example**

```
Ruijie# clear evpn conflict mac
```

## 5.74 clear ip bgp

Use this command to reset the BGP session.

**clear ip bgp** [ *vrf vrf-name* ] { \* | *as-number* / *peer-address* } [ *soft* ] [ *in* | *out* ]

| Parameter Description | Parameter        | Description                                                                                                                                                                                                                                     |
|-----------------------|------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <i>vrf-name</i>  | VRF name.                                                                                                                                                                                                                                       |
|                       | *                | Resets all the current BGP sessions and the OVERFLOW status of BGP ipv4 unicast address family.                                                                                                                                                 |
|                       | <i>address</i>   | Resets the BGP session with the specified peer.                                                                                                                                                                                                 |
|                       | <i>as number</i> | Resets sessions with all members in the specified AS. In the 10.4(3) or later versions, the 4-byte AS notation is supported, namely, the new range of the new AS notation is from 1 to 4294967295, represented as 1 to 65535.65535 in dot mode. |
|                       | <b>in</b>        | Reset the received routing information.                                                                                                                                                                                                         |
|                       | <b>out</b>       | Reset the distributed routing information.                                                                                                                                                                                                      |
|                       | <b>soft</b>      | Soft-reset all routing information received/sent from/to the specified peer                                                                                                                                                                     |
|                       | <b>soft in</b>   | Soft-reset the received routing information.                                                                                                                                                                                                    |
|                       | <b>soft out</b>  | Soft-reset the distributed routing information.                                                                                                                                                                                                 |

**Defaults** N/A

**Command** Privileged EXEC mode

**Mode**

At any time, once the routing policy or BGP configuration changes, an effective way must be available to implement the new routing policy or configuration. Traditional measure is to close the BGP connection and establish a new one.


This product supports implementing a new routing strategy without closing the BGP session connection by soft-resetting BGP.

**Usage**

For the peer that does not support the route refresh function, you may run the **neighbor soft-reconfiguration inbound** command to keep a copy of original routing information of every specified BGP peer on the local BGP speaker. This will consume some resources.

**Guide**

You can use the **show ip bgp neighbors** command to see whether the BGP peer supports the route refresh function. If it is supported, you need not to execute the **neighbor soft-reconfiguration inbound** command when the inbound routing strategy changes.

 All connected BGP routers must support the route refresh function to execute this command. This product supports the route refresh function.

**Configuration**

The following example resets the BGP session.

**Examples**

```
Ruijie# clear bgp ipv4 unicast *
```

**Related Commands**

| Command                                      | Description                                                                                                    |
|----------------------------------------------|----------------------------------------------------------------------------------------------------------------|
| <b>neighbor soft-reconfiguration inbound</b> | (Optional) Restarts the BGP session and reserves the unchanged route information sent by the BGP peer (group). |
| <b>show ip bgp</b>                           | Displays the BGP route entry.                                                                                  |

**Platform**

**Description** None

## 5.75 clear ip bgp dampening

Use this command to clear the dampening information and disable route dampening.

```
clear ip bgp [ vrf vrf-name ] dampening [ ip-address [ mask ] ]
```

**Parameter Description**

| Parameter       | Description |
|-----------------|-------------|
| <i>vrf-name</i> | VRF name    |
| <i>address</i>  | IP address  |
| <i>mask</i>     | Mask        |

**Defaults** N/A

**Command**

**Mode** Privileged EXEC mode

**Usage** This command is used to clear the BGP route flap information and disable route dampening. This command can be used to restart BGP route dampening.

**Configuration** The following example clears the dampening information and disables route dampening.

**Examples** Ruijie# clear ip bgp dampening 192.168.0.0 255.255.0.0

|                         | Command                              | Description                                                         |
|-------------------------|--------------------------------------|---------------------------------------------------------------------|
| <b>Related Commands</b> | show ip bgp dampening dampened-paths | Displays the suppressed routing information.                        |
|                         | bgp dampening                        | Enables the route dampening function and sets dampening parameters. |

**Platform**  
**Description** None

## 5.76 clear ip bgp external

Use this command to reset all EBGp connections.

**clear ip bgp [ vrf *vrf-name* ] external [ soft ] [ in | out ]**

|                              | Parameter       | Description                                      |
|------------------------------|-----------------|--------------------------------------------------|
| <b>Parameter Description</b> | <i>vrf-name</i> | VRF name.                                        |
|                              | in              | Reset the received routing information.          |
|                              | out             | Reset the distributed routing information.       |
|                              | soft in         | Soft-resets the received routing information.    |
|                              | soft out        | Soft-resets the distributed routing information. |

**Defaults** N/A

**Command**  
**Mode** Privileged EXEC mode

**Usage**  
**Guide** This command is used to reset the specified external BGP connection.

**Configuration** The following example resets all EBGp connections.

**Examples** Ruijie# clear ip bgp external in

|                         | Command               | Description                        |
|-------------------------|-----------------------|------------------------------------|
| <b>Related Commands</b> | clear ip bgp          | Resets the BGP session.            |
|                         | show ip bgp neighbors | Displays the neighbor information. |



**Platform****Description** None

## 5.77 clear ip bgp flap-statistics

Use this command to clear the routes vibration statistics of the IPv4 unicast address family.

```
clear ip bgp [ vrf vrf-name ] flap-statistics [ ip-address [ mask ] ]
```

|                                        | Parameter       | Description |
|----------------------------------------|-----------------|-------------|
| <b>Parameter</b><br><b>Description</b> | <i>vrf-name</i> | VRF name.   |
|                                        | <i>address</i>  | IP address  |
|                                        | <i>Mask</i>     | Mask        |

**Defaults** N/A**Command****Mode** Privileged EXEC mode**Usage****Guide**

This command can be used only to clear statistics of unsuppressed routes. It does not release the suppressed routes. To clear all route statistics and release the suppressed routes, run the **clear ip bgp dampening** command.

**Configuration**

The following example clears the routes vibration statistics of the IPv4 unicast address family.

**Examples**

```
Ruijie# clear ip bgp flap-statistics
```

|                                   | Command              | Description                                                         |
|-----------------------------------|----------------------|---------------------------------------------------------------------|
| <b>Related</b><br><b>Commands</b> | <b>bgp dampening</b> | Enables the route dampening function and sets dampening parameters. |
|                                   | <b>show ip bgp</b>   | Displays the BGP route entry.                                       |

**Platform****Description** None

## 5.78 clear ip bgp peer-group

Use this command to reset the session with all members in the peer group.

```
clear ip bgp [ vrf vrf-name ] peer-group peer-group-name [ soft ] [ in | out ]
```

|                                        | Parameter              | Description                                |
|----------------------------------------|------------------------|--------------------------------------------|
| <b>Parameter</b><br><b>Description</b> | <i>vrf-name</i>        | VRF name.                                  |
|                                        | <i>peer-group-name</i> | Name of the peer group                     |
|                                        | <b>in</b>              | Reset the received routing information.    |
|                                        | <b>out</b>             | Reset the distributed routing information. |

|                 |                                                                              |
|-----------------|------------------------------------------------------------------------------|
| <b>soft</b>     | Soft-resets all routing information received/sent from/to the specified peer |
| <b>soft in</b>  | Soft-resets the received routing information.                                |
| <b>soft out</b> | Soft-resets the distributed routing information.                             |

**Defaults** N/A

**Command**

**Mode** Privileged EXEC mode

**Usage**

**Guide** This command resets the BGP session with all members in the peer group.

**Configuration** The following example resets the session with all members in the peer group.

**Examples**

```
Ruijie# clear ip bgp peer-group my-group in
```

**Related  
Commands**

| Command             | Description                   |
|---------------------|-------------------------------|
| <b>clear ip bgp</b> | Resets the BGP session.       |
| <b>show ip bgp</b>  | Displays the BGP route entry. |

**Platform**

**Description** None

## 5.79 clear ip bgp table-map

Use this command to update the table-map's route information applied by IPv4 unicast address family.

**clear ip bgp [vrf *vrf-name*] table-map**

| Parameter          | Parameter       | Description |
|--------------------|-----------------|-------------|
| <b>Description</b> | <i>vrf-name</i> | vrf name    |

**Defaults** N/A

**Command**

**Mode** Privileged EXEC mode

**Usage**

**Guide** This command is used to update the route information of the applied table-map.

**Configuration** The following example updates the table-map's route information applied by IPv4 unicast address family.

**Examples**

```
Ruijie# clear ip bgp table-map
```

| Related<br>Commands | Command            | Description                   |
|---------------------|--------------------|-------------------------------|
|                     |                    | <b>clear ip bgp</b>           |
|                     | <b>show ip bgp</b> | Displays the BGP route entry. |

**Platform**  
**Description**        None

## 5.80 clear ip bgp update-group

Use this command to reset sessions of all members in an update-group in the IPv4 unicast address family.

**clear ip bgp** [ *vrf vrf-name* ] **update-group** [ *update-group-index* | *neighbor-address* ] [ **soft** ] [ **in** | **out** ]

| Parameter<br>Description | Parameter                 | Description                                                                                             |
|--------------------------|---------------------------|---------------------------------------------------------------------------------------------------------|
|                          | <i>vrf-name</i>           | Specifies the name of a VRF instance. A global VRF instance is used if no VRF instance name is entered. |
|                          | <i>update-group-index</i> | Specifies the index of an update-group, in which the sessions of members need to be reset.              |
|                          | <i>neighbor-address</i>   | Specifies the update-group, to which a peer whose session needs to be reset belongs.                    |
|                          | -                         | Resets BGP sessions directly if no option is carried.                                                   |
|                          | <b>in</b>                 | Resets received routing information.                                                                    |
|                          | <b>out</b>                | Resets distributed routing information.                                                                 |
|                          | <b>soft</b>               | Soft-resets sent and received routing information.                                                      |
|                          | <b>soft in</b>            | Soft-resets received routing information.                                                               |
|                          | <b>soft out</b>           | Soft-resets distributed routing information.                                                            |

**Command Mode**        Privileged EXEC mode

**Default Level**    14

**Usage Guide**        This command is used to reset BGP sessions of all members in an update-group in the IPv4 unicast address family.

**Configuration Example**    The following example resets routing information received by all peers in an update group to which the peer with the IP address of 1.1.1.1 in the IPv4 unicast address family belongs.

```
Ruijie# clear ip bgp update-group 1.1.1.1 in
```

## 5.81 default-information originate

Use this command to enable BGP to distribute the default route. Use the **no** form of this command to restore the default setting.

**default-information originate**

**[no] default-information originate**

**default default-information originate**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** BGP configuration mode, BGP IPv4/IPv6 address family configuration mode, BGP IPv4 VRF configuration mode, BGP IPv6 VRF configuration mode

**Usage Guide** This command is used to control whether the redistributed default route is effective, and this command needs to be configured together with the **redistribute** command. It takes effect only when a default route exists in the redistributed route.

This command is similar to the **network** command. The difference is that in the process of configuring the former, the **redistribute** command must be configured explicitly to redistribute the default route, only in this case, the redistributed default route is effective. For the later command, the IGP must have the default route.

**Configuration Examples** The following example enables BGP to distribute the default route.

```
Ruijie(config-router)# default-information originate
```

| Related Commands | Command             | Description                             |
|------------------|---------------------|-----------------------------------------|
|                  | <b>network</b>      | Configures routes to be advertised.     |
|                  | <b>redistribute</b> | Redistributes routes of other protocol. |

**Platform**

**Description** None

## 5.82 default-metric

Use this command to set the metric for route redistribution. Use the **no** or **default** form of this command to restore the default setting.

**default-metric *number***

**no default-metric**

**default default-metric**

| Parameter   | Parameter     | Description                                      |
|-------------|---------------|--------------------------------------------------|
| Description | <i>number</i> | Metric number, in the range from 1 to 4294967295 |


**Defaults** No metric is set by default.

**Command Mode** BGP configuration mode, BGP IPv4/ IPv6 Unicast address family configuration mode, BGP IPv4/ IPv6 VRF address family configuration mode or BGP Scope configuration mode.

This command sets the metric of routes to be redistributed for integrity.

### Usage

#### Guide

-  The metric set by the command cannot cover that set by the **redistribute metric** command. The value is 0 when the default metric applies to redistributed connected routes.

**Configuration Examples** The following example sets the metric for route redistribution.

```
Ruijie(config-router)# default-metric 45
```

### Related Commands

| Command             | Description                             |
|---------------------|-----------------------------------------|
| <b>redistribute</b> | Redistributes routes of other protocol. |

### Platform

**Description** None

## 5.83 distance bgp

Use this command to set different management distances for different types of BGP routes. Use the **no** or **default** form of this command to restore the default setting.

**distance bgp** *external-distance internal-distance local-distance*

**no distance bgp**

**default distance bgp**

| Parameter                | Description                                                                                                                                                                                                                             |
|--------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>external-distance</i> | Route management distance learned from EBGp peers, in the range from 1 to 255                                                                                                                                                           |
| <i>internal-distance</i> | Route management distance learned from IBGP peers, in the range from 1 to 255                                                                                                                                                           |
| <i>local-distance</i>    | Specifies the management distance of route learned from peers. However, the optimal one can be learned from the IGP. In general, these routes are indicated by the Network Backdoor command.<br>The value is in the range from 1 to 255 |

### Defaults

The parameter defaults are as follows:

*external-distance* - 20

*internal-distance - 200*  
*local-distance - 200*

**Command**

**Mode** BGP configuration mode or BGP Scope configuration mode.

It is not recommended to change the management distance of the BGP route. If it is necessary, observe the following points:

- Usage**
- The management distance of "external-distance" must be shorter than those of other IGP routing protocols (such as OSPF and RIP);
  - The internal-distance and local-distance should have longer management distances than other IGP routing protocols.
- Guide**

**Configuration** The following example sets different management distances for different types of BGP routes.

**Examples** Ruijie(config-router)# distance bgp 20 20 200

| Command                                      | Description                                                                                         |
|----------------------------------------------|-----------------------------------------------------------------------------------------------------|
| <b>neighbor soft-reconfiguration inbound</b> | Restarts the BGP session and reserves the unchanged route information sent by the BGP peer (group). |
| <b>show ip bgp</b>                           | Displays the BGP route entry.                                                                       |

**Related Commands**

**Platform**  
**Description** None

## 5.84 evpn

Use this command to enter EVPN configuration mode. Use the **no** or **restore** form of this command to restore the default settings.

**evpn**

**no evpn**

**default evpn**

| Parameter          | Parameter | Description |
|--------------------|-----------|-------------|
| <b>Description</b> | N/A       | N/A         |

**Defaults** By default, the EVPN configuration mode is disabled.

**Command**

**Mode** Global configuration mode

**Usage** Use this command to enter EVPN configuration mode. Use the **exit** command to exit the EVPN configuration mode

**Guide**

**Configuration** The following example enters EVPN configuration mode.

**Examples**

```
Ruijie(config)# evpn
```

**Platform**

**Description** N/A

## 5.85 exit-address-family

Use this command to exit BGP address-family configuration mode.

### exit-address-family

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** N/A

**Command**

**Mode** BGP address-family configuration mode

**Usage Guide** This command can be used to exit from various address-family modes of BGP to BGP configuration mode.

**Configuration** The following example exits the BGP address-family configuration mode.

**Examples**

```
Ruijie(config-router-af)#exit-address-family
```

| Related Commands | Command                    | Description                                    |
|------------------|----------------------------|------------------------------------------------|
|                  | <b>address-family ipv4</b> | Enters IPv4 address family configuration mode. |

**Platform**

**Description** None

## 5.86 export map(EVPN VNI)

Use this command to configure the route map for exporting the extended community attribute of EVPN routes from the local device to the remote device. Use the **no** form of this command to delete the route map for exporting the extended community attribute of EVPN routes from the local device to the remote device. Use the **default** form of this command to restore the default settings.

**export map** *routermap-name*

**no export map**

**default export map**

| Parameter                     | Parameter                                                                                                                                                                                                                                                              | Description           |
|-------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------|
| <b>Description</b>            | <i>route-map-name</i>                                                                                                                                                                                                                                                  | Name of the route map |
| <b>Defaults</b>               | No route map is configured for exporting the extended community attribute by default.                                                                                                                                                                                  |                       |
| <b>Command Mode</b>           | EVPN VNI configuration mode.                                                                                                                                                                                                                                           |                       |
| <b>Default Level</b>          | 14                                                                                                                                                                                                                                                                     |                       |
| <b>Usage Guide</b>            | <p>This command is used to modify the extended community attribute advertised by a type 5 route converted from a local EVPN route or IP route.</p> <p>This command supports only one route map, and the old configuration is overwritten by the new configuration.</p> |                       |
| <b>Configuration Examples</b> | <p>The following example configures a route map for exporting the extended community attribute associated with map1 on VNI 1.</p> <pre>Ruijie(config)# evpn Ruijie(config-evpn)# vni 1 Ruijie(config-evpn-vni)# export map map1</pre>                                  |                       |
| <b>Verification</b>           | Run the <b>show running-config</b> command to display the configurations.                                                                                                                                                                                              |                       |

## 5.87 import map(EVPN VNI)

Use this command to configure the route map for importing the remote EVPN routes to the local VNI instance. Use the **no** form of this command to delete the route map for importing the remote EVPN routes to the local VNI instance. Use the **default** form of this command to restore the default settings.

**import map** *route-map-name*

**no import map**

**default import map**

| Parameter            | Parameter                                                                                                                                                                             | Description           |
|----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------|
| <b>Description</b>   | <i>route-map-name</i>                                                                                                                                                                 | Name of the route map |
| <b>Defaults</b>      | No route map is configured for importing the remote EVPN routes to the local VNI instance by default.                                                                                 |                       |
| <b>Command Mode</b>  | EVPN VNI configuration mode.                                                                                                                                                          |                       |
| <b>Default Level</b> | 14                                                                                                                                                                                    |                       |
| <b>Usage Guide</b>   | This command is used to filter the remote EVPN routes to be imported to the local VNI instance, or modify the attribute of the remote EVPN routes imported to the local VNI instance. |                       |



This command supports only one route map, and the old configuration is overwritten by the new configuration.

**Configuration Examples** The following example configures the route map map1 for importing the remote EVPN routes to the local VNI instance vni 1.

```
Ruijie(config)# evpn
Ruijie(config-evpn)# vni 1
Ruijie(config-evpn-vni)# import map map1
```

**Verification** Run the **show running-config** command to display the configurations.

## 5.88 maximum-paths

Use this command to configure the number of equivalent paths of the EBGP/IBGP multipath load balancing function. Use the no form of this command to disable the EBGP/IBGP multipath load balancing function. Use the default form of this command to restore the default settings.

**maximum-paths** { **ebgp** | **ibgp** } *number*

**no maximum-paths** { **ebgp** | **ibgp** }

**default maximum-paths** { **ebgp** | **ibgp** }

| Parameter Description | Parameter   | Description                                                                                                                                                                                                  |
|-----------------------|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <b>ebgp</b> | Specifies the number of equivalent paths of the EBGP multipath load balancing function.                                                                                                                      |
|                       | <b>ibgp</b> | Specifies the number of equivalent paths of the IBGP multipath load balancing function.                                                                                                                      |
|                       | number      | Indicates the maximum number of equivalent paths. The minimum value is 1, and the maximum value depends on the device capability. If the value is 1, the EBGP multipath load balancing function is disabled. |

**Defaults** Equivalence of multiple BGP paths is not supported by default.

**Command Mode** BGP configuration mode, BGP IPv4 Unicast address family configuration mode, BGP IPv6 Unicast address family configuration mode, and BGP Scope Global configuration mode

**Default Level** 14

**Usage Guide** The maximum-paths ebgp command is also used to configure equivalence of confederation EBGP multiple paths and local inter-VRF import routes.  
IBGP and EBGP routes cannot form equivalent routes.

**Configuration Examples** The following example configures EBGP load balancing and sets the maximum number of equivalent routes to 2.

```
Ruijie(config)# router bgp 65530
Ruijie(config-router)# maximum-paths ebgp 2
```

**Verification** Run the show running-config command to display the BGP configurations.

## 5.89 maximum-prefix

Use this command to limit the maximum number of prefixes in the routing database in the address family. Use the **no** or **default** form of this command to restore the default setting.

**maximum-prefix** *maximum*

**no maximum-prefix**

**default maximum-prefix**

| Parameter      | Description                                                                                                     |
|----------------|-----------------------------------------------------------------------------------------------------------------|
| <i>maximum</i> | The maximum number of prefixes in the routing database in the address family, in the range from 1 to 4294967295 |

**Defaults** The maximum number is not limited by default.


**Command Mode** BGP configuration mode, BGP IPv4/IPv6 Unicast address family configuration mode, BGP IPv4/IPv6 VRF configuration mode, BGP L2VPN EVPN address family configuration mode or BGP Scope configuration mode.


In a BGP address family, routing prefixes may be introduced through redistribution or learnt from neighbors, or other VRFs. Once routing prefixes in the BGP address family reaches the maximum number, this address family will enter to the overflow state.

Use the **show bgp { addressfamily | all } summary** command to display the state of routing database.

It is necessary to reconfigure BGP for state clearing, or use the **clear bgp { addressfamily | all } \*** command to reset the address family.

### Usage Guide

 When the address family is overflow as the number of prefixes reaches the maximum number, you can adjust maximum-prefix.

 Maximum-prefix will not filter the routing information generated by the network and aggregate commands.

IPv4 unicast routes can receive the routing prefix in the following conditions even in the Overflow state:

The route information of the same routing prefix exists in the address database.

One route that overwrites this prefix (except for the default route) exists in the address database and the next-hop of this route is different from that of the newly received routing prefix.

The following example sets the maximum number of prefixes in the BGP routing database in the ipv4 multicast address family.

**Configuration Examples**

```
Ruijie(config)# router bgp 65000
Ruijie(config-router)# address-family ipv4 multicast
Ruijie(config-router-af)# maximum-prefix 65535
```

**Related Commands**

| Command                              | Description                                               |
|--------------------------------------|-----------------------------------------------------------|
| <b>clear bgp all</b>                 | Resets BGP's all address families.                        |
| <b>clear bgp ipv4 mdt</b>            | Resets BGP's ipv4 mdt address families.                   |
| <b>clear bgp ipv4 unicast</b>        | Resets BGP's ipv4 unicast address families.               |
| <b>clear bgp ipv6 unicast</b>        | Resets BGP's ipv6 unicast address families.               |
| <b>clear bgp vpnv4 unicast</b>       | Resets BGP's vpnv4 unicast address families.              |
| <b>show bgp all summary</b>          | Displays summary of BGP's all address families.           |
| <b>show bgp ipv4 mdt summary</b>     | Displays summary of BGP's ipv4 mdt address families.      |
| <b>show bgp ipv4 unicast summary</b> | Displays summary of BGP's ipv4 unicast address families.  |
| <b>show bgp ipv6 unicast summary</b> | Displays summary of BGP's ipv6 unicast address families.  |
| <b>show bgp vpnv4 summary</b>        | Displays summary of BGP's vpnv4 unicast address families. |

**Platform**

**Description** N/A

## 5.90 neighbor activate

Use this command to activate the neighbor or peer group in the current address mode. Use the **no** or **default** form of this command to disable this function.

**neighbor {peer-address | peer-group-name} activate**

**no neighbor {peer-address | peer-group-name} activate**

**default neighbor { peer-address | peer-group-name } activate**

**Parameter Description**

| Parameter              | Description                                          |
|------------------------|------------------------------------------------------|
| <i>peer-address</i>    | IP address of the peer, IPv4 address or IPv6 address |
| <i>peer-group-name</i> | Name of the peer group of up to 32 characters        |

**Defaults**

This function is enabled in IPv4 address family mode by default.

**Command Mode**

BGP configuration mode, BGP IPv4/ IPv6 Unicast address family configuration mode, BGP IPv4/ IPv6 VRF address family configuration mode, BGP L2VPN EVPN address family configuration

mode, or BGP Scope configuration mode.

**Usage** The function is enabled by default for IPv4 address families. You need to set this command in other address-family configuration modes for exchanging routes.

**Guide**

The following example activates the neighbor or peer group in the current address mode.

**Configuration Examples**

```
Ruijie(config)# router bgp 60
Ruijie(config-router)# neighbor 10.0.0.1 remote-as 100
Ruijie(config-router)# address-family vpnv4
Ruijie(config-router-af)# neighbor 10.0.0.1 activate
```

**Related Commands**

| Command                   | Description               |
|---------------------------|---------------------------|
| <b>router bgp</b>         | Enables the BGP protocol. |
| <b>neighbor remote-as</b> | Configures the BGP peer.  |

**Platform**

**Description** None

## 5.91 neighbor advertisement-interval

Use this command to set the time interval to send the BGP route update message. Use the **no** or **default** form of this command to restore the default setting.

**neighbor** { *peer-address* | *peer-group-name* } **advertisement-interval** *seconds*

**no neighbor** { *peer-address* | *peer-group-name* } **advertisement-interval**

**default neighbor** { *peer-address* | *peer-group-name* } **advertisement-interval**

**Parameter Description**

| Parameter              | Description                                                                       |
|------------------------|-----------------------------------------------------------------------------------|
| <i>peer address</i>    | IP address of the peer                                                            |
| <i>peer-group-name</i> | Name of the peer group of up to 32 characters                                     |
| <i>seconds</i>         | Time interval to send the route update message in the range from 0 to 600 seconds |

**Defaults**

IBGP connection: 15 seconds  
EBGP connection: 30 seconds

**Command Mode**

BGP configuration mode, BGP IPv4/ IPv6 VRF address family configuration mode or BGP Scope configuration mode.

**Usage** If you have specified the BGP peer group, all members of the peer group will adopt the settings of the command.

**Guide**

**Configuration** The following example sets the time interval to send the BGP route update message.

**Examples**

```
Ruijie(config)# router bgp 60
Ruijie(config-router)# neighbor 10.0.0.1 remote-as 100
Ruijie(config-router)# neighbor 10.0.0.1 advertisement-interval 10
```

**Related Commands**

| Command                   | Description               |
|---------------------------|---------------------------|
| <b>router bgp</b>         | Enables the BGP protocol. |
| <b>neighbor remote-as</b> | Configures the BGP peer.  |

**Platform**

**Description** None

## 5.92 neighbor allowas-in

Use this command to allow the PE to receive messages with the same AS number as itself. Use the **no** or **default** form of this command to restore the default setting.

**neighbor** {*peer-address* | *peer-group-name*} **allowas-in** *number*

**no neighbor** {*peer-address* | *peer-group-name*} **allowas-in**

**default neighbor** {*peer-address* | *peer-group-name*} **allowas-in**

**Parameter Description**

| Parameter              | Description                                                                 |
|------------------------|-----------------------------------------------------------------------------|
| <i>peer address</i>    | IP address of the peer                                                      |
| <i>peer-group-name</i> | Name of the peer group of up to 32 characters                               |
| <i>number</i>          | Number of the AS number duplication in the range from 1 to 10, 3 by default |

**Defaults**

This function is disabled by default.

**Command Mode**

BGP configuration mode, BGP IPv4/IPv6 Unicast address family configuration mode, BGP IPv4/IPv6 VRF address family configuration mode, BGP L2VPN EVPN address family configuration mode or BGP Scope configuration mode.

**Usage Guide**

A typical application is spoke\_hub mode. Execute this command on the PE to enable it to receive and then send the advertised address prefix. Configure two VRFs on the PE. One VRF receives the routes of all PEs and advertises them to the CE; the other VRF receives the routes advertised by the CE and advertises them to all PEs.

This command applies to IBGP or EBGP peers.

**Configuration Examples**

The following example allows the PE to receive messages with the same AS number as itself.

```
Ruijie(config)# router bgp 60
Ruijie(config-router)# neighbor 10.1.1.1 remote-as 100
Ruijie(config-router)# address-family ipv4 vrf vpn1
Ruijie(config-router-af)# neighbor 10.1.1.1 allowas-in
```

|                     | Command                   | Description               |
|---------------------|---------------------------|---------------------------|
| Related<br>Commands | <b>router bgp</b>         | Enables the BGP protocol. |
|                     | <b>neighbor remote-as</b> | Configures the BGP peer.  |

**Platform**  
**Description** None

## 5.93 neighbor as-originate-interval

Use this command to configure the interval that the device advertises local original BGP routes to the peer (group). Use the **no** or **default** form of this command to restore the default setting.

**neighbor** { *peer-address* | *peer-group-name* } **as-origination-interval** *seconds*

**no neighbor** { *peer-address* | *peer-group-name* } **as-origination-interval**

**default neighbor** { *peer-address* | *peer-group-name* } **as-origination-interval**

|                          | Parameter              | Description                                                                                                                                     |
|--------------------------|------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| Parameter<br>Description | <i>peer address</i>    | IP address of the peer.                                                                                                                         |
|                          | <i>peer-group-name</i> | Name of the peer group, containing up to 32 characters.                                                                                         |
|                          | <i>seconds</i>         | The interval at which the device advertises local original BGP routes to the peer (group), in the range from 1 to 65535 in the unit of seconds. |

**Defaults** The default interval is 1.

**Command Mode** BGP configuration mode/ BGP IPv4 VRF address family configuration mode/ BGP IPv6 VRF address family configuration mode/ BGP scope global configuration mode.

**Usage Guide** If you specify a peer group name in this command, the configuration takes effect on all members of the peer group.

The following example configures the interval at which the device advertises local original BGP routes to the peer in the BGP IPv4 VRF address family configuration mode.

**Configuration Examples**

```
Ruijie(config)# router bgp 60
Ruijie(config-router)# address-family ipv4 vrf vpn1
Ruijie(config-router-af)# neighbor 10.0.0.1 remote-as 100
Ruijie(config-router-af)# neighbor 10.0.0.1 as-origination-interval 10
```

|                     | Command | Description |
|---------------------|---------|-------------|
| Related<br>Commands | N/A     | N/A         |

**Platform** N/A

## Description

## 5.94 neighbor default-originate

Use this command to allow the BGP speaker to advertise the default route to the peer (group). Use the **no** or **default** form of this command to restore the default setting.

**neighbor** {*peer-address* | *peer-group-name*} **default-originate** [**route-map** *map-tag*]

**no neighbor** {*peer-address* | *peer-group-name*} **default-originate** [**route-map** *map-tag*]

**default neighbor** { *peer-address* | *peer-group-name* } **default-originate** [ **route-map** *map-tag* ]

|             | Parameter              | Description                                   |
|-------------|------------------------|-----------------------------------------------|
| Parameter   | <i>peer address</i>    | IP address of the peer                        |
| Description | <i>peer-group-name</i> | Name of the peer group of up to 32 characters |
|             | <i>map-tag</i>         | Name of the route-map of up to 32 characters  |

**Defaults** This function is disabled by default.

**Command Mode** BGP configuration mode, BGP IPv4/IPv6 unicast address family configuration mode, BGP IPv4/IPv6 VRF address family configuration mode, or BGP Scope configuration mode

## Usage Guide

This command does not requires the default route but sends a default route whose next-hop address is the local address to neighbors.

If you have specified the BGP peer group, all members of the peer group will adopt the settings of the command. If you set the command for a member in the peer, this command will overwrite the settings on the peer group.

## Configuration Examples

The following example allows the BGP speaker to advertise the default route to the peer (group).

```
Ruijie(config)# router bgp 60
Ruijie(config-router)# neighbor 10.1.1.1 remote-as 80
Ruijie(config-router)# neighbor 10.1.1.1 default-originate
```

|                  | Command                   | Description               |
|------------------|---------------------------|---------------------------|
| Related Commands | <b>router bgp</b>         | Enables the BGP protocol. |
|                  | <b>neighbor remote-as</b> | Configures the BGP peer.  |

## Platform

**Description** None

## 5.95 neighbor description

Use this command to set a descriptive sentence for the specified peer (group). Use the **no** or **default** form of this command to restore the default setting.

**neighbor** {*peer-address* | *peer-group-name*} **description** *text*

**no neighbor** {*peer-address* | *peer-group-name*} **description**

**default neighbor** { *peer-address* | *peer-group-name* } **description**

|             | Parameter              | Description                                                 |
|-------------|------------------------|-------------------------------------------------------------|
| Parameter   | <i>peer address</i>    | IP address of the peer                                      |
| Description | <i>peer-group-name</i> | Name of the peer group of up to 32 characters               |
|             | <i>text</i>            | Descriptive text of the peer (group) of up to 80 characters |

**Defaults** This function is disabled by default.

**Command Mode** BGP configuration mode, BGP IPv4/IPv6 Unicast address family configuration mode and BGP IPv4/IPv6 VRF address family configuration mode or BGP Scope configuration mode.

**Usage Guide** This command is used to add descriptive characters for the peer (group). This may help remember features and characteristics of the peer (group).

The following example sets a descriptive sentence for the specified peer (group).

**Configuration**

```
Ruijie(config)# router bgp 60
```

**Examples**

```
Ruijie(config-router)# neighbor 10.1.1.1 remote-as 80
```

```
Ruijie(config-router)# neighbor 10.1.1.1 description xyz.com
```

**Related Commands**

| Command                   | Description               |
|---------------------------|---------------------------|
| <b>router bgp</b>         | Enables the BGP protocol. |
| <b>neighbor remote-as</b> | Configures the BGP peer.  |

**Platform**

**Description** None

## 5.96 neighbor distribute-list

Use this command to implement the routing policy based on the ACL when receiving/sending route information from/to the specified BGP peer. Use the **no** or **default** form of this command to restore the default setting.

**neighbor** { *peer-address* | *peer-group-name* } **distribute-list** { *access-list-number* } { **in** | **out** }

**no neighbor** { *peer-address* | *peer-group-name* } **distribute-list** { *access-list-number* } { **in** | **out** }

**default neighbor** { *peer-address* | *peer-group-name* } **distribute-list** { *access-list-number* | *access-list-name* } { **in** | **out** }

|             | Parameter                 | Description                                   |
|-------------|---------------------------|-----------------------------------------------|
| Parameter   | <i>peer address</i>       | IP address of the peer                        |
| Description | <i>peer-group-name</i>    | Name of the peer group of up to 32 characters |
|             | <i>access-list-number</i> | ACL number                                    |



|            |                                                      |
|------------|------------------------------------------------------|
| <b>in</b>  | Specifies the ACL for filtering the incoming routes. |
| <b>out</b> | Specifies the ACL for filtering the outgoing routes. |

**Defaults** This function is disabled by default.

**Command Mode** BGP configuration mode, BGP IPv4/IPv6 Unicast address family configuration mode, BGP IPv4/IPv6 VRF address family configuration mode, BGP VPNv4/VPNv6 address family configuration mode or BGP Scope configuration mode.

For in rule or out rule, this command cannot be used together with the **neighbor prefix-list** command. Only one of them can take effect.

**Usage Guide** If you have specified the BGP peer group, all members of the peer group will adopt the settings. If you set the **neighbor distribute-list** command for a member in the peer, this command will overwrite the settings on the peer group.

You can set different filtering policies in different address-family configuration modes to control routes.

The following example implements the routing policy based on the ACL when receiving/sending route information from/to the specified BGP peer.

**Configuration Examples**

```
Ruijie(config)# router bgp 60
Ruijie(config-router)# neighbor 10.1.1.1 remote-as 80
Ruijie(config-router)# neighbor 10.1.1.1
distribute-list bgp-filter in
```

|                         | Command                   | Description                                   |
|-------------------------|---------------------------|-----------------------------------------------|
| <b>Related Commands</b> | <b>router bgp</b>         | Enables the BGP protocol.                     |
|                         | <b>neighbor remote-as</b> | Configures the BGP peer.                      |
|                         | <b>ip access-list</b>     | Creates a standard IP ACL or extended IP ACL. |

**Platform Description** None

## 5.97 neighbor ebgp-multihop

Use this command to allow establishing BGP connection between EBGp peers that are not directly connected. Use the **no** or **default** form of this command to restore the default setting.

**neighbor** {peer-address | peer-group-name} **ebgp-multihop** [ttl]

**no neighbor** {peer-address | peer-group-name} **ebgp-multihop** [ttl]

**default neighbor** { peer-address | peer-group-name } **ebgp-multihop** [ ttl ]

|                              | Parameter       | Description                                   |
|------------------------------|-----------------|-----------------------------------------------|
| <b>Parameter Description</b> | peer address    | IP address of the peer                        |
|                              | peer-group-name | Name of the peer group of up to 32 characters |

|            |                                    |
|------------|------------------------------------|
| <i>ttl</i> | Maximum hops in the range 1 to 255 |
|------------|------------------------------------|

**Defaults**

The BGP connection is allowed between EBGP peers connected with each other directly by default.

If "ebgp-multihop" is followed by no parameter, the ttl is 255.

**Command Mode**

BGP configuration mode, BGP IPv4/IPv6 VRF address family configuration mode or BGP Scope configuration mode.

**Usage Guide**

To prevent routing loop and dampening, non-default routes that can reach the peer must exist between EBGP peers between which the BGP connection can only be established via multiple hops.

If the BGP peer group is specified, all members of the peer group adopt the settings. If this command is set for a member of the peer, the setting will overwrite the setting for the group.

**Configuration Examples**

The following example allows establishing BGP connection between EBGP peers that are not directly connected.

```
Ruijie(config)# router bgp 65000
Ruijie(config-router)# neighbor 10.0.0.1 remote-as 65100
Ruijie(config-router)# neighbor 10.0.0.1 ebgp-multihop
```

**Related Commands**

| Command                   | Description               |
|---------------------------|---------------------------|
| <b>router bgp</b>         | Enables the BGP protocol. |
| <b>neighbor remote-as</b> | Configures the BGP peer.  |

**Platform**

**Description** None

## 5.98 neighbor fall-over bfd

Use this command to enable BFD correlation with BGP. Use the **no** form or **default** form of this command to disable BFD correlation with BGP.

**neighbor** { *peer-address* | *peer-group-name* } **fall-over bfd**

**no neighbor** { *peer-address* | *peer-group-name* } **fall-over bfd**

**default neighbor** { *peer-address* | *peer-group-name* } **fall-over bfd**

**Parameter Description**

| Parameter              | Description                                             |
|------------------------|---------------------------------------------------------|
| <i>peer address</i>    | IPv4 or IPv6 address of the peer.                       |
| <i>peer-group-name</i> | Name of the peer group, containing up to 32 characters. |

**Defaults**

BFD correlation is disabled by default.

**Command**

BGP configuration mode / IPv4 VRF address family configuration mode/ IPv6 VRF address family

**Mode** configuration mode/ Scope configuration mode

**Usage** Before configuring BFD correlation, the BFD session parameters of the neighbor interface must be configured.

**Guide**

The following example enables BFD correlation to detect the forwarding path between local and the neighbor 172.16.0.2.

**Configuration Examples**

```
Ruijie(config)# router bgp 45000
Ruijie(config-router)# neighbor 172.16.0.2 remote-as 45001
Ruijie(config-router)# neighbor 172.16.0.2 fall-over bfd
```

| Command                   | Description               |
|---------------------------|---------------------------|
| <b>router bgp</b>         | Enables the BGP protocol. |
| <b>neighbor remote-as</b> | Configures the BGP peer.  |

**Platform**

**Description** None

## 5.99 neighbor filter-list

Use this command to enable route filtering when sending/receiving routing information to/from BGP peers. Use the **no** or **default** form of this command to restore the default setting.

**neighbor** { *peer-address* | *peer-group-name* } **filter-list** *access-list-number* { **in** | **out** }

**no neighbor** { *peer-address* | *peer-group-name* } **filter-list** *access-list-number* { **in** | **out** }

**default neighbor** { *peer-address* | *peer-group-name* } **filter-list** *access-list-number* { **in** | **out** }

| Parameter                 | Description                                                  |
|---------------------------|--------------------------------------------------------------|
| <i>peer address</i>       | IP address of the peer, IPv4 address or IPv6 address         |
| <i>peer-group-name</i>    | Name of the peer group of up to 32 characters                |
| <i>access-list-number</i> | ACL number                                                   |
| <b>in</b>                 | Applies as-path list on the received routing information.    |
| <b>out</b>                | Applies as-path list on the distributed routing information. |

**Defaults** The function is disabled by default.

**Command Mode** BGP configuration mode, BGP IPv4/IPv6 Unicast address family configuration mode, BGP IPv4/IPv6 VRF address family configuration mode, BGP VPNv4/VPNv6 address family configuration mode or BGP Scope configuration mode.

**Usage** If the BGP peer group is specified, all members of the peer group adopt the settings of this command. If the **neighbor filter-list** command is set for a member of the peer, the setting will overwrite the setting for the group.

**Guide**

You can set different filter policies in different address-family configuration modes to control routes.

The following example enables route filtering when sending/receiving routing information to/from BGP peers.

**Configuration**

```
Ruijie(config)# ip as-path access-list 1 deny _123_
```

**Examples**

```
Ruijie(config)# router bgp 65000
Ruijie(config-router)# neighbor 10.0.0.1 remote-as 65100
Ruijie(config-router)# neighbor 10.0.0.1 filter-list 1 out
```

**Related  
Commands**

| Command                       | Description               |
|-------------------------------|---------------------------|
| <b>router bgp</b>             | Enables the BGP protocol. |
| <b>neighbor remote-as</b>     | Configures the BGP peer.  |
| <b>ip as-path access-list</b> | Creates an AS_PATH list.  |
| <b>match as-path</b>          | Matches the AS_PATH list. |

**Platform**

**Description** None

## 5.100 neighbor local-as

Use this command to configure the local AS number for the BGP peer, which could be used as its Remote AS to connect with local router. Use the **no** or **default** form of this command to restore the default setting.

**neighbor {peer-address | peer-group-name} local-as as-number [no-prepend [replace-as [dual-as]]]**

**no neighbor {peer-address | peer-group-name} local-as**

**default neighbor { peer-address | peer-group-name } local-as**

**Parameter  
Description**

| Parameter              | Description                                                                                                                                                                                                                           |
|------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>peer address</i>    | IP address of the peer, IPv4 address or IPv6 address                                                                                                                                                                                  |
| <i>peer-group-name</i> | Name of the peer group of up to 32 characters                                                                                                                                                                                         |
| <i>as-number</i>       | Local AS number, in the range from 1 to 65535.<br>In the 10.4(3) or later versions, the 4-byte AS notation is supported, namely, the new AS notation range is from 1 to 4294967295, represented as from 1 to 65535.65535 in dot mode. |
| <b>no-prepend</b>      | The AS-PATH of the routing information received from the peer does not depend on the Local AS. This option is disabled by default.                                                                                                    |
| <b>replace-as</b>      | The AS-PATH of the routing information sent to the peer replaces the BGP AS with the Local AS. This option is disabled by default.                                                                                                    |
| <b>dual-as</b>         | Uses BGP AS or Local AS to establish BGP connection with the device. This option is disabled by default.                                                                                                                              |

**Defaults** No Local AS is configured for the peer. If Local AS is configured, no option is configured by default. The peer could only use Local AS to establish BGP connection with local device, and adds Local AS into the AS-PATH of the received routing information, inserts Local AS to the corresponding AS-PATH before sending the routing information to the peer.

**Command Mode** BGP configuration mode, BGP IPv4/IPv6 VRF configuration mode or BGP Scope configuration mode.

**Usage Guide** Local AS could be configured on the EBGp peer only, and if the attributes of the peer change, such as EBGp converts to IBGP or union EBGp, Local AS and corresponding options will be deleted. Local AS must be different from BGP AS and this peer's Remote AS and the union ID (if federation is configured). If you have specified the BGP peer group, all members of this peer group will adopt the settings of this command. You cannot set Local AS for the specified member of the peer group separately.

**Configuration Examples** The following example configures the local AS number for the BGP peer.

```
Ruijie(config)# router bgp 65000
Ruijie(config-router)# neighbor 10.0.0.1 remote-as 65100
Ruijie(config-router)# neighbor 10.0.0.1 local-as 23
```

| Related Commands | Command                   | Description               |
|------------------|---------------------------|---------------------------|
|                  | <b>router bgp</b>         | Enables the BGP protocol. |
|                  | <b>neighbor remote-as</b> | Configures the BGP peer.  |

**Platform Description** N/A

## 5.101 neighbor maximum-prefix

Use this command to limit the number of prefixes received from the specified BGP peer. Use the **no** or **default** form of this command to restore the default setting.

**neighbor** {*peer-address* | *peer-group-name*} **maximum-prefix** *maximum* [*threshold*] [**warning-only**]

**no neighbor** {*peer-address* | *peer-group-name*} **maximum-prefix** *maximum*

**default neighbor** { *peer-address* | *peer-group-name* } **maximum-prefix** *maximum*

| Parameter Description | Parameter              | Description                                                                                                 |
|-----------------------|------------------------|-------------------------------------------------------------------------------------------------------------|
|                       | <i>peer-address</i>    | IP address of the peer, IPv4 or IPv6 address                                                                |
|                       | <i>peer-group-name</i> | Name of the peer group of up to 32 characters                                                               |
|                       | <i>maximum</i>         | Upper limit of the number of the received route entries                                                     |
|                       | <i>threshold</i>       | Percentage of the maximum when alarming.                                                                    |
|                       | <b>warning-only</b>    | Does not terminate the BGP connection when the route entries reach the upper limit but produce a log entry. |

| <b>Defaults</b>               | This function is disabled by default.                                                                                                                                                                                                                                                                                                                                                                        |         |             |                   |                           |                           |                          |
|-------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------|-------------|-------------------|---------------------------|---------------------------|--------------------------|
| <b>Command Mode</b>           | BGP configuration mode, BGP IPv4/IPv6 Unicast address family configuration mode, BGP IPv4/IPv6 VRF address family configuration mode, BGP L2VPN EVPN address family configuration mode or BGP Scope configuration mode.                                                                                                                                                                                      |         |             |                   |                           |                           |                          |
| <b>Usage Guide</b>            | <p>The BGP connection will be torn down when the received routes exceeds the upper limit by default. To prevent tearing down the connection, set the "warning-only" to control that.</p> <p>If the BGP peer group is specified, all members of the peer group adopt the settings of this command. If this command is set for a member of the peer, the setting will overwrite the setting for the group.</p> |         |             |                   |                           |                           |                          |
| <b>Configuration Examples</b> | <p>The following example limits the number of prefixes received from the specified BGP peer.</p> <pre>Ruijie(config)# router bgp 65000 Ruijie(config-router)# neighbor 10.0.0.1 maximum-prefix 1000</pre>                                                                                                                                                                                                    |         |             |                   |                           |                           |                          |
| <b>Related Commands</b>       | <table border="1"> <thead> <tr> <th>Command</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td><b>router bgp</b></td> <td>Enables the BGP protocol.</td> </tr> <tr> <td><b>neighbor remote-as</b></td> <td>Configures the BGP peer.</td> </tr> </tbody> </table>                                                                                                                                      | Command | Description | <b>router bgp</b> | Enables the BGP protocol. | <b>neighbor remote-as</b> | Configures the BGP peer. |
| Command                       | Description                                                                                                                                                                                                                                                                                                                                                                                                  |         |             |                   |                           |                           |                          |
| <b>router bgp</b>             | Enables the BGP protocol.                                                                                                                                                                                                                                                                                                                                                                                    |         |             |                   |                           |                           |                          |
| <b>neighbor remote-as</b>     | Configures the BGP peer.                                                                                                                                                                                                                                                                                                                                                                                     |         |             |                   |                           |                           |                          |
| <b>Platform Description</b>   | None                                                                                                                                                                                                                                                                                                                                                                                                         |         |             |                   |                           |                           |                          |

## 5.102 neighbor next-hop-self

Use this command to set the next-hop of the route to the local BGP speaker while specifying the routes that the BGP peer redistributes. Use the **no** or **default** form of this command to restore the default setting.

**neighbor** {*peer-address* | *peer-group-name*} **next-hop-self**

**no neighbor** {*peer-address* | *peer-group-name*} **next-hop-self**

**default neighbor** { *peer-address* | *peer-group-name* } **next-hop-self**

| <b>Parameter Description</b> | Parameter              | Description                                   |
|------------------------------|------------------------|-----------------------------------------------|
|                              | <i>peer-address</i>    | IP address of the peer, IPv4 or IPv6 address  |
|                              | <i>peer-group-name</i> | Name of the peer group of up to 32 characters |

|                     |                                                                                                                                                                                                                          |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Defaults</b>     | This function is disabled by default.                                                                                                                                                                                    |
| <b>Command Mode</b> | BGP configuration mode, BGP IPv4/IPv6 Unicast address family configuration mode, BGP IPv4/IPv6 VRF address family configuration mode, BGP VPNv4/VPNv6 address family configuration mode or BGP Scope configuration mode. |
| <b>Usage</b>        | This command is mostly used in the non-full-mesh-type network, such as the Frame Relay and                                                                                                                               |

**Guide** X.25, where the BGP speakers within the same subnet cannot completely be accessed mutually. If you have specified the BGP peer group, all members of the peer group will adopt the settings of the command.

**Configuration Examples**

The following example sets the next-hop of the route to the local BGP speaker.

```
Ruijie(config)# router bgp 65000
Ruijie(config-router)# neighbor 10.0.0.1 next-hop-self
```

**Related Commands**

| Command                   | Description               |
|---------------------------|---------------------------|
| <b>router bgp</b>         | Enables the BGP protocol. |
| <b>neighbor remote-as</b> | Configures the BGP peer.  |

**Platform**

**Description** None

## 5.103 neighbor next-hop-unchanged

Use this command to maintain the next-hop when sending routes to the peer(group). Use the **no** or **default** form of this command to restore the default setting.

**neighbor** {*peer-address* | *peer-group-name*} **next-hop-unchanged**

**no neighbor** {*peer-address* | *peer-group-name*} **next-hop-unchanged**

**default neighbor** { *peer-address* | *peer-group-name* } **next-hop-unchanged**

**Parameter Description**

| Parameter                 | Description                                                         |
|---------------------------|---------------------------------------------------------------------|
| <i>peer-address</i>       | IP address of the peer, IPv4 or IPv6 address                        |
| <i>peer-group-name</i>    | Name of the peer group of up to 32 characters                       |
| <b>next-hop-unchanged</b> | Maintains the next-hop while sending the routes to the peer(group). |

**Defaults**

The next-hop will be changed by default when routes are sent to the EBGp peer.

**Command Mode**

BGP configuration mode, BGP IPv4/IPv6 Unicast address family configuration mode, BGP L2VPN EVPN address family configuration mode or BGP Scope Global configuration mode.

**Usage Guide**

This command is used to control to maintain the next-hop route transmitting between multi-hop EBGp peer sessions. This command cannot be configured on the route reflector. And for the client of the route reflector, if this function is enabled, the **neighbor next-hop-self** command cannot be used to change the next-hop of routes. This function is mainly applied to the cross-domain VPN. In the implementation with the Option C adopted, to reduce the complete connectivity between the PEs of the cross-domain CPN, a route reflector can be set in every autonomous domain to establish the Multihop MP-EBGP connection to implement the VPN route interaction. As the next-hop route is changed as itself while sending routes to the EBGp peer by default, PE stations of other autonomous domains will consider the final next-hop of the VPN route as the route reflector

when receiving the VPN route at last, which will result in all cross-domains VPN flow going through the reflector. However, usually this is not the optimal forwarding path, and the requirement for the forwarding performance of the RR is higher. To avoid this condition, use the **neighbor next-hop-unchanged** command in the address-family VPNv4 configuration mode to maintain the next-hop of the VPNv4 route sent to the BGP peer when establishing the cross-domain Multihop MP-EBGP connection on the router reflector.

The following example maintains the next-hop when sending routes to the peer (group).

**Configuration Examples**

```
Ruijie(config)# router bgp 60
Ruijie(config-router)# address-family vpnv4
Ruijie(config-router-af)# neighbor 10.1.1.1 next-hop-unchanged
```

**Related Commands**

| Command                   | Description               |
|---------------------------|---------------------------|
| <b>router bgp</b>         | Enables the BGP protocol. |
| <b>neighbor remote-as</b> | Configures the BGP peer.  |

**Platform**

**Description** None

## 5.104 neighbor password

When the BGP connection with the BGP peer is established, use this command to enable TCP MD5 authentication and set the password. Use the **no** or **default** form of this command to restore the default setting.

**neighbor** {*peer-address* | *peer-group-name*} **password** [0 | 7 ]*string*

**no neighbor** {*peer-address* | *peer-group-name*} **password**

**default neighbor** { *peer-address* | *peer-group-name* } **password**

**Parameter Description**

| Parameter              | Description                                                           |
|------------------------|-----------------------------------------------------------------------|
| <i>peer-address</i>    | IP address of the peer, IPv4 or IPv6 address                          |
| <i>peer-group-name</i> | Name of the peer group of up to 32 characters                         |
| <b>0</b>               | Displays the password with encryption.                                |
| <b>7</b>               | Displays the password without encryption.                             |
| <i>string</i>          | Password for MD5 authentication in the range from up to 80 characters |

**Defaults** The function is disabled by default

**Command Mode** BGP configuration mode, BGP IPv4/IPv6 VRF address family configuration mode or BGP Scope configuration mode.

**Usage Guide** This command will enable MD5 authentication of the TCP. BGP peers must have the same password configured; otherwise, the neighbor relationship cannot be established. When this



command is set, the local BGP speaker will re-establish the BGP connection with the BGP peer. If the BGP peer group is specified, all members of the peer group adopt the settings of this command. If this command is set for a member of the peer, the setting will overwrite the setting for the group.

No matter in which mode, a neighbor has only one password, not one for every address family, .

The following example enables TCP MD5 authentication and sets the password.

### Configuration Examples

```
Ruijie(config)# router bgp 65000
Ruijie(config-router)# neighbor 10.0.0.1 password Red-Giant
```

### Related Commands

| Command                   | Description              |
|---------------------------|--------------------------|
| <b>router bgp</b>         | Enables the BGP protocol |
| <b>neighbor remote-as</b> | Configures the BGP peer. |

### Platform

Description None

## 5.105 neighbor peer-group (creating)

Use this command to create a BGP peer group. Use the **no** or **default** form of this command to restore the default setting.

**neighbor** *peer-group-name* **peer-group**

**no neighbor** *peer-group-name* **peer-group**

**default neighbor** *peer-group-name* **peer-group**

| Parameter   | Parameter              | Description                                   |
|-------------|------------------------|-----------------------------------------------|
| Description | <i>peer-group-name</i> | Name of the peer group of up to 32 characters |

Defaults No BGP peer group is created.

Command Mode BGP configuration mode, BGP IPv4/IPv6 VRF configuration mode or BGP Scope configuration mode.

Usage Guide If multiple BGP peers use the same update policy, the peers can be configured in the same peer group, so as to simplify the configuration and boost operation efficiency.

### Configuration Examples

The following example creates a BGP peer group.

```
Ruijie(config)# router bgp 65000
Ruijie(config-router)# neighbor Red-Giant peer-group
```

### Related Commands

| Command                   | Description               |
|---------------------------|---------------------------|
| <b>router bgp</b>         | Enables the BGP protocol. |
| <b>neighbor remote-as</b> | Configures the BGP peer.  |

|                                                |                                                                    |
|------------------------------------------------|--------------------------------------------------------------------|
| <b>neighbor peer-group (assigning members)</b> | Configures the specified peer as the member of the BGP peer group. |
| <b>show ip bgp peer-group</b>                  | Displays the information of the BGP peer.                          |

**Platform**

**Description** None

### 5.106 neighbor peer-group (assigning members)

Use this command to configure the specified peer as a member of the BGP peer group. Use the **no** or **default** form of this command to restore the default setting.

**neighbor** *peer-address* **peer-group** *peer-group-name*

**no neighbor** *peer-address* **peer-group** *peer-group-name*


**default neighbor** *peer-address* **peer-group** *peer-group-name*

| Parameter              | Description                                   |
|------------------------|-----------------------------------------------|
| <i>peer-address</i>    | IP address of the peer, IPv4 or IPv6 address  |
| <i>peer-group-name</i> | Name of the peer group of up to 32 characters |

**Defaults** No peer exists in the peer group.

**Command Mode** BGP configuration mode, BGP IPv4/IPv6 Unicast address family configuration mode, BGP IPv4/IPv6 VRF address family configuration mode, BGP L2VPN EVPN address family configuration mode or BGP Scope configuration mode.

**Usage Guide** Members of the peer group can adopt all configurations of the peer. It is allowed to configure an individual member of the peer group to replace the universal configuration for the peer group, but such separate configuration does not contain the configuration information that may affect the output update. In other words, every member in the peer group will always adopt the following configurations of the peer group:  
 remote-as, update-source, local-as, reconnect-interval, times, advertisement-interval, default-originate, next-hop-self, remove-private-as, send-community, distribute-list out, filter-list out, prefix-list out, route-map out, unsuppress-map, route-reflector-client.

 Do not place neighbors of different address families in the same peer group, or place IBGP and EBGp neighbors in the same peer group.

**Configuration Examples** The following example configures the specified peer as a member of the BGP peer group.

```
Ruijie(config)# router bgp 65000
Ruijie(config-router)# neighbor Red-Giant peer-group
Ruijie(config-router)# neighbor 10.0.0.1 peer-group Red-Giant
```

|                     | Command                               | Description                               |
|---------------------|---------------------------------------|-------------------------------------------|
| Related<br>Commands | <b>router bgp</b>                     | Enables the BGP protocol.                 |
|                     | <b>neighbor remote-as</b>             | Configures the BGP peer.                  |
|                     | <b>neighbor peer-group (creating)</b> | Creates the BGP peer group.               |
|                     | <b>show ip bgp peer-group</b>         | Displays the information of the BGP peer. |

**Platform**

**Description** None

## 5.107 neighbor prefix-list

Use this command to implement the routing policy based on the prefix list to receive/transmit routes from/to the BGP peer. Use the **no** or **default** form of this command to restore the default setting.

**neighbor** {*peer-address* | *peer-group-name*} **prefix-list** *prefix-list-name* { **in** | **out** }

**no neighbor** {*peer-address* | *peer-group-name*} **prefix-list** *prefix-list-name* { **in** | **out** }

**default neighbor** { *peer-address* | *peer-group-name* } **prefix-list** *prefix-list-name* { **in** | **out** }

|                          | Parameter              | Description                                          |
|--------------------------|------------------------|------------------------------------------------------|
| Parameter<br>Description | <i>peer address</i>    | IP address of the peer, IPv4 or IPv6 address         |
|                          | <i>peer-group-name</i> | Name of the peer group of up to 32 characters        |
|                          | <i>prefix-lis-name</i> | Name of the prefix-list of up to 32 characters       |
|                          | <b>in</b>              | Applies the prefix list to the received routes.      |
|                          | <b>out</b>             | Applies the prefix list to the redistributed routes. |

**Defaults** This function is disabled by default.

**Command Mode** BGP configuration mode, BGP IPv4/IPv6 Unicast address family configuration mode, BGP IPv4/IPv6 VRF address family configuration mode, BGP VPNv4/VPNv6 address family configuration mode or BGP Scope configuration mode.

For the "in" rule or "out" rule, this command cannot be used together with the **neighbor distribute-list** command. That is, only one of them takes effect.

**Usage Guide** If the BGP peer group is specified, all members of the peer group adopt the settings of this command. If the **neighbor prefix-list in** command is set for a member of the peer, the setting will overwrite the setting for the group.

You can set different filter policies in different address-family configuration modes to control routes.

**Configuration Examples** The following example implements the routing policy based on the prefix list to receive/transmit routes from/to the BGP peer.

```
Ruijie(config)# ip prefix-list bgp-filter deny 10.0.0.1/16
```

```
Ruijie(config)# router bgp 65000
Ruijie(config-router)# neighbor 10.0.0.1 prefix-list bgp-filter in
```

| Related Commands | Command                   | Description               |
|------------------|---------------------------|---------------------------|
|                  | <b>router bgp</b>         | Enables the BGP protocol. |
|                  | <b>neighbor remote-as</b> | Configures the BGP peer.  |
|                  | <b>ip prefix-list</b>     | Creates the prefix lists. |

**Platform**  
**Description**        None

### 5.108 neighbor remote-as

Use this command to configure the BGP peer (group). Use the **no** or **default** form of this command to restore the default setting.

**neighbor** { *peer-address* | *peer-group-name* } **remote-as** *as-number*

**no neighbor** { *peer-address* | *peer-group-name* } **remote-as**

**default neighbor** { *peer-address* | *peer-group-name* } **remote-as**

| Parameter Description | Parameter              | Description                                                                                                                                                                                                                                                   |
|-----------------------|------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <i>peer-address</i>    | IP address of the peer, IPv4 or IPv6 address                                                                                                                                                                                                                  |
|                       | <i>peer-group-name</i> | Name of the peer group of up to 32 characters                                                                                                                                                                                                                 |
|                       | <i>as-number</i>       | BGP peer (group) autonomous system number in the range from 1 to 65535<br>In the 10.4(3) or later versions, the 4-byte AS notation is supported, namely, the new AS notation range is from 1 to 4294967295, represented as from 1 to 65535.65535 in dot mode. |

**Defaults**                No BGP peer is configured.

**Command Mode**        BGP configuration mode, BGP IPv4/IPv6 Unicast address family configuration mode, BGP IPv4/IPv6 VRF address family configuration mode, BGP L2VPN EVPN address family configuration mode or BGP Scope configuration mode.

**Usage Guide**            If you have specified the BGP peer group, all members of the peer group will inherit the settings of the command.

**Configuration Examples**        The following example configures the BGP peer (group).  

```
Ruijie(config)# router bgp 65000
Ruijie(config-router)# neighbor 10.0.0.1 remote-as 80
```

| Related Commands | Command           | Description               |
|------------------|-------------------|---------------------------|
|                  | <b>router bgp</b> | Enables the BGP protocol. |

**Platform**

**Description** None

## 5.109 neighbor remove-private-as

Use this command to delete the private AS number recorded in the AS path attribute in the route sent to the specified EBGp peer. Use the **no** or **default** form of this command to restore the default setting.

**neighbor** {*peer-address* | *peer-group-name*} **remove-private-as**

**no neighbor** {*peer-address* | *peer-group-name*} **remove-private-as**

**default neighbor** { *peer-address* | *peer-group-name* } **remove-private-as**

| Parameter Description | Parameter              | Description                                   |
|-----------------------|------------------------|-----------------------------------------------|
|                       | <i>peer-address</i>    | IP address of the peer, IPv4 or IPv6 address  |
|                       | <i>peer-group-name</i> | Name of the peer group of up to 32 characters |

**Defaults** This function is disabled by default.

**Command Mode** BGP configuration mode, BGP IPv4/IPv6 address family configuration mode, or BGP IPv4 VRF configuration mode.

This command takes effect only on EBGp peers.

**Usage Guide** If the AS path contains the private AS number that is the AS number of the EBGp peer to be sent, the AS number is not deleted.

Private AS number range: 64512 - 65535

**Configuration Examples** The following example deletes the private AS number recorded in the AS path attribute in the route sent to the specified EBGp peer

```
Ruijie(config)# router bgp 65000
Ruijie(config-router)# neighbor 10.0.0.1 remove-private-as
```

| Related Commands | Command                   | Description               |
|------------------|---------------------------|---------------------------|
|                  | <b>router bgp</b>         | Enables the BGP protocol. |
|                  | <b>neighbor remote-as</b> | Configures the BGP peer.  |

**Platform**

**Description** None

## 5.110 neighbor route-map

Use this command to enable route match for the received/sent routes. Use the **no** or **default** form of this command to disable this function.

**neighbor** { *peer-address* | *peer-group-name* } **route-map** *map-tag* { **in** | **out** }

**no neighbor** { *peer-address* | *peer-group-name* } **route-map** *map-tag* { **in** | **out** }

**default neighbor** { *peer-address* | *peer-group-name* } **route-map** *map-tag* { **in** | **out** }

|                          | Parameter              | Description                                   |
|--------------------------|------------------------|-----------------------------------------------|
| Parameter<br>Description | <i>peer-address</i>    | IP address of the peer, IPv4 or IPv6 address  |
|                          | <i>peer-group-name</i> | Name of the peer group of up to 32 characters |
|                          | <i>map-tag</i>         | Name of the match rule                        |
|                          | <b>in</b>              | Applies the rule to the incoming routes.      |
|                          | <b>out</b>             | Applies the rule to the outgoing routes.      |

**Defaults** N/A

**Command Mode** BGP configuration mode, BGP IPv4/IPv6 Unicast address family configuration mode, BGP IPv4/IPv6 VRF address family configuration mode, BGP L2VPN EVPN address family configuration mode or BGP Scope configuration mode.

**Usage Guide** This command can be used to filter the incoming and outgoing routes for different neighbors by using different incoming/outgoing rules, purifying and controlling routes.  
You can set different filter policies in different address-family configuration modes to control routes.

**Configuration Examples** The following example enables route match for the received/sent routes.

```
Ruijie(config-router)# neighbor 10.0.0.1 route-map map-tag in
```

|                     | Command                                      | Description                                            |
|---------------------|----------------------------------------------|--------------------------------------------------------|
| Related<br>Commands | <b>neighbor soft-reconfiguration inbound</b> | Stores the routing information sent from the BGP peer. |
|                     | <b>show ip bgp</b>                           | Displays the BGP route entry.                          |

**Platform Description** None

## 5.111 neighbor route-reflector-client

Use this command to configure the local device as the route reflector and specifies its client. Use the **no** or **default** form of this command to restore the default setting.

**neighbor** *peer-address* **route-reflector-client**

**no neighbor** *peer-address* **route-reflector-client**

**default neighbor** { *peer-address* | *peer-group-name* } **route-reflector-client**

| Parameter   | Parameter              | Description                                             |
|-------------|------------------------|---------------------------------------------------------|
| Description | <i>peer-address</i>    | IP address of the peer, IPv4 or IPv6 address            |
|             | <i>peer-group-name</i> | Name of the peer. The name cannot exceed 32 characters. |

**Defaults** This function is disabled by default.

**Command Mode** BGP configuration mode, BGP IPv4/IPv6 Unicast address family configuration mode, BGP IPv4/IPv6 VRF address family configuration mode, BGP L2VPN EVPN address family configuration mode or BGP Scope configuration mode.

**Usage** By default, all IBGP speakers in the autonomous system must establish neighbor relationship with each other. The BGP speaker does not forward the routes learned from an IBGP peer to other IBGP peers to avoid route loop.

**Guide** This command can be used to set route reflector, so that there is no need for all IBGP speakers to establish full neighboring relationship between each other. This will allow the route reflector to forward learned IBGP routes to other IBGP peers.

**Configuration Examples** The following example configures the local device as the route reflector and specifies its client.

```
Ruijie(config)# router bgp 65000
Ruijie(config-router)# neighbor 10.0.0.1 route-reflector-client
```

| Command                                | Description                                        |
|----------------------------------------|----------------------------------------------------|
| <b>router bgp</b>                      | Enables the BGP protocol.                          |
| <b>neighbor remote-as</b>              | Configures the BGP peer.                           |
| <b>bgp cluster-id</b>                  | Configures the cluster ID of the route reflectors. |
| <b>bgp client-to-client reflection</b> | Enables the route reflection between clients       |

**Platform**

**Description** None

## 5.112 neighbor send-community

Use this command to transmit community attributes to the specified BGP neighbor. Use the **no** or **default** form of this command to restore the default setting.

**neighbor** {*peer-address* | *peer-group-name*} **send-community** [**both** | **standard** | **extended**]

**no neighbor** {*peer-address* | *peer-group-name*} **send-community** [**both** | **standard** | **extended**]

**default neighbor** { *peer-address* | *peer-group-name* } **send-community** [ **both** | **standard** | **extended** ]

| Parameter | Parameter | Description |
|-----------|-----------|-------------|
|-----------|-----------|-------------|

|                    |                        |                                                   |
|--------------------|------------------------|---------------------------------------------------|
| <b>Description</b> | <i>peer-address</i>    | IP address of the peer, IPv4 or IPv6 address      |
|                    | <i>peer-group-name</i> | Name of the peer group of up to 32 characters     |
|                    | <b>both</b>            | Transmits both standard and extended communities. |
|                    | <b>standard</b>        | Transmits the standard community only.            |
|                    | <b>extended</b>        | Transmits the extended community only.            |

**Defaults** This function is disabled by default.

**Command Mode** BGP configuration mode, BGP IPv4 Unicast VRF address family configuration mode, BGP IPv6 Unicast/VRF address family configuration mode, BGP L2VPN EVPN address family configuration mode, BGP scope configuration mode

**Usage**

**Guide** This command transmits the community to the neighbor or neighbor group.

**Configuration Examples** The following example transmits community attributes to the specified BGP neighbor.

```
Ruijie(config-router)# neighbor 10.1.1.1 send-community both
```

|                         | Command                   | Description                 |
|-------------------------|---------------------------|-----------------------------|
| <b>Related Commands</b> | <b>router bgp</b>         | Enables the BGP protocol.   |
|                         | <b>neighbor remote-as</b> | Configures the BGP peer.    |
|                         | <b>ip community-list</b>  | Creates the community list. |

**Platform**

**Description** None

## 5.113 neighbor shutdown

Use this command to disconnect the BGP connection established with the specified BGP peer. Use the **no** or **default** form of this command to restore the default setting.

**neighbor** {*peer-address* | *peer-group-name*} **shutdown**

**no neighbor** {*peer-address* | *peer-group-name*} **shutdown**

**default neighbor** { *peer-address* | *peer-group-name* } **shutdown**

|                              | Parameter              | Description                                   |
|------------------------------|------------------------|-----------------------------------------------|
| <b>Parameter Description</b> | <i>peer-address</i>    | IP address of the peer, IPv4 or IPv6 address  |
|                              | <i>peer-group-name</i> | Name of the peer group of up to 32 characters |

**Defaults** This function is disabled by default.

**Command Mode** BGP configuration mode, BGP IPv4/IPv6 VRF address family configuration mode or BGP Scope configuration mode.



This command is used to disconnect valid connection established with the specified peer (group), and delete all associated routing information. However, this command still keeps the configuration information of that specified peer (group).

**Usage****Guide**

If the BGP peer group is specified, all members of the peer group adopt the settings of this command. If this command is set for a member of the peer, the setting will overwrite the setting for the group.

**Configuration**

The following example disconnects the BGP connection established with the specified BGP peer.

**Examples**

```
Ruijie(config)# router bgp 60
Ruijie(config-router)# neighbor 10.0.0.1 shutdown
```

**Related****Commands**

| Command                    | Description                         |
|----------------------------|-------------------------------------|
| <b>router bgp</b>          | Enables the BGP protocol.           |
| <b>neighbor remote-as</b>  | Configures the BGP peer.            |
| <b>show ip bgp summary</b> | Displays the BGP connection status. |

**Platform****Description**

None

## 5.114 neighbor soft-reconfiguration inbound

Use this command to store the routing information sent from the BGP peer. Use the **no** or **default** form of this command to restore the default setting.

**neighbor** {*peer-address* | *peer-group-name*} **soft-reconfiguration inbound**

**no neighbor** {*peer-address* | *peer-group-name*} **soft-reconfiguration inbound**

**default neighbor** { *peer-address* | *peer-group-name* } **soft-reconfiguration inbound**

**Parameter****Description**

| Parameter              | Description                                   |
|------------------------|-----------------------------------------------|
| <i>peer-address</i>    | IP address of the peer, IPv4 or IPv6 address  |
| <i>peer-group-name</i> | Name of the peer group of up to 32 characters |

**Defaults**

This function is disabled by default.

**Command****Mode**

BGP configuration mode, BGP IPv4 Unicast VRF address family configuration mode, BGP IPv6 Unicast/VRF address family configuration mode, BGP VPNv4/VPNv6 address family configuration mode, BGP scope configuration mode

This command restarts the BGP session, and keeps the unchanged routing information sent from the BGP peer (group).

**Usage**

Executing this command will consume more memories. If both parties support the route refresh function, this command becomes unnecessary. You may run the **show ip bgp neighbors** command to judge whether the peer can support the route refresh function.

**Guide**

If the BGP peer group is specified, all members of the peer group adopt the settings of this

command. If this command is set for a member of the peer, the setting will overwrite the setting for the group.

### Configuration Examples

The following example stores the routing information sent from the BGP peer.

```
Ruijie(config)# router bgp 65000
Ruijie(config-router)# neighbor 10.0.0.1 soft-reconfiguration inbound
```

### Related Commands

| Command                      | Description                               |
|------------------------------|-------------------------------------------|
| <b>router bgp</b>            | Enables the BGP protocol.                 |
| <b>neighbor remote-as</b>    | Configures the BGP peer.                  |
| <b>show ip bgp neighbors</b> | Displays the information of the BGP peer. |
| <b>clear ip bgp</b>          | Resets the BGP peer session.              |

### Platform

**Description** None

## 5.115 neighbor timers

In specifying BGP peer to establish the BGP connection, use this command to set the keepalive and holdtime time values used for establishing the BGP connection. Use the **no** or **default** form of this command to restore the default setting.

**neighbor** {*peer-address* | *peer-group-name*} **timers** *keepalive holdtime [minimum-holdtime]* | **connect connect-retry** }

**no neighbor** [*peer-address* | *peer-group-name*] **timers** [ **connect** ]

**default neighbor** { *peer-address* | *peer-group-name* } **timers** [ **connect** ]

### Parameter Description

| Parameter               | Description                                                                                                                            |
|-------------------------|----------------------------------------------------------------------------------------------------------------------------------------|
| <i>peer-address</i>     | IP address of the peer, IPv4 or IPv6 address                                                                                           |
| <i>peer-group-name</i>  | Name of the peer group of up to 32 characters                                                                                          |
| <i>keepalive</i>        | Time interval to send the KEEPALIVE message to the BGP peer.<br>Range: 0-65535 seconds                                                 |
| <i>holdtime</i>         | Time interval to consider the BGP peer alive<br>Range: 0-65535 seconds                                                                 |
| <i>minimum-holdtime</i> | Allows a minimum holdtime value of neighbor advertisement. It is unrestricted when the value is 0.<br>The range is 0 to 65535 seconds. |
| <i>connect-retry</i>    | The value of the connect-retry timer is 15s.                                                                                           |

### Defaults

*keepalive*: 60 seconds  
*holdtime*: 180 seconds  
*minimum-holdtime*: 0 seconds  
connect-retry: 15 seconds

**Command** BGP configuration mode, BGP IPv4 VRF address family configuration mode, BGP IPv6 VRF address family configuration mode or BGP Scope configuration mode.

**Mode**

A proper keepalive value must not exceed one-third of the holdtime value.

If the time is configured for an individual peer or a peer group, that peer or peer-group will use its time to replace the global time configuration and connect the peer.

**Usage**

**Guide** If the BGP peer group is specified, all members of the peer group adopt the settings of this command. If this command is set for a member of the peer, the setting will overwrite the setting for the group.

**Configuration** The following example sets the keepalive and holdtime time values used for establishing the BGP connection.

**Examples**

```
Ruijie(config)# router bgp 65000
Ruijie(config-router)# neighbor 10.0.0.1 80 240
```

The following example sets the connect-retry time values used for establishing the BGP connection.

```
Ruijie(config)# router bgp 65000
Ruijie(config-router)# neighbor 10.0.0.1 timers connect 100
```

**Related Commands**

| Command           | Description                                      |
|-------------------|--------------------------------------------------|
| <b>router bgp</b> | Enables the BGP protocol.                        |
| <b>timers bgp</b> | Sets the keepalive and holdtime values globally. |

**Platform**

**Description** None

## 5.116 neighbor unsuppress-map

Use this command to selectively advertise routing information suppressed by aggregate-address command. Use the **no** or **default** form of this command to restore the default setting.

**neighbor** {*peer-address* | *peer-group-name*} **unsuppress-map** *map-tag*

**no neighbor** {*peer-address* | *peer-group-name*} **unsuppress-map** *map-tag*

**default neighbor** { *peer-address* | *peer-group-name* } **unsuppress-map** *map-tag*

**Parameter Description**

| Parameter              | Description                                   |
|------------------------|-----------------------------------------------|
| <i>peer-address</i>    | IP address of the peer                        |
| <i>peer-group-name</i> | Name of the peer group of up to 32 characters |
| <i>map-tag</i>         | Name of the route-map of up to 32 characters  |

**Defaults** This function is disabled by default.

**Command Mode** BGP configuration mode, BGP IPv4 Unicast/VRF address family configuration mode, BGP IPv6 Unicast/VRF address family configuration mode, BGP L2VPN EVPN address family configuration mode BGP VPNv4/VPNv6 address family configuration mode, BGP scope configuration mode

This command advertises the specified suppressed routes.

**Usage Guide** If the BGP peer group is specified, all members of the peer group adopt the settings of this command. If this command is set for a member of the peer, the setting will overwrite the setting for the group.

The following example selectively advertises routing information suppressed by aggregate-address command.

**Configuration Examples**

```
Ruijie(config)# router bgp 65000
Ruijie(config-router)# neighbor 10.0.0.1 unsuppress-map
unspress-route
```

**Related Commands**

| Command                   | Description                       |
|---------------------------|-----------------------------------|
| <b>router bgp</b>         | Enables the BGP protocol.         |
| <b>neighbor remote-as</b> | Configures the BGP peer.          |
| <b>aggregate-address</b>  | Configures the aggregate address. |
| <b>route-map</b>          | Configures the route-map          |

**Platform**

**Description** None

## 5.117 neighbor update-delay

Use this command to configure the time of BGP delayed advertisement for first routes. Use the **no** or **restore** form of the command to restore the default setting.

**neighbor** { *peer-address* | *peer-group-name* } **update-delay** *time*

**no neighbor** { *peer-address* | *peer-group-name* } **update-delay**

**default neighbor** { *peer-address* | *peer-group-name* } **update-delay**

**Parameter Description**

| Parameter              | Description                                         |
|------------------------|-----------------------------------------------------|
| <i>peer-address</i>    | IP address of the peer, IPv4 or IPv6 address        |
| <i>peer-group-name</i> | Name of the peer group of up to 32 characters       |
| <i>time</i>            | Time of BGP delayed advertisement for first routes. |

**Defaults** The function is disabled by default.

**Command Mode** BGP configuration mode/ BGP IPv4 VRF address family configuration mode/ BGP IPv6 VRF address family configuration mode/ BGP scope configuration mode

After BGP starts, BGP peers negotiate to establish the neighborhood before sending route information (update packets).

**Usage**

In addition, after **update-delay** is configured on the local end, a specific neighbor sends route

**Guide**

information to the local end, the local end will send out the route information after the delay time.

If the BGP peer group is specified, all members of the peer group adopt the settings of this command.

**Configuration**

The following example sets the delayed time to 60s.

**Examples**

```
Ruijie(config)# router bgp 65000
Ruijie(config-router)# neighbor 10.0.0.1 update-delay 60
```

**Platform****Description**

N/A

## 5.118 neighbor update-source

Use this command to configure the interface for BGP connection of the IBGP peer..

**neighbor** { *peer-address* | *peer-group-name* } **update-source** {interface-type interface-number | address }

Use the **no** form of the command to remove the source address configuration for the BGP peer.

**no neighbor** {*peer-address* | *peer-group-name*} **update-source**

Use the **default** form of the command to restore the default settings.

**default neighbor** { *peer-address* | *peer-group-name* } **update-source**

**Parameter****Description**

| Parameter                                        | Description                                                                                                                        |
|--------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------|
| <i>peer-address</i>                              | IP address of the peer, IPv4 or IPv6 address                                                                                       |
| <i>peer-group-name</i>                           | Name of the peer group of up to 32 characters                                                                                      |
| <i>interface-type</i><br><i>interface-number</i> | Interface name                                                                                                                     |
| <i>address</i>                                   | The interface address which is used for BGP connection. The address type ( IPv4 or IPv6) must be same as that of the peer address. |

**Defaults**

The local interface is used as the egress interface by default.

**Command****Mode**

BGP configuration mode/ IPv4 VRF address family configuration mode/ IPv6 VRF address family configuration mode/ Scope configuration mode

**Usage**

You can use this command to enable the loopback interface to establish a BGP connection with the

**Guide**

peer.

The interface address specified for BGP connection must be valid in local, otherwise the BGP connection may be faulty.

All members in a BGP peer group inherit the settings of this command. Particularly, if the interface address is used, only the member whose address type is same as the interface address's can inherit the settings of this command.

If the IPv6 address of the loopback interface is used for neighbor connection, both peers need to be configured with the loopback interface. The BGP connection can be established only when the address of the egress interface on the peer is same as that of the neighbor in local.

A loopback interface address can be configured on different interfaces. You need to specify only the interface name,

The peer configured with the IPv6 address of loopback interface support only one-hop BGP neighbor connection.

**Configuration Examples**

The following example establishes the BGP connection.

```
Ruijie(config)# router bgp 65000
Ruijie(config-router)# neighbor 10.0.0.1 update-source loopback 1
```

**Related Commands**

| Command                   | Description               |
|---------------------------|---------------------------|
| <b>router bgp</b>         | Enables the BGP protocol. |
| <b>neighbor remote-as</b> | Configures the BGP peer.  |

**Platform**

**Description** None

## 5.119 neighbor version

Use this command to display the number of the BGP protocol version used by the specific BGP neighbor. Use the **no** or **default** form of this command to restore the default setting.

**neighbor** { *peer-address* | *peer-group-name* } **version** 4

**no neighbor** { *peer-address* | *peer-group-name* } **version**

**default neighbor** { *peer-address* | *peer-group-name* } **version**

| Parameter              | Description                                   |
|------------------------|-----------------------------------------------|
| <i>peer-address</i>    | IP address of the peer                        |
| <i>peer-group-name</i> | Name of the peer group of up to 32 characters |
| 4                      | Version number                                |

**Defaults** The default version number is 4.

**Command Mode** BGP configuration mode, BGP IPv4/IPv6 VRF address family configuration mode or BGP Scope configuration mode

**Usage****Guide**

When the command is used, BGP will lose the version negotiation function.

**Configuration**

The following example displays the number of the BGP protocol version used by the specific BGP neighbor.

**Examples**

```
Ruijie(config-router)# neighbor 10.1.1.1 version 4
```

**Related****Commands**

| Command                   | Description               |
|---------------------------|---------------------------|
| <b>router bgp</b>         | Enables the BGP protocol. |
| <b>neighbor remote-as</b> | Configures the BGP peer.  |

**Platform****Description**

None

## 5.120 neighbor weight

Use this command to set the weight for the specific neighbor. Use the **no** or **default** form of this command to restore the default setting.

**neighbor** { *peer-address* | *peer-group-name* } **weight** *number*

**no neighbor** { *peer-address* | *peer-group-name* } **weight**

**default neighbor** { *peer-address* | *peer-group-name* } **weight**

**Parameter****Description**

| Parameter              | Description                                   |
|------------------------|-----------------------------------------------|
| <i>peer-address</i>    | IP address of the peer                        |
| <i>peer-group-name</i> | Name of the peer group of up to 32 characters |
| <i>number</i>          | Weight, in the range from 0 to 65535.         |

**Defaults**

No weight is configured for the specific neighbor by default. In this case, the learned route weight is 0 and the locally generated route's weight is 32768 initially.

**Command****Mode**

BGP configuration mode, BGP IPv4 Unicast/VRF address family configuration mode, BGP IPv6 Unicast/VRF address family configuration mode, BGP scope configuration mode and BGP L2VPN EVPN family address configuration mode

**Usage****Guide**

When the command is used, routes learnt from the neighbor use this value as the initial weight value. The higher the weight, the higher the priority is.

Executing the **set weight** command in the route map of the neighbor will overwrite this value.

**Configuration****Examples**

The following example sets the weight for the specific neighbor.

```
Ruijie(config-router)# neighbor 10.1.1.1 weight 73
```

**Related**

| Command | Description |
|---------|-------------|
|---------|-------------|

|                 |                           |                           |
|-----------------|---------------------------|---------------------------|
| <b>Commands</b> | <b>router bgp</b>         | Enables the BGP protocol. |
|                 | <b>neighbor remote-as</b> | Configures the BGP peer.  |

**Platform**

**Description** None

## 5.121 network

Use this command to configure the network information to be advertised by the local BGP speaker. Use the **no** or **default** form of this command to restore the default setting.

**network** *network-number* [**mask** *mask*] [**route-map** *map-tag*] [**backdoor**]

**no network** *network-number* [**mask** *mask*] [**route-map** *map-tag*] [**backdoor**]

**default network** *network-number* [**mask** *mask*] [**route-map** *map-tag*] [**backdoor** ]

| <b>Parameter</b><br><b>Description</b> | <b>Parameter</b>      | <b>Description</b>                           |
|----------------------------------------|-----------------------|----------------------------------------------|
|                                        | <i>network-number</i> | Network number                               |
|                                        | <i>mask</i>           | Subnet mask                                  |
|                                        | <i>map-tag</i>        | Name of the route-map of up to 32 characters |
|                                        | <b>backdoor</b>       | The route is a backdoor route.               |

**Defaults** No network information is specified by default.

**Command Mode** BGP configuration mode, BGP IPv4/IPv6 Unicast address family configuration mode, BGP IPv4/IPv6 VRF address family configuration mode or BGP Scope configuration mode.

**Usage Guide** This command allows injecting the IGP route into the BGP routing table. The network information advertised can be direct route, static route and dynamic route. The "route-map" can be used to modify the network information.

**Configuration Examples** The following example configures the network information to be advertised by the local BGP speaker.

```
Ruijie(config)# router bgp 65000
Ruijie(config-router)# network 10.0.0.1 mask 255.255.0.0
```

| <b>Related Commands</b> | <b>Command</b>                 | <b>Description</b>                   |
|-------------------------|--------------------------------|--------------------------------------|
|                         | <b>router bgp</b>              | Enables the BGP protocol.            |
|                         | <b>redistribute</b>            | Configures the route redistribution. |
|                         | <b>Network synchronization</b> | Enables network synchronization.     |

**Platform**

**Description** None



## 5.122 network synchronization

Use this command to advertise the network information after the local BGP speaker is synchronized with the local device. Use the **no** or **default** form of this command to directly advertise the network information.

**network synchronization**

**no network synchronization**

**default network synchronization**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** This function is enabled by default.

**Command Mode** BGP configuration mode, BGP IPv4/IPv6 Unicast address family configuration mode, BGP IPv4/IPv6 VRF address family configuration mode or BGP Scope configuration mode.

**Usage Guide** This command is used to modify the status of the network during the process of advertisement. It is not recommended to turn off this switch lest route black hole is caused.

**Configuration Examples** The following example advertises the network information after the local BGP speaker is synchronized with the local device.

```
Ruijie(config)# router bgp 65000
Ruijie(config-router)# network synchronization
```

| Related Commands | Command             | Description                             |
|------------------|---------------------|-----------------------------------------|
|                  | <b>router bgp</b>   | Enables the BGP protocol.               |
|                  | <b>redistribute</b> | Configures the route redistribution.    |
|                  | <b>network(BGP)</b> | Configures the route to be distributed. |

**Platform**

**Description** None

## 5.123 overflow memory-lack

Use this command to allow BGP to enter the OVERFLOW state when the memory is insufficient. Use the **no** or **default** form of this command to disable this function.

**overflow memory-lack**

**no overflow memory-lack**

**default overflow memory-lack**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** Allow the BGP to enter the OVERFLOW state when the memory is insufficient.

### Command

**Mode** BGP configuration mode or BGP Scope Global configuration mode

In the BGP OVERFLOW state, the newly-learned routes are discarded, which prevents the memory from increasing.

When this function is enabled, if the BGP address family is in the OVERFLOW state, the newly-learned routes will be discarded, which may result in network loop. To prevent this, BGP generates a default route directing to the NULL interface, and the default route will always exist in the OVERFLOW state.

### Usage

**Guide** Use the **clear bgp {addressfamily|all} \*** command to reset the BGP and clear the OVERFLOW state in the BGP address family.

Use the no option to disallow the BGP to enter the OVERFLOW state when the memory is insufficient, which may lead to the continuous exhaustion of the memory resources. When the memory has been exhausted to a certain degree, BGP will break down all neighbors and delete all learned routes.

### Configuration

The following example sets BGP not to enter the OVERFLOW configuration status when the memory is insufficient.

### Examples

```
Ruijie(config)# router bgp 65000
Ruijie(config-router)# no overflow memory-lack
```

### Related

#### Commands

| Command                                       | Description                                     |
|-----------------------------------------------|-------------------------------------------------|
| <b>clear bgp { addressfamily all } *</b>      | Resets the BGP address family.                  |
| <b>show bgp { addressfamily all } summary</b> | Displays the summary of the BGP address family. |

### Platform

**Description** None

## 5.124 rd

Use this command to configure a RD value for the EVI instance. Use the **no** or **restore** form of this command to restore the default settings.

```
rd { auto | rd_value }
```

```
no rd { auto | rd_value }
```

```
default rd
```

| Parameter | Parameter | Description |
|-----------|-----------|-------------|
|-----------|-----------|-------------|

|                    |                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|--------------------|-----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b> | <b>auto</b>     | Generates the RD value automatically.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|                    | <i>rd_value</i> | <p>Indicates value of the RD.</p> <p>There are 3 forms of <i>rd_value</i>:</p> <ol style="list-style-type: none"> <li><i>rd_value</i> = <i>as_num</i>:<i>nn</i><br/>The <i>as_num</i> indicates the public AS number (2 bytes) and <i>nn</i> is customized. The range is from 0 to 4,294,967,295.</li> <li><i>rd_value</i> = <i>ip_addr</i>:<i>nn</i><br/>The <i>ip_add</i> refers to the global IP address and <i>nn</i> is customized. The range is from 0 to 65,535.</li> <li><i>rd_value</i> = <i>as4_num</i>:<i>nn</i><br/>The <i>as4_num</i> indicates the public AS number (2 bytes) and <i>nn</i> is customized. The range is from 0 to 65,535.<br/>The 4-byte AS notation range is from 1 to 4,294,967,295, represented as from 1 to 65535.65535 in dot mode.</li> </ol> |


**Defaults** The RD value is not configured by default.


**Command**

**Mode** evpn-vni configuration mode

If an EVI is configured with a RD value, the RD value cannot be revised. If you want to revise it, you can only delete the EVI first and then configure a new RD value for it. One EVI can be configured with one RD value only.

**Usage Guide**

 The RD format in 4-byte AS is **AS4:NN**. The **AS4** supports demical and dot mode. The range of **AS4** is from 1 to 4,294,967,295, represented as from 1 to 65535.65535 in dot mode. The range of **NN** is from 1 to 65,535.

 For AS number in the range of 1 to 65,535, it will be saved in the format of 2-byte AS, because under this condition, the demical and dot mode AS are the same.



The following example sets RD for EVI 100. The value is 100 : 1.

```
Ruijie(config)# evpn
Ruijie(config-evpn)# vni 100
Ruijie(config-evpn-vni)# rd 100:1
```

**Configuration Examples**

The following example sets RD for EVI 200. The value is auto.

```
Ruijie(config)# evpn
Ruijie(config-evpn)# vni 200
Ruijie(config-evpn-vni)# rd auto
```

**Platform**

**Description** N/A

## 5.125 redistribute

Use this to redistribute routes between the other routing protocol and the BGP. Use the **no** or **default** form of this command to restore the default setting.

**redistribute** *protocol-type* [**route-map** *map-tag*] [**metric** *metric-value*]

**no redistribute** *protocol-type* [**route-map** *map-tag*] [**metric**]

**default redistribute protocol-type** [ **route-map** *map-tag* ] [ **metric** ]

**Parameter Description**



| Parameter                         | Description                                                                           |
|-----------------------------------|---------------------------------------------------------------------------------------|
| <i>protocol-type</i>              | The source protocol types for redistributing routes, including connected, static, RIP |
| <b>route-map</b> <i>map-tag</i>   | Specifies the route map.<br>No route map is associated with by default.               |
| <b>metric</b> <i>metric-value</i> | Sets the default metric of the routes to be redistributed, null by default.           |

**Defaults** This function is disabled by default.

**Command Mode** BGP configuration mode, BGP IPv4/IPv6 Unicast address family configuration mode, BGP IPv4/IPv6 VRF address family configuration mode or BGP Scope configuration mode.

When a switch supports multiple routing protocols, the coordination between these protocols becomes an important task. The switch may run multiple routing protocols at the same time, so it should redistribute a protocol's information to another protocol. This is applicable to all IP routing protocols.

**Usage Guide**

-  When you configure the **no** form of this command with parameters, the corresponding parameter configuration will be removed. The no form removes redistribution without any parameters configured.
-  The route metric generated by the route-map command takes precedence over the one generated by the metric option of this command. If both are unavailable, the redistributed one is used.

**Configuration Examples**

The following example redistributes routes between the other routing protocol and the BGP.

```
Ruijie(config-router)# redistribute static route-map static-rmap
```

**Related Commands**

| Command                 | Description                          |
|-------------------------|--------------------------------------|
| <b>show ip protocol</b> | Displays the protocol configuration. |

**Platform Description**

None

## 5.126 redistribute ospf

Use this command to redistribute routes between OSPF and BGP. Use the **no** or **default** form of this command to restore the default setting.

**redistribute ospf** *process-id* [**route-map** *map-tag*] [**metric** *metric-value*] [**match internal external** [1|2] **nssa-external** [1|2]]

**no redistribute ospf** *process-id* [**route-map** *map-tag*] [**metric** *metric-value*] [**match internal external** [1|2] **nssa-external** [1|2]]

**default redistribute ospf** *process-id* [ **route-map** *map-tag* ] [ **metric** ] [ **match** { **internal** | **external** [ 1 | 2 ] } | **nssa-external** [ 1 | 2 ] }

**Parameter Description**


| Parameter                         | Description                                                                                                                  |
|-----------------------------------|------------------------------------------------------------------------------------------------------------------------------|
| <i>process-id</i>                 | OSPF process ID to be redistributed                                                                                          |
| <b>route-map</b> <i>map-tag</i>   | Specifies the route map.<br>No route map is associated by default.                                                           |
| <b>metric</b> <i>metric-value</i> | Sets the default metric of the routes to be redistributed, null by default.                                                  |
| <b>match</b>                      | Matches the sub type of OSPF routes.                                                                                         |
| <b>internal</b>                   | Matches the internal OSPF routes, the default configuration.                                                                 |
| <b>external</b> [ 1   2 ]         | Matches the external OSPF routes. You can specify the concrete type (v1 or v2) or v1 and v2 without indication.              |
| <b>nssa-external</b> [ 1   2 ]    | Matches the NSSA-external type of OSPF routes. You can specify the concrete type (v1 or v2) or v1 and v2 without indication. |


**Defaults** This function is disabled by default.

**Command Mode** BGP configuration mode, BGP IPv4/IPv6 Unicast address family configuration mode, BGP IPv4/IPv6 VRF address family configuration mode or BGP Scope configuration mode.

When a switch supports multiple routing protocols, the coordination between these protocols becomes an important task. The switch may run multiple routing protocols at the same time, so it should redistribute a protocol's information to another protocol.

**Usage Guide**

 When you configure the **no** form of this command with parameters, the corresponding parameter configuration will be removed. The **no** form removes redistribution without any parameters configured.

 The filtering rule of OSPF routing: filtering the OSPF routing type according to the configured match option before filtering the route-map rule. The route metric generated by the **route-map** command takes precedence over the one generated by the metric option of this command. If both are not available, the redistributed one is used.

**Configuration** The following example redistributes routes between OSPF and BGP.

**Examples**

```
Ruijie(config-router)# redistribute ospf 2 route-map static-rmap
```

**Related  
Commands**

| Command                 | Description                          |
|-------------------------|--------------------------------------|
| <b>show ip protocol</b> | Displays the protocol configuration. |

**Platform****Description** None

## 5.127 redistribute isis

Use this command to redistribute routes between ISIS and BGP. Use the **no** or **default** form of this command to restore the default settings.

**redistribute isis** [*isis-tag*] [**route-map** *map-tag*] [**metric** *metric-value*] [**level-1** | **level-1-2** | **level-2**]

**no redistribute isis** [*isis-tag*] [**route-map** *map-tag*] [**metric**] [**level-1** | **level-1-2** | **level-2**]

**default redistribute isis** [*isis-tag*] [**route-map** *map-tag*] [**metric**] [**level-1** | **level-1-2** | **level-2**]

**Parameter  
Description**

| Parameter                         | Description                                                                 |
|-----------------------------------|-----------------------------------------------------------------------------|
| <i>isis-tag</i>                   | (Optional)ISIS process ID to be redistributed                               |
| <b>route-map</b> <i>map-tag</i>   | Specifies the route map.<br>No route map is associated by default.          |
| <b>metric</b> <i>metric-value</i> | Sets the default metric of the routes to be redistributed, null by default. |
| <b>level-1</b>                    | Redistributes level-1 ISIS routes.                                          |
| <b>level-1-2</b>                  | Redistributes level-1 and level-2 ISIS routes.                              |
| <b>level-2</b>                    | Redistributes level-2 ISIS routes.                                          |

**Defaults**

This function is disabled by default.

**Command  
Mode**

BGP configuration mode, BGP IPv4/IPv6 Unicast address family configuration mode, BGP IPv4/IPv6 VRF address family configuration mode or BGP Scope configuration mode.

**Usage  
Guide**

When a switch supports multiple routing protocols, the coordination between these protocols becomes an important task. The switch may run multiple routing protocols at the same time, so it should redistribute a protocol's information to another protocol. This is applicable to all IP routing protocols.

When you configure the **no** form of this command with parameters, the corresponding parameter configuration will be removed. The **no** form removes redistribution without any parameters configured.

The filtering rule of ISIS routing is: filtering the ISIS routing type according to the configured level option before filtering the route-map rule. The route metric generated by the route-map command takes precedence over the one generated by the metric option of this command. If both are unavailable, the redistributed one is used.

**Configuration** The following example redistributes routes between ISIS and BGP.

**Examples**

```
Ruijie(config-router)# redistribute isis route-map static-rmap
```

| Related Commands | Command                 | Description                          |
|------------------|-------------------------|--------------------------------------|
|                  | <b>show ip protocol</b> | Displays the protocol configuration. |

**Platform**

**Description** None

## 5.128 route-target

Use this command to configure a RT (Route Target) for EVI. Use the **no** or **restore** form of this command to restore the default settings.

**route-target** { import | export | both } { auto | *rt\_value* }

**no route-target** { import | export | both } { auto | *rt\_value* }

**default route-target** { import | export | both } { auto | *rt\_value* }

| Parameter          | Parameter       | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|--------------------|-----------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b> | <b>auto</b>     | Generates the RD value automatically.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|                    | <b>import</b>   | Sets the import RT value.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|                    | <b>export</b>   | Sets the export RT value.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|                    | <b>both</b>     | Sets the import and export RT value.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|                    | <i>rt_value</i> | <p>Indicates value of the RT.</p> <p>There are 3 forms of <i>rt_value</i>:</p> <ol style="list-style-type: none"> <li><i>rt_value</i> = as_num:nn<br/>The as_num indicates the public AS number (2 bytes) and nn is customized. The range is from 0 to 4,294,967,295.</li> <li><i>rt_value</i> = ip_addr:nn<br/>The ip_add refers to the global IP address and nn is customized. The range is from 0 to 65,535.</li> <li><i>rt_value</i> = as4_num:nn<br/>The as4_num indicates the public AS number (2 bytes) and nn is customized. The range is from 0 to 65,535.</li> </ol> <p>The 4-byte AS notation range is from 1 to 4,294,967,295, represented as from 1 to 65535.65535 in dot mode.</p> |

**Defaults** The RT value is not configured by default.

**Command**

**Mode** evpn-vni configuration mode

**Usage** One EVI can be configured with multiple import and export RT values.

**Guide**

- i The format of auto RT is **AS2:NN**. The **AS2** is the AS number of 2B. If an AS number of 4B is configured, it will be split into two 2B AS number and then be put in the RT. The **nn** indicates value of **vni-id** and has a space of 4B.
- i If the AS number of BGP changes, the auto RT will be changed, too.
- i If the manually configured RT is coherent with the auto RT, both will be displayed. After the **auto** command is configured and the automatically generated RT value is 100 : 1, then if you delete value 100 : 1, only the value not the **auto** command will be deleted.

The following example sets RT for EVI 100. The values are import RT 100:1, 100:4, export RT 100:2, 100:4, and both auto.

```
Ruijie(config)# evpn
Ruijie(config-evpn)# vni 100
Ruijie(config-evpn-vni)# route-target import 100:1
Ruijie(config-evpn-vni)# route-target export 100:2
Ruijie(config-evpn-vni)# route-target both 100:4
Ruijie(config-evpn-vni)# route-target both auto
```

**Configuration**

**Examples**

**Platform**

**Description** N/A

## 5.129 router bgp

Use this command to enable the BGP protocol, configure the local autonomous system number and enter BGP protocol configuration mode. Use the **no** or **default** form of this command to restore the default setting.

**router bgp** *as-number*

**no router bgp** *as-number*

**default router bgp** *as-number*

**Parameter**

**Description**

| Parameter        | Description                                                                                                                                                                                                                   |
|------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>as-number</i> | AS number in the range from 1 to 65535<br>In the 10.4(3) or later versions, the 4-byte AS notation is supported, namely, the new AS notation range is from 1 to 4294967295, represented as from 1 to 65535.65535 in dot mode. |

**Defaults**

This function is disabled by default.

**Command**

**Mode**

Global configuration mode

**Usage**

This command is used to start the BGP protocol.



**Guide** RFC4839 defines a new reserved AS notation 23456, which cannot be used. The original private AS notation in the range from 64512 to 65534 is still effective, 65535 is reserved for special purposes.

RFC 5398 also defines two groups of new reserved AS notation for documents, whose ranges are from 64496 to 64511 and from 65536 to 65551.

**Configuration** The following example enables the BGP protocol.

**Examples** Ruijie(config)# router bgp 65000

**Related  
Commands**

| Command              | Description                                                             |
|----------------------|-------------------------------------------------------------------------|
| <b>ip routing</b>    | Enables IP routing.                                                     |
| <b>bgp router-id</b> | Sets the ID of the device running the BGP protocol                      |
| <b>network</b>       | Sets the network information to be advertised by the local BGP speaker. |

**Platform**

**Description** None

## 5.130 synchronization

Use this command to enable the synchronization mechanism of BGP and IGP routing information. Use the **no** or **default** form of this command to restore the default settings.

**synchronization**

**no synchronization**

**default synchronization**

| Parameter          | Parameter | Description |
|--------------------|-----------|-------------|
| <b>Description</b> | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command  
Mode** BGP configuration mode, BGP IPv4/IPv6 Unicast address family configuration mode, BGP IPv4/IPv6 VRF address family configuration mode or BGP Scope configuration mode.

The synchronization between BGP and IGP aims to prevent the possible route black hole. In any of the two cases below, you may cancel the synchronization mechanism to ensure fast convergence of routing information.

**Usage  
Guide**

- There is no route information which passes through this AS (In general, this AS is an end AS).
- All devices within this AS operate BGP protocol and the full connection relationship is established among all BGP Speakers (The adjacent relationship is established between any two BGP Speakers).

**Configuration** The following example enables the synchronization mechanism of BGP and IGP routing

**Examples**

information.

```
Ruijie(config)# router bgp 65000
Ruijie(config-router)# synchronization
```

**Related****Commands**

| Command           | Description               |
|-------------------|---------------------------|
| <b>router bgp</b> | Enables the BGP protocol. |

**Platform****Description**

None

## 5.131 table-map

Use this command to control the route information distributed to the kernel table. Use the **no** or **default** form of this command to restore the default setting.

**table-map** *route-map-name*

**no table-map**

**default table-map**

**Parameter****Description**

| Parameter             | Description           |
|-----------------------|-----------------------|
| <i>route-map-name</i> | Name of the route-map |

**Defaults**

No table-map is configured by default.

**Command****Mode**

BGP configuration mode, BGP IPv4/IPv6 Unicast address family configuration mode, BGP IPv4/IPv6 VRF address family configuration mode or BGP Scope configuration mode.

**Usage****Guide**

BGP uses the table-map to control the information distributed to the kernel routing table. The table-map is used to modify attributes of that route information, and it only takes effect on the IPv4 address-family.

**Configuration****Examples**

The following example controls the route information distributed to the kernel table.

```
Ruijie(config)# router bgp 65000
Ruijie(config-router)# table-map bgp_tm
```

**Related****Commands**

| Command          | Description              |
|------------------|--------------------------|
| <b>route-map</b> | Configures the route-map |

**Platform****Description**

None

## 5.132 timers bgp

Use this command to adjust the BGP network timer. Use the **no** or **default** form of this command to restore the default value.

**timers bgp** *keepalive holdtime* [*minimum-holdtime*]

**no timers bgp**

**default timers bgp**

| Parameter               | Description                                                                                                                            |
|-------------------------|----------------------------------------------------------------------------------------------------------------------------------------|
| <i>keepalive</i>        | Time interval to send the keepalive message to the BGP peer<br>Range: 0-65535 seconds.                                                 |
| <i>holdtime</i>         | Time interval to consider the BGP peer alive<br>Range: 0-65535 seconds.                                                                |
| <i>Minimum-holdtime</i> | Allows a minimum holdtime value of neighbor advertisement. It is unrestricted when the value is 0.<br>The range is 0 to 65535 seconds. |

**Defaults**  
*keepalive*: 60 seconds  
*holdtime*: 180 seconds  
*minum-holdtime*: 0 seconds

**Command**

**Mode** BGP configuration mode / BGP scope global configuration mode

A proper keepalive value must not exceed one-third of the holdtime value.

**Usage** If the time is configured for an individual peer or a peer group, that peer or peer-group will use its time to replace the global time configuration and connect the peer.

**Guide** If the BGP peer group is specified, all members of the peer group adopt the settings of this command. If this command is set for a member of the peer, the setting will overwrite the setting for the group.

**Configuration Examples** The following example adjusts the BGP network timer.

```
Ruijie(config)# router bgp 65000
Ruijie(config-router)# timers bgp 80 240
```

| Related Commands | Command                | Description                                                       |
|------------------|------------------------|-------------------------------------------------------------------|
|                  | <b>neighbor timers</b> | Sets the keepalive and holdtime values on the basis of neighbors. |

**Platform**

**Description** None

### 5.133 show bgp all

Use this command to display all the address-families information of BGP route. The use of this command is consistent with other BGP's show commands.

Display the parameters of the route information.

```
show bgp all [ community [ community-number [ exact-match ] ] | filter-list path-list-number |
community-list community-name [ exact-match ] | extcommunity-list extcommunity-name | regexp
regexp | quote-regexp regexp | inconsistent-as ]
```

Display the route dampening parameter.

```
show bgp all dampening { flap-statistics | dampened-paths | parameters }
```

Display the related information of the neighbors.

```
show bgp all neighbors [ peer-address [ received-routes | routes | advertised-routes | policy
[ detail ] ] ]
```

```
show bgp all summary
```

Display the update-group information.

```
show bgp [ instance as-num ] all update-group [ neighbor-address | update-group-index ]
[ summary ]
```

Parameter  
Description

| Parameter                                         | Description                                                                                                                                                                                                                                           |
|---------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>community</b> <i>community-number</i>          | Displays the routing information including the specified community value. Community-number can be in the format of AA:NN (autonomous system number / 2-byte number), or the following pre-defined value: internet, no-export, local-as, no-advertise. |
| <b>community-list</b> <i>community-name</i>       | Displays the BGP routing information matching the specified community-list.                                                                                                                                                                           |
| <b>exact-match</b>                                | Routing information exactly matching the community value or community-list.                                                                                                                                                                           |
| <b>dampening dampened-paths</b>                   | Displays the restrained routing information.                                                                                                                                                                                                          |
| <b>dampening flap-statistics</b>                  | Displays the routing dampening statistics.                                                                                                                                                                                                            |
| <b>dampening parameters</b>                       | Displays the routing dampening parameters.                                                                                                                                                                                                            |
| <b>extcommunity-list</b> <i>extcommunity-name</i> | Displays the routing information including the specified extcommunity value.                                                                                                                                                                          |
| <b>filter-list</b> <i>path-list-number</i>        | Displays the routing information matching the filter-list.                                                                                                                                                                                            |

|                                                                             |                                                                                                                                                                                                                                                 |
|-----------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>inconsistent-as</b>                                                      | Displays the routing information of the inconsistent source AS.                                                                                                                                                                                 |
| <b>neighbors</b> [ <i>peer-address</i> ]                                    | Displays all the BGP neighbors' information.                                                                                                                                                                                                    |
| <b>neighbors</b> <i>peer-address</i> <b>received-routes</b>                 | Displays all routing information received from the specified peer (including the accepted and refused route).                                                                                                                                   |
| <b>neighbors</b> <i>peer-address</i> <b>routes</b>                          | Displays all the accepted routing information received from the peer.                                                                                                                                                                           |
| <b>neighbors</b> <i>peer-address</i> <b>advertised-routes</b>               | Displays all the routing information sent to the specified peer.                                                                                                                                                                                |
| <b>neighbors</b> <i>peer-address</i> <b>policy</b>                          | Displays the related routing policy information of BGP neighbors. (General)                                                                                                                                                                     |
| <b>neighbors</b> <i>peer-address</i> <b>policy detail</b>                   | Displays the related routing policy information of BGP neighbors. (Detail)                                                                                                                                                                      |
| <b>quote-regexp</b> <i>regexp</i>                                           | Displays the BGP routing information with the AS path attribute matching the specified regexp within the double quote marks.                                                                                                                    |
| <b>regexp</b> <i>regexp</i>                                                 | Displays the BGP routing information with the AS path attribute matching the specified regexp.                                                                                                                                                  |
| <b>Summary</b>                                                              | Displays BGP neighbor information.                                                                                                                                                                                                              |
| <b>update-group</b> [ <i>neighbor-address</i>   <i>update-group-index</i> ] | Display update-group information.<br>When <i>neighbor-address</i> is specified, display the update-group information of the specified neighbor.<br>When <i>update-group-index</i> is specified, display the specified update-group information. |

**Command****Mode** Privileged EXEC mode**Usage****Guide** N/A

The following example shows all neighbors' information.

```
Ruijie(config)# show bgp all
For address family: IPv4 Unicast
BGP table version is 1, local router ID is 1.2.3.4
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal,
                S Stale
```

**Configuration****Examples**

```
Origin codes: i - IGP, e - EGP, ? - incomplete

      Network          Next Hop          Metric      LocPrf      Weight Path
*> 1.0.0.0            0.0.0.0              0              32768      ?

Total number of prefixes 1

For address family: IPv6 Unicast

BGP table version is 1, local router ID is 1.2.3.4

Status codes: s suppressed, d damped, h history, * valid, > best, i - internal,
               S Stale

Origin codes: i - IGP, e - EGP, ? - incomplete

      Network          Next Hop          Metric      LocPrf      Weight Path
*> 5750:1::/120      ::                  0              32768      ?

Total number of prefixes 1
```

**Related  
Commands**

| Command                      | Description                                        |
|------------------------------|----------------------------------------------------|
| <b>show bgp ipv4 unicast</b> | Displays the IPv4 unicast route information of BGP |

**Platform**

**Description**      None

### 5.134 show bgp ipv4 unicast

Use this command to display the IPv4 unicast route information of BGP.

**show bgp ipv4 unicast** [ vrf *vrf-name* ] [ network [ *network-mask* [ **longer-prefixes** ] ] ]

**show bgp ipv4 unicast** [ vrf *vrf-name* ] **community** *community-number* [ **exact-match** ]

**show bgp ipv4 unicast** [ vrf *vrf-name* ] **community-list** *community-name* [ **exact-match** ]

**show bgp ipv4 unicast** [ vrf *vrf-name* ] **extcommunity-list** *extcommunity-name*

**show bgp ipv4 unicast** [ vrf *vrf-name* ] **dampening** **dampened-paths**

**show bgp ipv4 unicast [ vrf *vrf-name* ] dampening flap-statistics**

**show bgp ipv4 unicast [ vrf *vrf-name* ] filter-list *path-list-number***

**show bgp ipv4 unicast [ vrf *vrf-name* ] inconsistent-as**

**show bgp ipv4 unicast [ vrf *vrf-name* ] prefix-list *ip-prefix-list-name***

**show bgp ipv4 unicast [ vrf *vrf-name* ] quote-regexp *regexp***

**show bgp ipv4 unicast [ vrf *vrf-name* ] regexp *regexp***

**show bgp ipv4 unicast[ vrf *vrf-name* ] route-map *map-tag***

**show bgp ipv4 unicast [ vrf *vrf-name* ] neighbors [ *neighbor-address* [ received-routes | routes | advertised-routes | policy [ detail ] ] ]**

**show bgp ipv4 unicast [ vrf *vrf-name* ] cidr-only**

**Parameter  
Description**

| Parameter                                            | Description                                                                                                                                                                                                                                           |
|------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>vrf-name</i>                                      | VRF name                                                                                                                                                                                                                                              |
| <i>network</i>                                       | Displays the specific routing information in the routing table                                                                                                                                                                                        |
| <i>network-mask</i>                                  | Displays the routing information included in the specified network.                                                                                                                                                                                   |
| <b>longer-prefixes</b>                               | Displays the route map information.                                                                                                                                                                                                                   |
| <b>community</b><br><i>community-number</i>          | Displays the routing information including the specified community value. Community-number can be in the format of AA:NN (autonomous system number / 2-byte number), or the following pre-defined value: internet, no-export, local-as, no-advertise. |
| <b>community-list</b><br><i>community-name</i>       | Displays the BGP routing information matching the specified community-list.                                                                                                                                                                           |
| <b>exact-match</b>                                   | Routing information exactly matching the community value or community-list.                                                                                                                                                                           |
| <b>extcommunity-list</b><br><i>extcommunity-name</i> | Displays the routing information including the specified extcommunity value.                                                                                                                                                                          |
| <b>dampening dampened-paths</b>                      | Displays the restrained routing information.                                                                                                                                                                                                          |
| <b>dampening flap-statistics</b>                     | Displays the routing dampening statistics.                                                                                                                                                                                                            |
| <b>filter-list</b> <i>path-list-number</i>           | Displays the routing information matching the filter-list.                                                                                                                                                                                            |
| <b>inconsistent-as</b>                               | Displays the routing information of the inconsistent source AS.                                                                                                                                                                                       |
| <b>prefix-list</b> <i>ip-prefix-list-name</i>        | Displays the routing information matching the specified prefix-list.                                                                                                                                                                                  |
| <b>quote-regexp</b> <i>regexp</i>                    | Displays the BGP routing information with the AS path attribute matching the specified regexp within the double quote marks.                                                                                                                          |
| <b>regexp</b> <i>regexp</i>                          | Displays the BGP routing information with the AS path attribute matching the specified regexp.                                                                                                                                                        |
| <b>route-map</b> <i>map-tag</i>                      | Displays the routing information matching the specified route-map filtering condition.                                                                                                                                                                |
| <b>neighbors</b>                                     | Displays the BGP IPv4 unicast neighbor information.                                                                                                                                                                                                   |

|                                                                      |                                                                                                               |
|----------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------|
| [ <i>neighbor-address</i> ]                                          |                                                                                                               |
| <b>neighbors</b> <i>neighbor-address</i><br><b>received-routes</b>   | Displays all routing information received from the specified peer (including the accepted and refused route). |
| <b>neighbors</b> <i>neighbor-address</i><br><b>routes</b>            | Displays all the routing information received from the peer and accepted.                                     |
| <b>neighbors</b> <i>neighbor-address</i><br><b>advertised-routes</b> | Displays all the routing information sent to the specified peer.                                              |
| <b>neighbors</b> <i>neighbor-address</i><br><b>policy</b>            | Displays the related routing policy information of BGP neighbors. (General)                                   |
| <b>neighbors</b> <i>neighbor-address</i><br><b>policy detail</b>     | Displays the related routing policy information of BGP neighbors. (Detail)                                    |
| <b>cidr-only</b>                                                     | Displays the routing information without the category.                                                        |

Defaults N/A

### Command

**Mode** Privileged EXEC mode

**Usage** Use this command to view the IPv4 unicast route information of BGP. You can filter the information with the specified parameter to display the matching route information.

### Configuration Examples

The following example displays the IPv4 unicast route information of BGP.

```
Ruijie# show bgp ipv4 unicast
BGP table version is 2, local router ID is 192.168.183.1
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal,
               S Stale
Origin codes: i - IGP, e - EGP, ? - incomplete
   Network      Next Hop      Metric  LocPrf  Path
*>i44.0.0.0    192.168.195.183  0    100    i
*>i64.12.0.0/16 192.168.195.183  0    100    i
*>i172.16.0.0/24 192.168.195.183  0    100    i
*>i202.201.0.0  192.168.195.183  0    100    i
*>i202.201.1.0  192.168.195.183  0    100    i
*>i202.201.2.0  192.168.195.183  0    100    i
*>i202.201.3.0  192.168.195.183  0    100    i
*>i202.201.18.0 192.168.195.183  0    100    i
Total number of prefixes 8
Ruijie# show bgp ipv4 unicast community 11:2222
111:12345
BGP table version is 2, local router ID is 192.168.183.1
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal,
               S Stale
Origin codes: i - IGP, e - EGP, ? - incomplete
   Network      Next Hop      Metric  LocPrf  Path
```



```

*>i202.201.0.0 192.168.195.183 0 100 i
*>i202.201.1.0 192.168.195.183 0 100 i
*>i202.201.2.0 192.168.195.183 0 100 i
*>i202.201.3.0 192.168.195.183 0 100 i
Total number of prefixes 4
Ruijie(config)# ip as-path access-list 5 permit .*
Ruijie# show bgp ipv4 unicast filter-list 5
BGP table version is 2, local router ID is 192.168.183.1
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal,
S Stale
Origin codes: i - IGP, e - EGP, ? - incomplete
Network Next Hop Metric LocPrf Path
*>192.168.88.0 0.0.0.0 32768 ?
Total number of prefixes 1
Ruijie# show ip bgp cidr-only
BGP table version is 2, local router ID is 192.168.183.1
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal,
S Stale
Origin codes: i - IGP, e - EGP, ? - incomplete
Network Next Hop Metric LocPrf Path
*>i64.12.0.0/16 192.168.195.183 0 100 i
*>i172.16.0.0/24 192.168.195.183 0 100 i
Total number of prefixes 2
Ruijie# show bgp ipv4 unicast labels
Network Next Hop In Label/Out Label
1.1.1.1/32 192.167.1.1 17/18
1.1.1.2/32 192.167.1.1 nolabel/19

```

| Field     | Description                                    |
|-----------|------------------------------------------------|
| Network   | Route prefix                                   |
| Nexthop   | Nexthop IP address of the route                |
| In label  | Label assigned by this router (if any).        |
| Out label | Label learnt from the nexthop router (if any). |

**Related  
Commands**

| Command            | Description                                         |
|--------------------|-----------------------------------------------------|
| <b>show ip bgp</b> | Displays the IPv4 unicast route information of BGP. |

**Platform**

**Description** None

## 5.135 show bgp ipv4 unicast dampening parameters

Use this command to display the IPv4 unicast route dampening parameters configured for the BGP.

**show bgp ipv4 unicast [ vrf *vrf-name* ] dampening parameters**

| Parameter   | Parameter       | Description |
|-------------|-----------------|-------------|
| Description | <i>vrf-name</i> | VRF name    |

**Defaults** N/A

**Command**

**Mode** Privileged EXEC mode

**Usage** This command is used to display the IPv4 unicast route dampening parameters configured for BGP.

**Guide**

The following example displays the IPv4 unicast route dampening parameters configured for the BGP.

```
Ruijie(config-router)# bgp dampening 25 10000 10000 200
Ruijie# show bgp ipv4 unicast dampening parameters
dampening 25 10000 10000 200
Dampening Control Block(s):
Reachability Half-Life time : 25 min
Reuse penalty      : 10000
Suppress penalty   : 10000
Max suppress time  : 200 min
Max penalty (ceil) : 29800000
Min penalty (floor) : 5000
```

**Configuration****Examples****Related**

**Commands** N/A

**Platform**

**Description** None

## 5.136 show bgp ipv4 unicast neighbors

Use this command to display the related information of BGP IPv4 unicast neighbor.

**show bgp ipv4 unicast [ vrf *vrf-name* ] neighbors *neighbor-address***

| Parameter   | Parameter                                              | Description                                                                 |
|-------------|--------------------------------------------------------|-----------------------------------------------------------------------------|
| Description | <i>vrf-name</i>                                        | VRF name                                                                    |
|             | <i>neighbor-address</i>                                | Neighbor IPv4 address                                                       |
|             | <b>neighbors <i>neighbor-address</i> policy</b>        | Displays the related routing policy information of BGP neighbors. (General) |
|             | <b>neighbors <i>neighbor-address</i> policy detail</b> | Displays the related routing policy information of BGP neighbors. (Detail)  |

**Command****Mode** Privileged EXEC mode**Usage****Guide** This command is used to view the information of the connection with BGP IPv4 unicast neighbor.

The following example displays the related information of BGP IPv4 unicast neighbor.

```
Ruijie# show bgp ipv4 unicast neighbors
BGP neighbor is 192.168.195.183, remote AS 23, local AS 23, internal link
  BGP version 4, remote router ID 44.0.0.1
  BGP state = Established, up for 00:06:37
  Last read 00:06:37, hold time is 180, keepalive interval is 60 seconds
  Neighbor capabilities:
    Route refresh: advertised and received (old and new)
  Address family IPv4 Unicast: advertised and received
  Graceful restart: advertised and received
  Remote Restart timer is 120 seconds
  Received 14 messages, 0 notifications, 0 in queue
  open message:1 update message:4 keepalive message:9
  refresh message:0 dynamic cap:0 notifications:0
  Sent 12 messages, 0 notifications, 0 in queue
  open message:1 update message:3 keepalive message:8
  refresh message:0 dynamic cap:0 notifications:0
  Route refresh request: received 0, sent 0
  Minimum time between advertisement runs is 0 seconds
  For address family: IPv4 Unicast
  BGP table version 2, neighbor version 1
  Index 2, Offset 0, Mask 0x4
  Inbound soft reconfiguration allowed
  8 accepted prefixes
  0 announced prefixes
  Connections established 2; dropped 1
  Local host: 192.168.195.239, Local port: 1074
  Foreign host: 192.168.195.183, Foreign port: 179
  Nexthop: 192.168.195.239
  Nexthop global: ::
  Nexthop local: ::
  BGP connection: non shared network
  Last Reset: 00:06:43, due to BGP Notification sent
  Notification Error Message: (Cease/Unspecified Error Subcode)
  Using BFD to detect fast fallover
```

**Configuration  
Examples**

**Related****Commands** N/A**Platform****Description** None

## 5.137 show bgp ipv4 unicast paths

Use this command to display the path information of the IPv4 unicast in the route database.

**show bgp ipv4 unicast [ vrf *vrf-name* ] paths**

| Parameter   | Parameter       | Description |
|-------------|-----------------|-------------|
| Description | <i>vrf-name</i> | VRF name    |

**Defaults** N/A**Command****Mode** Privileged EXEC mode**Usage****Guide** This command is used to view the path information in the route database.

The following example displays the path information of the IPv4 unicast in the route database.

**Configuration**

```
Ruijie# show bgp ipv4 unicast paths
```

**Examples**

```
Address Refcnt Path
[0x1d7806a0:0] (67)
[0x1d7389a0:13] (20) 10
```

**Related****Commands** N/A**Platform****Description** None

## 5.138 show bgp ipv4 unicast summary

Use this command to display the related information of BGP IPv4 unicast.

**show bgp ipv4 unicast [ vrf *vrf-name* ] summary**

| Parameter   | Parameter       | Description |
|-------------|-----------------|-------------|
| Description | <i>vrf-name</i> | VRF name    |

**Defaults** N/A

**Command****Mode** Privileged EXEC mode**Usage****Guide** This command is used to display the related information of BGP IPv4 unicast.

The following example displays the related information of BGP IPv4 unicast.

```
Ruijie # show bgp ipv4 unicast summary
BGP router identifier 192.168.183.1, local AS number 23
BGP table version is 2
2 BGP AS-PATH entries
1 BGP community entries
Neighbor V AS MsgRcvd MsgSent TblVer InQ OutQ Up/Down State/PfxRcd
192.168.195.79 4 24 0 0 0 0 0 never Active
192.168.195.183 4 23 17 15 1 0 0 00:09:04 8
Total number of neighbors 2
```

**Configuration****Examples****Related****Commands**

| Command           | Description              |
|-------------------|--------------------------|
| <b>router bgp</b> | Enables the BGP protocol |

**Platform****Description** None

## 5.139 show bgp ipv4 unicast update-group

Use this command to display information about an update-group in the BGP IPv4 unicast address family.

**show bgp ipv4 unicast** [ *vrf vrf-name* ] **update-group** [ *neighbor-address* | *update-group-index* ]  
[ **summary** ]

**Parameter Description**

| Parameter                 | Description                                                                                   |
|---------------------------|-----------------------------------------------------------------------------------------------|
| <i>vrf-name</i>           | Specifies a VRF instance name.                                                                |
| <i>neighbor-address</i>   | Specifies a neighbor that belongs to an update-group whose information needs to be displayed. |
| <i>update-group-index</i> | Specifies an update-group whose information needs to be displayed.                            |
| <b>summary</b>            | Displays neighbor-related information.                                                        |

**Command** Privileged EXEC mode**Mode****Default Level** 14**Usage Guide** This command is used to display information about an update-group in the BGP IPv4 unicast address family.

**Configuration** The following example displays information about an update-group in the BGP IPv4 unicast address family.

**Example**

```
Ruijie#show bgp ipv4 update-group
BGP version 4 update-group 1(ref 2), internal, Address Family: IPv4 Unicast
Update message formated 2, replicated 2
Minimum route advertisement interval is 0 seconds
Minimum AS origination interval is 1 seconds
Format state: Current working
                Refresh blocked
Has 1 members:
    192.168.195.183
```

The following example displays the neighbor summary of update-group 1 in the BGP IPv4 unicast address family.

```
Ruijie # show bgp ipv4 unicast update-group 1 summary
BGP router identifier 192.168.183.1, local AS number 23
BGP table version is 2
2 BGP AS-PATH entries
1 BGP community entries
Neighbor      V   AS  MsgRcvd  MsgSent  TblVer  InQ  OutQ  Up/Down
State/PfxRcd
192.168.195.79 4   24    0        0        0    0    0   never   Active
192.168.195.183 4   23   17       15        1    0    0   00:09:04 8
Total number of neighbors 2
```

Field description:

| Field                 | Description                                                                |
|-----------------------|----------------------------------------------------------------------------|
| BGP router identifier | BGP router ID                                                              |
| local AS number       | Local AS number of BGP                                                     |
| BGP table version     | Version of the BGP routing table                                           |
| BGP AS-PATH entries   | Number of AS path entries                                                  |
| BGP community entries | Number of community attribute entries                                      |
| Neighbor              | Peer address                                                               |
| V                     | Protocol version                                                           |
| AS                    | Peer AS number                                                             |
| MsgRcvd               | Number of received packets                                                 |
| MsgSent               | Number of sent packets                                                     |
| State/PfxRcd          | Status of the neighbor state machine or number of received routing entries |

## 5.140 show bgp ipv6 unicast

Use this command to display the IPv6 unicast routing information of BGP.

**show bgp ipv6 unicast** [ vrf *vrf-name* ] [ *ipv6-prefix* [ **longer-prefixes** ] ]

**show bgp ipv6 unicast** [ vrf *vrf-name* ] **community** *community-number* [**exact-match**]

**show bgp ipv6 unicast** [ vrf *vrf-name* ] **community-list** *community-name* [**exact-match**]

**show bgp ipv6 unicast** [ vrf *vrf-name* ] **extcommunity-list** *extcommunity-name*

**show bgp ipv6 unicast** [ vrf *vrf-name* ] **dampening dampened-paths**

**show bgp ipv6 unicast** [ vrf *vrf-name* ] **dampening flap-statistics**

**show bgp ipv6 unicast** [ vrf *vrf-name* ] **filter-list** *path-list-number*

**show bgp ipv6 unicast** [ vrf *vrf-name* ] **inconsistent-as**

**show bgp ipv6 unicast** [ vrf *vrf-name* ] **prefix-list** *ipv6-prefix-list-name*

**show bgp ipv6 unicast** [ vrf *vrf-name* ] **quote-regexp** *regexp*

**show bgp ipv6 unicast** [ vrf *vrf-name* ] **regexp** *regexp*

**show bgp ipv6 unicast** [ vrf *vrf-name* ] **route-map** *map-tag*

**show bgp ipv6 unicast** [ vrf *vrf-name* ] **neighbors** [ *neighbor-address* [ **received-routes** | **routes** | **advertised-routes** | **policy** [ **detail** ] ] ]

**Parameter  
Description**

| Parameter                                            | Description                                                                                                                                                                                                                                           |
|------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>vrf-name</i>                                      | VRF name                                                                                                                                                                                                                                              |
| <i>IPv6-prefix</i>                                   | Displays the IPv6 routing information included in the specified network. The input format of the routing information prefix is X:X:X:X::X/<0-128>.                                                                                                    |
| <b>longer-prefixes</b>                               | Displays the route map information.                                                                                                                                                                                                                   |
| <b>community</b><br><i>community-number</i>          | Displays the routing information including the specified community value. Community-number can be in the format of AA:NN (autonomous system number / 2-byte number), or the following pre-defined value: internet, no-export, local-as, no-advertise. |
| <b>community-list</b><br><i>community-name</i>       | Displays the BGP routing information matching the specified community-list.                                                                                                                                                                           |
| <b>exact-match</b>                                   | Routing information exactly matches the community value or community-list.                                                                                                                                                                            |
| <b>extcommunity-list</b><br><i>extcommunity-name</i> | Displays the routing information including the specified extcommunity value.                                                                                                                                                                          |
| <b>dampening</b><br><b>dampened-paths</b>            | Displays the restrained routing information.                                                                                                                                                                                                          |
| <b>dampening flap-statistics</b>                     | Displays the routing dampening statistics.                                                                                                                                                                                                            |

|                                                                      |                                                                                                                              |
|----------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------|
| <b>filter-list</b> <i>path-list-number</i>                           | Displays the routing information matching the filter-list.                                                                   |
| <b>inconsistent-as</b>                                               | Displays the routing information of the inconsistent source AS.                                                              |
| <b>prefix-list</b><br><i>ipv6-prefix-list-name</i>                   | Displays the routing information matching the specified prefix-list.                                                         |
| <b>quote-regexp</b> <i>regexp</i>                                    | Displays the BGP routing information with the AS path attribute matching the specified regexp within the double quote marks. |
| <b>regexp</b> <i>regexp</i>                                          | Displays the BGP routing information with the AS path attribute matching the specified regexp.                               |
| <b>route-map</b> <i>map-tag</i>                                      | Displays the routing information matching the specified route-map filtering condition.                                       |
| <b>neighbors</b><br>[ <i>neighbor-address</i> ]                      | Displays the BGP IPv6 unicast neighbor information.                                                                          |
| <b>neighbors</b> <i>neighbor-address</i><br><b>received-routes</b>   | Displays all routing information received from the specified peer (including accepted and refused routes).                   |
| <b>neighbors</b> <i>neighbor-address</i><br><b>routes</b>            | Displays all the routing information received from the peer and accepted.                                                    |
| <b>neighbors</b> <i>neighbor-address</i><br><b>advertised-routes</b> | Displays all the routing information sent to the specified peer.                                                             |
| <b>neighbors</b> <i>neighbor-address</i><br><b>policy</b>            | Displays the related routing policy information of BGP neighbors. (General)                                                  |
| <b>neighbors</b> <i>neighbor-address</i><br><b>policy detail</b>     | Displays the related routing policy information of BGP neighbors. (Detail)                                                   |

**Defaults** N/A

**Command**

**Mode** Privileged EXEC mode

**Usage Guide**

Use this command to view the IPv6 unicast route information of BGP. You can filter the information with the specified parameter to display the matching route information. The function and use of this command is similar to the **show bgp ipv4 unicast** command, please refer to the command.

**Configuration**

**Examples** N/A

**Related**

**Commands**

| Command                      | Description                                         |
|------------------------------|-----------------------------------------------------|
| <b>show bgp ipv4 unicast</b> | Displays the IPv4 unicast route information of BGP. |

**Platform**

**Description** None

## 5.141 show bgp ipv6 unicast dampening parameters

Use this command to display the IPv6 unicast route dampening parameters configured for BGP.



**show bgp ipv6 unicast [ vrf *vrf-name* ] dampening parameters**

| Parameter   | Parameter       | Description |
|-------------|-----------------|-------------|
| Description | <i>vrf-name</i> | VRF name.   |

**Defaults** N/A

**Command**

**Mode** Privileged EXEC mode

**Usage****Guide**

This command is used to display the IPv6 unicast route dampening parameters configured for the BGP. The function and use of this command are similar to the **show bgp ipv4 unicast dampening parameters** command. Please refer to the command.

**Configuration**

**Examples** N/A

**Related  
Commands**

| Command                                           | Description                                                              |
|---------------------------------------------------|--------------------------------------------------------------------------|
| <b>show bgp ipv4 unicast dampening parameters</b> | Displays the IPv4 unicast route dampening parameters configured for BGP. |

**Platform**

**Description** None

## 5.142 show bgp ipv6 unicast neighbors

Use this command to display the related information of BGP IPv6 unicast neighbor.

**show bgp ipv6 unicast [ vrf *vrf-name* ] neighbors *neighbor-address***

| Parameter   | Parameter                                              | Description                                                    |
|-------------|--------------------------------------------------------|----------------------------------------------------------------|
| Description | <i>vrf-name</i>                                        | VRF name                                                       |
|             | <i>neighbor-address</i>                                | Neighbor IPv6 address.                                         |
|             | <b>neighbors <i>neighbor-address</i> policy</b>        | Related route policy information of BGP neighbor.<br>(General) |
|             | <b>neighbors <i>neighbor-address</i> policy detail</b> | Related route policy information of BGP neighbor.<br>(Detail)  |

**Command**

**Mode** Privileged EXEC mode

**Usage****Guide**

This command is used to view the information of the connection with BGP IPv6 unicast neighbor. The function and use of this command are similar to the **show bgp ipv4 unicast neighbors**

*neighbor-address* command. Please refer to the command.

### Configuration

**Examples** N/A

### Related Commands

| Command                                                 | Description                                                    |
|---------------------------------------------------------|----------------------------------------------------------------|
| <b>show bgp ipv4 unicast neighbors neighbor-address</b> | Displays the related information of BGP IPv4 unicast neighbor. |

### Platform

**Description** None

## 5.143 show bgp ipv6 unicast paths

Use this command to display the path information of the IPv6 unicast in the route database.

**show bgp ipv6 unicast [ vrf *vrf-name* ] paths**

### Parameter Description

| Parameter | Description |
|-----------|-------------|
| vrf-name  | VRF name    |

**Defaults** N/A

### Command

**Mode** Privileged EXEC mode

### Usage

**Guide** This command is used to view the path information in the route database.

The following example displays the path information of the IPv6 unicast in the route database.

### Configuration Examples

```
Ruijie# show bgp ipv6 unicast paths
Address Refcnt Path
[0x1d7806a0:0] (67)
[0x1d7389a0:13] (20) 10
```

### Related Commands

| Command                            | Description                                                              |
|------------------------------------|--------------------------------------------------------------------------|
| <b>show bgp ipv4 unicast paths</b> | Displays the path information of the IPv4 unicast in the route database. |

### Platform

**Description** None

## 5.144 show bgp ipv6 unicast summary

Use this command to display the related information of BGP IPv6 unicast.

**show bgp ipv6 unicast [ vrf *vrf-name* ] summary**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | vrf-name  | VRF name.   |

**Defaults** N/A

**Command**

**Mode** Privileged EXEC mode

**Usage  
Guide**

This command is used to display the related information of BGP IPv6 unicast. The function and use of this command are similar to the **show bgp ipv4 unicast summary** command. Please refer to the command.

**Configuration**

**Examples** N/A

| Related<br>Commands | Command                              | Description                                           |
|---------------------|--------------------------------------|-------------------------------------------------------|
|                     | <b>router bgp</b>                    | Enables the BGP protocol                              |
|                     | <b>show bgp ipv4 unicast summary</b> | Displays the related information of BGP IPv4 unicast. |

**Platform**

**Description** None

## 5.145 show bgp ipv6 unicast update-group

Use this command to display information about an update-group in the BGP IPv6 unicast address family.

**show bgp ipv6 unicast [ vrf *vrf-name* ] update-group [ *neighbor-address* | *update-group-index* ] [ summary ]**

| Parameter<br>Description | Parameter                 | Description                                                                                   |
|--------------------------|---------------------------|-----------------------------------------------------------------------------------------------|
|                          | <i>vrf-name</i>           | Specifies a VRF instance name.                                                                |
|                          | <i>neighbor-address</i>   | Specifies a neighbor that belongs to an update-group whose information needs to be displayed. |
|                          | <i>update-group-index</i> | Specifies an update-group whose information needs to be displayed.                            |
|                          | <b>summary</b>            | Displays neighbor-related information.                                                        |

**Command** Privileged EXEC mode

**Mode****Default Level** 14**Usage Guide** This command is used to display information about an update-group in the BGP IPv6 address family.**Configuration Example** The following example displays information about an update-group in the BGP IPv6 unicast address family.

```
Ruijie#show bgp ipv6 update-group
BGP version 4 update-group 1(ref 2), internal, Address Family: IPv6 Unicast
Update message formatted 2, replicated 2
Minimum route advertisement interval is 0 seconds
Minimum AS origination interval is 1 seconds
Format state: Current working
                Refresh blocked
Has 1 members:
    192:168:195::183
```

The following example displays the neighbor summary of update-group 1 in the BGP IPv6 unicast address family.

```
Ruijie # show bgp ipv6 unicast update-group 1 summary
BGP router identifier 192.168.183.1, local AS number 23
BGP table version is 2
2 BGP AS-PATH entries
1 BGP community entries
Neighbor      V   AS  MsgRcvd  MsgSent  TblVer  InQ   OutQ  Up/Down
State/PfxRcd
192:168:195::79  4   24    0        0        0    0    0   never    Active
192:168:195::183 4   23   17        15        1    0    0   00:09:04  8
Total number of neighbors 2
```

Field description:

| Field                 | Description                           |
|-----------------------|---------------------------------------|
| BGP router identifier | BGP router ID                         |
| local AS number       | Local AS number of BGP                |
| BGP table version     | Version of the BGP routing table      |
| BGP AS-PATH entries   | Number of AS path entries             |
| BGP community entries | Number of community attribute entries |
| Neighbor              | Peer address                          |
| V                     | Protocol version                      |
| AS                    | Peer AS number                        |

|              |                                                                            |
|--------------|----------------------------------------------------------------------------|
| MsgRcvd      | Number of received packets                                                 |
| MsgSent      | Number of sent packets                                                     |
| State/PfxRcd | Status of the neighbor state machine or number of received routing entries |

**Prompt** N/A

**Platform Description** N/A

## 5.146 show bgp l2vpn

Use the following command to display the BGP L2VPN routing information.

**show bgp l2vpn { evpn } all**

Use the following command to display the neighbor information of the BGP L2VPN EVPN address family.

**show bgp l2vpn evpn all { ethernet-ad | ethernet-segment | inclusive-multicast | ip-prefix | mac-ip } [ detail ]**

Use the following command to display the second type routing information of the BGP L2VPN EVPN address family.

**show bgp l2vpn evpn all mac-ip mac\_addr [ ip\_addr [ detail ] | ipv6\_addr [ detail ] | detail ]**

Use the following command to display the fifth type routing information of the BGP L2VPN EVPN address family.

**show bgp l2vpn evpn all ip-prefix { ip\_addr [ detail ] | ipv6\_addr [ detail ] | detail }**

Use the following command to display the neighbor information of the BGP L2VPN address family.

**show bgp l2vpn { evpn } all neighbor [ peer-address [ policy [ detail ] ] ]**

Use the following command to display the neighbor summary information of the BGP L2VPN address family.

**show bgp l2vpn { evpn } all summary**

Use the following command to display the L2VPN EVPN information on the specified RD.

**show bgp l2vpn evpn rd vpn\_rd [[ethernet-ad | ethernet-segment | inclusive-multicast | ip-prefix | mac-ip ] [ detail ]]**

Use the following command to display the L2VPN EVPN information on the specified EVI.

**show bgp l2vpn evpn evi vni-id [ [ ethernet-ad | ethernet-segment | inclusive-multicast | ip-prefix | mac-ip ] [ detail ] ]**

| Parameter                                                                 | Description                                                                                                                                                                                                      |
|---------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>evpn</b>                                                               | Displays EVPN information.                                                                                                                                                                                       |
| <b>all</b>                                                                | Displays all NLRI information that contains the VPLS instance or the VPWS instance.                                                                                                                              |
| <i>ve_id:offset</i>                                                       | Displays the VFI instance information of the specified <i>ve_id:offset</i>                                                                                                                                       |
| <b>ethernet-ad [detail]</b>                                               | Displays basic (detailed) information of the first type of BGP L2VPN EVPN routes.                                                                                                                                |
| <b>ethernet-segment [detail]</b>                                          | Displays basic (detailed) information of the fourth type of BGP L2VPN EVPN routes.                                                                                                                               |
| <b>inclusive-multicast [detail]</b>                                       | Displays basic (detailed) information of the third type of BGP L2VPN EVPN routes.                                                                                                                                |
| <b>ip-prefix [detail]</b>                                                 | Displays basic (detailed) information of the fifth type of BGP L2VPN EVPN routes.                                                                                                                                |
| <b>ip-prefix [ ip_addr [detail]   ipv6_addr [detail]   detail ]</b>       | Displays basic (detailed) information of routes with specific IP address or IPv6 address in the fifth type of BGP L2VPN EVPN routes.                                                                             |
| <b>mac-ip [detail]</b>                                                    | Displays basic (detailed) information of the second type of BGP L2VPN EVPN routes.                                                                                                                               |
| <b>mac-ip mac_addr [ ip_addr [detail]   ipv6_addr [detail]   detail ]</b> | Displays basic (detailed) information of routes with specific MAC addresses or MAC addresses+IP addresses/IPv6 addresses in the second type of BGP L2VPN EVPN routes.                                            |
| <b>neighbor [peer-address ]</b>                                           | Displays the BGP L2VPN neighbor information.<br>You can specify the specific neighbor information by entering the parameter <i>neighbor-address</i> . Otherwise all BGP L2VPN neighbor information is displayed. |
| <b>neighbor peer-address policy</b>                                       | Displays the summarized routing policy information on BGP neighbor.                                                                                                                                              |
| <b>neighbor peer-address policy detail</b>                                | Displays the detailed routing policy information BGP neighbor,                                                                                                                                                   |
| <b>summary</b>                                                            | Displays main BGP L2VPN information, including site ID, OFFSET, LABEL BASE and NEXT HOP.                                                                                                                         |
| <b>rd vpn_rd</b>                                                          | The specified RD.                                                                                                                                                                                                |
| <b>vfi vfi_name</b>                                                       | The specified VFI instance.                                                                                                                                                                                      |
| <b>evi vni-id</b>                                                         | The specified evl instance.                                                                                                                                                                                      |

**Defaults** N/A

**Command**

**Mode** Privileged EXEC mode

**Usage**

**Guide** N/A

The following example displays all L2VPN EVPN address family routing information.

```
Ruijie(config)# show bgp l2vpn evpn all
BGP table version is 16, local router ID is 1.1.1.1
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal,
               S Stale, b - backup entry
Origin codes: i - IGP, e - EGP, ? - incomplete

   Network          Next Hop          Metric      LocPrf      Weight Path
Route Distinguisher: 1:100 (Default for EVI 1122)
*> 0:32:1.1.1.1/72  0.0.0.0
                                     32768      i

Total number of prefixes 1
Route Distinguisher: 1.1.1.1:100 (Default for EVI 100)
*> 0:6:0011.2233.2016:0:0.0.0/128
           0.0.0.0
                                     32768      i
*>i0:6:00d0.f822.33df:0:0.0.0/128
           2.2.2.2
           0          100          0      i
*> 0:6:0011.2233.2016:32:100.1.1.2/128
           0.0.0.0
                                     32768      i
*>i0:6:00d0.f822.33df:32:100.1.1.1/128
           2.2.2.2
           0          100          0      i
*> 0:32:1.1.1.1/72  0.0.0.0
                                     32768      i
*>i0:32:2.2.2.2/72  2.2.2.2
           0          100          0      i

Total number of prefixes 6
```

**Configuration Examples**

| Command           | Description                                                                                                                                                                                                                                          |
|-------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| BGP table version | BGP table version.                                                                                                                                                                                                                                   |
| Local Router ID   | Local Router ID. Generally it is a loopback address.                                                                                                                                                                                                 |
| status codes      | Status codes:<br>s :The route is dampened.<br>d :Shielded route flap.<br>h: Historical routes that no longer available<br>* : Valid routes<br>> : Optimal routes<br>i : IBGP routes<br>r : Fails to install the RIB routing table.<br>S: Old routes. |
| Origin Codes      | Origin Codes:<br>i: IGP.<br>e: EGP.<br>?: Incomplete.                                                                                                                                                                                                |

|          |                                                                                                                 |
|----------|-----------------------------------------------------------------------------------------------------------------|
| Network  | Routing information in the form aa:bb. The aa here represents site ID and the bb represents label model offset. |
| Next hop | Next hop IP address.                                                                                            |
| Metric   | Metric value of the represent route (if be displayed.)                                                          |
| LocPrf   | Local priority.                                                                                                 |
| Path     | AS path that reach the destination network.                                                                     |

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform**

**Description** N/A

### 5.147 show bgp l2vpn update-group

Use this command to display the update-group information of BGP L2VPN address family.

**show bgp l2vpn { evpn } all update-group [ neighbor-address | update-group-index ] [ summary ]**

**Parameter Description**

| Parameter                 | Description                                                  |
|---------------------------|--------------------------------------------------------------|
| <b>evpn</b>               | Displays the L2VPN EVPN address family information.          |
| <i>neighbor-address</i>   | Displays the update-group information of specified neighbor. |
| <i>update-group-index</i> | Display the specified update-group information.              |
| <b>summary</b>            | Display neighbor information.                                |

**Defaults** N/A

**Command**

**Mode** Privileged EXEC mode

**Usage**

**Guide** Display the update-group information of BGP L2VPN address family.

The following example displays the update-group information of BGP L2VPN EVPN address family

**Configuration Examples**

```
Ruijie#show bgp l2vpn evpn all update-group
BGP version 4 update-group 1(ref 2), internal, Address Family: L2VPN
EVPN
Update message formatted 2, replicated 2
Minimum route advertisement interval is 0 seconds
Minimum AS origination interval is 1 seconds
Format state: Current working
```



```

Refresh blocked
Has 1 members:
192.168.195.183
    
```

The following example displays the neighbor summary of update-group 1 of BGP L2VPN EVPN address family

```

Ruijie # show bgp l2vpn evpn all update-group 1 summary
BGP router identifier 192.168.183.1, local AS number 23
BGP table version is 2
2 BGP AS-PATH entries
1 BGP community entries
Neighbor          V    AS  MsgRcvd  MsgSent  TblVer  InQ   OutQ  Up/Down
State/PfxRcd
192.168.195.79    4    24      0         0         0     0     0    never
Active
192.168.195.183  4    23     17        15         1     0     0    00:09:04
8
Total number of neighbors 2
    
```

| Field                 | Description                                                                |
|-----------------------|----------------------------------------------------------------------------|
| BGP router identifier | BGP router ID                                                              |
| local AS number       | Local AS number of BGP                                                     |
| BGP table version     | Version of the BGP routing table                                           |
| BGP AS-PATH entries   | Number of AS path entries                                                  |
| BGP community entries | Number of community attribute entries                                      |
| Neighbor              | Peer address                                                               |
| V                     | Protocol version                                                           |
| AS                    | Peer AS number                                                             |
| MsgRcvd               | Number of received packets                                                 |
| MsgSent               | Number of sent packets                                                     |
| State/PfxRcd          | Status of the neighbor state machine or number of received routing entries |

**Platform**

**Description** N/A

### 5.148 show bgp statistics

Use this command to display the BGP statistics information.

**show bgp statistics [ vrf vrf-name ]**

| Parameter          | Parameter    | Description                                     |
|--------------------|--------------|-------------------------------------------------|
| <b>Description</b> | vrf vrf-name | Displays the BGP statistics information of VRF. |

**Defaults** N/A

**Command**

**Mode** Privileged EXEC mode

**Usage**

**Guide** Without the **vrf** parameter, the global BGP statistics information will be displayed.

The following example displays the BGP statistics information.

```
Ruijie#show bgp statistics
Local as 100, Router id 1.1.1.1
  Total neighbor 10, Established neighbor 9, Admin-Down neighbor 1
  IBGP neighbor 8, Established IBGP neighbor 8, Admin-Down IBGP neighbor
0
  EBGp neighbor 2, Established EBGp neighbor 1, Admin-Down EBGp neighbor
1
  AS-PATH entries 1, Community entries 1, Extended-Community entries 0

For address family: IPv4 Unicast
  Activated neighbor 9, Unactivated neighbor 0
  Activated IBGP neighbor 8, Unactivated IBGP neighbor 0
  Activated EBGp neighbor 1, Unactivated EBGp neighbor 0

For address family: IPv6 Unicast
  Activated neighbor 0, Unactivated neighbor 9
  Activated IBGP neighbor 0, Unactivated IBGP neighbor 0
  Activated EBGp neighbor 0, Unactivated EBGp neighbor 0
```

**Configuration Examples**

| Parameter                 | Description                                                  |
|---------------------------|--------------------------------------------------------------|
| Router id                 | ID of BGP router.                                            |
| Total neighbor            | Total number of neighbors.                                   |
| Established neighbor      | Number of UP neighbors.                                      |
| Admin-Down neighbor       | Number of admin down neighbors.                              |
| IBGP neighbor             | Number of IBGP neighbors.                                    |
| Established IBGP neighbor | Number of UP IBGP neighbors.                                 |
| Admin-Down IBGP neighbor  | Number of admin down IBGP neighbors.                         |
| EBGP neighbor             | Number of EBGp neighbors.                                    |
| AS-PATH entries           | Number of AS-PATH entries.                                   |
| Community entries         | Number of community entries.                                 |
| Extended-Community        | Number of extended community entries.                        |
| Established EBGp neighbor | Number of UP EBGp neighbors.                                 |
| Admin-Down EBGp neighbor  | Number of admin down EBGp neighbors.                         |
| Activated neighbor        | Number of activated neighbors.                               |
| Unactivated neighbor      | Number of unactivated neighbors, not including UP neighbors. |
| Activated IBGP neighbor   | Number of activated IBGP neighbors.                          |

|                           |                                                                   |
|---------------------------|-------------------------------------------------------------------|
| Unactivated IBGP neighbor | Number of unactivated IBGP neighbors, not including UP neighbors. |
| Activated EBGP neighbor   | Number of activated EBGP neighbors.                               |
| Unactivated EBGP neighbor | Number of unactivated EBGP neighbors, not including UP neighbors. |

**Platform**

**Description** N/A

### 5.149 show evpn

Use this command to display the EVI instance.

**show evpn [ vni-id [detail] / detail ]**

| Parameter          | Parameter | Description                                 |
|--------------------|-----------|---------------------------------------------|
| <b>Description</b> | vni-id    | Indicates the ID of specified EVI instance. |

**Defaults** N/A

**Command**

**Mode** Privileged EXEC mode

**Usage Guide** If an ID of EVI instance is exported, display the information of the EVI. IF no EVI ID is imported, display all EVIs' information.

The following example displays all information of EVI 100.

```
Ruijie#show evpn 100 detail
EVI 100, RD 1.1.1.1:100(auto)
  Import VPN route-target communities
    RT: 100:100(auto)
  Export VPN route-target communities
    RT: 100:100(auto)
EVI Layer 3 Interface: OverlayRouter 100
All Route count: 6
  Ethernet Auto-discovery Route count: 0
  MAC/IP Advertisement Route count: 4
  Inclusive Multicast Ethernet Tag Route count: 2
  Ethernet Segment Route count: 0
  Install Route count: 3
```

**Configuration Examples**

| Parameter | Description      |
|-----------|------------------|
| RD        | RD value of EVI. |

|                                     |                                   |
|-------------------------------------|-----------------------------------|
| EVI Layer 3 Interface               | L3 interface associated with EVI. |
| Export VPN route-target communities | Value of the exported RT of EVI.  |
| Import VPN route-target communities | Value of the imported RT of EVI.  |
| Route count                         | Number of routes in EVI instance. |

The following example displays key information of EVI.

```
Ruijie#show evpn
vni      rd                interface
100      1.1.1.1:100        OverlayRouter 100
300      1.1.1.1:300        N/A
789      1.1.1.1:789        N/A
1000     1.1.1.1:1000       OverlayRouter 1000
1122     1:100              N/A
2000     1.1.1.1:2000       OverlayRouter 2000
3344     1.1.1.1:3344       N/A
1678889  1.1.1.1:40489      N/A
Total number: 8
```

| Parameter | Description                       |
|-----------|-----------------------------------|
| vni       | vni-id of EVI.                    |
| rd        | RD value of EVI                   |
| interface | L3 interface associated with EVI. |

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform**

**Description** N/A

### 5.150 show evpn mac

Use this command to display the mobilized or conflict MAC information

**show evpn mac {conflict | mobility} [ vni-id ]**

**Parameter Description**

| Parameter       | Description                             |
|-----------------|-----------------------------------------|
| <b>conflict</b> | Display the conflicted MAC              |
| <b>mobility</b> | Display the mobilized MAC               |
| <i>vni-id</i>   | Display the ID of specific EVI instance |

**Defaults** N/A

**Command**

**Mode** Privileged EXEC mode

**Usage** If the parameter has EVI ID, then display the MAC information of specific EVI; if no EVI ID is entered, display the MAC information of all EVI.

**Guide**

The following example checks the mobilized MAC information.

```
Ruijie#show evpn mac mobility
vni    mac                count  remain-time
10     0055.1000.0004       2      72
10     0055.1000.000a       1      66
10     0055.1000.000e       1      72
10     0055.1000.0013       1      27
10     0055.1000.0015       4      75
```

**Configuration**

**Examples**

| Parameter   | Description                                             |
|-------------|---------------------------------------------------------|
| vni         | VNI-ID of EVI.                                          |
| mac         | Mobilized MAC address                                   |
| count       | Mobility times                                          |
| remain-time | Remaining time of the timer for conflict. Unit: second. |

The following example checks the conflict MAC information.

```
Ruijie#show evpn mac conflict
Ruijie#show evpn mac conflict
vni    mac                seq    retry-time
10     0011.0011.e69c      6      -
```

| Parameter  | Description                             |
|------------|-----------------------------------------|
| vni        | vni-id of EVI.                          |
| mac        | Mobilized MAC address                   |
| seq        | Sequence number of conflict MAC address |
| Retry-time | Remaining time for retry. Unit: second  |

**Related**

**Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform**

**Description** N/A

## 5.151 show ip bgp

Use this command to display the BGP IPv4 unicast address families' route information. The method of use is the same as other BGP show commands.

**show ip bgp** [ *vrf vrf-name* ] [ *network* [ *network-mask* [ **longer-prefixes** ] ] ] | **cidr-only** | **community** [ *community-number* [ **exact-match** ] ] | **filter-list** *path-list-number* | **community-list** *community-name* [ **exact-match** ] | **regex** *regex* | **quote-regex** *regex* | **extcommunity-list** *extcommunity-name* | **inconsistent-as** | **prefix-list** *ip-prefix-list-name* | **route-map** *map-tag* ]

Display route flap's parameters.

**show ip bgp** [ *vrf vrf-name* ] **dampening** { **flap-statistics** | **dampened-paths** | **parameters** }

Display neighbors' related information.

**show ip bgp** [ *vrf vrf-name* ] **neighbors** [ *peer-address* [ **received-routes** | **routes** | **advertised-routes** [ **policy** [ **detail** ] ] ] ]

**show ip bgp** [ *vrf vrf-name* ] **summary**

Display directory information.

**show ip bgp** [ *vrf vrf-name* ] **paths**

Display route scan status.

**show ip bgp scan**

Display related information under VRF.

**show ip bgp** { *vrf vrf-name* | **labels** }

Display related information of BGP IPv4 unicast update-group.

**show ip bgp** [ *vrf vrf-name* ] **update-group** [ *neighbor-address* | *update-group-index* ] [ **summary** ]

**Parameter Description**

| Parameter                                            | Description                                                                                                                                                                                                                                                       |
|------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>vrf-name</i>                                      | VRF name.                                                                                                                                                                                                                                                         |
| <i>network</i>                                       | Displays specific route information in the route table.                                                                                                                                                                                                           |
| <i>network-mask</i>                                  | Displays route information in the specific network.                                                                                                                                                                                                               |
| <b>longer-prefixes</b>                               | Displays the route map information.                                                                                                                                                                                                                               |
| <b>cidr-only</b>                                     | Displays route information without specific category.                                                                                                                                                                                                             |
| <b>community</b><br><i>community-number</i>          | Displays route information containing specific community value. The <i>community-number</i> is the group number. The format is AA:NN (autonomous system number/2-byte figure), or the following pre-defined value: internet, no-export, local-as or no-advertise. |
| <b>community-list</b><br><i>community-name</i>       | Displays the BGP route information of the specified community list. The <i>community-name</i> is the name of the community list.                                                                                                                                  |
| <b>dampening</b><br><b>dampened-paths</b>            | Displays dampened route information.                                                                                                                                                                                                                              |
| <b>dampening flap-statistics</b>                     | Displays the route flap statistics.                                                                                                                                                                                                                               |
| <b>dampening parameters</b>                          | Displays believed route flap parameters.                                                                                                                                                                                                                          |
| <b>extcommunity-list</b><br><i>extcommunity-name</i> | Displays route information containing specific extcommunity value.                                                                                                                                                                                                |
| <b>filter-list</b> <i>path-list-number</i>           | Displays the route information that complies with the filter list. The                                                                                                                                                                                            |

|                                                                                   |                                                                                                                                                                                                                                                 |
|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                                   | <i>path-list-numbe</i> is the marking number of the filter list.                                                                                                                                                                                |
| <b>inconsistent-as</b>                                                            | Displays the route information of inconsistent source AS.                                                                                                                                                                                       |
| <b>Labels</b>                                                                     | Displays the IPv4 label route information.                                                                                                                                                                                                      |
| <b>neighbors</b> <i>peer-address</i>                                              | Displays the route information of BGP neighbors.                                                                                                                                                                                                |
| <b>neighbors</b> <i>peer-address</i><br><b>received-routes</b>                    | Displays all routing information received from the specified peer (including accepted and refused routes).                                                                                                                                      |
| <b>neighbors</b> <i>peer-address</i><br><b>routes</b>                             | Displays all the routing information received from the peer and accepted.                                                                                                                                                                       |
| <b>neighbors</b> <i>peer-address</i><br><b>advertised-routes</b>                  | Displays all the routing information sent to the specified peer.                                                                                                                                                                                |
| <b>neighbors</b> <i>peer-address</i><br><b>policy</b>                             | Displays the related routing policy information of BGP neighbors. (General)                                                                                                                                                                     |
| <b>neighbors</b> <i>peer-address</i><br><b>policy detail</b>                      | Displays the related routing policy information of BGP neighbors. (Detail)                                                                                                                                                                      |
| <b>Paths</b>                                                                      | Displays the route information in the route database.                                                                                                                                                                                           |
| <b>prefix-list</b>                                                                | Displays the route information that complies with the prefix list.                                                                                                                                                                              |
| <b>quote-regexp</b> <i>regexp</i>                                                 | Displays the BGP route information of regular expression in the specified double quotation mark of the AS route attribute.                                                                                                                      |
| <b>regexp</b> <i>regexp</i>                                                       | Displays the BGP route information of specified regular expression of the AS route attribute.                                                                                                                                                   |
| <b>route-map</b>                                                                  | Displays the route information that complies with the route map.                                                                                                                                                                                |
| <b>Scan</b>                                                                       | Displays the BGP route scanning status.                                                                                                                                                                                                         |
| <b>summary</b>                                                                    | Displays related information of BGP neighbors.                                                                                                                                                                                                  |
| <b>update-group</b><br>[ <i>neighbor-address</i>  <br><i>update-group-index</i> ] | Display update-group information.<br>When <i>neighbor-address</i> is specified, display the update-group information of the specified neighbor.<br>When <i>update-group-index</i> is specified, display the specified update-group information. |

**Defaults** -

**Command** Privileged EXEC mode

**Mode**

**Usage Guide** The **show ip bgp** command is the same as **show bgp ipv4 unicast** in terms of the function. All the parameters in **show bgp ipv4 unicast** apply to **show ip bgp**.

**Configuration** -

**Examples**

**Configuration**

**Examples**

| Command                      | Description                                                       |
|------------------------------|-------------------------------------------------------------------|
| <b>show bgp ipv4 unicast</b> | Displays IPv4 unicast route information in BGP route information. |

Platform -  
Description

## 5.152 vni

Use this command to create an EVI instance. Use the **no** form of this command to delete the EVI instance. Use the **default** form of this command to restore the default settings.

**vni** *vni-id*

**no vni** *vni-id*

**default vni** *vni-id*

| Parameter   | Parameter     | Description                                      |
|-------------|---------------|--------------------------------------------------|
| Description | <i>vni-id</i> | Indicates the VNI ID. Ranges from 1 to 16777215. |

Defaults N/A

### Command

Mode EVPN configuration mode

### Usage

Configure the EVPN mode first, and then enter the evpn-vni configuration mode. Run exit command to exit.

### Guide

### Configuration

The following example configures an EVI instance in EVPN mode.

### Examples

```
Ruijie(config)# evpn
Ruijie(config-evpn)# vni 100
```

| Related  | Command | Description |
|----------|---------|-------------|
| Commands | N/A     | N/A         |

### Platform

Description N/A

## 5.153 vni range

Use this command to create EVI instances in batches and enter the EVI instance batch configuration mode. Use the **no** form of this command to delete EVI instances in batches. Use the **default** form of this command to restore the default settings.

**vni range** *vni-id-list*

**no vni range** *vni-id-list*



**default vni range** *vni-id-list*

|                               |                                                                                                                                                                                                                                                                                                                                                                          |                         |
|-------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------|
| <b>Parameter</b>              | <b>Parameter</b>                                                                                                                                                                                                                                                                                                                                                         | <b>Description</b>      |
| <b>Description</b>            | <i>vni-id-list</i>                                                                                                                                                                                                                                                                                                                                                       | Name of the VNI ID list |
| <b>Defaults</b>               | N/A                                                                                                                                                                                                                                                                                                                                                                      |                         |
| <b>Command Mode</b>           | EVPN configuration mode.                                                                                                                                                                                                                                                                                                                                                 |                         |
| <b>Default Level</b>          | 14                                                                                                                                                                                                                                                                                                                                                                       |                         |
| <b>Usage Guide</b>            | <p>✔ The configuration fails if the number of configured VNI instances exceeds the capacity or a VNI instance is being deleted.</p> <p>✔ The RD values of different VNI instances must be different. Therefore, only the automatic RD configuration mode is available for configuring VNI instances in batches, and VNI instances cannot be configured manually.</p>     |                         |
| <b>Configuration Examples</b> | <p>The following example configures EVI instances in batches in EVPN configuration mode.</p> <pre>Ruijie(config)# evpn Ruijie(config-evpn)# vni range 100,200-300 Ruijie(config-evpn-vni-range)#</pre>                                                                                                                                                                   |                         |
| <b>Verification</b>           | Run the <b>show running-config</b> command to display the EVPN configurations.                                                                                                                                                                                                                                                                                           |                         |
| <b>Prompts</b>                | <p>1. The following error information is displayed if the number of VNI instances exceeds the capacity.</p> <pre>% this range configuration may beyond vni capacity(8000) . please check your input</pre> <p>2. The following error information is displayed if a VNI instance is being deleted.</p> <pre>% evpn evi 100 is deleting, Fail to configure vni range.</pre> |                         |

## 6 PBR Commands

### 6.1 clear ip pbr statistics

Use this command to clear the IPv4 PBR forwarded packet count.

**clear ip pbr statistics** [ **interface** *if-name* | **local** ]

|                    |                                 |                                                                       |
|--------------------|---------------------------------|-----------------------------------------------------------------------|
| <b>Parameter</b>   | <b>Parameter</b>                | <b>Description</b>                                                    |
| <b>Description</b> | <b>interface</b> <i>if-name</i> | Specifies the interface name. If the interface name is specified, the |

|              |                                                                                                                                                                                     |
|--------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|              | device clears the IPv4 PBR forwarded packet count on that interface. Otherwise, the device clears the IPv4 PBR forwarded packet count on every interface where IPv4 PBR is enabled. |
| <b>local</b> | Clears the IPv4 PBR forwarded packet count on the local interface.                                                                                                                  |

**Command** Privileged EXEC mode.

**Mode**

**Usage Guide** Use this command to clear the IPv4 PBR forwarded packet count.

**Configuration** The following example clears the IPv4 PBR forwarded packet count.

**Examples**

```
Ruijie#clear ip pbr statistics
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 6.2 clear ipv6 pbr statistics

Use this command to clear the IPv6 PBR forwarded packet count.

**clear ipv6 pbr statistics [ interface *if-name* | local ]**

**Parameter Description**

| Parameter                       | Description                                                                                                                                                                                                                                               |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>interface</b> <i>if-name</i> | Specifies the interface name. If the interface name is specified, the device clears the IPv6 PBR forwarded packet count on that interface. Otherwise, the device clears the IPv6 PBR forwarded packet count on every interface where IPv6 PBR is enabled. |
| <b>local</b>                    | Clears the IPv6 PBR forwarded packet count on the local interface.                                                                                                                                                                                        |

**Defaults** N/A

**Command** Privileged EXEC mode.

**Mode**

**Usage Guide** Use this command to clear the IPv6 PBR forwarded packet count.

**Configuration** The following example clears the IPv6 PBR forwarded packet count.

**Examples**

```
Ruijie#clear ipv6 pbr statistics
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

### 6.3 ip local policy route-map

Use this command to apply the policy-based routing ( PBR ) on the packets sent locally. Use the **no** form of this command to restore the default setting.

**ip local policy route-map** *route-map*

**no ip local policy route-map**

| Parameter Description | Parameter | Description           |
|-----------------------|-----------|-----------------------|
|                       |           | <i>route-map-name</i> |

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** This command is valid for the IP packets sent locally, but not the IP packets received locally. The IP packets received by the local are free from this command.

To use the policy-based routing, you must specify the route map for it and create the route map. A route map contains multiple policies, and each policy defines one or more match rules and the corresponding operations. After policy-based routing is applied to an interface, the packets received by the interface will be checked. The packets that do not match any policy in the route map will be forwarded to the usual route. The packets that match a policy in the route map will be processed according to the operation defined in the policy.

The **set interface** command for the policy-based routing does not support the load-balancing and only supports the redundancy backup.

**Configuration Examples** The following examples send the packets with the source address 192.168.217.10 from the serial 2/0. The following example defines an ACL that match the IP packet.

```
Ruijie(config)#access-list 1 permit 192.168.217.10
```

The following example defines the route map.

```
Ruijie(config)#route-map lab1 permit 10
Ruijie(config-route-map)#match ip address 1
Ruijie(config-route-map)#set interface serial 2/0
Ruijie(config-route-map)#exit
```

The following example applies PBR on the local interface.

```
Ruijie(config)#ip local policy route-map lab1
```

Related  
Commands

| Command                        | Description                                               |
|--------------------------------|-----------------------------------------------------------|
| <b>access-list</b>             | Defines the access list rule.                             |
| <b>route-map</b>               | Defines the route map.                                    |
| <b>set vrf</b>                 | Defines the VRF instance of the policy-based IP packet.   |
| <b>set ip next-hop</b>         | Defines the next hop of the policy-based routing.         |
| <b>set ip default next-hop</b> | Defines the default next hop of the policy-based routing. |
| <b>set interface</b>           | Defines the output port of the policy-based routing.      |
| <b>set default interface</b>   | Defines the default policy-based routing output port.     |
| <b>set ip tos</b>              | Sets the TOS in the head of the IP packet.                |
| <b>set ip dscp</b>             | Sets the DSCP of the IP packet.                           |
| <b>set ip precedence</b>       | Sets the priority level in the head of the IP packet.     |
| <b>match ip address</b>        | Sets the filtering rule.                                  |
| <b>match length</b>            | Matches the packet length.                                |

Platform N/A

## Description

## 6.4 ip policy

Use this command to set the policy: redundant backup or load balancing used between multiple next hops of the PBR applied for the **set ip [ default ] nexthop** command in global configuration mode.

Use the **no** form of this command to restore the default setting.

**ip policy { load-balance | redundancy }**

**no ip policy**

Parameter  
Description

| Parameter                        | Description                                               |
|----------------------------------|-----------------------------------------------------------|
| <b>load-balance   redundancy</b> | Specifies the policy: load balancing or redundant backup. |

## Defaults

Redundant backup is adopted by default.


Command  
Mode

Global configuration mode

## Usage Guide

When you configure the **set ip next-hop** command in sub-route map, it is possible to configure

multiple next hops. However, when you set redundant backup, only the first resolved next hop of the policy-based routing takes effect. When the load balancing is set, multiple resolved next hops of the policy-based routing take effect. The WCMP can be set up to 8 next hops, and the ECMP can be set up to 32 next hops. The resolved next hop refers to the ARP message learned by the next hop and the MAC address corresponding to this ARP exists in the MAC address table.

 NPE80 does not support this command.

**Configuration Examples** In the example below, there are multiple next hops configured in the route map. After the redundant backup is set in global configuration mode, only the first next hop among the sub-route map of the policy-based routing applied on the interface FastEthernet 0/0 takes effect.

The following example sets the ACL that match the IP packet.

```
Ruijie(config)#access-list 1 permit 10.0.0.1
Ruijie(config)#access-list 2 permit 20.0.0.1
```

The following example defines the route map.

```
Ruijie(config)#route-map lab1 permit 10
Ruijie(config-route-map)#match ip address 1
Ruijie(config-route-map)#set ip next-hop 196.168.4.6
Ruijie(config-route-map)#set ip next-hop 196.168.4.7
Ruijie(config-route-map)#set ip next-hop 196.168.4.8
Ruijie(config-route-map)#exit
Ruijie(config)#route-map lab1 permit 20
Ruijie(config-route-map)#match ip address 2
Ruijie(config-route-map)#set ip next-hop 196.168.5.6
Ruijie(config-route-map)#set ip next-hop 196.168.5.7
Ruijie(config-route-map)#set ip next-hop 196.168.5.8
Ruijie(config-route-map)#exit
```

The following example applies the policy-based routing on the interface.

```
Ruijie(config)#interface FastEthernet 0/0
Ruijie(config-if)#ip policy route-map lab1
Ruijie(config-if)#exit
Ruijie(config)#ip policy redundance
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description**

N/A

## 6.5 ip policy route-map

Use this command to apply the policy-based routing on an interface. Use the **no** form of this command to restore the default setting.

**ip policy route-map** *route-map*

**no ip policy route-map**

| Parameter Description | Parameter        | Description           |
|-----------------------|------------------|-----------------------|
|                       | <i>route-map</i> | Name of the route map |


**Defaults** This function is disabled by default.

**Command** Interface configuration mode

**Mode**

**Usage Guide** The policy-based routing must be applied on the specified interface. That interface performs the policy-based routing only on the received packets.

To use the policy-based routing, you must specify the route map for it and create the route map. A route map contains multiple policies, and each policy defines one or more match rules and the corresponding operations. After policy-based routing is applied to an interface, the packets received by the interface will be checked. The packets that do not match any policy in the route map will be forwarded to the usual route. The packets that match a policy in the route map will be processed according to the operation defined in the policy.

 Up to one route map can be configured on an interface. When you configure a route map on the interface for many times, the latter will overwrite the former.

**Configuration Examples** In the example below, when the interface FastEthernet0/0 receives a datagram, if the source address of the datagram is 10.0.0.1, it sets the next-hop as 196.168.4.6; if the source address is 20.0.0.1, it sets the next-hop as 196.168.5.6; otherwise, the general forwarding will be performed.

The following example sets the ACL matched with the IP packets.

```
Ruijie(config)#access-list 1 permit 10.0.0.1
Ruijie(config)#access-list 2 permit 20.0.0.1
```

The following example defines the route map.

```
Ruijie(config)#route-map lab1 permit 10
Ruijie (config-route-map)#match ip address 1
Ruijie(config-route-map)#set ip next-hop 196.168.4.6
Ruijie(config-route-map)#exit
Ruijie(config)#route-map lab1 permit 20
Ruijie(config-route-map)#match ip address 2
Ruijie(config-route-map)#set ip next-hop 196.168.5.6
Ruijie(config-route-map)#exit
```

The following example applies the route map on the interface.

```
Ruijie(config)#interface FastEthernet 0/0
Ruijie(config-if)#ip policy route-map lab1
Ruijie(config-if)#exit
```

**Related Commands**

| Command                        | Description                                               |
|--------------------------------|-----------------------------------------------------------|
| <b>access-list</b>             | Defines the access list rule.                             |
| <b>route-map</b>               | Defines the route map.                                    |
| <b>set vrf</b>                 | Defines the VRF instance of the policy-based IP packet.   |
| <b>set ip next-hop</b>         | Defines the next hop of the policy-based routing.         |
| <b>set ip default next-hop</b> | Defines the default next hop of the policy-based routing. |
| <b>set interface</b>           | Defines the policy-based routing output port.             |
| <b>set default interface</b>   | Defines the default policy-based routing output port.     |
| <b>set ip tos</b>              | Sets the TOS in the head of the IP packet.                |
| <b>set ip dscp</b>             | Sets the DSCP of the IP packet.                           |
| <b>set ip precedence</b>       | Sets the priority level in the head of the IP packet.     |
| <b>match ip address</b>        | Sets the filtering rule.                                  |
| <b>match length</b>            | Matches the packet length.                                |

**Platform** N/A

**Description**

## 6.6 ip policy-source in-interface

Use this command to configure the source address policy-based routing for the IPv4 packets received on an interface. Use the **no** form of this command to disable the source address policy-based routing on the interface.

**ip policy-source in-interface** *interface-type* *sequence* { *source-address mask* | *source-address/mask* } **[default]** **next-hop** *ip-address* [*weight*] | **[default]** **interface** *out-interface-type* | **vrf** *vrf-name*}

**no ip policy-source in-interface** *interface-type* *sequence* [ { *source-address mask* | *source-address/mask* } [ **[default]** **next-hop** *ip-address* [*weight*] | **[default]** **interface** *out-interface-type* | **vrf** *vrf-name* ] ]

**Parameter Description**

| Parameter             | Description                                                     |
|-----------------------|-----------------------------------------------------------------|
| <i>interface-type</i> | Interface type                                                  |
| <i>sequence</i>       | Policy sequence number. The lower the number is, the higher the |

|                           |                                |
|---------------------------|--------------------------------|
|                           | priority is.                   |
| <i>source-address</i>     | Source IPv4 address.           |
| <i>mask</i>               | Address mask.                  |
| <i>ip-address</i>         | Next hop IPv4 address          |
| <i>weight</i>             | Next hop weight                |
| <i>out-interface-type</i> | Type of the next hop interface |
| <i>vrf-name</i>           | VRF instance name              |

**Defaults** Source address policy-based routing is disabled by default.

**Command** Global configuration mode

**Mode**

**Usage Guide** You can configure multiple **ip source-policy in-interface** commands on an interface. The policy with different source addresses must be configured with different sequence numbers. The lower the sequence number is, the higher the priority is.

In case of the same sequence number, the priority order of the next hop type is as follows:

**vrf vrf-name > next-hop ip-address > interface out-interface-type > default next-hop ip-address > default interface out-interface-type**

The priority of the source address PBR is lower than that of the interface PBR.

**Configuration Examples** In the example below, when the interface GigabitEthernet0/0 receives a datagram, if the source address of the datagram is 10.0.0.2, the next-hop is set as 196.168.1.2; otherwise, the general forwarding will be performed.

The following example configures source address PBR in global configuration mode.

```
Ruijie(config)# ip source-policy in-interface gigabitEthernet 0/0 1 10.0.0.2
255.255.255.255 next-hop 196.168.1.2
Ruijie(config)# ip source-policy in-interface gigabitEthernet 0/0 2 20.0.0.2
255.255.255.255 next-hop 196.168.2.2
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 6.7 ipv6 local policy route-map

Use this command to enable the policy-based routing on the packets sent locally. Use the **no** form of this command to restore the default setting.

**ipv6 local policy route-map route-map-name**

**no ipv6 local policy route-map**



| Parameter Description | Parameter             | Description                                                                                   |
|-----------------------|-----------------------|-----------------------------------------------------------------------------------------------|
|                       | <i>route-map-name</i> | Name of the router map applied locally, which is configured by the <b>router-map</b> command. |

**Defaults** This function is disabled by default.

**Command Mode** Global Configuration mode

**Usage Guide**

- This command is valid only for the IPv6 packets in accordance with the policy (for example, ping packets used for management) sent locally, but not the packets received locally.
- To use the policy-based routing, you must specify the route map for it and create the route map. A route map contains multiple policies, and each policy defines one or more match rules and the corresponding operations. After policy-based routing is applied to an interface, the packets received by the interface will be checked. The packets that do not match any policy in the route map will be forwarded to the usual route. The packets that match a policy in the route map will be processed according to the operation defined in the policy.

**Configuration Examples** The following examples display the PBR application process: The device sends the packets from the source address 2003:1000::10/80 to the 2001:100::/64, the packets will match ACL6 of aaa and be sent to the device 2003:1001::2.

- The following example defines the ACL matched with the IPv6 packet:

```
Ruijie(config)#ipv6 access-list aaa
Ruijie(config)#permit ipv6 2003:1000::10/80 2001:100::/64
```

- The following example defines the router map.

```
Ruijie(config)#route-map pbr-aaa permit 10
Ruijie(config-route-map)#match ipv6 address aaa
Ruijie(config-route-map)#set ipv6 next-hop 2003::1001::2
```

- The following example applies the PBR on the device.

```
Ruijie(config)#ipv6 local policy route-map pbr-aaa
```

**Related Commands**

| Command                          | Description                                                   |
|----------------------------------|---------------------------------------------------------------|
| <b>match ipv6 address</b>        | Sets the ACL6 used to match the IPv6 packets in the IPv6 PBR. |
| <b>match length</b>              | Defines the length of matched packets.                        |
| <b>route-map</b>                 | Defines the route map for PBR.                                |
| <b>set default interface</b>     | Defines the default next hop output port.                     |
| <b>set interface</b>             | Defines the next hop output port.                             |
| <b>set ipv6 default next-hop</b> | Sets the default next hop of packet forwarding.               |
| <b>set ipv6 next-hop</b>         | Sets the next hop of packet forwarding.                       |

|                            |                                                      |
|----------------------------|------------------------------------------------------|
| <b>set ipv6 precedence</b> | Sets the priority field in the head of IPv6 packets. |
| <b>show ipv6 policy</b>    | Displays the current PBR application.                |
| <b>show route-map</b>      | Displays the current router map configuration.       |

**Platform** N/A

**Description**

## 6.8 ipv6 policy

Use this command to set the policy: redundant backup or load balancing, applied for the **set ip nexthop** command in global configuration mode. Use the **no** form of this command to restore the default setting.

**ipv6 policy { load-balance | redundancy }**

**no ipv6 policy**

**Parameter Description**

| Parameter           | Description                          |
|---------------------|--------------------------------------|
| <b>load-balance</b> | Sets the policy as load balancing.   |
| <b>redundance</b>   | Sets the policy as redundant backup. |

**Defaults** Redundant backup is adopted by default.

**Command** Global configuration mode

**Mode**

**Usage Guide** This command is valid for the IP packets sent locally, but not the IP packets received locally. The IP packets received by the local are free from this command.

To use the policy-based routing, you must specify the route map for it and create the route map. A route map contains multiple policies, and each policy defines one or more match rules and the corresponding operations. After policy-based routing is applied to an interface, the packets received by the interface will be checked. The packets that do not match any policy in the route map will be forwarded to the usual route. The packets that match a policy in the route map will be processed according to the operation defined in the policy.


The **set interface** command for the policy-based routing does not support the load-balancing and only supports the redundancy backup.

**Configuration** This function is valid for the multiple next-hops.

**Examples** When you configure the set ip next-hop command in sub-route map, it is possible to configure multiple next hops. However, when you set redundant backup, only the first resolved next hop takes effect. The second configured next hop will take effect only when the first one fails and the first next hop will take effect again if it recovers.

When the load balancing is set, multiple next hops of the policy-based routing take effect.

The WCMP can be set up to 8 next hops, and the ECMP can be set up to 32 next hops.

 The resolved next hop refers to the learned MAC address for the next-hop.

The following example sets load-balancing mode for multiple nexthops.

The following example configures an ACL matching with IP packets.

```
Ruijie(config)# ipv6 access-list 1
Ruijie(config-ipv6-acl )# permit ipv6 1000::1 any
Ruijie(config)# ipv6 access-list 2
Ruijie(config-ipv6-acl )# permit ipv6 2000::1 any
```

The following example defines a route map.

```
Ruijie(config)# route-map lab1 permit 10
Ruijie(config-route-map)# match ipv6 address 1
Ruijie(config-route-map)# set ipv6 next-hop 2002::1
Ruijie(config-route-map)# set ipv6 next-hop 2002::2
Ruijie(config-route-map)# set ipv6 next-hop 2002::3
Ruijie(config-route-map)# exit
Ruijie(config)# route-map lab1 permit 20
Ruijie(config-route-map)# match ipv6 address 2
Ruijie(config-route-map)# set ipv6 next-hop 2002::5
Ruijie(config-route-map)# set ipv6 next-hop 2002::6
Ruijie(config-route-map)# set ipv6 next-hop 2002::7
Ruijie(config-route-map)# exit
```

The following example applies policy-based routing on the interface.

```
Ruijie(config)# interface FastEthernet 0/0
Ruijie(config-if)# ipv6 policy route-map lab1
Ruijie(config-if)# exit
Ruijie(config)# ipv6 policy load-balance
```

#### Related Commands

| Command                          | Description                                              |
|----------------------------------|----------------------------------------------------------|
| <b>set ipv6 default next-hop</b> | Defines the default next hop for forwarding the packets. |
| <b>set ipv6 next-hop</b>         | Defines the next hop for forwarding the packets.         |
| <b>show ipv6 policy</b>          | Displays the current policy-based routing application.   |

**Platform** N/A  
**Description**

## 6.9 ipv6 policy route-map

Use this command to apply the policy-based routing on an interface in interface configuration mode.

Use the **no** form of this command to restore the default setting.

**ipv6 policy route-map** *route-map-name*

**no ip policy route-map****Parameter  
Description**

| Parameter             | Description                                                                                       |
|-----------------------|---------------------------------------------------------------------------------------------------|
| <i>route-map-name</i> | Name of the PBR router map applied locally, which is configured by the <b>router-map</b> command. |

**Defaults**

This function is disabled by default..


**Command**

Interface configuration mode

**Mode****Usage Guide**

The policy-based routing must be applied on the specified interface. That interface performs the policy-based routing only on the received packets.

To use the policy-based routing, you must specify the route map for it and create the route map. A route map contains multiple policies, and each policy defines one or more match rules and the corresponding operations. After policy-based routing is applied to an interface, the packets received by the interface will be checked. The packets that do not match any policy in the route map will be forwarded to the usual route. The packets that match a policy in the route map will be processed according to the operation defined in the policy.

 Up to one route map can be configured on an interface. When you configure a route map on the interface for many times, the latter will overwrite the former.

**Configuration**

An IPv6 packet is received on the fastEthernet 0/0. If the packet is sent from 10::/64 network

**Examples**

segment, it is forwarded to the next hop of 2000:1; if the packet is sent from 20::/64 network segment, it is forwarded to the next hop of 2000:2 or forwarded as usual.:

The following example configures an ACL matched with the IP packet.

```
Ruijie(config)# ipv6 access-list acl_for_pbr1
Ruijie (config-ipv6-acl)# permit ipv6 10::/64 any
Ruijie(config)# ipv6 access-list acl_for_pbr2
Ruijie (config-ipv6-acl)# permit ipv6 20::/64 any
```

The following example defines a route map.

```
Ruijie(config)# route-map rm_pbr permit 10
Ruijie (config-route-map)# match ipv6 address acl_for_pbr1
Ruijie(config-route-map)# set ipv6 next-hop 2000::1
Ruijie(config-route-map)# exit
Ruijie(config)# route-map rm_pbr permit 20
Ruijie(config-route-map)# match ipv6 address acl_for_pbr2
Ruijie(config-route-map)# set ipv6 next-hop 2000::2
Ruijie(config-route-map)# exit
```

The following example applies the route map to the interface.

```
Ruijie(config)# interface FastEthernet 0/0
Ruijie(config-if)# no switchport
Ruijie(config-if)# ipv6 policy route-map rm_pbr
```

```
Ruijie(config-if) # exit
```

**Related  
Commands**

| Command                          | Description                                                       |
|----------------------------------|-------------------------------------------------------------------|
| <b>route-map</b>                 | Defines the route map.                                            |
| <b>match ipv6 address</b>        | Sets the IPv6 ACL used to match the IPv6 packets in the IPv6 PBR. |
| <b>set ipv6 default next-hop</b> | Defines the default next hop of the packet forwarding.            |
| <b>set ipv6 next-hop</b>         | Defines the next hop of the packet forwarding.                    |
| <b>show ipv6 policy</b>          | Displays the current policy-based routing application.            |
| <b>show route-map</b>            | Displays the current route map configurations.                    |

**Platform** N/A

**Description**

## 6.10 ipv6 policy-source in-interface

Use this command to configure the source address policy-based routing for the IPv6 packets received on an interface. Use the **no** form of this command to disable the source address policy-based routing on the interface.

**ipv6 policy-source in-interface** *interface-type* *sequence* *source-address/prefix-length* {[**default**] **next-hop** *ipv6-address* [*weight*] ]} [**default**] **interface** *out-interface-type* | **vrf** *vrf-name* }  
**no ipv6 policy-source in-interface** *interface-type* *sequence* [ *source-address/prefix-length* [ [**default**] **next-hop** *ipv6-address* [*weight*] ] ] [**default**] **interface** *out-interface-type* | **vrf** *vrf-name* }

**Parameter  
Description**

| Parameter                 | Description                                                                  |
|---------------------------|------------------------------------------------------------------------------|
| <i>interface-type</i>     | Interface type                                                               |
| <i>sequence</i>           | Policy sequence number. The lower the number is, the higher the priority is. |
| <i>source-address</i>     | Source IPv6 address.                                                         |
| <i>ipv6-address</i>       | Next hop IPv6 address                                                        |
| <i>weight</i>             | Next hop weight                                                              |
| <i>out-interface-type</i> | Type of the next hop interface                                               |
| <i>vrf-name</i>           | VRF instance name                                                            |

**Defaults** Source address PBR is disabled by default.

**Command  
Mode** Global configuration mode

**Usage Guide** You can configure multiple **ipv6 source-policy in-interface** commands on an interface. The policy with different source addresses must be configured with different sequence numbers. The lower the sequence number is, the higher the priority is.

In case of the same sequence number, the priority order of the next hop type is as follows:

```
vrf vrf-name > next-hop ipv6-address > interface out-interface-type> default next-hop
ipv6-address > default interface out-interface-type
```

The priority of the source address PBR is lower than that of the interface PBR.

**Configuration Examples** In the example below, when the interface GigabitEthernet0/0 receives an IPv6 datagram, if the source address of the datagram is in the network segment of 10::/64, the next-hop is set as 2000:1; if the source address of the datagram is in the network segment of 20::/64, the next-hop is set as 2000:2; otherwise, the general forwarding will be performed.

The following example configures source address PBR in global configuration mode.

```
Ruijie(config)# ipv6 source-policy in-interface gigabitEthernet 0/0 2 10::/64
next-hop 2000::1
Ruijie(config)# ipv6 source-policy in-interface gigabitEthernet 0/0 2 20::/64
next-hop 2000::2
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A

## 6.11 show ip pbr bfd

Use this command to display the correlation between the IPv4 policy router and BFD.

**show ip pbr bfd**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration Examples** The following example displays the correlation between the IPv4 policy router and BFD.

**Examples**

```
Ruijie# show ip pbr bfd
VRF ID Ifindex Host State Refcnt
```

|   |    |               |    |   |
|---|----|---------------|----|---|
| 0 | 13 | 192.168.8.100 | Up | 2 |
|---|----|---------------|----|---|

Field Description

| Field   | Description                                                            |
|---------|------------------------------------------------------------------------|
| VRF ID  | VRF of BFD neighbors correlated with the policy router                 |
| Ifindex | The interface index of BFD neighbors correlated with the policy router |
| Host    | The peer IPv4 address                                                  |
| State   | Up/Down status of BFD neighbors correlated with the policy router      |
| Refcnt  | Calculation referred by BFD neighbors                                  |

Related Commands

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

Platform Description  
N/A

## 6.12 show ip pbr route

Use this command to display the IPv4 PBR information on the interface.

**show ip pbr route** [ interface *if-name* | local ]

Parameter Description

| Parameter                       | Description                                                                                                                                                                                                                  |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>interface</b> <i>if-name</i> | Specifies the interface name. If the interface name is specified, the IPv4 BPR information of this interface is displayed. Otherwise, the IPv4 BPR information of all interfaces where the IPv4 PBR is enabled is displayed. |
| <b>local</b>                    | Displays the IPv4 PBR information on the local interface                                                                                                                                                                     |

Defaults  
N/A

Command Mode  
Privileged EXEC mode

Usage Guide  
Use this command to display the IPv4 PBR information.

Configuration  
The following example displays the IPv4 PBR information on the interfaces.

Examples

```
Ruijie#show ip pbr route
PBR IPv4 Route Summay : 1
Interface      : GigabitEthernet 0/1
```

```

Sequence      : 10
ACL[0]       : 2900
ACL_CLS[0]   : 0
Min Length   : None
Max Length   : None
VRF ID       : 0
Route Flags  :
  Route Type  : PBR
  Direct     : Permit
  Priority    : High
  Tos_Dscp   : None
  Precedence : None
Tos_Dscp     : 0
Precedence   : 0
Mode         : redundancy
NextHop Count : 1
  NextHop[0] : 192.168.8.100
Weight[0]    : 1
Ifindex[0]   : 2
    
```

| Parameter             | Description                                                                                                                                                                                                                                                                                                                                                                               |
|-----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| PBR IPv4 Route Summay | IPv4 PBR route count.                                                                                                                                                                                                                                                                                                                                                                     |
| Interface             | Interface where IPv4 PBR is enabled.                                                                                                                                                                                                                                                                                                                                                      |
| Sequence              | The PBR serial number.                                                                                                                                                                                                                                                                                                                                                                    |
| ACL                   | The ACL ID used in the match rule.                                                                                                                                                                                                                                                                                                                                                        |
| ACL_CLS               | The ACL type used in the match rule, such as the IP standard ACL.                                                                                                                                                                                                                                                                                                                         |
| Min Length            | The minimum match length.                                                                                                                                                                                                                                                                                                                                                                 |
| Max Length            | The maximum match length.                                                                                                                                                                                                                                                                                                                                                                 |
| VRF ID                | Port-correlated VRF ID.                                                                                                                                                                                                                                                                                                                                                                   |
| Route Flags           | PBR flag bit:<br>Route Type: "PBR" indicates PBR routes.<br>"Normal" indicates common routes.<br>Direct: PBR matching action, <b>permit</b> or <b>deny</b><br>Priority: PBR priority, <b>High</b> or <b>Low</b><br>Tos_Dscp: Displays whether the <b>tos</b> rule or the <b>dscp</b> rule is configured.<br>Precedence: Displays whether the <b>set ip precedence</b> rule is configured. |
| Mode                  | Specifies the redundancy mode or the next hop load balancing mode.                                                                                                                                                                                                                                                                                                                        |
| NextHop Count         | Specifies the next hop number. ECMP supports up to 32 next hops.                                                                                                                                                                                                                                                                                                                          |



|         |                                                                       |
|---------|-----------------------------------------------------------------------|
| Nexthop | Specifies the next hop IP address.                                    |
| Weight  | Specifies the next hop weight.                                        |
| lfindex | Specifies the outbound interface index corresponding to the next hop. |

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

### 6.13 show ip pbr route-map

Use this command to display the IPv4 PBR route-map information.

**show ip pbr route-map** *route-map-name*

| Parameter Description | Parameter | Description           |
|-----------------------|-----------|-----------------------|
|                       |           | <i>route-map-name</i> |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the IPv4 PBR route-map information.

```

Examples
Ruijie#show ip pbr route-map rm
Pbr VRF: GLOBAL, ID: 0
Forward Mode: redundance
Forwarding: On

route-map rm
route-map index: sequence 10, permit
Match rule:
ACL ID : 0, ACL CLS: 0, Name: acl1
Set rule:
IPv4 Nexthop: 192.168.8.100, (VRF Name: , ID: 0), Weight: 0, Flags: 0
PBR state info ifx: GigabitEthernet 0/1, Connected: true, Track State:
Up
    
```

| Field           | Description                                                                                  |
|-----------------|----------------------------------------------------------------------------------------------|
| Pbr VRF         | VRF name and VRF ID.                                                                         |
| Forward Mode    | Sets the load balance mode or the redundancy mode for the next hop.                          |
| Forwarding      | Displays whether the IP route forwarding is enabled.                                         |
| Route-map index | The serial number and the type of the sub-map.                                               |
| Match rule      | Match rule.                                                                                  |
| Set rule        | Set rule.                                                                                    |
| PBR state info  | PBR private data information, such as outbound interface and the link state of the next hop. |

#### Related Commands

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 6.14 show ip pbr source-route

Use this command to display information about IPv4 source address-based PBR.

**show ip pbr source-route [ interface *if-name* ]**

#### Parameter Description

| Parameter                       | Description                                                                                                                                                             |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>interface <i>if-name</i></b> | Displays the IPv4 PBR applied to a specified interface if <i>if-name</i> is specified.<br>Displays all applied IPv4 PBR information if <i>if-name</i> is not specified. |

**Command Mode** Privileged EXEC mode

**Default Level** 14

**Usage Guide** You can use this command to display the configured source address-based PBR.

**Configuration Examples** The following example displays information about the configured source address-based PBR.

```
Ruijie# show ip pbr source-route
PBR IPv4 Source Route
Interface      : GigabitEthernet 0/1
Sequence      : 10
```

```

Source address : 10.1.1.1/24
VRF ID        : 0
Route Flags   :
Route Type    : PBR
Direct        : Permit
Priority       : High
Match_ipaddr  : Exist
Mode          : redundance
Nexthop Count : 1
Nexthop[0]    : 192.168.8.100
Weight[0]     : 1
Ifindex[0]    : 2
    
```

Field description:

| Field         | Description                                                                                                                                                                                                                                                                                                               |
|---------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Interface     | Interface to which the PBR is applied                                                                                                                                                                                                                                                                                     |
| Sequence      | Sequence number of the PBR                                                                                                                                                                                                                                                                                                |
| VRF ID        | ID of the VRF table associated with an interface                                                                                                                                                                                                                                                                          |
| Route Flags   | Flag bit of PBR:<br>Route Type: type of routes. The value <b>PBR</b> indicates PBR routes while the value <b>Normal</b> indicates common routes.<br>Direct: PBR matching mode. The options include <b>permit</b> and <b>deny</b> .<br>Priority: priority of a PBR route. The options include <b>High</b> and <b>Low</b> . |
| Mode          | Sets the next hop to work in redundancy mode or load balancing mode.                                                                                                                                                                                                                                                      |
| Nexthop Count | Sets the number of next hops. ECMP supports a maximum of 32 next hops.                                                                                                                                                                                                                                                    |
| Nexthop       | Sets the next-hop IPv4 address.                                                                                                                                                                                                                                                                                           |
| Weight        | Sets the next-hop weight value.                                                                                                                                                                                                                                                                                           |
| Ifindex       | Sets the outbound interface index of the next hop.                                                                                                                                                                                                                                                                        |

## 6.15 show ip pbr statistics

Use this command to display the IPv4 PBR forwarded packet count.

**show ip pbr statistics [ interface *if-name* | local ]**

| Parameter | Parameter | Description |
|-----------|-----------|-------------|
|-----------|-----------|-------------|

|                                 |                                                                                                                                                                                                                                                    |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b>              |                                                                                                                                                                                                                                                    |
| <b>interface</b> <i>if-name</i> | Specifies the interface name. If the interface name is specified, the IPv4 PBR forwarded packet count of this interface is displayed. Otherwise, the IPv4 PBR forwarded packet count of all interfaces where the IPv4 PBR is enabled is displayed. |
| <b>local</b>                    | Displays the IPv4 PBR forwarded packet count on the local interface.                                                                                                                                                                               |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the IPv4 PBR forwarded packet count.

**Examples**

```
Ruijie#show ip pbr statistics
IPv4 Policy-based route statistic
  gigabitEthernet 0/1
    statistics : 10
```

|                         |                |                    |
|-------------------------|----------------|--------------------|
| <b>Related Commands</b> | <b>Command</b> | <b>Description</b> |
|                         | N/A            | N/A                |

**Platform** N/A

**Description**

## 6.16 show ip policy

Use this command to display the interface configured with the policy-based routing and the name of route map applied on the interface.

**show ip policy** [ *route-map-name* ]

|                              |                       |                                    |
|------------------------------|-----------------------|------------------------------------|
| <b>Parameter Description</b> | <b>Parameter</b>      | <b>Description</b>                 |
|                              | <i>route-map-name</i> | Indicates the name of a route map. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** You can use this command to verify the current PBR configured in the system.

**Configuration** The following example displays the current PBR configured in the system.

**Examples**

```
Ruijie#show ip policy
Banlance Mode: redundance
Interface      Route map
local          test
FastEthernet 0/0 test
```

**Related Commands**

| Command                          | Description                                              |
|----------------------------------|----------------------------------------------------------|
| <b>ip policy route-map</b>       | Applies the policy-based routing on the interface.       |
| <b>ip local policy route-map</b> | Applies the policy-based routing on the local interface. |

**Platform** N/A

**Description**

### 6.17 show ipv6 pbr bfd

Use this command to display the correlation between the IPv6 policy router and BFD.

**show ipv6 pbr bfd**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the correlation between the IPv6 policy router and BFD.

**Examples**

```
Ruijie# show ipv6 pbr bfd
VRF ID  Ifindex  Host                               State  Refcnt
    0      13  2000::2                           Up      1
```

Field Description

| Field   | Description                                                            |
|---------|------------------------------------------------------------------------|
| VRF ID  | VRF of BFD neighbors correlated with the policy router                 |
| Ifindex | The interface index of BFD neighbors correlated with the policy router |
| Host    | The peer IPv6 address                                                  |

|        |                                                                   |
|--------|-------------------------------------------------------------------|
| State  | Up/Down status of BFD neighbors correlated with the policy router |
| Refcnt | Calculation referred by BFD neighbors                             |

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform**

N/A

**Description**

## 6.18 show ipv6 pbr route

Use this command to display the IPv6 PBR information on the interface.

**show ipv6 pbr route [ interface *if-name* | local ]**

**Parameter Description**

| Parameter                       | Description                                                                                                                                                                                                                  |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>interface</b> <i>if-name</i> | Specifies the interface name. If the interface name is specified, the IPv6 BPR information of this interface is displayed. Otherwise, the IPv6 BPR information of all interfaces where the IPv6 PBR is enabled is displayed. |
| <b>local</b>                    | Displays the IPv6 PBR information on the local interface.                                                                                                                                                                    |

**Defaults**

N/A

**Command Mode**

Privileged EXEC mode

**Usage Guide**

N/A

**Configuration**

The following example displays the IPv6 PBR information on the interfaces.

**Examples**

```
Ruijie#show ipv6 pbr route
PBR IPv6 Route Summary : 1
Interface      : GigabitEthernet 0/2
  Sequence    : 10
  ACL[0]      : 2901
ACL_CLS[0]    : 0
  Min Length  : None
  Max Length  : None
  VRF ID      : 0
  Route Flags :
```

```

Route Type      : PBR
Direct         : Permit
Priority       : High
Tos_Dscp      : None
Precedence    : None
Tos_Dscp      : 0
Precedence    : 0
Mode          : redundancy
NextHop Count : 1
NextHop[0]    : 10::1
Weight[0]     : 1
Ifindex[0]    : 3
    
```

| Parameter             | Description                                                                                                                                                                                                                                                                                                                                                                               |
|-----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| PBR IPv4 Route Summay | IPv4 PBR route count.                                                                                                                                                                                                                                                                                                                                                                     |
| Interface             | Interface where IPv4 PBR is enabled.                                                                                                                                                                                                                                                                                                                                                      |
| Sequence              | The PBR serial number.                                                                                                                                                                                                                                                                                                                                                                    |
| ACL                   | The ACL ID used in the match rule.                                                                                                                                                                                                                                                                                                                                                        |
| ACL_CLS               | The ACL type used in the match rule, such as the IP standard ACL.                                                                                                                                                                                                                                                                                                                         |
| Min Length            | The minimum match length.                                                                                                                                                                                                                                                                                                                                                                 |
| Max Length            | The maximum match length.                                                                                                                                                                                                                                                                                                                                                                 |
| VRF ID                | Port associated VRF ID.                                                                                                                                                                                                                                                                                                                                                                   |
| Route Flags           | PBR flag bit:<br>Route Type: "PBR" indicates PBR routes.<br>"Normal" indicates common routes.<br>Direct: PBR matching action, <b>permit</b> or <b>deny</b><br>Priority: PBR priority, <b>High</b> or <b>Low</b><br>Tos_Dscp: Displays whether the <b>tos</b> rule or the <b>dscp</b> rule is configured.<br>Precedence: Displays whether the <b>set ip precedence</b> rule is configured. |
| Mode                  | Specifies the redundancy mode or the load balance mode for the next hop.                                                                                                                                                                                                                                                                                                                  |
| NextHop Count         | Specifies the next hop number. ECMP supports up to 32 next hops.                                                                                                                                                                                                                                                                                                                          |
| NextHop               | Specifies the next hop IP address.                                                                                                                                                                                                                                                                                                                                                        |
| Weight                | Specifies the next hop weight.                                                                                                                                                                                                                                                                                                                                                            |
| Ifindex               | Specifies the outbound interface index corresponding to the next hop                                                                                                                                                                                                                                                                                                                      |

Related Commands

| Command | Description |
|---------|-------------|
|---------|-------------|

|     |     |
|-----|-----|
| N/A | N/A |
|-----|-----|

**Platform** N/A  
**Description**

## 6.19 show ipv6 pbr route-map

Use this command to display the IPv6 PBR route-map information.

**show ipv6 pbr route-map** *route-map-name*

| Parameter Description | Parameter             | Description         |
|-----------------------|-----------------------|---------------------|
|                       | <i>route-map-name</i> | The route-map name. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the IPv6 PBR route-map information.

```

Examples Ruijie#show ipv6 pbr route-map rm6
Pbr VRF: GLOBAL, ID: 0
  Forward Mode: redundance
  Forwarding: On

route-map rm6
  route-map index: sequence 10, permit
Match rule:
  ACL ID :      0, ACL CLS: 0, Name: acl6
  Set rule:
    IPv6 Nexthop: 10::1, (VRF Name: , ID: 0), Weight: 0, Flags: 0
    PBR state info ifx: GigabitEthernet 0/0, Connected: true, Track State:
valid, Flags: 0
    
```

| Field           | Description                                                              |
|-----------------|--------------------------------------------------------------------------|
| Pbr VRF         | VRF name and VRF ID.                                                     |
| Forward Mode    | Sets the load balancing mode or to the redundancy mode for the next hop. |
| Forwarding      | Displays whether the IP route forwarding is enabled.                     |
| Route-map index | The serial number and the type of the sub-map.                           |



|                |                                                                                              |
|----------------|----------------------------------------------------------------------------------------------|
| Match rule     | Match rule                                                                                   |
| Set rule       | Set rule.                                                                                    |
| PBR state info | PBR private data information, such as outbound interface and the link state of the next hop. |

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 6.20 show ipv6 pbr source- route

Use this command to display the IPv6 source address PBR configuration.

**show ipv6 pbr source-route [ interface *if-name* ]**

**Parameter Description**

| Parameter                       | Description                                                                                                                                                                                                         |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>interface <i>if-name</i></b> | (Optional) Displays the IPv6 source address PBR configuration on the specified interface.<br><br>If the parameter is not configured, the IPv6 source address PBR configuration on all interfaces will be displayed. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the IPv6 source address PBR configuration.

**Examples**

```
Ruijie# show ipv6 pbr source-route
PBR IPv6 Source Route
Interface      : GigabitEthernet 0/1
Sequence      : 10
Source address : 1000::1/64
VRF ID        : 0
Route Flags   :
Route Type    : PBR
Direct       : Permit
Priority      : High
Match_ipaddr : Exist
Mode         : redundance
```

```

Nexthop Count : 1
Nexthop[0] : 1001::2
Weight[0] : 1
Ifindex[0] : 3
    
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 6.21 show ipv6 pbr statistics

Use this command to display the IPv6 PBR forwarded packet count.

**show ip pbr statistics [ interface *if-name* | local ]**

| Parameter Description | Parameter                       | Description                                                          |
|-----------------------|---------------------------------|----------------------------------------------------------------------|
|                       | <b>interface</b> <i>if-name</i> |                                                                      |
| <b>local</b>          |                                 | Displays the IPv6 PBR forwarded packet count on the local interface. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the IPv6 PBR forwarded packet count.

**Examples**

```

Ruijie#show ipv6 pbr statistics
IPv6 Policy-based route statistic
gigabitEthernet 0/1
statistics : 20
    
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 6.22 show ipv6 policy

Use this command to display which interfaces are configured with IPv6 PBR.

**show ipv6 policy** [ *route-map-name* ]

| Parameter Description | Parameter             | Description                 |
|-----------------------|-----------------------|-----------------------------|
|                       | <i>route-map-name</i> | Name of the PBR router map. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the current PBR applied in the system.

```

Ruijie#show ipv6 policy
Banlance Mode: redundance
Interface          Route map
VLAN 1             RM_for_Vlan_1
VLAN 2             RM_for_Vlan_2
    
```

| Field        | Description                                     |
|--------------|-------------------------------------------------|
| Balance Mode | The current PBR running mode.                   |
| Interface    | The name of interface with PBR applied.         |
| Route map    | The name of route map applied on the interface. |

| Related Commands | Command               | Description                                |
|------------------|-----------------------|--------------------------------------------|
|                  | <b>show route-map</b> | Displays the current configured route map. |

**Platform Description** N/A

## 7 VRF Commands

### 7.1 address-family

Use this command to configure an IPv4 address family or IPv6 address family for a multiprotocol VRF.

**address-family** { *ipv4* | *ipv6* }

| Parameter Description | Parameter   | Description                 |
|-----------------------|-------------|-----------------------------|
|                       | <b>ipv4</b> | Enters IPv4 address family. |
|                       | <b>ipv6</b> | Enters IPv6 address family. |

**Defaults** No IPv4 address family or IPv6 address family is configured for a multiprotocol VRF.

**Command mode** VRF configuration mode

**Usage Guide** This command is applicable only to the multiprotocol VRF.

**Configuration Examples** The following example defines a multiprotocol VRF vrf1 and configures an IPv4 address family.

```
Ruijie(config)#vrf definition vrf1
Ruijie(config-vrf)#address-family ipv4
Ruijie(config-vrf-af)#
```

| Related Commands | Command                    | Description                                      |
|------------------|----------------------------|--------------------------------------------------|
|                  | <b>exit-address-family</b> | Exits the VRF address family configuration mode. |
|                  | <b>vrf definition</b>      | Defines a multiprotocol VRF.                     |

**Platform Description** N/A

### 7.2 description

Use this command to configure the VRF description.

**description** *string*

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|-----------------------|-----------|-------------|

|               |                                                                         |
|---------------|-------------------------------------------------------------------------|
| <i>string</i> | VRF description character string. The maximum length is 244 characters. |
|---------------|-------------------------------------------------------------------------|

**Defaults** No VRF description is configured by default .

**Command mode** VRF configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example defines a single-protocol IPv4 VRF vrf1 and configure the description to vpn-a.

```
Ruijie(config)#ip vrf definition vrf1
Ruijie(config-vrf)#description vpn-a
```

The following example defines a multiprotocol VRF vrf2 and configure the description to vpn-b.

```
Ruijie(config)#vrf definition vrf1
Ruijie(config-vrf)#description vpn-b
```

| Related Commands | Command               | Description                         |
|------------------|-----------------------|-------------------------------------|
|                  | <b>ip vrf</b>         | Defines a single-protocol IPv4 VRF. |
|                  | <b>vrf definition</b> | Defines a multiprotocol VRF.        |

**Platform Description** N/A

### 7.3 exit-address-family

Use this command to exit VRF address family configuration mode.

**exit-address-family**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command mode** VRF address family configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example defines a multiprotocol VRF vrf1 and configures an IPv4 address family.

```
Ruijie(config)#vrf definition vrf1
```

```
Ruijie(config-vrf)#address-family ipv4
Ruijie(config-vrf-af)# exit-address-family
Ruijie(config-vrf)#
```

| <b>Related Commands</b> | Command               | Description                                                                       |
|-------------------------|-----------------------|-----------------------------------------------------------------------------------|
|                         | <b>address-family</b> | Configures an IPv4 address family or IPv6 address family for a multiprotocol VRF. |
|                         | <b>vrf definition</b> | Defines a multiprotocol VRF.                                                      |

**Platform** N/A  
**Description**

## 7.4 ip vrf

Use this command to create a VRF. Use the **no** form of this command to delete a VRF.

```
ip vrf vrf-name
no ip vrf vrf-name
```

| <b>Parameter Description</b> | Parameter       | Description |
|------------------------------|-----------------|-------------|
|                              | <i>vrf-name</i> | VRF name    |

**Defaults** No VRF is configured by default.

**Command mode** Global configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example creates a VRF.

```
Ruijie(config)# ip vrf redvrf
Ruijie(config-vrf)#
```

| <b>Related Commands</b> | Command | Description |
|-------------------------|---------|-------------|
|                         | N/A     | N/A         |

**Platform** N/A  
**Description**

## 7.5 ip vrf forwarding

Use this command to add an interface or sub-interface to a VRF. Use the **no** form of this command to quit the VRF.

**ip vrf forwarding** *vrf-name*

**no ip vrf forwarding** *vrf-name*

| Parameter Description | Parameter       | Description                                               |
|-----------------------|-----------------|-----------------------------------------------------------|
|                       | <i>vrf-name</i> | Name of the VRF that the interface or sub-interface joins |

**Defaults** By default, the interface does not belong to any VRF.

**Command mode** Interface configuration mode

**Usage Guide** You can bind the interface to the uni-protocol IPv4 VRF without the IPv6 enabled on the interface. On the device supporting the VRF, if the interface is bound to the uni-protocol IPv4 VRF with the IPv6 protocol enabled, the device cannot forward the IPv6 packets received on this interface.

**Configuration Examples** The following example adds an interface or sub-interface to a VRF.

```
Ruijie(config-if-GigabitEthernet 0/0)# ip vrf forwarding redvrf
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 7.6 ip vrf receive

Use this command to import the host and direct-connected route of one interface into the specified VRF routing table. Use the **no** form of this command to remove the imported host and direct-connected route from the VRF.

**ip vrf receive** *vrf-name*

**no ip vrf receive** *vrf-name*

| Parameter Description | Parameter       | Description                                                           |
|-----------------------|-----------------|-----------------------------------------------------------------------|
|                       | <i>vrf-name</i> | Name of the VRF that the host and direct-connected route imported to. |

**Defaults** By default, the host and direct-connected route of the interface are not imported to other VRFs

**Command mode** Interface configuration mode

**Usage Guide** Currently, the **ip vrf receive** command supports the VRF routing based on the PBR. This command is used to import the host with the main and slave addresses and direct-connected route of this interface into the specified VRF routing table. You need to execute this command multiple times to import this host and direct-connected route to multiple VRF routing tables. Unlike the **ip vrf forwarding** command, which does not bind the interface to the VRF and this interface still belongs to the global VRF. Configuring both **ip vrf forwarding** and **ip vrf receive** on an interface is not allowed. If one has been configured, configuring the other one will prompt an error message.

If **ip vrf forwarding** has been configured, configuring **ip vrf receive** will prompt:

```
% Cannot configure 'ip vrf receive' if interface is under a VRF
```

If **ip vrf receive** has been configured, configuring **ip vrf forwarding** will prompt:

```
% Cannot bind interface to a VRF if it has configed 'ip vrf receive'
```

**Configuration Examples** The following example imports the host and direct-connected route of one interface into the specified VRF routing table.

```
Ruijie(config)# interface FastEthernet0/1
Ruijie(config-if)# ip address 192.168.1.2 255.255.255.0
Ruijie(config-if)# ip policy route-map PBR-VRF-SELECTION
Ruijie(config-if)# ip vrf receive VRF_1
Ruijie(config-if)# ip vrf receive VRF_2
Ruijie(config-if)# end
```

**Related Commands**

| Command                  | Description                                         |
|--------------------------|-----------------------------------------------------|
| <b>ip vrf forwarding</b> | Adds the interface to a VRF.                        |
| <b>ip vrf</b>            | Creates a VRF.                                      |
| <b>set vrf</b>           | Sets the VRF in the routing map configuration mode. |

**Platform** N/A

**Description**

## 7.7 maximum routes

Use this command to set the maximum routes limit within the VRF. Use the **no** form of this command to remove the setting.

**maximum routes** *limit* { *warn-threshold* | **warning-only** }

**no maximum routes**

**Parameter**

| Parameter | Description |
|-----------|-------------|
|-----------|-------------|



| Description           |                                                                                                                                                     |
|-----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>limit</i>          | The maximum number of routes, in the range from 1 to 4,294,967,295. The routes which exceed the limits will not be added to the core routing table. |
| <i>warn-threshold</i> | The warning will be printed when the threshold is reached. The threshold value is in the range from 1 to 100.                                       |
| <b>warning-only</b>   | After the number of routes reaches <i>limit</i> , the warning will be printed but the routes will be added to the core routing table.               |

**Defaults** N/A

**Command Mode** Single-protocol VRF is configured in VRF configuration mode; multiple-protocol VRF is configured in address family mode.

**Usage Guide** This command is used to set the maximum number of routes for the VRF.

**Configuration Examples** The following example sets the maximum number of routes for vrf1 to 1,000, and enables the device to only print the warning.

```
Ruijie(config)# ip vrf vrf1
Ruijie(config-vrf)# maximum routes 1000 warning-only
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 7.8 vrf definition

Use this command to create the multiprotocol VRF.

**vrf definition** *vrf-name*

| Parameter Description | Parameter       | Description |
|-----------------------|-----------------|-------------|
|                       | <i>vrf-name</i> |             |

**Defaults** N/A

**Command mode** Global configuration mode

**Usage Guide** The single-protocol VRF configuration command **ip vrf** cannot be used to edit a multiprotocol VRF; the multiprotocol VRF configuration command **vrf definition** cannot be used to edit a single-protocol

IPv4 VRF.

**Configuration** The following example s creates a multiprotocol VRF *vrf1*.

**Examples**

```
Ruijie(config)#vrf definition vrf1
Ruijie(config-vrf)#
```

**Related  
Commands**

| Command                    | Description                                                                       |
|----------------------------|-----------------------------------------------------------------------------------|
| <b>description</b>         | Configures the description.                                                       |
| <b>address-family</b>      | Configures an IPv4 address family or IPv6 address family for a multiprotocol VRF. |
| <b>exit-address-family</b> | Exits the VRF address family configuration mode.                                  |
| <b>vrf forwarding</b>      | Binds a network interface to a multiprotocol VRF.                                 |

**Platform** N/A  
**Description**

## 7.9 vrf forwarding

Use this command to bind a network interface to a multiprotocol VRF.

**vrf forwarding** *vrf-name*

**Parameter  
Description**

| Parameter       | Description                                                                                            |
|-----------------|--------------------------------------------------------------------------------------------------------|
| <i>vrf-name</i> | VRF name, which shall be a multiprotocol VRF instead of a single-protocol VRF that supports IPv4 only. |

**Defaults** The network interface is not bound to any VRF.

**Command  
mode** Interface configuration mode

**Usage Guide** The configuration command **ip vrf forwarding** cannot be used to bind a network interface to a multiprotocol VRF; the configuration command **vrf forwarding** cannot be used to bind a network interface to a single-protocol IPv4 VRF.

An interface cannot be bound to a multiprotocol VRF that is not configured with any address family. To bind a network interface to a multiprotocol VRF, you should delete the existing IPv4 addresses, VRRP IPv4 addresses, IPv6 addresses and VRRP IPv6 addresses, and disable IPv6 on the interface. When a network interface is bound to a multiprotocol VRF, no IPv4 address or VRRP IPv4 address should be configured for the interface if no IPv4 address family is configured for the VRF. You should configure an IPv4 address family for the VRF before configuring an IPv4 address and VRRP IPv4 address for the interface.

When a network interface is bound to a multiprotocol VRF, no IPv6 address or VRRP IPv6 address should be configured for the interface if no IPv6 address family is configured for the VRF. You should configure an IPv6 address family for the VRF before configuring an IPv6 address and VRRP IPv6 address for the interface.

If you delete a multiprotocol VRF's IPv4 address family, you should delete the IPv4 addresses and VRRP IPv4 addresses of all network interfaces bound to the VRF, and delete the IPv4 static routes whose routing VRF or next-hop VRF is that VRF. Likewise, if you delete a multiprotocol VRF's IPv6 address family, you should delete the IPv4 addresses and VRRP IPv6 addresses of all network interfaces bound to the VRF, disable IPv6 on the interfaces, and delete the IPv6 static routes whose routing VRF or next-hop VRF is that VRF.

**Configuration** The following example binds the interface VLAN 1 to a multiprotocol VRF vrf1.

**Examples**

```
Ruijie(config)#vrf definition vrf1
Ruijie(config-vrf)#address-family ipv4
Ruijie(config-vrf-af)#exit-address-family
Ruijie(config-vrf)#address-family ipv6
Ruijie(config-vrf-af)#exit-address-family

Ruijie(config-vrf)#interface vlan 1
Ruijie(config-if)#vrf forwarding vrf1
Ruijie(config-if)#ip address 1.1.1.1 255.255.255.0
Ruijie(config-if)#ipv6 address 1000::1/64
```

**Related  
Commands**

| Command               | Description                  |
|-----------------------|------------------------------|
| <b>vrf definition</b> | Defines a multiprotocol VRF. |

**Platform** N/A

**Description**

## 7.10 vrf receive

Use this command to add the local host's route and direct route with the interface's IPv4/v6 address to the routing table of the specified VRF.

**vrf receive** *vrf-name*

**Parameter  
Description**

| Parameter       | Description                                                                          |
|-----------------|--------------------------------------------------------------------------------------|
| <i>vrf-name</i> | VRF name, which should be a multiprotocol VRF instead of a single-protocol IPv4 VRF. |

**Defaults** N/A

**Command** Interface configuration mode

**mode**

**Usage Guide** This command is not used to bind an interface to a VRF, and the interface is still a global interface. If the administrator needs to use PBR to choose VRF, the **vrf receive** command should be configured on the interfaces where PBR is applied for each selected VRF.

When an IPv4 address family is configured for a multiprotocol VRF, the local host's route and direct route with the interface's IPv4 address is added to the IPv4 routing table of the specified VRF, and the local host's route with the IPv4 address of the master VRRP group on the interface is added to the IPv4 routing table of the specified VRF. When an IPv6 address family is configured for a multiprotocol VRF, the local host's route and direct route with the interface's IPv6 address is added to the IPv6 routing table of the specified VRF, and the local host's route with the IPv6 address of the master VRRP group on the interface is added to the IPv6 routing table of the specified VRF.

The **ip vrf forwarding** and **vrf receive** commands are mutually exclusive on an interface, and so are the **vrf forwarding** and **vrf receive** commands. If both commands are configured on an interface, an error message will be shown.

If the **ip vrf forwarding** or **vrf forwarding** command is configured first, and then the **vrf receive** command is configured, the following message will be displayed:

```
% Cannot configure 'vrf receive' if interface is under a VRF
```

If the **vrf receive** command is configured first, and then the **ip vrf forwarding** or **vrf forwarding** command is configured, the following message will be displayed:

```
% Cannot configure 'vrf forwarding vrf2' on this interface, please delete 'ip vrf receive' and 'vrf receive' first.
```

**Configuration** The following example selects a VRF using IPv6 PBR on VLAN 1.

**Examples**

```
Ruijie(config)#vrf definition vrf1
Ruijie(config-vrf)#address-family ipv6
Ruijie(config-vrf-af)#exit-address-family

Ruijie(config-vrf)#vrf definition vrf2
Ruijie(config-vrf)#address-family ipv6
Ruijie(config-vrf-af)#exit-address-family

Ruijie(config-vrf)#route-map pbr-vrf-selection permit 10
Ruijie(config-route-map)#match ipv6 address acl1
Ruijie(config-route-map)#set vrf vrf1
Ruijie(config-route-map)#route-map pbr-vrf-selection permit 20
Ruijie(config-route-map)#set vrf vrf2

Ruijie(config-route-map)#interface vlan 1
Ruijie(config-if)#ipv6 policy route-map pbr-vrf-selection
Ruijie(config-if)#ipv6 address 1000::1/64
Ruijie(config-if)#vrf receive vrf1
Ruijie(config-if)#vrf receive vrf2
```

**Related  
Commands**

| <b>Command</b>        | <b>Description</b>                                                                |
|-----------------------|-----------------------------------------------------------------------------------|
| <b>vrf definition</b> | Defines a multiprotocol VRF.                                                      |
| <b>address-family</b> | Configures an IPv4 address family or IPv6 address family for a multiprotocol VRF. |
| <b>set vrf</b>        | Configures a VRF in the route map configuration mode.                             |

**Platform  
Description**

N/A

## 7.11 show ip vrf

Use this command to display the VRF information.

**show ip vrf [ brief | detail | interfaces ]**

### Parameter Description

| Parameter         | Description                                                    |
|-------------------|----------------------------------------------------------------|
| <b>brief</b>      | (Optional) Displays the VRF information in brief.              |
| <b>detail</b>     | (Optional) Displays the VRF information in detail.             |
| <b>interfaces</b> | (Optional) Displays the VRF's interface information in detail. |

### Defaults

All VRF information is displayed without parameter specified.

### Command mode

Privileged EXEC mode

### Usage Guide

Use this command to display the VRF information, which can be divided into two levels:

Use the keyword **brief** to display the information in brief.

Use the keyword **detail** to display the information in detail.

Use the keyword **interfaces** to display the VRF's interface information.

### Configuration

The following example displays the VRF information.

### Examples

```
Ruijie#show ip vrf
Name                    Interfaces
aaa                    GigabitEthernet 0/0
                        GigabitEthernet 0/1
```

### Related Commands

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

### Platform

N/A

### Description

## 7.12 show vrf

Use this command to display the VRF configuration (including the single-protocol VRF and the multiple-protocol VRF).

**show vrf [ ipv4 | ipv6 | brief | count | detail ]**

### Parameter Description

| Parameter | Description |
|-----------|-------------|
|-----------|-------------|

|               |                                                                                                      |
|---------------|------------------------------------------------------------------------------------------------------|
| <b>ipv4</b>   | Displays the brief VRF (the single-protocol VRF) information of the IPv4 address family.             |
| <b>Ipv6</b>   | Displays the VRF brief information of the IPv6 address family.                                       |
| <b>brief</b>  | Displays the brief VRF (including the single-protocol VRF and the multiple-protocol) information.    |
| <b>count</b>  | Displays the capacity of VRF and its current value.                                                  |
| <b>detail</b> | Displays the detailed VRF (including the single-protocol VRF and the multiple-protocol) information. |

**Defaults** N/A

**Command mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays brief information about all VRF.

**Examples**

```
Ruijie#show vrf
  Name          Default RD      Protocols  Interfaces
  ---          -
  aaa           <not set>      ipv4
  aab           <not set>
  bbb           <not set>      ipv6
  ccc           <not set>      ipv4,ipv6  V11
```

:

| Field      | Description                                                                                                                                                          |
|------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Name       | VRF name.                                                                                                                                                            |
| Default RD | Default RD of the VRF.                                                                                                                                               |
| Protocol   | The address family of the VRF. IPv4 indicates the VRF is enabled in the IPv4 address family mode; ipv6 indicates the VRF is enabled in the IPv6 address family mode. |
| Interfaces | The interface list of the VRF. The interface where the [ip] vrf forwarding command has been configured will be displayed on that list.                               |

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A

## 8 RIPng Commands

### 8.1 clear ipv6 rip

Use this command to clear the RIPng routes.

**clear ipv6 rip**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** None

**Command mode** Privileged EXEC mode

**Usage Guide** Running this command removes all RIPng routes and this operation may have great impact on the RIPng protocol. This command should be used with caution.

**Configuration Examples** The following example clears the RIPng routes:

```
Ruijie# clear ipv6 rip
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

### 8.2 default-metric

Use this command to configure the default metric for RIPng. Use the **no** form of this command to restore the default value.

**default-metric metric**

**no default-metric**

| Parameter Description | Parameter     | Description                                                                                                                                 |
|-----------------------|---------------|---------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <i>metric</i> | Sets the default metric value. The valid range is from 1 to 16. The route is unreachable if the metric value is larger than or equal to 16. |

**Defaults** The default value is 1.



**Command mode** Routing process configuration mode.

**Usage Guide** This command shall be used with the **redistribute** command. When redistributing the route from one route process to RIPng, due to the incompatibility of metric calculation mechanisms of different routing protocols, it fails to translate the routing metric values. To this end, the RIPng metric value shall be defined when translating the metric values. If there is no defined metric value, use the **default-metric** command to define one; and the defined metric value will overwrite the value of the **default-metric** command. By default, the **default-metric** value is 1.

**Configuration Examples** The following example shows how to set the RIPng metric value as 3 when redistributing OSPF process 100:

```
Ruijie(config-router)# default-metric 3
Ruijie(config-router)# redistribute ospf 100
```

**Related Commands**

| Command             | Description                                                            |
|---------------------|------------------------------------------------------------------------|
| <b>redistribute</b> | Redistributes the route from one route domain to another route domain. |

**Platform Description** N/A

## 8.3 distance

Use this command to set the administrative distance of RIPng. Use the **no** form of this command to restore the default value.

**distance** *distance*  
**no distance**

**Parameter Description**

| Parameter       | Description                                                         |
|-----------------|---------------------------------------------------------------------|
| <i>distance</i> | Sets the RIPng administrative distance. The range is from 1 to 254. |

**Defaults** The default distance is 120

**Command mode** Routing process configuration mode.

**Usage Guide** N/A

**Configuration Examples** The following example shows how to set the RIPng administrative distance as 160:

```
Ruijie(config)# ipv6 router rip
```

```
Ruijie(config-router)# distance 160
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform**

N/A

**Description**

## 8.4 distribute-list

Use this command to filter the in/out route in the prefix list. Use the **no** form of this command to remove route filtering.

**distribute-list prefix-list** *prefix-list-name* { **in** | **out** } [ *interface-type interface-name* ]

**no distribute-list prefix-list** *prefix-list-name* { **in** | **out** } [ *interface-type interface-name* ]

**Parameter  
Description**

| Parameter                                      | Description                                                        |
|------------------------------------------------|--------------------------------------------------------------------|
| <b>prefix-list</b> <i>prefix-list-name</i>     | Name of the prefix list which is used to filter the route.         |
| <b>in</b>   <b>out</b>                         | Filters the in or out route in the distribute list.                |
| <i>interface-type</i><br><i>interface-name</i> | (Optional) Applies the distribute list to the specified interface. |

**Defaults**

By default, no distribute list is defined.

**Command  
mode**

Routing process configuration mode.

**Usage Guide**

This command is used to configure the route distribution control list to filter all update routes for the purpose of refusing to receive or send the specified routes. If the interface is not specified, the update routes on all interfaces are filtered.

**Configuration**

The following example shows how to filter the received update route on the interface eth0 (only those update routes within the **prefix-list** *allowpre* prefix list range can be received)

**Examples**

```
Ruijie(config)# ipv6 router rip
Ruijie(config-router)# distribute-list prefix-list allowpre in eth0
```

**Related  
Commands**

| Command             | Description                |
|---------------------|----------------------------|
| <b>redistribute</b> | Sets route redistribution. |

**Platform**

N/A

**Description**

## 8.5 graceful-restart

Use this command to configure the graceful restart (GR) function for the RIPng process.

**graceful-restart** [ **grace-period** *grace-period* ]

Use the **no** form of this command restore the default configurations.

**no graceful-restart** [ **grace-period** ]

### Parameter Description

| Parameter               | Description                                                                                                                                       |
|-------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>graceful-restart</b> | Enables the GR function.                                                                                                                          |
| <b>grace-period</b>     | Displays the configured grace period.                                                                                                             |
| <i>grace-period</i>     | Indicates the configured GR period, ranging from 1 to 1800 seconds.<br>The default value is the smaller between twice of the update time and 60s. |

### Defaults

The GR function is enabled by default.

### Command Mode

Routing process configuration mode

### Default Level

14

### Usage Guide

The GR function is configured based on RIPng instances. Different parameters can be configured for different RIPng instances as required.

The GR period indicates the maximum duration from RIPng restart to RIPng GR completion. In this time period, the forwarding table before restart is used and the RIPng route is restored to the status before restart. After the GR period expires, the RIPng process exits the GR status and the common RIPng operation is performed.

The **graceful-restart grace-period** command allows a user to modify the GR period in explicit mode. Note that GR is completed and the RIPng route is updated once before the RIPng route becomes invalid. If the GR period is improperly set, continuous data forwarding in the GR process cannot be ensured. A typical case is as follows:

If the GR period is greater than the invalid time of the neighbor route, GR is not completed before the route becomes invalid and the route is not advertised to the neighbor again. The neighbor route stops forwarding data after the route becomes invalid, resulting in data forwarding interruption. Therefore, unless otherwise specified, it is not recommended to adjust the GR period. If the GR period needs to be configured, check configuration of the **timers** command to ensure that the GR period value is greater than the route update time and smaller than the route invalid time.

When GR is performed for the RIPng process, ensure that the network environment is stable.

### Configuration Examples

The following example enables the GR function for the RIPng process and configures the GR period.

#### Examples

```
Ruijie(config)# ipv6 router rip
Ruijie(config-router)# graceful-restart grace-period 90
```

|                             |                                                                                                                            |
|-----------------------------|----------------------------------------------------------------------------------------------------------------------------|
| <b>Verification</b>         | Run the <b>show ipv6 rip</b> command to check whether the GR function is configured and query the configured grace period. |
| <b>Prompts</b>              | N/A                                                                                                                        |
| <b>Common Errors</b>        | N/A                                                                                                                        |
| <b>Platform Description</b> | N/A                                                                                                                        |

## 8.6 ipv6 rip default-information

Use this command to generate a default IPv6 route to the RIPng. Use the **no** form of this command to remove the default route.

**ipv6 rip default-information** { **only** | **originate** } [ **metric** *metric-value* ]

**no ipv6 rip default-information**

### Parameter Description

| Parameter                         | Description                                                                                            |
|-----------------------------------|--------------------------------------------------------------------------------------------------------|
| <b>only</b>                       | Advertises the IPv6 default route only.                                                                |
| <b>originate</b>                  | Advertises both of the IPv6 default route and other routes.                                            |
| <b>metric</b> <i>metric-value</i> | Sets the metric value for the default route. The valid range is from 1 to 15. The default metric is 1. |

**Defaults** By default, no default route is configured.

**Command mode** Interface configuration mode

**Usage Guide** With this command configured on an interface, the interface advertises an IPv6 default route and the route itself is not to join the device route forwarding table and the RIPng route database. To avoid the route loop, once this command has been configured on the interface, RIPng refuses to receive the default route update message advertised from the neighbor.

**Configuration Examples** The following example shows how to create a default route to the RIPng routing process on the interface ethernet0/0 and enable this interface to advertise the default route only:

```
Ruijie(config)# interface ethernet 0/0
Ruijie(config-if)# ipv6 rip default-information only
```

### Related Commands

| Command                       | Description                                |
|-------------------------------|--------------------------------------------|
| <b>show ipv6 rip</b>          | Displays the RIPng process and statistics. |
| <b>show ipv6 rip database</b> | Displays the RIPng route.                  |

**Platform** N/A

**Description**

## 8.7 ipv6 rip enable

Use this command to enable the RIPng on the interface. Use the **no** form of this command to disable RIPng on the interface.

**ipv6 rip enable**

**no ipv6 rip enable**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** It is disabled by default.

**Command mode** Interface configuration mode.

**Usage Guide** This command is used to add the RIPng interface. Before this command is configured, if the RIPng is not enabled, use this command to enable the RIPng automatically.

**Configuration Examples** The following example shows how to enable the RIPng on the interface 0/0:

```
Ruijie(config)# interface ethernet 0/0
Ruijie(config-if)# ipv6 rip enable
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 8.8 ipv6 rip metric-offset

Use this command to set the interface metric value. Use the **no** form of this command to remove the metric configurations.

**ipv6 rip metric-offset *value***

**no ipv6 rip metric-offset**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
|-----------|-------------|

|              |                                                                                    |
|--------------|------------------------------------------------------------------------------------|
| <i>value</i> | Sets the interface metric value on the interface. The valid range is from 1 to 16. |
|--------------|------------------------------------------------------------------------------------|

**Defaults** The default value is 1.

**Command mode** Interface configuration mode.

**Usage Guide** Before the route is added to the routing list, the interface metric value shall be upon the route metric. To this end, the interface metric value influences the route usage.

**Configuration** The following example shows how to set the metric value of the interface Ethernet 0/1 as 5:

**Examples**

```
Ruijie(config)# interface ethernet 0/1
Ruijie(config-if)# ipv6 rip metric-offset 5
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A

## 8.9 ipv6 rip subvlan

Use this command to enable RIPng on super VLANs. Use the **no** form of this command to restore the default setting.

**ipv6 rip subvlan [all | vid]**

**no ipv6 rip subvlan**

**Parameter Description**

| Parameter  | Description                                                     |
|------------|-----------------------------------------------------------------|
| all        | Indicates that packets are allowed to be sent to all sub VLANs. |
| <i>vid</i> | Specifies the sub VLAN ID. The value ranges from 1 to 4094.     |

**Defaults** The default setting takes effect only on super VLANs with RIPng disabled.

**Command Mode** Interface configuration mode.

**Usage Guide** In normal cases, a super VLAN contains multiple sub VLANs. Multicast packets of a super VLAN are also sent to its sub VLANs. In this case, when RIPng multicast packets are sent over a super VLAN containing multiple sub VLANs, the RIPng multicast packets are replicated multiple times, and the device processing capability is insufficient. As a result, a large number of packets are discarded, causing the neighbor down error. In most scenarios, the RIPng function does not need to be enabled on a super VLAN. Therefore, the RIPng function is disabled by default. However, in some scenarios, the RIPng function must be run on the super VLAN, but packets only need to be sent to one sub VLAN. In this case, run this command to specify a particular sub VLAN. You must be cautious in configuring packet transmission to all sub VLANs, as the large number of sub VLANs may cause a device processing bottleneck, which will lead to the neighbor down error.

**Configuration** The following example sends the RIPng multicast packets to sub VLAN 1024 of super VLAN 300.

**Examples**

```
Ruijie(config)# interface vlan 300
Ruijie(config-if-VLAN 300)# ipv6 rip subvlan 1024
```

## 8.10 ipv6 router rip

Use this command to create the RIPng process and enter routing process configuration mode. Use the **no** form of this command to remove the RIPng process.

**ipv6 router rip**  
**no ipv6 router rip**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** No RIPng process is configured by default.

**Command mode** Global configuration mode.

**Usage Guide** N/A.

**Configuration Examples** The following example shows how to create the RIPng process and enter routing process configuration mode:

```
Ruijie(config)# ipv6 router rip
```

| Related Commands | Command                | Description                                   |
|------------------|------------------------|-----------------------------------------------|
|                  | <b>ipv6 rip enable</b> | Enables the RIPng on the specified interface. |

**Platform** N/A  
**Description**

## 8.11 passive-interface

Use this command to disable the interface to send update packets. Use the **no** form of this command to enable the interface to send update packets.

**passive-interface** { **default** | *interface-type interface-num* }

**no passive-interface** { **default** | *interface-type interface-num* }

| Parameter Description | Parameter                           | Description                                 |
|-----------------------|-------------------------------------|---------------------------------------------|
|                       | <b>default</b>                      | Enables the passive mode on all interfaces. |
|                       | <i>interface-type interface-num</i> | Interface type and interface number.        |

**Defaults** No passive interface is configured by default.

**Command mode** Routing process configuration mode.

**Usage Guide** You can use the **passive-interface default** command to enable the passive mode on all interfaces. Then ,use the **no passive-interface interface-type interface-num** command to remove the specified interface from the passive mode.

**Configuration Examples** The following example shows how to enable the passive mode on all interfaces and remove interface ethernet 0/0 from the passive mode:

```
Ruijie(config-router)# passive-interface default
Ruijie(config-router)# no passive-interface ethernet 0/0
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 8.12 redistribute

Use this command to redistribute the route of other routing protocols to RIPng. Use the **no** form of this command to remove the redistribution configuration.

**redistribute** { **bgp** | **connected** | **isis** [*area-tag*] | **ospf** *process-id* | **static**} [ **metric** *metric-value* | **route-map** *route-map-name* ]

**no redistribute** { **bgp** | **connected** | **isis** [*area-tag*] | **ospf** *process-id* | **static**} [ **metric** *metric-value* |



**route-map** *route-map-name* ]

**Parameter  
Description**

| Parameter                              | Description                                                                                                                        |
|----------------------------------------|------------------------------------------------------------------------------------------------------------------------------------|
| <b>bgp</b>                             | Redistributes the BGP routes to RIPng.                                                                                             |
| <b>connected</b>                       | Redistributes the connected routes to RIPng.                                                                                       |
| <b>isis</b> [ <i>area-tag</i> ]        | Redistributes the ISIS routes to RIPng.<br><i>area-tag</i> indicates the ISIS process number.                                      |
| <b>ospf</b> <i>process-id</i>          | Redistributes the OSPF routes to RIPng.<br><i>process-id</i> indicates the OSPF process number, and the range is from 1 to 65,535. |
| <b>static</b>                          | Redistributes the static routes to RIPng.                                                                                          |
| <b>metric</b> <i>metric-value</i>      | (Optional) Sets the metric value for the route redistributed to RIPng.                                                             |
| <b>route-map</b> <i>route-map-name</i> | (Optional) Sets the redistribution route filtering.                                                                                |

**Defaults**

By default, the routes of other routing protocols are not redistributed.

If the **default-metric** command is not configured, the default metric value is 1;

By default, the **route-map** is not configured;

By default, all sub-type routes in the specified routing process are redistributed.

**Command  
mode**

Routing process configuration mode.

**Usage Guide**

This command is used to redistribute the external routes to RIPng.

It is unnecessary to transform the metric of one routing protocol into another routing protocol in the process of the route redistribution, for the metric calculation methods of the different routing protocols are different. The RIP and OSPF metric calculations are incomparable for the reason that the RIP metric calculation is hop-based while the OSPF one is bandwidth-based.

The instance, from where the routing information is redistributed to the RIPng, must be specified in the process of configuring the multi-instance protocol redistribution.

**Configuration  
Examples**

The following example shows how to redistribute the static route, use the route map *mymap* to filter and set the metric value as 8:

```
Ruijie(config)# ipv6 router rip
Ruijie(config-router)# redistribute static route-map
mymap metric 8
```

**Related  
Commands**

| Command                | Description                                                                         |
|------------------------|-------------------------------------------------------------------------------------|
| <b>default-metric</b>  | Defines the default RIPng metric value when redistributing other routing protocols. |
| <b>distribute-list</b> | Filters the RIPng routing update packets.                                           |

**Platform**

N/A

**Description**

### 8.13 show ipv6 rip

Use this command to show the parameters and each statistical information of the RIPng routing protocol process.

**show ipv6 rip**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command mode** Privileged EXEC mode or user mode.

**Usage Guide** N/A

```

Configuration Ruijie# show ipv6 rip
Examples Routing Protocol is "RIPng"
Sending updates every 10 seconds with +/-50%, next due in 8 seconds
Timeout after 30 seconds, garbage collect after 60 seconds
Outgoing update filter list for all interface is:
distribute-list prefix aa out
Incoming update filter list for all interface is: not set
Default redistribution metric is 1
Default distance is 120
Redistribution:
Redistributing protocol connected route-map rm
Redistributing protocol static
Redistributing protocol ospf 1
Default version control: send version 1, receive version 1
Interface          Send  Recv
VLAN 1              1    1
Loopback 1          1    1
Routing Information Sources:
None
    
```

| Related Commands | Command              | Description                                                                    |
|------------------|----------------------|--------------------------------------------------------------------------------|
|                  | <b>show ipv6 rip</b> | Displays the parameters and each statistical information of the RIPng process. |

**Platform** N/A  
**Description**

## 8.14 show ipv6 rip database

Use this command to display the RIPng route entries.

**show ipv6 rip database**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command mode** Privileged EXEC mode or user mode.

**Usage Guide** N/A

```

Configuration Ruijie# show ipv6 rip database
Examples Codes: R - RIPng,C - Connected,S - Static,O - OSPF,B - BGP
sub-codes:n - normal,s - static,d - default,r - redistribute,
i - interface, a/s - aggregated/suppressed
S(r) 2001:db8:1::/64, metric 1, tag 0
Loopback 0/::
S(r) 2001:db8:2::/64, metric 1, tag 0
Loopback 0/::
C(r) 2001:db8:3::/64, metric 1, tag 0
VLAN 1/::
S(r) 2001:db8:4::/64, metric 1, tag 0
Null 0/::
C(i) 2001:db8:5::/64, metric 1, tag 0
Loopback 1/::
S(r) 2001:db8:6::/64, metric 1, tag 0
Null 0/::
    
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 8.15 split-horizon

Use the **split-horizon** command to enable the RIPng split-horizon function in routing process configuration mode. Use the **no** form of this command to disable this function. Use the **split-horizon poisoned-reverse** command to enable the RIPng poisoned reverse horizontal split function in routing process configuration mode. Use the **no** form of this command to disable this function.

**split-horizon [ poisoned-reverse ]**

**no split-horizon [ poisoned-reverse ]**

| Parameter Description | Parameter               | Description                                               |
|-----------------------|-------------------------|-----------------------------------------------------------|
|                       | <b>poisoned-reverse</b> | (Optional) Enables the poisoned-reverse horizontal split. |

**Defaults** RIPng split horizon is enabled by default.

**Command mode** Routing process configuration mode.

**Usage Guide** In the process of packet updating, split-horizon function prevents some routing information from being advertised through the interface learning those routing information. The poisoned reverse horizontal split function advertises some routing information to the interface learning those routing information, and the metric value is set as 16. The RIPng routing protocol belongs to the distance vector routing protocol, so the horizontal split shall be noticed in the actual application. You can use the **show ipv6 rip** command to determine whether the RIPng split-horizon function is enabled or not.

**Configuration** The following example shows how to disable the RIPng horizontal split:

**Examples**

```
Ruijie(config)# ipv6 router rip
Ruijie(config-router)# no split-horizon
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 8.16 timers

Use this command to adjust the RIPng timer. Use the **no** form of this command to restore the default settings.

**timers update invalid flush**

**no timers**

| Parameter Description | Parameter      | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|-----------------------|----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <i>update</i>  | Sets the routing update time, in seconds. The update parameter defines the period of sending the routing update packets by the device. The invalid and flush parameter reset once the update packets are received.                                                                                                                                                                                                                                              |
|                       | <i>invalid</i> | Sets the routing invalid time, in seconds, starting from receiving the last valid update packet. The invalid parameter defines the invalid time for the un-updated routing in the routing list. The routing invalid time shall be three times larger than the routing update time. The routing will be invalid if no update packets are received within the routing invalid time, and it will reset if the update packets are received within the invalid time. |
|                       | <i>flush</i>   | Sets the routing flush time, in seconds, starting from RIPng entering to invalid state. The invalid routing will be removed from the routing list if the flush time expires.                                                                                                                                                                                                                                                                                    |

**Defaults** The default update time is 30 seconds; the default invalid time is 180 seconds; and the default flush time is 120 seconds.

**Command mode** Routing process configuration mode.

**Usage Guide** Adjusting the above time may speed up the RIPng convergence time and the troubleshooting time. The RIPng time must be consistent for the devices connecting to the same network. You are not recommended to adjust the RIP time, except for the specific requirement.

Use the **show ipv6 rip** command to view the current RIPng time parameter setting.

In the low-speed link, with the short time configured, large amount of the update packets consumes a lot of bandwidth. Generally, the short time can be configured in the Ethernet or 2Mbps-higher line to shorten the convergence time of the network routing.

**Configuration Examples** The following example shows how to send the RIP update packets every 10 seconds. The routing will be invalid if no update packets are received within 30 seconds, and the routing will be removed after being invalid for 90 seconds.

```
Ruijie(config)# ipv6 router rip
Ruijie(config-router)# timers 10 30 90
```

| Related Commands | Command                       | Description                                                                   |
|------------------|-------------------------------|-------------------------------------------------------------------------------|
|                  | <b>show ipv6 rip</b>          | Displays the parameters and the statistical information of the RIPng process. |
|                  | <b>show ipv6 rip database</b> | Displays the RIPng routes.                                                    |

**Platform**      N/A  
**Description**

## 9 NSM Commands

### 9.1 clear ip route

Use this command to clear the route cache.

```
clear ip route [ vrf vrf_name ] { * | network [ netmask ] | }
```

|                          | Parameter           | Description                                                                                                                                                                          |
|--------------------------|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Parameter<br>Description | <i>vrf vrf_name</i> | (Optional) Specifies the route cache of the specified VRF instance. If no VRF is specified, the route cache of all VRF instances is cleared.                                         |
|                          | *                   | Clears all route cache.                                                                                                                                                              |
|                          | <i>network</i>      | Specifies the route cache of the network or subnet.                                                                                                                                  |
|                          | <i>netmask</i>      | (Optional) Subnet mask. If no subnet mask is specified, the longest match principle is used when you match <i>network</i> with the route. The cache of the longest match is cleared. |

#### Command

**Mode** Privileged EXEC mode

**Usage** Clearing route cache clears the corresponding routes and triggers the routing protocol relearning.

**Guide** Please note that clearing all route cache leads to temporary network disconnection.

**Examples** The following example clears the cache of the route which is the longest match with IP address 192.168.12.0.

```
clear ip route 192.168.12.0
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

#### Platform

**Description** This command is not supported on 2-layer devices.

### 9.2 ip default-network

Use this command to configure the default network globally. Use the **no** or **default** form of this command to restore the default setting.

```
ip default-network network
```

```
no ip default-network network
```

```
default ip default-network network
```

| Parameter   | Parameter      | Description     |
|-------------|----------------|-----------------|
| Description | <i>network</i> | Default network |

**Defaults** The default is 0.0.0.0/0.

**Command Mode** Global configuration mode

**Usage** The goal of this command is to generate the default route. The default network must be reachable in the routing table, but not the directly connected network.

**Guide** The default network always starts with an asterisk ("\*"), indicating that it is the candidate of the default route. If there is connected route and the route without the next hop in the default network, the default route must be a static route.

The following example sets 192.168.100.0 as the default network. Since the static route to the network is configured, the device will automatically generate a default route.

**Examples**

```
ip route 192.168.100.0 255.255.255.0 serial 0/1
ip default-network 192.168.100.0
```

The following example sets 200.200.200.0 as the default network. The route becomes the default one only when it is available in the routing table.

```
ip default-network 200.200.200.0
```

| Related  | Command              | Description                 |
|----------|----------------------|-----------------------------|
| Commands | <b>show ip route</b> | Displays the routing table. |

### 9.3 ip fast-reroute route-map

Use this command to enable static fast reroute. Use the **no** or **default** form of this command to restore the default setting.

**ip fast-reroute** [ **vrf** *vrf-name* ] **static route-map** *route-map-name*

**no ip fast-reroute** [ **vrf** *vrf-name* ]

**default ip fast-reroute** [ **vrf** *vrf-name* ] **route-map**

| Parameter   | Parameter                              | Description  |
|-------------|----------------------------------------|--------------|
| Description | <b>vrf</b> <i>vrf-name</i>             | VRF          |
|             | <b>route-map</b> <i>route-map-name</i> | Route map    |
|             | <b>static</b>                          | Backup route |

**Default** This function is disabled by default.

**Command Mode** Global configuration mode



**Usage guideline** Fast reroute provides an active next-hop and a backup one. If the active next-hop fails, the backup next-hop is used for forwarding.

To enhance the performance of fast reroute, enable the BFD detection function for the active next-hop. For interfaces that are up or down, to shorten the interruption time of fast reroute, configure **carrier-delay 0** in the interface configuration mode of the active outbound interface to optimize the performance.

For static fast reroute, if the active next-hop fails, the backup next-hop is used for forwarding.

**Examples** The following example sets the backup next-hop of all static routes to 192.168.1.2 through the outbound interface of GigabitEthernet 0/1.

```
Ruijie(config)# route-map fast-reroute
Ruijie(config-route-map)# set fast-reroute backup-nexthop GigabitEthernet 0/1
192.168.1.2
Ruijie(config-route-map)# exit
Ruijie(config)# ip fast-reroute static route-map fast-reroute
```

| Related command | Command             | Description                   |
|-----------------|---------------------|-------------------------------|
|                 | <b>fast-reroute</b> | Configures OSPF fast reroute. |

**Platform Description** This command is not supported on 2-layer devices.

## 9.4 ip route

Use this command to configure a static route. Use the **no** or **default** form of this command to restore the default setting.

**ip route** [ vrf vrf\_name ] network net-mask { ip-address | interface [ ip-address ] } [ distance ] [ tag tag ] [ permanent | {track object-number | arp} ] [ weight number ] [description description-text] [ disabled | enabled ] [ global ]

**no ip route** [ vrf vrf\_name ] network net-mask { ip-address | interface [ ip-address ] } [ distance ]

**no ip route** [ vrf vrf\_name ] all

**default ip route** [ vrf vrf\_name ] network net-mask { ip-address | interface [ ip-address ] } [ distance ]

**default ip route** [ vrf vrf\_name ] all

| Parameter           | Description                                                                                                      |
|---------------------|------------------------------------------------------------------------------------------------------------------|
| <b>vrf vrf_name</b> | Name of the VRF, which can be the single protocol IPv4 VRF or configured IPv4 address family multi-protocol VRF. |
| <b>network</b>      | Network address of the destination                                                                               |
| <b>net-mask</b>     | Mask of the destination                                                                                          |
| <b>ip-address</b>   | The next hop IP address of the static route                                                                      |
| <b>interface</b>    | (Optional) The next hop egress of the static route                                                               |
| <b>distance</b>     | (Optional) The administrative distance of the static route                                                       |

|                                            |                                                                                                                                                                                 |
|--------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>tag</i>                                 | (Optional) The tag of the static route                                                                                                                                          |
| <b>permanent</b>                           | (Optional) Permanent route ID                                                                                                                                                   |
| <b>track</b> <i>object-number</i>          | (Optional) Indicates correlation with Track. <i>object-number</i> indicates the ID of the track object. By default, the static route is not correlated with the Track function. |
| <b>weight</b> <i>number</i>                | (Optional) Indicates the weight of the static route. The weight is 1 by default.                                                                                                |
| <b>description</b> <i>description-text</i> | (Optional) Indicates the description of the static route. By default, no description is configured. <i>description-text</i> is a string of one to 60 characters.                |
| <b>disabled/enabled</b>                    | (Optional) Indicates the enable flag of the static route. The flag is enabled by default.                                                                                       |
| <b>global</b>                              | (Optional) Indicates that the next hop belongs to a global VRF. By default, the VRF of the next hop is the same as the VRF specified by <i>vrf name</i> .                       |

**Defaults** No static route is configured by default.

**Command Mode** Global configuration mode

The default administrative distance of the static route is 1. Setting the administrative distance allows the learnt dynamic route to overwrite the static route. Setting the administrative distance of the static route can enable route backup, which is called floating route in this case. For example, the administrative distance of the OSPF is 110. You can set its administrative distance to 125. Then the data can switch over the static route when the route running OSPF fails.

You can specify the VRF that the static route belongs to. The default weight of the static route is 1. To view the static route of non default weight, execute the show ip route weight command. The parameter weight is used to enable WCMP. When there are load-balanced routes to the destination, the device assigns data flows by their weights. The higher the weight of a route is, the more data flow the route carries. WCMP limit is generally 32 for routers. However, WCMP limit varies by switch models for their chipsets support different weights. When the sum of the weights of load balanced routes is beyond this weight limit, the excessive ones will not take effect.

**Usage Guide** Enablement/disablement shows the state of the static route. Disablement means the static route is not used for forwarding. The forwarding table used the permanent route until administrator deletes it. Association between a static route and an ARP object can be specified. When association between a static route and an ARP object is configured and the ARP object corresponding to the next hop and egress of the route does not exist, the static route does not take effect. When the ARP object corresponding to the next hop and egress of the route exists, the static route takes effect based on another status. Association between a static route and an ARP object cannot be used for routes with the permanent attribute.

**Examples** The following example adds a static route to the destination network of 172.16.100.0/24 whose next

hop is 192.168.12.1 and administrative distance is 15.

```
ip route 172.16.199.0 255.255.255.0 192.168.12.1 155
```

If the static route has not a specific interface, data flows may be sent through other interface in case of interface failure. The following example configures data flows to be sent through fastethernet 0/0 to the destination network of 172.16.100.0/24.

```
ip route 172.16.199.0 255.255.255.0 fastethernet 0/0 192.168.12.1
```

#### Related

**Commands** This command is not supported on 2-layer devices.

## 9.5 ip route static bfd

Use this command to correlate the static route with BFD. Use the **no** or **default** form of this command to restore the default setting.

**ip route static bfd** [ **vrf** *vrf-name* ] *interface-type interface-number gateway* [ **source** *ip-address* ]

**no ip route static bfd** [ **vrf** *vrf-name* ] *interface-type interface-number gateway* [ **source** *ip-address* ]

**default ip route static bfd** [ **vrf** *vrf-name* ] *interface-type interface-number gateway* [ **source** *ip-address* ]


Use this command to correlate the static route with BFD. Use the **no** or **default** form of this command to restore the default setting.

#### Parameter Description

| Parameter                              | Description                                                                                                                                                                                                 |
|----------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>vrf</b> <i>vrf-name</i>             | (Optional) Specifies the VRF name of the static route. By default, it is global VRF,                                                                                                                        |
| <i>interface-type interface-number</i> | Interface type and interface number.                                                                                                                                                                        |
| <i>gateway</i>                         | Specifies the gateway IP address, that is, the BFD neighbor IP address. If the next hop of the static route is the neighbor, the BFD will detect whether this neighbor is reachable.                        |
| <b>source</b> <i>ip-address</i>        | (Optional) The source IP address of the BFD session. If the neighbor device is multi hops away, you should specify the source IP address for the BFD session. No source IP address is specified by default. |

**Defaults** The static address is not correlated with BFD by default.

**Command Mode** Global configuration mode

**Usage Guide**  Please make sure the BFD session parameters have been configured before executing this command.

**Examples** The following example correlates the static route with BFD, and detects the reachability of path to the

```
neighbor 172.16.0.2.
Ruijie(config)# interface GigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)# no switchport // No need to perform
this command on the router.
Ruijie(config-if-GigabitEthernet 0/1)# ip address 172.16.0.1 255.255.255.0
Ruijie(config-if-GigabitEthernet 0/1)# bfd interval 50 min_rx 50 multiplier
3
Ruijie(config-if-GigabitEthernet 0/1)#exit
Ruijie(config)# ip route static bfd GigabitEthernet 0/1 172.16.0.2
Ruijie(config)# ip route 10.0.0.0 255.0.0.0 GigabitEthernet 0/1 172.16.0.2
```

**Related**

**Commands** N/A

**Platform**

**Description** This command is not supported on 2-layer devices.

## 9.6 ip route static inter-vrf

Use this command to enable packets to be forwarded over VRF instances through the static route. Use the **no** or **default** form of this command to disable this function.

**ip route static inter-vrf**

**no ip route static inter-vrf**

**default ip route static inter-vrf**

Use this command to enable packets to be forwarded over VRF instances through the static route. Use the **no** or **default** form of this command to disable this function.

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** This function is enabled by default.

**Command Mode** Global configuration mode

**Usage Guide** If the **no** form of this command is executed, packets are unable to be forwarded over VRF instances through the static route. If this command is executed and you want to use the **no** form of this command to disable such function, the following information will be displayed.

```
*Aug 7 10:58:34: %NSM-6-ROUTESACROSSVRF: Un-installing route [x.x.x.x/8] from
global routing table with outgoing interface x/x.
```

**Examples** The following example disables packets to be forwarded over VRF instances through the static route.

```
Ruijie(config)# no ip route static inter-vrf
```

**Related****Commands** N/A**Platform****Description** This command is not supported on 2-layer devices.

## 9.7 ip routing

Use this command to enable IP routing in the global configuration mode. Use the **no** or **default** form of this command to disable this function.

**ip routing****no ip routing****default ip routing****Defaults**

This function is enabled by default.

**Command**

Global configuration mode

**Mode****Usage Guide**

IP routing is not necessary when the switch serves as bridge or VoIP gateway.

When a device functions only as a bridge or VoIP gateway, the IP routing function of the RGOS software is not required. In this case, the IP routing function of the RGOS software can be disabled. After the IP routing function is disabled, the device functions as a common host. The device can send and receive packets but cannot forward packets. All route-related configurations will be deleted except the static route configuration. A large number of static routes may be configured. If a user runs the **no ip routing** command, the configuration of a large number of static routes may be lost. To prevent this situation, the static route configuration will be hidden temporarily when the **no ip routing** command is run. If the **ip routing** command is run again, the static route configuration can be restored.

Note that if the process or whole system restarts when the **no ip routing** command is run, the static route configuration will not be reserved.

**Examples**

The following example disables IP routing.

```
Ruijie(config)# no ip routing
```

**Related****Commands** N/A**Platform****Description** This command is not supported on 2-layer devices.

## 9.8 ip static route-limit

Use this command to set the upper threshold of the static route. Use the **no** or **default** form of this command to restore the default setting.

**ip static route-limit** *number*

**no ip static route-limit**

**default ip static route-limit**

| Parameter          | Description                                                   |
|--------------------|---------------------------------------------------------------|
| <b>Description</b> | <i>number</i>                                                 |
|                    | Upper threshold of static routes in the range from 1 to 10000 |

**Defaults** The default is 1000.

**Command Mode** Global configuration mode

**Usage Guide** The goal is to control the number of static routes. You can view the upper threshold of the configured non-default static routes with the **show running-config** command.

The following example sets the upper threshold of the static routes to 9000 and then restores the setting to the default value.

### Examples

```
Ruijie(config)#ip static route-limit ?
  <1-1000000> Global limit value(default value: 1000)
Ruijie(config)# ip static route-limit 9000
Ruijie(config)# no ip static route-limit
```

**Related Commands** N/A

**Platform Description** This command is not supported on 2-layer devices.

## 9.9 ipv6 route

Use this command to configure an ipv6 static route. Use the **no** or **default** form of this command to restore the default setting.

**ipv6 route** [ **vrf** *vrf-name* ] *ipv6-prefix / prefix-length* { *ipv6-address* [ **nexthop-vrf** { *vrf-name1* | **default** } ] | *interface* [ *ipv6-address* [ **nexthop-vrf** { *vrf-name1* | **default** } ] ] } [ *distance* ] [ **tag** *tag* ] [ **weight** *number* ] [ **description** *description-text* ]

**no ipv6 route** [ **vrf** *vrf-name* ] *ipv6-prefix / prefix-length* { *ipv6-address* [ **nexthop-vrf** { *vrf-name1* | **default** } ] | *interface* [ *ipv6-address* [ **nexthop-vrf** { *vrf-name1* | **default** } ] ] } [ *distance* ]

**no ipv6 route [ vrf vrf\_name ] all**

**default ipv6 route [ vrf vrf-name ] ipv6-prefix / prefix-length { ipv6-address [ nexthop-vrf { vrf-name1 | default } ] | interface [ ipv6-address [ nexthop-vrf { vrf-name1 | default } ] ] } [ distance ]**

**default ipv6 route [ vrf vrf\_name ] all**

**Parameter Description**

| Parameter                           | Description                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|-------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>vrf</b> vrf-name                 | Name of VRF, which must be the configured IPv6 address family multi-protocol VRF                                                                                                                                                                                                                                                                                                                                                             |
| <i>prefix-length</i>                | Mask length of the destination                                                                                                                                                                                                                                                                                                                                                                                                               |
| <i>ipv6-address</i>                 | The next hop IP address of the static route                                                                                                                                                                                                                                                                                                                                                                                                  |
| <i>interface</i>                    | (Optional) The next hop egress of the static route                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>nexthop-vrf</b> vrf-name1        | (Optional) VRF the nexthop belongs, which must be the configured IPv6 address family multi-protocol VRF.                                                                                                                                                                                                                                                                                                                                     |
| <i>distance</i>                     | (Optional) The administrative distance of the static route. The default is 1.                                                                                                                                                                                                                                                                                                                                                                |
| <i>tag</i>                          | (Optional) The tag value of the static route. The default is 0.                                                                                                                                                                                                                                                                                                                                                                              |
| <b>weight</b> number                | (Optional) Indicates the weight of the static route, which must be specified when you configure equal-cost routes. The weight ranges from 1 to 8. When the weights of all equal-cost routes of a route are summed up, the sum cannot exceed the maximum number of equal-cost routes that can be configured for the route. Weighting of equal-cost routes of a route indicates the traffic ratio of these routes. The weight is 1 by default. |
| <b>description</b> description-text | (Optional) Indicates the description of the static route. By default, no description is configured. <i>description-text</i> is a string of one to 60 characters.                                                                                                                                                                                                                                                                             |

**Defaults** No IPv6 static route is configured by default.

**Command Mode** Global configuration mode

When the multi-protocol VRF deletes the IPv6 address family, the IPv6 static route of VRF that the route or nexthop belongs is deleted.

If the VRF of the IPv6 static route interface is not same as the nexthop's VRF, then this IPv6 static route takes no effect.

**Usage Guide** The default administrative distance of the static route is 1. Setting the administrative distance allows the learnt dynamic route to overwrite the static route. Setting the administrative distance of the static route can enable route backup, which is called floating route in this case. For example, the administrative distance of the OSPF is 110. You can set its administrative distance to 125. Then the data can switch over the static route when the route running OSPF fails.

The following example adds a static route to the destination network of 2001::/64 whose next hop is 2002::2 and administrative distance are 115.

```
ipv6 route 2001::/64 2002::2 115
```

**Examples**

If the static route has not a specific interface, data flows may be sent through other interface in case of interface failure. The following example configures that data flows are sent through fastethernet 0/0 to the destination network of 2001::/64.

```
ipv6 route 2001::/64 fastethernet 0/0 2002::2
```

**Related Commands**

| Command         | Description                  |
|-----------------|------------------------------|
| show ipv6 route | Displays IPv6 routing table. |

**Platform**

**Description** This command is not supported on 2-layer devices.

## 9.10 ipv6 route static bfd

Use this command to correlate the static route with BFD. Use the **no** or **default** form of this command to restore the default setting.

**ipv6 route static bfd** [ **vrf** *vrf-name* ] *interface-type interface-number gateway* [ **source** *ip-address* ]

**no ipv6 route static bfd** [ **vrf** *vrf-name* ] *interface-type interface-number gateway* [ **source** *ip-address* ]

**default ipv6 route static bfd** [ **vrf** *vrf-name* ] *interface-type interface-number gateway* [ **source** *ip-address* ]

**Parameter Description**

| Parameter                              | Description                                                                                                                                                                                                 |
|----------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>vrf</b> <i>vrf-name</i>             | (Optional) Specifies the VRF name of the static route. By default, it is global VRF,                                                                                                                        |
| <i>interface-type interface-number</i> | Interface type and interface number.                                                                                                                                                                        |
| <i>gateway</i>                         | Specifies the gateway IP address, that is, the BFD neighbor IP address. If the next hop of the static route is the neighbor, the BFD will detect whether this neighbor is reachable.                        |
| <b>source</b> <i>ipv6-address</i>      | (Optional) The source IP address of the BFD session. If the neighbor device is multi hops away, you should specify the source IP address for the BFD session. No source IP address is specified by default. |

**Defaults**

The static route is not associated with BFD by default.

**Command Mode**

Global configuration mode

**Usage Guide**

 Please make sure the BFD session parameters have been configured before executing this



command.

The following example correlates the static route with BFD, and detects the reachability of path to the neighbor `2001:1::2`.

#### Examples

```
Ruijie(config)# interface GigabitEthernet 0/1
Ruijie(config-if)# no switchport //
Ruijie(config-if)# ip address 2001:1::1/64
Ruijie(config-if)# bfd interval 50 min_rx 50 multiplier 3
Ruijie(config-if)# exit
Ruijie(config)# ipv6 route static bfd GigabitEthernet 0/1 2001:1::2
Ruijie(config)# ipv6 route 2002::/64 GigabitEthernet 0/1 2001:1::2
```

#### Related

**Commands** N/A

#### Platform

**Description** This command is not supported on 2-layer devices.

## 9.11 ipv6 static route-limit

Use this command to set the upper threshold of the static route. Use the **no** or **default** form of this command to restore the default setting.

**ipv6 static route-limit** *number*

**no ipv6 static route-limit**

**default ipv6 static route-limit**

| Parameter                           | Description                                                    |
|-------------------------------------|----------------------------------------------------------------|
| <b>Description</b><br><i>number</i> | Upper threshold of static routes in the range from 1 to 10000. |

**Defaults** The default is 1000.

**Command Mode** Global configuration mode

**Usage Guide** The goal is to control the number of static routes. You can view the upper threshold of the configured non-default static routes with the show running config command.

The following example sets the upper threshold of global ipv6 static routes to 900, default VRF static routes to 200, VRF test static routes to 100, and then restores the setting to the default value.

#### Examples

```
Ruijie(config)#ipv6 static route-limit ?
 <1-10000> Global limit value(default value: 1000)
Ruijie(config)# ipv6 static route-limit 900
```

```
Ruijie(config)# no ipv6 static route-limit
```

**Related  
Commands**

| Command         | Description                       |
|-----------------|-----------------------------------|
| ipv6 route      | Configures the IPv6 static route. |
| show ipv6 route | Displays the IPv6 routing table.  |

**Platform**

**Description** This command is not supported on 2-layer devices.

## 9.12 ipv6 unicast-routing

Use this command to enable the IPv6 route function of the RGOS. Use the **no** or **default** form of this command to disable this function.

**ipv6 unicast-routing**

**no ipv6 unicast-routing**

**default ipv6 unicast-routing**

**Parameter  
Description**

N/A

**Defaults**

This function is enabled by default.

**Command**

**Mode**

Global configuration mode

**Usage Guide**

This function can be disabled if the device is just used as the bridge-connection device or the VOIP gateway device.

**Examples**

The example disables the IPv6 route function of RGOS.

```
Ruijie# no ipv6 unicast-routing
```

**Related  
Commands**

| Command         | Description                      |
|-----------------|----------------------------------|
| ipv6 route      | Configure the IPv6 static route. |
| show ipv6 route | Displays the IPv6 routing table. |

**Platform**

**Description** This command is not supported on 2-layer devices.

## 9.13 maximum-paths

Use this command to specify the number of equivalent routes. Use the **no** or **default** form of this command is used to restore the default setting.

**maximum-paths** *number*

**no maximum-paths**

**default maximum-paths**

| Parameter   | Parameter     | Description                                           |
|-------------|---------------|-------------------------------------------------------|
| Description | <i>number</i> | Number of equivalent routes in the range from 1 to 32 |

**Defaults** The default is 32 for routers. For switches, it depends on switch models.

**Command**

**Mode** Global configuration mode

**Usage Guide** The number of equivalent routes is configured to control the number of equivalent routes. After the number of equivalent routes is configured by running the **maximum-paths** command, the number of load-sharing channels in load-sharing mode will not exceed the number of configured static routes.

You can run the **show running config** command to query the number of configured static routes. This command takes effect both to IPv4 and IPv6 addresses. After this command is configured, the maximum number of equivalent routes to an IPv4 or IPv6 destination is equal to the configured value.

**Examples** The following example sets the number of equivalent routes to 10 and then restores the default setting.

```
maximum-paths 10
no maximum-paths 10
```

## 9.14 show ip route

Use the commands to display the configuration of the IP routing table.

**show ip route** [ [ **vrf** *vrf\_name* ] [ *network* [ *mask* [ **longer-prefix** ] ] | **count** | *protocol* [ *process-id* ] | **weight** ] ]

**show ip route** [ **vrf** *vrf-name* ] [ [ **normal** | **ecmp** | **fast-reroute** ] [ *network* [ *mask* ] ]

| Parameter | Parameter | Description |
|-----------|-----------|-------------|
|-----------|-----------|-------------|

|                      |                                                                                                  |
|----------------------|--------------------------------------------------------------------------------------------------|
| <b>vrf vrf_name</b>  | (Optional) Displays the route information of the VRF.                                            |
| <i>network</i>       | (Optional) Displays the route information to the network.                                        |
| <i>mask</i>          | (Optional) Displays the route information to the network of this mask.                           |
| <b>longer-prefix</b> | (optional) Displays the routes that match the specified prefix.                                  |
| count                | (Optional) Displays the number of existent routes. (for the ECMP/WCMP route, displays one route) |
| <i>protocol</i>      | (Optional) Displays the route information of specific protocol.                                  |
| <i>process-id</i>    | (Optional) Routing protocol process ID.                                                          |
| weight               | (Optional) Displays the route information of non default weight.                                 |
| normal               | Displays normal routes and not equivalent routes or fast reroutes.                               |
| ecmp                 | Displays only equivalent routes.                                                                 |
| fast-reroute         | (Optional) Displays the master/standby route of fast reroute.                                    |

**Command** Privileged EXEC mode/ Global configuration mode/Interface configuration mode/ Routing protocol configuration mode/ Route map configuration mode

This command can display route information flexibly.

**Usage Guide** This command shows all routes. To show different attributes of routes, specify normal | ecmp | fast-reroute.

The following example displays the configuration of the IP routing table.

#### Examples

```
Ruijie# show ip route

Codes: C - Connected, L - Local, S - Static
       R - RIP, O - OSPF, B - BGP, I - IS-IS, V - Overflow route
       N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
       E1 - OSPF external type 1, E2 - OSPF external type 2
       SU - IS-IS summary, L1 - IS-IS level-1, L2 - IS-IS level-2
       IA - Inter area, * - candidate default

Gateway of last resort is no set
S   20.0.0.0/8 is directly connected, VLAN 1
S   22.0.0.0/8 [1/0] via 20.0.0.1
O E2 30.0.0.0/8 [110/20] via 192.1.1.1, 00:00:06, VLAN 1
R   40.0.0.0/8 [120/20] via 192.1.1.2, 00:00:23, VLAN 1
B   50.0.0.0/8 [120/0] via 192.1.1.3, 00:00:41
C   192.1.1.0/24 is directly connected, VLAN 1
C   192.1.1.254/32 is local host.
```

```
Ruijie# show ip route 30.0.0.0
Routing entry for 30.0.0.0/8
Distance 110, metric 20
```

```
Routing Descriptor Blocks:
```

```
192.1.1.1, 00:01:11 ago, via VLAN 1, generated by OSPF, extern 2
```

```
Ruijie# show ip route count
```

```
----- route info -----
```

```
the num of active route: 5
```

```
Ruijie# show ip route weight
```

```
-----[distance/metric/weight]-----
```

```
S 23.0.0.0/8 [1/0/2] via 192.1.1.20
```

```
S 172.0.0.0/16 [1/0/4] via 192.0.0.1
```

```
Ruijie#show ip route normal
```

```
Codes: C - Connected, L - Local, S - Static
```

```
R - RIP, O - OSPF, B - BGP, I - IS-IS, V - Overflow route
```

```
N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
```

```
E1 - OSPF external type 1, E2 - OSPF external type 2
```

```
SU - IS-IS summary, L1 - IS-IS level-1, L2 - IS-IS level-2
```

```
IA - Inter area, * - candidate default
```

```
Gateway of last resort is no set
```

```
S 20.0.0.0/8 is directly connected, VLAN 1
```

```
S 22.0.0.0/8 [1/0] via 20.0.0.1
```

```
O E2 30.0.0.0/8 [110/20] via 192.1.1.1, 00:00:06, VLAN 1
```

```
R 40.0.0.0/8 [120/20] via 192.1.1.2, 00:00:23, VLAN 1
```

```
B 50.0.0.0/8 [120/0] via 192.1.1.3, 00:00:41
```

```
C 192.1.1.0/24 is directly connected, VLAN 1
```

```
C 192.1.1.254/32 is local host
```

```
Ruijie#show ip route ecmp
```

```
Codes: C - Connected, L - Local, S - Static
```

```
R - RIP, O - OSPF, B - BGP, I - IS-IS, V - Overflow route
```

```
N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
```

```
E1 - OSPF external type 1, E2 - OSPF external type 2
```

```
SU - IS-IS summary, L1 - IS-IS level-1, L2 - IS-IS level-2
```

```
IA - Inter area, * - candidate default
```

```
Gateway of last resort is 192.168.1.2 to network 0.0.0.0
```

```
S* 0.0.0.0/0 [1/0] via 192.168.1.2
```

```
[1/0] via 192.168.2.2
```

```
O IA 192.168.10.0/24 [110/1] via 35.1.10.2, 00:38:26, VLAN 1
```

```
[110/1] via 35.1.30.2, 00:38:26, VLAN 3
```

```
Ruijie#show ip route fast-reroute

Codes: C - Connected, L - Local, S - Static
       R - RIP, O - OSPF, B - BGP, I - IS-IS, V - Overflow route
       N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
       E1 - OSPF external type 1, E2 - OSPF external type 2
       SU - IS-IS summary, L1 - IS-IS level-1, L2 - IS-IS level-2
       IA - Inter area, * - candidate default

Status codes: m - main entry, b - backup entry, a - active entry

Gateway of last resort is 192.168.1.2 to network 0.0.0.0
S* 0.0.0.0/0 [ma] via 192.168.1.2
      [b] via 192.168.2.2
O IA 192.168.10.0/24 [m] via 35.1.10.2, 00:38:26, VLAN 1
      [ba] via 35.1.30.2, 00:38:26, VLAN 3
```

```
Ruijie# show ip route fast-reroute 30.0.0.0
Routing entry for 30.0.0.0/8
Distance 110, metric 20
Routing Descriptor Blocks:
[m] 192.1.1.1, 00:01:11 ago, via VLAN 1, generated by OSPF, extern 2
[ba]192.1.1.1, 00:01:11 ago, via VLAN 1, generated by OSPF, extern 2
```

| Field | Description                                                                                                                                                 |
|-------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| O     | Source routing protocol, which may be:<br>C: directly connected route<br>S: static route<br>R: RIP route<br>B: BGP route<br>O: OSPF route<br>I: IS-IS route |

|            |                                                                                                                                                                                                                                                                                                                   |
|------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| E2         | Route type, which may be:<br>E1: OSPF external route type 1<br>E2: OSPF external route type 2<br>N1: OSPF NSSA external type 1<br>N2: OSPF NSSA external type 2<br>IA: OSPF area internal route<br>SU: IS-IS summary route<br>L1: IS-IS level-1 route<br>L2: IS-IS level-2 route<br>IA: IS-IS area internal route |
| 20.0.0.0/8 | Network address and mask of the destination network                                                                                                                                                                                                                                                               |
| [1/0]      | Administrative distance/metric                                                                                                                                                                                                                                                                                    |

### 9.15 show ip route static bfd

Use this command to display the IP route correlated BFD information

**show ip route [ [ vrf vrf\_name ] static bfd**

| Parameter          | Parameter    | Description                                                                            |
|--------------------|--------------|----------------------------------------------------------------------------------------|
| <b>Description</b> | vrf vrf-name | (Optional) Displays route information of the specified VRF. The default is global VRF. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** Use this command to display the IP route correlated BFD information

The following example displays the IP route correlated BFD information,

```
Ruijie(config)#show ip route static bfd
S    10.0.0.0/8 via 100.100.100.25, GigabitEthernet 0/3, BFD state is Up
S    20.0.0.0/8 via 200.100.100.25, GigabitEthernet 0/4, BFD state is Admin
```

**Examples**

| Field     | Description                               |
|-----------|-------------------------------------------|
| S         | Static route                              |
| BFD state | State of the static route correlated BFD. |

**Related Commands** N/A

**Platform**

**Description** This command is not supported on 2-layer devices.

## 9.16 show ip route summary

Use this command to display the statistical information about one routing table.

**show ip route [vrf *vrf\_name*] summary**

Use this command to display the statistical information about all routing tables.

**show ip route summary all**

|                    | Parameter       | Description |
|--------------------|-----------------|-------------|
| <b>Parameter</b>   |                 |             |
| <b>Description</b> | <i>vrf-name</i> | VRF name    |

**Defaults** N/A

**Command**

**Mode** Privileged EXEC mode

**Usage**

**guideline** N/A



The following example displays the statistics of the global routing table.

```
Ruijie# show ip route summary
Codes: NORMAL - Normal route ECMP - ECMP route FRR - Fast-Reroute route

Memory: 2000 bytes
Entries: 22,based on route prefixes
          NORMAL ECMP FRR TOTAL
Connected 3 0 0 3
Static 2 1 1 4
RIP 1 2 1 4
OSPF 2 1 1 4
ISIS 1 2 0 3
BGP 2 1 1 4
TOTAL 11 7 4 22
```

The following example displays the statistics of all routing tables.

```
Ruijie# show ip route summary all
Codes: NORMAL - Normal route ECMP - ECMP route FRR - Fast-Reroute route

IP routing table count:2
Total
Memory: 4000 bytes
Entries: 44,based on route prefixes
          NORMAL ECMP FRR TOTAL
Connected 6 0 0 6
Static 4 2 2 8
RIP 2 4 2 8
OSPF 4 2 2 8
ISIS 2 4 0 6
BGP 4 2 2 8
TOTAL 22 14 8 44

Global
Memory: 2000 bytes
Entries: 22,based on route prefixes
          NORMAL ECMP FRR TOTAL
Connected 3 0 0 3
Static 2 1 1 4
RIP 1 2 1 4
OSPF 2 1 1 4
ISIS 1 2 0 3
BGP 2 1 1 4
TOTAL 11 7 4 22
```

## Examples

```

VRF1
Memory: 2000 bytes
  Entries: 22, based on route prefixes
  Entries: 29, based on route nexthops
NORMAL
ECMP FRR TOTAL
  Connected 3 0 0 3
  Static 2 1 1 4
  RIP 1 2 1 4
  OSPF 2 1 1 4
  ISIS 1 2 0 3
  BGP 2 1 1 4
  TOTAL 11 7 4 22
    
```

| Field     | Description                                                                                                                                       |
|-----------|---------------------------------------------------------------------------------------------------------------------------------------------------|
| NORMAL    | Type of the table entries. Value:<br>NORMAL: common routes (not ECMP or FRR);<br>ECMP: equivalent route;<br>FRR: fast reroute;<br>TOTAL: total    |
| Memory    | Memory occupied by the table.                                                                                                                     |
| Entries   | Number of entries (based on prefix, not next-hop)                                                                                                 |
| Connected | Protocol type. Value:<br>Connected: direct connection;<br>Static: static;<br>RIP: RIP;<br>OSPF: OSPF;<br>ISIS: ISIS;<br>BGP: BGP;<br>TOTAL: total |

### 9.17 show ip route track-table

Use this command to display the IP route correlated Track information.

**show ip route [ [ vrf vrf\_name ] track-table**

| Parameter                          | Description                                                                                     |
|------------------------------------|-------------------------------------------------------------------------------------------------|
| <b>Description</b><br>vrf vrf_name | (Optional) Displays the route information of the specified VRF name. The default is global VRF, |
| <b>Defaults</b>                    | N/A                                                                                             |

**Command Mode** Privileged EXEC mode

**Usage Guide** Use this command to display the IP route correlated Track information.

The following example displays the IP route correlated Track information.

```
Ruijie(config)#show ip route track-table
ip route 10.0.0.0 255.0.0.0 GigabitEthernet 0/0 track 2 state is [up]
ip route 20.0.0.0 255.0.0.0 GigabitEthernet 0/0 2 track 3 state is [down]
```

**Examples**

:

| Field | Description        |
|-------|--------------------|
| track | Track target index |
| state | Track target state |

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform**

**Description** This command is not supported on 2-layer devices.

## 9.18 show ipv6 route

Use the command to display the configuration of the IPv6 routing table.

```
show ipv6 route [ [ vrf vrf_name ] [ ipv6-prefix / prefix-length [ longer-prefixes ] | protocol [ process-id ] | weight ] ]
```

| Parameter                        | Description                                                               |
|----------------------------------|---------------------------------------------------------------------------|
| <b>vrf</b> <i>vrf-name</i>       | (Optional) Specifies a VRF.                                               |
| <i>ipv6-prefix/prefix-length</i> | (Optional) Specifies a prefix for route's IPv6 address.                   |
| <b>longer-prefixes</b>           | (Optional) Displays the route with an IPv6 address prefix mostly matched. |
| <i>protocol</i>                  | ((Optional) Displays the route information of specific protocol.          |
| <i>process-id</i>                | (Optional) Specifies a route process ID.                                  |
| <b>weight</b>                    | (Optional) Displays the non-default-weight routes only.                   |

**Defaults** All routes are displayed by default.

**Command**

**Mode** Privileged EXEC mode

**Usage Guide** Use this command to display route information.

The following example displays the IPv6 routing table.

```
Ruijie(config)# show ipv6 route

IPv6 routing table - Default - 7 entries
Codes: C - Connected, L - Local, S - Static
       R - RIP, O - OSPF, B - BGP, I - IS-IS, V - Overflow route
       N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
       E1 - OSPF external type 1, E2 - OSPF external type 2
       SU - IS-IS summary, L1 - IS-IS level-1, L2 - IS-IS level-2
       IA - Inter area

C    10::/64 via Loopback 1, directly connected
L    10::1/128 via Loopback 1, local host
S    20::/64 [20/0] via 10::4, Loopback 1C
C    FE80::/10 via Null 0, directly connected
C    FE80::/64 via Loopback 1, directly connected
L    FE80::2D0:F8FF:FE22:33AB/128 via Loopback 1, local host
```

**Examples**

| Field   | Description                                                                                                                                                                                                                                                                                                       |
|---------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| O       | Source routing protocol, which may be:<br>C: directly connected route<br>S: static route<br>R: RIP route<br>B: BGP route<br>O: OSPF route<br>I: IS-IS route                                                                                                                                                       |
| E2      | Route type, which may be:<br>E1: OSPF external route type 1<br>E2: OSPF external route type 2<br>N1: OSPF NSSA external type 1<br>N2: OSPF NSSA external type 2<br>IA: OSPF area internal route<br>SU: IS-IS summary route<br>L1: IS-IS level-1 route<br>L2: IS-IS level-2 route<br>IA: IS-IS area internal route |
| 20::/64 | Network address and mask of the destination network                                                                                                                                                                                                                                                               |
| [20/0]  | Administrative distance/metric                                                                                                                                                                                                                                                                                    |

| Related Commands | Command                 | Description                       |
|------------------|-------------------------|-----------------------------------|
|                  | <code>ipv6 route</code> | Configures the IPv6 static route. |

**Platform**

**Description** This command is not supported on 2-layer devices.

## 9.19 show ip route static bfd

Use this command to display the IPv6 route correlated BFD information

**show ipv6 route [ [ vrf vrf\_name ] static bfd**

| Parameter          | Parameter                 | Description                                                                                                          |
|--------------------|---------------------------|----------------------------------------------------------------------------------------------------------------------|
| <b>Description</b> | <code>vrf vrf-name</code> | (Optional) Displays the route information of the designated VRF name of the static route. The default is global VRF, |

**Defaults** N/A

**Command Mode**

Privileged EXEC mode

**Usage Guide**

Use this command to display the IPv6 route correlated BFD information.

The following example displays the IPv6 route correlated BFD information.

```
Ruijie(config)#show ip route static bfd
S    25::/64 via 100::25, GigabitEthernet 0/3, BFD state is Up
S    26::/64 via 200::25, GigabitEthernet 0/4, BFD state is Admin
```

**Examples**

| Field     | Description                              |
|-----------|------------------------------------------|
| S         | Static route                             |
| BFD state | State of the static route associated BFD |

**Related**

**Commands** N/A

**Platform**

**Description** This command is not supported on 2-layer devices.

## 9.20 show ipv6 route summary

Use this command to display the statistics of the IPv6 routing table of a specified VRF.

**show ipv6 route [ vrf vrf-name ] summary**

Use this command to display statistics of all IPv6 routing tables.

**show ipv6 route summary all**

| Parameter                              | Description                                                                                                                                |
|----------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Parameter</b><br><b>Description</b> | <i>vrf-name</i><br>(Optional) VRF name. If no VRF name is specified, statistics of the IPv6 routing table of the global VRF are displayed. |
| <b>Defaults</b>                        | N/A                                                                                                                                        |
| <b>Command</b>                         |                                                                                                                                            |
| <b>Mode</b>                            | Privileged EXEC mode                                                                                                                       |
| <b>Usage Guide</b>                     | N/A                                                                                                                                        |

The following example displays statistics of IPv6 routing table of the global VRF.

```
Ruijie#show ipv6 route summary
IPv6 routing table name is - Default(0) global scope - 5 entries
IPv6 routing table default maximum-paths is 32
Local          2
Connected     3
Static         0
PIP            0
OSPF           0
BGP            0
-----
Total          5
```

The following example displays t statistics of all IPv6 routing tables.

**Examples**

```
Ruijie#show ipv6 route summary
IPv6 routing table name is - Default(0) global scope - 5 entries
IPv6 routing table default maximum-paths is 32
Local          2
Connected     3
Static         0
PIP            0
OSPF           0
BGP            0
-----
Total          5
```

| Field     | Description                                                                                         |
|-----------|-----------------------------------------------------------------------------------------------------|
| Memory    | The memory size occupied by the current routing table.                                              |
| Entries   | The entries in the current routing table (based on the entry prefix instead of the next hop entry.) |
| Connected | Describes the protocol type of the entry. The field                                                 |

|                          |                                                                                                                                                                                                                                                                        |
|--------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                          | <p>can be;</p> <p>Connected: Connected route entry.</p> <p>Static: Static route entry.</p> <p>RIP: RIP route entry.</p> <p>OSPF: OSPF route entry.</p> <p>ISIS: ISIS route entry.</p> <p>BGP: BGP route entry.</p> <p>TOTAL: Total number of all protocol entries.</p> |
| IPv6 routing table count | The number of the routing tables.                                                                                                                                                                                                                                      |
| Global                   | <p>The name of the current routing table. The field can be:</p> <p>Global : Global (The default VRF)</p> <p>VRF1: VRF name.</p> <p>TOTAL: All VRF routing table summaries.</p>                                                                                         |

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform**

**Description** This command is not supported on 2-layer devices.

## 10 Protocol-independent Commands

### 10.1 accept-lifetime

Use this command in the encryption key configuration mode to specify the lifetime of an encryption key in its receiving direction. Use the no form of this command to restore the default value.

**accept-lifetime** *start-time* {infinite | *end-time* | **duration seconds**}

**no accept-lifetime**

| Parameter description | Parameter               | Description                                                                                 |
|-----------------------|-------------------------|---------------------------------------------------------------------------------------------|
|                       | <i>start-time</i>       | Start time of the lifetime.                                                                 |
|                       | <b>infinite</b>         | Indicates that the encryption key is valid for ever.                                        |
|                       | <i>end-time</i>         | <i>End time of the encryption key. It must be later than the start time.</i>                |
|                       | <b>duration seconds</b> | Duration of the encryption key after the start time. The value ranges from 1 to 2147483646. |

**Default** infinite

**Command mode** Encryption key configuration mode

**Usage guideline** Use this command to specify the lifetime of an encryption key in its receiving direction.

**Examples** The following example configures the lifetime from 0:00 on September 9, 2000 to 0:00 on October 12, 2011.

```
Ruijie(config)# key chain ripkeys
Ruijie(config-keychain)# key 1
Ruijie(config-keychain-key)#accept-lifetime 00:00:00 Sep 9 2000 00:00:00 Dec
12 2011
```

| Related command | Command | Description |
|-----------------|---------|-------------|
|                 | -       | -           |

**Platform description** -

### 10.2 ip as-path access-list

Use this command to configure an autonomous system (AS) path filter using a regular expression. Use



the **no** form of this command to remove the AS path filter using a regular expression.

**ip as-path access-list** *path-list-num* { **permit** | **deny** } *regular-expression*

**no ip as-path access-list** *path-list-num* [ { **permit** | **deny** } *regular-expression* ]

| Parameter   | Parameter                 | Description                                                                                                  |
|-------------|---------------------------|--------------------------------------------------------------------------------------------------------------|
| description | <i>path-list-num</i>      | Specifies the AS-path access-list number. The range is from 1 to 500.                                        |
|             | <b>permit</b>             | Permits advertisement based on matching conditions.                                                          |
|             | <b>deny</b>               | Denies advertisement based on matching conditions.                                                           |
|             | <i>regular-expression</i> | Regular expression that defines the AS-path filter. The expression length range is from 1 to 255 characters. |

**Default** By default, no AS path filter using a regular expression is configured.

**Command mode** Global configuration mode

**Usage guideline** N/A

**Examples** The following example configures an AS path filter matching the path which contains AS number 123 only.

```
Ruijie(config)# ip as-path access-list 105 deny ^123$
```

| Related command | Command | Description |
|-----------------|---------|-------------|
|                 | -       | -           |

**Platform description** -

## 10.3 ip community-list

Use this command to define a standard or expanded community list and control access to it. Use the **no** form of this command to remove the setting.

**ip community-list** { *community-list-number* | **standard** *community-list-name* } { **permit** | **deny** }

**ip community-list** { *community-list-number* | **expanded** *community-list-name* } { **permit** | **deny** }  
[ *regular-expression* ]

| Parameter   | Parameter | Description                                               |
|-------------|-----------|-----------------------------------------------------------|
| description | standard  | Indicates standard community list numbered in 1 to 99.    |
|             | expanded  | Indicates expanded community list numbered in 100 to 199. |
|             | permit    | Permits access to the community list.                     |

|                         |                                                                                                                                                   |
|-------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|
| deny                    | Denies access to the community list.                                                                                                              |
| <i>community-number</i> | Community number in the form of AA:NN(AS number/2-byte numerical) in the range of 1 to 255 characters. It may also be one of the following value: |

**Default configuration**

None

**Command mode**

Global configuration mode.

**Usage**

**guidelines**

This command is used to define the community list for BGP.

**Examples**

```
Ruijie(config)# ip community-list standard 1 deny 100.20.200.20
Ruijie(config)# ip community-list standard 1 permit internet
```

**Related commands**

| Command                   | Description                                                                 |
|---------------------------|-----------------------------------------------------------------------------|
| match community           | Match the community list.                                                   |
| set community-list delete | Remove the community value of the BGP path according to the community list. |
| show ip community-list    | Show the community list information.                                        |

## 10.4 ip extcommunity-list

Use this command to create an extcommunity list and add an entry to the list. Use the **no** form of this command to remove the setting.

**ip extcommunity-list** {*expanded-list* | **expanded** *list-name*} {**permit** | **deny**} [*regular-expression*]

**ip extcommunity-list** {*standard-list* | **standard** *list-name*} {**permit** | **deny**} [*rt value*] [*soo value*]

**no ip extcommunity-list** {*expanded-list* | **expanded** *list-name* | *standard-list* | **standard** *list-name*}

**ip extcommunity-list** {*expanded-list* | **expanded** *list-name*| *standard-list* | **standard** *list-name*}

**no ip extcommunity-list** {*expanded-list* | **expanded** *list-name* | *standard-list* | **standard** *list-name*}

**Parameter description**

| Parameter                        | Description                                                                                                                                                            |
|----------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>expand-list</i>               | Indicates an extended extcommunity list, ranging from 100 to 199. One extcommunity list may contain multiple rules.                                                    |
| <i>standard-list</i>             | Indicates a standard extcommunity list, ranging from 1 to 99. One extcommunity list may contain multiple rules.                                                        |
| <b>expanded</b> <i>list-name</i> | Indicates the name of an extended extcommunity, comprising not more than 32 characters. When using this parameter, you enter the extcommunity list configuration mode. |

|                                  |                                                                                                                                                                                                                                     |
|----------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>standard</b> <i>list-name</i> | Indicates the name of a standard extcommunity list, comprising not more than 32 characters. When using this parameter, you enter the extcommunity list configuration mode.                                                          |
| <b>permit</b>                    | Defines an extcommunity rule for permitting.                                                                                                                                                                                        |
| <b>deny</b>                      | Defines an extcommunity rule for denying.                                                                                                                                                                                           |
| <i>regular-expression</i>        | (optional) Defines a matching template that is used to match an extcommunity.                                                                                                                                                       |
| <i>sequence-number</i>           | (Optional) Defines the sequence number of a rule, ranging from 1 to 2,147,483,647. If no sequence number is specified, the sequence number automatically increases by 10 when a rule is added by default. The initial number is 10. |
| <b>rt</b>                        | (Optional) Sets the RT attribute value. This command can be used only for the standard extcommunity configuration, but not for the extended extcommunity configuration.                                                             |
| <b>soo</b>                       | (Optional) Sets the SOO attribute value. This command can be used only for the standard extcommunity configuration, but not for the extended extcommunity configuration.                                                            |
| <i>value</i>                     | Indicates the value of an extended community (extend_community_value).                                                                                                                                                              |

**Default** It is disabled by default.

**Command mode** Global configuration mode and ip extcommunity-list configuration mode.

**Usage guidelines** This command is used to define the extcommunity list.

1. The following example defines an ip extcommunity-list.

```
Ruijie(config)# ip extcommunity-list 1 permit rt 100: 1
Ruijie(config)# ip extcommunity-list standard aaa permit rt
100: 2
Ruijie(config)# ip extcommunity-list expanded ext1 permit 200: [0~9][0~9]
```

**Examples** 2. The following example displays how to use ip extcommunity.

```
Ruijie(config)# route-map rt_in_filter
Ruijie(config-route-map)# match extcommunity 1
Ruijie(config-route-map)# match extcommunity ext1
Ruijie(config)# router bgp 100
Ruijie(config-router)# address-family vpn
Ruijie(config-router-af)#neighbor 3.3.3.3 send-community extended
Ruijie(config-router-af)#neighbor 3.3.3.3 route-map rt_in_filter in
```

## 10.5 ip prefix-list

Use this command to create a prefix list or add an entry to the prefix list. Use the **no** form of this command to remove the prefix list or an entry.

**ip prefix-list** *prefix-list-name* [ **seq** *seq-number*] { **deny** | **permit** } *ip-prefix* [**ge** *minimum-prefix-length*][**le** *maximum-prefix-length*]

**no ip prefix-list** *prefix-list-name* [ **seq** *seq-number*] { **deny** | **permit** } *ip-prefix* [**ge** *minimum-prefix-length*][**le** *maximum-prefix-length*]

| Parameter                    | Description                                                                                                                                                                                                                                                                                                                                                                                              |
|------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>prefix-list-name</i>      | Name of the prefix list                                                                                                                                                                                                                                                                                                                                                                                  |
| <i>seq-number</i>            | Sequence number of an entry in the range of 1 to 2147483647. When you execute this command to add an entry without a sequence number, the system allocates a default sequence number for the entry. The default sequence number of the first entry is 5. Every subsequential entry without a sequence number uses the time of 5 larger than the previous sequence number as the default sequence number. |
| deny                         | Deny the route matching the prefix list.                                                                                                                                                                                                                                                                                                                                                                 |
| permit                       | Permit the route matching the prefix list.                                                                                                                                                                                                                                                                                                                                                               |
| <i>ip-prefix</i>             | Network address and mask. Network address can be any valid IP address and the mask length is in the range of 0 to 32.                                                                                                                                                                                                                                                                                    |
| <i>minimum-prefix-length</i> | (Optional) Minimum length of the prefix (the starting length)<br>Note: "ge" indicates the operation of "larger than" and "equivalent to".                                                                                                                                                                                                                                                                |
| <i>maximum-prefix-length</i> | (Optional) Maximum length of the prefix (the ending length)<br>Note: "le" indicates the operation of "less than" and "equivalent to".                                                                                                                                                                                                                                                                    |

### Parameter description

### Default configuration

None

### Command mode

Global configuration mode.

### Usage guidelines

The ip prefix-list command configures the prefix list, with the permit or deny keyword to determine the action in case of matching.

You can execute this command to define an exact match, or use "ge" or "le" to define a range match for a prefix for flexible configuration. "ge" indicates the range of minimum-prefix-length to 32; "le" indicates the range of the mask length of the IP prefix to maximum-prefix-length; "ge" and "le" indicates the range of minimum-prefix-length to maximum-prefix-length, namely, mask length of IP prefix <

minimum-prefix-length < maximum-prefix-length <=32.

The following example filters the RIP routes the OSPF redistributes by the destination IP address following the rule defined in the associated IP prefix list, for example, redistribute the routes whose destination IP address is in the range 201.1.1.0/24.

#### Examples

```
Ruijie# configure terminal
Ruijie(config)# ip prefix-list pre1 permit 201.1.1.0/24
Ruijie(config)# router ospf
Ruijie(config-router)# distribute-list prefix pre1 out rip
Ruijie(config-router)# end
```

## 10.6 ip prefix-list description

Use this command to add the description of a prefix list. Use the **no** form of this command to delete the description.

**ip prefix-list** *prefix-list-name* **description** *description-text*

**no ip prefix-list** *prefix-list-name* **description**

| Parameter               | Description                    |
|-------------------------|--------------------------------|
| <i>prefix-list-name</i> | Name of the prefix list        |
| <i>description-text</i> | Description of the prefix list |

#### Default

**configuration** No description is added for a prefix list, by default.

#### Command

**mode** Global configuration mode

The example below adds the description for the prefix list:

#### Examples

```
Ruijie# configure terminal
Ruijie(config)# ip prefix-list pre description Deny routes from Net-A
```

## 10.7 ip prefix-list sequence-number

Use this command to enable sort function for a prefix list. Use the **no** form of this command to disable the sort function.

**ip prefix-list** **sequence-number**

**no ip prefix-list** **sequence-number**

#### Parameter

**description** Disabled

**Default**

**configuration** No sequence number is added for a prefix list, by default.

**Command**

**mode** Global configuration mode

The example below adds a sequence number for the prefix list:

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# ip prefix-list pre description deny routes from Net-A
```

**Related commands**

| Command        | Description                |
|----------------|----------------------------|
| ip prefix-list | Configure the prefix list. |

**Platform**

**description** N/A

## 10.8 ipv6 prefix-list

Use this command to create an IPv6 prefix list or add an entry in the prefix list. Use the **no** form of this command to delete an IPv6 prefix list or an entry in the prefix list.

**ipv6 prefix-list** *prefix-list-name* [**seq** *seq-number*] { **deny** | **permit** } *ipv6-prefix* [**ge** *minimum-prefix-length*][**le** *maximum-prefix-length*]

**no ipv6 prefix-list** *prefix-list-name* [**seq** *seq-number*] { **deny** | **permit** } *ipv6-prefix* [**ge** *minimum-prefix-length*][**le** *maximum-prefix-length*]

**Parameter description**

| Parameter                    | Description                                                                                                                                                                                                                                                                                                                                                  |
|------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>prefix-list-name</i>      | Name of the prefix list                                                                                                                                                                                                                                                                                                                                      |
| <i>seq-number</i>            | Sequence number of an entry in the prefix list. Its range is 1 to 4294967294. If the sequence number is not specified in this command, the system will allocate a default one for the entry. The default sequence number of the first entry is 5, and that of each subsequent one is the product of adding 5 to the sequence number of the proceeding entry. |
| permit                       | Permit the access to the matching result.                                                                                                                                                                                                                                                                                                                    |
| deny                         | Deny the access to the matching result.                                                                                                                                                                                                                                                                                                                      |
| <i>ipv6-prefix</i>           | Network address and its mask. The network address can be any valid IP address. The mask can be 0 to 32 characters.                                                                                                                                                                                                                                           |
| <i>minimum-prefix-length</i> | (Optional) Minimum length of the prefix (the starting length)<br>Note: "ge" indicates the operation of "larger than" and "equivalent to".                                                                                                                                                                                                                    |
| <i>maximum-prefix-length</i> | (Optional) Maximum length of the prefix (the ending length)<br>Note: "le" indicates the operation of "less than" and "equivalent to".                                                                                                                                                                                                                        |

**Default**

No prefix list is created.

**configuration****Command**

**mode** Global configuration mode

The ipv6 prefix-list command configures the prefix list, with the permit or deny keyword to determine the action in case of matching.

**Usage guideline**

You can execute this command to define an exact match, or use “ge” or “le” to define a range match for a prefix for flexible configuration. “ge” indicates the range of minimum-prefix-length to 128; “le” indicates the range of the mask length of the IP prefix to maximum-prefix-length; “ge” and “le” indicates the range of minimum-prefix-length to maximum-prefix-length, namely, ipv6-prefix mask length < minimum-prefix-length < maximum-prefix-length <= 128

The following example filters the RIP routes the OSPF redistributes by the destination IP address following the rule defined in the associated IP prefix list, for example, redistribute the routes whose destination IP address is in the range 2222::/64.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# ipv6 prefix-list pre1 permit 2222::64
Ruijie(config)# ipv6 router ospf
Ruijie(config-router)# distribute-list prefix pre out rip
Ruijie(config-router)# end
```

## 10.9 ipv6 prefix-list description

Use this command to add the description of an IPv6 prefix list. Use the **no** form of this command to delete the description.

**ipv6 prefix-list** *prefix-lis-name* **description** *description-text*

**no ipv6 prefix-list** *prefix-lis-name* **description**

| Parameter          | Parameter               | Description                         |
|--------------------|-------------------------|-------------------------------------|
| <b>description</b> | <i>prefix-lis-name</i>  | Name of the ipv6 prefix list        |
|                    | <i>description-text</i> | Description of the ipv6 prefix list |

**Default**

**configuration** No description is added for an IPv6 prefix list, by default.

**Command**

**mode** Global configuration mode

The example below adds the description for the prefix list:

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# ipv6 prefix-list pre description Deny routes from Net-A
```

| Related commands | Command          | Description                     |
|------------------|------------------|---------------------------------|
|                  | ipv6 prefix-list | Configure the IPv6 prefix list. |

## 10.10 ipv6 prefix-list sequence-number

Use this command to enable the sorting function for an IPv6 prefix list. Use the **no** form of this command to remove the settings.

**ipv6 prefix-list sequence-number**

**no ipv6 prefix-list sequence-number**

### Parameter description

### Default

**configuration** No sequence number is added for a prefix list, by default.

### Command

**mode** Global configuration mode

The example below adds a sequence number for the prefix list:

### Examples

```
Ruijie# configure terminal
Ruijie(config)# ipv6 prefix-list pre description Deny routes from Net-A
```

| Related commands | Command          | Description                     |
|------------------|------------------|---------------------------------|
|                  | ipv6 prefix-list | Configure the IPv6 prefix list. |

## 10.11 key

Use this command to define an encryption key and enter the encryption key chain configuration mode.

Use the **no** form of this command to delete it.

**key key-id**

**no key key-id**

| Parameter description | Parameter | Description                           |
|-----------------------|-----------|---------------------------------------|
|                       | key-id    | Key ID, ranging from 0 to 2147483647. |

### Default

No encryption key is configured.

### Command mode

Encryption key chain configuration mode.



**Usage guideline** Use this command to define an encryption key.

**Examples** The following example configures encryption key chain ripkeys and key 1.

```
Ruijie(config)# key chain ripkeys
Ruijie(config-keychain)# key 1
```

| Related command | Command | Description |
|-----------------|---------|-------------|
|                 | -       | -           |

**Platform description** -

## 10.12 key chain

Use this command to define a key chain and enter the key chain configuration mode. Use the no form of this command to delete it.

**key chain** *key-chain-name*

**no key chain** *key-chain-name*

| Parameter description | Parameter             | Description     |
|-----------------------|-----------------------|-----------------|
|                       | <i>key-chain-name</i> | Key chain name. |

**Default** No key chain is configured.

**Command mode** Global configuration mode.

**Usage guideline**  For a key chain to take effect, you need to configure at least one key.

**Examples** The following example configures key chain ripkeys and enters the key chain configuration mode.

```
Ruijie(config)# key chain ripkeys
```

| Related command | Command | Description |
|-----------------|---------|-------------|
|                 | -       | -           |

**Platform description** -

## 10.13 key-string

Use this command to specify a key string. Use the **no** form of this command to delete it.

**key-string** [0|7] *text*

**no key-string**

| Parameter   | Parameter   | Description            |
|-------------|-------------|------------------------|
| description | 0           | Use plaintext.         |
|             | 7           | Use encryption.        |
|             | <i>text</i> | Authentication string. |

**Default** No key string is configured.

**Command mode** Encryption key configuration mode.

**Usage guideline** Use this command to specify a key string.

**Examples** The following example configures key chain ripkeys, key 1 and the key string abc:

```
Ruijie(config)# key chain ripkeys
Ruijie(config-keychain)# key 1
Ruijie(config-keychain-key)#key-string abc
```

| Related command | Command | Description |
|-----------------|---------|-------------|
|                 | -       | -           |

**Platform description** -

## 10.14 match as-path

Use this command to redistribute the routes of AS\_PATH attribute permitted by the access list in the route map configuration mode. Use the **no** form of this command to remove the setting.

**match as-path** *as-path-acl-list-num* [ *as-path-acl-list-number.....*]

**no match as-path** [ *as-path-acl-list-num.....*]

| Parameter   | Parameter                   | Description                           |
|-------------|-----------------------------|---------------------------------------|
| description | <i>as-path-acl-list-num</i> | ACL number, in the range of 1 to 500. |
|             |                             |                                       |

**Default** None.

**configuration****Command**

**mode** Route map configuration mode.

The match as-path can be followed by an access list number or name.

**Usage**

One or more match or set commands can be executed to configure one route map. If the match

**guidelines**

command is not used, all the routes will be matched. If the set command is not used, no operation will be performed.

**Examples**

```
Ruijie(config)# route-map ROUTEMAP2IBGP
Ruijie(config-route-map)# match as-path 20 30
```

**Related commands**

| Command                    | Description                                       |
|----------------------------|---------------------------------------------------|
| <b>match community</b>     | Match the community.                              |
| <b>match metric</b>        | Match the metric.                                 |
| <b>match origin</b>        | Match the source of routes.                       |
| <b>set as-path prepend</b> | Set the AS_PATH attribute of redistributed routes |
| <b>set metric</b>          | Set the metric.                                   |
| <b>set metric-type</b>     | Set the metric type.                              |

## 10.15 match community

Use this command to redistribute the routes matching the Community attribute permitted by the ACL in the route map configuration mode. Use the **no** form of this command to remove the setting.

**match community** { *community-list-number* | *community-list-name* } [**exact-match**]

[ { *community-list-number* | *community-list-name* } [**exact-match**] ...]

**no match community** { *community-list-number* | *community-list-name* } [**exact-match**]

[ { *community-list-number* | *community-list-name* } [**exact-match**] ...]

**Parameter description**

| Parameter                           | Description                                                                                                                     |
|-------------------------------------|---------------------------------------------------------------------------------------------------------------------------------|
| <b><i>community-list-number</i></b> | Number of the standard community list in the range 1 to 99.<br>Number of the extended community list in the range of 100 to 199 |
| <b><i>communitys-list-name</i></b>  | Name of the community list in the range of less than 80 characters                                                              |
| <b>exact-match</b>                  | Match the community list exactly.                                                                                               |

**Default**

**configuration** None.

**Command**

**mode** Route map configuration mode.

**Usage**

The match community can be followed by more than one community list number or name, but the

**guidelines**

- total of community lists and names should not be greater than 6.
- Each exact-match applies to only the previous list, not all the lists.
- One or more match or set commands can be executed to configure one route map. If the match command is not used, all the routes will be matched. If the set command is not used, no operation will be performed.

**Examples**

```
Ruijie(config)# ip community-list 1 permit 100:2 100:30
Ruijie(config)# route-map set_lopref
Ruijie(config-route-map)# match community 1 exact-match
Ruijie(config-route-map)# set local-preference 20
```

**Related commands**

| Command                    | Description                  |
|----------------------------|------------------------------|
| <b>match as-path</b>       | Match the AS_PATH attribute. |
| <b>match metric</b>        | Match the metric.            |
| <b>match origin</b>        | Match the source.            |
| <b>set as-path prepend</b> | Set the AS_PATH attribute.   |
| <b>set metric</b>          | Set the metric.              |
| <b>set metric-type</b>     | Set the metric type.         |

## 10.16 match extcommunity

Use this command to define the match rule for the BGP extcommunity. Use the no form of this command to cancel the setting.

**match extcommunity** { *standard-list-number* | *standard-list-name* | *expanded-list-num* | *expanded-list-name* }

**no match extcommunity** { *standard-list-number* | *standard-list-name* | *expanded-list-num* | *expanded-list-name* }

**Parameter description**

| Parameter                          | Description                                                                                                                   |
|------------------------------------|-------------------------------------------------------------------------------------------------------------------------------|
| <b><i>standard-list-number</i></b> | Standard extcommunity list number, ranging from 1 to 99.<br>An extcommunity list may contains multiple excommunity values.    |
| <b><i>standard-list-name</i></b>   | Standard excommunity name.<br>An extcommunity list may contains multiple excommunity values.                                  |
| <b><i>expanded-list-num</i></b>    | Expanded extcommunity list number, ranging from 100 to 199.<br>An extcommunity list may contains multiple excommunity values. |
| <b><i>expanded-list-name</i></b>   | Expanded excommunity name.<br>An extcommunity list may contains multiple excommunity values.                                  |

**Default** The rule is not defined in the associated route map.

**Command mode** Route map configuration mode.

**Usage** There are the following scenarios for a route map with an extcommunity:

**guideline**

1. The route map associated with **import map** uses the RT attribute to filter imported VRF routes.
2. The route maps associated with **neighbor route-map in** and **neighbor route-map out** are configured in the BGP VPNv4 address family mode and use the RT attribute to filter VPNv4 routes sent to or by BGP peers.

**Examples** 1. Define two extcommunity:

```
Ruijie(config)# ip extcommunity-list 1 permit rt 100: 1
Ruijie(config)# ip extcommunity-list 1 permit rt 100: 2
```

2. Define match rules in the route map:

```
Ruijie(config)# route-map rt
Ruijie(config-route-map)# match extcommunity 1
```

3. Use the route map.

```
Ruijie(config)# router bgp 100
Ruijie(config-router)# address-family vpnv4
Ruijie(config-router-af)# neighbor 3.3.3.3 route-map rt in
```

| Related command | Command                          | Description                  |
|-----------------|----------------------------------|------------------------------|
|                 | <b>ip extcommunity-list</b>      | Create an extcommunity list. |
|                 | <b>show ip extcommunity-list</b> | Show an extcommunity list.   |

**Platform** -

**description**

## 10.17 match interface

Use **match interface** command to redistribute the routes whose next hop is the specified interface.

Use the **no** form of this command to remove the setting.

**match interface** *interface-type interface-number* [...*interface-type interface-number*]

**no match interface** [*interface-type interface-number* [...*interface-type interface-number*]]

| Parameter description | Parameter               | Description      |
|-----------------------|-------------------------|------------------|
|                       | <i>interface-type</i>   | Interface type   |
|                       | <i>interface-number</i> | Interface number |

**Default configuration** None.

**Command mode** Route map configuration mode.

**Usage** This command can be followed by multiple interfaces.

**guidelines** You can redistribute the routes from one routing process to another routing process. For example,

you can redistribute the route in the OSPF routing domain and then advertise it to the RIP routing domain, and vice versa. The mutual route redistribution can be implemented between all the IP routing protocols.

For route redistribution, route maps are usually used to control the mutual route redistribution between two routing domains.

One or more match or set commands can be executed to configure a route map. If the match command is not used, all the routes will be matched. If the set command is not used, no operation will be performed.

The route map can be configured very flexibly for route redistribution and policy-based routing. No matter how the route map is used, the configuration principle is the same, except that different command sets are used. Even if it is used on the route redistribution, different routing protocols can use different commands with the route map.

The following example redistributes the RIP route with the next hop of fastethernet 0/0 in the OSPF routing protocol.

### Examples

```
router ospf
redistribute rip subnets route-map redrip
network 192.168.12.0 0.0.0.255 area 0

route-map redrip permit 10
match interface fastethernet 0/0
```

### Related commands

| Command                      | Description                                       |
|------------------------------|---------------------------------------------------|
| <b>match ip address</b>      | Match the address in the access list.             |
| <b>match ip next-hop</b>     | Match the next-hop IP address in the access list. |
| <b>match ip route-source</b> | Match the source IP address in the access list.   |
| <b>match metric</b>          | Match the metric.                                 |
| <b>match route-type</b>      | Match the route type.                             |
| <b>match tag</b>             | Match the tag.                                    |
| <b>set metric</b>            | Set the metric.                                   |
| <b>set metric-type</b>       | Set the metric type.                              |
| <b>set tag</b>               | Set the tag.                                      |

## 10.18 match ip address

Use **match ip address** command to redistribute the routes matching the IP address permitted by the ACL or the prefix list. Use the **no** form of this command to remove the setting.

**match ip address** {*access-list-number* [*access-list-number...* | *access-list-name...*] | *access-list-name* [*access-list-number...* | *access-list-name*] | **prefix-list** *prefix-list-name* [*prefix-list-name...*]}

**no match ip address** [*access-list-number* [*access-list-number...* | *access-list-name...*] | *access-list-name* [*access-list-number...* | *access-list-name*] | **prefix-list** *prefix-list-name* [*prefix-list-name...*]]

|                              | Parameter                           | Description                       |
|------------------------------|-------------------------------------|-----------------------------------|
| <b>Parameter description</b> | <i>access-list-number</i>           | Number of the access list         |
|                              | <i>access-list-name</i>             | Name of the access list           |
|                              | prefix-list <i>prefix-list-name</i> | Specify the prefix list to match. |

**Default configuration** None.

**Command mode** Route map configuration mode.

Multiple access list numbers or names may follow match ip address.

You can redistribute the routes from one routing process to another routing process. For example, you can redistribute the route in the OSPF routing domain and then advertise it to the RIP routing domain, and vice versa. The mutual route redistribution can be implemented between all the IP routing protocols.

**Usage guidelines** For route redistribution, route maps are usually used to control the mutual route redistribution between two routing domains.

One or more match or set commands can be executed to configure a route map. If the match command is not used, all the routes will be matched. If the set command is not used, no operation will be performed.

The route map can be configured very flexibly for route redistribution and policy-based routing. No matter how the route map is used, the configuration principle is the same, except that different command sets are used. Even if it is used on the route redistribution, different routing protocols can use different commands with the route map.

The following example enables the OSPF routing protocol to redistribute RIP routes that match access list 10, with the route type being type-1 external type and the default metric being 40.

#### Examples

```
router ospf
redistribute rip subnets route-map redrip
network 192.168.12.0 0.0.0.255 area 0

access-list 10 permit 200.168.23.0 0.0.0.255

route-map redrip permit 10
match ip address 10
set metric 40
set metric-type type-1!
```

|                         | Command                      | Description                                        |
|-------------------------|------------------------------|----------------------------------------------------|
| <b>Related commands</b> | <b>access-list</b>           | Set the access list.                               |
|                         | <b>match interface</b>       | Match the next-hop interface of the route.         |
|                         | <b>match ip next-hop</b>     | Match the next-hop address in the access list.     |
|                         | <b>match ip route-source</b> | Match the route source address in the access list. |

|                         |                       |
|-------------------------|-----------------------|
| <b>match metric</b>     | Match the metric.     |
| <b>match route-type</b> | Match the route type. |
| <b>match tag</b>        | Match the tag.        |
| <b>set metric</b>       | Set the metric.       |
| <b>set metric-type</b>  | Set the metric type.  |
| <b>set tag</b>          | Set the tag.          |

## 10.19 match ip next-hop

Use **match ip next-hop** command to redistribute the routes whose next-hop IP address matches the access list or the prefix list. Use the **no** form of this command to remove the setting.

**match ip next-hop** {*access-list-number* [*access-list-number...* | *access-list-name...*] | *access-list-name* [*access-list-number...* | *access-list-name*] | **prefix-list** *prefix-list-name* [*prefix-list-name...*]}

**no match ip next-hop** [*access-list-number* [*access-list-number...* | *access-list-name...*] | *access-list-name* [*access-list-number...* | *access-list-name*] | **prefix-list** *prefix-list-name* [*prefix-list-name...*]]

|                    | Parameter                                  | Description                       |
|--------------------|--------------------------------------------|-----------------------------------|
| <b>Parameter</b>   | <i>access-list-number</i>                  | Number of the access list         |
| <b>description</b> | <i>access-list-name</i>                    | Name of the access list           |
|                    | <i>prefix-list</i> <i>prefix-list-name</i> | Specify the prefix list to match. |

### Default

**configuration** None.

### Command

**mode** Route map configuration mode.

Multiple access list numbers or names may follow match ip next-hop.

You can redistribute the routes from one routing process to another routing process. For example, you can redistribute the route in the OSPF routing domain and then advertise it to the RIP routing domain, and vice versa. The mutual route redistribution can be implemented between all the IP routing protocols.

### Usage

**guidelines** For route redistribution, route maps are usually used to control the mutual route redistribution between two routing domains.

One or more match or set commands can be executed to configure a route map. If the match command is not used, all the routes will be matched. If the set command is not used, no operation will be performed.

In the example below, the OSPF routing protocol redistributes the RIP routes. As long as the next hop address of the RIP route matches the access list 10 or 20, the OSPF allows for redistribution.

### Examples

```
router ospf
 redistribute rip subnets route-map redrip
```



```
network 192.168.12.0 0.0.0.255 area 0

access-list 10 permit 192.168.100.1
access-list 20 permit 172.16.10.1

route-map redrip permit 10
match ip next-hop 10 20
```

**Related commands**

| Command                      | Description                                        |
|------------------------------|----------------------------------------------------|
| <b>access-list</b>           | Set the access list.                               |
| <b>match ip address</b>      | Match the IP address in the access list.           |
| <b>match interface</b>       | Match the next-hop interface of the route.         |
| <b>match ip route-source</b> | Match the route source address in the access list. |
| <b>match metric</b>          | Match the metric.                                  |
| <b>match route-type</b>      | Match the route type.                              |
| <b>match tag</b>             | Match the tag.                                     |
| <b>set metric</b>            | Set the metric.                                    |
| <b>set metric-type</b>       | Set the metric type.                               |
| <b>set tag</b>               | Set the tag.                                       |

## 10.20 match ip route-source

Use **match ip route-source** command to redistribute the routes whose source IP address matches the access list. Use the **no** form of this command to remove the setting.

**match ip route-source** {*access-list-number* [*access-list-number...* | *access-list-name...*] [*access-list-name* [*access-list-number...*]*access-list-name*] | **prefix-list** *prefix-list-name* [*prefix-list-name...*]}

**no match ip route-source** [*access-list-number* [*access-list-number...* | *access-list-name...*] [*access-list-name* [*access-list-number...*]*access-list-name*] | **prefix-list** *prefix-list-name* [*prefix-list-name...*]]

**Parameter description**

| Parameter                           | Description                       |
|-------------------------------------|-----------------------------------|
| <i>access-list-number</i>           | Number of the access list         |
| <i>access-list-name</i>             | Name of the access list           |
| <i>prefix-list prefix-list-name</i> | Specify the prefix list to match. |

**Default**

**configuration** None.

**Command**

**mode** Route map configuration mode.

Multiple access list numbers may follow match ip route-source.

You can redistribute the routes from one routing process to another routing process. For example, you can redistribute the route in the OSPF routing domain and then advertise it to the RIP routing domain, and vice versa. The mutual route redistribution can be implemented between all the IP routing protocols.

#### Usage

#### guidelines

For route redistribution, route maps are usually used to control the mutual route redistribution between two routing domains.

One or more match or set commands can be executed to configure a route map. If the match command is not used, all the routes will be matched. If the set command is not used, no operation will be performed.

In the example below, the OSPF routing protocol redistributes the RIP routes. As long as the source IP address of the RIP route matches the access list 5, the OSPF allows for redistribution.

#### Examples

```
router ospf
redistribute rip subnets route-map redrip
network 192.168.12.0 0.0.0.255 area 0

access-list 5 permit 192.168.100.1

route-map redrip permit 10
match ip route-source 5
```

#### Related commands

| Command                  | Description                                       |
|--------------------------|---------------------------------------------------|
| <b>access-list</b>       | Set the access list.                              |
| <b>match ip address</b>  | Match the IP address in the access list.          |
| <b>match interface</b>   | Match the next-hop interface of the route.        |
| <b>match ip next-hop</b> | Match the next-hop IP address in the access list. |
| <b>match metric</b>      | Match the metric.                                 |
| <b>match route-type</b>  | Match the route type.                             |
| <b>match tag</b>         | Match the tag.                                    |
| <b>set metric</b>        | Set the metric.                                   |
| <b>set metric-type</b>   | Set the metric type.                              |
| <b>set tag</b>           | Set the tag.                                      |

## 10.21 match ipv6 address

Use this command to redistribute the network routes permitted in the IPv6 access list or the IPv6 prefix list. Use the **no** form of this command to delete the setting.

**match ipv6 address** { *access-list-name* } | **prefix-list** *prefix-list-name* }

**no match ipv6 address**

#### Parameter description

| Parameter               | Description              |
|-------------------------|--------------------------|
| <i>access-list-name</i> | Name of the access list. |

|                                                  |                                        |
|--------------------------------------------------|----------------------------------------|
| <code>prefix-list <i>prefix-list-name</i></code> | Specify the IPv6 prefix list to match. |
|--------------------------------------------------|----------------------------------------|

**Default**

**configuration** None

**Command**

**mode** Route map configuration mode

You can redistribute the routing information from one routing process to another routing process. For example, you can redistribute the route in the OSPF routing domain and then advertise it to the RIP routing domain, and vice versa. The mutual route redistribution can be implemented between all the IP routing protocols.

**Usage**

**guideline**

In the route redistribution, route maps are usually used to control the mutual route redistribution between two routing domains.

In configuring one route map, one or more match or set commands can be executed. If the match command is not used, all the routes will be matched. If the set command is not used, no operation will be performed.

The route map can be configured very flexibly to be used for route redistribution and policy-based routing. No matter how the route map is used, the configuration principle is the same, except that different command sets are used. Even if it is used on the route redistribution, different routing protocols can use different commands with the route map.

The following example enables the OSPF routing protocol to redistribute RIP routes that match access list v6acl, with the default metric being 30.

**Examples**

```

ipv6 router ospf
redistribute rip subnets route-map redrip
ipv6 access-list v6acl
10 permit ipv6 2620::64 any

route-map redrip permit 10
match ipv6 address v6acl
set metric 30
    
```

**Related**

**commands**

| Command                        | Description                                             |
|--------------------------------|---------------------------------------------------------|
| <b>ipv6 access-list</b>        | Set the IPV6 access list.                               |
| <b>match interface</b>         | Match the next-hop interface of the route.              |
| <b>match ipv6 next-hop</b>     | Match the next-hop address in the IPv6 access list.     |
| <b>match ipvr route-source</b> | Match the route source address in the IPv6 access list. |
| <b>match metric</b>            | Match the route metric.                                 |
| <b>match route-type</b>        | Match the route type.                                   |
| <b>match tag</b>               | Match the route tag.                                    |
| <b>set metric</b>              | Set the metric for route redistribution.                |

|                        |                                        |
|------------------------|----------------------------------------|
| <b>set metric-type</b> | Set the type for route redistribution. |
| <b>set tag</b>         | Set the tag for route redistribution.  |

## 10.22 match ipv6 next-hop

Use this command to redistribute the network routes whose next-hop IP address matches the IPv6 access list or the IPv6 prefix list. Use the **no** form of this command to delete the setting.

**match ipv6 next-hop** { *access-list-name* } | **prefix-list** *prefix-list-name*}

**no match ipv6 next hop**

| Parameter description | Parameter                           | Description                            |
|-----------------------|-------------------------------------|----------------------------------------|
|                       | <i>access-list-name</i>             | Name of the IPv6 access list.          |
|                       | <i>prefix-list prefix-list-name</i> | Specify the IPv6 prefix list to match. |

**Default configuration** None

**Command mode** Route map configuration mode

You can redistribute the routes from one routing process to another routing process. For example, you can redistribute the route in the OSPF routing domain and then advertise it to the RIP routing domain, and vice versa. The mutual route redistribution can be implemented between all the IP routing protocols.

**Usage guideline**

For route redistribution, route maps are usually used to control the mutual route redistribution between two routing domains.

One or more match or set commands can be executed to configure a route map. If the match command is not used, all the routes will be matched. If the set command is not used, no operation will be performed.

The route map can be configured very flexibly to be used for route redistribution and policy-based routing. No matter how the route map is used, the configuration principle is the same, except that different command sets are used. Even if it is used on the route redistribution, different routing protocols can use different commands with the route map.

The following example enables the OSPF routing protocol to redistribute RIP routes that only match access list v6acl, with the default metric being 40.

**Examples**

```
ipv6 router ospf
 redistribute rip subnets route-map redrip

ipv6 access-list v6acl
 10 permit ipv6 2620::64 any
```

```
route-map redrip permit 10
match ipv6 address v6acl
set metric 40
```

**Related commands**

| Command                        | Description                                             |
|--------------------------------|---------------------------------------------------------|
| <b>ipv6 access-list</b>        | Set the IPV6 access list.                               |
| <b>match interface</b>         | Match the next-hop interface of the route.              |
| <b>match ipv6 address</b>      | Match the IP address in the IPV6 access list.           |
| <b>match ipv6 route-source</b> | Match the route source address in the IPV6 access list. |
| <b>match metric</b>            | Match the route metric.                                 |
| <b>match route-type</b>        | Match the route type.                                   |
| <b>match tag</b>               | Match the route tag.                                    |
| <b>set metric</b>              | Set the metric for route redistribution.                |
| <b>set metric-type</b>         | Set the type for route redistribution.                  |
| <b>set tag</b>                 | Set the tag for route redistribution.                   |

### 10.23 match ipv6 route-source

Use this command to redistribute the network routes whose next-hop IP address matches the IPv6 access list or the IPv6 prefix list. Use the **no** form of this command to delete the setting.

**match ipv6 route-source** { *access-list-name* } | **prefix-list** *prefix-list-name* }

**no match ipv6 route-source**

**Parameter description**

| Parameter                           | Description                            |
|-------------------------------------|----------------------------------------|
| <i>access-list-name</i>             | Name of the IPv6 access list.          |
| <i>prefix-list prefix-list-name</i> | Specify the IPv6 prefix list to match. |

**Default**

**configuration** None

**Command**

**mode** Route map configuration mode

You can redistribute the routing information from one routing process to another routing process. For example, you can redistribute the route in the OSPF routing domain and then advertise it to the RIP routing domain, and vice versa. The mutual route redistribution can be implemented between all the IP routing protocols.

### Usage guideline

In the route redistribution, route maps are usually used to control the mutual route redistribution between two routing domains.

In configuring one route map, one or more match or set commands can be executed. If the match command is not used, all the routes will be matched. If the set command is not used, no operation will be performed.

The route map can be configured very flexibly to be used for route redistribution and policy-based routing. No matter how the route map is used, the configuration principle is the same, except that different command sets are used. Even if it is used on the route redistribution, different routing protocols can use different commands with the route map.

The following example enables the OSPF routing protocol to redistribute RIP routes that only match access list v6acl, with the default metric being 50.

### Examples

```
ipv6 router ospf
redistribute rip subnets route-map redrip

ipv6 access-list v6acl
10 permit ipv6 5200::64 any

route-map redrip permit 10
match ipv6 address v6acl
set metric 50
```

### Related commands

| Command                    | Description                                   |
|----------------------------|-----------------------------------------------|
| <b>ipv6 access-list</b>    | Set the IPV6 access list.                     |
| <b>match interface</b>     | Match the next-hop interface of the route.    |
| <b>match ipv6 address</b>  | Match the IP address in the IPV6 access list. |
| <b>match ipv6 next-hop</b> | Match the next hop in the IPV6 access list.   |
| <b>match metric</b>        | Match the route metric.                       |
| <b>match route-type</b>    | Match the route type.                         |
| <b>match tag</b>           | Match the route tag.                          |
| <b>set metric</b>          | Set the metric for route redistribution.      |
| <b>set metric-type</b>     | Set the type for route redistribution.        |
| <b>set tag</b>             | Set the tag for route redistribution.         |

## 10.24 match metric

Use **match metric** command to redistribute the routes of the specified metric. Use the **no** form of this command to remove the setting.

**match metric** *metric*  
**no match metric**

| Parameter          | Parameter     | Description                                |
|--------------------|---------------|--------------------------------------------|
| <b>description</b> | <i>metric</i> | Route metric, in the range 0 to 4294967295 |

**Default configuration** None.

**Command mode** Route map configuration mode.

**Usage guidelines** You can redistribute the routing information from one routing process to another routing process. For example, you can redistribute the route in the OSPF routing domain and then advertise it to the RIP routing domain, and vice versa. The mutual route redistribution can be implemented between all the IP routing protocols.

In the route redistribution, route maps are usually used to control the mutual route redistribution between two routing domains.

In configuring one route map, one or more match or set commands can be executed. If the match command is not used, all the routes will be matched. If the set command is not used, no operation will be performed.

In the example below, the OSPF routing protocol redistributes the RIP routes of metric 10.

**Examples**

```
router ospf 1
redistribute rip subnets route-map redrip
network 192.168.12.0 0.0.0.255 area 0

route-map redrip permit 10
match metric 10
```

**Related commands**

| Command                      | Description                    |
|------------------------------|--------------------------------|
| <b>access-list</b>           | Set the access list.           |
| <b>match ip address</b>      | Match the IP address.          |
| <b>match interface</b>       | Match the interface.           |
| <b>match ip next-hop</b>     | Match the next-hop IP address. |
| <b>match ip route-source</b> | Match the source IP address.   |
| <b>match route-type</b>      | Match the route type.          |
| <b>match tag</b>             | Match the tag.                 |
| <b>set metric</b>            | Set the metric.                |
| <b>set metric-type</b>       | Set the metric type.           |
| <b>set tag</b>               | Set the tag.                   |

## 10.25 match origin

Use this command to redistribute the routes whose source IP address is permitted by the ACL in the route map configuration mode. Use the **no** form of this command to remove the setting.

**match origin {egp | igp | incomplete}**

**no match origin [egp | igp | incomplete]**

|                       | Parameter  | Description                                      |
|-----------------------|------------|--------------------------------------------------|
| Parameter description | egp        | Redistribute the routes from the remote EGP.     |
|                       | igp        | Redistribute the routes from the local IGP.      |
|                       | incomplete | Redistribute the routes from an incomplete type. |

### Default

**configuration** None

### Command

**mode** Route map configuration mode

### Usage

**guideline** Use this command to set the origin of the routes to be redistributed. Only one origin can be set.

### Examples

```
Ruijie(config)# route-map MY_MAP 10 permit
Ruijie(config-route-map)# match origin egp
Ruijie(config-route-map)# set community 109
Ruijie(config-route-map)# exit
Ruijie(config)# route-map MAP20 20 permit
Ruijie(config-route-map)# match origin incomplete
Ruijie(config-route-map)# set community no-export
```

|                  | Command                    | Description                  |
|------------------|----------------------------|------------------------------|
| Related commands | <b>match as-path</b>       | Match the AS_PATH attribute. |
|                  | <b>match metric</b>        | Match the metric.            |
|                  | <b>match origin</b>        | Match the source.            |
|                  | <b>set as-path prepend</b> | Set the AS_PATH attribute.   |
|                  | <b>set metric</b>          | Set the metric.              |
|                  | <b>set origin</b>          | Set the source.              |

## 10.26 match route-type

Use this command to redistribute the network routes of the specified type. Use the **no** form of this command to delete the setting.

**match route-type { static | connect | rip | local | internal | external [ type-1 | type-2 ] | level-1 |**



```
level-2 | evpn-type-1 | evpn-type-2 | evpn-type-3 | evpn-type-4 | evpn-type-5 }
no match route-type [ static | connect | rip | local | internal | external [ type-1 | type-2 ] | level-1 |
level-2 | evpn-type-1 | evpn-type-2 | evpn-type-3 | evpn-type-4 | evpn-type-5]
```

### Parameter description

| Parameter                                                                  | Description                                       |
|----------------------------------------------------------------------------|---------------------------------------------------|
| <b>local</b>                                                               | Indicates the local route type.                   |
| <b>static</b>                                                              | Indicates the static route type.                  |
| <b>connect</b>                                                             | Indicates the directly connected route type.      |
| <b>rip</b>                                                                 | Indicates the RIP route type.                     |
| <b>internal</b>                                                            | Indicates the OSPF internal route type.           |
| <b>external</b>                                                            | Indicates the OSPF external route type.           |
| <b>type-1   type-2</b>                                                     | Indicates the OSPF type-1 or type-2 route type.   |
| <b>level-1   level-2</b>                                                   | Indicates the ISIS level-1 or level-2 route type. |
| <b>evpn-type-1   evpn-type-2   evpn-type-3   evpn-type-4   evpn-type-5</b> | 5 route types of BGP EVPN                         |

### Default

**configuration** None

### Command

**mode** Route map configuration mode

You can redistribute the routing information from one routing process to another routing process. For example, you can redistribute the route in the OSPF routing domain and then advertise it to the RIP routing domain, and vice versa. The mutual route redistribution can be implemented between all the IP routing protocols.

### Usage

#### guideline

In the route redistribution, route maps are usually used to control the mutual route redistribution between two routing domains.

In configuring one route map, one or more match or set commands can be executed. If the match command is not used, all the routes will be matched. If the set command is not used, no operation will be performed.

In the example below, the RIP routing protocol redistributes only the internal routes in the OSPF routing domain.

### Examples

```
router rip
redistribute ospf route-map redrip
network 192.168.12.0

route-map redrip permit 10
match route-type internal
!
```

### Related

| Command | Description |
|---------|-------------|
|---------|-------------|

|                 |                              |                                |
|-----------------|------------------------------|--------------------------------|
| <b>commands</b> | <b>access-list</b>           | Set the access list.           |
|                 | <b>match ip address</b>      | Match the IP address.          |
|                 | <b>match interface</b>       | Match the interface.           |
|                 | <b>match ip next-hop</b>     | Match the next-hop IP address. |
|                 | <b>match ip route-source</b> | Match the source IP address.   |
|                 | <b>match metric</b>          | Match the metric.              |
|                 | <b>match tag</b>             | Match the tag.                 |
|                 | <b>set metric</b>            | Set the metric.                |
|                 | <b>set metric-type</b>       | Set the access list.           |
|                 | <b>set tag</b>               | Match the IP address.          |

## 10.27 match tag

Use this command to redistribute the network routes with the specified tag. Use the **no** form of this command to delete the setting.

**match tag** *tag* [...*tag*]

**no match tag** [*tag* [...*tag*]]

|                              | Parameter  | Description |
|------------------------------|------------|-------------|
| <b>Parameter description</b> | <i>tag</i> | Route tag   |

**Default configuration** None

**Command mode** Route map configuration mode

Multiple tags may follow the match tag command.

You can redistribute the routing information from one routing process to another routing process. For example, you can redistribute the route in the OSPF routing domain and then advertise it to the RIP routing domain, and vice versa. The mutual route redistribution can be implemented between all the IP routing protocols.

**Usage guideline** In the route redistribution, route maps are usually used to control the mutual route redistribution between two routing domains.

In configuring one route map, one or more match or set commands can be executed. If the match command is not used, all the routes will be matched. If the set command is not used, no operation will be performed.

In the example below, the RIP routing protocol redistributes only the routes with tag 50 and 80 in the OSPF routing domain.

**Examples**

```
Ruijie(config)# router rip
Ruijie(config-router)# redistribute ospf 100 route-map redrip
Ruijie(config-router)# network 192.168.12.0
Ruijie(config-router)# exit
Ruijie(config)# route-map redrip permit 10
Ruijie(config-route-map)# match tag 50 80
```

**Related commands**

| Command                      | Description                      |
|------------------------------|----------------------------------|
| <b>access-list</b>           | Set the access list.             |
| <b>match ip address</b>      | Match the IP address.            |
| <b>match interface</b>       | Match the next-hop IP interface. |
| <b>match ip route-source</b> | Match the source IP address.     |
| <b>match metric</b>          | Match the metric.                |
| <b>match ip next-hop</b>     | Match the next-hop IP address.   |
| <b>match route-type</b>      | Match the route type.            |
| <b>set metric</b>            | Set the metric.                  |
| <b>set metric-type</b>       | Set the metric type.             |
| <b>set tag</b>               | Set the tag.                     |

## 10.28 memory-lack exit-policy

Use this command to configure a policy to preferentially exit a routing protocol when the memory reaches the lower limit. Use the **no** form of this command to restore the default policy, namely, exit the routing protocol which occupies the largest memory.

**memory-lack exit-policy { bgp | ospf | pim-sm | rip }**

**no memory-lack exit-policy**

**Parameter description**

| Parameter     | Description                                                 |
|---------------|-------------------------------------------------------------|
| <b>bgp</b>    | Preferentially exit BGP when the memory is insufficient.    |
| <b>ospf</b>   | Preferentially exit OSPF when the memory is insufficient.   |
| <b>pim-sm</b> | Preferentially exit PIM-SM when the memory is insufficient. |
| <b>rip</b>    | Preferentially exit RIP when the memory is insufficient.    |

**Default**

By default, the routing protocol which occupies the largest memory exits preferentially.

**Command mode**

Global configuration mode

**Usage**

When the memory reaches the lower limit, you can disable a routing protocol to release the memory to

**guideline** ensure the normal running of other protocols.

When the system runs out of memory, disable a routing protocol which has the minimal impact on the system to ensure the operation of main services.

Configuring the policy to preferentially exit the routing protocols which are disabled cannot help the system release memory.

This command ensures the operation of main services to some extent when the memory is insufficient. If the memory is further consumed, all routing protocols will exit and stop running.

**Examples** The following example configures a policy to preferentially exit the BGP protocol when the memory reaches the lower limit.

```
Ruijie(config)# memory-lack exit-policy bgp
```

**Related command**

| Command | Description |
|---------|-------------|
| -       | -           |

**Platform description**

-

## 10.29 route-map

Use **route-map** to enter the route map configuration mode and define a route map. Use the **no** form of this command to remove the setting.

**route-map** *route-map-name* [**permit** | **deny**] [*sequence-number*]

**no route-map** *route-map-name* [{**permit** | **deny**}*sequence-number*]

**Parameter description**

| Parameter             | Description                                                                                                                                                                                                                                                                                                                                                                                                                              |
|-----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>route-map-name</i> | Name of the route map. The redistribute command references the route map according to its name. Multiple routing policies can be defined in a route map, and each policy corresponds to one sequence number.                                                                                                                                                                                                                             |
| <b>permit</b>         | (Optional) If the permit keyword is defined and the rule defined by match is met, The set command controls the redistributed routes. For policy-based routing, the set command controls the packet forwarding, and exits the route map operation.<br>If the permit keyword is defined but the rule defined by match is not met, the system performs the routing policy of the second route map till the set command is executed finally. |
| <b>deny</b>           | (Optional) If the deny keyword is defined and the rule defined by match is met, no operation will be performed. Neither route redistribution nor policy-based routing is supported in the route map. The system exits the route map operation.<br>If the deny keyword is defined but the rule defined by match is not met, the system performs the routing policy of the second route map till the                                       |

|                        |                                                                                                                                         |
|------------------------|-----------------------------------------------------------------------------------------------------------------------------------------|
|                        | set command is executed finally.                                                                                                        |
| <i>sequence-number</i> | Sequence number of the route map. The policy with a lower sequence number is preferred, so it's noted when setting the sequence number. |

**Default****configuration** None.**Command****mode** Global configuration mode.

At present, the RGOS software primarily uses the route map for route redistribution and policy-based routing.

## 1. Route redistribution control

You can redistribute the routes from one routing process to another routing process. For example, you can redistribute the route in the OSPF routing domain and then advertise it to the RIP routing domain, and vice versa. The mutual route redistribution can be implemented between all the IP routing protocols.

For route redistribution, route maps are usually used to control the mutual route redistribution between two routing domains.

One or more match or set commands can be executed to configure a route map. If the match command is not used, all the routes will be matched. If the set command is not used, no operation will be performed.

When configuring route maps, pay attention to the following when using the sequence number of a route map:

**Usage**

When you create the first route map policy, if *sequence-number* is not specified, it is 10 by default;

**guidelines**

If only one route map policy exists and *sequence-number* is not specified, no new route map policy will be created, and the existing route map policy will be accessed for configuration;

If more than one route map policy is available, the sequence number of each policy shall be specified; otherwise an error message will be displayed.

## 2. policy-based routing

Policy-based routing refers to a routing mechanism based on user defined policies. Compared with traditional destination IP address-based routing, policy-based routing offers a flexibility for routing based on source IP address, length and port of IP packets. Policy-based routing can apply to the IP packets received on an interface or the IP packets sent from the local device.

Policy-based routing utilizes route map to define routing and forwarding policy. The match command defines packet filtering rule and the set command defines the action for the packets matching the filtering rules. The match command used includes match ip address and match length; the set command includes set ip tos, set ip precedence, set ip dscp, set ip [default] nexthop, set ip next-hop verify-availability, set [default] interface.

**Examples**

The following example enables the OSPF routing protocol to redistribute the RIP routes with the hop count of 4. In the OSPF route domain, the route type is the external route type-1, the default metric is 40 and the tag is 40.

```

!
router ospf
 redistribute rip subnets route-map redrip
 network 192.168.12.0 0.0.0.255 area 0
!
!
route-map redrip permit 10
 match metric 4
 set metric 40
 set metric-type type-1
 set tag 40
    
```

| <b>Related commands</b> | Command      | Description              |
|-------------------------|--------------|--------------------------|
|                         | redistribute | Redistribute the routes. |

### 10.30 send-lifetime

Use this command in the encryption key configuration mode to specify the lifetime of an encryption key in its send direction. Use the no form of this command to restore the default value.

**send-lifetime** *start-time* {infinite | *end-time* | **duration** *seconds*}

**no send-lifetime**

| <b>Parameter description</b> | Parameter                         | Description                                                                                 |
|------------------------------|-----------------------------------|---------------------------------------------------------------------------------------------|
|                              | <i>start-time</i>                 | Start time of the lifetime.                                                                 |
|                              | <b>infinite</b>                   | Indicates that the encryption key is valid for ever.                                        |
|                              | <i>end-time</i>                   | <i>End time of the encryption key. It must be later than the start time.</i>                |
|                              | <b>duration</b><br><i>seconds</i> | Duration of the encryption key after the start time. The value ranges from 1 to 2147483646. |

**Default** infinite

**Command mode** Encryption key configuration mode

**Usage guideline** Use this command to specify the lifetime of an encryption key in its send direction.

**Examples** The following example configures the lifetime from 0:00 on September 9, 2000 to 0:00 on October 12, 2011

```

Ruijie(config)# key chain ripkeys
Ruijie(config-keychain)# key 1
Ruijie(config-keychain-key)# send-lifetime 00:00:00 Sep 9 2000 00:00:00 Dec 12 2011
    
```

| Related command | Command | Description |
|-----------------|---------|-------------|
|                 | -       | -           |

**Platform description** -

## 10.31 set aggregator as

Use this command to specify the AS\_PATH attribute for the aggregator of the routes that match the rule in the route map configuration mode. Use the **no** form of this command to remove the setting. This command is only used to configure policy-based routing.

**set aggregator as** *as-number ip\_addr*

**no set aggregator as** [*as-number ip\_addr*]

| Parameter description | Parameter         | Description                   |
|-----------------------|-------------------|-------------------------------|
|                       | <i>as-number</i>  | AS number of the aggregator.  |
|                       | <i>ip_address</i> | IP address of the aggregator. |

**Default configuration** None

**Command mode** Route map configuration mode

**Usage guideline** Use this command to set the AS\_PATH attribute for the matched routes in the BGP routing domain. Only one group of parameters (as-number, ip-addr) is allowed to set at a time.

### Examples

```
Ruijie(config)# route-map set-as-path
Ruijie(config-route-map)# match as-path 1
Ruijie(config-route-map)# set aggregator as 3 2.2.2.2
```

| Related commands | Command         | Description                  |
|------------------|-----------------|------------------------------|
|                  | match as-path   | Match the AS_PATH.           |
|                  | match community | Match the community.         |
|                  | match metric    | Match the route metric.      |
|                  | match origin    | Match the route source.      |
|                  | set community   | Set the COMMUNITY attribute. |
|                  | set metric      | Set the metric.              |
|                  | set metric-type | Set the type.                |

### 10.32 set as-path prepend

Use this command to specify the AS\_PATH attribute for the routes that match the rule in the route map configuration mode. Use the **no** form of this command to remove the setting. This command is only used to configure policy-based routing.

**set as-path prepend** *as-number*

**no set as-path prepend**

**Parameter description**

| Parameter        | Description                                                                                                                                 |
|------------------|---------------------------------------------------------------------------------------------------------------------------------------------|
| <i>as-number</i> | Indicates number of the AS_PATH attribute to be configured.<br>The AS number ranges from 1 to 4294967295, and 1 to 65535.65535 in dot mode. |

**Default**

**configuration** None

**Command**

**mode** Route map configuration mode

**Usage**

**guideline**

Use this command to configure the AS\_PATH attribute for the matched routes. Up to 10 ASs can be added into the as-path for one time.

**Examples**

```
Ruijie(config)# route-map set-as-path
Ruijie(config-route-map)# match as-path 1
Ruijie(config-route-map)# set as-path prepend 100 101 102
```

**Related commands**

| Command                | Description                  |
|------------------------|------------------------------|
| <b>match as-path</b>   | Match the AS_PATH.           |
| <b>match community</b> | Match the community.         |
| <b>match metric</b>    | Match the route metric.      |
| <b>match origin</b>    | Match the route source.      |
| <b>set community</b>   | Set the COMMUNITY attribute. |
| <b>set metric</b>      | Set the metric.              |
| <b>set metric-type</b> | Set the type.                |

### 10.33 set atomic-aggregate

Use this command to set the ATOMIC-AGGREGATE attribute for routes.

**set atomic-aggregate**

Use the **no** form of this command to delete existing configuration.

**no set atomic-aggregate**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
|-----------|-------------|



|     |     |
|-----|-----|
| N/A | N/A |
|-----|-----|

**Defaults** N/A

**Command Mode** Routing map configuration mode

**Default Level** 14

**Usage Guide** This command is used only in the BGP protocol and is used to set the ATOMIC-AGGREGATE attribute for routes.

**Configuration Examples** N/A

## 10.34 set comm-list delete

Use this command to delete the COMMUNITY\_LIST attribute for the routes that match the rule in the route map configuration mode. Use the **no** form of this command to remove the setting. This command is only used to configure policy-based routing.

**set comm-list** *community-list-number* | *community-list-name* **delete**

**no set comm-list** *community-list-number* | *community-list-name* **delete**

|                              | Parameter                    | Description                                                                                                          |
|------------------------------|------------------------------|----------------------------------------------------------------------------------------------------------------------|
| <b>Parameter description</b> | <i>community-list-number</i> | Number of the community list.<br>Standard community list number : 1-99.<br>Extended community list number : 100-199. |
|                              | <i>community-list-name</i>   | Name of the community list, which should be no more than 80 characters.                                              |

**Default configuration** None

**Command mode** Route map configuration mode

**Usage guideline** Use this command to set the community attribute value for the matched routes that will be deleted.

**Examples**

```
Ruijie(config)# router bgp 100
Ruijie(config-router)# neighbor 172.16.233.33 remote-as 120
Ruijie(config-router)# neighbor 172.16.233.33 route-map ROUTEMAPIN in
Ruijie(config-router)# neighbor 172.16.233.33 route-map ROUTEMAPOUT out
```

```

Ruijie(config-router)# exit
Ruijie(config)# ip community-list 500 permit 100:10
Ruijie(config)# ip community-list 500 permit 100:20
Ruijie(config)# ip community-list 120 deny 100:50
Ruijie(config)# ip community-list 120 permit 100:.*
Ruijie(config)# route-map ROUTEMAPIN permit 10
Ruijie(config-route-map)# set comm-list 500 delete
Ruijie(config-route-map)# exit
Ruijie(config)# route-map ROUTEMAPOUT permit 10
Ruijie(config-route-map)# set comm-list 120 delete

```

#### Related commands

| Command                     | Description                                              |
|-----------------------------|----------------------------------------------------------|
| <b>match as-path</b>        | Match the AS_PATH attribute value.                       |
| <b>match metric</b>         | Match the metric.                                        |
| <b>match origin</b>         | Match the source.                                        |
| <b>set as-path prepend</b>  | Set the AS_PATH attribute.                               |
| <b>set local-preference</b> | Set the local priority of the route to be redistributed. |
| <b>set metric-type</b>      | Set the metric type.                                     |

## 10.35 set community

Use this command to specify the community for the routes that match the rule in the route map configuration mode. Use the **no** form of this command to remove the setting. This command is only used to configure policy-based routing.

**set community** {*community-number*[*community-number*...]} [**additive** | **none**]

**no set community**

#### Parameter description

| Parameter               | Description                                                                                                                                                           |
|-------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>community-number</i> | Community number in the form of AA:NN or a large numeral. In addition, it can be well-known community attributes like internet, local-AS, no-export and no-advertise. |
| additive                | Increase on the original COMMUNITY attribute.                                                                                                                         |
| none                    | Set the community attribute as blank.                                                                                                                                 |

#### Default

**configuration** None

#### Command

**mode** Route map configuration mode

**Usage**

**guideline** Use this command to set the community attribute for the matched route.

**Examples**

```
Ruijie(config)# route-map SET_COMMUNITY 10 permit
Ruijie(config-route-map)# match as-path 1
Ruijie(config-route-map)# set community 109:10
Ruijie(config-route-map)# exit
Ruijie(config)# route-map SET_COMMUNITY 20 permit
Ruijie(config-route-map)# match as-path 2
Ruijie(config-route-map)# set community no-export
```

**Related commands**

| Command                    | Description                |
|----------------------------|----------------------------|
| <b>match as-path</b>       | Match the AS_PATH.         |
| <b>match community</b>     | Match the community.       |
| <b>match metric</b>        | Match the metric.          |
| <b>match origin</b>        | Match the source.          |
| <b>set as-path prepend</b> | Set the AS_PATH attribute. |
| <b>set origin</b>          | Set the source.            |
| <b>set metric-type</b>     | Set the metric type.       |

## 10.36 set dampening

Use this command to specify the dampening parameters for the routes that match the rule in the route map configuration mode. Use the **no** form of this command to remove the setting. This command is only used to configure policy-based routing.

**set dampening** *half-life reuse suppress max-suppress-time*

**no set dampening**

**Parameter description**

| Parameter                | Description                                                                                                                       |
|--------------------------|-----------------------------------------------------------------------------------------------------------------------------------|
| <i>half-life</i>         | Half dampening life for the reachable or unreachable route in the range of 1 to 45 minutes, 15 minutes by default                 |
| <i>reuse</i>             | When the route penalty is lower than this value, the route suppression is released. It is in the range 1 to 20000, 750 by default |
| <i>suppress</i>          | When the route penalty is higher than this value, the route is suppressed. It is in the range 1 to 20000, 2000 by default         |
| <i>max-suppress-time</i> | Maximum duration a route can be suppressed in the range 1 to 20000 minutes, 4* half-life by default.                              |

**Default**

**configuration** None

**Command**

**mode** Route map configuration mode

**Usage**

**guideline** Use this command to set the dampening parameter for the matched routes.

**Examples**

```
Ruijie(config)# route-map tag
Ruijie(config-route-map)# match as path 10
Ruijie(config-route-map)# set dampening 30 1500 10000 120
Ruijie(config-route-map)# exit
Ruijie(config)# router bgp 100
Ruijie(config-router)# neighbor 172.16.233.52 route-map tag in
```

**Related commands**

| Command                     | Description                                              |
|-----------------------------|----------------------------------------------------------|
| <b>match as-path</b>        | Match the AS_PATH value.                                 |
| <b>match community</b>      | Match the community.                                     |
| <b>match metric</b>         | Match the metric.                                        |
| <b>match origin</b>         | Match the source.                                        |
| <b>set as-path prepend</b>  | Set the AS_PATH attribute.                               |
| <b>set metric</b>           | Set the metric.                                          |
| <b>set local-preference</b> | Set the local priority of the route to be redistributed. |

## 10.37 set extcomm-list delete

Use this command to delete all extcommunity values in the extcommunity list that meet the match rules. Use the **no** form of this command to delete the configuration.

**set extcomm-list** { *extcommunity-list-number* | *extcommunity-list-name* } **delete**

**no set extcomm-list** { *extcommunity-list-number* | *extcommunity-list-name* } **delete**

**Parameter description**

| Parameter                       | Description                                                                                                      |
|---------------------------------|------------------------------------------------------------------------------------------------------------------|
| <i>extcommunity-list-number</i> | <i>extcommunity-list-number</i><br>Standard list: ranges from 1 to 99.<br>Expanded list: ranges from 100 to 199. |
| <i>extcommunity-list-name</i>   | <i>extcommunity-list-name</i><br>It consists of a maximum of 80 characters.                                      |

**Default**

-

**Command mode**

Route map configuration mode.

**Usage**

This command is used to delete the **extcommunity-list**.

**guideline** This command applies only to policy route configuration.

**Examples**

```
Ruijie(config)# router bgp 65530
Ruijie(config-router)# neighbor 172.16.233.33 remote-as 65531
Ruijie(config-router)# address-family vpnv4 unicast
Ruijie(config-router-af)# neighbor 172.16.233.33 activate
Ruijie(config-router-af)# neighbor 172.16.233.33 route-map ROUTEMAPIN in
Ruijie(config-router-af)# neighbor 172.16.233.33 route-map ROUTEMAPOUT out
Ruijie(config-router)# exit
Ruijie(config)# ip extcommunity-list 10 permit rt 100:10
Ruijie(config)# ip extcommunity-list 10 permit rt 100:20
Ruijie(config)# ip extcommunity-list 120 deny 100:50
Ruijie(config)# ip extcommunity-list 120 permit 100:.*
Ruijie(config)# route-map ROUTEMAPIN permit 10
Ruijie(config-route-map)# set extcomm-list 10 delete
Ruijie(config-route-map)# exit
Ruijie(config)# route-map ROUTEMAPOUT permit 10
Ruijie(config-route-map)# set extcomm-list 120 delete
```

**Related command**

| Command                        | Description                             |
|--------------------------------|-----------------------------------------|
| <b>ip extcommunity-list</b>    | Configure an <b>extcommunity-list</b> . |
| <b>match as-path</b>           | Match the AS_PATH value                 |
| <b>match metric</b>            | Match the metric.                       |
| <b>match origin</b>            | Match the source.                       |
| <b>set as-path prepend</b>     | Set the AS_PATH attribute.              |
| <b>set extcomm-list delete</b> | Set delete <b>extcommunity-list</b> .   |
| <b>set local-preference</b>    | Set local preference for a reroute.     |

**Platform description** -

## 10.38 set extcommunity

Use this command to specify the extended COMMUNITY attribute for the routes that match the rule in the route map configuration mode. Use the **no** form of this command to remove the setting. This command is only used to configure policy-based routing.

**set extcommunity** {rt *extend-community-value* | soo *extend-community-value*}  
**no set extcommunity** {rt | soo }

**Parameter description**

| Parameter | Description                                              |
|-----------|----------------------------------------------------------|
| rt        | Specify the extended community value in the form of RT.  |
| soo       | Specify the extended community value in the form of SOO. |

|                               |                           |
|-------------------------------|---------------------------|
| <i>extend-community-value</i> | Extended community value. |
|-------------------------------|---------------------------|

**Default** None

**Command mode** Route map configuration mode

**Usage guideline** Use this command to set the extended community attribute for the matched route.

### Examples

```
Ruijie(config)# access-list 2 permit 192.168.78.0 255.255.255.0
Ruijie(config)# route-map MAP_NAME permit 10
Ruijie(config-route-map)# match ip-address 2
Ruijie(config-route-map)# set extcommunity rt 100:2
```

### Related commands

| Command                    | Description                |
|----------------------------|----------------------------|
| <b>match as-path</b>       | Match the AS_PATH value    |
| <b>match community</b>     | Match the community.       |
| <b>match metric</b>        | Match the metric.          |
| <b>match origin</b>        | Match the source.          |
| <b>set as-path prepend</b> | Set the AS_PATH attribute. |
| <b>set metric</b>          | Set the metric.            |
| <b>set metric-type</b>     | Set the metric type.       |

## 10.39 set fast-reroute

Use this command to specify a backup outgoing fast reroute and a backup next-hop for routes that meet the match conditions. Use the no form of this command to delete the configuration.

**set fast-reroute backup-interface** *interface-type interface-number* [ **backup-nexthop** *ip-address* ]

**no set fast-reroute**

### Parameter description

| Parameter                              | Description                |
|----------------------------------------|----------------------------|
| <i>interface-type interface-number</i> | Backup outgoing interface. |
| <i>ip-address</i>                      | Backup next-hop.           |


**Default** -

**Command mode** Route map configuration mode.

**Usage guideline** Use this command to configure IP FRR backup outgoing interface and backup next-hop. The current software version supports only one backup route. This command supports only one set of the two

parameters.

This command is used for fast reroute configuration.

 IP FRR backup routes must not be direct-connection or local host routes.

**Examples**

```
Ruijie(config)# access-list 2 permit 192.168.78.0 255.255.255.0
Ruijie(config)# route-map frr permit 10
Ruijie(config-route-map)# match ip-address 2
Ruijie(config-route-map)# set fast-reroute backup-interface GigabitEthernet
0/1 backup-nexthop 192.168.1.2
```

**Related command**

| Command                 | Description            |
|-------------------------|------------------------|
| <b>match ip-address</b> | Match IP address list. |

**Platform description**

N/A

## 10.40 set ip default next-hop

Use this command to specify the default next-hop IP address for the packets that match the rule in the route map configuration mode. Use the **no** form of this command to remove the setting.

**set ip default next-hop** *ip-address* [ *weight* ] [ ...*ip-address* [ *weight* ] ]

**no set ip default next-hop** [ *ip-address* [ *weight* ] [ ...*ip-address* [ *weight* ] ] ]

**Parameter description**

| Parameter         | Description                 |
|-------------------|-----------------------------|
| <i>ip-address</i> | IP address of the next hop. |
| <i>weight</i>     | Weight of the next hop.     |

**Default configuration**

None

**Command mode**

Route map configuration mode

This command supports two operation modes: WCMP load balancing mode and non-WCMP load balancing mode. In the former mode, the system implements WCMP load balancing according to the weight inputted.

**Usage guideline**

Up to 32 IP addresses may follow the set ip default next-hop command.

If a weight follows ip address, up to 4 next hop IP addresses can be configured.

Note: If a weight follows any next-hop, the operation mode of this command will be automatically switched to the WCMP load balancing mode. In this mode, the weight of those next hop IP addresses whose weight is not configured is 1 by default.

Differences between `set ip next-hop` and `set ip default next-hop`: After the `set ip next-hop` command is configured, the policy-based routing takes precedence over the routing table; while after the `set ip default next-hop` command is configured, the routing table takes precedence over the policy-based routing.

Use this command to customize a default route for a specified user. If the software fails to find the forwarding route, the packet will be forwarded to the next hop set with this command.

To use the policy-based routing, you must specify the route map for it and create the route map. A route map contains multiple policies, and each policy defines one or more match rules and the corresponding operations. After policy-based routing is applied to an interface, the packets received by the interface will be checked. The packets that do not match any policy in the route map will be forwarded through the usual route. The packets that match a policy in the route map will be processed according to the operation defined in the policy.

A route-map policy may contain multiple set operations.

The following example forwards the packets from two different nodes through different routes.

For the messages received on the synchronous interface 1 from 1.1.1.1, if the software cannot find the forwarding route, they are forwarded to device 6.6.6.6. For the messages received from 2.2.2.2, if the software cannot find the forwarding route, they are forwarded to device 7.7.7.7. The other messages will be discarded if the software cannot find the forwarding route.

### Examples

```
Ruijie(config)#access-list 1 permit 1.1.1.1 0.0.0.0
Ruijie(config)#access-list 2 permit 2.2.2.2 0.0.0.0
Ruijie(config)#interface async 1
Ruijie(config-if)#ip policy route-map equal-access
Ruijie(config)#route-map equal-access permit 10
Ruijie(config- route-map)#match ip address 1
Ruijie(config-route-map)#set ip default next-hop 6.6.6.6
Ruijie(config)#route-map equal-access permit 20
Ruijie(config-route-map)#match ip address 2
Ruijie(config-route-map)#set ip default next-hop 7.7.7.7
Ruijie(config)#route-map equal-access permit 30
Ruijie(config- route-map)#set default interface null 0
```

### Related commands

| Command                      | Description                         |
|------------------------------|-------------------------------------|
| <b>route-map</b>             | Define a route map.                 |
| <b>match ip address</b>      | Match the IP address.               |
| <b>set default interface</b> | Set the default outgoing interface. |
| <b>set interface</b>         | Set the outgoing interface.         |
| <b>set ip next-hop</b>       | Set the next hop of the packets.    |
| <b>set ip precedence</b>     | Set the priority of the packets.    |

### Platform description

N/A



## 10.41 set ip dscp

Use this command to specify the DSCP value for the packets that match the rule in the route map configuration mode. Use the **no** form of this command to remove the setting.

**set ip dscp** *dscp-value*

**no set ip dscp**

| Parameter   | Parameter         | Description |
|-------------|-------------------|-------------|
| description | <i>dscp-value</i> | DSCP value  |

**Default configuration** N/A

**Command mode** Route map configuration mode

**Usage guideline** N/A

**Examples** N/A

| Related commands | Command                      | Description                         |
|------------------|------------------------------|-------------------------------------|
|                  | <b>route-map</b>             | Define a route map.                 |
|                  | <b>match ip address</b>      | Match the IP address.               |
|                  | <b>set default interface</b> | Set the default outgoing interface. |
|                  | <b>set interface</b>         | Set the outgoing interface.         |
|                  | <b>set ip next-hop</b>       | Set the next hop of the packets.    |
|                  | <b>set ip precedence</b>     | Set the priority of the packets.    |

## 10.42 set ip next-hop

Use this command to specify the next-hop IP address for the packets that meet the matching rule. Use the **no** form of this command to remove the setting. This command is only used to configure policy-based routing.

**set ip next-hop** *ip-address* [ *weight* ] [ ...*ip-address* [ *weight* ] ]

**no set ip next-hop** [ *ip-address* [ *weight* ] [ ...*ip-address* [ *weight* ] ] ]

| Parameter   | Parameter         | Description                            |
|-------------|-------------------|----------------------------------------|
| description | <i>ip-address</i> | Indicates the next-hop IP address.     |
|             | <i>weight</i>     | Indicates the weight of this next hop. |


**Default** None

**configuration****Command****mode** Route map configuration mode

This command supports two operation modes: WCMP load balancing mode and non-WCMP load balancing mode. In the former mode, the system implements WCMP load balancing according to the weight entered by the user.

Multiple IP addresses may follow set ip next-hop and the number of addresses should be less than 32.

---

 If weight follows any next-hop, the operation mode of this command will be automatically switched to the WCMP load balancing mode. In the WCMP load balancing mode, for the nexthop address without configuring the corresponding weight, the weight is 1 by default.

---

**Usage  
guideline**

If weight follows ip address, up to 4 next hop addresses can be configured.

This command can be used to set different routes for the traffic that meets different match rule. If multiple IP addresses are configured, they can be used in turn.

Policy-based routing is a packet forwarding mechanism more flexible than the routing based on the target network. After the policy-based routing is used, the device will decide how to process the packets that need be routed according to the route map, which decides the next-hop device of the packets.

To use the policy-based routing, you must specify the route map for it and create the route map. A route map contains multiple policies, and each policy defines one or more match rules and the corresponding operations. After policy-based routing is applied to an interface, the packets received by the interface will be checked. The packets that do not match any policy in the route map will be forwarded to the usual route. The packets that match a policy in the route map will be processed according to the operation defined in the policy.

A route-map policy may contain multiple set operations.

The following example enables policy-based routing on serial 1/0. When the interface receives the packets from 10.0.0.0/8, they will be sent to 192.168.100.1; when the interface receives the packets from 172.16.0.0/16, they will be sent to 172.16.100.1; all other packets will be discarded.

**Examples**

```
Ruijie(config)#interface serial 1/0
Ruijie(config-if)#ip policy route-map load-balance
Ruijie(config)#access-list 10 permit 10.0.0.0 0.255.255.255
Ruijie(config)#access-list 20 permit 172.16.0.0 0.0.255.255
Ruijie(config)#route-map load-balance permit 10
Ruijie(config-route-map)#match ip address 10
Ruijie(config-route-map)#set ip next-hop 192.168.100.1
Ruijie(config)#route-map load-balance permit 20
Ruijie(config-route-map)#match ip address 20
Ruijie(config-route-map)#set ip next-hop 172.16.100.1
Ruijie(config)#route-map load-balance permit 30
Ruijie(config-route-map)#set interface Null 0
```

| Related<br>commands | Command                        | Description                         |
|---------------------|--------------------------------|-------------------------------------|
|                     | <b>route-map</b>               | Define the route map.               |
|                     | <b>match ip address</b>        | Match the IP address.               |
|                     | <b>set default interface</b>   | Set the default outgoing interface. |
|                     | <b>set interface</b>           | Set the outgoing interface.         |
|                     | <b>set ip default next-hop</b> | Set the default next hop.           |
|                     | <b>set ip precedence</b>       | Set the priority of the packets.    |

## 10.43 set ip next-hop recursive

Use this command to specify the recursive next-hop IP address for data packets that match a rule.

**set ip next-hop recursive** *ip-address*

Use the **no** form of this command to delete the configured next-hop IP address.

**no set ip next-hop recursive**

| Parameter<br>Description | Parameter         | Description |
|--------------------------|-------------------|-------------|
|                          | <i>ip-address</i> |             |

**Defaults** N/A

**Command Mode** Routing map configuration mode

**Default Level** 14

**Usage Guide** This command is used only to configure PBR. Only one **set ip next-hop recursive** *ip-address* command can be configured in one routing submap policy. According to the policy, only static or dynamic routes that have an egress and next-hop IP address can be recursed. A route can be recursed to 32 next-hop IP addresses. Only one static route can be recursed to the next hop IP address.

**Examples** The following example enables PBR on Interface serial 1/0. The interface sends the data packets from the source IP address of 10.0.0.0/8 to the recursive next-hop IP address 192.168.100.1, sends the traffic from the source network 172.16.0.0/16 to the recursive next-hop IP address 172.16.100.1, and forwards other data traffic via common routes.

```
Ruijie(config)#interface serial 1/0
Ruijie(config-if)#ip policy route-map load-balance
Ruijie(config)#access-list 10 permit 10.0.0.0 0.255.255.255
Ruijie(config)#access-list 20 permit 172.16.0.0 0.0.255.255
Ruijie(config)#route-map load-balance permit 10
```

```
Ruijie(config-route-map)#match ip address 10
Ruijie(config-route-map)#set ip next-hop recursive 192.168.100.1
Ruijie(config)#route-map load-balance permit 20
Ruijie(config-route-map)#match ip address 20
Ruijie(config-route-map)#set ip next-hop recursive 172.16.100.1
```

## 10.44 set ip next-hop verify-availability

Use this command to verify the availability of the next hop IP address for the packets that meet the matching rule. Use the **no** form of this command to remove the setting. This command is only used to configure policy-based routing.

**set ip next-hop verify-availability** *ip-address* [**track** *track-obj-number* | **bfd** *interface-type interface-number gateway*]

**no set ip next-hop verify-availability** *ip-address* [**track** *track-obj-number* | **bfd** *interface-type interface-number gateway*]

### Parameter description

| Parameter               | Description                                                                                                                                                                                     |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>ip-address</i>       | Indicates the next-hop IP address.                                                                                                                                                              |
| <b>track</b>            | Judges whether the next hop is effective by using <i>Track</i> .                                                                                                                                |
| <i>track-object-num</i> | Indicates the track object number.                                                                                                                                                              |
| <b>bfd</b>              | Indicates that BFD is used for neighbor detection.                                                                                                                                              |
| <i>interface-type</i>   | Configures the interface type.                                                                                                                                                                  |
| <i>interface-number</i> | Configures the interface number.                                                                                                                                                                |
| <i>gateway</i>          | Configures the gateway IP address, which is the neighbor IP address of BFD. If the next hop is configured as the neighbor, BFD will be used to detect the accessibility of the forwarding path. |

**Default configuration** None

**Command mode** Route map configuration mode

**Usage guideline** None

**Examples** The following example verifies the availability of the next hop IP address being 192.168.1.2 and the number of the object to be tracked to 1.

```
Ruijie(config)#route-map rmap permit 10
Ruijie(config-route-map)#set ip next-hop verify-availability 192.168.1.2
```

```
track 1
```

Related commands

| Command                        | Description                         |
|--------------------------------|-------------------------------------|
| <b>route-map</b>               | Define the route map.               |
| <b>match ip address</b>        | Match the IP address.               |
| <b>set default interface</b>   | Set the default outgoing interface. |
| <b>set interface</b>           | Set the outgoing interface.         |
| <b>set ip default next-hop</b> | Set the default next hop.           |
| <b>set ip precedence</b>       | Set the priority of the packets.    |

## 10.45 set ip precedence

Use this command to set the precedence of the IP head of the packet matching the rule in the route map configuration mode. Use the **no** form of this command to remove the configured precedence setting.

**set ip precedence** {<0-7> | *critical* | *flash* | *flash-override* | *immediate* | *internet* | *network* | *priority* | *routine* }

**no set ip precedence**

Parameter Description

| Parameter                                                                                      | Description                                                                                                                                                                                           |
|------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>number</i>                                                                                  | Indicates the priority of the IP header with a number, ranging from 0 to 7.<br>7: critical<br>6: flash<br>5: flash-override<br>4: immediate<br>3: internet<br>2: network<br>1: priority<br>0: routine |
| <b>critical   flash   flash-override   immediate   internet   network   priority   routine</b> | Priority of an IP header.                                                                                                                                                                             |

Defaults N/A

Command mode Route map configuration mode

**Usage  
guideline**

With different precedence values for the IP packet head configured, the IP packets matching the PBR routing are sent according to the different precedence values.

Multiple set ip precedence commands can be executed in the route map configuration rule, but only the last one takes effect, and the precedence will be specified for the head of the IP packet matched the PBR.

The following example sets the precedence of the packet with the source IP address 192.168.217.68 received at the interface FastEthernet 0/0 as 4:

**Examples**

```
Ruijie(config)#access-list 1 permit 192.168.217.68 0.0.0.0
Ruijie(config)#route-map name
Ruijie(config-route-map)#match ip address 1
Ruijie(config-route-map)#set ip precedence 4
Ruijie(config)#interface FastEthernet 0/0
Ruijie(config-if)#ip policy route-map name
```

**Related  
commands**

| Command                      | Description                                   |
|------------------------------|-----------------------------------------------|
| <b>match interface</b>       | Match the next-hop interface.                 |
| <b>match ip address</b>      | Match the IP address in the ACL.              |
| <b>match ip next-hop</b>     | Match the next-hop IP address in the ACL.     |
| <b>match ip route-source</b> | Match the route source IP address in the ACL. |
| <b>match metric</b>          | Match the route metric value.                 |
| <b>match route-type</b>      | Match the route type.                         |
| <b>match tag</b>             | Match the route tag value.                    |
| <b>set metric-type</b>       | Set the type of redistributed route.          |
| <b>set tag</b>               | Set the tag value of redistributed route.     |
| <b>set ip tos</b>            | Set the tos for the IP packet head.           |

## 10.46 set ip tos

Use this command to set the tos of the IP head of the packet matching the rule in the route map configuration mode. Use the **no** form of this command to remove the configured tos setting.

**set ip tos** {<0-15> | *max-reliability* | *max-throughput* | *min-delay* | *min-monetary-cost* | *normal* }

**no set ip tos**

**Parameter  
Description**

| Parameter                                                               | Description                                                                  |
|-------------------------------------------------------------------------|------------------------------------------------------------------------------|
| <i>number</i>                                                           | Indicates the TOS value of an IP header with a number, ranging from 0 to 15. |
| <b>max-reliability</b>  <br><b>max-throughput</b>  <br><b>min-delay</b> | Priority of an IP header.                                                    |

|                                       |
|---------------------------------------|
| <b>min-monetary-cost  <br/>normal</b> |
|---------------------------------------|

**Defaults** N/A

**Command mode** Route map configuration mode

**Usage guideline** With different TOS values for the IP packet head configured, the IP packets matching the PBR routing are transmitted with different service qualities.  
The TOS value will be specified for the head of the IP packet matched the PBR.

The following example sets the TOS value of the packet with the source IP address 192.168.217.68 received at the interface FastEthernet 0/0 as 4:

**Examples**

```
Ruijie(config)#access-list 1 permit 192.168.217.68 0.0.0.0
Ruijie(config)#route-map name
Ruijie(config-route-map)#match ip address 1
Ruijie(config-route-map)#set ip tos 4
Ruijie(config)#interface FastEthernet 0/0
Ruijie(config-if)#ip policy route-map name
```

**Related commands**

| Command                      | Description                                   |
|------------------------------|-----------------------------------------------|
| <b>match interface</b>       | Match the next-hop interface.                 |
| <b>match ip address</b>      | Match the IP address in the ACL.              |
| <b>match ip next-hop</b>     | Match the next-hop IP address in the ACL.     |
| <b>match ip route-source</b> | Match the route source IP address in the ACL. |
| <b>match metric</b>          | Match the route metric value.                 |
| <b>match route-type</b>      | Match the route type.                         |
| <b>match tag</b>             | Match the route tag value.                    |
| <b>set metric-type</b>       | Set the type of redistributed route.          |
| <b>set tag</b>               | Set the tag value of redistributed route.     |
| <b>set ip precedence</b>     | Set the precedence for the IP packet head.    |

## 10.47 set ipv6 default next-hop

Use this command to specify the default next-hop IPv6 address for the IPv6 packets that match the rule in the route map configuration mode. Use the **no** form of this command to remove the setting. This command is only used to configure policy-based routing.

**set ipv6 default next-hop** *global-ipv6-address* [ *weight* ] [ *global-ipv6-address* [ *weight* ] ... ]

**no set ipv6 default next-hop** *global-ipv6-address* [ *weight* ] [ *global-ipv6-address* [ *weight* ] ... ]

**Parameter**

| Parameter | Description |
|-----------|-------------|
|-----------|-------------|

|                    |                            |                                                                                                                                                |
|--------------------|----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>description</b> | <b>vrf</b> <i>vrf-name</i> | The next hop address belongs to the specified VRF which must be the configured IPv6 address family multi-protocol VRF.                         |
|                    | <b>global</b>              | The next hop address belongs to the global.                                                                                                    |
|                    | <i>global-ipv6-address</i> | Indicates the next-hop IPv6 address for packet forwarding. The next-hop router must be a neighbor router.                                      |
|                    | <i>weight</i>              | Indicates the weight in the load balancing mode, ranging from 1 to 8. A larger value means larger packet traffic to be shared by the next hop. |

**Default****configuration** None**Command****mode** Route map configuration mode

With the policy-based routing applied to the interface, for the IPv6 packets matching the corresponding rules, if the usual route (that is the non default route) with the destination of this packet is not in the routing table, this packet will be forwarded to the next hop specified by the `set ipv6 default next-hop` command. Otherwise it is forwarded through the usual route. Noted that the match rule should be the IPv6 corresponded. If the **vrf** *vrf-name* parameter is specified, packets are forwarded across different VRF instances. If the **global** parameter is specified, packets are forwarded from the VRF instance to a public network. If [**vrf** *vrf-name* | **global**] is not specified, IPv6 packets are sent to the next hop of the VRF instance same as that of the current hop.

**Usage****guideline**

Packets select the egress from the policy-based routing and routing table in following priority:

```
set ipv6 next-hop;
usual route (the non default route)
set ipv6 default next-hop
default route.
```



For the switches, this function does not take effect if the mask length is beyond 64.

---

If this command and the `set ipv6 next-hop verify-availability` are both configured, the next hop set by the `set ipv6 next-hop verify-availability` command will take effect preferentially

---

**Examples**

The following example sets the default next hop of the packet with destination address `2001:0db8:2001:1760::/64` received at the interface `fastEthernet 0/0` as `2002:0db8:2003:1::95`

```
Ruijie(config)# ipv6 access-list acl_for_pbr
Ruijie(config-ipv6-acl)#permit ipv6 any 2001:0db8:2001:1760::/64
Ruijie(config)#route-map rm_if_0_0
```



```
Ruijie(config-route-map)#match ipv6 address acl_for_pbr
Ruijie(config-route-map)# set ipv6 default next-hop
2002:0db8:2003:1::95
Ruijie(config)#interface FastEthernet 0/0
Ruijie(config-if)#ipv6 policy route-map rm_if_0_0
```

|                  | Command                      | Description                                    |
|------------------|------------------------------|------------------------------------------------|
| Related commands | <b>match ipv6 address</b>    | Set the matching rule of policy-based routing. |
|                  | <b>ipv6 policy route-map</b> | Use the policy-based routing on the interface. |
|                  | <b>set ipv6 next-hop</b>     | Set the next hop of the policy-based routing.  |

**Platform description** N/A

## 10.48 set ipv6 next-hop

Use this command to specify the next-hop IPv6 address for the packets that meet the matching rule. Use the **no** form of this command to remove the setting. This command is only used to configure policy-based routing.

**set ipv6 next-hop** *global-ipv6-address* [weight] [...*global-ipv6-address* [weight]]

**no set ip next-hop** *global-ipv6-address* [weight] [...*global-ipv6-address* [weight]]

|                       | Parameter                  | Description                                                                      |
|-----------------------|----------------------------|----------------------------------------------------------------------------------|
| Parameter description | <i>global-ipv6-address</i> | IPv6 address of the next hop. The next hop router should be the neighbor router. |
|                       | <i>weight</i>              | Weight of the next hop in the load balancing mode, in the range of 1 to 8.       |


**Default configuration** None

**Command mode** Route map configuration mode

This command supports two operation modes: WCMP load balancing mode and non-WCMP load balancing mode. In the former mode, the system implements WCMP load balancing according to the weight entered by the user.

Multiple IP addresses may follow set ip next-hop and the number of addresses should be less than 32.

**Usage guideline** If weight follows ip address, up to 4 next hop addresses can be configured. If the parameter *vrf vrf-name* is specified, packets forwarding will be across the VRF. The packets will be forwarded from VRF to public network with the parameter *global* specified. If no [*vrf vrf-name* | *global*] is specified, forwarding the IPv6 packets will inherit the VRF, that is the nexthop belongs to the VRF that receives this IPv6 packets.

 If weight follows any next-hop, the operation mode of this command will be automatically switched to the WCMP load balancing mode. In the WCMP load balancing mode, for the nexthop address without configuring the corresponding weight, the weight is 1 by default.

When the packets select the egress from the policy-based routing and routing table, the priorities are as bellows.

- set ipv6 next-hop;
- usual route (the non default route)
- set ipv6 default next-hop
- Default route.

The following examle sets the next hop of the packet with destination address *2001:0db8:2001:1760::/64* received at the interface *fastEthernet 0/0* as *2002:0db8:2003:1::95*

**Examples**

```
Ruijie(config)# ipv6 access-list acl_for_pbr
Ruijie(config-ipv6-acl)#permit ipv6 any 2001:0db8:2001:1760::/64
Ruijie(config)#route-map rm_if_0_0
Ruijie(config-route-map)#match ipv6 address acl_for_pbr
Ruijie(config-route-map)# set ipv6 next-hop
2002:0db8:2003:1::95
Ruijie(config)#interface FastEthernet 0/0
Ruijie(config-if)#ipv6 policy route-map rm_if_0_0
```

**Related commands**

| Command                      | Description                                    |
|------------------------------|------------------------------------------------|
| <b>match ipv6 address</b>    | Set the matching rule of policy-based routing. |
| <b>ipv6 policy route-map</b> | Use the policy-based routing on the interface. |
| <b>set ipv6 next-hop</b>     | Set the next hop of the policy-based routing.  |

**Platform description**

N/A

### 10.49 set ipv6 next-hop verify-availability

Use this command to determine the availability of the next-hop IP address.

**set ipv6 next-hop verify-availability** *global-ipv6-address* [**track** *track-obj-number* | **bfd** *interface-type interface-number gateway*]

Use the **no** form of this command to delete existing configuration.

**no set ip next-hop verify-availability** *global-ipv6-address* [**track** *track-obj-number* | **bfd** *interface-type interface-number gateway*]

**Parameter**

| Parameter | Description |
|-----------|-------------|
|-----------|-------------|

| Description                |                                                                                                                                                                                                |
|----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>global-ipv6-address</i> | Specifies the next-hop IPv6 address.                                                                                                                                                           |
| <b>track</b>               | Detects whether the next hop is effective by using the tracking method.                                                                                                                        |
| <i>track-obj-number</i>    | Specifies the tracking object number.                                                                                                                                                          |
| <b>bfd</b>                 | Conducts neighbor detection by using BFD.                                                                                                                                                      |
| <i>interface-type</i>      | Specifies the interface type.                                                                                                                                                                  |
| <i>interface-number</i>    | Specifies the interface number.                                                                                                                                                                |
| <i>gateway</i>             | Specifies the gateway IPv6 address, that is, IPv6 address of the BFD neighbor. If the configured next hop is the neighbor, the availability of the forwarding path will be detected using BFD. |

**Defaults** N/A

**Command Mode** Routing map configuration mode

**Default Level** 14

**Usage Guide** This command is used only to configure PBR.

**Examples** The following example enables the PBR support for BFD and detects the forwarding path to the neighbor 2001:1::2 via BFD.

```
Ruijie(config)# route-map rmap permit 10
Ruijie(config-route-map)# set ipv6 next-hop verify-availability 2001:1::2 bfd
FastEthernet 0/1 2001:1::2
```

## 10.50 set ipv6 precedence

Use this command to set the precedence of the IPv6 head of the packet matching the rule in the route map configuration mode. Use the **no** form of this command to remove the configured precedence setting.

**set ipv6 precedence** {number | *critical* | *flash* | *flash-override* | *immediate* | *internet* | *network* | *priority* | *routine* }

**no set ipv6 precedence**

| Parameter description | Parameter                                                                                                                                       | Description                           |
|-----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------|
|                       | <i>critical</i> , <i>flash</i> , <i>flash-override</i> , <i>immediate</i> , <i>internet</i> , <i>network</i> , <i>priority</i> , <i>routine</i> | The precedence type of the IPv6 head. |
|                       | number                                                                                                                                          | The configurable precedence range.    |

**Default configuration** N/A

**Command**

**mode** Route map configuration mode

**Usage****guideline**

The following example sets the precedence of IPv6 packet head as 3:

Configure route-map.

**Examples**

```
Ruijie(config)#route-map pbr-aaa permit 10
```

```
Ruijie(config-route-map)# set ipv6 precedence 3
```

Or

```
Ruijie(config-route-map)# set ipv6 precedence immediate
```

**Related commands**

| Command                          | Description                                                 |
|----------------------------------|-------------------------------------------------------------|
| <b>match ipv6 address</b>        | Configure the ACL used for matching the packet in IPv6 PBR. |
| <b>route-map</b>                 | Use the route map of the policy-based routing.              |
| <b>set default interface</b>     | Set the default next-hop egress.                            |
| <b>set interface</b>             | Set the next hop egress.                                    |
| <b>set ipv6 default next-hop</b> | Set the default next-hop address for forwarding packets.    |
| <b>set ipv6 next-hop</b>         | Set the next-hop address for forwarding packet.             |
| <b>show ipv6 policy</b>          | Show the policy-based routing                               |
| <b>show route-map</b>            | Show the route map configuration.                           |

**Platform**

**description** N/A

## 10.51 set level

Use this command to set the level of the area where the routes matching the rule are redistributed in the route map configuration command. Use the **no** form of this command to remove the setting.

**set level {level-1 | level-2 | level-1-2 | stub-area | backbone}**

**no set level**

**Parameter Description**

| Parameter        | Description                                                                         |
|------------------|-------------------------------------------------------------------------------------|
| <b>level-1</b>   | Indicates that the re-distribution route is advertised to ISIS Level 1.             |
| <b>level-2</b>   | Indicates that the re-distribution route is advertised to ISIS Level 2.             |
| <b>level-1-2</b> | Indicates that the re-distribution route is advertised to ISIS Level 1 and Level 2. |
| <b>stub-area</b> | Indicates that the re-distribution route is advertised to OSPF Stub Area.           |
| <b>backbone</b>  | Indicates that the re-distribution route is advertised to the OSPF backbone         |

|  |       |
|--|-------|
|  | area. |
|--|-------|

**Default configuration** None

**Command mode** Route map configuration mode

In the example below, the OSPF routing protocol redistributes the RIP protocol to the backbone area.

**Examples**

```
Ruijie(config)# router ospf
Ruijie(config-router)# redistribute rip subnets route-map redrip
Ruijie(config-router)# network 192.168.12.0 0.0.0.255 area 0
Ruijie(config-router)# exit
Ruijie(config)# route-map redrip permit 10
Ruijie(config-route-map)# set level backbone
```

**Related commands**

| Command                      | Description                    |
|------------------------------|--------------------------------|
| <b>match interface</b>       | Match the interface.           |
| <b>match ip address</b>      | Match the IP address.          |
| <b>match ip next-hop</b>     | Match the next-hop IP address. |
| <b>match ip route-source</b> | Match the source IP address.   |
| <b>match metric</b>          | Match the metric.              |
| <b>match route-type</b>      | Match the route type.          |
| <b>match tag</b>             | Match the tag.                 |
| <b>set metric-type</b>       | Set the metric type.           |
| <b>set tag</b>               | Set the tag.                   |

## 10.52 set local-preference

Use this command to set the **LOCAL\_PREFERENCE** value for the routes to be redistributed in the route map configuration mode. Use the **no** form of this command to remove the setting.

**set local-preference** *number*  
**no set local-preference**

**Parameter description**

| Parameter     | Description                                   |
|---------------|-----------------------------------------------|
| <i>number</i> | Local priority metric ranging 1 to 4294967295 |

**Default configuration** None

**Command**

**mode** Route map configuration mode

**Usage guideline** Use this command to set the local preference for the matched routes. Only one local preference can be set.

**Examples**

```
Ruijie(config)# route-map SET_PREF permit 10
Ruijie(config-route-map)# match as-path 1
Ruijie(config-route-map)# set local-preference 6800
Ruijie(config-route-map)# exit
Ruijie(config)# route-map SET_PREF permit 20
Ruijie(config-route-map)# match as-path 2
Ruijie(config-route-map)# set local-preference 50
```

**Related commands**

| Command                    | Description                  |
|----------------------------|------------------------------|
| <b>match as-path</b>       | Match the AS_PATH attribute. |
| <b>match metric</b>        | Match the route metric.      |
| <b>match origin</b>        | Match the source.            |
| <b>set as-path prepend</b> | Set the AS_PATH attribute.   |
| <b>set metric</b>          | Set the metric.              |
| <b>set metric-type</b>     | Set the metric type.         |

## 10.53 set metric

Use **set metric** to set the metric for the routes to be redistributed. Use the **no** form of this command to remove the setting.

**set metric** [**+** *metric-value* | **-** *metric-value* | *metric-value*]

**no set metric**

**Parameter description**

| Parameter           | Description                                        |
|---------------------|----------------------------------------------------|
| <b>+</b>            | Increase based on the metric of the original route |
| <b>-</b>            | Decrease based on the metric of the original route |
| <i>metric-value</i> | Metric for the route to be redistributed           |

**Default**

**configuration** The default metric for route redistribution varies with the routing protocol.

**Command**

**mode** Route map configuration mode

You should set the metric according to the actual network topology, because the routing depends on the metric of routes. Attentions should be paid to the upper and lower limits of the routing protocols when you execute the `set metric`, `+ metric` or `- metric` commands. When the RIP protocol redistributes the routes of other protocols, the range of the metric after increase or decrease is 1 to 16.

You can redistribute the routes from one routing process to another routing process. For example, you can redistribute the route in the OSPF routing domain and then advertise it to the RIP routing domain, and vice versa. The mutual route redistribution can be implemented between all the IP routing protocols.

For route redistribution, route maps are usually used to control the mutual route redistribution between two routing domains.

One or more match or set commands can be executed to configure a route map. If the match command is not used, all the routes will be matched. If the set command is not used, no operation will be performed.

The following example enables the OSPF routing protocol to redistribute the RIP routes and sets the default metric to 40.

```
Ruijie(config)# router ospf
Ruijie(config-router)# redistribute rip subnets route-map redrip
Ruijie(config-router)# network 192.168.12.0 0.0.0.255 area 0
Ruijie(config-router)# exit
Ruijie(config)# route-map redrip permit 10
Ruijie(config-route-map)# set metric 40
```

### Usage guideline

### Examples

### Related commands

| Command                            | Description                    |
|------------------------------------|--------------------------------|
| <code>match interface</code>       | Match the interface.           |
| <code>match ip address</code>      | Match the IP address.          |
| <code>match ip next-hop</code>     | Match the next-hop IP address. |
| <code>match ip route-source</code> | Match the source IP address.   |
| <code>match metric</code>          | Match the metric.              |
| <code>match route-type</code>      | Match the route type.          |
| <code>match tag</code>             | Match the tag.                 |
| <code>set metric-type</code>       | Set the metric type.           |
| <code>set tag</code>               | Set the tag.                   |

## 10.54 set metric-type

Use `set metric-type` to set the type of the routes to be redistributed. Use the `no` form of this command to remove the setting.

`set metric-type type`

`no set metric-type`

| Parameter                                   | Description                                                                                                                  |
|---------------------------------------------|------------------------------------------------------------------------------------------------------------------------------|
| <b>Parameter description</b><br><i>type</i> | Type of the routes to be redistributed. At present, you can set the type of the routes that the OSPF protocol redistributes. |

**Default configuration****Command**

**mode** Route map configuration mode

You can redistribute the routing information from one routing process to another routing process. For example, you can redistribute the route in the OSPF routing domain and then advertise it to the RIP routing domain, and vice versa. The mutual route redistribution can be implemented between all the IP routing protocols.

**Usage guideline**

In the route redistribution, route maps are usually used to control the mutual route redistribution between two routing domains.

In configuring one route map, one or more match or set commands can be executed. If the match command is not used, all the routes will be matched. If the set command is not used, no operation will be performed.

The following example enables the OSPF routing protocol to redistribute the RIP route and sets the type as type-1.

**Examples**

```
Ruijie(config)# router ospf
Ruijie(config-router)# redistribute rip subnets route-map redrip
Ruijie(config-router)# network 192.168.12.0 0.0.0.255 area 0
Ruijie(config-router)# exit
Ruijie(config)# route-map redrip permit 10
Ruijie(config-route-map)# set metric-type type-1
```

**Related commands**

| Command                      | Description                    |
|------------------------------|--------------------------------|
| <b>match interface</b>       | Match the interface.           |
| <b>match ip address</b>      | Match the IP address.          |
| <b>match ip next-hop</b>     | Match the next-hop IP address. |
| <b>match ip route-source</b> | Match the source IP address.   |
| <b>match metric</b>          | Match the metric.              |
| <b>match route-type</b>      | Match the route type.          |
| <b>match tag</b>             | Match the tag.                 |
| <b>set metric</b>            | Set the metric.                |
| <b>set tag</b>               | Set the tag.                   |



## 10.55 set next-hop

Use this command to specify the next-hop IP address for the routes that match the rule. Use the **no** form of this command to remove the setting. This command is only used to configure routing policies.

**set next-hop** *ip-address*

**no set next-hop**

| Parameter   | Parameter         | Description                 |
|-------------|-------------------|-----------------------------|
| description | <i>ip-address</i> | IP address of the next hop. |

**Default configuration** None

**Command mode** Route map configuration mode

You can redistribute the routing information from one routing process to another routing process. For example, you can redistribute the route in the OSPF routing domain and then advertise it to the RIP routing domain, and vice versa. The mutual route redistribution can be implemented between all the IP routing protocols.

**Usage guideline**

In the route redistribution, route maps are usually used to control the mutual route redistribution between two routing domains.

In configuring one route map, one or more match or set commands can be executed. If the match command is not used, all the routes will be matched. If the set command is not used, no operation will be performed.

The following example enables the OSPF routing protocol to redistribute the RIP route and sets the next-hop to 192.168.1.2.

**Examples**

```
Ruijie(config)# route-map redrip permit 10
Ruijie(config-route-map)# match ip address 1
Ruijie(config-route-map)# set next-hop 192.168.1.2
```

| Command                      | Description                    |
|------------------------------|--------------------------------|
| <b>match interface</b>       | Match the interface.           |
| <b>match ip address</b>      | Match the IP address.          |
| <b>match ip next-hop</b>     | Match the next-hop IP address. |
| <b>match ip route-source</b> | Match the source IP address.   |
| <b>match metric</b>          | Match the metric.              |
| <b>match route-type</b>      | Match the route type.          |
| <b>match tag</b>             | Match the tag.                 |
| <b>set metric-type</b>       | Set the metric type.           |
| <b>set tag</b>               | Set the tag.                   |

**Related commands**

## 10.56 set origin

Use this command to set the source of the routes to be redistributed in the route map configuration mode. Use the **no** form of this command to remove the setting.

**set origin {egp | igp | incomplete}**

**no set origin**

| Parameter  | Description                                     |
|------------|-------------------------------------------------|
| egp        | Redistribute the routes from the remote EGP.    |
| igp        | Redistribute the routes from the local IGP.     |
| incomplete | Redistribute the routes from an unknown device. |

**Default configuration** None

**Command mode** Route map configuration mode

**Usage guideline** Use this command to set the source of the routes to be matched. Only one route source attribute can be set.

### Examples

```
Ruijie(config)# route-map SET_ORIGIN 10 permit
Ruijie(config-route-map)# match as-path 1
Ruijie(config-route-map)# set origin igp
Ruijie(config-route-map)# exit
Ruijie(config)# route-map SET_ORIGIN 20 permit
Ruijie(config-route-map)# match as-path 2
Ruijie(config-route-map)# set origin egp
```

### Related commands

| Command                     | Description                                     |
|-----------------------------|-------------------------------------------------|
| <b>match as-path</b>        | Match the AS_PATH attribute.                    |
| <b>match metric</b>         | Match the route metric.                         |
| <b>match origin</b>         | Match the source.                               |
| <b>set as-path prepend</b>  | Set the AS_PATH attribute.                      |
| <b>set metric</b>           | Set the metric.                                 |
| <b>set local-preference</b> | Set the local priority of redistributed routes. |

## 10.57 set originator-id

Use this command to set the source of the routes to be redistributed in the route map configuration mode. Use the **no** form of this command to remove the setting.

**set originator-id ip-address**

**no set originator-id** [*ip-address*]

| Parameter description | Parameter         | Description                   |
|-----------------------|-------------------|-------------------------------|
|                       | <i>ip-address</i> | IP address of the originator. |

**Default configuration** None

**Command mode** Route map configuration mode

**Usage guideline** Use this command to set the source of the routes to be matched.

**Examples**

```
Ruijie(config)# route-map SET_ORIGIN 10 permit
Ruijie(config-route-map)# match as-path 1
Ruijie(config-route-map)# set originator-id 5.5.5.5
Ruijie(config-route-map)# exit
Ruijie(config)# route-map SET_ORIGIN 20 permit
Ruijie(config-route-map)# match as-path 2
Ruijie(config-route-map)# set originator-id 5.5.5.6
```

**Related commands**

| Command                     | Description                                     |
|-----------------------------|-------------------------------------------------|
| <b>match as-path</b>        | Match the AS_PATH attribute.                    |
| <b>match metric</b>         | Match the route metric.                         |
| <b>match origin</b>         | Match the source.                               |
| <b>set as-path prepend</b>  | Set the AS_PATH attribute.                      |
| <b>set metric</b>           | Set the metric.                                 |
| <b>set local-preference</b> | Set the local priority of redistributed routes. |

## 10.58 set tag

Use this command to set the tag for the routes to be redistributed. Use the **no** form of this command to remove the setting.

**set tag** *tag*

**no set tag**

| Parameter description | Parameter  | Description                          |
|-----------------------|------------|--------------------------------------|
|                       | <i>tag</i> | Tag of the route to be redistributed |

**Default configuration** The original routing tag remains unchanged.

**Command****mode** Route map configuration mode**Usage guideline** This command can only be used for route redistribution. If this command is not configured, the default route tag is used.

The following example enables the OSPF routing protocol to redistribute the RIP route and sets the tag as 100.

**Examples**

```
Ruijie(config)# router ospf
Ruijie(config-router)# redistribute rip subnets route-map redrip
Ruijie(config-router)# network 192.168.12.0 0.0.0.255 area 0
Ruijie(config-router)# exit
Ruijie(config)# route-map redrip permit 10
Ruijie(config-route-map)# set tag 100
```

**Related commands**

| Command                      | Description                    |
|------------------------------|--------------------------------|
| <b>match interface</b>       | Match the interface.           |
| <b>match ip address</b>      | Match the IP address.          |
| <b>match ip next-hop</b>     | Match the next-hop IP address. |
| <b>match ip route-source</b> | Match the source IP address.   |
| <b>match metric</b>          | Match the metric.              |
| <b>match route-type</b>      | Match the route type.          |
| <b>match tag</b>             | Match the tag.                 |
| <b>set metric</b>            | Set the metric.                |
| <b>set metric-type</b>       | Set the metric type.           |

## 10.59 set weight

Use this command to set the weight for the BGP routes matching filtering rules. Use the **no** form of this command to remove the setting.

**set weight** *number***no set weight****Parameter description**

| Parameter     | Description                       |
|---------------|-----------------------------------|
| <i>number</i> | Weight in the range of 0 to 65535 |

**Default****configuration** None**Command** Route map configuration mode

**mode****Usage  
guideline**

This command can only be used modify the weight of a BGP route.

By default, the weight of the route learned from a neighbor is the one configured with the neighbor weight command. The weight of the locally generated route is fixed 32768.

The following example sets the weight for the BGP route learned from the neighbor 1.1.1.1 at the inbound direction to 100.

**Examples**

```
Ruijie(config)# router bgp 1
Ruijie(config-router)# neighbor 1.1.1.1 route-map nei-rmap-in in
Ruijie(config-router)# exit
Ruijie(config)# route-map nei-rmap-in permit 10
Ruijie(config-route-map)# set weight 100
```

**Related  
commands**

| Command                | Description                                     |
|------------------------|-------------------------------------------------|
| <b>match as-path</b>   | Match the AS_PATH attribute.                    |
| <b>match community</b> | Match the route community.                      |
| <b>match metric</b>    | Match the route metric.                         |
| <b>match origin</b>    | Match the source.                               |
| <b>set community</b>   | Set community of the redistributed route.       |
| <b>set metric</b>      | Set the metric of the redistributed route.      |
| <b>set metric type</b> | Set the metric type of the redistributed route. |

## 10.60 show ip as-path-access-list

Use this command to display the configuration of AS path access lists.

**show ip as-path-access-list [ num ]**

**Parameter  
description**

| Parameter  | Description                 |
|------------|-----------------------------|
| <i>num</i> | AS path access list number. |

**Default**

N/A

**Command  
mode**

Privileged EXEC mode

**Usage  
guideline**

N/A

**Examples**

The following example displays the AS path access lists.

```
Ruijie# show ip as-path-access-list
```

```
AS path access list 30
permit ^30$
```

| Field               | Description                                         |
|---------------------|-----------------------------------------------------|
| AS path access list | AS path access list number                          |
| permit              | Permits advertisement based on matching conditions. |
| ^30\$               | Regular expression.                                 |

| Related command | Command | Description |
|-----------------|---------|-------------|
|                 | -       | -           |

Platform description -

### 10.61 show ip community-list

Use **show ip community-list** command to display the community list.

**show ip community-list** [*community-list-number* | *community-list-name*]

| Parameter description | Parameter                    | Description                   |
|-----------------------|------------------------------|-------------------------------|
|                       | <i>community-list-number</i> | Number of the community list. |
|                       | <i>community-list-name</i>   | Name of the community list.   |

Default configuration None

Command mode Privileged EXEC mode

Usage guidelines N/A

**Examples**

```
Ruijie# show ip community-list
Community-list standard local
permit local-AS
Community-list standard Red-Giant
permit 0:10
deny 0:20
```

| Related commands | Command              | Description                                       |
|------------------|----------------------|---------------------------------------------------|
|                  | match community      | Match the route community.                        |
|                  | set comm-list delete | Delete the community attribute in the BGP routes. |

## 10.62 show ip extcommunity-list

Use this command to display the extcommunity list.

**show ip extcommunity-list** [ *extcommunity-list-num* | *extcommunity-list-name* ]

| Parameter   | Parameter                     | Description                                      |
|-------------|-------------------------------|--------------------------------------------------|
| description | <i>extcommunity-list-num</i>  | extcommunity-list number, ranging from 1 to 199. |
|             | <i>extcommunity-list-name</i> | extcommunity-list name.                          |

**Default** -

**Command mode** Privileged EXEC mode, global configuration mode, interface configuration mode, routing protocol configuration mode and route map configuration mode.

**Usage guideline** -

**Examples**

```
Ruijie # show ip extcommunity-list
Standard extended community-list 1
 10 permit RT:1:200
 20 permit RT:1:100
Standard extended community-list 2
 10 permit RT:1:200
Expanded extended community-list rt_filter
 13 permit 1:100
```

| Related command | Command                     | Description                  |
|-----------------|-----------------------------|------------------------------|
|                 | <b>ip extcommunity-list</b> | Create an extcommunity-list. |
|                 | <b>match extcommunity</b>   | Match an extcommunity.       |
|                 | <b>set extcommunity</b>     | Set an extcommunity.         |

**Platform description** -

## 10.63 show ip prefix-list

Use **show ip prefix-list** to display the prefix list or the entries.

**show ip prefix-list** [*prefix-name*]

| Parameter   | Parameter          | Description              |
|-------------|--------------------|--------------------------|
| description | <i>prefix-name</i> | Name of the prefix list. |

**Default**

**configuration** The configuration information of all the prefix lists is displayed by default.

**Command mode**

Privileged EXEC mode, global configuration mode, interface configuration mode, routing protocol configuration mode, route map configuration mode.

**Usage guidelines**

If no prefix list is specified, the configurations of all the prefix lists are displayed, otherwise only the configuration of the specified prefix list is displayed.

**Examples**

```
Ruijie# show ip prefix-list
seq pre: 2 entries
seq 5 permit 192.168.564.0/24
seq 10 permit 192.2.2.0/24
```

## 10.64 show ip protocols

Use this command to display information about the status of the currently running IPv4 routing protocol.

**show ip protocols** [ *vrf vrf-name* ] { **bgp** | **isis** | **ospf** | **rip** }

**Parameter Description**

| Parameter       | Description                                                                                                                                 |
|-----------------|---------------------------------------------------------------------------------------------------------------------------------------------|
| <i>vrf-name</i> | Specifies the VRF instance name. If it is not specified, information about the status of routing protocols in global VRF mode is displayed. |
| <b>bgp</b>      | Displays information about the status of the BGP protocol.                                                                                  |
| <b>isis</b>     | Displays information about the status of the IS-IS protocol.                                                                                |
| <b>ospf</b>     | Displays information about the status of the OSPF protocol.                                                                                 |
| <b>rip</b>      | Displays information about the status of the RIP protocol.                                                                                  |
| -               | Displays information about the status of all running routing protocols.                                                                     |

**Command Mode**

Privileged EXEC mode, global configuration mode, interface configuration mode, routing protocol configuration mode, and routing map configuration mode

**Default Level** 14

**Usage Guide**

Information about the status of only the currently running routing protocol is displayed, and the information about a routing protocol that is not running is not displayed.

**Examples**

The following example displays the status of routing protocols running in global VRF mode.

```
Ruijie# show ip protocols
Routing Protocol is "ospf 1"
  Outgoing update filter list for all interfaces is not set
  Incoming update filter list for all interfaces is not set
```



```

Router ID 57.57.57.57
Memory Overflow is enabled
Router is not in overflow state now
It is an autonomous system boundary router
Redistributing External Routes from,
    connected, includes subnets in redistribution
    bgp, includes subnets in redistribution
Number of areas in this router is 2: 2 normal 0 stub 0 nssa
Routing for Networks:
    57.57.57.57 0.0.0.0 area 0
    163.18.4.0 0.0.0.255 area 0
    163.18.57.0 0.0.0.255 area 0
    192.100.1.0 0.0.0.255 area 0
    192.101.1.0 0.0.0.255 area 1
    192.102.1.0 0.0.0.255 area 0
Reference bandwidth unit is 100 mbps
Distance: (default is 110)

Routing Protocol is "ospf 1"
  IGP synchronization is disabled
  Default-information originate is disabled
  Default local-preference applied to incoming route is 100
  Redistributing: connected
  Neighbor(s):
    Address          AddressFamily  FiltIn  FiltOut  DistIn  DistOut  RouteMapIn
RouteMapOut  Weight
    Distance: external 20(default) internal 200(default) local 200(default)
    
```

Field description:

| Field                               | Description                                       |
|-------------------------------------|---------------------------------------------------|
| Routing Protocol is "ospf 1"        | Name of a routing protocol                        |
| Redistributing External Routes from | Route redistribution status of a routing protocol |
| Distance:                           | Distance information of a routing protocol        |

## 10.65 show ipv6 prefix-list

Use this command to display the information about the IPv6 prefix list or its entries.

**show ipv6 prefix-list** [*prefix-name*]

| Parameter description | Parameter          | Description                   |
|-----------------------|--------------------|-------------------------------|
|                       | <i>prefix-name</i> | Name of the IPv6 prefix list. |

**Default**

**configuration** The configuration information of all the IPv6 prefix lists is displayed.

**Command mode**

Privileged EXEC mode, global configuration mode, interface configuration mode, route protocol configuration mode, route map configuration mode

**Usage guideline**

If no prefix list is specified, the configurations of all the prefix lists are displayed, otherwise only the configuration of the specified prefix list is displayed.

**Examples**

```
Ruijie# show ipv6 prefix-list
ipv6 prefix-list p6: 2 entries
    seq 5 permit 13::/20
    seq 10 permit 14::/20
```

## 10.66 show key chain

Use this command to display the key chain configuration.

**show key chain** [*key-chain-name*]

**Parameter description**

| Parameter             | Description                                                      |
|-----------------------|------------------------------------------------------------------|
| <i>key-chain-name</i> | (Optional) Display the configuration of the specified key chain. |

**Default**

The configuration information of all key chains is displayed.

**Command mode**

Privileged EXEC mode, global configuration mode, interface configuration mode, routing protocol configuration mode, and key chain configuration mode.

**Usage guideline**

If no key chain is specified, the configuration information of all key chains is displayed.

**Examples**

```
Ruijie# show key chain
route-map AAA, permit, sequence 10
Match clauses:
ip address 2
Set clauses:
metric 10
Ruijie(config)#show key chain
key chain kc
    key 1 -- text "ruijie"
        accept-lifetime (12:11:00 May 2 2001) - (infinite)
        send-lifetime (always valid) - (always valid) [valid now]
```

| Field           | Description                       |
|-----------------|-----------------------------------|
| key chain       | Key chain name.                   |
| key             | Key ID.                           |
| accept-lifetime | Lifetime in the accept direction. |
| send-lifetime   | Lifetime in the send direction.   |

| Related command | Command | Description |
|-----------------|---------|-------------|
|                 | -       | -           |

**Platform description** -

## 10.67 show route-map

Use the command to display the configuration of the route map.

**show route-map** [*route-map-name*]

| Parameter description | Parameter             | Description                                                                      |
|-----------------------|-----------------------|----------------------------------------------------------------------------------|
|                       | <i>route-map-name</i> | (Optional) Display the configuration information of the specified the route map. |

**Default configuration** The configuration information of all the route maps is displayed.

**Command mode** Privileged EXEC mode, global configuration mode, interface configuration mode, routing protocol configuration mode, route map configuration mode.

**Usage guidelines** If no route map is specified, the configurations of all the route maps will be displayed, otherwise only the configuration of the specified route map is displayed.

**Examples**

```
Ruijie# show route-map
route-map AAA, permit, sequence 10
Match clauses:
ip address 2
Set clauses:
metric 10
```

| Field     | Description                                |
|-----------|--------------------------------------------|
| route-map | Name of the route map.                     |
| Permit    | The route map contains the permit keyword. |

---

|               |                                                                                                                     |
|---------------|---------------------------------------------------------------------------------------------------------------------|
| sequence 10   | Sequence number of the route map.                                                                                   |
| Match clauses | Set the matching rule. Whether to perform the set operation depends on the permit or deny keyword in the route map. |
| Set clauses   | Set the operation when the rule is matched.                                                                         |



## Multicast Commands

---

1. IPv4 Multicast Routing Commands
2. IPv6 Multicast Routing Commands
3. IGMP Commands
4. MLD Commands
5. PIM-DM Commands
6. PIM-SM Commands
7. PIM-SMv6 Commands
8. IGMP Snooping Commands
9. MLD Snooping Commands
10. MSDP Commands

# 1 IPv4 Multicast Routing Configuration Commands

## 1.1 clear ip mroute

Use this command to remove the forwarding information of the IP multicast routes.

**clear ip mroute** { \* | *group-address* [*source -address*] }

| Parameter             | Description                                                            |
|-----------------------|------------------------------------------------------------------------|
| *                     | Remove all the forwarding information in the IP multicast route table. |
| <i>group-address</i>  | Group IP address of IP multicast routes.                               |
| <i>source-address</i> | Source IP address of multicast routess.                                |

**Command Mode** Privileged EXEC mode.

**Examples** The following example removes the entry whose group IP address is 230.0.0.1 from the multicast routing table:

```
Ruijie# clear ip mroute 230.0.0.1
```

| Command        | Description                                          |
|----------------|------------------------------------------------------|
| show ip mroute | Show the forwarding information of multicast routes. |

## 1.2 clear ip mroute statistics

Use this command to remove the statistics of IP multicast routes.

**clear ip mroute statistics** { \* | *group-address* [*source -address*] }

| Parameter             | Description                                                     |
|-----------------------|-----------------------------------------------------------------|
| *                     | Remove all the forwarding entries in the multicast route table. |
| <i>group-address</i>  | Group IP address of IP multicast routes                         |
| <i>source-address</i> | Source IP address of multicast route.                           |

**Command Mode** Privileged EXEC mode.

**Usage Guide**

**Examples**

The following example clears the statistics of entry with the group IP address 230.0.0.1 from the multicast routing table.

```
Ruijie# clear ip mroute statistics 230.0.0.1
```

**Related Commands**

| Command         | Description                                       |
|-----------------|---------------------------------------------------|
| show ip mroute  | Show the multicast route forwarding information.  |
| clear ip mroute | Clear the multicast route forwarding information. |

## 1.3 ip mroute

Use this command to configure static multicast routes. Use the **no** or **default** form of this command to delete the configured routes.

**ip mroute** *source-address mask* { [*protocol*] { [*rpf-address*] | *interface-type interface-number* } } [*distance*]

**no ip mroute** *source-address mask* [*protocol*]

**default ip mroute** *source-address mask* [ *protocol* ]

**Parameter Description**

| Parameter                                        | Description                                                                                                                    |
|--------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------|
| <i>source-address</i>                            | Source IP address of the multicast route                                                                                       |
| <i>mask</i>                                      | Mask of the source IP address                                                                                                  |
| <i>protocol</i>                                  | (Optional) The unicast routing protocol being used.                                                                            |
| <i>rpf-address</i>                               | Incoming interface of the multicast route                                                                                      |
| <i>interface-type</i><br><i>interface-number</i> | Interface type and interface ID.                                                                                               |
| <i>distance</i>                                  | Management distance used to determine whether to use the route for RPF routing, ranging from 1 to 255. The default value is 0. |

**Default**

*distance*: 0.

**Command Mode**

Global configuration mode.

**Usage Guide**

This command is used to configure the route for the purpose of RFF check. Note that the configured route is prior to the route learned in the unicast form.

**Examples**

The following example allows the multicast routes of all the sources in a network to pass 172.30.10.13:

```
Ruijie(config)# ip mroute 172.16.0.0 255.255.0.0
172.30.10.13
```

## 1.4 ip multicast-routing

Use this command to enable multicast routing forwarding. The **no** form of this command disables multicast routing forwarding.

**ip multicast-routing** [*vrf vrf-name*]

**no ip multicast-routing** [*vrf vrf-name*]


| Parameter   | Parameter    | Description               |
|-------------|--------------|---------------------------|
| Description | vrf vrf-name | Specify the VRF instance. |

**Default** Disabled.

**Command Mode** Global configuration mode.

This command allows you to enable IPv4 multicast routing forwarding. The multicast protocol will not be enabled with IPv4 multicast routing forwarding disabled.

### Usage Guide

 It is not recommended to configure different v4 multicast routing protocols on different interfaces of a device.

### Examples

This command enables multicast routing forwarding.

```
Ruijie(config)# ip multicast-routing
```

## 1.5 ip multicast boundary

Use this command to configure the boundary of an IP multicast group. Use the **no** or **default** form of this command to remove the configured boundary.

**ip multicast boundary** *access-list* [ **in** | **out** ]

**no ip multicast boundary** *access-list* [ **in** | **out** ]

**default ip multicast boundary** *access-list* [ **in** | **out** ]

| Parameter   | Parameter          | Description                                         |
|-------------|--------------------|-----------------------------------------------------|
| Description | <i>access-list</i> | Access list associated with the multicast boundary. |
|             | <b>in</b>          | Inbound direction.                                  |
|             | <b>out</b>         | Outbound direction.                                 |

**Default** The boundary of a specified IP multicast group is defined by default.

**Command Mode** Interface configuration mode



Note that the ACL associated with the multicast boundary is either standard ACL or extended ACL. But the extended ACL only match the destination IP address.

### Usage Guide

Note:

This command filters IGMP and PIMSM packets of the specified IP address range. Multicast packets will not be received and sent through the interface of the boundary.

The following example configures svi1 as the boundary of all IP multicast groups.

### Examples

```
Ruijie(config)# ip access-list mul-boun
Ruijie(config-std-nacl)# permit ip 233.3.3.0 0.0.0.255
Ruijie(config-std-nacl)#exit
Ruijie(config)# interface vlan 1
Ruijie(config-if)# ip multicast boundary mul-boun
```

## 1.6 ip multicast route-limit

Use this command to limit the number of the entries that can be added to the multicast routing table. Use the **no** or **default** form of this command to remove the configuration.

**ip multicast route-limit** *limit* [*threshold*]

**no ip multicast route-limit** *limit*

**default ip multicast route-limit**

### Parameter

### Description

| Parameter        | Description                                                                                                               |
|------------------|---------------------------------------------------------------------------------------------------------------------------|
| <i>limit</i>     | The number of the entries that can be added to the multicast routing table is 1 to 2147483647. The default value is 1024. |
| <i>threshold</i> | (Optional) Number of multicast routes at which alarms will be triggered. The default value is 2147483647.                 |

### Default

The default value of *limit* is 1024.

The default value of *threshold* is 2147483647.

### Command Mode

Global configuration mode.

### Usage Guide

Note that the hardware resources of different devices are limited. The routes exceeding the hardware resource will be forwarded by software, which leads to lower product performance.

### Examples

The following example sets the route limit to 500.

```
Ruijie(config)# ip multicast route-limit 500
```

## 1.7 ip multicast rpf longest-match

Select the multicast static routing, MBGP routing and unicast routing that could be used for the RPF check from the multicast static routing table, MBGP routing table and unicast routing table respectively by following the RPF rules.

Use this command to select the one with the mask longest-matched from the three routings. If the routings are in the same priority, select the routing in order of multicast static routing, MBGP routing, unicast routing.

Use the **no** or **default** form of this command restores it to the default setting. By default, select one routing of the highest priority from the three routings. If the routings are in the same priority, select the routing in order of multicast static routing, MBGP routing, unicast routing.

**ip multicast rpf longest-match**

**no ip multicast rpf longest-match**

**default ip multicast rpf longest-match**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

### Default

Use the RPF rule to select the optimal routing for RPF check from the multicast static routing, MBGP routing and unicast routing that are used for the RPF check from the multicast static routing table, MBGP routing table and unicast routing table respectively by following the RPF rules. Then select one routing of the highest priority from the three routings. If the routings are in the same priority, select the routing in order of multicast static routing, MBGP routing, unicast routing.

### Command Mode

Global configuration mode.

### Examples

The following example configures to select the routing with the longest-match.

```
Ruijie(config)# ip multicast rpf longest-match
```

## 1.8 ip multicast static

Use this command to enable flow control for multicast packets on the Layer 2 interface. Use the **no** or **default** form of this command removes the setting.

**ip multicast static** *source-address group-address interface-type interface-number*

**no ip multicast static** *source-address group-address interface-type interface-number*

**default ip multicast static** *source-address group-address interface-type interface-number*

| Parameter   | Parameter             | Description                       |
|-------------|-----------------------|-----------------------------------|
| Description | <i>source-address</i> | Source IP address                 |
|             | <i>group-address</i>  | IP address of the multicast group |

|                                        |                                                                     |
|----------------------------------------|---------------------------------------------------------------------|
| <i>interface-type interface number</i> | Layer 2 interface on which multicast packets are allowed to forward |
|----------------------------------------|---------------------------------------------------------------------|

**Default** This function is disabled by default.

**Command Mode** Global configuration mode

You can configure more than one command (or more than one interface) for a multicast flow. With flow control enabled, the multicast flow can only be forwarded through these configured interfaces.

**Usage Guide** This command controls the forwarding of multicast flows on an interface without any direct influence on the packet processing of multicast protocols. However, the action of a multicast protocol (for instance, PIM-DM or PIM-SM) may be affected because some features of the multicast protocol are driven by multicast flows.

The following example configures forwarding multicast flows (192.168.43.4 and 255.1.1.5) through GigabitEthernet 2/6 and FastEthernet 3/2.

**Examples**

```
Ruijie(config)# ip multicast static 192.168.43.4 255.1.1.5 G2/6
Ruijie(config)# ip multicast static 192.168.43.4 255.1.1.5 F3/2
```

## 1.9 ip multicast ttl-threshold

Use this command to configure TTL (time-to-live) threshold on the interface. Use the **no** or **default** form of the command to restore it to the default value.

**ip multicast ttl-threshold** *ttl-value*

**ip multicast ttl-threshold**

**default ip multicast ttl-threshold**

| Parameter   | Parameter        | Description                                                   |
|-------------|------------------|---------------------------------------------------------------|
| Description | <i>ttl-value</i> | TTL threshold on the interface, within the range of 0 to 255. |

**Default** The default *ttl-value* is 0.

**Command Mode** Interface configuration mode.

**Usage Guide** Use show running-config to display configuration. A device with multicast enabled can maintain one TTL threshold for every interface. If the TTL of the multicast packet received is greater than the threshold of the interface, the packets will be forwarded. Otherwise, the packet is discarded. Note that the TTL threshold is effective only to the multicast frames. In addition, you must configure it on the L3 interface.

**Examples**

The following example sets the TTL threshold on the interface to 5.

```
Ruijie(config-if)# ip multicast ttl-threshold 5
```

### 1.10 msf force-forwarding

Use this command to enable IPv4 multicast data packets destined for the CPU to be forcedly forwarded by software. Use the **no** or **default** form of this command to restore the default settings.

- msf force-forwarding**
- no msf force-forwarding**
- default msf force-forwarding**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Command Mode** Global configuration mode

**Defaults** This function is disabled by default.

**Usage Guide** N/A

**Examples**

The following example enable IPv4 multicast data packets destined for the CPU to be forcedly forwarded by software.

```
Ruijie(config)# msf force-forwarding
```

### 1.11 msf ipmc-overflow override

Use this command to enable the overflow overriding mechanism. Use the **no** or **default** form of this command to remove the configuration.

- msf ipmc-overflow override**
- no msf ipmc-overflow override**
- default msf ipmc-overflow override**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | -         | -           |

**Default** This function is disabled by default.

**Command Mode** Global configuration mode.

**Usage Guide** N/A

**Examples**

The following example enables the overflow overriding mechanism.

```
Ruijie (config)# msf ipmc-overflow override
Ruijie (config)#
```

## 1.12 msf nsf

Use this command to configure the parameter for the continuous multicast forwarding. Use the **no** or **default** form of this command to remove the configuration.

**msf nsf** **{convergence-time** *time* **|** **{leak** *interval* **}**

**no msf nsf** **{convergence-time | leak}**

**default msf nsf** **{convergence-time | leak}**

**Parameter**  
**Description**

| Parameter                                | Description                                                                             |
|------------------------------------------|-----------------------------------------------------------------------------------------|
| <b>convergence-time</b> <i>ttl-value</i> | Maximum time for the multicast protocol convergence, in the valid range of the 0-3600s. |
| <b>leak</b> <i>interval</i>              | Packet multicast leak time, in the valid range of 0-3600s                               |

**Default**

convergence-time *time* :140s;  
leak interval: 150s

**Command Mode**

Global configuration mode.

**Usage Guide**

N/A

**Examples**

The following example sets the maximum time for the protocol convergence.

```
Ruijie (config)# msf nsf convergence-time 300
Ruijie (config)#
```

The following example sets the packets leak time:

```
Ruijie(config)# msf nsf leak 200
Ruijie(config)#
```

## 1.13 show ip mrf mfc

Use this command to show the IPv4 multicast routing forwarding table.

**show ip mrf mfc** [*source-address group-address*]

**Parameter**  
**Description**

| Parameter             | Description                                                 |
|-----------------------|-------------------------------------------------------------|
| <i>source-address</i> | Source address of the multicast routing forwarding entries. |
| <i>group-address</i>  | Group address of the multicast routing forwarding entries.  |

**Default**

-

**Command Mode**

Privileged EXEC mode/Global configuration mode/Interface configuration mode

The three parameters in this command are optional, wherein the source address and group address must be specified at the same time.

**Usage Guide**

- If no source address and group address are specified, all mfc entries are displayed.
- When the source address and group address are specified only, the entries corresponding to the source and group addresses are displayed.

The following example shows all IPv4 layer-3 multicast routing forwarding entries with source address 20.0.1.30.

```
Ruijie#show ip mrf mfc 20.0.1.30 233.3.3.3
Multicast Routing and Forwarding Cache Table
(20.0.1.30, 233.3.3.3)
FAST_SW, SWTCHED, MIN_MTU: 1500, MIN_MTU_IFINDEX: 4099, WRONG IF: 0
Incoming interface: VLAN 1[4097]
Outgoing interface list:
VLAN 3 (1)
```

The fields in the execution of the **show ip mrf mfc** command are described in the following table.

**Examples**

| Field              | Description                                                                                                                                                     |
|--------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 20.0.1.30          | Source address of the entry.                                                                                                                                    |
| 233.3.3.3          | Group address of the entry.                                                                                                                                     |
| FAST_SW            | The Flag shows whether to allow the fast forwarding or not. If the non-Ethernet interface, ppp, hdlc and frame relay exist, no fast forwarding entry generates. |
| SWTCHED            | Indicate whether the entry configuration on the next layer forwarding table has done not not.                                                                   |
| MIN_MTU MTU        | The minimum MTU of the entry.                                                                                                                                   |
| MIN_MTU_IFINDEX    | The interface index with the minimum MTU value.                                                                                                                 |
| WRONG IF           | The statistics number of the multicast data packets received on the wrong incoming interface.                                                                   |
| Incoming interface | Incoming interface of the entry.                                                                                                                                |
| VLAN 3 (1)         | The layer-3 outgoing interface of the entry is VLAN3. 1 for the ttl threshold of this layer-3 interface.                                                        |

## 1.14 show ip mroute

Use this command to show the multicast forwarding table.

**show ip mroute** [*group-or-source-address* [ *group-or-source-address* ]] [**dense** | **sparse** ]  
[**summary** | **count** ]

### Parameter Description

| Parameter                      | Description                                                                                                                 |
|--------------------------------|-----------------------------------------------------------------------------------------------------------------------------|
| <i>group-or-source-address</i> | Multicast or source IP address                                                                                              |
| <i>group-or-source-address</i> | Multicast or source IP address. The two addresses must not be the multicast addresses or source addresses at the same time. |
| <b>dense</b>                   | Show PIM-DM multicast routing table.                                                                                        |
| <b>sparse</b>                  | Show PIM-SM multicast routing table.                                                                                        |
| <b>summary</b>                 | Show the summary of the multicast routing table.                                                                            |
| <b>count</b>                   | Show the count of the multicast routing table.                                                                              |

### Command Mode

Privileged EXEC mode/Global configuration mode/Interface configuration mode

The three parameters in this command are optional, wherein the source address and group address must be specified at the same time.

### Usage Guide

- If no source address and group address are specified, all mfc entries are displayed.
- When the source address and group address are specified only, the mfc entries corresponding to the source and group addresses are displayed.

The following example shows the information of the multicast routing table:

```
Ruijie# show ip mroute
IP Multicast Routing Table
Flags: I - Immediate Stat, T - Timed Stat, F - Forwarder installed
Timers: Uptime/Stat Expiry
Interface State: Interface (TTL)
(10.10.1.52, 224.0.1.3), uptime 00:00:31, stat expires 00:02:59
Owner PIM-SM, Flags: TF
Incoming interface: FastEthernet 2/1
Outgoing interface list:
FastEthernet 1/3
```

### Examples

The following example shows the information of a specific entry:

```
Ruijie# show ip mroute 10.10.1.52 224.0.1.3
IP Multicast Routing Table
```

```

Flags: I - Immediate Stat, T - Timed Stat, F - Forwarder installed
Timers: Uptime/Stat Expiry
Interface State: Interface (TTL)
(10.10.1.52, 224.0.1.3), uptime 00:03:24, stat expires 00:01:28
Owner PIM-SM, Flags: TF
Incoming interface: FastEthernet 2/1
Outgoing interface list:
FastEthernet 1/3

```

The following example shows the count of the routing table:

```

Ruijie# show ip mroute count
IP Multicast Statistics
Total 1 routes using 132 bytes memory
Route limit/Route threshold: 2147483647/2147483647
Total NOCACHE/WRONGVIF/WHOLEPKT rcv from fwd: 1/0/0
Total NOCACHE/WRONGVIF/WHOLEPKT sent to clients: 1/0/0
Immediate/Timed stat updates sent to clients: 0/0
Reg ACK rcv/Reg NACK rcv/Reg pkt sent: 0/0/0
Next stats poll: 00:01:10
Forwarding Counts: Pkt count/Byte count, Other Counts: Wrong If pkts
Fwd msg counts: WRONGVIF/WHOLEPKT rcv
Client msg counts: WRONGVIF/WHOLEPKT/Imm Stat/Timed Stat sent
Reg pkt counts: Reg ACK rcv/Reg NACK rcv/Reg pkt sent
(10.10.1.52, 224.0.1.3), Forwarding: 2/19456, Other: 0
Fwd msg: 0/0, Client msg: 0/0/0/0, Reg: 0/0/0

```

The following example shows the summary of the routing table:

```

Ruijie# show ip mroute summary
IP Multicast Routing Table
Flags: I - Immediate Stat, T - Timed Stat, F - Forwarder installed
Timers: Uptime/Stat Expiry
Interface State: Interface (TTL)
(10.10.1.52, 224.0.1.3), 00:01:32/00:03:20, PIM-SM, Flags: T

```

| Field                     | Description                                                                         |
|---------------------------|-------------------------------------------------------------------------------------|
| Flags                     | I-Immediate statistic<br>T-Timed statistic<br>F-Already set to the forwarding table |
| Timers:Uptime/Stat Expiry | Time when the entry is created.<br>Time when it is aged.                            |
| Interface State           | Interface state.                                                                    |
| Owner                     | Owner of the entry, which may be a multicast routing protocol                       |



|                                          |                                                                                                                        |
|------------------------------------------|------------------------------------------------------------------------------------------------------------------------|
| Incoming interface                       | Expected packet incoming interface. If the actual incoming interface does not match it, the packets will be discarded. |
| Outgoing interface list                  | Outgoing interface list; the packets will be forwarded on the interfaces in the list.                                  |
| Forwarding Counts: Pkt count/Byte count, | Forwarding count: packet count/byte count forwarded by the entry                                                       |
| Other Counts: Wrong If pkts              | Count of the packets received from the wrong incoming interface.                                                       |

## Related Commands

| Command                     | Description                                |
|-----------------------------|--------------------------------------------|
| <b>ip multicast-routing</b> | Enabling the multicast routing forwarding. |
| <b>ip pim dense-mode</b>    | Enable the PIM-DM on the interface.        |
| <b>ip pim sparse-mode</b>   | Enable the PIM-SM on the interface.        |

## 1.15 show ip mroute static

Use this command to show the v4 static multicast routing information.

**show ip mroute static**

## Parameter

## Description

| Parameter | Description |
|-----------|-------------|
| -         | -           |

## Command Mode

Privileged EXEC mode/Global configuration mode/Interface configuraion mode

## Usage Guide

In the same conditions, the priority of the static multicast routing is higher than the dynamically learned.

## Examples

The following example shows the information of the user-configured static multicast routing:

```
Ruijie#show ip mroute static
Mroute: 172.16.0.0, RPF neighbor: 172.30.10.13
Protocol: , distance: 0
```

## 1.16 show ip mvif

Use this command to show the basic information of the multicast interface.

**show ip mvif { interface-type interface-number }**

## Parameter

## Description

| Parameter                              | Description               |
|----------------------------------------|---------------------------|
| <i>interface-type interface-number</i> | Interface Type and number |

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuraion mode

The following example shows the basic information of the multicast interface of svil.

**Examples**

```
Ruijie#show ip mvif vlan 1
Interface Vif Owner TTL Local Remote Uptime
Idx Module Address Address
VLAN 1 1 PIM-DM 2 192.168.1.1 0.0.0.0 00:13:16
```

## 1.17 show ip rpf

Use this command to show the RPF information of the specified source IP address.

**show ip rpf** {*source-address*}

| Parameter   | Parameter             | Description                 |
|-------------|-----------------------|-----------------------------|
| Description | <i>source-address</i> | Specified source IP address |

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuraion mode

The three parameters in this command are optional, wherein the source address and group address must be specified at the same time.

**Usage Guide**

- If no source address and group address are specified, all mfc entries are displayed.
- When the source address and group address are specified only, the mfc entries corresponding to the source and group addresses are displayed.

The following example shows the information of the RPF to 192.168.1.54:

**Examples**

```
Ruijie# show ip rpf 192.168.1.54
RPF information for 192.168.1.54
RPF interface: VLAN 1
RPF neighbor: 0.0.0.0
RPF route: 192.168.1.0/24
RPF type: unicast (connected)
RPF recursion count: 0
Doing distance-preferred lookups across tables
Distance: 0
Metric: 0
```

## 1.18 show msf msc

Use this command to show IPv4 multi-layer multicast forwarding table.

**show msf msc** [*source-address*] [*group-address*]

| Parameter   | Parameter             | Description                                                                |
|-------------|-----------------------|----------------------------------------------------------------------------|
| Description | <i>source-address</i> | Specified source IP address of the multi-layer multicast forwarding table. |

|                      |                                                                        |
|----------------------|------------------------------------------------------------------------|
| <i>group-address</i> | Specified group address of the multi-layer multicast forwarding table. |
|----------------------|------------------------------------------------------------------------|

**Default** -

**Command**

**Mode** Privileged EXEC mode/Global configuration mode/Interface configuraion mode

The three parameters in this command are optional.

- If only the source address is specified as s1, all msc entries with source address 1 are displayed.

**Usage Guide**

- If the source address is specified as s1 and the group address as g1, all corresponding msc entries are displayed.
- Each parameter shall be input in order. Only when the parameter in front has been configured, the following one could be set.

The following example shows the IPv4 layer-3 multicast forwarding entries with source IP address 192.168.195.25:

```
Ruijie# show msf msc 192.168.195.25
Multicast Switching Cache Table
(192.168.195.23, 233.3.3.3, 1), SYNC, MTU:0, 1 OIFs
VLAN 1(0): 1 OPORTs, REQ: DONE
OPORT 6, IGMP-SNP, REQ: DONE
```

The fields in the execution of the **show mrf mfc** command are described in the following table.

**Examples**

| Field          | Description                                                                                                                                                                                                               |
|----------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 192.168.195.23 | Source address of the entry.                                                                                                                                                                                              |
| 233.3.3.3      | Group address of the entry.                                                                                                                                                                                               |
| 1              | Vlan id where the incoming interface of the entry is.                                                                                                                                                                     |
| SYNC           | The entry has been synchronized to the hardware.                                                                                                                                                                          |
| MTU            | MTU value                                                                                                                                                                                                                 |
| OIFs           | Layer-3 outgoing interface number.                                                                                                                                                                                        |
| VLAN1(0)       | The vlan where the layer-3 outgoing interface oif is.                                                                                                                                                                     |
| 1 OPORTs       | The number of layer-2 port in the layer-3 outgoing oif.                                                                                                                                                                   |
| REQ: DONE      | This oif configuration on the hardware has done.                                                                                                                                                                          |
| OPORT 6        | The layer-2 port in the oif with index 6.                                                                                                                                                                                 |
| IGMP-SNP       | This port is created by the IGMP SNOOPING protocol. This value can also be the PIM-SNP, which means this port is created by the PIM SNOOPING protocol. And the ROUTER means this port is created by the layer-3 protocol. |
| REQ: DONE      | The port configuration on the hardware has done.                                                                                                                                                                          |

## 1.19 show msf nsf

Use this command to show the configuration of continuous multicast forwarding.

**show msf nsf**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | -         | -           |

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuraion mode

The following example shows the configuration of continuous multicast forwarding.

### Examples

```
Ruijie# show msf nsf
Multicast HA Parameters
-----+-----+
protocol convergence timeout 120 secs
flow leak interval 20 secs
Ruijie#
```

| Related Commands | Command | Description                            |
|------------------|---------|----------------------------------------|
|                  | msf nsf | Configure the multicast NSF parameter. |

## 2 IPv6 Multicast Routing Commands

### 2.1 clear ipv6 mroute

Use this command to remove the specific or all IPv6 multicast forwarding entries.

**clear ipv6 mroute** { \* | *v6group-address* [*v6source -address*]}

| Parameter               | Description                                                               |
|-------------------------|---------------------------------------------------------------------------|
| *                       | Removes all the forwarding information in the IPv6 multicast route table. |
| <i>v6group-address</i>  | Group IPv6 address of IPv6 multicast routes                               |
| <i>v6source-address</i> | Source IPv6 address of multicast routes                                   |

#### Parameter Description

#### Command Mode

Privileged EXEC mode

#### Configuration

The following example removes all the multicast routing entries.

#### Examples

```
Ruijie# clear ip mroute *
```

#### Related Commands

| Command                             | Description |
|-------------------------------------|-------------|
| <b>show ipv6 mroute</b>             | N/A         |
| <b>clear ipv6 mroute statistics</b> | N/A         |

### 2.2 clear ipv6 mroute statistics

Use this command to remove the statistics of IPv6 multicast routes.

**clear ipv6 mroute statistics** { \* | *v6group-address* [*v6source -address*]}

| Parameter               | Description                                                      |
|-------------------------|------------------------------------------------------------------|
| *                       | Removes all the forwarding entries in the multicast route table. |
| <i>v6group-address</i>  | Group IPv6 address of IPv6 multicast routes                      |
| <i>v6source-address</i> | Source IPv6 address of multicast route                           |

#### Parameter

#### Description

#### Command Mode

Privileged EXEC mode

#### Usage Guide

-

#### Configuration

The following example clears all the statistical information of the multicast routing entries.

#### Examples

```
Ruijie# clear ip mroute statistics *
```

| Related<br>Commands | Command                  | Description                                          |
|---------------------|--------------------------|------------------------------------------------------|
|                     | <b>show ipv6 mroute</b>  | Displays the multicast route forwarding information. |
|                     | <b>clear ipv6 mroute</b> | Clears the multicast route forwarding information.   |

## 2.3 ipv6 mroute

Use this command to configure static IPv6 multicast routes. Use the **no** or **default** form of this command to restore the default setting.

**ipv6 mroute** *ipv6-prefix/prefix-length* [ *protocol* ] { *v6rpf-address* | *interface-type interface-number* } [ *distance* ]

**no ipv6 mroute** *ipv6-prefix/prefix-length* [ *protocol* ]

**default ipv6 mroute** *ipv6-prefix/prefix-length* [ *protocol* ]

| Parameter<br>Description | Parameter                                        | Description                                                                                                                    |
|--------------------------|--------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------|
|                          | <i>ipv6-prefix/prefix-length</i>                 | Source IPv6 address of the multicast route                                                                                     |
|                          | <i>mask</i>                                      | Mask of the source IPv6 address                                                                                                |
|                          | <i>protocol</i>                                  | (Optional) The unicast routing protocol being used                                                                             |
|                          | <i>v6rpf-address</i>                             | Incoming interface of the multicast route                                                                                      |
|                          | <i>interface-type</i><br><i>interface-number</i> | Interface type and interface ID                                                                                                |
|                          | <i>distance</i>                                  | Management distance used to determine whether to use the route for RPF routing, ranging from 1 to 255. The default value is 0. |

**Defaults** The static IPv6 multicast routing is not configured by default.

**Command Mode** Global configuration mode

**Usage Guide** This command is used to configure the route for the purpose of RFF check. Note that the configured route is prior to the route learned in the unicast form.  
If the outgoing direction of static multicast route but not the next-hop IP shall be specified, the outgoing direction must be of the point-to-point type.

**Configuration Examples** The following example allows the static multicast route 2233::/64 to pass 3333::3333:

```
Ruijie(config)# ipv6 mroute 2233::/64 3333::3333
```

## 2.4 ipv6 multicast boundary

Use this command to configure the boundary of an IPv6 multicast group. Use the **no** form of this command to restore the default setting.

**ipv6 multicast boundary** *access-list-name* [ *in* | *out* ]

**no ipv6 multicast boundary** *access-list-name* [ *in* | *out* ]


| Parameter   | Parameter               | Description                                        |
|-------------|-------------------------|----------------------------------------------------|
| Description | <i>access-list-name</i> | Access list associated with the multicast boundary |
|             | <b>in</b>               | Inbound redirection                                |
|             | <b>out</b>              | Outbound direction                                 |

**Defaults** The boundary of a specified IPv6 multicast group is not defined by default.

**Command Mode** Interface configuration mode

Note that the ACL associated with the multicast boundary is either standard ACL or extended ACL. But the extended ACL only match the destination IPv6 address.

#### Usage Guide

 This command filters MLD, PIM-SMv6 packets of the specified IPv6 address range. Multicast packets will not be received and sent through the interface of the boundary.

The following example configures svi1 as the boundary of all IPv6 multicast groups.

#### Configuration

#### Examples

```
Ruijie(config)# ip access-list mul-boun
Ruijie(config-std-nacl)# permit ip 233.3.3.0 0.0.0.255
Ruijie(config-std-nacl)#exit
Ruijie(config)# interface vlan 1
Ruijie(config-if)# ip multicast boundary mul-boun
```

## 2.5 ipv6 multicast route-limit

Use this command to limit the number of the entries that can be added to the IPv6 multicast routing table. Use the **no** or **global** form of this command to restore the default setting.

**ipv6 multicast route-limit** *limit* [*threshold*]

**no ipv6 multicast route-limit** *limit* [*threshold*]

**default ipv6 multicast route-limit** *limit* [ *threshold* ]

| Parameter   | Parameter        | Description                                                                                        |
|-------------|------------------|----------------------------------------------------------------------------------------------------|
| Description | <i>limit</i>     | The number of the entries that can be added to the IPv6 multicast routing table is 1 to 2147483647 |
|             | <i>threshold</i> | (Optional) Number of IPv6 multicast routes at which alarms will be triggered                       |

#### Defaults

The default value of *limit* is 1024.

The default value of *threshold* is 2147483647.

**Command Mode** Global configuration mode

**Usage Guide** The hardware resources of different devices are limited. The routes exceeding the hardware resource will be forwarded by software, which leads to lower product performance.

**Configuration** The following example sets the route limit to 500 and the warning value 90.

**Examples**

```
Ruijie(config)# ipv6 multicast route-limit 500 90
```

## 2.6 ipv6 multicast rpf longest-match

Use the RPF rule to select the static multicast route, MBGP route and the unicast route for the purpose of RPF check from the static multicast route list, the MBGP route list and the unicast route list.

Use this command to select one route with the longest-matched mask from the above-mentioned three routes. If the priority values of all three routes are the same, the routes will be selected in order of static multicast route, MBGP route and unicast route.

Use the **no** or **default** form of this command to restore the default setting.

**ipv6 multicast rpf longest-match**

**no ipv6 multicast rpf longest-match**

**default ipv6 multicast rpf longest-match**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

Use the RPF rule to select the static multicast route, MBGP route and the unicast route for the purpose of RPF check from the static multicast route list, the MBGP route list and the unicast route list.

**Defaults** Use this command to select one route, which is prior to the other two routes, with the longest-matched mask from the above-mentioned three routes. If the priority values of all three routes are the same, the routes will be selected in order of static multicast route, MBGP route and unicast route.

### Command

**Mode** Global configuration mode

### Usage

**Guide** N/A

**Configuration** The following example selects one route with the longest-matched mask from the above-mentioned three routes.

**Examples**

```
Ruijie(config)# ipv6 multicast rpf longest-match
```

## 2.7 ipv6 multicast static



Use this command to enable flow control for multicast packets on the Layer 2 interface. Use the **no** or **default** form of this command to restore the default setting.

**ipv6 multicast static** *source-address group-address interface-type interface-number*

**no ipv6 multicast static** *source-address group-address interface-type interface-number*

**default ipv6 multicast static** *source-address group-address interface-type interface-number*

**Parameter Description**

| Parameter                              | Description                                                         |
|----------------------------------------|---------------------------------------------------------------------|
| <i>source-address</i>                  | Source IPv6 address                                                 |
| <i>group-address</i>                   | IPv6 address of the multicast group                                 |
| <i>interface-type interface number</i> | 2-layer interface on which multicast packets are allowed to forward |

**Defaults** This function is disabled by default.

**Command**

**Mode** Global configuration mode

You can configure more than one command (or more than one interface) for a multicast flow. With flow control enabled, the multicast flow can only be forwarded through these configured interfaces.

**Usage Guide**

This command controls the forwarding of multicast flows on an interface without any direct influence on the packet processing of multicast protocols. However, the action of a multicast protocol (for instance, PIM-SMv6) may be affected because some features of the multicast protocol are driven by multicast flows.

**Configuration**

The following example configures forwarding multicast flows (2222::3333, ff66::100) through GigabitEthernet 2/6 and FastEthernet 3/2.

**Examples**

```
Ruijie(config)# ipv6 multicast static 2222::3333 ff66::100 G2/6
Ruijie(config)# ipv6 multicast static 2222::3333 ff66::100 F3/2
```

## 2.8 ipv6 multicast-routing

Use this command to enable the IPv6 multicast routing forwarding. Use the **no** or **default** form of this command to restore the default setting.

**ipv6 multicast-routing**

**no ipv6 multicast-routing**

**default ipv6 multicast-routing**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** This function is disabled by default

**Command Mode** Global configuration mode

Use this command to enable the IPv6 multicast routing forwarding. With this function disabled, the multicast protocol cannot be enabled.

#### Usage Guide



This command must be configured to enable the IPv6 multicast routing forwarding. This function conflicts with IGMP Snooping.

The following example enables the IPv6 multicast routing forwarding.

#### Configuration

```
Ruijie(config)# ipv6 multicast-routing
```

#### Examples

The following example disables the IPv6 multicast routing forwarding.

```
Ruijie(config)#no ipv6 multicast-routing
```

## 2.9 msf6 force-forwarding

Use this command to enable IPv6 multicast data packets destined for the CPU to be forcedly forwarded by software. Use the **no** or **default** form of this command to restore the default settings.

**msf6 force-forwarding**

**no msf6 force-forwarding**

**default msf6 force-forwarding**

#### Parameter

#### Description

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** N/A

#### Examples

The following example enable IPv6 multicast data packets destined for the CPU to be forcedly forwarded by software.

```
Ruijie(config)# msf6 force-forwarding
```

## 2.10 msf6 nsf

Use this command to configure parameters for multicast non-stop forwarding. Use the **no** or **default** form of this command to restore the default setting.

**msf6 nsf** { **convergence-time** *time* | **leak** *interval* }

**no msf6 nsf** { **convergence-time** | **leak** }

**default msf6 nsf** {**convergence-time** | **leak**}

| Parameter   | Parameter                              | Description                                                                                                                            |
|-------------|----------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------|
| Description | <b>convergence-time</b><br><i>time</i> | Maximum duration for which the system waits for multicast protocol convergence<br>The unit is second. The value ranges from 0 to 3600. |
|             | <b>leak</b> <i>interval</i>            | Interval at which multicast packets are leaked<br>The unit is second. The value ranges from 0 to 3600.                                 |

**Defaults** The default convergence-time is 20 seconds and leak interval is 30 seconds.

**Command Mode** Global configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example sets the maximum duration for which the system waits for multicast protocol convergence.

```
Ruijie (config)# msf6 nsf convergence-time 300
```

The following example sets the interval at which multicast packets are leaked.

```
Ruijie(config)# msf6 nsf leak 200
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 2.11 show ipv6 mrf6 mfc

Use this command to display the IPv6 multicast forwarding table.

**show ipv6 mrf6 mfc** [ *v6source-address v6group-address* ]

| Parameter   | Parameter              | Description                       |
|-------------|------------------------|-----------------------------------|
| Description | <i>v6group-address</i> | IPv6 address of a multicast group |

|                         |                                    |
|-------------------------|------------------------------------|
| <i>v6source-address</i> | IPv6 address of a multicast source |
|-------------------------|------------------------------------|

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** The two parameters are optional. The source address and group address must be specified together. If the two parameters are not specified, all mrf table entries will be displayed. If the two parameters are specified, the mrf entries of the specified source address and group address are displayed.

**Configuration Examples** The following example displays the 3-layer multicast forwarding table entries of IPv6 (the source address is 2000::1 and the group address is FF55::1).

```
Ruijie#show ipv6 mrf6 mfc 2000::1 FF55::1
Multicast Routing and Forwarding Cache6 Table
(2000::1, FF55::1)
FAST_SW, SWITCHED, MIN_MTU: 1500, MIN_MTU_IFINDEX: 4099, WRONG IF: 0
Incoming interface: VLAN 1[4097]
Outgoing interface list:
VLAN 3 (1)
```

| Field           | Description                                                                                                                                                                                                                                                                                            |
|-----------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 2000::1         | Source address of entries                                                                                                                                                                                                                                                                              |
| FF55::1         | Group address of entries                                                                                                                                                                                                                                                                               |
| FAST_SW         | Indicates whether the entries allow fast forwarding, that is, whether the entries can be forwarded by using hardware or software forwarding. If the entries include an interface that does not support the multicast function (for example, the GRE tunnel interface), fast forwarding is not allowed. |
| SWITCHED        | Indicates whether the entries have been placed in the forwarding table on the next layer.                                                                                                                                                                                                              |
| MIN_MTU MTU     | Minimum MTU value of entries                                                                                                                                                                                                                                                                           |
| MIN_MTU_IFINDEX | Index of the interface that has the minimum MTU value                                                                                                                                                                                                                                                  |
| WRONG IF        | Number of multicast packets sent from the wrong inbound interface                                                                                                                                                                                                                                      |
| VLAN 1[4097]    | Indicates that the rpf inbound interface is VLAN1. 4097 indicates the IFINDEX of the interface.                                                                                                                                                                                                        |
| VLAN 3 (1)      | Indicates that the 3-layer outbound interface of the entries is VLAN 3. 1 indicates the ttl threshold of the 3-layer interface.                                                                                                                                                                        |

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 2.12 show ipv6 mroute

Use this command to display the IPv6 multicast forwarding table.

**show ipv6 mroute** [*group-or-source-address* [ *group-or-source-address* ]] [**sparse**] [**summary** | **count**]

|                                        | Parameter                      | Description                                             |
|----------------------------------------|--------------------------------|---------------------------------------------------------|
| <b>Parameter</b><br><b>Description</b> | <i>group-or-source-address</i> | Multicat group IPv6 address                             |
|                                        | <i>group-or-source-address</i> | Multicast source IPv6 address                           |
|                                        | <b>sparse</b>                  | Displays the core entry of the multicast routing table. |
|                                        | <b>summary</b>                 | Displays the summary of the multicast routing table.    |
|                                        | <b>count</b>                   | Displays the count of the multicast routing table.      |

**Command**

**Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

The following example displays all information of the IPv6 multicast routing table.

```
Ruijie# show ipv6 mroute
IPv6 Multicast Routing Table
Flags: I - Immediate Stat, T - Timed Stat, F - Forwarder installed
Timers: Uptime/Stat Expiry
Interface State: Interface (TTL)
(2222::1234, ff56::1234), uptime 00:00:31, stat expires 00:02:59
Owner PIM-SMv6, Flags: TF
Incoming interface: FastEthernet 2/1
Outgoing interface list:
FastEthernet 1/3
```

The following example displays the count of the routing table.

```
Ruijie# show ipv6 mroute count
IPv6 Multicast Statistics
Total 1 routes using 168 bytes memory
Route limit/Route threshold: 1024/2147483647
Total NOCACHE/WRONGVIF/WHOLEPKT recv from fwd: 77/147/0
Total NOCACHE/WRONGVIF/WHOLEPKT sent to clients: 77/147/0
Immediate/Timed stat updates sent to clients: 0/29
Reg ACK recv/Reg NACK recv/Reg pkt sent: 0/0/0
Next stats poll: 00:00:09
Forwarding Counts: Pkt count/Byte count, Other Counts: Wrong If pkts
Fwd msg counts: WRONGVIF/WHOLEPKT recv
Client msg counts: WRONGVIF/WHOLEPKT/Imm Stat/Timed Stat sent
Reg pkt counts: Reg ACK recv/Reg NACK recv/Reg pkt sent
(2222::1234, ff56::1234), Forwarding: 1/0, Other: 0
Fwd msg: 0/0, Client msg: 0/0/0/0, Reg: 0/0/0
```

**Configurati  
on  
Examples**

The following example displays the summary of the routing table.

```
Ruijie# show ipv6 mroute summary
IPv6 Multicast Routing Table
Flags: I - Immediate Stat, T - Timed Stat, F - Forwarder installed
Timers: Uptime/Stat Expiry
Interface State: Interface (TTL)
(2222::1234, ff56::1234), 00:00:28/00:03:25, PIM-SMv6, Flags: TF
```

| Field                     | Description                                                                         |
|---------------------------|-------------------------------------------------------------------------------------|
| Flags                     | I-Immediate statistic<br>T-Timed statistic<br>F-Already set to the forwarding table |
| Timers:Uptime/Stat Expiry | Time when the entry is created.<br>Time when it is aged.                            |
| Interface State           | Interface state.                                                                    |

|                                          |                                                                                                                        |
|------------------------------------------|------------------------------------------------------------------------------------------------------------------------|
| Owner                                    | Owner of the entry, which may be a multicast routing protocol                                                          |
| Incoming interface                       | Expected packet incoming interface. If the actual incoming interface does not match it, the packets will be discarded. |
| Outgoing interface list                  | Outgoing interface list; the packets will be forwarded on the interfaces in the list.                                  |
| Forwarding Counts: Pkt count/Byte count, | Forwarding count: packet count/byte count forwarded by the entry                                                       |
| Other Counts: Wrong If pkts              | Count of the packets received from the wrong incoming interface.                                                       |

| Related Commands | Command                                   | Description |
|------------------|-------------------------------------------|-------------|
|                  | <code>clear ipv6 mroute</code>            | N/A         |
|                  | <code>clear ipv6 mroute statistics</code> | N/A         |

## 2.13 show ipv6 mroute static

Use this command to display the static IPv6 multicast routing information.

**show ipv6 mroute static**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

### Command

**Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

### Usage

### Guide

The following example displays the static IPv6 multicast routing information.

**Configuration** Ruijie#show ipv6 mroute static

**Examples** Mroute: 2233::/64, RPF neighbor: 3333::3333  
Protocol: , distance: 0

## 2.14 show ipv6 mvif

Use this command to display the basic information of the multicast interface.

**show ipv6 mvif** { *interface-type interface-number* }

| Parameter   | Parameter                              | Description               |
|-------------|----------------------------------------|---------------------------|
| Description | <i>interface-type interface-number</i> | Interface type and number |

#### Command

**Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

The following example displays the basic information of the multicast interface of svil.

#### Configuration

```
Ruijie#show ipv6 mvif
Interface   Mif Owner   Uptime
           Idx Module
Register    0      03d03h09m
VLAN 1     1 PIMSMV6  03d03h09m
```

#### Examples

## 2.15 show ipv6 rpf

Use this command to display the RPF information of the specified source IPv6 address.

**show ipv6 rpf** *v6source-address*

| Parameter   | Parameter               | Description                   |
|-------------|-------------------------|-------------------------------|
| Description | <i>v6source-address</i> | Specified source IPv6 address |

#### Command

**Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

The following example displays the information of the RPF to 2222::3333:

#### Configuration

```
Ruijie# show ipv6 rpf 2222::3333
RPF interface: GigabitEthernet 0/1
RPF neighbor: ::
RPF route: 2222::/64
RPF type: unicast (connected)
RPF recursion count: 0
Doing distance-preferred lookups across tables
Distance: 0
Metric: 0
```

#### Examples



## 2.16 show msf6 msc

Use this command to display entries of the IPv6 routing multicast data stream exchange table.

**show msf6 msc** [ *v6source-address* ] [ *v6group-address* ] [ *vlan-id* ]

| Parameter   | Parameter               | Description                                                                                                                 |
|-------------|-------------------------|-----------------------------------------------------------------------------------------------------------------------------|
| Description | <i>v6group-address</i>  | IPv6 address of a multicast group                                                                                           |
|             | <i>v6source-address</i> | IPv6 address of a multicast source                                                                                          |
|             | <i>vlan-id</i>          | VLAN ID of the inbound interface of the entries<br>If the value is greater than 4096, the interface is a routing interface. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** This command is used to display entries of the IPv6 routing multicast data stream exchange table. The three parameters are all optional.

If only the source address is specified and set to s1, msc entries of this source address will be displayed.

If the source address is set to s1 and the group address is set to g1, msc entries of this source address and group address will be displayed.

If the source address is set to s1, the group address is set to g1, and the VLAN ID is set to v1, then msc entries that meet these three conditions will be displayed.

You must specify these three parameters in sequence. That is, you must specify the current parameter before specifying the next.

**Configuration Examples** The following example displays entries of the IPv6 routing multicast data exchange table of source address 2000::1:

```
Ruijie# show msf6 msc 2000::1
Multicast Switching Cache Table
(2000::1, FF55::1, 1), SYNC, MTU:0, 1 OIFs
VLAN 4094(8190): 1 OPORTs, REQ: DONE
OPORT 6, MLD-SNP, REQ: DONE
```

| Field   | Description                                                                           |
|---------|---------------------------------------------------------------------------------------|
| 2000::1 | Source address of entries                                                             |
| FF55::1 | Group address of entries                                                              |
| 1       | VLAN ID of the inbound interface of the entries                                       |
| SYNC    | Indicates that the entries have been synchronized to the bottom-layer hardware.       |
| MTU     | MTU value of the entries                                                              |
| OIFs    | Number of 3-layer interfaces of the entries                                           |
| VLAN    | Indicates a 3-layer outbound interface VLAN xxx (yyy). If the 3-layer interface is an |

|            |                                                                                                                                                                                                                                                                                                                                                |
|------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 4094(8190) | SVI interface, the value of xxx is the VLAN VID of the SVI, and the value of yyy is the VLAN vid+4096. If the 3-layer interface is a routing interface, the value of xxx is the IFINDEX of the interface+4096, and the value of yyy is the IFINDEX. This facilitates the index management of all 3-layer interfaces.                           |
| 1 OPORTs   | Number of 2-layer interfaces owned by this 3-layer exit oif                                                                                                                                                                                                                                                                                    |
| REQ: DONE  | Indicates that the oif has been set to the bottom-layer hardware. The value may be:<br>Waiting to be added. Usually it is waiting for a data stream to be triggered.<br>DEL: Being deleted.<br>DONE: Synchronized to the hardware.                                                                                                             |
| OPORT 6    | Indicates that the oif has a 2-layer interface with the interface number of 6.                                                                                                                                                                                                                                                                 |
| MLD-SNP    | Indicates that the interface is created based on MLD SNOOPING. Alternatively, the value may be one of the following options:<br>ROUTER: Indicates that the interface is created based on the 3-layer protocol.<br>INHERIT_FM_MLD_SNP: Indicates that the interface is created based on the MLD SNOOPING protocol inherited from other entries. |
| REQ: DONE  | Indicates that the interface has been set to the bottom-layer hardware. The value may be:<br>ADD: Waiting to be added. Usually it is waiting for a data stream to be triggered.<br>DEL: Being deleted.<br>DONE: Synchronized to the hardware.                                                                                                  |

**Related****Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform**

N/A

**Description**

## 2.17 show msf6 nsf

Use this command to display the multicast non-stop forwarding configuration.

**show msf6 nsf**

**Parameter****Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults**

N/A

**Command**

Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Mode****Usage Guide**

N/A

**Configuration** The following example displays the multicast non-stop forwarding configuration.

**Examples**

```
Ruijie# show msf6 nsf
Multicast HA Parameters
-----+-----+
protocol convergence timeout    120 secs
flow leak interval              20 secs
```

**Related****Commands****Platform****Description**

| Command  | Description                   |
|----------|-------------------------------|
| msf6 nsf | Multicast non-stop forwarding |

N/A

## 3 IGMP Commands

### 3.1 clear ip igmp group

Use this command to clear dynamic group member information obtained from the response messages in the IGMP buffer.

**clear ip igmp group** [ *group-address* [ *interface-type* *interface-number* ] ]

| Parameter Description | Parameter               | Description                       |
|-----------------------|-------------------------|-----------------------------------|
|                       | <i>group-address</i>    | 32-bit multicast group IP address |
|                       | <i>interface-type</i>   | Interface type                    |
|                       | <i>interface-number</i> | Interface number                  |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** The IGMP buffer includes a list that contains the multicast groups that the hosts in the direct subnet join. If the device joins a group, this group will be included in this list. To delete all the entries from the IGMP buffer, use the **clear ip igmp group** command without parameters.

**Configuration Examples** The following example clears all group entries.

```
Ruijie# clear ip igmp group
```

| Related Commands | Command                       | Description |
|------------------|-------------------------------|-------------|
|                  | <b>show ip igmp groups</b>    | N/A         |
|                  | <b>show ip igmp interface</b> | N/A         |

**Platform Description** N/A

### 3.2 clear ip igmp interface

Use this command to clear the IGMP entry for the interface.

**clear ip igmp interface** *interface-type* *interface-number*

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|-----------------------|-----------|-------------|

|                         |                  |
|-------------------------|------------------|
| <i>interface-type</i>   | Interface type   |
| <i>interface-number</i> | Interface number |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** This command is used to clear the information on the interface that is generated when IGMP is configured. The information includes the number of report/leave packets, and group members on interfaces.

**Configuration** The following example clears the IGMP entry for the interface.

**Examples** Ruijie# clear ip igmp interface gi 0/1

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform**

**Description** N/A

### 3.3 ip igmp access-group

Use this command to control a multicast group on the interface.

Use the **no** or **default** form of this command to restore the default setting.

**ip igmp access-group** *access-list*

**no ip igmp access-group**


**default ip igmp access-group**

| Parameter Description | Parameter          | Description |
|-----------------------|--------------------|-------------|
|                       | <i>access-list</i> |             |

**Defaults** This command is disabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** You can add several multicast groups into the specific interfaces of the host in a subnet. These multicast groups can be controlled using **ip igmp access-group**.

 With the IGMPv3 enabled, when the multicast group accesses the control command, the extended ACL is associated. If the IGMP report information received is (S1, S2, S3...Sn, G), the corresponding ACL will be used by this command to the (0, G) for the matching check. In order to use this command normally, the (0, G) must be configured explicitly for the extended ACL so as to implement the normal filtering of (S1, S2, S3...Sn, G).

**Configuration** The following example adds the interface Ethernet 0/1 to the group 225.2.2.2.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# access-list 1 permit 225.2.2.2 0.0.0.0
Ruijie(config)# interface ethernet 0/1
```

The following example associates the group control list with the extended ACL on the interface Eth 0/1 which only processes the igmp protocol packets with source address 1.1.1.1 and group address 233.3.3.3.

```
Ruijie# configure terminal
Ruijie(config)# ip access-list extended ext_acl
Ruijie(config-ext-nacl)# permit ip host 1.1.1.1 host 233.3.3.3
Ruijie(config)# interface ethernet 0/1
Ruijie(config-if-Ethernet 0/1)# ip igmp access-group ext_acl
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

### 3.4 ip igmp enforce-router-alert

Use this command to receive IGMP packets with **router-alert** option , and discard those without the option.

**ip igmp enforce-router-alert**

Use the **no** form of this command to receive all IGMP packets.

**no ip igmp enforce-router-alert**

Use the **default** form of this command to restore the default setting.

**default ip igmp enforce-router-alert**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| -         | -           |

|                               |                                                                                                                                                                    |
|-------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Defaults</b>               | This function is disabled by default.                                                                                                                              |
| <b>Command Mode</b>           | Global configuration mode                                                                                                                                          |
| <b>Usage Guide</b>            | N/A                                                                                                                                                                |
| <b>Configuration Examples</b> | The following example receives IGMP packets with <b>router-alert</b> option.<br><pre>Ruijie# configure terminal Ruijie(config)# ip igmp enforce-router-alert</pre> |
| <b>Platform Description</b>   | N/A                                                                                                                                                                |

### 3.5 ip igmp enforce-source-subnet

Use this command to receive only the IGMP report packet containing the source address in the same network segment as the port.

**ip igmp enforce-source-subnet**

Use the **no** form of this command to restore the default setting.

**no ip igmp enforce-source-subnet**

Use the **default** form of this command to restore the default setting.

**default ip igmp enforce-source-subnet**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | -         | -           |

|                               |                                                                                                                                                                                                                          |
|-------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Defaults</b>               | The source IP address is not checked by default.                                                                                                                                                                         |
| <b>Command Mode</b>           | Global configuration mode                                                                                                                                                                                                |
| <b>Usage Guide</b>            | N/A                                                                                                                                                                                                                      |
| <b>Configuration Examples</b> | The following example receives only the IGMP report packet containing the source address in the same network segment as the port.<br><pre>Ruijie# configure terminal Ruijie(config)# ip igmp enforce-source-subnet</pre> |

**Platform** N/A  
**Description**

### 3.6 ip igmp immediate-leave group-list

In the IGMPversion2 and IGMPversion3 versions, use this command to shorten the delay of leaving a group. This command is used when a single receiving host is connected to a single interface.

Use the **no** or **default** form of this command to restore the default setting.

**ip igmp immediate-leave group-list** *access-list*

**no ip igmp immediate-leave**

**default ip igmp immediate-leave**

| Parameter Description | Parameter          | Description                                                                            |
|-----------------------|--------------------|----------------------------------------------------------------------------------------|
|                       | <i>access-list</i> | Name of access control list in the range from 1 to 199, 1,300 to 2,699, or characters. |

**Defaults** This function is disabled by default.

**Command**

**Mode** Interface configuration mode

**Usage Guide** If this command is not configured, the device will send a particular group query message upon receiving the leaving message from the interface. When the host response is timeout, the device stops forwarding packets to this interface. The length of timeout depends on the query interval of the last member and IGMP robustness variable. The default value is 2s.

If this command is configured, the device does not send a particular group query message upon receiving the leaving message from the interface. Instead, it directly removes this interface from the IGMP buffer and notifies the IGMP protocol. This will shorten the time significantly.

**Configuration Examples** The following example provides the immediate leaving function for some multicast groups. Certainly, you must make sure each interface of these multicast groups have one group member only.

```
Ruijie# configure terminal
Ruijie(config)# access-list 1 permit 225.192.20.0 0.0.0.255
Ruijie(config)# interface ethernet 0/1
Ruijie(config-if-Ethernet 0/1)# ip igmp immediate-leave group-list 1
Ruijie(config-if-Ethernet 0/1)# exit
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A



**Description**

### 3.7 ip igmp join-group

Use this command to configure the interface of the switch with host activities and adds it to a multicast group, so that the sub-switch can learn the corresponding group information. You can use this command to add an interface to a group.

Use the **no** or **default** form of this command to restore the default setting.

**ip igmp join-group** *group-address*

**no ip igmp join-group** *group-address*

**default ip igmp join-group** *group-address*

| Parameter Description | Parameter            | Description                |
|-----------------------|----------------------|----------------------------|
|                       | <i>group-address</i> | Multicast group IP address |

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** This command enables the host activities for the IGMP interface. When the host function is enabled, the interface can initiate the report message and respond to the query message. If the IGMP function is enabled on the interface, the interface can initiate the report message, so that the interface can learn the configured group members. You can use this command to add an interface to a group.

**Configuration Examples** The following example adds a host group member manually.

```
Ruijie# configure terminal
Ruijie(config)# interface fast 0/1
Ruijie(config-if-Ethernet 0/1)# ip igmp join-group 233.3.3.3
Ruijie(config-if-Ethernet 0/1)# exit
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

### 3.8 ip igmp last-member-query-count

Use this command to configure the value of **last-member-query-count**.

Use the **no** or **default** form of this command to restore the default setting.

**ip igmp last-member-query-count** *number*

**no ip igmp last-member-query-count**

**default ip igmp last-member-query-count**

| Parameter Description | Parameter     | Description                                                    |
|-----------------------|---------------|----------------------------------------------------------------|
|                       | <i>number</i> | Value of the last member query count in the range from 2 to 7. |

**Defaults** The default is 2.

**Command Mode** Interface configuration mode

**Usage Guide** This command only supports IGMPv2 and IGMPv3.  
 When the interface of the device receives an IGMPv2 group leaving message, the device waits for duration of query interval multiplying **last-member-query-count** time. The device will delete information about this group member if no group member report is received within the waiting time.  
 The waiting time = last-member-query-interval \* last-member-query-count + 1/2 \* query-max-response-time

**Configuration Examples** The following example sets the value of last member query count to 3.

```
Ruijie# configure terminal
Ruijie(config)# interface ethernet 0
Ruijie(config-if-Ethernet 0/1)# ip igmp last-member-query-count 3
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

### 3.9 ip igmp last-member-query-interval

Use this command to set the time interval of sending the group query message.

Use the **no** or **default** form of this command to restore the default setting.

**ip igmp last-member-query-interval** *interval*

**no ip igmp last-member-query-interval**

**default ip igmp last-member-query-interval**

| Parameter Description | Parameter       | Description                                                         |
|-----------------------|-----------------|---------------------------------------------------------------------|
|                       | <i>interval</i> | The interval sending the group query message in the range from 1 to |

|  |                                |
|--|--------------------------------|
|  | 255 in the unit of 0.1 second. |
|--|--------------------------------|

**Defaults** The default is 10 (1 second).

**Command Mode** Interface configuration mode

**Usage Guide** This command only supports IGMPv2 and IGMPv3.  
 When the interface of the device receives an IGMPv2 group leaving message, the device waits for duration of query interval multiplying **last-member-query-count** time. The device will delete information about this group member if no group member report is received within the waiting time.  
 The waiting time = last-member-query-interval \* last-member-query-count + 1/2 \* query-max-response-time

**Configuration** The following example sets the interval of sending the group query message to 20 seconds.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# interface eth 0
Ruijie(config-if-Ethernet 0/1)# ip igmp last-member-query-interval 200
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

### 3.10 ip igmp limit

Use this command to globally set the maximum number of IGMP group records.

Use the **no** or **default** form of this command to restore the default setting.

**ip igmp limit** *number* [ **except** *access-list* ]

**no ip igmp limit**

**default ip igmp limit**

| Parameter Description | Parameter                        | Description                                                                            |
|-----------------------|----------------------------------|----------------------------------------------------------------------------------------|
|                       | <i>number</i>                    | Maximum number of IGMP states, depending on devices                                    |
|                       | <b>except</b> <i>access-list</i> | Name of access control list in the range from 1 to 199, 1,300 to 2,699, or characters. |

**Defaults** Global: 65,536  
 Interface:1,0124

**Command** Global configuration mode/Interface configuration mode

**Mode**

**Usage Guide** Use this command to configure the maximum number of IGMP group records globally or on interfaces. The messages of the members exceeding the threshold will not be saved in the IGMP buffer and will not be forwarded. The messages of the members will be ignored if they exceed the interface or global configuration. If the configured value in global configuration mode is less than that in interface configuration mode, take the former.

**Configuration Examples** The following example sets the maximum number to 400 globally and to 300 on interfaces except ACL 1.

```
Ruijie# configure terminal
Ruijie(config)# ip igmp limit 400 except acl1
Ruijie(config)# interface eth 0/1
Ruijie(config-if-Ethernet 0/1)# ip igmp limit 300 except acl1
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

### 3.11 ip igmp mroute-proxy

Use this command to configure an interface as an mroute-proxy interface that can transmit messages to its uplink ports.

Use the **no** or **default** form of this command to restore the default setting.

**ip igmp mroute-proxy** *interface-type interface-number*

**no ip igmp mroute-proxy**

**default ip igmp mroute-proxy**

**Parameter Description**

| Parameter               | Description                           |
|-------------------------|---------------------------------------|
| <i>interface-type</i>   | Name of the relevant uplink interface |
| <i>interface-number</i> |                                       |

**Defaults** This function is disabled by default.

**Command** Interface configuration mode

**Mode**

**Usage Guide** Use the **ip igmp proxy-service** command to set the uplink interface as the **proxy-service** interface. Use the **ip igmp mroute-proxy** command to set the downlink interface as the **mroute-proxy** interface.

IGMP query packets are forwarded from the **proxy-service** interface to the **mroute-proxy** interface. IGMP report packets are forward reversely.

**Configuration** The following example configures E0/1 as **proxy-service** E0/2 as **mroute-proxy**.

**Examples**

```
Ruijie(config)# interface eth 0/1
Ruijie(config-if-Ethernet 0/1)# ip igmp proxy-service
Ruijie(config-if-Ethernet 0/1)# exit
Ruijie(config)# interface eth 0/2
Ruijie(config-if-Ethernet 0/2)# ip igmp mroute-proxy
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform**

N/A

**Description**

## 3.12 ip igmp proxy-service

Use this command to enable the service function of all downlink **mroute-proxy** ports.

If you run this command on an interface, the interface becomes the uplink port of the corresponding **mroute-proxy** that associates its downlink ports and maintains the group information reported by the downlink ports.

Use the **no** or **default** form of this command to restore the default setting.

**ip igmp proxy-service**

**no ip igmp proxy-service**

**default ip igmp proxy-service**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults**

N/A

**Command Mode**

Interface configuration mode

**Usage Guide**

Use the **ip igmp proxy-service** command to set the uplink interface as the **proxy-service** interface. Use the **ip igmp mroute-proxy** command to set the downlink interface as the **mroute-proxy** interface.

The command can configure at most 32 proxy-service ports. The number of interface with IGMP Proxy enabled is limited by the supported multicast interface number. When receiving a query message, the **proxy-service** port responds according to the IGMP group member information maintained by the port itself. The member information maintained by the **proxy-service** port is

collected from the interface configured with **mroute-proxy**. Therefore, if a port is configured with proxy-service, the port performs the host activities, but not the device activities.

If **switch port** operation is performed on an interface with proxy-service command configured, the **ip igmp mroute-proxy interface** command configured on the associated downlink ports is automatically deleted.

**Configuration** The following example configures E0/1 as **proxy-service** and E0/2 as **mroute-proxy**.

**Examples**

```
Ruijie(config)# interface eth 0/1
Ruijie(config-if-Ethernet 0/1)# ip igmp proxy-service
Ruijie(config-if-Ethernet 0/1)# exit
Ruijie(config)# interface eth 0/2
Ruijie(config-if-Ethernet 0/2)# ip igmp mroute-proxy
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform**

N/A

**Description**

### 3.13 ip igmp query-interval

Use this command to configure the query interval of an ordinary member.

Use the **no** or **default** form of this command to restore the default setting.

**ip igmp query-interval** *seconds*

**no ip igmp query-interval**

**default ip igmp query-interval**

**Parameter Description**

| Parameter      | Description                                                                                 |
|----------------|---------------------------------------------------------------------------------------------|
| <i>seconds</i> | Query interval of ordinary member, in the range is from 1 to 18,000 in the unit of seconds. |

**Defaults**

The default is 125 seconds.

**Command Mode**

Interface configuration mode

**Usage Guide**

**Configuration Examples** The following example configures the query interval of ordinary member to 120 seconds on the interface Ethernet 0.

```
Ruijie(config-if)# ip igmp query-interval 120
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

### 3.14 ip igmp query-max-response-time

Use this command to configure the maximum response interval.

Use the **no** or **default** form of this command to restore the default setting.

**ip igmp query-max-response-time** *seconds*

**no ip igmp query-max-response-time**

**default ip igmp query-max-response-time**

| Parameter Description | Parameter | Description    |
|-----------------------|-----------|----------------|
|                       |           | <i>seconds</i> |

**Defaults** The default is 10 seconds.

**Command Mode** Interface configuration mode

**Usage Guide** This command controls the interval for the respondent to respond the query message before the device deletes the group information.

**Configuration Examples** The following example configures the maximum response interval to 20 seconds on the interface Ethernet 0.

```
Ruijie(config-if-Ethernet 0/1)# ip igmp query-max-response-time 20
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

### 3.15 ip igmp query-timeout

Use this command to configure the time the device waits before it takes over as the querier.

Use the **no** or **default** form of this command to restore the default setting.

**ip igmp query-timeout** *seconds*  
**no ip igmp query-timeout**  
**default ip igmp query-timeout**

| Parameter Description | Parameter      | Description                                                                                                    |
|-----------------------|----------------|----------------------------------------------------------------------------------------------------------------|
|                       | <i>seconds</i> | Time the device waits before it takes over as the querier, in the range from 60 to 300 in the unit of seconds. |

**Defaults** The default is 255 seconds.

**Command Mode** Interface configuration mode

**Usage Guide** This device becomes the querier if no query packet is received in this duration.

**Configuration Examples** The following example configures the time the device waits before it takes over as the querier to 200 s seconds on the interface Ethernet 0/1.

```
Ruijie(config)# interface ethernet 0/1
Ruijie(config-if-Ethernet 0/1)# ip igmp query-timeout 200
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

### 3.16 ip igmp robustness-variable

Use this command to change the value of the robustness variable.

Use the **no** or **default** form of this command to restore the default setting.

**ip igmp robustness-variable** *number*  
**no ip igmp robustness-variable**  
**default ip igmp robustness-variable**

| Parameter Description | Parameter     | Description                                                |
|-----------------------|---------------|------------------------------------------------------------|
|                       | <i>number</i> | The value of robustness variable, in the range from 2 to 7 |

**Defaults** The default is 2.

**Command** Interface configuration mode



**Mode**

**Usage Guide** N/A

**Configuration** The following example sets the value of robustness variable to 3.

**Examples**

```
Ruijie(config)# interface ethernet 0/1
Ruijie(config-if-Ethernet 0/1)# ip igmp robustness-variable 3
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

### 3.17 ip igmp send-router-alert

Use this command to send IGMP report packets with the Router Alert option.

Use the **no** or **default** form of this command to restore the default setting.

**ip igmp send-router-alert**

**no ip igmp send -router-alert**

**default ip igmp send -router-alert**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| -         | -           |

**Defaults** The Router Alert option is not carried in IGMP packets by default.

**Command** Global configuration mode

**Mode**

**Usage Guide** N.A

**Configuration** The following example sends IGMP report packets with the Router Alert option.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# ip igmp send-router-alert
```

**Platform** N/A

**Description**

### 3.18 ip igmp ssm-map enable

Use this command to enable the **igmp ssm-map** function in the global configuration mode.

Use the **no** form of this command to restore the default setting.

**ip igmp ssm-map enable**

**no ip igmp ssm-map enable**

**default ip igmp ssm-map enable**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | -         | -           |

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** If this command is configured, the dynamically learned group information is added forcibly to the associated source record. This command is usually used together with the **ip igmp ssm-map static** command.

**Configuration Examples** The following example enables the **igmp ssm-map** function in the global configuration mode.

```
Ruijie(config)# ip igmp ssm-map enable
Ruijie(config)# ip igmp ssm-map static 11 192.168.2.2.
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

### 3.19 ip igmp ssm-map static

Use this command to map the static **ssm-map** source IP address to the group records.

Use the **no** or **default** form of this command to restore the default setting.

**ip igmp ssm-map static** *access-list source-address*

**no ip igmp ssm-map static** *access-list source-address*

**default ip igmp ssm-map enable** *access-list source-address*

| Parameter Description | Parameter          | Description                                                  |
|-----------------------|--------------------|--------------------------------------------------------------|
|                       | <i>access-list</i> | ACL name in the range 1 to 99, 1,300 to 1,999 or characters. |

|                       |                                             |
|-----------------------|---------------------------------------------|
| <i>source-address</i> | Unicast address mapped to the group record. |
|-----------------------|---------------------------------------------|

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** This command is used together with the **ip igmp ssm-map enable** and **ip igmp ssm-map static** command. After configuration, the port maps the corresponding source IP address to all received messages below **v3**.

**Configuration Examples** The following example maps the source address 192.168.2.2 to all group records permitted by ACL 11.

```
Ruijie(config)# ip igmp ssm-map enable
Ruijie(config)# ip igmp ssm-map static 11 192.168.2.2.
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 3.20 ip igmp static-group

Use this command to directly add an interface to a group.

Use the **no** or **default** form of this command to restore the default setting.

**ip igmp static-group** *group-address*

**no ip igmp static-group** *group-address*

**default ip igmp static-group** *group-address*

| Parameter Description | Parameter            | Description |
|-----------------------|----------------------|-------------|
|                       | <i>group-address</i> |             |

**Defaults** The switch is not added to a multicast group by default.

**Command Mode** Interface configuration mode

**Usage Guide** This command directly adds an interface to a multicast group. The difference from **join-group** is that it directly adds an interface to the group without interacting with a report message. You can use this command to add an interface to a group. The added interfaces by this command can only be deleted by using the **no ip igmp static-group**

command.

**Configuration** The following example adds a host group member.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# interface ethernet 0/1
Ruijie(config-if-Ethernet 0/1)# ip igmp static-group 236.6.6.6
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 3.21 ip igmp version

Use this command to set the version number of IGMP to be used on the interface.

Use the **no** or **default** form of this command to restore the default setting.

**ip igmp version { 1 | 2 | 3 }**

**no ip igmp version**

**default ip igmp version**

**Parameter  
Description**

| Parameter | Description |
|-----------|-------------|
| 1         | IGMP v1     |
| 2         | IGMP v2     |
| 3         | IGMP v3     |

**Defaults** The default is IGMPv2.

**Command  
Mode** Interface configuration mode

**Usage Guide** Use this command to globally configure the IGMP version. It should be noted that IGMP will reset after configuration.

**Configuration** The following example sets the version number to 3.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# interface ethernet 0/1
Ruijie(config-if-Ethernet 0/1)# ip igmp version 3
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 3.22 show ip igmp groups

Use this command to display the groups directly connected to the device and the group information learnt from IGMP.

**show ip igmp groups** [ *interface-type interface-number* ] [ *group-address* ] [ **detail** ]

| Parameter Description | Parameter               | Description                                                                                                                            |
|-----------------------|-------------------------|----------------------------------------------------------------------------------------------------------------------------------------|
|                       | <i>group-address</i>    | 32-bit multicast group IP address, namely Category D address. 8 bits are in one group in decimal form. Groups are separated with dots. |
|                       | <i>interface-type</i>   | Interface type                                                                                                                         |
|                       | <i>interface-number</i> | Interface number                                                                                                                       |
|                       | <b>detail</b>           | Displays the detailed information                                                                                                      |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** Use this command without any parameters to display group address, interface type, and information about all the multicast groups directly connected to the interface. Information about a specific group is displayed if a group address is added to the command.

**Configuration** The following example displays information about all the groups.

### Examples

```
Ruijie# show ip igmp groups
IGMP Connected Group Membership
Group Address  Interface  Uptime  Expires  Last Reporter
224.0.1.1     eth2      00:00:09  00:04:17  10.10.0.82
224.0.1.24    eth2      00:00:06  00:04:14  10.10.0.84
224.0.1.40    eth2      00:00:09  00:04:15  10.10.0.91
224.0.1.60    eth2      00:00:05  00:04:15  10.10.0.7
239.255.255.250 eth2      00:00:12  00:04:15  10.10.0.228
239.255.255.254 eth2      00:00:08  00:04:13  10.10.0.84
```

The following example displays detailed information about a specific group.

```
Ruijie# show ip igmp groups 224.1.1.1 detail
Interface      : eth1
Group: 224.1.1.1
Uptime: 00:00:42
Group mode: Include
Last reporter: 192.168.50.111
```

```
TIB-A Count: 2
TIB-B Count: 0
Group source list: (R - Remote, M - SSM Mapping)
Source Address Uptime v3 Exp Fwd Flags
192.168.55.55 00:00:42 00:03:38 Yes R
192.168.55.66 00:00:42 00:03:38 Yes R
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

### 3.23 show ip igmp interface

Use this command to display the information of this interface.

**show ip igmp interface** [ *interface-type interface-number* ]

**Parameter Description**

| Parameter               | Description       |
|-------------------------|-------------------|
| <i>interface-type</i>   | Interface type.   |
| <i>interface-number</i> | Interface number. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** Run this command without any parameter, and all interface information is displayed by default.

**Configuration Examples** The following example displays the information of all the interfaces.

```
Ruijie# show ip igmp interface
Interface vlan 1(Index 4294967295)
IGMP Active, Non-Querier, Version 3 (default)
IGMP querying router is 0.0.0.0
IGMP query interval is 125 seconds
IGMP querier timeout is 255 seconds
IGMP max query response time is 10 seconds
Last member query response interval is 1000 milliseconds
Group Membership interval is 260 seconds
```

**Related Commands**

| Command | Description |
|---------|-------------|
|---------|-------------|

|     |     |
|-----|-----|
| N/A | N/A |
|-----|-----|

**Platform** N/A  
**Description**

### 3.24 show ip igmp ssm-mapping

Use this command to display the **ssm-map** information of the IGMP configuration.

**show ip igmp ssm-mapping** [ *group-address* ]

| Parameter<br>Description | Parameter | Description          |
|--------------------------|-----------|----------------------|
|                          |           | <i>group-address</i> |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** Run this command without any parameter, and all SSM-MAP information is displayed.

**Configuration** The following example displays the **ssm-map** configuration information.

**Examples**

```
Ruijie#show ip igmp ssm-mapping 233.3.3.3
Group address: 233.3.3.3
Database      : Static
Source list   : 192.3.3.3
               : 3.3.3.3
```

| Related<br>Commands | Command | Description |
|---------------------|---------|-------------|
|                     |         | N/A         |

**Platform** N/A  
**Description**

## 4 MLD Commands

### 4.1 clear ipv6 mld group

Use this command to clear the dynamic group member learned by MLD protocol.

**clear ipv6 mld group** [ *group-address* ] [ *interface-type interface-number* ]

| Parameter Description | Parameter               | Description                                |
|-----------------------|-------------------------|--------------------------------------------|
|                       | <i>group-address</i>    | IPv6 multicast group address with 128 bits |
|                       | <i>interface-type</i>   | The associated interface type              |
|                       | <i>interface-number</i> | The associated interface number            |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** MLD maintains a list of the multicast groups to be added to the host in the directly-connected sub-net. Use the **clear ipv6 mld group** command to remove all dynamic group member record from the MLD group member list.

**Configuration** The following example clears all group records.

**Examples** Ruijie# `clear ipv6 mld group`

The following example clears one group record.

Ruijie# `clear ipv6 mld group ff1e::100`

The following example s clears the record on a specified interface.

Ruijie# `clear ipv6 mld group ff1e::100 interfa fa0/1`

| Related Commands | Command                        | Description |
|------------------|--------------------------------|-------------|
|                  | <b>show ipv6 mld groups</b>    | N/A         |
|                  | <b>show ipv6 mld interface</b> | N/A         |

**Platform** N/A

**Description**

### 4.2 clear ipv6 mld interface

Use this command to clear all MLD statistical information and the group member records on the interface.



**clear ipv6 mld interface** *interface-type interface-number*

| Parameter Description | Parameter               | Description        |
|-----------------------|-------------------------|--------------------|
|                       | <i>interface-type</i>   | The interface type |
|                       | <i>interface-number</i> | The interface ID   |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** Use this command to clear all group information and some packet statistical information learned by LDP on the interface. Those packet statistical information include the number of the received report packets, the number of the done packets and the the number of the group members on the interface.

**Configuration Examples** The following example clears all MLD statistical information and the group member records on the interface.

```
Ruijie# clear ipv6 mld interface fa 1/1
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

### 4.3 ipv6 mld access-group

Use this command to filter the specific requested group on the interface. Only the report packets in accordance with the corresponding ACL are allowed to be processed.

Use the **no** or **default** form of this command to restore the default setting.

**ipv6 mld access-group** *access-list*

**no ipv6 mld access-group**


**default ipv6 mld access-group**

| Parameter Description | Parameter          | Description       |
|-----------------------|--------------------|-------------------|
|                       | <i>access-list</i> | The IPv6 ACL name |

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** Use this command to filter some groups on the interface and associate with the corresponding ACLs. The correspondent ACL deny report packets will be discarded. This command supports the extended ACL and the source record information of the MLDv2 packets can be filtered.

 The multicast group access control command is associated with the extended ACL. When the received MLD report message is (S1,S2,S3...Sn,G), use this command to match and check the (0,G) message using the corresponding ACL. To this end, a (0,G) must be configured for the extended ACL to filter the (S1,S2,S3...Sn,G).

**Configuration Examples** The following example enables the group information carried in the report packets to be in accordance with acl for the normal handling on the interface Eth0/1.

```
Ruijie(config)#ipv6 access-list acl
Ruijie(config-ipv6-acl)#permit ipv6 ::/64 ff66::100/64
Ruijie(config-ipv6-acl)#permit ipv6 2222::3333/64 ff66::100/64
Ruijie(config)# interface ethernet 0/1
Ruijie(config-if-Ethernet 0/1-Ethernet 0/1)# ipv6 mld access-group acl
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 4.4 ipv6 mld immediate-leave group-list

Use this command to set the immediate-leave mechanism. With this command configured, the group within the range of group-list, will not send the query packet for the specific group and will remove this group from the group member list immediately after receiving the corresponding done packets. This function is used in the condition that there is only one multicast source that receives the host request on an interface. Use the **no** or **default** form of this command to restore the default setting.

**ipv6 mld immediate-leave group-list** *access-list*

**no ipv6 mld immediate-leave group-list**

**default ipv6 mld immediate-leave group-list**

**Parameter Description**

| Parameter          | Description       |
|--------------------|-------------------|
| <i>access-list</i> | The IPv6 ACL name |

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** Without this command configured, when the device receives the MLD leave packets, the request packets for the specific groups will be sent. If there is still no host reply within the response time, the device will remove the corresponding group record from the group member list. The timeout interval is determined by the last member query interval and the MLD robustness variable, and the default value is 2 seconds.

With this command configured, when the device receives the MLD leave packets, it will not send the request packets for the specific groups, but remove the group information immediately, which reduces the leave delay greatly in the condition that there is only one host connecting to the interface.

**Configuration** The following example configures the immediate-leave function.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)#ipv6 access-list acl
Ruijie(config-ipv6-acl)#permit ipv6 2222::3333/64 ff66::100/64
Ruijie(config)# interface ethernet 0/1
Ruijie(config-if-Ethernet 0/1-Ethernet 0/1)# ipv6 mld immediate-leave
group-list acl
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 4.5 ipv6 mld join-group

Use this command to configure the host action for the switch interface and add the related multicast group to the interface.

Use the **no** or **default** form of this command to restore the default setting.

**ipv6 mld join-group** *group-address*

**no ipv6 mld join-group** *group-address*

**default ipv6 mld join-group** *group-address*

**Parameter  
Description**

| Parameter            | Description                                                                                         |
|----------------------|-----------------------------------------------------------------------------------------------------|
| <i>group-address</i> | The IPv6 non-management multicast group address, which cannot start with 0xFF*1, 0xFF*2, and 0xFF3* |

**Defaults** The interface is not added to any group by default.

**Command  
Mode** Interface configuration mode

**Usage Guide** Use this command to enable the MLD host action on the interface. The interface can not only send the packets initiatively, but also reply to the query packets.  
Use this command if it is necessary to join a group member to the interface.

**Configuration** The following example adds the host group member:

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# interface ethernet 0/1
Ruijie(config-if-Ethernet 0/1-Ethernet 0/1)# ipv6 mld join-group ff55::100
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 4.6 ipv6 mld last-member-query-count

Use this command to set the last-member-query-count number.

Use the **no** or **default** form of this command to restore the default setting.

**ipv6 mld last-member-query-count** *number*

**no ipv6 mld last-member-query-count**

**default ipv6 mld last-member-query-count**

**Parameter Description**

| Parameter     | Description                                                    |
|---------------|----------------------------------------------------------------|
| <i>number</i> | The last member query count number. The valid range is 2 to 7. |

**Defaults** The default is 2.

**Command Mode** Interface configuration mode

**Usage Guide** With the MLD leave packets received on the interface, if there is no group reply within the timeout interval, this group will be removed from the MLD group member list on the interface. The timeout interval is the query interval for the specific group (multiplied by the value of **mld last-member-query-count**) plus half the reply time.

**Configuration** The following example sets the last-member-query-count number to 3.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# interface ethernet 0/1
Ruijie(config-if-Ethernet 0/1)# ipv6 mld last-member-query-count 3
```

**Related**

| Command | Description |
|---------|-------------|
|---------|-------------|

|                 |     |     |
|-----------------|-----|-----|
| <b>Commands</b> |     |     |
|                 | N/A | N/A |

**Platform** N/A

**Description**

## 4.7 ipv6 mld last-member-query-interval

Use this command to set the time interval of sending the query packets to the specific group.

Use the **no** or **default** form of this command to restore the default setting.

**ipv6 mld last-member-query-interval** *interval*

**no ipv6 mld last-member-query-interval**

**default ipv6 mld last-member-query-interval**

| <b>Parameter Description</b> | Parameter       | Description                                          |
|------------------------------|-----------------|------------------------------------------------------|
|                              | <i>interval</i> | The valid range is 1-255 in the unit of 0.1 seconds. |

**Defaults** The default is 10 seconds.

**Command** Interface configuration mode

**Mode**

**Usage Guide** With the MLD leave packets received on the interface, if there is no group reply within the timeout interval, this group will be removed from the MLD group member list on the interface. The timeout interval is the query interval for the specific group(multiplied by the value of **mld last-member-query-count**) plus half the reply time.

**Configuration** The following example sets the mld last-member-query-interval to 2 seconds.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# interface ethernet 0/1
Ruijie(config-if-Ethernet 0/1)# ipv6 mld last-member-query-interval 20
```

| <b>Related Commands</b> | Command | Description |
|-------------------------|---------|-------------|
|                         | N/A     | N/A         |

**Platform** N/A

**Description**

## 4.8 ipv6 mld limit

Use this command to enable to learn the max-number of the group member through the MLD

protocol.

Use the **no** or **default** form of this command to restore the default setting.

**ipv6 mld limit** *number* [ **except** *access-list* ]

**no ipv6 mld limit** *number* [ **except** *access-list* ]

**default ipv6 mld limit** *number* [ **except** *access-list* ]

| Parameter Description | Parameter                        | Description                                               |
|-----------------------|----------------------------------|-----------------------------------------------------------|
|                       | <i>number</i>                    | The maximum number of the group member learned by the MLD |
|                       | <b>except</b> <i>access-list</i> | (Optional) The ACL beyond the configured mld limit        |

**Defaults**  
Interface: 1,024  
Global: 65,536

**Command Mode**  
Interface configuration mode/Global configuration mode

**Usage Guide**  
Use this command to set the max-number of the group members learned through the MLD in the global configuration mode. If the group member number has exceeded the limit, the received report packets later will be discarded and fail to form the group record.  
If the except list has also been set at the same time, the group member packets, including the packets in the access-list, will be free from the member number limit.  
This command can also be used in the interface configuration mode. The configurations in two different configuration modes are independent. If the number limit in the global configuration mode is lower than the one in the interface configuration mode, the former configuration takes precedence.

**Configuration Examples**  
The following example sets the MLD limit to 400, but the configured ACL can still learn.

```
Ruijie(config-if)# ipv6 mld limit 300 except acl
Ruijie# configure terminal
Ruijie(config)# ipv6 mld limit 400 except acl1
Ruijie(config)# interface eth 0/1
Ruijie(config-if-Ethernet 0/1)# ipv6 mld limit 300 except acl1
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description**  
N/A

## 4.9 ipv6 mld mroute-proxy

Use this command to enable the interface to forward the packets to the correspondent connected interface.

Use the **no** or **default** form of this command to restore the default setting.

**ipv6 mld mroute-proxy** *interface-type interface-number*

**no ipv6 mld mroute-proxy**

**default ipv6 mld mroute-proxy**

| Parameter Description | Parameter                                        | Description                           |
|-----------------------|--------------------------------------------------|---------------------------------------|
|                       | <i>interface-type</i><br><i>interface-number</i> | The correspondent connected interface |

**Defaults** This function is disabled by default.

**Command** Interface configuration mode

**Mode**

**Usage Guide** Use the **ipv6 mld proxy-service** command to configure the uplink interface as **proxy-service** one. Use the **ipv6 mld mroute-proxy** command to configure the downlink interface as **mroute-proxy** one. After the connected interface has been configured as the proxy-service interface, it can forward the MLD packets sent from other members.

**Configuration** The following example sets the interface as the mroute-proxy interface and enables multicast proxy.

**Examples**

```
Ruijie(config)# interface eth 0/1
Ruijie(config-if-Ethernet 0/1)# ipv6 mld proxy-service
Ruijie(config-if-Ethernet 0/1)# exit
Ruijie(config)# interface eth 0/2
Ruijie(config-if-Ethernet 0/2)# ipv6 mld mroute-proxy eth 0/1
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 4.10 ipv6 mld proxy-service

Use this command to enable the proxy-service function for the interface connected with the mroute-proxy interface in the downward direction. After configuring this command, the interface becomes the one connected with the mroute-proxy in the upward direction, and associates with and maintains the group information from the interfaces in the downward direction. Use the **no** or **default** form of this command to disable the default setting.

**ipv6 mld proxy-service**

**no ipv6 mld proxy-service**

**default ipv6 mld proxy-service**

|                               |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |                    |
|-------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------|
| <b>Parameter Description</b>  | <b>Parameter</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | <b>Description</b> |
|                               | N/A                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | N/A                |
| <b>Defaults</b>               | N/A                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |                    |
| <b>Command Mode</b>           | Interface configuration mode                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |                    |
| <b>Usage Guide</b>            | <p>Use the <b>ipv6 mld proxy-service</b> command to configure the uplink interface as <b>proxy-service</b> one. Use the <b>ipv6 mld mroute-proxy</b> command to configure the downlink interface as <b>mroute-proxy</b> one. The configurable max-number limit is 32. The number of the interfaces with MLD Proxy enabled is limited by the number multicast interfaces supported device. After receiving the query packet, the proxy-service interface replies according to the member information, which are collected from the mroute-proxy interface and maintained by the proxy-service interface itself. With proxy-service configured, this interface owns the host action rather than the router action.</p> <p>The <b>ipv6 mld mroute-proxy interface</b> command configuration on the associated interface in the downward direction is removed automatically if the switchport operation is performed on the interfaces.</p> |                    |
| <b>Configuration Examples</b> | <p>The following example sets the interface proxy-service and enables multicast proxy.</p> <pre>Ruijie(config)# interface eth 0/1 Ruijie(config-if-Ethernet 0/1)# ipv6 mld proxy-service Ruijie(config-if-Ethernet 0/1)# exit Ruijie(config)# interface eth 0/2 Ruijie(config-if-Ethernet 0/1-Ethernet 0/2)# ipv6 mld mroute-proxy eth 0/1</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |                    |
| <b>Related Commands</b>       | <b>Command</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | <b>Description</b> |
|                               | N/A                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | N/A                |
| <b>Platform Description</b>   | N/A                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |                    |

## 4.11 ipv6 mld querier-timeout

Use this command to set the querier alive period.

Use the **no** or **default** form of this command to restore the default setting.

**ipv6 mld querier-timeout** *seconds*

**no ipv6 mld querier-timeout**

**default ipv6 mld querier-timeout**

|                  |                  |                    |
|------------------|------------------|--------------------|
| <b>Parameter</b> | <b>Parameter</b> | <b>Description</b> |
|------------------|------------------|--------------------|



|                    |                |                                                                               |
|--------------------|----------------|-------------------------------------------------------------------------------|
| <b>Description</b> |                |                                                                               |
|                    | <i>seconds</i> | The querier alive period, in the range from 60 to 300 in the unit of seconds. |

**Defaults** The default is 255 seconds.

**Command** Interface configuration mode

**Mode**

**Usage Guide** After the querier sends the query packet, the querier will wait to receive the query packet sent by another querier within the alive period. If no packet is received by the first querier within the alive period, then the first querier takes itself as the only querier on the network segment.

**Configuration** The following example sets the querier alive period to 200 seconds.

**Examples** Ruijie(config-if-Ethernet 0/1)# ipv6 mld querier-timeout 200

|                         |                |                    |
|-------------------------|----------------|--------------------|
| <b>Related Commands</b> | <b>Command</b> | <b>Description</b> |
|                         | N/A            | N/A                |

**Platform** N/A

**Description**

## 4.12 ipv6 mld query-interval

Use this command to set the query interval for the general member.

Use the **no** or **default** form of this command to restore the default setting.

**ipv6 mld query-interval** *seconds*

**no ipv6 mld query-interval**

**default ipv6 mld query-interval**

|                              |                  |                                                                                                  |
|------------------------------|------------------|--------------------------------------------------------------------------------------------------|
| <b>Parameter Description</b> | <b>Parameter</b> | <b>Description</b>                                                                               |
|                              | <i>seconds</i>   | The query interval for the general member, in the range from 1 to 18,000 in the unit of seconds. |

**Defaults** The default is 125 seconds.

**Command** Interface configuration mode

**Mode**

**Usage Guide**

**Configuration** The following example sets the query-interval for the general member on the interface Ethernet 0/1.

**Examples** `Ruijie(config-if-Ethernet 0/1)# ipv6 mld query-interval 120`

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 4.13 ipv6 mld query-max-response-time

Use this command to set the maximum response time.

Use the **no** or **default** form of this command to restore the default setting.

**ipv6 mld query-max-response-time** *seconds*

**no ipv6 mld query-max-response-time**

**default ipv6 mld query-max-response-time**

| Parameter Description | Parameter      | Description |
|-----------------------|----------------|-------------|
|                       | <i>seconds</i> |             |

**Defaults** The default is 10 seconds.

**Command Mode** Interface configuration mode

**Usage Guide** Use this command to control the maximum response time of the host after the device sends the query packets. If there is no response within the maximum response time, MLD will remove the corresponding group from the group member list.

**Configuration Examples** The following example sets the maximum query response time on the interface Ethernet 0/1.

**Examples** `Ruijie(config-if-Ethernet 0/1)# ipv6 mld query-max-response-time 20`

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 4.14 ipv6 mld robustness-variable

Use this command to set querier robustness value.

Use the **no** or **default** form of this command to restore the default setting.

**ipv6 mld robustness-variable** *number*

**no ipv6 mld robustness-variable**

**default ipv6 mld robustness-variable**

| Parameter Description | Parameter     | Description                                                  |
|-----------------------|---------------|--------------------------------------------------------------|
|                       | <i>number</i> | Sets the querier robustness value, in the range from 2 to 7. |

**Defaults** The default is 2.

**Command Mode** Interface configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example sets the querier robustness value to 3.

```
Ruijie# configure terminal
Ruijie(config)# interface ethernet 0/1
Ruijie(config-if-Ethernet 0/1)# ipv6 mld robustness-variable 3
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 4.15 ipv6 mld ssm-map enable

Use this command to enable the mld ssm-map function.

Use the **no** or **default** form of this command to restore the default setting.

**ipv6 mld ssm-map enable**

**no ipv6 mld ssm-map enable**

**default ipv6 mld ssm-map enable**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

- Defaults** This function is disabled by default.
- Command** Global configuration mode
- Mode**
- Usage Guide** With this command configured, the group information dynamically learned will be added to the related source record forcibly. Usually, this command is set with the **ipv6 mld ssm-map static** command.

**Configuration** The following example enables the mld ssm-map function in the global configuration mode.

**Examples**

```
Ruijie(config)# ipv6 mld ssm-map enable
Ruijie(config)# ipv6 mld ssm-map static 11 4444::1234
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 4.16 ipv6 mld ssm-map static

Use this command to set the mld ssm-map static mapping source record in the global configuration mode.

Use the **no** or **default** form of this command to restore the default setting.

**ipv6 mld ssm-map static** *access-list source-address*

**no ipv6 mld ssm-map static** *access-list source-address*

**default ipv6 mld ssm-map static** *access-list source-address*

**Parameter Description**

| Parameter             | Description                                            |
|-----------------------|--------------------------------------------------------|
| <i>access-list</i>    | Sets the IPv6 ACL name.                                |
| <i>source-address</i> | Sets the unicast address for the group record mapping. |

- Defaults** There is no mapping source address by default.
- Command** Global configuration mode
- Mode**
- Usage Guide** This command is used with the **ipv6 mld ssm-map enable** command. With this command configured, the received mldv1 packets are mapped to the correspondent source record.
- Configuration** The following example maps all group record of the ACL name to the source address 4444::1234.

**Examples**

```
Ruijie(config)# ipv6 mld ssm-map enable
Ruijie(config)# ipv6 mld ssm-map static te 4444::1234
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 4.17 ipv6 mld static-group

Use this command to add an interface to a group statically.

Use the **no** or **default** form of this command to restore the default setting.

**ipv6 mld static-group** *group-address*

**no ipv6 mld static-group** *group-address*

**default ipv6 mld static-group** *group-address*

| Parameter Description | Parameter | Description          |
|-----------------------|-----------|----------------------|
|                       |           | <i>group-address</i> |

**Defaults** The interface is not added to any group statically.

**Command** Interface configuration mode  
**Mode**

**Usage Guide** Use this command to add a multicast group to the interface directly. The difference from the join-group is that the packet interaction is not necessary.

Use this command when it is necessary to add a group member to the interface. It is worth mentioning that only the **no ipv6 mld static-group** command can be used to delete the group, but not the **clear** command.

**Configuration** The following example adds interface Eth0/1 to group ff55::3 statically.

### Examples

```
Ruijie# configure terminal
Ruijie(config)# interface ethernet 0/1
Ruijie(config-if-Ethernet 0/1)# ipv6 mld static-group ff55::3
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 4.18 ipv6 mld version

Use this command to set the MLD version number on the interface.

Use the **no** or **default** form of this command to restore the default setting.

**ipv6 mld version** { 1 | 2 }

**no ipv6 mld version**

**default ipv6 mld version**

| Parameter Description | Parameter | Description                  |
|-----------------------|-----------|------------------------------|
|                       | { 1   2 } | Sets the MLD version number. |

**Defaults** The default is 2.

**Command Mode** Interface configuration mode

**Usage Guide** Use this command to control the MLD version number.

**Configuration Examples** The following example sets the MLD version 1.

### Examples

```
Ruijie# configure terminal
Ruijie(config)# interface ethernet 0/1
Ruijie(config-if-Ethernet 0/1)# ipv6 mld version 1
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 4.19 show ipv6 mld groups

Use this command to display the group connected with the switch and the group information learned from the MLD.

**show ipv6 mld groups** [ *group-address* | *interface-type interface-number* ] [ **detail** ]

| Parameter Description | Parameter               | Description                                        |
|-----------------------|-------------------------|----------------------------------------------------|
|                       | <i>group-address</i>    | Sets the IPv6 multicast group address in 128 bits. |
|                       | <i>interface-type</i>   | Sets the interface type.                           |
|                       | <i>interface-number</i> | Sets the interface number.                         |
|                       | <b>detail</b>           | Displays the information in detail.                |

|  |                                     |
|--|-------------------------------------|
|  | Displays all the group information. |
|--|-------------------------------------|

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Interface configuration mode

**Usage Guide** Use this command without the parameters to display the information including the group address, the interface type and the multicast group information. Use this command with a parameter to display the information on a specific group.

**Configuration** The following example displays all group information.

**Examples**

```
Ruijie# show ipv6 mld groups
MLD Connected Group Membership
Group Address Interface Uptime Expires Last Reporter
ff66::1 VLAN1 00:10:57 00:02:16 fe80::2d0:f8ff:fe22:3378
```

The following example displays the detailed information.

```
Ruijie# show ipv6 mld groups detail
Interface:      VLAN 1
Group:          ff66::1
Uptime:         00:10:26
Group mode:     Exclude (Expires: 00:02:47)
Last reporter:  fe80::2d0:f8ff:fe22:3378
Source list is empty
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A

## 4.20 show ipv6 mld interface

Use this command to display the configurations on the interface.

**show ipv6 mld interface** [ interface-type interface-number ]

**Parameter Description**

| Parameter               | Description                |
|-------------------------|----------------------------|
| <i>interface-type</i>   | Sets the interface type.   |
| <i>interface-number</i> | Sets the interface number. |

**Defaults** N/A

**Command** User EXEC mode/Privileged EXEC mode  
**Mode**

**Usage Guide** N/A

**Configuration** The following example displays the state information of all interfaces.

**Examples**

```
Ruijie# show ipv6 mld interface
Interface VLAN 2 (Index 4098)
  MLD Enabled, Inactive, Version 2 (default)
  MLD interface limit is 1024
  MLD interface has 0 group-record states
  MLD interface has 1 join-group records
  MLD interface has 0 static-group records
  MLD activity: 0 joins, 0 leaves
  MLD query interval is 125 seconds
  MLD querier timeout is 255 seconds
  MLD max query response time is 10 seconds
  Last member query response interval is 10 (1/10s)
  Last member query count is 2
  Group Membership interval is 260
  Robustness Variable is 2
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 4.21 show ipv6 mld ssm-mapping

Use this command to display the mapping information of the source address for the group record.

**show ipv6 mld ssm-mapping** [ *group-address* ]

**Parameter  
Description**

| Parameter            | Description                 |
|----------------------|-----------------------------|
| <i>group-address</i> | Displays the group address. |

**Defaults** N/A

**Command** User EXEC mode/Privileged EXEC mode  
**Mode**

**Usage Guide** N/A



**Configuration** The following example displays the state information of all interfaces.

**Examples**

```
Ruijie# show ipv6 mld interface
Interface VLAN 2 (Index 4098)
  MLD Enabled, Inactive, Version 2 (default)
  MLD interface limit is 1024
  MLD interface has 0 group-record states
  MLD interface has 1 join-group records
  MLD interface has 0 static-group records
  MLD activity: 0 joins, 0 leaves
  MLD query interval is 125 seconds
  MLD querier timeout is 255 seconds
  MLD max query response time is 10 seconds
  Last member query response interval is 10 (1/10s)
  Last member query count is 2
  Group Membership interval is 260
  Robustness Variable is 2
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

## 5 PIM-DM Commands

### 5.1 clear ip pim dense-mode track

Use this command to clear the statistics of PIM-DM packets.

**clear ip pim dense-mode track**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** This command is used to reconfigure the start time of the statistics and clear the PIM packet counter.

**Configuration Examples** The following example clears the statistics of PIM-DM packets.

```
Ruijie# clear ip pim dense-mode track
```

| Related Commands | Command                             | Description                                 |
|------------------|-------------------------------------|---------------------------------------------|
|                  | <b>show ip pim dense-mode track</b> | Displays the statistics of the PIM packets. |

**Platform** N/A

**Description**

### 5.2 ip pim dense-mode

Use this command to enable PIM-DM on the interface.

Use the **no** or **default** form of this command to restore the default setting.

**ip pim dense-mode**

**no ip pim dense-mode**

**default ip pim dense-mode**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode

### Usage Guide

- i Before enabling the PIM-DM, enable the multicast forwarding function in the global configuration mode. Otherwise, the multicast data packet cannot be forwarded even the PIM-DM is enabled.
- i Once the PIM-DM is enabled, the IGMP is enabled automatically on the interface without manual configuration.
- i During the execution of this command, if the prompt "Failed to enable PIM-DM on <Interface Name>, resource temporarily unavailable, please try again" appears, re-execute this command.
- i During the execution of this command, if the prompt "PIM-DM Configure failed! VIF limit exceeded in NSM!!!" appears; it indicates the allowed configured multicast interface number exceeds the upper limit of the multicast interfaces. In this case, if it's still necessary to enable the PIM-DM on the interface, delete the unnecessary PIM-DM, PIM-SM or DVMRP interfaces.
- i It is not recommended to configure different IPv4 multicast routing protocols on different interfaces of a device.

**Configuration** The following example enables PIM-DM on the interface.

### Examples

```
Ruijie# configure terminal
Ruijie(config)# interface fastethernet 0/1
Ruijie(config-if)# ip pim dense-mode
```

### Related Commands

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 5.3 ip pim dense-mode passive

Use this command to enable PIM-DM PASSIVE.

Use the **no** or **default** form of this command to restore the default setting.

**ip pim dense-mode passive**

**no ip pim dense-mode passive**

**default ip pim dense-mode passive**

### Parameter Description

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

- Defaults** PIM-DM PASSIVE is disabled by default.
- Command** Interface configuration mode
- Mode**
- Usage Guide** Please configure multicast route forwarding in global configuration mode before enabling PIM-DM PASSIVE.
- When PIM-DM PASSIVE is enabled, IGMP is enabled on each interface automatically.
- Enabled with PIM-DM PASSIVE, the interface neither receives nor sends PIM packets. Instead, it forwards multicast packets. PIM-DM PASSIVE is generally configured on the device of the stub area, so as to avoid floods of PIM hello packets.

**Configuration** The following example enables PIM-DM PASSIVE on interface fastethernet 0/1.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# interface fastethernet 0/1
Ruijie(config-if)# ip pim dense-mode passive
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 5.4 ip pim dense-mode subvlan

Use this command to enable PIM-DM on the Super VLAN interface. Use the **no** or **default** form of this command is to restore the default setting.

**ip pim dense-mode subvlan [ all | vid ]**

**no ip pim dense-mode subvlan**

**default ip pim dense-mode subvlan**

| Parameter          | Parameter  | Description                              |
|--------------------|------------|------------------------------------------|
| <b>Description</b> | <b>all</b> | Sends PIM packets to all sub VLANs.      |
|                    | <i>vid</i> | Sends PIM packets to the specified VLAN. |

**Defaults** PIM-DM is disabled on the Super VLAN interface by default.

**Command** Interface configuration mode

**Mode**

**Usage Guide** In general, a super VLAN includes many sub VLANs. If the PIM-DM protocol is enabled on the interfaces of the super VLAN, PIM-DM multicast packets will be replicated and sent to all sub VLANs. As a result, the traffic may exceed the device capability, causing protocol flapping. The Super VLAN

interface is disabled with PIM-DM generally. Use this command to enable PIM-DM on the Super VLAN interface to send PIM packets to all sub VLANs or the specified sub VLAN.

**Configuration Examples** The following example enables PIM-DM on the Super VLAN interface and sends PIM packets to sub VLAN 200.

```
Ruijie# configure terminal
Ruijie(config)# interface vlan 100
Ruijie(config-if-vlan 100)# ip pim dense-mode subvlan 200
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A

## 5.5 ip pim neighbor-filter

Use this command to enable the neighbor filtering on the interface. Use the **no** or **default** form of this command is to restore the default setting.

**ip pim neighbor-filter** *access-list*

**no ip pim neighbor-filter** *access-list*

**default ip pim neighbor-filter** *access-list*

**Parameter Description**

| Parameter          | Description                                                                         |
|--------------------|-------------------------------------------------------------------------------------|
| <i>access-list</i> | Access control list supporting numerical ACL in the range from 1 to 99 and name ACL |

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** If the neighbor filtering is set, PIM-DM will not establish the peering relationship with this neighbor or will terminate the established peering relationship with this neighbor once the neighbor is denied by the filtering access list.

**Configuration Examples** The following example enables the neighbor filtering on the interface.

```
Ruijie# configure terminal
Ruijie(config)# interface fastethernet 0/1
Ruijie(config-if)# ip pim neighbor-filter 14
```

**Related**

| Command | Description |
|---------|-------------|
|---------|-------------|

|                 |     |     |
|-----------------|-----|-----|
| <b>Commands</b> |     |     |
|                 | N/A | N/A |

**Platform** N/A

**Description**

## 5.6 ip pim override-interval

Use this command to reconfigure the override-interval of the hello message.

Use the **no** or **default** form of this command to restore the default setting.

**ip pim override-interval** *interval-milliseconds*

**no ip pim override-interval**

**default ip pim override-interval**

|                              |                              |                                                           |
|------------------------------|------------------------------|-----------------------------------------------------------|
| <b>Parameter Description</b> | <b>Parameter</b>             | <b>Description</b>                                        |
|                              | <i>interval-milliseconds</i> | In the range from 1 to 65,535 in the unit of milliseconds |

**Defaults** The default is 2,500 milliseconds.

**Command** Interface configuration mode

**Mode**

**Usage Guide** Configuring the override-interval is to set the pruning veto time for the interface.

**Configuration** The following example sets the override-interval to 3,000 milliseconds.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# interface fastethernet 0/1
Ruijie(config-if)# ip pim override-interval 3000
```

|                         |                |                    |
|-------------------------|----------------|--------------------|
| <b>Related Commands</b> | <b>Command</b> | <b>Description</b> |
|                         | N/A            | N/A                |

**Platform** N/A

**Description**

## 5.7 ip pim propagation-delay

Use this command to reconfigure the propagation-interval of the hello message.

Use the **no** or **default** form of this command to restore the default setting.

**ip pim propagation-delay** *interval-milliseconds*

**no ip pim propagation-delay**

**default ip pim propagation-delay**

| Parameter Description | Parameter                    | Description                                                                                         |
|-----------------------|------------------------------|-----------------------------------------------------------------------------------------------------|
|                       | <i>interval-milliseconds</i> | Propagation-interval of the hello message in the range from 1 to 32,767 in the unit of milliseconds |

**Defaults** The default is 500 milliseconds.

**Command Mode** Interface configuration mode

**Usage Guide** Configuring the propagation-delay is to set the transmission delay time for the interface.

**Configuration Examples** The following example sets the propagation-delay to 600 milliseconds.

```
Ruijie# configure terminal
Ruijie(config)# interface fastethernet 0/1
Ruijie(config-if)# ip pim propagation-delay 600
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 5.8 ip pim query-interval

Use this command to reconfigure the interval of sending the hello message.

Use the **no** or **default** form of this command to restore the default setting.

**ip pim query-interval** *interval-seconds*

**no ip pim query-interval**

**default ip pim query-interval**

| Parameter Description | Parameter               | Description                                                                                |
|-----------------------|-------------------------|--------------------------------------------------------------------------------------------|
|                       | <i>interval-seconds</i> | Interval of sending the hello message in the range from 1 to 65,535 in the unit of seconds |

**Defaults** The default is 30 seconds.

**Command Mode** Interface configuration mode

**Usage Guide** If hello interval is set, the hello holdtime value will be updated to 3.5 times of hello interval.

**Configuration** The following example sets the interval of sending the hello message to 123 seconds.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# interface fastethernet 0/1
Ruijie(config-if)# ip pim query-interval 123
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 5.9 ip pim state-refresh disable

Use this command to prohibit the interface from processing and forwarding the PIM-DM state refresh messages.

Use the **no** or **default** form of this command to restore the default setting.

**ip pim state-refresh disable**

**no ip pim state-refresh disable**

**default ip pim state-refresh disable**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** By default, the PIM-DM state refresh messages can be processed and forwarded.

**Command** Global configuration mode

**Mode**

**Usage Guide** When the state refresh function is disabled, the PIM-DM state refresh message is not processed and forwarded. The sent Hello message does not contain the status refresh option. Consequently, the SR Cap field will not be processed when the Hello message is received.

Generally, it is not recommended to disable the status refresh function because disabling this function may converge the PIM-DM multicast forwarding tree again that has been converged, resulting in unnecessary waste of bandwidth and oscillation of multicast routing table.

**Configuration** The following example disables the processing of the PIM-DM state refresh message.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# ip pim state-refresh disable
```

**Related**

| Command | Description |
|---------|-------------|
|---------|-------------|



|                 |     |     |
|-----------------|-----|-----|
| <b>Commands</b> |     |     |
|                 | N/A | N/A |

**Platform** N/A

**Description**

## 5.10 ip pim state-refresh origination-interval

Use this command to set the interval of sending the PIM-DM state refresh message. The interval is the seconds elapsed between two state refresh messages.

Use the **no** or **default** form of this command to restore the default setting.

**ip pim state-refresh origination-interval** *interval-seconds*

**no ip pim state-refresh origination-interval**

**default ip pim state-refresh origination-interval**

|                              |                         |                                                                                             |
|------------------------------|-------------------------|---------------------------------------------------------------------------------------------|
| <b>Parameter Description</b> | <b>Parameter</b>        | <b>Description</b>                                                                          |
|                              | <i>interval-seconds</i> | Interval of sending the PIM-DM update message in the range from 1 to 100 in unit of seconds |

**Defaults** The default is 60 seconds.

**Command** Interface configuration mode

**Mode**

**Usage Guide** N/A

**Configuration** The following example sets the interval of sending the PIM-DM state refresh message to 65 seconds.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# interface fastethernet 0/1
Ruijie(config-if)# ip pim state-refresh origination-interval 65
```

|                         |                |                    |
|-------------------------|----------------|--------------------|
| <b>Related Commands</b> | <b>Command</b> | <b>Description</b> |
|                         | N/A            | N/A                |

**Platform** N/A

**Description**

## 5.11 ip pim mib dense-mode

Use this command to switch the device from the PIM MIB sparse mode to the PIM MIB dense mode.

Use the **no** form or **default** form of this command to switch back to the PIM MIB sparse mode.

**ip pim mib dense-mode**  
**no ip pim mib dense-mode**  
**default ip pim mib dense-mode**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** The device is in the PIM MIB sparse mode by default.

**Command Mode** Global configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example switches the device from the PIM MIB sparse mode to the PIM MIB dense mode.

```
Ruijie# configure terminal
Ruijie(config)# ip pim mib dense-mode
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 5.12 show ip pim dense-mode interface

Use this command to display the information about the PIM-DM interface.

**show ip pim dense-mode interface** [ *interface-type interface-number* ] [ **detail** ]

| Parameter Description | Parameter                                        | Description                        |
|-----------------------|--------------------------------------------------|------------------------------------|
|                       | <i>interface-type</i><br><i>interface-number</i> | Interface type and interface ID    |
|                       | <b>detail</b>                                    | Displays details of the interface. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** N/A

**Configuration** The following example displays the information about the PIM-DM interface.

**Examples**

```
Ruijie# show ip pim dense-mode interface
Address  Interface  VIFIndex  Ver/Mode  Nbr
Mode Count
10.10.10.10 FastEthernet 0/45 3 v2/D 1
50.50.50.50 VLAN4 2 v2/D 1
```

| Field     | Description                                  |
|-----------|----------------------------------------------|
| Address   | Primary IP address of the PIM-DM interface   |
| Interface | Name of the PIM-DM interface                 |
| VIF Index | VIF ID (ID)                                  |
| Ver/Mode  | PIM version/mode                             |
| Nbr Count | Number of neighbors of the PIM-DM interface. |

**Related Commands**

| Command                                | Description                                                           |
|----------------------------------------|-----------------------------------------------------------------------|
| <b>show ip pim dense-mode neighbor</b> | Displays the information about the neighbors of the PIM-DM interface. |

**Platform** N/A

**Description**

## 5.13 show ip pim dense-mode mroute

Use this command to display the information about the PIM-DM routing table.

```
show ip pim dense-mode mroute [ group-or-source-address [ group-or-source-address ] ]
[ summary ]
```

**Parameter Description**

| Parameter                      | Description                                                                                                |
|--------------------------------|------------------------------------------------------------------------------------------------------------|
| <i>group-or-source-address</i> | Group address or source address                                                                            |
| <i>group-or-source-address</i> | Group address or source address. Two addresses cannot both be the group addresses or the source addresses. |
| <b>summary</b>                 | Displays the brief information of routing entries.                                                         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** N/A

**Configuration** The following example displays the information about the PIM-Dm routing table.

**Examples**

```
Ruijie# show ip pim dense-mode mroute
PIM-DM Multicast Routing Table
(1.1.1.111, 229.1.1.1)
MRT lifetime expires in 205 seconds
RPF Neighbor: 50.50.50.1, Nexthop:50.50.50.1,VLAN 4
Upstream IF: VLAN 4
Upstream State: Pruned, PLT:200
Assert State: NoInfo
Downstream IF List:
FastEthernet 0/45:
Downstream State: NoInfo
Assert State: Loser, AT:170
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 5.14 show ip pim dense-mode neighbor

Use this command to display the information about the PIM-DM neighbors.

**show ip pim dense-mode neighbor** [ *interface-type interface-number* ]

**Parameter  
Description**

| Parameter                                        | Description                     |
|--------------------------------------------------|---------------------------------|
| <i>interface-type</i><br><i>interface-number</i> | Interface type and interface ID |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** N/A

**Configuration** The following example displays the information about the PIM-DM neighbors.

**Examples**

```
Ruijie# show ip pim dense-mode neighbor
Neighbor-Address Interface      Uptime/Expires      Ver
10.10.10.1    FastEthernet 0/45 00:19:29/00:01:21  v2
50.50.50.1    VLAN 4          00:22:09/00:01:39  v2
```

Description of fields in the results:

| Field            | Description                                   |
|------------------|-----------------------------------------------|
| Neighbor-Address | IP address of the neighbor                    |
| Interface        | Name of the interface connecting the neighbor |
| Uptime/Expires   | Valid time and aging time of the entry        |
| Ver              | PIM version                                   |

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 5.15 show ip pim dense-mode nexthop

Use this command to display the information about the PIM-DM next hop.

**show ip pim dense-mode nexthop**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example displays the information about the PIM-Dm next hop:

```
Ruijie# show ip pim dense-mode nexthop
Destination  Nexthop  Nexthop  Nexthop  Metric  Pref
              Num      Addr      Interface
1.1.1.111    1        50.50.50.1  VLAN 4    0       1
```

| Field             | Description                             |
|-------------------|-----------------------------------------|
| Destination       | Multicast source IP address             |
| Nexthop Num       | Number of next hop                      |
| Nexthop Addr      | IP address of next hop                  |
| Nexthop interface | Interface connecting to the of next hop |
| Metric            | Route metric                            |
| Pref              | Route priority                          |

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 5.16 show ip pim dense-mode track

Use this command to display the statistics of the PIM-DM packets.

**show ip pim dense-mode track**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** This command is used to display the number of sent and received PIM packets during the period from the beginning of the statistics till now. When the system starts up, it sets the start time of the statistics. The start time of the statistics is reconfigured and the PIM packet counter is cleared on calling the clear ip pim dense-mode track every time.

**Configuration Examples** The following example displays the statistics of the PIM-DM packets.

```
Ruijie# show ip pim dense-mode track
          PIM packet counters
Elapsed time since counters cleared: 00:04:03
          received      sent
Valid PIMDM packets:      1          8
Hello:                    1          8
Join/Prune:                0          0
Graft:                     0          0
Graft-Ack:                 0          0
Assert:                    0          0
State-Refresh:            0          0
PIM-SM-Register:          0          0
PIM-SM-Register-Stop:     0          0
PIM-SM-BSM:               0          0
PIM-SM-C-RP-ADV:          0          0
Unknown Type:              0
Errors:
```

```
Malformed packets:      0
Bad checksums:          0
Unknown PIM version:    0
Send errors:            0
```

**Related  
Commands**

| Command                                  | Description                               |
|------------------------------------------|-------------------------------------------|
| <b>clear ip pim dense-mode<br/>track</b> | Clears the statistics of the PIM packets. |

**Platform  
Description**

N/A

## 6 PIM-SM Commands

### 6.1 clear ip pim sparse-mode bsr rp-set \*

Use this command to clear all the RP information learnt dynamically.

**clear ip pim sparse-mode bsr rp-set \***

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | -         | -           |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** All the RP information learnt dynamically can be cleared manually.

**Configuration Examples** The following example clears all the RP information learnt dynamically.

```
Ruijie# clear ip pim sparse-mode bsr rp-set *
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

### 6.2 clear ip pim sparse-mode track

Use this command to reconfigure the start time of the statistics and clear the PIMv6 packet counter.

**clear ip pim sparse-mode track**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | -         | -           |

**Defaults** N/A

**Command Mode** Privileged EXEC mode



**Usage Guide**

**Configuration** The following example clears the PIM packet counter.

**Examples**

```
Ruijie# clear ip pim sparse-mode track
```

**Related Commands**

| Command                              | Description                         |
|--------------------------------------|-------------------------------------|
| <b>show ip pim sparse-mode track</b> | Displays the PIM packet statistics. |

**Platform** N/A

**Description**

## 6.3 ip pim accept-bsr list

Use this command to confine the BSR address range.

Use the **no** or **default** form this command to restore the default setting.

**ip pim accept-bsr list** *access-list*

**no ip pim accept-bsr**

**default ip pim accept-bsr**

**Parameter Description**

| Parameter                      | Description                                                                 |
|--------------------------------|-----------------------------------------------------------------------------|
| <b>list</b> <i>access-list</i> | IP standard number ACL in the range of 1 to 99, 1300 to 1999 and characters |

**Defaults** By default, the PIMSM router receives all external BSM packets.

**Command** Global configuration mode

**Mode**

**Usage Guide** Use this command to limit the range of the legal BSR.

**Configuration** The following example confines the BSR address range.

**Examples**

```
Ruijie(config)# ip pim accept-bsr list 1
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 6.4 ip pim accept-crp list

Use this command to confine the C-RP address range and the multicast group address range it serves.

Use the **no** or **default** form of this command to restore the default setting,

**ip pim accept-crp list** *access-list*

**no ip pim accept-crp**

**default ip pim accept-crp**

| Parameter Description | Parameter                      | Description                                                                  |
|-----------------------|--------------------------------|------------------------------------------------------------------------------|
|                       | <b>list</b> <i>access-list</i> | IP extension number ACL in the range of 1 to 99, 1300 to 1999 and characters |

**Defaults** By default, the elected BSR receives all external advertisements of candidate RPs.

**Command** Global configuration mode

**Mode**

**Usage Guide** With this command configured on the candidate BSR, when this BSR becomes the elected BSR, it is able to limit the address range of the legal C-RP and the multicast group range it serves.

**Configuration Examples** The following example confines the C-RP address range and the multicast group address range it serves.

```
Ruijie (config)# ip pim accept-crp list 100
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 6.5 ip pim accept-crp-with-null-group

Use this command to receive the C-RP-ADV packets whose prefix-count is 0.

Use the **no** or **default** form of this command to restore the default setting.

**ip pim accept-crp-with-null-group**

**no ip pim accept-crp-with-null-group**

**default ip pim accept-crp-with-null-group**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|-----------------------|-----------|-------------|

|   |   |
|---|---|
| - | - |
|---|---|

**Defaults** By default, the BSR does not receive the C-RP-ADV packets whose prefix-count is 0.

**Command Mode** Global configuration mode

**Usage Guide** With this command configured on the candidate BSR, when this BSR becomes the elected BSR, it is able to receive the C-RP-ADV packets whose prefix-count is 0, and considers this C-RP supports all groups.

**Configuration** The following example receives the C-RP-ADV packets whose prefix-count is 0.

**Examples** Ruijie (config)# ip pim accept-crp-with-null-group

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 6.6 ip pim accept-register list

Use this command to confine the address range of the (S,G) entry of the register packets.

Use the **no** or **default** form of this command to restore the default setting.

**ip pim accept-register** { **list** *access-list* [**route-map** *map-name*] | **route-map** *map-name* [**list** *access-list*] }

**no ip pim accept-register**

**default ip pim accept-register**

| Parameter Description            | Parameter                      | Description                                          |
|----------------------------------|--------------------------------|------------------------------------------------------|
|                                  | <b>list</b> <i>access-list</i> |                                                      |
| <b>route-map</b> <i>map-name</i> |                                | Uses a route map to define the (S, G) address range. |

**Defaults** The (S, G) address range is not confined by default.

**Command Mode** Global configuration mode

**Usage Guide** This command is used to confine the source IP address of register messages on RP.

**Configuration** The following example confines the source address of register packets on the RP.

**Examples**

```
Ruijie (config)# ip pim accept-register list 100
Ruijie (config)# access-list 100 permit ip 192.168.195.0 0.0.0.255 225.1.1.1
0.0.0.255
```

**Related  
Commands**

| Command     | Description |
|-------------|-------------|
| access-list | N/A         |

**Platform**

N/A

**Description**

## 6.7 ip pim bsr-border

Use this command to configure the BSR border.

Use the **no** or **default** form of this command to restore the default setting.

**ip pim bsr-border**

**no ip pim bsr-border**

**default ip pim bsr-border**

**Parameter  
Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults**

No BSR border is configured by default.

**Command  
Mode**

Interface configuration mode

**Usage Guide**

To restrain BSM flooding, configure BSR border on the interface so that the interface drops BSM packets upon receiving them and the BSM packets are not forwarded from this interface.

**Configuration** The following example sets the BSR border on the interface *g 0/3*

**Examples**

```
Ruijie(config)# interface gi 0/3
Ruijie(config-if- GigabitEthernet 0/3)# ip pim bsr-border
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform**

N/A

**Description**

## 6.8 ip pim bsr-candidate

Use this command to configure the C-BSR.

Use the **no** or **default** form of this command to restore the default setting.

**ipv6 pim bsr-candidate** *interface-type interface-number* [ *hash-mask-length* [ *priority-value* ] ]

**no ipv6 pim bsr-candidate**

**default ip pim bsr-candidate**

### Parameter Description

| Parameter                                        | Description                                                                                              |
|--------------------------------------------------|----------------------------------------------------------------------------------------------------------|
| <i>interface-type</i><br><i>interface-number</i> | Interface type and number                                                                                |
| <i>hash-mask-length</i>                          | (Optional) HASK mask length configured for electing the RP in the range from 0 to 32, The default is 10. |
| <i>priority-value</i>                            | (Optional) Priority configured for the candidate BSR in the range from 0 to 255. The default is 64.      |

**Defaults** No C-BSR is configured by default.

**Command Mode** Global configuration mode

**Usage Guide** A PIM-SM domain must contain a unique Bootstrap Router (BSR). BSR is responsible for collect and issue RP information. A unique recognized BSR is elected among multiple candidate BSRs through the bootstrap packet. Before BSR information is available, C-BSRs consider them to be the BSR, and regularly send bootstrap packets using the multicast address 224.0.0.13 in the PIM-SM domain. This packet contains the address and priority of the BSR.

This command allows the device to send a bootstrap message to all the PIM neighbors using the assigned BSR address. Each neighbor compares the original BSR address with the address in the received bootstrap message. If the IP address of the received address is equal to or larger than the original address, each neighbor saves this received address as the BSR address. Otherwise, they will discard this message.

The current device considers itself to be BSR until it receives a bootstrap message from another candidate BSR and is notified that it has a higher priority value (or the same priority value, but with a larger IP address).

**Configuration** The following example configures the C-BSR.

**Examples**

```
Ruijie(config)# ip pim bsr-candidate gi 0/3 30 192
```

### Related Commands

| Command            | Description |
|--------------------|-------------|
| <b>access-list</b> | N/A         |

**Platform** N/A

**Description**

## 6.9 ip pim dr-priority

Use this command to set the DR priority.

Use the **no** or **default** form of this command to restore the default setting.

**ip pim dr-priority** *priority-value*

**no ip pim dr-priority**

**default ip pim dr-priority**

| Parameter Description | Parameter             | Description                                                                             |
|-----------------------|-----------------------|-----------------------------------------------------------------------------------------|
|                       | <i>priority-value</i> | The larger the value, the higher the priority is. The range is from 0 to 4,294,967,294. |

**Defaults** The default is 1.

**Command** Interface configuration mode

**Mode**

**Usage Guide** To select a DR:

If the priority parameter of the Hello message is set for the devices in a LAN, the one of the highest priority is elected to be the DR. If several devices have the same priority, the one of the largest IP address is elected to be the DR.

If the priority parameter of the Hello message is not set for the devices in a LAN, the one of the largest IP address is elected to be the DR.

**Configuration** The following example sets the DR priority.

**Examples**

```
Ruijie(config)# interface gi 0/3
Ruijie(config-if-GigabitEthernet 0/3)# ip pim dr-priority 10000
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 6.10 ip pim ignore-rp-set-priority

Use this command to ignore the RP priority.

Use the **no** or **default** form of this command to restore the default setting.

**ip pim ignore-rp-set-priority**

**no ip pim ignore-rp-set-priority**  
**default ip pim ignore-rp-set-priority**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| -         | -           |

**Defaults** By default, the C-RP with higher priority is selected.

**Command Mode** Global configuration mode

**Usage Guide**

**Configuration** The following example ignores the RP priority.

**Examples** Ruijie(config)# ip pim ignore-rp-set-priority

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A

## 6.11 ip pim jp-timer

Use this command to set the interval to send the join/prune message.  
 Use the **no** or **default** form of this command to restore the default setting.

**ip pim jp-timer** *seconds*  
**no ip pim jp-timer**  
**default ip pim jp-timer**

**Parameter Description**

| Parameter      | Description                                                                                 |
|----------------|---------------------------------------------------------------------------------------------|
| <i>seconds</i> | Interval to send the join/prune message in the range from 1 to 65535 in the unit of seconds |

**Defaults** The default is 60 seconds.

**Command Mode** Global configuration mode

**Usage Guide** N/A

**Configuration** The following example sets the interval to send the Join/Prune message to 50 seconds.

**Examples** Ruijie(config)# ip pim jp-timer 50

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 6.12 ip pim neighbor-filter

Use this command to confine the neighbor address range.

Use the **no** or **default** form of this command to restore the default setting.

**ip pim neighbor-filter** *access\_list*

**no ip pim neighbor-filter** *access\_list*

**default ip pim neighbor-filter** *access\_list*

**Parameter  
Description**

| Parameter          | Description                                                                    |
|--------------------|--------------------------------------------------------------------------------|
| <i>access_list</i> | Access control list supporting numerical ACL in the range 1 to 99 and name ACL |

**Defaults** This function is disabled by default.

**Command** Interface configuration mode

**Mode**

**Usage Guide** Neighbor filtering can enhance the security of a PIM-enabled network and provide neighbor restriction. As long as a neighbor is denied by the access list, PIM-SM will not establish the peering relationship with this neighbor or terminate the established peering relationship with this neighbor.

**Configuration** The following example blocks the neighbor address 192.168.1.5.

**Examples** Ruijie(config)# interface gi 0/3  
Ruijie(config-if- GigabitEthernet 0/3)# ip pim neighbor-filter 14  
Ruijie(config-if- GigabitEthernet 0/3)# exit  
Ruijie(config)# access-list 14 deny 192.168.1.5 0.0.0.255

**Related  
Commands**

| Command            | Description |
|--------------------|-------------|
| <b>access-list</b> | N/A         |

**Platform** N/A

**Description**



## 6.13 ip pim neighbor-tracking

Use this command to disable join restraint on the interface.

Use the **no** or **default** form of this command to restore the default setting.

**ip pim neighbor-tracking**

**no ip pim neighbor-tracking**

**default ip pim neighbor-tracking**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** This function is enabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** Use this command to disable join restraint on the interface. With join constraint enabled, the interface is constrained not to send its Join message to the upstream neighbor when it receives the Join message that its neighbor sends to the upstream neighbor. On the other hand, with join constrain disabled, the interface will send its Join message to the upstream neighbor when it receives the Join message that its neighbor sends to the upstream neighbor. This function allows upstream routers to track how many receivers in downstream in accord with all received Join messages.

**Configuration Examples** The following example disables join restraint on the interface.

```
Ruijie(config)# interface gi 0/3
Ruijie(config-if-GigabitEthernet 0/3)# ip pim neighbor-tracking
```

| Related Commands | Command                         | Description |
|------------------|---------------------------------|-------------|
|                  | <b>ip pim propagation-delay</b> | N/A         |

**Platform Description** N/A

## 6.14 ip pim override-interval

Use this command to set the override-interval on the interface.

Use the **no** or **default** form of this command to restore the default setting.

**ip pim override-interval *milliseconds***

**no ip pim override-interval**


**default ip pim override-interval**

| Parameter<br>Description | Parameter | Description                  |
|--------------------------|-----------|------------------------------|
|                          |           | <i>interval-milliseconds</i> |

**Defaults** The default is 2,500 milliseconds.

**Command Mode** Interface configuration mode

**Usage Guide** Use this command to set the override-interval for the interface.

 Change of propagation delay or prune delay will influence the override interval of Join/prune message. As specified in the protocol, the override interval of Join/prune message must be less than its hold time or otherwise this will cause temporary interruption.

**Configuration Examples** The following example sets the override-interval as 3000 milliseconds.

```
Ruijie(config)# interface gi 0/3
Ruijie(config-if-GigabitEthernet 0/3)# ip pim override-interval 3000
```

| Related<br>Commands | Command | Description                     |
|---------------------|---------|---------------------------------|
|                     |         | <b>ip pim propagation-delay</b> |

**Platform Description** N/A

## 6.15 ip pim probe-interval

Use this command to set the register probe interval.

Use the **no** or **default** form of this command to restore the default setting.

**ip pim probe-interval** *seconds*

**no ip pim probe-interval**

**default ip pim probe-interval**


| Parameter<br>Description | Parameter | Description             |
|--------------------------|-----------|-------------------------|
|                          |           | <i>interval-seconds</i> |

**Defaults** The default is 5 seconds.

**Command Mode** Global configuration mode

**Usage Guide** Use this command to set the registration probe time. The DR can send the null registration message

to the RP in a period before the registration suppression time expires. This period is called probe time of null registration packet.

-  The probe time must be less than half of registration suppression time. Furthermore, 3\* registration suppression time plus registration probe time should be no more than 65535s or otherwise the system triggers an alarm.

**Configuration** The following example sets the probe time to 6 seconds.

**Examples**

```
Ruijie(config)# ip pim probe-interval 6
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 6.16 ip pim propagation-delay

Use this command to set the propagation-delay on the interface.

Use the **no** or **default** form of this command to restore the default setting.

**ip pim propagation-delay** *milliseconds*

**no ip pim propagation-delay**

**default ip pim propagation-delay**

**Parameter  
Description**


| Parameter                    | Description                                |
|------------------------------|--------------------------------------------|
| <i>interval-milliseconds</i> | In the range from 1 to 32,765 milliseconds |

**Defaults** The default is 500 milliseconds.

**Command** Interface configuration mode

**Mode**

**Usage Guide** Use this command to set the propagation-delay for the interface.

-  Change of propagation delay or prune delay will influence the override interval of Join/prune message. As specified in the protocol, the override interval of Join/prune message must be less than its hold time or otherwise this will cause temporary interruption.

**Configuration** The following example sets the propagation delay to 600 milliseconds.

**Examples**

```
Ruijie(config)# interface gi 0/3
Ruijie(config)# ip pim propagation-delay 600
```

| Related Commands | Command                               | Description |
|------------------|---------------------------------------|-------------|
|                  | <code>ip pim override-interval</code> | N/A         |
|                  | <code>ip pim neighbor-tracking</code> | N/A         |

**Platform** N/A

**Description**

## 6.17 ip pim query-interval

Use this command to set the interval to send the hello packets.

Use the **no** or **default** form of this command to restore the default setting.

**ip pim query-interval** *seconds*

**no ip pim query-interval**

**default ip pim query-interval**

| Parameter Description | Parameter | Description             |
|-----------------------|-----------|-------------------------|
|                       |           | <i>interval-seconds</i> |

**Defaults** The default is 30 seconds.

**Command Mode** Interface configuration mode

**Usage Guide** Upon updating the interval to send the Hello message, the time of holding the Hello message is updated by the following principle: The hold time is updated to be 3.5 times the transmission interval. If the transmission interval\*3.5 is more than 65535, the hold time is updated to 18752.

**Configuration Examples** The following example sets the interval to send the hello packets to 123 seconds.

```
Ruijie(config)# interface gi 0/3
Ruijie(config)# ip pim query-interval 123
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  |         | N/A         |

**Platform** N/A

**Description**

## 6.18 ip pim register-checksum-wholepkt

Use this command to calculate the checksum of the whole register packet.

Use the **no** or **default** form of this command to restore the default setting.

**ip pim register-checksum-wholepkt [ group-list *access-list* ]**

**no ip pim register-checksum-wholepkt [ group-list *access-list* ]**

**default ip pim register-checksum-wholepkt [ group-list *access-list* ]**

| Parameter Description | Parameter          | Description                                                                                                                                                                                                          |
|-----------------------|--------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <i>access-list</i> | Access-list: access control list supporting numerical ACL in the range from 100 to 199 and from 1300 to 1999 and name ACL.<br>Group-list <i>access-list</i> :all multicast packets use this configuration by default |

**Defaults** By default, the checksum of register messages calculates the head of PIM message and register message rather than the whole PIM message

**Command Mode** Global configuration mode

**Usage Guide** Some vendors calculate checksum based on the overall registration packets. Ruijie Networks introduces this function for the compatibility with devices of other vendors.

**Configuration** The following example calculates the checksum of the whole register packet.

**Examples**

```
Ruijie(config)#ip pim register-checksum-wholepkt group-list 99
Ruijie(config)# access-list 99 permit 225.1.1.1 0.0.0.255
```

| Related Commands | Command            | Description |
|------------------|--------------------|-------------|
|                  | <b>access-list</b> | N/A         |

**Platform** N/A

**Description**

## 6.19 ip pim register-decapsulate-forward

Use this command to enable the RP to decapsulate the register packets and forward the multicast packets.

Use the **no** or **default** form of this command to restore the default setting.

**ip pim register-decapsulate-forward**

**no ip pim register-decapsulate-forward**

**default ip pim register-decapsulate-forward**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | -         | -           |

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** Use this command to implement the decapsulate of the PIM-SM registration packets with the multicast data packets received on the candidate RP and forward the multicast data packets. As the decapsulating and forwarding are performed by the software, it is not recommended to configure this command in the case that many registration packets need to be decapsulated and forwarded, which may cause the CPU busy with this function configured.

**Configuration Examples** The following example enables the RP to decapsulate the register packets and forwards the multicast packets.

```
Ruijie(config)# ip pim register-decapsulate-forward
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 6.20 ip pim register-rate-limit

Use this command to limit the rate of register packets.

Use the **no** form of this command to restore the default setting.

**ip pim register-rate-limit rate**

**no ip pim register-rate-limit**

**default ip pim register-rate-limit**

| Parameter Description | Parameter   | Description                                                                                   |
|-----------------------|-------------|-----------------------------------------------------------------------------------------------|
|                       | -           | -                                                                                             |
|                       | <i>rate</i> | Maximum number of register packets that can be sent per second, in the range from 1 to 65,535 |

**Defaults** By default, there is no rate limitation on register messages.

**Command** Global configuration mode

**Mode**

**Usage Guide** This command is used to configure speed of transmitting register packet in each (S, G) status, not the speed of transmitting register packets in the system. Using this command will decrease the load of source DR and RP. The register packets can be transmitted at the speed within the limit.

**Configuration** The following example limits the rate of register packets.

**Examples**

```
Ruijie(config)# ip pim register-rate-limit 3000
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 6.21 ip pim register-rp-reachability

Use this command to check RP reachability before sending register packets.

Use the **no** or **default** form of this command to restore the default setting.

**ip pim register-rp-reachability**

**no ip pim register-rp-reachability**

**default ip pim register-rp-reachability**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | -         | -           |

**Defaults** By default, the RP reachability is not checked before sending register packets.

**Command** Global configuration mode

**Mode**

**Usage Guide** This command is used to check the RP reachability before sending register packets. If not, register packets are not transmitted.

**Configuration** The following example checks the RP reachability before sending register packets.

**Examples**

```
Ruijie(config)# ipv6 pim register-rp-reachability
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 6.22 ip pim register-source

Use this command to specify the source IP address of the register packets.

Use the **no** or **default** form of this command to restore the default setting.

**ip pim register-source** { *local\_address* | *interface-type interface-number* }

**no ip pim register-source**

**default ip pim register-source**

| Parameter Description | Parameter                                        | Description                                                                     |
|-----------------------|--------------------------------------------------|---------------------------------------------------------------------------------|
|                       | -                                                | -                                                                               |
|                       | <i>interface-type</i><br><i>interface-number</i> | Interface whose IP address is used as the source IP address of register packets |
|                       | <i>local_address</i>                             | Specifies the source IP address of the register packet.                         |

**Defaults** By default, the source IP address of register packets is the IP address of the DR interface connecting the multicast source.

**Command Mode** Global configuration mode

**Usage Guide** This command is used to configure the source IP address of register messages. The source IP address must be reachable. When RP receives the register packet, it transmits Register-Stop packet, using its source IP address as the destination IP address of the Register-Stop packet. It is not necessary to enable the PIM.

**Configuration** The following example specifies the source IP address of the register packets.

**Examples**

```
Ruijie(config)# ip pim register-source 192.168.195.80
Ruijie(config)# ip pim register-source gi 0/3
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 6.23 ip pim register-suppression

Use this command to set the register suppression time.

Use the **no** or **default** form of this command to restore the default setting.



**ip pim register-suppression** *seconds*  
**no ip pim register-suppression**  
**default ip pim register-suppression**

| Parameter Description | Parameter          | Description                                                            |
|-----------------------|--------------------|------------------------------------------------------------------------|
|                       | <i>suppression</i> | Suppression time in the range from 1 to 65,535 in the unit of seconds. |

**Defaults** The default is 60 seconds.

**Command Mode** Global configuration mode

**Usage Guide** Executing this command on the DR will change the register packet suppression time configured. if the **ip pim rp-register-kat** command is not configured, executing this command on RP will modify the period of RP keepalive.

**Configuration** The following example sets the register suppression time to 100 seconds.

**Examples** Ruijie(config)# ip pim register-suppression 100

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 6.24 ip pim rp-address

Use this command to configure the static RP.

Use the **no** or **default** form of this command to restore the default setting.

**ip pim rp-address** *rp-address* [ *access\_list* ]  
**no ip pim rp-address** *rp-address* [ *access\_list* ]  
**default ip pim rp-address** *rp-address* [ *access\_list* ]

| Parameter Description | Parameter          | Description                                                                                                                                     |
|-----------------------|--------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <i>rp-address</i>  | IP address of RP                                                                                                                                |
|                       | <i>access_list</i> | Access control list supporting numerical ACL in the range 1 to 99 and 1300 to 1999 and name ACL. All multicast groups are supported by default. |

**Defaults** No IP address is configured for the static RP by default.

**Command** Global configuration mode  
**Mode**

**Usage Guide** This system supports the configuration of multicast static RP, as well as the configuration of static RP and BSR mechanisms at the same time. When you use this command, note that:

If both the BSR mechanism and the static RP configuration take effect, the dynamic configuration takes precedence.

You can configure multiple multicast groups (using ACL) or all multicast groups (not using ACL) for the static RP. But a static RP can be configured only once.

If there are more than one static RP in a multicast group, the one of the highest IP address is used. Only the addresses permitted by ACL are valid multicast groups. By default, all the multicast groups 224/4 are permitted.

After configuration is performed, the static RP's source IP address is inserted to the group range-based static RP group tree structure. Each group range-based static multicast group maintains the chain list structure of a static RP group. This chain list is sorted in descending order of IP address. When you select a RP from a static RP group, the first entry, namely the one with the largest IP address, will be selected first.

Deleting a static IP address also deletes this address from all the existing static RP groups and selects one from in the existing RP group tree structure as the RP address.

**Configuration** The following example specifies the source IPv6 address of the register packet.

**Examples**

```
Ruijie(config)# ip pim rp-address 210.34.0.55 4
Ruijie(config)# access-list 4 permit 255.1.1.1 0.0.0.255
```

**Related  
Commands**

| Command            | Description |
|--------------------|-------------|
| <b>access-list</b> | N/A         |

**Platform** N/A  
**Description**

## 6.25 ip pim rp-candidate

Use this command to configure the C-RP.

Use the **no** or **default** form of this command to restore the default setting.

**ip pim rp-candidate** *interface-type interface-number* [ **priority** *priority-value* ] [ **interval** *seconds* ]  
[ **group-list** *access\_list* ]

**no ip pim rp-candidate** [ *interface-type interface-number* ]

**default ip pim rp-candidate** [ *interface-type interface-number* ]

**Parameter  
Description**

| Parameter                                        | Description                         |
|--------------------------------------------------|-------------------------------------|
| <i>interface-type</i><br><i>interface-number</i> | Interface type and interface number |

|                       |                                                                                                            |
|-----------------------|------------------------------------------------------------------------------------------------------------|
| <i>priority-value</i> | (Optional) Priority in the range 0 to 255, 192 by default                                                  |
| <i>seconds</i>        | (Optional) Interval in the range 0 to 16,383 seconds, 60s by default                                       |
| <i>access_list</i>    | (Optional) Numerical ACL in the range 1 to 99 or name ACL. By default, all multicast groups are permitted. |

**Defaults** No C-RP is configured by default.

**Command** Global configuration mode

**Mode**

**Usage Guide** In the PIM-SM protocol, the shared tree RPT created by the multicast routing uses the Rendezvous Point (RP) as the root node. RP is elected by the candidate RPs. After BSR is elected, all C-RPs sends C-RP messages in the unicast form to BSR regularly, and BSR spreads the messages throughout the PIM domain.

To specify an interface as the candidate RP of a specific group, execute this command with ACL. Note that the group range is calculated only based on the permit rule, not the deny rule.

**Configuration** The following example configures the C-RP.

**Examples**

```
Ruijie(config)# ip pim rp-candidate gi 0/3 priority 200 group-list 3 interval 70
Ruijie(config)# access-list 3 permit 255.1.1.1 0.0.0.255
```

| Related Commands | Command            | Description |
|------------------|--------------------|-------------|
|                  | <b>access-list</b> | N/A         |

**Platform** N/A

**Description**

## 6.26 ip pim rp-register-kat

Use this command to set the KAT interval on the RP.

Use the **no** or **default** form of this command to restore the default setting.

**ip pim rp-register-kat** *seconds*

**no ip pim rp-register-kat**

**default ip pim rp-register-kat**

| Parameter Description | Parameter      | Description                                                         |
|-----------------------|----------------|---------------------------------------------------------------------|
|                       | <i>seconds</i> | KAT timer time in the range from 1 to 65,525 in the unit of seconds |

**Defaults** The default is 210 seconds.

**Command** Global configuration mode

**Mode****Usage Guide**

**Configuration** The following example sets the KAT interval on the RP to 250 seconds.

**Examples** Ruijie(config)# ip pim rp-register-kat 250

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 6.27 ip pim sparse-mode

Use this command to enable PIM-SM on the interface.

Use the **no** or **default** form of this command to restore the default setting.

**ip pim sparse-mode**

**no ip pim sparse-mode**

**default ip pim sparse-mode**

**Parameter Description**





| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command** Interface configuration mode

**Mode**

**Usage Guide** This command is used to enable PIM-SM on the interface.

-  You need to enable multicast routing forwarding in the global configuration mode before enabling PIM-SM. Otherwise, multicast packets cannot be forwarded even though you enable PIM-SM.
-  During the execution of this command, if the prompt "Failed to enable PIM-SM on <Interface Name>, resource temporarily unavailable, please try again" appears, re-execute this command.
-  During the execution of this command, if the prompt "PIM-SM Configure failed! VIF limit exceeded in NSM!!!" appears; it indicates the allowed configured interface number exceeds the upper limit of the multicast interfaces. In this case, if you still need to enable PIM-SM on the interface, delete the unnecessary PIM-SM, PIM-DM or DVMRP interfaces.
-  It is not recommended to configure different IPv4 multicast routing protocols on different

interfaces of a device.

**Configuration** The following example enables PIM-SM on the interface.

**Examples**

```
Ruijie(config)# interface gi 0/3
Ruijie(config-if-GigabitEthernet 0/3)# ip pim sparse-mode
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 6.28 ip pim sparse-mode passive

Use this command to enable PIM-SM PASSIVE.

Use the **no** or **default** form of this command to restore the default setting.

**ip pim sparse-mode passive**

**no ip pim sparse -mode passive**

**default ip pim sparse-mode passive**

**Parameter  
Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** PIM-SM PASSIVE is disabled by default.

**Command  
Mode** Interface configuration mode

**Usage Guide** Please configure multicast route forwarding in global configuration mode before enabling PIM-SM PASSIVE.  
When PIM-SM PASSIVE is enabled, IGMP is enabled on each interface automatically.  
Enabled with PIM-SM PASSIVE, the interface neither receives nor sends PIM packets. Instead, it forwards multicast packets. PIM-SM PASSIVE is generally configured on the device of the stub area, so as to avoid floods of PIM hello packets.

**Configuration** The following example enables PIM-SM PASSIVE on interface GigabitEthernet 0/3.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# interface gi 0/3
Ruijie(config-if-GigabitEthernet 0/3)# ip pim sparse-mode passive
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
|---------|-------------|

|     |     |
|-----|-----|
| N/A | N/A |
|-----|-----|

**Platform** N/A

**Description**

## 6.29 ip pim sparse-mode subvlan

Use this command to enable PIM-SM on the Super VLAN interface. Use the **no** or **default** form of this command is to restore the default setting.

**ip pim sparse-mode subvlan** [ **all** | *vid* ]

**no ip pim sparse-mode subvlan**

**default ip pim sparse-mode subvlan**

| Parameter          | Parameter  | Description                              |
|--------------------|------------|------------------------------------------|
| <b>Description</b> | <b>all</b> | Sends PIM packets to all sub VLANs.      |
|                    | <i>vid</i> | Sends PIM packets to the specified VLAN. |

**Defaults** PIM-SM is disabled on the Super VLAN interface by default.

**Command** Interface configuration mode

**Mode**

**Usage Guide** In general, a super VLAN includes many sub VLANs. If the PIM-SM protocol is enabled on the interfaces of the super VLAN, PIM-SM multicast packets will be replicated and sent to all sub VLANs. As a result, the traffic may exceed the device capability, causing protocol flapping. The Super VLAN interface is disabled with PIM-SM generally. Use this command to enable PIM-SM on the Super VLAN interface to send PIM packets to all sub VLANs or the specified sub VLAN.

**Configuration Examples** The following example enables PIM-SM on the Super VLAN interface and sends PIM packets to sub VLAN 200.

```
Ruijie# configure terminal
Ruijie(config)# interface vlan 100
Ruijie(config-if-vlan 100)# ip pim sparse-mode subvlan 200
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 6.30 ip pim spt-threshold

Use this command to enable the SPT switching function.

Use the **no** or **default** form of this command to restore the default setting.

**ip pim spt-threshold [ group-list access-list ]**

**no ip pim spt-threshold [ group-list access-list ]**

**default ip pim spt-threshold [ group-list access-list ]**

| Parameter Description | Parameter          | Description                                                                                                                                   |
|-----------------------|--------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <i>access_list</i> | (Optional) Numerical ACL in the range 1 to 99 and 1300 to 1999 or name ACL. By default, all multicast groups are permitted for SPT switching. |

**Defaults** This function is disabled by default.

**Command** Global configuration mode

**Mode**

**Usage Guide** This command is used to enable the RP tree-to-SPT tree switching function in a specific multicast group range (using **group-list**) or all multicast groups (not using **group-list**) .

**Configuration** The following example enables the SPT switching function.

**Examples**

```
Ruijie(config)# ip pim spt-threshold group-list 12
Ruijie(config)# access-list 12 permit 225.1.1.1 0.0.0.255
```

| Related Commands | Command            | Description |
|------------------|--------------------|-------------|
|                  | <b>access-list</b> | N/A         |

**Platform** N/A

**Description**

## 6.31 ip pim ssm

Use this command to enable SSM and set the SSM group address range.

Use the **no** or **default** form of this command to restore the default setting.

**ip pim ssm { default / range access\_list }**

**no ip pim ssm**

**default ip pim ssm**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|-----------------------|-----------|-------------|

|                                 |                                                                  |
|---------------------------------|------------------------------------------------------------------|
| <b>default</b>                  | Multicast groups of 232/8                                        |
| <b>range</b> <i>access_list</i> | Numerical ACL in the range 1 to 99 and 1300 to 1999 or name ACL. |

**Defaults** This function is disabled by default.

**Command** Global configuration mode

**Mode**

**Usage Guide** This command is used to enable PIM-SSM (or in some specific multicast groups).

**Configuration** The following command enables SSM and sets the SSM group range to 232/8:

**Examples** Ruijie(config)# ip pim ssm default

The following command sets the source-specific multicast with ACL 10.

Ruijie(config)# ip pim ssm range 10

Ruijie(config)# access-list 10 permit 232.0.0.1 0.0.0.255

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 6.32 ip pim triggered-hello-delay

Use this command to configure Triggered-Hello-Delay time on the interface.

Use the **no** or **default** form of this command to restore the default setting.

**ip pim triggered-hello-delay** *seconds*

**no ip pim triggered-hello-delay**

**default ip pim triggered-hello-delay**

**Parameter  
Description**

| Parameter      | Description                                      |
|----------------|--------------------------------------------------|
| <i>seconds</i> | In the range from 1 to 5 in the unit of seconds. |

**Defaults** The default is 5 seconds.

**Command** Interface configuration mode

**Mode**

**Usage Guide** Use this command to configure the triggered-hello-delay of the interface. When the interface starts or detects a new neighbor, it uses the trigger-hello-delay to generate random time, and then the interface sends the Hello message in random time.



**Configuration** The following command sets the triggered-hello-delay to 3 seconds.

**Examples**

```
Ruijie(config)# interface gi 0/3
Ruijie(config-if-GigabitEthernet 0/3)# ip pim triggered-hello-delay 3
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 6.33 show debugging

Use this command to display the debugging status.

**show debugging**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide**

**Configuration** The following example displays the debugging status.

**Examples**

```
Ruijie#show debugging
ip packet debug:
ip packet debug debugging is on, acl: 0
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 6.34 show ip pim sparse-mode bsr-router

Use this command to display the BSR information

**show ip pim sparse-mode bsr-router**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | -         | -           |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

### Usage Guide

**Configuration** The following example displays BSR information.

**Examples**

```
Ruijie# show ip pim sparse-mode bsr-router
PIMv2 Bootstrap information
This system is the Bootstrap Router (BSR)
BSR address: 192.168.127.1
Uptime: 01d23h14m, BSR Priority: 64, Hash mask length: 10
Next bootstrap message in 00:00:42
Role: Candidate BSR Priority: 64, Hash mask length: 10
State: Elected BSR
Candidate RP: 30.30.100.200(GigabitEthernet 0/3)
Advertisement interval 60 seconds
00:00:32
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 6.35 show ip pim sparse-mode interface

Use this command to display PIM-SM interface information.

**show ip pim sparse-mode interface** [ *interface-type interface-number* ] [ **detail** ]

| Parameter Description | Parameter               | Description                                                                         |
|-----------------------|-------------------------|-------------------------------------------------------------------------------------|
|                       | <i>interface-type</i>   | (Optional) Interface name. This command takes effect for all interfaces by default. |
|                       | <i>interface-number</i> | (Optional) Displays the details of an interface.                                    |
|                       | <b>detail</b>           | (Optional) Displays the details of an interface.                                    |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

### Usage Guide

**Configuration** The following example displays the PIM-SM information on the interface.

```
Ruijie#show ip pim sparse-mode interface detail
GigabitEthernet 0/3 (vif 3):
Address 30.30.100.200, DR 30.30.100.200
Hello period 30 seconds, Next Hello in 11 seconds
Triggered Hello period 5 seconds
Neighbors:
2.2.2.2
```

### Related Commands

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A

## 6.36 show ip pim sparse-mode local-members

Use this command to display the local IGMP information on the PIM-SM interface.

**show ip pim sparse-mode local-members** [ *interface-type interface-number* ]

### Parameter Description

| Parameter               | Description                                                                         |
|-------------------------|-------------------------------------------------------------------------------------|
| <i>interface-type</i>   | (Optional) Interface name. This command takes effect for all interfaces by default. |
| <i>interface-number</i> |                                                                                     |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

### Usage Guide

**Configuration** The following example displays the local IGMP information on the PIM-SM interface.

```
Ruijie (config-if)#sh ip pim sparse-mode local-members
PIM Local membership information
GigabitEthernet 0/3:
(*, 225.1.1.1) : Include
```

```
Loopback 1:
GigabitEthernet 0/5:
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 6.37 show ip pim sparse-mode mroute

Use this command to display the PIM-SM routing information.

**show ip pim sparse-mode mroute** [ *group-or-source-address* [ *group-or-source-address* ] ]

**Parameter  
Description**

| Parameter                      | Description                                                                                                      |
|--------------------------------|------------------------------------------------------------------------------------------------------------------|
| <i>group-or-source-address</i> | Group IP address or source IP address. Two addresses cannot both be the group addresses or the source addresses. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** This command is used to display routing information. Only one group IP address, one source IP address or one group IP address-source IP address pair can be configured at a time. You can also specify no group IP address or source IP address.

**Configuration Examples** The following example displays the PIM-SM routing information.

```
Ruijie#show ip pim sparse-mode mroute
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 6.38 show ip pim sparse-mode neighbor

Use this command to display the neighbor information.

**show ip pim sparse-mode neighbor [ detail ]**

| Parameter<br>Description | Parameter | Description   |
|--------------------------|-----------|---------------|
|                          |           | <b>detail</b> |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide**

**Configuration** The following example displays the neighbor information.

**Examples** Ruijie# show ip pim sparse-mode neighbor

| Related<br>Commands | Command | Description |
|---------------------|---------|-------------|
|                     |         | N/A         |

**Platform Description** N/A

**6.39 show ip pim sparse-mode nexthop**

Use this command to display the next-hop information, including the interface ID, address and metric.

**show ip pim sparse-mode nexthop**

| Parameter<br>Description | Parameter | Description |
|--------------------------|-----------|-------------|
|                          |           | -           |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** N/A

**Configuration** The following example displays the next-hop information.

**Examples** Ruijie# show ip pim sparse-mode nexthop

| Related | Command | Description |
|---------|---------|-------------|
|         |         |             |

|                 |     |     |
|-----------------|-----|-----|
| <b>Commands</b> |     |     |
|                 | N/A | N/A |

**Platform** N/A

**Description**

## 6.40 show ip pim sparse-mode rp mapping

Use this command to display the information on all RPs and the multicast groups they serve.

**show ip pim sparse-mode rp mapping**

|                              |                  |                              |
|------------------------------|------------------|------------------------------|
| <b>Parameter Description</b> | <b>Parameter</b> | <b>Description</b>           |
|                              | <i>mapping</i>   | All group and RP information |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example displays the information on all RPs and the multicast groups they serve.

```
Ruijie# show ip pim sparse-mode rp mapping
PIM Group-to-RP Mappings
Group(s): 224.0.0.0/4
RP: 30.30.200.1
Info source: 30.30.200.1, via bootstrap, priority 192
Uptime: 00:00:51, expires: 00:01:39
RP: 30.30.100.1
Info source: 30.30.200.1, via bootstrap, priority 192
Uptime: 00:19:14, expires: 00:01:38
Group(s): 224.0.0.0/4, Static
RP: 100.100.100.100
Uptime: 00:45:35
```

|                         |                |                    |
|-------------------------|----------------|--------------------|
| <b>Related Commands</b> | <b>Command</b> | <b>Description</b> |
|                         | N/A            | N/A                |

**Platform** N/A

**Description**

## 6.41 show ip pim sparse-mode rp-hash

Use this command to display the RP information corresponding to the group address.

**show ip pim sparse-mode rp-hash** *group-address*

| Parameter Description | Parameter            | Description                  |
|-----------------------|----------------------|------------------------------|
|                       | <i>group-address</i> | Group address to be resolved |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

### Usage Guide

**Configuration** The following example displays the RP information corresponding to the group address.

**Examples**

```
Ruijie# show ip pim sparse-mode rp-hash 255.1.1.1
RP: 30.30.100.1
Info source: 30.30.100.1, via bootstrap
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 6.42 show ip pim sparse-mode track

Use this command to display the number of sent and received PIM packets during the period from the beginning of the statistics till now.

**show ip pim sparse-mode track**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | -         | -           |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** This command is used to display the number of sent and received PIM packets during the period from the beginning of the statistics till now. When the system starts up, it sets the start time of the statistics. The start time of the statistics is reconfigured and the PIM packet counter is cleared on calling the **clear ip pim sparse-mode track** every time.

**Configuration Examples** The following example displays the number of sent and received PIM packets during the period from the beginning of the statistics till now.

```
Ruijie # show ip pim sparse-mode track
PIM packet counters track
Elapsed time since counters cleared: 00:04:03
received    sent
Valid PIMSM packets:      0          8
Hello:                    0          8
Join-Prune:                0          0
Register:                  0          0
Register-Stop:             0          0
Assert:                    0          0
BSM:                       0          0
C-RP-ADV:                  0          0
PIMDM-Graft:               0
PIMDM-Graft-Ack :         0
PIMDM-State-Refresh:      0
Unknown PIM Type:         0
Errors:
Malformed packets:                0
Bad checksums:                    0
Send errors:                       0
Packets received with unknown PIM version:  0
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  |         | N/A         |

**Platform Description** N/A



## 7 PIM-SMv6 Commands

### 7.1 clear ipv6 mroute

Use this command to clear multicast routing entries.

**clear ipv6 mroute** { \* | *ipv6\_group\_address* [ *ipv6\_source\_address* ] }

| Parameter Description | Parameter                  | Description                                                                          |
|-----------------------|----------------------------|--------------------------------------------------------------------------------------|
|                       | *                          | Deletes all the multicast routing entries.                                           |
|                       | <i>ipv6_group_address</i>  | Deletes the multicast routing entries of the specific group.                         |
|                       | <i>ipv6_source_address</i> | Deletes the multicast routing entries of the specific group and source IPv6 address. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration Examples** The following example clears all the multicast routing entries.

```
Ruijie# clear ipv6 mroute *
```

The following example clears the multicast routing entries of the specified group.

```
Ruijie# clear ipv6 mroute ff66::6666
```

The following example clears the multicast routing entries of the specified group and source address.

```
Ruijie# clear ipv6 mroute ff66::6666 3333::3333
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

### 7.2 clear ipv6 mroute statistics

Use this command to delete the statistics of the multicast routing entries.

**clear ipv6 mroute statistics** { \* | *ipv6\_group\_address* [ *ipv6\_source\_address* ] }

| Parameter | Parameter | Description |
|-----------|-----------|-------------|
|-----------|-----------|-------------|

| Description                |                                                                                                        |
|----------------------------|--------------------------------------------------------------------------------------------------------|
| *                          | Deletes the statistics of all multicast routing entries.                                               |
| <i>ipv6_group_address</i>  | Deletes the statistics of the multicast routing entries of the specific group.                         |
| <i>ipv6_source_address</i> | Deletes the statistics of the multicast routing entries of the specific group and source IPv6 address. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example deletes the statistics of the multicast routing entries.

**Examples** Ruijie# `clear ipv6 mroute statistics *`

The following example clears the statistics of the multicast routing entries of the specified group.

Ruijie# `clear ipv6 mroute statistics ff66::6666`

The following example clears the statistics of the multicast routing entries of the specified group and source address.

Ruijie# `clear ipv6 mroute statistics ff66::6666 3333::3333`

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

### 7.3 clear ipv6 pim sparse-mode bsr rp-set \*

Use this command to clear the RP information learnt dynamically.

**clear ipv6 pim sparse-mode bsr rp-set \***

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** Only the RP information learnt dynamically can be cleared manually.

**Configuration** The following example clears the RP information learnt dynamically.

**Examples** Ruijie# clear ipv6 pim sparse-mode bsr rp-set \*

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 7.4 clear ipv6 pim sparse-mode track

Use this command to reconfigure the start time of the statistics and clear the PIMv6 packet counter.

**clear ipv6 pim sparse-mode track**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example clears the PIMv6 packet counter.

**Examples** Ruijie# clear ipv6 pim sparse-mode track

| Related Commands | Command                         | Description |
|------------------|---------------------------------|-------------|
|                  | show ipv6 pim sparse-mode track | N/A         |

**Platform** N/A

**Description**

## 7.5 ipv6 pim accept-bsr list

Use this command to confine the BSR address range.

Use the **no** or **default** form this command to restore the default setting.

**ipv6 pim accept-bsr list** *ipv6\_access-list*

**no ipv6 pim accept-bsr**

**default ipv6 pim accept-bsr**

| Parameter<br>Description | Parameter | Description                         |
|--------------------------|-----------|-------------------------------------|
|                          |           | <b>list</b> <i>ipv6_access-list</i> |

**Defaults** By default, the PIM-SMv6 router receives all external BSM packets.

**Command Mode** Global configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example confines the BSR address range.

```
Ruijie(config)# ipv6 pim accept-bsr list bsr-list
```

| Related<br>Commands | Command | Description |
|---------------------|---------|-------------|
|                     |         | N/A         |

**Platform Description** N/A

## 7.6 ipv6 pim accept-crp list

Use this command to confine the C-RP address range and the multicast group address range it serves.

Use the **no** or **default** form of this command to restore the default setting,

**ipv6 pim accept-crp list** *ipv6\_access-list*

**no ipv6 pim accept-crp**

**default ipv6 pim accept-crp-with-null-group**

| Parameter<br>Description | Parameter | Description                         |
|--------------------------|-----------|-------------------------------------|
|                          |           | <b>list</b> <i>ipv6_access-list</i> |

**Defaults** No address is filtered by default.

**Command Mode** Global configuration mode

**Usage Guide** With this command configured on the candidate BSR, when this BSR becomes the elected BSR, it is able to limit the address range of the legal C-RP and the multicast group range it serves.

**Configuration** The following example confines the C-RP address range and the multicast group address range it serves.

**Examples**

```
Ruijie (config)# ipv6 pim accept-crp list crp-list
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform**

N/A

**Description**

## 7.7 ipv6 pim accept-crp-with-null-group

Use this command to receive the C-RP-ADV packets whose prefix-count is 0.

Use the **no** or **default** form of this command to restore the default setting.

**ipv6 pim accept-crp-with-null-group**

**no ipv6 pim accept-crp-with-null-group**

**default ipv6 pim accept-crp-with-null-group**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults**

This function is disabled by default.

**Command Mode**

Global configuration mode

**Usage Guide**

With this command configured on the candidate BSR, when this BSR becomes the elected BSR, it is able to receive the C-RP-ADV packets whose prefix-count is 0, and considers this C-RP supports all groups.

**Configuration** The following example receives the C-RP-ADV packets whose prefix-count is 0.

**Examples**

```
Ruijie (config)# ipv6 pim accept-crp-with-null-group
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform**

N/A

**Description**

## 7.8 ipv6 pim accept-register

Use this command to accept specific register packets at the RP.

Use the **no** or **default** form of this command to restore the default setting.

```
ipv6 pim accept-register { list ipv6_access-list [ route-map map-name ] | route-map map-name
[list ipv6_access-list ] }
```

```
no ipv6 pim accept-register
```

```
default ipv6 pim accept-register
```

| Parameter Description | Parameter                           | Description                   |
|-----------------------|-------------------------------------|-------------------------------|
|                       | <b>list</b> <i>ipv6_access-list</i> | IPv6 ACL supporting named ACL |
|                       | <b>route-map</b> <i>map-name</i>    | Defines the routing map rule  |

**Defaults** All register packets are received by default.

**Command** Global configuration mode

**Mode**

**Usage Guide** This command is used to confine the source IPv6 address of register messages on RP. If the unauthorized register source is received, the RP will return the Register-Stop message immediately.

**Configuration** The following example denies register packets of the specified source address at the RP.

**Examples**

```
Ruijie(config)# ipv6 pim accept-register list register-access-list
Ruijie(config)# ipv6 access-list register-access-list
Ruijie(config-ipv6-acl)# deny ipv6 fe80::2d0:f8ff:fe22:33ad/128 any
```

**Platform** N/A

**Description**

## 7.9 ipv6 pim bsr-border

Use this command to configure the BSR border.

Use the **no** or **default** form of this command to restore the default setting.

```
ipv6 pim bsr-border
```

```
no ipv6 pim bsr-border
```

```
default ipv6 pim bsr-border
```

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** No BSR border is configured by default.

**Command** Interface configuration mode  
**Mode**

**Usage Guide** To restrain BSM flooding, configure BSR border on the interface so that the interface drops BSM packets upon receiving them and the BSM packets are not forwarded from this interface.

**Configuration** The following example sets the BSR border on the interface *gi 0/3*.

**Examples**

```
Ruijie(config)# interface gi 0/3
Ruijie(config-if-GigabitEthernet)# ipv6 pim bsr-border
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 7.10 ipv6 pim bsr-candidate

Use this command to configure the candidate bootstrap router (C-BSR).

Use the **no** or **default** form of this command to restore the default setting.

**ipv6 pim bsr-candidate** *interface-type interface-number* [ *hash-mask-length* [ *priority-value* ] ]

**no ipv6 pim bsr-candidate**

**default ipv6 pim bsr-candidate**

| Parameter Description   | Parameter                                        | Description                                                                                                |
|-------------------------|--------------------------------------------------|------------------------------------------------------------------------------------------------------------|
|                         | <i>interface-type</i><br><i>interface-number</i> |                                                                                                            |
| <i>hash-mask-length</i> |                                                  | (Optional) HASK mask length configured for electing the RP in the range from 0 to 128. The default is 126. |
| <i>priority-value</i>   |                                                  | (Optional) Priority configured for the C-BSR in the range from 0 to 255. The default is 64.                |

**Defaults** No C-BSR is configured by default.

**Command** Global configuration mode  
**Mode**

**Usage Guide** A PIM-SMv6 domain must contain a unique Bootstrap Router (BSR). BSR is responsible for collect and issue RP information. A unique recognized BSR is elected among multiple candidate BSRs through the bootstrap packet. Before BSR information is available, C-BSRs consider them to be the BSR, and regularly send bootstrap packets using the multicast address 224.0.0.13 in the PIM-SM

domain. This packet contains the address and priority of the BSR.

This command allows the device to send a bootstrap message to all the PIM neighbors using the assigned BSR address. Each neighbor compares the original BSR address with the address in the received bootstrap message. If the IPv6 address of the received address is equal to or larger than the original address, each neighbor saves this received address as the BSR address. Otherwise, they will discard this message.

The current device considers itself to be BSR until it receives a bootstrap message from another candidate BSR and is notified that it has a higher priority value (or the same priority value, but with a larger IPv6 address).

**Configuration** The following example s configures the C-BSR.

**Examples** Ruijie(config)# ipv6 pim bsr-candidate gi 0/3 30 100

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 7.11 ipv6 pim dr-priority

Use this command to configure the DR priority.

Use the **no** or **default** form of this command to restore the default setting.

**ipv6 pim dr-priority** *priority-value*

**no ipv6 pim dr-priority**

**default ipv6 pim dr-priority**

**Parameter  
Description**

| Parameter             | Description                                                                                               |
|-----------------------|-----------------------------------------------------------------------------------------------------------|
| <i>priority-value</i> | The larger the value, the higher the priority is. The range is from 0 to 4,294,967,294. The default is 1. |

**Defaults** The default is 1.

**Command  
Mode** Interface configuration mode

**Usage Guide** To select a DR:

- If the priority parameter of the Hello message is set for the devices in a LAN, the one of the highest priority is elected to be the DR. If several devices have the same priority, the one of the largest IP address is elected to be the DR.
- If the priority parameter of the Hello message is not set for the devices in a LAN, the one of the largest IP address is elected to be the DR.



**Configuration** The following example configures the DR priority.

**Examples**

```
Ruijie(config)# interface gi 0/3
Ruijie(config-if)# ipv6 pim dr-priority 11234
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform**

N/A

**Description**

## 7.12 ipv6 pim ignore-rp-set-priority

Use this command to ignore the RP priority.

Use the **no** or **default** form of this command to restore the default setting.

**ipv6 pim ignore-rp-set-priority**

**no ipv6 pim ignore-rp-set-priority**

**default ipv6 pim ignore-rp-set-priority**

**Parameter  
Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults**

By default, the C-RP with a higher priority is selected.

**Command  
Mode**

Global configuration mode

**Usage Guide**

N/A

**Configuration** The following example ignores the RP priority.

**Examples**

```
Ruijie(config-if)# ipv6 pim ignore-rp-set-priority
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform**

N/A

**Description**

## 7.13 ipv6 pim jp-timer

Use this command to set the interval to send the join/prune message.

Use the **no** or **default** form of this command to restore the default setting.

**ipv6 pim jp-timer** *seconds*

**no ipv6 pim jp-timer**

**default ipv6 pim jp-timer**

| Parameter Description | Parameter      | Description                                                                                  |
|-----------------------|----------------|----------------------------------------------------------------------------------------------|
|                       | <i>seconds</i> | Interval to send the join/prune message in the range from 1 to 65,535 in the unit of seconds |

**Defaults** The default is 60 seconds.

**Command Mode** Global configuration mode

### Usage Guide

**Configuration Examples** The following example sets the interval to send the Join/Prune message to 100 seconds.

```
Ruijie# configure terminal
Ruijie(config)# ipv6 pim jp-timer 100
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 7.14 ipv6 pim neighbor-filter

Use this command to confine the neighbor address range.

Use the **no** or **default** form of this command to restore the default setting.

**ipv6 pim neighbor-filter** *ipv6\_access-list*

**no ipv6 pim neighbor-filter** *ipv6\_access-list*

**default ipv6 pim neighbor-filter** *ipv6\_access-list*

| Parameter Description | Parameter               | Description                   |
|-----------------------|-------------------------|-------------------------------|
|                       | <i>ipv6_access_list</i> | IPv6 ACL supporting named ACL |

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** Neighbor filtering can enhance the security of a PIM-enabled network and provide neighbor restriction. As long as a neighbor is denied by the access list, PIM-SM will not establish the peering relationship with this neighbor or terminate the established peering relationship with this neighbor.

**Configuration Examples** The following example blocks the neighbor address fe80::2d0:f8ff:fe22:33ad.

```
Ruijie(config)# interface gi 0/3
Ruijie(config-if- GigabitEthernet 0/3)# ipv6 pim neighbor-filter acl
Ruijie(config-if- GigabitEthernet 0/3)# exit
Ruijie(config)# ipv6 access-list acl
Ruijie(config-ipv6-acl)# deny ipv6 fe80::2d0:f8ff:fe22:33ad/128 any
```

**Related Commands**

| Command          | Description |
|------------------|-------------|
| ipv6_access-list | N/A         |

**Platform Description** N/A

## 7.15 ipv6 pim neighbor-tracking

Use this command to disable join restraint on the interface.

Use the **no** or **default** form of this command to restore the default setting.

**ipv6 pim neighbor-tracking**

**no ipv6 pim neighbor-tracking**

**default ipv6 pim neighbor-tracking**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** This function is enabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** Use this command to disable join restraint on the interface. With join constraint enabled, the interface is constrained not to send its Join message to the upstream neighbor when it receives the Join message that its neighbor sends to the upstream neighbor. On the other hand, with join constrain disabled, the interface will send its Join message to the upstream neighbor when it receives the Join

message that its neighbor sends to the upstream neighbor. This function allows upstream routers to track how many receivers in downstream in accord with all received Join messages.

**Configuration** The following example disables join restraint on the interface.

**Examples**

```
Ruijie(config)# interface gi 0/3
Ruijie(config-if-GigabitEthernet)# ipv6 pim neighbor-tracking
```

**Related  
Commands**

| Command                           | Description |
|-----------------------------------|-------------|
| <b>ipv6 pim propagation-delay</b> | N/A         |

**Platform** N/A

**Description**

## 7.16 ipv6 pim override-interval

Use this command to set the override-interval on the interface.

Use the **no** or **default** form of this command to restore the default setting.

**ipv6 pim override-interval** *milliseconds*

**no ipv6 pim override-interval**

**default ipv6 pim override-interval**

**Parameter  
Description**


| Parameter           | Description                                          |
|---------------------|------------------------------------------------------|
| <i>milliseconds</i> | In the range 1 to 65,535 in the unit of milliseconds |

**Defaults** The default is 2,500 milliseconds.

**Command** Interface configuration mode

**Mode**

**Usage Guide** Use this command to set the override-interval for the interface.

 Change of propagation delay or prune delay will influence the override interval of Join/prune message. As specified in the protocol, the override interval of Join/prune message must be less than its hold time or otherwise this will cause temporary interruption.

**Configuration** The following example sets the override-interval to 3,000 milliseconds.

**Examples**

```
Ruijie(config)# interface gi 0/3
Ruijie(config-if-GigabitEthernet)# ipv6 pim override-interval 3000
```

**Related  
Commands**

| Command                           | Description |
|-----------------------------------|-------------|
| <b>ipv6 pim propagation-delay</b> | N/A         |

**Platform** N/A

**Description**

## 7.17 ipv6 pim probe-interval

Use this command to set the register probe interval.

Use the **no** or **default** form of this command to restore the default setting.

**ipv6 pim probe-interval** *seconds*

**no ipv6 pim probe-interval**

**default ipv6 pim probe-interval**


| Parameter Description | Parameter      | Description                                          |
|-----------------------|----------------|------------------------------------------------------|
|                       | <i>seconds</i> | In the range from 1 to 65,535 in the unit of seconds |

**Defaults** The default is 5 seconds.

**Command** Global configuration mode

**Mode**

**Usage Guide** Use this command to set the registration probe time. The DR can send the null registration message to the RP in a period before the registration suppression time expires. This period is called probe time of null registration packet.

-  The probe time must be less than half of registration suppression time. Furthermore, 3\* registration suppression time plus registration probe time should be no more than 65535s or otherwise the system triggers an alarm.

**Configuration** The following example sets the probe time as 6 seconds.

**Examples** Ruijie(config)# ipv6 pim probe-interval 6

| Related Commands | Command                              | Description |
|------------------|--------------------------------------|-------------|
|                  | <b>ipv6 pim register-suppression</b> | N/A         |

**Platform** N/A

**Description**

## 7.18 ipv6 pim propagation-delay

Use this command to set the propagation-delay on the interface.

Use the **no** or **default** form of this command to restore the default setting.


**ipv6 pim propagation-delay** *milliseconds*  
**no ipv6 pim propagation-delay**  
**default ipv6 pim propagation-delay**

| Parameter<br>Description | Parameter           | Description                                               |
|--------------------------|---------------------|-----------------------------------------------------------|
|                          | <i>milliseconds</i> | In the range from 1 to 32,765 in the unit of milliseconds |

**Defaults** The default is 500 milliseconds.

**Command Mode** Interface configuration mode

**Usage Guide** Use this command to set the propagation-delay for the interface.

 Change of propagation delay or prune delay will influence the override interval of Join/prune message. As specified in the protocol, the override interval of Join/prune message must be less than its hold time or otherwise this will cause temporary interruption.

**Configuration Examples** The following example sets the propagation delay to 600 milliseconds.

```
Ruijie(config)# interface gi 0/3
Ruijie(config-if-GigabitEthernet 0/3)# ipv6 pim propagation-delay 600
```

| Related<br>Commands | Command                           | Description |
|---------------------|-----------------------------------|-------------|
|                     | <b>ipv6 pim override-interval</b> | N/A         |
|                     | <b>ipv6 pim neighbor-tracking</b> | N/A         |

**Platform Description** N/A

## 7.19 ipv6 pim query-interval

Use this command to set the interval to send the hello packets.

Use the **no** or **default** form of this command to restore the default setting.

**ipv6 pim query-interval** *seconds*  
**no ipv6 pim query-interval**  
**default ipv6 pim query-interval**

| Parameter<br>Description | Parameter      | Description                                                                             |
|--------------------------|----------------|-----------------------------------------------------------------------------------------|
|                          | <i>seconds</i> | Interval to send the Hello message in the range from 1 to 65,535 in the unit of seconds |

**Defaults** The default is 30.

**Command Mode** Interface configuration mode

**Usage Guide** Upon updating the interval to send the Hello message, the time of holding the Hello message is updated by the following principle: The hold time is updated to be 3.5 times the transmission interval. If the transmission interval\*3.5 is more than 65535, the hold time is updated to 18725.

**Configuration Examples** The following example sets the interval to send the hello packets.

```
Ruijie(config)# interface gi 0/3
Ruijie(config-if-GigabitEthernet 0/3)# ipv6 pim query-interval 60
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A

## 7.20 ipv6 pim register-checksum-wholepkt

Use this command to calculate the checksum of the whole register packet.

Use the **no** or **default** form of this command to restore the default setting.

**ipv6 pim register-checksum-wholepkt [ group-list *ipv6\_access-list* ]**

**no ipv6 pim register-checksum-wholepkt [ group-list *ipv6\_access-list* ]**

**default ipv6 pim register-checksum-wholepkt [ group-list *ipv6\_access-list* ]**

**Parameter Description**

| Parameter                                 | Description                                                                                                        |
|-------------------------------------------|--------------------------------------------------------------------------------------------------------------------|
| <b>group-list <i>ipv6_access-list</i></b> | IPv6 ACL supporting named ACL.<br><i>ipv6_access-list</i> :all multicast packets use this configuration by default |

**Defaults** By default, the checksum of register messages calculates the head of PIM message and register message rather than the whole PIM message.

**Command Mode** Global configuration mode

**Usage Guide** Some vendors calculate checksum based on the overall registration packets. Ruijie Networks introduces this function for the compatibility with these vendors.

**Configuration Examples** The following example calculates the checksum of the whole register packet.

```
Ruijie(config)#ipv6 pim register-checksum-wholepkt group-list
```

```
checksum-access-list
Ruijie(config)# ipv6 access-list 99 checksum-access-list
Ruijie(config-ipv6-acl)# permit ipv6 any ff66::6666/64
```

**Related  
Commands**

| Command          | Description |
|------------------|-------------|
| ipv6 access-list | N/A         |

**Platform** N/A  
**Description**

## 7.21 ipv6 pim register-rate-limit

Use this command to limit the rate of register packets.

Use the **no** or **default** form of this command to restore the default setting.

**ipv6 pim register-rate-limit** *rate*

**no ipv6 pim register-rate-limit**

**default ipv6 pim register-rate-limit**

**Parameter  
Description**

| Parameter   | Description                                                                                    |
|-------------|------------------------------------------------------------------------------------------------|
| <i>rate</i> | Maximum number of register packets that can be sent per second, in the range from 1 to 65,535. |

**Defaults** By default, there is no rate limitation on register messages.

**Command  
Mode** Global configuration mode

**Usage Guide** This command is used to configure speed of transmitting register packet in each (S, G) status, not the speed of transmitting register packets in the system. Using this command will decrease the load of source DR and RP. The register packets can be transmitted at the speed within the limit.

**Configuration** The following example limits the rate of register packets.

**Examples** Ruijie(config)# ipv6 pim register-rate-limit 3000

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**



## 7.22 ipv6 pim register-rp-reachability

Use this command to check RP reachability before sending register packets.

Use the **no** or **default** form of this command to restore the default setting.

**ipv6 pim register-rp-reachability**

**no ipv6 pim register-rp-reachability**

**default ipv6 pim register-rp-reachability**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** By default, the RP reachability is not checked before sending register packets.

**Command Mode** Global configuration mode

**Usage Guide** This command is used to check the RP reachability before transmission. If not, register packets are not transmitted.

**Configuration Examples** The following example checks the RP reachability before sending register packets.

```
Ruijie(config)# ipv6 pim register-rp-reachability
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 7.23 ipv6 pim register-source

Use this command to specify the source IPv6 address in the register packets.

Use the **no** or **default** form of this command to restore the default setting.

**ipv6 pim register-source** { *ipv6\_local\_address* | *interface-type interface-number* }

**no ipv6 pim register-source**

**default ipv6 pim register-source**

| Parameter Description | Parameter                                        | Description                                                                         |
|-----------------------|--------------------------------------------------|-------------------------------------------------------------------------------------|
|                       | <i>ipv6_local_address</i>                        | Source IPv6 address of register packets                                             |
|                       | <i>interface-type</i><br><i>interface-number</i> | Interface whose IPv6 address is used as the source IPv6 address of register packets |

**Defaults** By default, the source IPv6 address of register packets is the IPv6 address of the DR interface connecting the multicast source.

**Command Mode** Global configuration mode

**Usage Guide** The source IPv6 address must be reachable. When RP receives the register packet, it transmits Register-Stop packet, using its source IPv6 address as the destination IPv6 address of the Register-Stop packet.

 It is not necessary to enable the PIM-SMv6 on the associated interfaces.

**Configuration Examples** The following example configures the source IPv6 address of register messages.

```
Ruijie(config)# ipv6 pim register-source 3333::3333
Ruijie(config)# ipv6 pim register-source gi 0/3
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A

## 7.24 ipv6 pim register-suppression

Use this command to set the register suppression time.

Use the **no** or **default** form of this command to restore the default setting.

**ipv6 pim register-suppression** *seconds*

**no ipv6 pim register-suppression**

**default ipv6 pim register-suppression**

**Parameter Description**

| Parameter      | Description                                                           |
|----------------|-----------------------------------------------------------------------|
| <i>seconds</i> | Suppression time in the range from 1 to 65,535 in the unit of seconds |

**Defaults** The default is 60 seconds.

**Command Mode** Global configuration mode

**Usage Guide** Executing this command on the DR will change the register packet suppression time configured. if the ipv6 pim rp-register-kat command is not configured, executing this command on RP will modify the period of RP keepalive.

**Configuration** The following example sets the register packet suppression time.

**Examples**

```
Ruijie(config)# ipv6 pim register-suppression 100
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 7.25 ipv6 pim rp embedded

Use this command to enable the embedded RP function.

Use the **no** or **default** form of this command to disable this function.

**ipv6 pim rp embedded [ group-list *ipv6\_acl\_name* ]**

**no ipv6 pim rp embedded**

**default ipv6 pim rp embedded**

| Parameter Description | Parameter                              | Description |
|-----------------------|----------------------------------------|-------------|
|                       | <b>group-list <i>ipv6_acl_name</i></b> | IPv6 ACL    |

**Defaults** This function is enabled by default.

**Command** Global configuration mode

**Mode**

**Usage Guide** This command is used to enable the embedded RP function explicitly and to enable the embedded RP for the IPv6 multicast address of specified embedded RP address.

**Configuration Examples** The following example enables the embedded RP for the IPv6 multicast addresses of all embedded RP addresses.

```
Ruijie(config)# ipv6 pim rp embedded
```

| Related Commands | Command                 | Description |
|------------------|-------------------------|-------------|
|                  | <b>ipv6 access-list</b> | N/A         |

**Platform** N/A

**Description**

## 7.26 ipv6 pim rp-address

Use this command to configure the static RP.

Use the **no** or **default** form of this command to restore the default setting.

**ipv6 pim rp-address** *ipv6\_rp-address* [ *ipv6\_access\_list* ]

**no ipv6 pim rp-address** *ipv6\_rp-address* [ *ipv6\_access-list* ]

**default ipv6 pim rp-address** *ipv6\_rp-address* [ *ipv6\_access-list* ]

| Parameter Description | Parameter               | Description                   |
|-----------------------|-------------------------|-------------------------------|
|                       | <i>ipv6_rp-address</i>  | IPv6 address of RP            |
|                       | <i>ipv6_access_list</i> | IPv6 ACL supporting named ACL |

**Defaults** No IPv6 address is configured for the static RP by default.

**Command** Global configuration mode

**Mode**

**Usage Guide** This system supports the configuration of multicast static RP, as well as the configuration of static RP and BSR mechanisms at the same time. When you use this command, note that:

- If both the BSR mechanism and the static RP configuration take effect, the dynamic configuration takes precedence.
- You can configure multiple multicast groups (using ACL) or all multicast groups (not using ACL) for the static RP. But a static RP can be configured only once.
- If there are more than one static RP in a multicast group, the one of the highest IPv6 address is used.
- Only the addresses permitted by ACL are valid multicast groups. By default, all the multicast groups 224/4 are permitted.
- After configuration is performed, the static RP's source IPv6 address is inserted to the group range-based static RP group tree structure. Each group range-based static multicast group maintains the chain list structure of a static RP group. This chain list is sorted in descending order of IPv6 address. When you select a RP from a static RP group, the first entry, namely the one with the largest IPv6 address, will be selected first.

Deleting a static IPv6 address also deletes this address from all the existing static RP groups and selects one from in the existing RP group tree structure as the RP address.

**Configuration** The following example configures the RP static address.

**Examples**

```
Ruijie(config)# ipv6 pim rp-address 3333::3333 acl
Ruijie(config)# ipv6 access-list acl
Ruijie(config)# permit ipv6 any ff66::6666/64
```

| Related Commands | Command                 | Description |
|------------------|-------------------------|-------------|
|                  | <b>ipv6 access-list</b> | N/A         |

**Platform** N/A  
**Description**

## 7.27 ipv6 pim rp-candidate

Use this command to configure the candidate RP (C-RP).

Use the **no** or **default** form of this command to restore the default setting.

**ipv6 pim rp-candidate** *interface-type interface-number* [ **priority** *priority-value* ] [ **interval** *interval-seconds* ] [ **group-list** *ipv6\_access-list* ]

**no ipv6 pim rp-candidate** [ *interface-type interface-number* ]

**default ipv6 pim rp-candidate** [ *interface-type interface-number* ]

| Parameter Description | Parameter                                        | Description                                                                            |
|-----------------------|--------------------------------------------------|----------------------------------------------------------------------------------------|
|                       | <i>interface-type</i><br><i>interface-number</i> | Interface type and interface number                                                    |
|                       | <i>priority-value</i>                            | (Optional) Priority in the range from 0 to 255, 192 by default                         |
|                       | <i>interval-seconds</i>                          | (Optional) Interval in the range from 0 to 16383 in the unit of seconds, 60 by default |
|                       | <i>ipv6_access_list</i>                          | (Optional) IPv6 ACL supporting named ACL                                               |

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** In the PIM-SMv6 protocol, the shared tree RPT created by the multicast routing uses the Rendezvous Point (RP) as the root node. RP is elected by the candidate RPs. After BSR is elected, all C-RPs sends C-RP messages in the unicast form to BSR regularly, and BSR spreads the messages throughout the PIM domain.

To specify an interface as the candidate RP of a specific group, execute this command with ACL.

Note that the group range is calculated only based on the permit rule, not the deny rule.

**Configuration** The following example configures the RP candidate.

```
Ruijie(config)# ipv6 pim rp-candidate gi 0/3 priority 200 group-list acl
interval 40
Ruijie(config)# ipv6 access-list acl
Ruijie(config-ipv6-acl)# permit ipv6 any ff66::6666/64
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 7.28 ipv6 pim rp-register-kat

Use this command to set the Keepalive Timer (KAT) of a (S, G) entry created by the register packet at the RP.

Use the **no** or **default** form of this command to restore the default setting.

**ipv6 pim rp-register-kat** *seconds*

**no ipv6 pim rp-register-kat**

**default ipv6 pim rp-register-kat**

| Parameter   | Parameter      | Description                                                     |
|-------------|----------------|-----------------------------------------------------------------|
| Description | <i>seconds</i> | KAT value in the range from 1 to 65,525 in the unit of seconds. |

**Defaults** The default is equal to the sum of register probe time and three times register suppression time.

**Command** Global configuration mode  
**Mode**

**Usage Guide** The KAT value at the RP should be greater than three times the register suppression time at the source DR. Otherwise, the KAT will end and the entry (S,G) will time out before another register packet is sent, so that multicast stream will break down in a short while.

**Configuration** The following example configures the KAT interval of RP.

**Examples** Ruijie(config)# `ipv6 pim rp-register-kat 250`

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 7.29 ipv6 pim sparse-mode

Use this command to enable PIM-SMv6 on the interface.

Use the **no** or **default** form of this command to restore the default setting.

**ipv6 pim sparse-mode**

**no ipv6 pim sparse-mode**





**default ipv6 pim sparse-mode**

| Parameter<br>Description | Parameter | Description |
|--------------------------|-----------|-------------|
|                          |           | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** This command is used to enable PIM-SMv6 on the interface.

-  You need to enable multicast routing forwarding in the global configuration mode before enabling PIM-SMv6. Otherwise, multicast packets cannot be forwarded even though you enable PIM-SM.
-  During the execution of this command, if the prompt "Failed to enable PIM-SMv6 on <Interface Name>, resource temporarily unavailable, please try again" appears, re-execute this command.
-  During the execution of this command, if the prompt "PIM-SMv6 Configure failed! VIF limit exceeded in NSM!!!" appears; it indicates the allowed configured interface number exceeds the upper limit of the multicast interfaces. In this case, if you still need to enable PIM-SMv6 on the interface, delete the unnecessary PIM-SMv6, or PIM-DMv6 interfaces.
-  IPv6 multicast packets cannot be forwarded through SuperVLAN.

**Configuration** The following example enables PIM-SMv6 on the interface.

**Examples**

```
Ruijie(config)# interface gi 0/3
Ruijie(config-if-GigabitEthernet 0/3)# ipv6 pim sparse-mode
```

| Related<br>Commands | Command | Description |
|---------------------|---------|-------------|
|                     |         | N/A         |

**Platform Description** N/A

## 7.30 ipv6 pim sparse-mode passive

Use this command to enable PIM-SMv6 PASSIVE.

Use the no or default form of this command to restore the default setting.

**ipv6 pim sparse-mode passive**

**no ipv6 pim sparse -mode passive**

**default ipv6 pim sparse-mode passive**

| Parameter<br>Description | Parameter | Description |
|--------------------------|-----------|-------------|
|                          |           |             |

|     |     |
|-----|-----|
| N/A | N/A |
|-----|-----|

**Defaults** PIM-SMv6 PASSIVE is disabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** Please configure multicast route forwarding in global configuration mode before enabling PIM-SMv6 PASSIVE.  
When PIM-SMv6 PASSIVE is enabled, IGMP is enabled on each interface automatically.  
Enabled with PIM-SMv6 PASSIVE, the interface neither receives nor sends PIM packets. Instead, it forwards multicast packets. PIM-SMv6 PASSIVE is generally configured on the device of the stub area, so as to avoid floods of PIM hello packets.

**Configuration Examples** The following example enables PIM-SMv6 PASSIVE on interface GigabitEthernet 0/3.

```
Ruijie# configure terminal
Ruijie(config)# interface gi 0/3
Ruijie(config-if-GigabitEthernet 0/3)# ipv6 pim sparse-mode passive
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A

## 7.31 ipv6 pim sparse-mode subvlan

Use this command to enable PIM-SMv6 on the Super VLAN interface. Use the **no** or **default** form of this command is to restore the default setting.

**ipv6 pim sparse-mode subvlan [ all | vid ]**

**no ipv6 pim sparse-mode subvlan**

**default ipv6 pim sparse-mode subvlan**

| Parameter          | Parameter  | Description                              |
|--------------------|------------|------------------------------------------|
| <b>Description</b> | <b>all</b> | Sends PIM packets to all sub VLANs.      |
|                    | <b>vid</b> | Sends PIM packets to the specified VLAN. |

**Defaults** PIM-SMv6 is disabled on the Super VLAN interface by default.

**Command Mode** Interface configuration mode

**Usage Guide** In general, a super VLAN includes many sub VLANs. If the PIM-SMv6 protocol is enabled on the



interfaces of the super VLAN, PIM-SMv6 multicast packets will be replicated and sent to all sub VLANs. As a result, the traffic may exceed the device capability, causing protocol flapping. The Super VLAN interface is disabled with PIM-SMv6 generally. Use this command to enable PIM-SMv6 on the Super VLAN interface to send PIM packets to all sub VLANs or the specified sub VLAN.

**Configuration Examples** The following example enables PIM-SMv6 on the Super VLAN interface and sends PIM packets to sub VLAN 200.

```
Ruijie# configure terminal
Ruijie(config)# interface vlan 100
Ruijie(config-if-vlan 100)# ipv6 pim sparse-mode subvlan 200
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A

## 7.32 ipv6 pim spt-threshold

Use this command to enable SPT switch.

Use the **no** or **default** form of this command to restore the default setting.

**ipv6 pim spt-threshold** [group-list *ipv6\_access-list*]

**no ipv6 pim spt-threshold** [ group-list *ipv6\_access-list* ]

**default ipv6 pim spt-threshold** [ group-list *ipv6\_access-list* ]

**Parameter Description**

| Parameter               | Description                              |
|-------------------------|------------------------------------------|
| <i>ipv6_access_list</i> | (Optional) IPv6 ACL supporting named ACL |

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** This command is used to enable the RP tree-to-SPT tree switching function in a specific multicast group range (using group-list) or all multicast groups (not using group-list) .

**Configuration Examples** The following example enables the SPT switch.

```
Ruijie(config)# ipv6 pim spt-threshold acl
Ruijie(config)# ipv6 access-list acl
Ruijie(config-ipv6-acl)# permit ipv6 fe80::2d0:f8ff:fe22:33ad /128
ff66::6666/64
```

| Related Commands | Command                       | Description |
|------------------|-------------------------------|-------------|
|                  | <code>ipv6 access-list</code> | N/A         |

Platform N/A

Description

## 7.33 ipv6 pim ssm

Use this command to enable SSM and set the SSM group address range.

Use the **no** or **default** form of this command to restore the default setting.

**ipv6 pim ssm** { **default** / **range** *ipv6\_access-list* }

**no ipv6 pim ssm**

**default ipv6 pim ssm**

| Parameter Description                | Parameter      | Description                   |
|--------------------------------------|----------------|-------------------------------|
|                                      | <b>default</b> |                               |
| <b>range</b> <i>ipv6_access_list</i> |                | IPv6 ACL supporting named ACL |

**Defaults** This function is disabled by default.

**Command** Global configuration mode

**Mode**

**Usage Guide** This command is used to enable PIM-SSMv6 (or in some specific multicast groups).

**Configuration** The following example sets the source-specific multicast of the multicast group range ACL.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# ipv6 pim ssm range acl
Ruijie(config-ipv6-acl)# permit ipv6 fe80::2d0:f8ff:fe22:33ad /128 ff32::3333/64
```

| Related Commands | Command                       | Description |
|------------------|-------------------------------|-------------|
|                  | <code>ipv6 access-list</code> | N/A         |

Platform N/A

Description

## 7.34 ipv6 pim static-rp-preferred

Use this command to configure a higher priority for static RP over the C-RP.

Use the **no** or **default** form of this command to restore the default setting.

**ipv6 pim static-rp-preferred**  
**no ipv6 pim static-rp-preferred**  
**default ipv6 pim static-rp-preferred**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** By default, the priority of the RP elected through BSR mechanism is high than the one configured statically.

**Command Mode** Global configuration mode

**Usage Guide** With this command configured, the priority of the static RP is higher than the one elected through the BSR mechanism.

**Configuration Examples** The following example configures the priority of the static RP is higher than the one elected through the BSR mechanism.

```
Ruijie(config-if)# ipv6 pim static-rp-preferred
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 7.35 ipv6 pim triggered-hello-delay

Use this command to configure Triggered-Hello-Delay time on the interface.

Use the **no** or **default** form of this command to restore the default setting.

**ipv6 pim triggered-hello-delay** *seconds*  
**no ipv6 pim triggered-hello-delay**  
**default ipv6 pim triggered-hello-delay**

| Parameter Description | Parameter      | Description                                      |
|-----------------------|----------------|--------------------------------------------------|
|                       | <i>seconds</i> | In the range from 1 to 5 in the unit of seconds. |

**Defaults** The default is 5 seconds.

**Command Mode** Interface configuration mode

**Usage Guide** Use this command to configure the triggered-hello-delay of the interface. When the interface starts or detects a new neighbor, it uses the trigger-hello-delay to generate random time, and then the interface sends the Hello message at the random time.

**Configuration** The following example sets the triggered-hello-delay to 3 seconds.

**Examples**

```
Ruijie(config)# interface gi 0/3
Ruijie(config-if-GigabitEthernet 0/3)# ipv6 pim triggered-hello-delay 3
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 7.36 show debugging

Use this command to display the debugging status.

**show debugging**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** N/A

**Configuration** The following example displays the debugging status.

**Examples**

```
Ruijie # show debugging
PIM-SM Debugging status:
PIM packet debugging is on.
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 7.37 show ipv6 pim sparse-mode bsr-router

Use this command to display the BSR information.

**show ipv6 pim sparse-mode bsr-router**

| Parameter<br>Description | Parameter | Description |
|--------------------------|-----------|-------------|
|                          | N/A       | N/A         |

### Defaults

**Command Mode** Privileged EXEC mode/ global configuration mode / interface configuration mode

**Usage Guide** N/A

**Configuration** The following example displays BSR information.

**Examples**

```
Ruijie# show ipv6 pim sparse-mode bsr-router
PIMv2 Bootstrap information
This system is the Bootstrap Router (BSR)
BSR address: 3333::8888
Uptime:00:03:31, BSR Priority: 64, Hash mask length: 126
Next bootstrap message in 00:00:47
Role: Candidate BSR Priority: 64, Hash mask length: 126
State: Elected BSR
Candidate RP: 3333::8888(GigabitEthernet 0/5)
Advertisement interval 60 seconds
Next Cand_RP_advertisement in 00:00:37
```

| Related<br>Commands | Command | Description |
|---------------------|---------|-------------|
|                     | N/A     | N/A         |

**Platform Description** N/A

## 7.38 show ipv6 pim sparse-mode interface

Use this command to display PIM-SMv6 interface information.

**show ipv6 pim sparse-mode interface** [ *interface-type interface-number* ] [ **detail** ]

| Parameter<br>Description | Parameter | Description |
|--------------------------|-----------|-------------|
|--------------------------|-----------|-------------|

|                                                  |                                                                                     |
|--------------------------------------------------|-------------------------------------------------------------------------------------|
| <i>interface-type</i><br><i>interface-number</i> | (Optional) Interface name. This command takes effect for all interfaces by default. |
| <b>detail</b>                                    | (Optional) Displays the details of an interface.                                    |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** N/A

**Configuration** The following example displays the PIM-SMv6 interface information.

**Examples**

```
Ruijie #show ipv6 pim sparse-mode interface detail
GigabitEthernet 0/5 (vif 1):
Address fe80::2d0:f8ff:fe22:33ad, DR fe80::2d0:f8ff:fe22:34b3
Hello period 30 seconds, Next Hello in 6 seconds
Triggered Hello period 5 seconds
Secondary addresses:
    3333::8888
    4444::4444
Neighbors:
    fe80::2d0:f8ff:fe22:34b3
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

### 7.39 show ipv6 pim sparse-mode local-members

Use this command to display the local MLD information on the PIM-SMv6 interface.

**show ipv6 pim sparse-mode local-members** [ *interface-type interface-number* ]

| Parameter Description | Parameter                                        | Description                                                                         |
|-----------------------|--------------------------------------------------|-------------------------------------------------------------------------------------|
|                       | <i>interface-type</i><br><i>interface-number</i> | (Optional) Interface name. This command takes effect for all interfaces by default. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** N/A

**Configuration** The following example displays the local MLD information on the PIM-SMv6 interface.

**Examples**

```
Ruijie (config-if)#show ipv6 pim sparse-mode local-members
PIM Local membership information
GigabitEthernet 0/5:
  (*, ff66::6666) : Include
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 7.40 show ipv6 pim sparse-mode mroute

Use this command to display the PIM-SMv6 routing information.

**show ipv6 pim sparse-mode mroute** [ *group-or-source-address* [ *group-or-source-address* ] ]

**Parameter  
Description**

| Parameter                      | Description                                                                                                |
|--------------------------------|------------------------------------------------------------------------------------------------------------|
| <i>group-or-source-address</i> | Group address or source address. Two addresses cannot both be the group addresses or the source addresses. |

**Defaults** N/A

**Command  
Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** This command is used to display route information. Only one group IPv6 address, one source IPv6 address or one group IPv6 address-source IPv6 address pair can be configured at a time. You can also specify no group IP address or source IPv6 address.

**Configuration** N/A

**Examples**

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 7.41 show ipv6 pim sparse-mode neighbor

Use this command to display the neighbor information.

**show ipv6 pim sparse-mode neighbor [ detail ]**

| Parameter Description | Parameter     | Description                                      |
|-----------------------|---------------|--------------------------------------------------|
|                       | <b>detail</b> | (Optional) Displays the details of an interface. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

### Usage Guide

**Configuration** The following example displays the neighbor information..

### Examples

```
Ruijie# show ipv6 pim sparse-mode neighbor detail
Nbr fe80::2d0:f8ff:fe22:34b3 (GigabitEthernet 0/5)
Expires in 86 seconds
Secondary addresses:
6666::6666
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 7.42 show ipv6 pim sparse-mode nexthop

Use this command to display the next hop information, including the interface ID, address and metric.

**show ipv6 pim sparse-mode nexthop**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode



**Usage Guide** N/A

**Configuration** N/A

**Examples**

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 7.43 show ipv6 pim sparse-mode rp mapping

Use this command to display the information on all RPs and the multicast groups they serve.

**show ipv6 pim sparse-mode rp mapping**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | mapping   |             |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** N/A

**Configuration** The following example displays the information on all RPs and the multicast groups they serve.

**Examples**

```
Ruijie# show ipv6 pim sparse-mode rp mapping
PIM Group-to-RP Mappings
This system is the Bootstrap Router (v2)
Group(s): ff00::/8
  RP: 3333::1
      Info source: 3333::1, via bootstrap, priority 192
      Uptime: 00:12:40, expires: 00:01:50
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 7.44 show ipv6 pim sparse-mode rp-hash

Use this command to display the RP information corresponding to the group address.

**show ipv6 pim sparse-mode rp-hash** *ipv6-group-address*

| Parameter Description | Parameter                 | Description        |
|-----------------------|---------------------------|--------------------|
|                       | <i>ipv6_group-address</i> | IPv6 group address |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** N/A

**Configuration** The following example displays the RP information corresponding to the group address..

**Examples**

```
Ruijie# show ipv6 pim sparse-mode rp-hash ff66::6666
RP: 3333::8888
Info source: 3333::8888, via bootstrap
PIMv2 Hash Value 126
RP 3333::8888, via bootstrap, priority 192, hash value 1468234650
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 7.45 show ipv6 pim sparse-mode track

Use this command to display the number of sent and received PIM packets during the period from the beginning of the statistics till now.

**show ipv6 pim sparse-mode track**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Mode**

**Usage Guide** This command is used to display the number of sent and received PIM packets during the period from the beginning of the statistics till now.. When the system starts up, it sets the start time of the statistics. The start time of the statistics is reconfigured and the PIMv6 packet counter is cleared on calling the clear ipv6 pim sparse-mode track every time.

**Configuration Examples** The following example displays the number of sent and received PIM packets during the period from the beginning of the statistics till now.

```
Ruijie# show ipv6 pim sparse-mode track
PIMv6 packet counters track
Elapsed time since counters cleared: 00:04:03
                received      sent
Valid PIMSMv6 packets:      0          8
Hello:                       0          8
Join-Prune:                  0          0
Register:                    0          0
Register-Stop:               0          0
Assert:                      0          0
BSM:                         0          0
C-RP-ADV:                    0          0
PIMDMv6-Graft:               0
PIMDMv6-Graft-Ack:           0
PIMDMv6-State-Refresh:       0
Unknown PIMv6 Type:          0
Errors:
Malformed packets:                0
Bad checksums:                    0
Send errors:                      0
Packets received with unknown PIMv6 version: 0
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description**

N/A

## 8 IGMP Snooping Commands

### 8.1 clear ip igmp snooping gda-table

Use this command to clear the Group Destination Address (GDA) table.

**clear ip igmp snooping gda-table**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** The IGMP Snooping GDA table contains VLAN IDs (VIDs), group addresses, routing interface (static or dynamic) ID, and member interface ID. Among them, the VID and group address identify a forwarding entry; the static routing interfaces will not age and cannot be deleted by using the **clear ip igmp snooping gda-table** command.

**Configuration** The following example clears the Group Destination Address (GDA) table.

**Examples** Ruijie# clear ip igmp snooping gda-table

**Platform Description** N/A

### 8.2 clear ip igmp snooping statistics

Use this command to clear IGMP Snooping statistics.

**clear ip igmp snooping statistics**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** This command is used to clear the IGMP Snooping statistics, which can be displayed by using the **show**

**ip igmp snooping statistics** command.

**Configuration** The following example clears the IGMP Snooping statistics.

**Examples** Ruijie# clear ip igmp snooping statistics

**Platform** N/A

**Description**

## 8.3 deny

Use this command to deny the forwarding of the multicast streams in the range specified by the profile.

**deny**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** The forwarding of the multicast streams in the range specified by the profile is denied.

**Command Mode** Profile configuration mode

**Usage Guide** First, configure the multicast range using the range command in the profile configuration mode. In addition, the profile must be applied to the interface in order to make the profile configuration take effect.

**Configuration** The following is an example of deny the forwarding of the multicast stream 224.2.2.2 to 224.2.2.244.

**Examples** Ruijie(config)# ip igmp profile 1  
Ruijie(config-profile)# range 224.2.2.2 224.2.2.244  
Ruijie(config-profile)# deny

**Platform** N/A

**Description**

## 8.4 ip igmp profile

Use this command to create a profile and enter the IGMP profile configuration mode.

Use the **no** or **default** form of this command to restore the default setting.

**ip igmp profile** *profile-number*

**no ip igmp profile** *profile-number*

**default ip igmp profile** *profile-number*

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|-----------------------|-----------|-------------|

|                       |                                             |
|-----------------------|---------------------------------------------|
| <i>profile-number</i> | Profile number, in the range from 1 to 1024 |
|-----------------------|---------------------------------------------|

**Defaults** No profile is created by default.

**Command Mode** Global configuration mode

**Usage Guide** The profile is a filter to permit/deny specified groups in the following steps:

- Use the **ip igmp profile** command to create a profile and enter profile configuration mode.
- Use the **range** command to define a profile range.
- Use the **permit** command to permit this profile in the filtering, or use the **deny** command to deny this profile in the filtering.
- If the **deny** command is used without any profile specified, all profiles in the profile are permitted.
- If the **permit** command is used without any profile specified, all profiles in the profile are denied.

**Configuration Examples** The following example creates and permits profile 1 with addresses from 224.2.2.2 to 224.2.2.244.

```
Ruijie(config)# ip igmp profile 1
Ruijie(config-profile)# range 224.2.2.2 224.2.2.244
Ruijie(config-profile)# permit
```

**Platform** N/A

**Description**

## 8.5 ip igmp snooping

Use this command to enable IGMP snooping and enter the IVGL mode.

**ip igmp snooping ivgl**

Use this command to enable IGMP snooping and enter the SVGL mode.

**ip igmp snooping svgl**

Use this command to enable IGMP snooping and enter the IVGL-SVGL mode.

**ip igmp snooping ivgl-svgl**

Use the **no** or **default** command to restore the default setting.

**no ip igmp snooping**

**default ip igmp snooping**


| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** IGMP Snooping is disabled by default.

**Command Mode** Global configuration mode

- Usage Guide**
- **IVGL (Independent VLAN Group Learning):** In this mode, the multicast flows in different VLANs are independent. A host can only request multicast flows to the router interface in the same VLAN. Upon receiving the multicast flow in any VLAN, the switch forwards the flow to the member port in the same VLAN.
  - **SVGL (Shared VLAN Group Learning):** In this mode, the hosts in different VLANs share the same multicast flow. A host can request multicast flows across VLANs. By designating a Shared VLAN, you can only forward the multicast flows received in this Shared VLAN to other member ports in different VLANs. In the SVGL mode, IGMP Profile must be used to divide the multicast address range, within which the multicast flow can be forwarded across VLANs. By default, all group range is not within the SVGL range and all multicast flows are dropped. As shown in Figure-3:
  - **IVGL-SVGL mode:** also known as promiscuous mode. In this mode, the IVGL mode and the SVGL mode can co-exist. Use IGMP Profile to divide a set of multicast address range to the SVGL, within which the member port of the multicast forwarding entry can be forwarded across VLANs and without which the member ports are forwarded in the same VLAN.
  - For wireless products, only IVGL mode is supported. Use the **ip igmp snooping** command to enable IGMP Snooping in global configuration mode, and use the **igmp snooping** command in AP configuration mode.

 SVGL mode and IVGL-SVGL mode conflict with the IP multicast function.

 PIM Snooping must depend on either IVGL or IVGL-SVGL mode of IGMP Snooping. Use **no ip igmp snooping** command to disable IGMP Snooping after PIM Snooping is disabled.

**Configuration** The following example enables IGMP Snooping and enters the IVGL mode.

**Examples** Ruijie(config)# ip igmp snooping ivgl

The following example enables IGMP Snooping and enters the SVGL mode.

```
Ruijie(config)# ip igmp snooping svgl
Ruijie(config)# ip igmp snooping svgl profile 1
```

The following example enables IGMP Snooping and enters the IVGL-SVGL mode.

```
Ruijie(config)# ip igmp snooping ivgl-svgl
Ruijie(config)# ip igmp snooping svgl profile 1
```

The following example enables IGMP Snooping on APs.

```
Ruijie(config)# ip igmp snooping
Ruijie(ap-config)# igmp snooping
```

**Platform** N/A  
**Description**

## 8.6 ip igmp snooping dyn-mr-aging-time

Use this command to set the aging time of a dynamic routing interface.

Use the **no** or **default** form of this command to restore the default setting.

**ip igmp snooping dyn-mr-aging-time** *seconds*

**no ip igmp snooping dyn-mr-aging-time**

**default ip igmp snooping dyn-mr-aging-time**

| Parameter Description | Parameter      | Description                                       |
|-----------------------|----------------|---------------------------------------------------|
|                       | <i>seconds</i> | Aging time from 1 to 3,600 in the unit of seconds |

**Defaults** The default is 300 seconds.

**Command Mode** Global configuration mode

**Usage Guide** If a dynamic routing interface does not receive IGMP query packets or PIM hello packets before aged, this interface will be deleted.  
When the dynamic routing interface learning function is enabled, this command sets the aging time of the routing interface. If the aging time is set too short, the routes may be added and deleted frequently.

**Configuration Examples** The following example sets the aging time of the routing interface that the switch learns dynamically to 100 seconds.

```
Ruijie(config)# ip igmp snooping dyn-mr-aging-time 100
```

**Platform Description** N/A

## 8.7 ip igmp snooping fast-leave enable

Use this command to enable the fast leave function.

Use the **no** or **default** form of this command to restore the default setting.

**ip igmp snooping fast-leave enable**

**no ip igmp snooping fast-leave enable**

**default ip igmp snooping fast-leave enable**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** This function is disabled by default.



|                      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Command Mode</b>  | Global configuration mode                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Usage Guide</b>   | <p>After you execute this command to enable the fast-leave function, the system will remove the corresponding multicast group on the corresponding interface upon the receipt of the IGMP leave message.</p> <p>Subsequently, when the system receives a specific group query packet, the system does not forward it to the corresponding interface. Leave packets refer to the IGMPv2 leave packets. The fast leave function applies to scenarios in which one interface is connected to only one host. This function saves bandwidth and resources.</p> |
| <b>Configuration</b> | The following example enables the fast leave function.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Examples</b>      | <pre>Ruijie(config)# ip igmp snooping fast-leave</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Platform</b>      | N/A                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Description</b>   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |

## 8.8 ip igmp snooping filter

Use this command to specify the profile for ports.

Use the **no** or **default** form of this command to restore the default setting.

**ip igmp snooping filter** *profile-number*

**no ip igmp snooping filter** *profile-number*

**default ip igmp snooping filter**

Use this command to specify the profile for VLANs.

Use the **no** or **default** form of this command to restore the default setting.

**ip igmp snooping vlan** *vlan-id* **filter** *profile-number*

**no ip igmp snooping vlan** *vlan-id* **filter**

**default ip igmp snooping vlan** *vlan-id* **filter**

| Parameter Description | Parameter             | Description                   |
|-----------------------|-----------------------|-------------------------------|
|                       | <i>profile-number</i> | Profile number from 1 to 1024 |

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode/Interface configuration mode

**Usage Guide** A specific profile must be created before association.

**Configuration** The following example specifies profile 1 for interface fastEthernet 0/1.

**Examples**

```
Ruijie(config)# interface fastEthernet 0/1
```

```
Ruijie(config-if)# ip igmp snooping filter 1
```

**Platform** N/A

**Description**

## 8.9 ip igmp snooping host-aging-time

Use this command to configure the aging time of IGMP dynamic ports.

Use the **no** or **default** form of this command to restore the default setting.

**ip igmp snooping host-aging-time** *seconds*

**no ip igmp snooping host-aging-time**

**default ip igmp snooping host-aging-time**

| Parameter          | Parameter      | Description                                                        |
|--------------------|----------------|--------------------------------------------------------------------|
| <b>Description</b> | <i>seconds</i> | Aging time. The unit is second. The value ranges from 1 to 65,535. |

**Defaults** The default is 260 seconds.

**Command Mode** Global configuration mode

**Usage Guide** The aging time of a dynamic port is set by the system when the port receives an IGMP packet from the host for joining a certain IP multicast group. When such an IGMP packet is received, the system resets the aging timer for the port. The duration of this timer is determined by **host-aging-time**. If the timer expires, the system determines that there is no host in this port for receiving multicast packets. The multicast device removes the port from the IGMP Snooping group. After the **ip igmp snooping host-aging-time** command is executed, the aging time will be determined by **host-aging-time**. This command takes effect only after the system receives the next IGMP packet. This command does not change the current aging time.

**Configuration Examples** The following example sets the aging time to 30 seconds.

```
Ruijie(config)# ip igmp snooping host-aging-time 30
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 8.10 ip igmp snooping l2-entry-limit

Use this command to set the maximum number of multicast groups.

Use the **no** or **default** form of this command to restore the default setting.

**ip igmp snooping l2-entry-limit** *number*  
**no ip igmp snooping l2-entry-limit**  
**default ip igmp snooping l2-entry-limit**

| Parameter   | Parameter     | Description                                                    |
|-------------|---------------|----------------------------------------------------------------|
| Description | <i>number</i> | Number of multicast groups. The value ranges from 0 to 65,536. |

**Defaults** The default is 65,536.

**Command Mode** Global configuration mode

**Usage Guide** The maximum number of multicast groups includes the multicast groups in all ports of all VLANs (including dynamic and static multicast groups). When the number of multicast groups reaches the limit, learning new group records and configuring new static multicast group ports are not allowed.

**Configuration** The following example sets the maximum number of multicast groups to 2000.

**Examples** Ruijie(config)# ip igmp snooping l2-entry-limit 2000

| Related Commands | Command                      | Description                                      |
|------------------|------------------------------|--------------------------------------------------|
|                  | <b>show ip igmp snooping</b> | Displays the maximum number of multicast groups. |

**Platform Description** N/A

## 8.11 ip igmp snooping limit-ipmc

Use this command to add a multicast source IP address check entry.

Use the **no** or **default** form of this command is used to delete a source IP checklist entry.

**ip igmp snooping limit-ipmc** *vlan vid address gaddress server saddress*

**no ip igmp snooping limit-ipmc** *vlan vid address gaddress*


**default ip igmp snooping limit-ipmc** *vlan vid address gaddress*

| Parameter   | Parameter             | Description                 |
|-------------|-----------------------|-----------------------------|
| Description | <i>vid</i>            | VLAN ID                     |
|             | <i>group-address</i>  | Multicast group address     |
|             | <i>source-address</i> | Multicast source IP address |

**Defaults** Only source IP address check is enabled by default.

**Command Mode** Global configuration mode

**Usage Guide** This command is used to filter the multicast packets. With it enabled, all multicast packets from illegal IP addresses will be discarded.

 Source IP address check and multicast routing function cannot be enabled meanwhile.

Configuration steps:

1. Enable source IP address check and specify the source IP address.
2. (Optional) Specify the multicast group address and source IP address for a specific VLAN.

**Configuration Examples** The following example enables source address check to receive multicast packets only from 192.168.1.10 and allows packets into VLAN 203 and VLAN 104 from (192.168.1.10 , 229.1.1.1).

```
Ruijie# configure terminal
Ruijie(config)# ip igmp snooping source-check default-server 192.168.1.10
Ruijie(config)# ip igmp snooping limit-ipmc vlan 203 address 229.1.1.1 server
192.168.1.10
Ruijie(config)# ip igmp snooping limit-ipmc vlan 204 address 229.1.1.1 server
192.168.1.10
Ruijie(config)# end
```

**Platform** N/A

**Description**

## 8.12 ip igmp snooping max-groups

Use this command to configure the maximum number of groups that can be added dynamically to this interface.

Use the **no** or **default** form of this command to restore the default setting.

**ip igmp snooping max-groups** *number*

**no ip igmp snooping max-groups**

**default ip igmp snooping max-groups**

| Parameter Description | Parameter     | Description                              |
|-----------------------|---------------|------------------------------------------|
|                       | <i>number</i> | The maximum group number from 0 to 1,024 |

**Defaults** No maximum group number is configured by default.

**Command Mode** Interface configuration mode

**Usage Guide** If a maximum number of multicast groups are configured, the device will no longer receive and process IGMP Report messages when the number of multicast groups on this interface is beyond the range.

**Configuration Examples** The following example configures the maximum number of multicast groups to 100 on the megabit interface 0/1:

```
Ruijie(config)# interface Ethernet 0/1
Ruijie(config-if)# ip igmp snooping max-group 100
```

**Platform** N/A

**Description**

## 8.13 ip igmp snooping mrouter learn pim-dvmrp

Use this command to configure a device to listen to the IGMP Query/Dvmrp or PIM Help packets dynamically in order to automatically identify a routing interface

Use the **no** form of this command to disable the dynamic learning.

Use the **default** form of this command to restore the default setting.

**ip igmp snooping [ vlan *vid* ] mrouter learn pim-dvmrp**

**no ip igmp snooping [ vlan *vid* ] mrouter learn pim-dvmrp**

**default ip igmp snooping [ vlan *vid* ] mrouter learn pim-dvmrp**

**Parameter Description**

| Parameter              | Description                                                           |
|------------------------|-----------------------------------------------------------------------|
| <b>vlan <i>vid</i></b> | VLAN ID. By default, the specified version is supported on all VLANs. |

**Defaults** This function is enabled by default.

**Command**

**Mode** Global configuration mode

**Usage Guide**

Routing interface is a port through which a multicast device (with IGMP Snooping enabled) is directly connected to a multicast neighbouring device (with multicast routing protocols enabled).

By default, the dynamic routing interface learning function is enabled. You can use the no form of this command to disable this function and clear all routing interfaces learnt dynamically. With dynamic routing interface learning function disabled globally, the function of all vlans will be disabled. Beside, with this function enabled globally, if the function of specified vlan is disabled, the dynamic routing interface learning function of the corresponding vlan is disabled. When the source port check function is enabled, only the multicast flow enters from the routing interface is legal and it is forwarded to the registered interface by the multicast equipment, the multicast flow from the non routing interface is considered to be the illegal and is discarded. With the source port check function enabled, the dynamic routing interface learning function will improve the application flexibility of IGMP snooping.

**Configuration** The following example enables the dynamic routing interface learning function on VLAN 1.

**Examples**

```
Ruijie(config)# no ip igmp snooping mrouter learn pim-dvmrp
Ruijie(config)# ip igmp snooping vlan 1 mrouter learn pim-dvmrp
```

**Platform** N/A

**Description**

## 8.14 ip igmp snooping preview

Use this command to allow the user to preview the specific multicast streams when the user doesn't have access to such multicast streams.

Use **no** or **default** form of this command to disable multicast preview.

**ip igmp snooping preview** *profile-number*

**no ip igmp snooping preview**

**default ip igmp snooping preview**

| Parameter Description | Parameter             | Description             |
|-----------------------|-----------------------|-------------------------|
|                       | <i>profile-number</i> | Profile number (1-1024) |

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** Apply the IGMP Profile to a multicast preview function. When the user doesn't have access to the multicast streams (namely the user might be filtered by IGMP Snooping filter), it can allow the user to preview partial contents. This function shall be used in conjunction with IGMP Snooping filter or multicast control in order to realize effective multicast preview.

**Configuration Examples** The following example associates the profile 2 to the Ethernet 0/1 and associates multicast preview with profile 1.

```
Ruijie(config)# ip igmp snooping preview 1
Ruijie(config-if)# int Ethernet 0/1
Ruijie(config-if)# ip igmp snooping filter 2
```

**Platform Description** N/A

## 8.15 ip igmp snooping preview interval

Use this command to configure the interval that allows the user to preview the specific multicast streams when the user doesn't have access to such multicast streams.

Use **no** or **default** form of this command to restore the default setting.

**ip igmp snooping preview interval** *seconds*

**no ip igmp snooping preview interval**

**default ip igmp snooping preview interval**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|-----------------------|-----------|-------------|

|                |                                                       |
|----------------|-------------------------------------------------------|
| <i>seconds</i> | Preview interval from 1 to 300 in the unit of seconds |
|----------------|-------------------------------------------------------|

**Defaults** The default is 60 seconds.

**Command Mode** Global configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example sets the multicast preview interval as 100 seconds on the 100M port of 0/1:

```
Ruijie(config)# ip igmp snooping preview 1
Ruijie(config)# ip igmp snooping preview interval 100
```

**Platform** N/A

**Description**

## 8.16 ip igmp snooping querier

Use this command to enable the IGMP querier.

Use **no** or **default** form of this command to restore the default setting.

**ip igmp snooping [ vlan *vid* ] querier**

**no ip igmp snooping [ vlan *vid* ] querier**

**default ip igmp snooping [ vlan *vid* ] querier**

| Parameter Description | Parameter              | Description                                                           |
|-----------------------|------------------------|-----------------------------------------------------------------------|
|                       | <b>vlan <i>vid</i></b> | VLAN ID. By default, the specified version is supported on all VLANs. |

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** After globally enabling the IGMP querier, you must enable the IGMP querier function in VLAN to activate this function.

If the IGMP querier function is disabled globally, the IGMP querier will be disabled in all VLANs.

**Configuration Examples** The following example enables the IGMP querier function in VLAN 2.

```
Ruijie(config)# ip igmp snooping querier
Ruijie(config)# ip igmp snooping vlan 2 querier
```

**Platform** N/A

**Description**

## 8.17 ip igmp snooping querier address

Use this command to specify a source IP address for IGMP querier.

Use **no** or **default** form of this command to remove the source IP address configured.

**ip igmp snooping [ vlan *vid* ] querier address *a.b.c.d***

**no ip igmp snooping [ vlan *vid* ] querier address**

**default ip igmp snooping [ vlan *vid* ] querier address**

| Parameter Description | Parameter              | Description                                                           |
|-----------------------|------------------------|-----------------------------------------------------------------------|
|                       | <b>vlan <i>vid</i></b> | VLAN ID. By default, the specified version is supported on all VLANs. |
|                       | <b><i>a.b.c.d</i></b>  | Source IP address of the IGMP querier                                 |

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** After enabling IGMP querier, you must configure a source IP address for the IGMP querier to activate this function..

If the IGMP querier source IP has been specified in VLAN, the source IP configured in the relevant VLAN will be used first.

**Configuration Examples** The following example specifies the source IP of the IGMP querier as 1.1.1.1 on the device.

```
Ruijie(config)# ip igmp snooping querier address 1.1.1.1
```

The following example specifies the source IP of the IGMP querier as 1.1.1.1 in VLAN 3.

```
Ruijie(config)# ip igmp snooping vlan 3 querier address 1.1.1.1
```

**Platform Description**

## 8.18 ip igmp snooping querier max-response-time

Use this command to configure the maximum response time of the IGMP querier.

Use **no** or **default** form of this command to restore to the default setting.

**ip igmp snooping [ vlan *vid* ] querier max-response-time *seconds***

**no ip igmp snooping [ vlan *vid* ] querier max-response-time**

**default ip igmp snooping [ vlan *vid* ] querier max-response-time**

| Parameter Description | Parameter              | Description                                                           |
|-----------------------|------------------------|-----------------------------------------------------------------------|
|                       | <b><i>seconds</i></b>  | Maximum response time from 1 to 25 in the unit of seconds             |
|                       | <b>vlan <i>vid</i></b> | VLAN ID. By default, the specified version is supported on all VLANs. |



|                               |                                                                                                                                                                                                                                                                                                                                                      |
|-------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Defaults</b>               | The default is 10 seconds.                                                                                                                                                                                                                                                                                                                           |
| <b>Command Mode</b>           | Global configuration mode                                                                                                                                                                                                                                                                                                                            |
| <b>Usage Guide</b>            | By default, the maximum response time is 10 seconds. If the maximum response time has been specified in the corresponding VLAN, the value specified in VLAN will be used first.                                                                                                                                                                      |
| <b>Configuration Examples</b> | The following example specifies the maximum response time of the IGMP querier on the device.<br><pre>Ruijie(config)# ip igmp snooping querier max-response-time 15</pre> The following example specifies the maximum response time of the IGMP querier in VLAN 3.<br><pre>Ruijie(config)# ip igmp snooping vlan 3 querier max-response-time 15</pre> |
| <b>Platform Description</b>   | N/A                                                                                                                                                                                                                                                                                                                                                  |

## 8.19 ip igmp snooping querier query-interval

Use this command to specify the interval for IGMP querier to send query packets.

Use **no** or **default** form of this command to restore the default setting.

**ip igmp snooping [ vlan *vid* ] querier query-interval *seconds***

**no ip igmp snooping [ vlan *vid* ] querier query-interval**

**default ip igmp snooping [ vlan *vid* ] querier query-interval**

| Parameter Description | Parameter              | Description                                                           |
|-----------------------|------------------------|-----------------------------------------------------------------------|
|                       | <i>seconds</i>         | Query interval from 1 to 18,000 in the unit of seconds                |
|                       | <b>vlan <i>vid</i></b> | VLAN ID. By default, the specified version is supported on all VLANs. |

|                               |                                                                                                                                                                                                                                                                                              |
|-------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Defaults</b>               | The default is 60 seconds.                                                                                                                                                                                                                                                                   |
| <b>Command Mode</b>           | Global configuration mode                                                                                                                                                                                                                                                                    |
| <b>Usage Guide</b>            | If the query interval has been configured in the corresponding VLAN, the value specified in VLAN will be used first.                                                                                                                                                                         |
| <b>Configuration Examples</b> | The following example configures the query interval on the device.<br><pre>Ruijie(config)# ip igmp snooping querier query-interval 100</pre> The following example configures the query interval in VLAN 3.<br><pre>Ruijie(config)# ip igmp snooping vlan 3 querier query-interval 100</pre> |
| <b>Platform</b>               | N/A                                                                                                                                                                                                                                                                                          |

**Description**

## 8.20 ip igmp snooping querier timer expiry

Use this command to specify the expiration timer for non-querier.

Use **no** form of this command to restore the default setting.

**ip igmp snooping [ vlan *vid* ] querier timer expiry *seconds***

**ip igmp snooping [ vlan *vid* ] querier timer expiry *seconds***

**default ip igmp snooping [ vlan *vid* ] querier timer expiry**

| Parameter Description | Parameter       | Description                                                           |
|-----------------------|-----------------|-----------------------------------------------------------------------|
|                       | <i>seconds</i>  | The expiration timer from 60 to 300 in the unit of seconds            |
|                       | <i>vlan vid</i> | VLAN ID. By default, the specified version is supported on all VLANs. |

**Defaults** The default is 125 seconds.

**Command Mode** Global configuration mode

**Usage Guide** After globally enabling IGMP querier, if the device is elected as a non-querier, execute this command to change the expiration timer for non-querier.  
If expiration timer has been configured in the corresponding VLAN, the value specified in VLAN will be used first.

**Configuration** The following example configures the non-querier expiration timer on the device.

**Examples**

```
Ruijie(config)# ip igmp snooping querier timer expiry 60
```

The following example configures the non-querier expiration timer in VLAN 3.

```
Ruijie(config)# ip igmp snooping vlan 3 querier timer expiry 60
```

**Platform** N/A

**Description**

## 8.21 ip igmp snooping querier version

Use the following commands to specify IGMP Snooping querier version.

**ip igmp snooping [ vlan *vid* ] querier version 1**

**ip igmp snooping [ vlan *vid* ] querier version 2**

**ip igmp snooping [ vlan *vid* ] querier version 3**

Use **no** or **default** form of this command to restore to the default setting.

**no ip igmp snooping [ vlan *vid* ] querier version**

**default ip igmp snooping [ vlan *vid* ] querier version**

| <b>Parameter Description</b>  | Parameter                                                                                                       | Description                                                           |
|-------------------------------|-----------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------|
|                               | <code>vlan vid</code>                                                                                           | VLAN ID. By default, the specified version is supported on all VLANs. |
| <b>Defaults</b>               | The default version is IGMPv2.                                                                                  |                                                                       |
| <b>Command Mode</b>           | Global configuration mode                                                                                       |                                                                       |
| <b>Usage Guide</b>            | If an IGMP querier version has been configured in a VLAN, the version specified in the VLAN will be used first. |                                                                       |
| <b>Configuration Examples</b> | The following example configures IGMP querier version on the device.                                            |                                                                       |
|                               | <pre>Ruijie(config)# ip igmp snooping querier version 1</pre>                                                   |                                                                       |
| <b>Platform Description</b>   | N/A                                                                                                             |                                                                       |

## 8.22 ip igmp snooping query-max-response-time

Use this command to specify the time for the switch to wait for the member join message after receiving the **query** message.

Use the **no** or **default** form of this command to restore the default setting.

**ip igmp snooping query-max-response-time** *seconds*

**no ip igmp snooping query-max-resposne-time**

**default ip igmp snooping query-max-response-time**

| <b>Parameter Description</b> | Parameter      | Description                                                                                               |
|------------------------------|----------------|-----------------------------------------------------------------------------------------------------------|
|                              | <i>seconds</i> | The aging time of the routing interface that the switch learns dynamically, in the range from 1 to 65.535 |

**Defaults** The default is 10 seconds.

**Command Mode** Global configuration mode

**Usage Guide** You can specify the time for the switch to wait for the member join message after receiving the query message. If the switch does not receive the member join message in the specified time, it considers that the member has left and then deletes the member.

This command lets you adjust the waiting time after receiving the query message. This command takes effect only after the switch receives the next member join message. This command does not change the current wait time.

**Configuration** The following examples sets the aging time of the routing interface that the switch learns dynamically to 100 seconds.

**Examples**

```
Ruijie(config)# ip igmp snooping query-max-response-time 100
```

**Platform** N/A

**Description**

## 8.23 ip igmp snooping source-check default-server

Use this command to enable the source IP address check to permit one or several IPMC flows from the server of the specified IP address.

Use the **no** or **default** form of this command is used to restore the default setting.

**ip igmp snooping source-check default-server** *source-address*

**no ip igmp snooping source-check**

**default ip igmp snooping source-check**

| Parameter Description | Parameter             | Description                         |
|-----------------------|-----------------------|-------------------------------------|
|                       | <i>source-address</i> | Default multicast source IP address |

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** The source IP address check function takes effect globally. Once it is enabled, only the IPMC streams from the specified IP address are permitted.

 Source IP address check and IP multicast function cannot work meanwhile.

The device allows users to configure the source IP address of all IPMC streams, called default multicast server. The default server must be set as long as the source IP address check function is enabled.

**Configuration** The following example enables the multicast source IP address check function.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# ip igmp snooping source-check default-server 192.168.1.10
Ruijie(config)# ip igmp snooping limit-ipmc vlan 203 address 229.1.1.1 server
192.168.1.10
Ruijie(config)# ip igmp snooping limit-ipmc vlan 204 address 229.1.1.1 server
192.168.1.10
Ruijie(config)# end
```

**Platform** N/A

**Description**

## 8.24 ip igmp snooping source-check port

Use this command to enable the source port check function of IGMP Snooping.

Use the **no** or **default** form of this command to restore the default setting.

**ip igmp snooping source-check port**

**no ip igmp snooping source-check port**

**default ip igmp snooping source-check port**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** The source port check function is used to permit one or several IPMC flows from the mroute port. When it is enabled, only the IPMC streams from the specified port are permitted. When it is disabled, all the IPMC streams are permitted and forwarded.

**Configuration Examples** The following example enables the source port check function of IGMP Snooping.

```
Ruijie(config)# ip igmp snooping source-check port
```

**Platform Description** N/A

## 8.25 ip igmp snooping suppression enable

Use this command to enable IGMP snooping suppression.

Use the **no** or **default** form of this command to restore the default setting.

**ip igmp snooping suppression enable**

**no ip igmp snooping suppression enable**

**default ip igmp snooping suppression enable**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** When this function is enabled, IGMP Snooping only forwards the first report from a specific VLAN or group, and suppresses the following reports to constrain traffic in the networks.  
This function is only supported on IGMPv1 and IGMPv2 reports.

**Configuration** The following example enables IGMP snooping suppression on the device.

**Examples**

```
Ruijie(config)# ip igmp snooping suppression enable
```

**Platform** N/A

**Description**

## 8.26 ip igmp snooping svgl profile

Use this command to specify the multicast group address range applied in the SVGL/IVGL-SVGL mode.  
Use the **no** or **default** form of this command to restore the default setting.

**ip igmp snooping svgl profile** *profile-number*

**no ip igmp snooping svgl profile**

**default ip igmp snooping svgl profile**

| Parameter Description | Parameter             | Description                             |
|-----------------------|-----------------------|-----------------------------------------|
|                       | <i>profile-number</i> | Profile number, in the range of 1-1,024 |

**Defaults** No profile is associated.

**Command Mode** Global configuration mode

**Usage Guide** When the IGMP Snooping works in the SVGL and IVGL-SVGL mode, a profile shall be associated to specify the multicast group address range applied in the SVGL or IVGL-SVGL mode. That is to say, the member ports of the multicast forwarding entry can be forwarded across the VLANs while the member ports of the multicast forwarding entry in the other multicast address range must belong to the same VLAN.

**Configuration** The following example specifies the profile 2 applied in SVGL mode.

**Examples**

```
Ruijie(config)# ip igmp snooping svgl profile 2
```

**Platform** N/A

**Description**

## 8.27 ip igmp snooping svgl subvlan

Use this command to specify the subvlan of multicast VLAN.

Use the **no** or **default** form of this command to restore the default setting.

**ip igmp snooping svgl subvlan** [*vid-range*]

**no ip igmp snooping svgl subvlan** [*vid-range*]

**default ip igmp snooping svgl subvlan** [*vid-range*]

| Parameter Description | Parameter        | Description                 |
|-----------------------|------------------|-----------------------------|
|                       | <i>vid-range</i> | VLAN ID or range of VLAN ID |

**Defaults** By default, all VLANs except shared VLANs serve as its sub VLANs.

**Command Mode** Global configuration mode

**Usage Guide** This command only takes effect in SVGL and IVGL-SVGL mode.

**Configuration Examples** The following example specifies VLAN 3 as the shared VLAN and VLAN 2, VLAN 5 to 7 as the sub VLANs.

```
Ruijie(config)# ip igmp snooping svgl vlan 3
Ruijie(config)# ip igmp snooping svgl subvlan 2,5-7
```

**Platform Description** N/A

## 8.28 ip igmp snooping svgl vlan

Use this command to specify the shared VLAN in SVGL mode.

Use the **no** form of this command to restore the default setting.

**ip igmp snooping svgl vlan** *vid*

**no ip igmp snooping svgl vlan**

**default ip igmp snooping svgl vlan**

| Parameter Description | Parameter  | Description |
|-----------------------|------------|-------------|
|                       | <i>vid</i> | VLAN ID     |

**Defaults** By default , the shared VLAN is VLAN 1.

**Command Mode** Global configuration mode

**Usage Guide** This command only works in the SVGL and IVGL-SVGL mode.

**Configuration** The following example specifies VLAN 3 as the shared VLAN and VLAN 2, VLAN 5 to 7 as the sub

**Examples**

VLANs.

```
Ruijie(config)# ip igmp snooping svgl vlan 3
Ruijie(config)# ip igmp snooping svgl subvlan 2,5-7
```

**Platform**

N/A

**Description**

## 8.29 ip igmp snooping tunnel

Use this command to enable 802.1Q tunneling (QinQ) support for IGMP Snooping.

Use the **no** or **default** form of this command to restore the default setting.

**ip igmp snooping tunnel**

**no ip igmp snooping tunnel**

**default ip igmp snooping tunnel**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults**

This function is disabled.

**Command Mode**

Global configuration mode

**Usage Guide**

After IGMP Snooping is enabled and dot1q-tunnel port is configured on the device, IGMP packets received from dot1q-tunnel port will be handled in two ways:

- First: QinQ transmits IGMP packets transparently. Create multicast entries in the VLAN to which the IGMP packets belong, and forward IGMP packets in the VLAN.
- For example: It is assumed that IGMP Snooping has been enabled on the device; Port A is a dot1q-tunnel port; the default VLAN of Port A is VLAN 1, and packets from VLAN 1 and VLAN 10 are allowed by Port A. When multicast requests of VLAN 10 are sent to port A, IGMP Snooping will create the multicast entry of VLAN 10 and forward the multicast requests to the router port of VLAN 10.
- Second: Create multicast entries in the default VLAN to which the dot1q-tunnel ports belong, and forward multicast packets in the default VLAN of dot1q-tunnel port after inserting the VLAN Tag of the default VLAN of dot1q-tunnel port.
- For example: It is assumed that IGMP Snooping has been enabled on the device; Port A is a dot1q-tunnel port; the default VLAN of port A is VLAN 1, and packets from VLAN 1 and VLAN 10 are allowed Port A. When multicast requests of VLAN 10 are sent to Port A, IGMP Snooping will create the multicast entry of VLAN 1 and insert the VLAN Tag of VLAN 1 into multicast requests before forwarding the multicast requests to the router port of VLAN 1.

By default, the second way is used.

**Configuration** The following example enables QinQ support for IGMP Snooping.



**Examples** `Ruijie(config)# ip igmp snooping tunnel`

**Platform** N/A

**Description**

## 8.30 ip igmp snooping vlan

Use this command to enable the IGMP Snooping in the specified VLAN and enter IVGL mode.

Use the **no** form of this command is used to disable the IGMP Snooping.

Use the **default** form of this command to restore the default setting.

**ip igmp snooping vlan** *vid*

**no ip igmp snooping vlan** *vid*


**default ip igmp snooping vlan** *vid*

| Parameter Description | Parameter  | Description                          |
|-----------------------|------------|--------------------------------------|
|                       | <i>vid</i> | VLAN ID in the range from 1 to 4,094 |

**Defaults** IGMP Snooping is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** Use this command to enable or disable the IGMP snooping on the specified vlan.

 The PIM Snooping in the specified VLAN works only when IGMP Snooping is configured. To disable PIM Snooping, you must disable IGMP Snooping in the VLAN first, or disabling will fail and be prompted.

**Configuration Examples** The following example enters IVGL mode and disables the IGMP Snooping in the VLAN 2.

```
Ruijie(config)# ip igmp snooping ivgl
Ruijie(config)# no ip igmp snooping vlan 2
```

**Platform** N/A

**Description**

## 8.31 ip igmp snooping vlan mrouter interface

Use this command to configure a static routing interface.

Use the **no** form of this command to delete a static routing interface.

Use the **default** form of this command to restore the default setting.

**ip igmp snooping vlan** *vid* **mrouter interface** *interface-type interface-number*

**no ip igmp snooping vlan** *vid* **mrouter interface** *interface-type interface-number*

**default ip igmp snooping vlan** *vid* **mrouter interface** *interface-type interface-number*

| Parameter Description | Parameter                                        | Description                          |
|-----------------------|--------------------------------------------------|--------------------------------------|
|                       | <i>vid</i>                                       | VLAN ID in the range from 1 to 4,094 |
|                       | <i>interface-type</i><br><i>interface-number</i> | Interface ID                         |

**Defaults** No static routing interface is configured by default.

**Command Mode** Global configuration mode

**Usage Guide** A dynamic routing interface is learned dynamically through IGMP Snooping. A static routing interface is configured by using this command and cannot age.

When an interface is configured as a static routing interface, all multicast streams received on this interface will be forwarded.

When the source port check function is enabled, only the multicast flows from the routing interface are forwarded, and other flows will be discarded.

**Configuration** The following example configures a static routing interface.

**Examples**

```
Ruijie(config)# ip igmp snooping vlan 1 mrouter interface fastEthernet 0/1
```

**Platform Description** N/A

## 8.32 ip igmp snooping vlan static interface

Use this command to configure a static member interface of a multicast group.

Use the **no** form of this command to delete a static member interface from a multicast group.

Use the **default** form of this command to restore the default setting.

**ip igmp snooping vlan** *vid* **static** *group-address* **interface** *interface-type interface-number*

**no ip igmp snooping vlan** *vid* **static** *group-address* **interface** *interface-type interface-number*

**default ip igmp snooping vlan** *vid* **static** *group-address* **interface** *interface-type interface-number*

| Parameter Description | Parameter           | Description                          |
|-----------------------|---------------------|--------------------------------------|
|                       | <i>vid</i>          | VLAN ID in the range from 1 to 4,094 |
|                       | <i>ip-addr</i>      | Multicast IP address                 |
|                       | <i>interface-id</i> | Interface ID                         |

**Defaults** No static member interface of any multicast group is configured by default.

**Command** Global configuration mode

**Mode**

**Usage Guide** The IGMP Snooping GDA table contains VLAN IDs (VIDs), group addresses, routing interface (static or dynamic) ID, and member interface ID. Among them, the VID and group address identify a forwarding entry; the static routing interfaces will not age and cannot be deleted by using the **clear ip igmp snooping gda-table** command.

**Configuration** The following example configures a static member interface for the multicast group 224.1.1.1.

**Examples**

```
Ruijie(config)# ip igmp snooping vlan 1 static 224.1.1.1 interface
GigabitEthernet 0/1
```

**Platform** N/A

**Description**

## 8.33 permit

Use this command to permit the multicast forwarding for specified ranges of a specified profile.

### permit

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** The forwarding of the multicast streams in the range specified by the profile is denied.

**Command**

**Mode**

Profile configuration mode

**Usage Guide** A profile is used to filter a group of multicast packets, so as to assist other features.

Configuration steps:

1. Use the **ip igmp profile** command to create a profile and enter profile configuration mode.
2. Use the **range** command to define a range for the profile.
3. Use the **permit** command to permit the multicast forwarding for the profile.

**Configuration Examples** The following example permits the forwarding of the multicast streams from 224.2.2.2 to 224.2.2.244 of profile 1.

```
Ruijie(config)# ip igmp profile 1
Ruijie(config-profile)# range 224.2.2.2 224.2.2.244
Ruijie(config-profile)# permit
```

**Platform** N/A

**Description**

## 8.34 range

Use this command to define a range for a specific profile.

Use the **no** form of the command to remove the range from the profile.

**range** *low-ip-address* [*high-ip-address*]

**no range** *low-ip-address* [*high-ip-address*]

| Parameter Description | Parameter              | Description              |
|-----------------------|------------------------|--------------------------|
|                       | <i>low-ip-address</i>  | Start address of a range |
|                       | <i>high-ip-address</i> | End address of a range   |

**Defaults** No range is defined for a profile by default.

**Command Mode** Profile configuration mode

**Usage Guide** A profile is used to filter a group of multicast packets, so as to assist other features.

Configuration steps:

1. Use the **ip igmp profile** command to create a profile and enter profile configuration mode.
2. Use the **range** command to define a range for the profile.
3. Use the **permit** command to permit the multicast forwarding for the profile.

**Configuration Examples** The following is an example of allowingpermits the forwarding of the multicast streams from 224.2.2.2 to 224.2.2.244: of profile 1.

```
Ruijie(config)# ip igmp profile 1
Ruijie(config-profile)# range 224.2.2.2 224.2.2.244224.2.2.2
Ruijie(config-profile)# permit
```

**Platform** N/A

**Description**

## 8.35 show ip igmp profile

Use this command to display the profile information.

**show ip igmp profile** *profile-number*

| Parameter Description | Parameter             | Description                                                   |
|-----------------------|-----------------------|---------------------------------------------------------------|
|                       | <i>profile-number</i> | Displays configuration information of the designated profile. |

**Defaults** N/A

|                      |                                                                                                      |
|----------------------|------------------------------------------------------------------------------------------------------|
| <b>Command Mode</b>  | Privileged EXEC mode                                                                                 |
| <b>Usage Guide</b>   | Use this command to display the profile information.                                                 |
| <b>Configuration</b> | The following example displays the profile information.                                              |
| <b>Examples</b>      | <pre>Ruijie(config-if)# show ip igmp profile Profile 1 Permit range 224.0.1.0, 239.255.255.255</pre> |

## 8.36 show ip igmp snooping

Use this command to display related information of IGMP Snooping.

**show ip igmp snooping** [**gda-table** | **interfaces** *interface-type interface-number* | **mdevice** | **statistics** [**vlan** *vlan-id*] | **querier** [ **detail** | **vlan** *vid* ] | **user-info** ]

| Parameter Description | Parameter                                        | Description                                                                |
|-----------------------|--------------------------------------------------|----------------------------------------------------------------------------|
|                       | <b>vlan</b> <i>vid</i>                           | VLAN ID. By default, IGMP Snooping information of all VLANs are displayed. |
|                       | <i>interface-type</i><br><i>interface-number</i> | Interface type and number                                                  |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays global IGMP Snooping information.

|                 |                                                                                                                                                                                                                                                                                                                                                                                              |
|-----------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Examples</b> | <pre>Ruijie#show ip igmp snooping IGMP Snooping running mode: IVGL IGMP Snooping L2-entry-limit: 65536 Source port check: Disable Source ip check: Disable IGMP Fast-Leave: Disable IGMP Report suppress: Disable IGMP Global Querier: Disable IGMP Preview: Disable IGMP Tunnel: Disable IGMP Snooping version: 2 IGMP Snooping version: 2IGMP Preview group aging time : 60(Seconds)</pre> |
|-----------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

```
Dynamic Mroute Aging Time : 300(Seconds)
```

```
Dynamic Host Aging Time : 260(Seconds)
```

The following example displays VLAN1 IGMP Snooping information.

```
Ruijie#show ip igmp snooping vlan 1
```

```
IGMP Snooping running mode: IVGL
```

```
IGMP Snooping L2-entry-limit: 65536
```

```
Global IGMPv2 Fast-Leave :Disable
```

```
Global multicast router learning mode :Enable
```

```
Query Max Response Time: 10 (Seconds)
```

```
Dynamic Mroute Aging Time : 300(Seconds)
```

```
Dynamic Host Aging Time : 260(Seconds)
```

```
vlan 1
```

```
-----
```

```
IGMP Snooping state: Enable
```

```
Multicast router learning mode: pim-dvmrp
```

```
IGMP Fast-Leave: Disable
```

```
IGMP VLAN querier: Disable
```

```
IGMP VLAN Mode: STATIC
```

**Platform** N/A

**Description**

## 9 MLD Snooping Commands

### 9.1 clear ipv6 mld snooping gda-table

Use this command to clear the forwarding table information learned dynamically.

**clear ipv6 mld snooping gda-table**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** Use this command to clear the forwarding table information learned dynamically.

**Configuration Examples** The following example clears the forwarding table information learned dynamically:

```
Ruijie# clear ipv6 mld snooping gda-table
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

### 9.2 clear ipv6 mld snooping statistics

Use this command to clear the MLD Snooping statistics, including the entry number, the entry volume, the number of various received packets, the group information and the interface information of the corresponding group.

**clear ipv6 mld snooping statistics**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** Use the **show ipv6 mld snooping statistics** command to verify the configuration.

**Configuration Examples** The following example clears the MLD Snooping statistics.

```
Ruijie# clear ipv6 mld snooping statistics
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 9.3 deny

Use this command to prevent the multicast flow profile within the specified range from being forwarded in the profile configuration mode.

**deny**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** The default profile action is **deny**.

**Command Mode** Profile configuration mode

**Usage Guide** Profile is a kind of group “filter” that can be referred to by other functions.  
Configuration Steps:

1. Use the **ipv6mld profile** command to create a profile and enter the profile mode.
2. Use the **range** command to define a group.
3. Use the **permit** command to allow this group to pass the filtering; Use the **deny** command to filter the packets of this group. The default command is **deny**.

**Configuration Examples** The following example prevents the multicast flow profile within the range from FF15::1 to FF15::100 from being forwarded.

```
Ruijie(config)# ipv6 mld profile 1
Ruijie(config-profile)# range FF15::1 FF15::100
Ruijie(config-profile)# deny
```

| Related | Command | Description |
|---------|---------|-------------|
|---------|---------|-------------|



| Commands                |                                   |
|-------------------------|-----------------------------------|
| <b>ipv6 mld profile</b> | Creates one profile.              |
| <b>range</b>            | Sets the multicast address range. |
| <b>permit</b>           | Sets the profile action permit.   |

**Platform** N/A

**Description**

## 9.4 ipv6 mld profile

Use the following command to create a profile.

Use the **no** or **default** form of this command to delete a profile.

**ipv6 mld profile** *profile-number*

**no ipv6 mld profile** *profile-number*

**default ipv6 mld profile** *profile-number*

| Parameter Description | Parameter             | Description                                  |
|-----------------------|-----------------------|----------------------------------------------|
|                       | <i>profile-number</i> | Profile number, in the range from 1 to 1024. |

**Defaults** N/A

**Command** Global configuration mode

**Mode**

**Usage Guide** Profile is a kind of group “filter” that can be referred to by other functions.  
 Configuration Steps:

1. Use the **ipv6mld profile** command to create a profile and enter the profile mode.
2. Use the **range** command to define a group.
3. Use the **permit** command to allow this group to pass the filtering; Use the **deny** command to filter the packets of this group. The default command is **deny**.

**Configuration Examples** The following example creates profile 1 and allows the packets sent by devices with MAC address ranging from FF15::1 to FF15::100 to pass the filtering.

```
Ruijie(config)#ipv6 mld profile 1
Ruijie(config-profile)#range FF15::1 FF15::100
Ruijie(config-profile)#permit
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 9.5 ipv6 mld snooping

Use this command to enable MLD Snooping and specify IVGL/SVGL/IVGL-SVGL mode.

Use the **no** or **default** form of this command to restore the default setting.

**ipv6 mld snooping** { ivgl | svgl | ivgl-svgl }

**no ipv6 mld snooping** [ ivgl | svgl | ivgl-svgl ]

**default ipv6 mld snooping** [ ivgl | svgl | ivgl-svgl ]

| Parameter Description | Parameter        | Description                             |
|-----------------------|------------------|-----------------------------------------|
|                       | <b>ivgl</b>      | MLD Snooping is running IVGL mode.      |
|                       | <b>svgl</b>      | MLD Snooping is running SVGL mode.      |
|                       | <b>ivgl-svgl</b> | MLD Snooping is running IVGL-SVGL mode. |

**Defaults** This function is disabled by default.

**Command** Global configuration mode

**Mode**

**Usage Guide**

- In IVGL mode, multicast flow in each VLAN is independent. The host only requests multicast flow from the routing interface within the same VLAN. The device forwards the multicast flow from any VLAN to the member port within the same VLAN.
- In SVGL mode, multicast flow is shared among VLANs. The host can request multicast flow across VLANs. Shared VLAN (VLAN 1 by default) should be specified. Only multicast flow from Shared VLAN can be forwarded to all member ports within the group address range, which may belong to different VLANs. Profile is used to specify a group range for SVGL. Only multicast flow within this range can be forwarded across VLANs. The other multicast flow is discarded.
- In IVGL-SVGL mode, Profile is used to specify a group range for SVGL. Multicast flow within this range is in SVGL mode and the other multicast flow is in IVGL mode.
- IPv6 multicast packets cannot be forwarded through SuperVLAN.

**Configuration** The following example enables MLD Snooping IVGL mode.

**Examples** Ruijie(config)# ipv6 igmp snooping ivgl

The following example enables MLD Snooping SVGL mode and specifies the shared VLAN and SVGL group range as VLAN1 and profile1 respectively.

Ruijie(config)# ipv6 igmp snooping svgl

Ruijie(config)# ipv6 igmp snooping svgl profile 1

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 9.6 ipv6 mld snooping dyn-mr-aging-time

Use this command to set the aging time of the dynamic multicast route port.

Use the **no** or **default** form of this command to restore the default setting.

**ipv6 mld snooping dyn-mr-aging-time** *second*

**no ipv6 mld snooping dyn-mr-aging-time**

**default ipv6 mld snooping dyn-mr-aging-time**

| Parameter Description | Parameter     | Description                                                                                                   |
|-----------------------|---------------|---------------------------------------------------------------------------------------------------------------|
|                       | <i>second</i> | Sets the aging time of the dynamic multicast route port, in the range from 1 to 3,600 in the unit of seconds. |


**Defaults** The default is 300 seconds.

**Command** Global configuration mode.

**Mode**

**Usage Guide** The switch will remove the dynamic multicast router interface from the router interface list if it fails to receive the MLD general group query packets or the ipv6 PIM Hello packets within the aging timeout on this interface.

Use this command to change the aging time of the routing ports learned dynamically. If the aging time is too short, routing ports will be added and deleted frequently.

 By default, the dynamic learning of routing ports is enabled. If learning fails, use the **show run** command to check whether this function is enabled.

**Configuration** The following example sets the aging time of the dynamic multicast routing port to 100 seconds.

**Examples** Ruijie(config)# ipv6 mld snooping dyn-mr-aging-time 100

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 9.7 ipv6 mld snooping fast-leave enable

Use this command to enable the MLD Snooping fast-leave function.

Use the **no** or **default** form of this command to restore the default setting.

**ipv6 mld snooping fast-leave enable**  
**no ipv6 mld snooping fast-leave enable**  
**default ipv6 mld snooping fast-leave enable**

| Parameter<br>Description | Parameter | Description |
|--------------------------|-----------|-------------|
|                          | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode.

**Usage Guide** The interface fast leave is that when IPv6 MLD Leave packets sent from the host are received on an interface, the interface is removed from the outgoing interface list of the corresponding forwarding entry. Then, the switch will not forward the received IPv6 MLD specific group query packets to the interface.



If there is only one receiver connected with the interface, enable the interface fast leave function to save the bandwidth and resources.

**Configuration Examples** The following example enables mld snooping fast-leave.

```
Ruijie(config)# ipv6 mld snooping fast-leave
```

| Related<br>Commands | Command | Description |
|---------------------|---------|-------------|
|                     | N/A     | N/A         |

**Platform Description** N/A

## 9.8 ipv6 mld snooping filter

Use this command to filter the specific multicast flows.

Use the **no** or **default** form of this command to restore the default setting.

**ipv6 mld snooping filter** *profile-number*  
**no ipv6 mld snooping filter**  
**default ipv6 mld snooping filter**

| Parameter<br>Description | Parameter             | Description                                          |
|--------------------------|-----------------------|------------------------------------------------------|
|                          | <i>profile-number</i> | Sets the profile number in the range from 1 to 1024. |

**Defaults** This function is disabled by default.

**Command** Interface configuration mode

**Mode**

**Usage Guide** You can configure an MLD Profile on an interface. If the MLD Report packets are received on the interface, the layer-2 device will determine whether the multicast address to be joined the interface is within the allowed range of the MLD Profile. The specified profile must be created before using this command.

**Configuration** The following example associates profile1 with the interface GigabitEthernet 0/1.

**Examples**

```
Ruijie(config)# interface GigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)# ipv6 mld snooping filter 1
```

**Related  
Commands**

| Command          | Description        |
|------------------|--------------------|
| ipv6 mld profile | Creates a profile. |

**Platform** N/A

**Description**

## 9.9 ipv6 mld snooping host-aging-time

Use this command to set the aging time of the dynamic member port.

Use the **no** form of this command to cancel this configuration.

Use the **default** form of this command to restore the default setting.

**ipv6 mld snooping host-aging-time** *seconds*

**no ipv6 mld snooping host-aging-time**

**default ipv6 mld snooping host-aging-time**

**Parameter  
Description**

| Parameter      | Description                                                                                               |
|----------------|-----------------------------------------------------------------------------------------------------------|
| <i>seconds</i> | Sets the aging time of the dynamic member port, in seconds, ranging from 1-65,536 in the unit of seconds. |

**Defaults** The default aging time of the dynamic member port is 260 seconds.

**Command** Global configuration mode

**Mode**

**Usage Guide** The switch will remove the dynamic multicast router interface from the router interface list if it fails to receive the MLD general group query packets or the IPv6 PIM Hello packets within the aging timeout on this interface.

When the MLD Snooping is enabled, the port that receives the MLD Report packet will learn to be a dynamic member port. The default aging time of such dynamic member port is 260 seconds. You can

use this command to adjust the aging time. This configuration takes effect after the port receives the the next Report packet. The aging time of the dynamic member port should be longer than the query interval.

**Configuration** The following example sets the aging time of the dynamic member port to 30 seconds:

**Examples**

```
Ruijie(config)# ipv6 mld snooping host-aging-time 30
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 9.10 ipv6 mld snooping max-groups

Use this command to set the maximum group allowed to join the interface dynamically.

Use the **no** or **default** form of this command to restore the default setting.

**ipv6 mld snooping max-groups** *number*

**no ipv6 mld snooping max-groups**

**default ipv6 mld snooping max-groups**

**Parameter  
Description**

| Parameter     | Description                                         |
|---------------|-----------------------------------------------------|
| <i>number</i> | The number of groups, in the range from 0 to 65,536 |

**Defaults** The default is 65,536.

**Command** Interface configuration mode

**Mode**

**Usage Guide** With this command configured, when the group number exceeds the specified range on the interface, the switch will not receive and deal with the MLD Report packets.

The multicast groups are counted based on VLANs of an interface. If the interface has 3 VLANs, the counting result is 3 instead of 1 when an FF15::100 multicast request is received by all the VLAN.

**Configuration** The following example sets the maximum 100 multicast group on the interface GigabitEthernet 0/1.

**Examples**

```
Ruijie(config)# interface gigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)# ipv6 mld snooping max-groups 100
```

**Related  
Commands**

| Command                         | Description                                   |
|---------------------------------|-----------------------------------------------|
| <b>ipv6 mld snooping filter</b> | Filters the multicast group on the interface. |

**Platform** N/A  
**Description**

## 9.11 Ipv6 mld snooping mrouter learn

Use this command to enable the switch to dynamically learn MLD query or PIM packets to identify the mrouter interface automatically.

Use the **no** form of this command to disable this function.

Use the **default** form of this command to restore the default setting.

**ipv6 mld snooping [ vlan *vid* ] mrouter learn**

**no ipv6 mld snooping [ vlan *vid* ] mrouter learn**


**default ipv6 mld snooping [ vlan *vid* ] mrouter learn**

| Parameter Description | Parameter       | Description                          |
|-----------------------|-----------------|--------------------------------------|
|                       | vlan <i>vid</i> | VLAN ID, in the range from 1 to 4094 |

**Defaults** This function is enabled by default.

**Command Mode** Global configuration mode

**Usage Guide** The routing interface is the interface of the multicast device connected with the peer device. By default, the dynamically learned routing interface is enabled on the layer-2 multicast device. Use the **no** option to disable this function and clear all dynamically-learned routing interfaces.

 With the source port check enabled, only the multicast flow through the mroute interface are valid and forwarded to the registered interface on the layer-2 multicast device. Those multicast flow through the non-mroute interface are invalid and will be discarded.

**Configuration Examples** The following example enables the dynamic multicast routing port learning function for VLAN1.

```
Ruijie(config)# no ipv6 mld snooping mrouter learn
Ruijie(config)# ipv6 mld snooping vlan 1 mrouter learn
```

**Related Commands** N/A

## 9.12 ipv6 mld snooping query-max-response-time

Use this command to set the maximum response time of the MLD general query packet.

Use the **no** or **default** form of this command to restore the default setting.

**ipv6 mld snooping query-max-response-time *seconds***

**no ipv6 mld snooping query-max-response-time**

**default ipv6 mld snooping query-max-response-time**

| Parameter Description | Parameter      | Description                                                                                                          |
|-----------------------|----------------|----------------------------------------------------------------------------------------------------------------------|
|                       | <i>seconds</i> | Sets the maximum response time of the MLD general query packet in the range from 1 to 65,535 in the unit of seconds. |

**Defaults** The default is 10 seconds.

**Command Mode** Global configuration mode

**Usage Guide** Upon receiving the MLD general query packets, the Layer-2 multicast device updates the aging timer of all member ports. The time of the timer is the longest response value. When the timer value decreases to 0, it indicates that there is no member receiving the multicast flow on the interface, and the Layer-2 device removes this interface from the MLD Snooping forwarding list.

Upon receiving the MLD specific group query packets, the Layer-2 multicast device enables the aging timer of all member ports in this specific group. The time of the timer is the longest response value. When the timer value decreases to 0, it indicates that there is no member receiving the multicast flow on the interface, and the Layer-2 device removes this interface from the MLD Snooping forwarding list.

For the source query packets of the MLD specific group, the timer is not updated.

The configured maximum response time is effective after another query packet is received.

**Configuration Examples** The following example sets the maximum response time of the MLD general query packet to 100 seconds.

```
Ruijie(config)# ipv6 mld snooping query-max-response-time 100
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 9.13 ipv6 mld snooping source-check port

Use this command to enable the MLD source-check port.

Use the **no** or **default** form of this command to restore the default setting.

**ipv6 mld snooping source-check port**

**no ipv6 mld snooping source-check port**

**default ipv6 mld snooping source-check port**



| Parameter<br>Description | Parameter | Description |
|--------------------------|-----------|-------------|
|                          | N/A       | N/A         |

**Defaults** The source-check port is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** The MLD Snooping source port check function is to limit the MLD multicast flow through the interace strictly. With the source port check disabled, all video flow are illegal and forwarded to the registered member port according to the MLD Snooping forwarding list. With the MLD Snooping source port check enabled, only the mulitcast flow through the mroute interface is legal and forwarded to the registered interface by the layer-2 multicast device; and the multicast flow through the non-mroute interface are illegal and discarded.

This command is used to enabled the source port check globally. Once this function is enabld, all multicast flow must come from the mroute interface, or they'll be discarded.

**Configuration** The following example enables MLD Snooping source-check port.

**Examples** Ruijie(config)# ipv6 mld snooping source-check port

| Related<br>Commands | Command | Description |
|---------------------|---------|-------------|
|                     | N/A     | N/A         |

**Platform Description** N/A

## 9.14 ipv6 mld snooping suppression enable

Use this command to enable the MLD Snooping suppression.

Use the **no** or **default** form of this command to restore the default setting.

**ipv6 mld snooping suppression enable**

**no ipv6 mld snooping suppression enable**

**default ipv6 mld snooping suppression enable**

| Parameter<br>Description | Parameter | Description |
|--------------------------|-----------|-------------|
|                          | N/A       | N/A         |

**Defaults** The MLD Snooping suppression function is disabled by default.

**Command Mode** Global configuration mode.

**Usage Guide** With the IPv6 MLD Snooping suppression function enabled, within the query interval, the layer-2 device will only forward the first received MLD Report packet in an IPv6 multicast group to the layer-3 device, but not the other MLD Report packets in the same IPv6 multicast group, reducing the packet number in the network.

This command is used to enable the IPv6 MLD Snooping suppression, and only the MLDv1 Report packets are suppressed rather than the MLDv2 Report packets.

**Configuration** The following example enables MLD Snooping suppression.

**Examples**

```
Ruijie(config)# ipv6 mld snooping suppression enable
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 9.15 ipv6 mld snooping svgl profile

Use this command to specify the group address range to be in the SVGL mode.

Use the **no** or **default** form of this command to restore the default setting.

**ipv6 mld snooping svgl profile** *profile-number*

**no ipv6 mld snooping svgl profile**

**default ipv6 mld snooping svgl profile**

| Parameter Description | Parameter             | Description |
|-----------------------|-----------------------|-------------|
|                       | <i>profile-number</i> |             |

**Defaults** No profiles are associated with SVGL by default.

**Command** Global configuration mode

**Mode**

**Usage Guide** With the SVGL mode or IVGL-SVGL mode configured for the MLD Snooping working mode, a profile shall be associated with the IVGL for the purpose of specifying the group address range in the SVGL mode. That is to say, the member port of the multicast forwarding entry can be forwarded across the VLANs, while the member ports of the corresponding multicast forwarding entries within other multicast address range must belong to the same VLAN. By default, no profile is associated, which means that apply no multicast group in the SVGL mode.

**Configuration Examples** The following example specifies the SVGL mode application range as the profile 2 group address range.

```
Ruijie(config)# ipv6 mld snooping svgl profile 2
```

| Related Commands | Command                            | Description                                          |
|------------------|------------------------------------|------------------------------------------------------|
|                  |                                    | <b>ipv6 mld snooping ivgl</b>                        |
|                  | <b>ipv6 mld snooping ivgl-svgl</b> | Enables the MLD Snooping and set the ivgl-svgl mode. |

**Platform** N/A

**Description**

## 9.16 ipv6 mld snooping svgl vlan

Use this command to specify the shared VLAN in MLD Snooping SVGL mode.

Use the **no** or **default** form of this command to restore the default setting.

**ipv6 mld snooping svgl vlan** *vid*

**no ipv6 mld snooping svgl vlan**

**default ipv6 mld snooping svgl vlan**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       |           | <i>vid</i>  |

**Defaults** The default is 1.

**Command Mode** Global configuration mode

**Usage Guide** This command is used to specify the SVGL shared VLAN if MLD Snooping is running in SVGL or IVGL-SVGL mode.

**Configuration Examples** The following example sets the shared VLAN in MLD Snooping SVGL mode to 5.

```
Ruijie(config)# ipv6 mld snooping svgl vlan 5
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  |         | N/A         |

**Platform** N/A

**Description**

## 9.17 ipv6 mld snooping vlan

Use this command to enable the MLD Snooping function for the specified VLAN.

Use the **no** form of this command to disable this function.

Use the **default** form of this command to restore the default setting.

**ipv6 mld snooping vlan** *vid*

**no ipv6 mld snooping vlan** *vid*

**default ipv6 mld snooping vlan** *vid*

| Parameter Description | Parameter  | Description                           |
|-----------------------|------------|---------------------------------------|
|                       | <i>vid</i> | VLAN ID, in the range from 1 to 4094. |

**Defaults** The MLD Snooping function is enabled by default.

**Command** Global configuration mode

**Mode**

**Usage Guide** By default, the MLD Snooping is enabled in all VLANs. You can disable the MLD Snooping for the specified VLAN.

**Configuration** The following example disables the MLD Snooping function in VLAN 2 in IVGL mode.

**Examples**

```
Ruijie(config)# ipv6 mld snooping ivgl
Ruijie(config)# no ipv6 mld snooping vlan 2
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 9.18 ipv6 mld snooping vlan mrouter interface

Use this command to set the static mrouter interface.

Use the **no** or **default** form of this command to restore the default setting.

**ipv6 mld snooping vlan** *vid mrouter interface interface-type interface-number*

**no ipv6 mld snooping vlan** *vid mrouter interface interface-type interface-number*

**default ipv6 mld snooping vlan** *vid mrouter interface interface-type interface-number*

| Parameter Description | Parameter  | Description                           |
|-----------------------|------------|---------------------------------------|
|                       | <i>vid</i> | VLAN ID, in the range from 1 to 4094. |

|                                                  |                      |
|--------------------------------------------------|----------------------|
| <i>interface-type</i><br><i>interface-number</i> | The interface number |
|--------------------------------------------------|----------------------|

**Defaults** No static mrouter interface is configured by default.

**Command** Global configuration mode

**Mode**

**Usage Guide** Use this command to set the static mrouter interface for the purpose that all IPv6 multicast data received on the switch can be forwarded. With the source port check function enabled, only the multicast flow through the mroute interface can be forwarded.

**Configuration** The following example sets a multicast routing port.

**Examples** Ruijie(config)# ipv6 mld snooping vlan 1 mrouter interface gigabitEthernet 0/1

| Related Commands | Command                                    | Description                           |
|------------------|--------------------------------------------|---------------------------------------|
|                  | <b>ipv6 mld snooping source-check port</b> | Sets the multicast source port check. |

**Platform** N/A

**Description**

## 9.19 ipv6 mld snooping vlan static interface

Use this command to set a static member port to receive the multicast flow for the purpose of preventing the port from being influenced by the MLD Report packets with the MLD Snooping enabled.

Uses the **no** form of this command to restore the default setting.

**ipv6 mld snooping vlan** *vid* **static** *group-address* **interface** *interface-type* *interface-number*

**no ipv6 mld snooping vlan** *vid* **static** *group-address* **interface** *interface-type* *interface-number*

| Parameter Description                            | Parameter             | Description                                             |
|--------------------------------------------------|-----------------------|---------------------------------------------------------|
|                                                  | <i>vid</i>            | VLAN ID, in the range from 1 to 4094. The default is 1. |
| <i>group-address</i>                             | The multicast address |                                                         |
| <i>interface-type</i><br><i>interface-number</i> | The interface number  |                                                         |

**Defaults** No static member port is configured by default.

**Command** Global configuration mode

**Mode**

**Usage Guide** Use this command to set the interface as the member port of multiple static multicast addresses.

**Configuration** The following example sets the interface gigabitEthernet 0/1 as the static member port of the FF88::1 group.

**Examples**

```
Ruijie(config)# ipv6 mld snooping vlan 1 static FF88::1 interface
gigabitEthernet 0/1
```

**Related Commands**

| Command                                         | Description                 |
|-------------------------------------------------|-----------------------------|
| <b>ipv6 mld snooping vlan mrouter interface</b> | Sets the mrouter interface. |

**Platform** N/A

**Description**

## 9.20 permit

Use this command to allow the multicast flow profile within the specified range in the profile configuration mode.

**permit**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** The default profile action is **deny**.

**Command Mode** Profile configuration mode

**Usage Guide** Before configuring this command, use the **range** command to set the multicast range first.

**Configuration Examples** The following example allows the multicast flow profile within the range from FF15::1 to FF15::100 to be forwarded only.

```
Ruijie(config)# ipv6 mld snooping profile 1
Ruijie(config-profile)# range FF15::1 FF15::100
Ruijie(config-profile)# permit
```

**Related Commands**

| Command                 | Description                       |
|-------------------------|-----------------------------------|
| <b>ipv6 mld profile</b> | Creates one profile.              |
| <b>range</b>            | Sets the multicast address range. |
| <b>deny</b>             | Sets the profile action deny.     |

**Platform** N/A

**Description**

## 9.21 range

Use this command to specify the profile multicast flow range, which can be one single multicast address, or can be the multicast address within the specified range when configuring a profile in the profile configuration mode.

**range** *low-ipv6-address* [ *high-ip-address* ]

| Parameter Description | Parameter              | Description                                 |
|-----------------------|------------------------|---------------------------------------------|
|                       | <i>low-ip-address</i>  | The low address within the specified range  |
|                       | <i>high-ip-address</i> | The high address within the specified range |

**Defaults** No range is defined by default.

**Command Mode** Profile configuration mode

**Usage Guide** The value of *low-ipv6-address* shall be smaller than the one of *high-ipv6-address*. With the address range configured, an action shall be specified, and the default profile action is deny.

**Configuration Examples** The following example creates the multicast flow profile within the range from FF15::1 to FF15::100.

```
Ruijie(config)# ipv6 mld snooping profile 1
Ruijie(config-profile)# range FF15::1 FF15::100
Ruijie(config-profile)# permit
```

| Related Commands | Command                 | Description                     |
|------------------|-------------------------|---------------------------------|
|                  | <b>ipv6 mld profile</b> | Creates one profile.            |
|                  | <b>deny</b>             | Sets the profile action deny.   |
|                  | <b>permit</b>           | Sets the profile action permit. |

**Platform** N/A

**Description**

## 9.22 show ipv6 mld profile

Use this command to display the related MLD profile configuration.

**show ipv6 mld profile** *profile-number*

| Parameter Description | Parameter             | Description                                |
|-----------------------|-----------------------|--------------------------------------------|
|                       | <i>profile-number</i> | Profile number in the range from 1 to 1024 |

- Defaults** N/A
- Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode
- Usage Guide** Use this command to display the related MLD profile configuration.
- Configuration** The following example displays the MLD profile configuration.

**Examples**

```
Ruijie# show ipv6 mld profile
ipv6 mld profile    1
  permit
  range FF15::1 FF15::100

ipv6 mld profile    2
  deny
  range FF88::1 FF88::100
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

- Platform** N/A
- Description**

## 9.23 show ipv6 mld snooping

Use this command to display the related MLD Snooping information.

**show ipv6 mld snooping** [**gda-table** | **interfaces** *interface-type interface-number* | **mrouter** | **statistics** [**vlan** *vid*] | **vlan** *vid*]

**Parameter Description**

| Parameter                                                | Description                                                  |
|----------------------------------------------------------|--------------------------------------------------------------|
| <b>gda-table</b>                                         | Displays the multicast forwarding rule table.                |
| <b>Interfaces</b> <i>interface-type interface-number</i> | Displays the MLD Snooping filtering configuration.           |
| <b>mrouter</b>                                           | Displays the information about mrouter interface.            |
| <b>statistics</b>                                        | Displays the MLD Snooping statistics.                        |
| <b>vlan</b> <i>vlan-id</i>                               | Displays the MLD Snooping information of the specified vlan. |

- Defaults** N/A
- Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode



**Usage Guide** Use this command to display the related MLD Snooping information.

**Configuration** The following example displays the MLD Snooping configurations.

**Examples**

```
In IVGL mode:
Ruijie#show ipv6 mld snooping
MLD-snooping mode: IVGL
Source port check: Disable
MLD Fast-Leave: Disable
MLD Report suppress: Disable
Query Max Response Time: 10 (Seconds)
Dynamic Mroute Aging Time: 300(Seconds)
Dynamic Host Aging Time: 260(Seconds)

vlan 1
-----
MLD Snooping state: Enabled
Multicast router learning mode: Enable
MLD Fast-Leave: Enabled
MLD VLAN Mode: STATIC

In SVGL mode:
Ruijie#show ipv6 mld snooping
MLD-snooping mode: SVGL
SVGL vlan: 1
SVGL profile number: 1
Source port check: Disable
MLD Fast-Leave: Disable
MLD Report suppress: Disable
Query Max Response Time: 10 (Seconds)
Dynamic Mroute Aging Time: 300(Seconds)
Dynamic Host Aging Time: 260(Seconds)

In IVGL-SVGL mode:
Ruijie#show ipv6 mld snooping
MLD-snooping mode: IVGL-SVGL
SVGL vlan: 1
SVGL profile number: 1
Source port check: Disable
MLD Fast-Leave: Disable
MLD Report suppress: Disable
Query Max Response Time: 10 (Seconds)
Dynamic Mroute Aging Time: 300(Seconds)
Dynamic Host Aging Time: 260(Seconds)
```

```
vlan 1
-----
MLD Snooping state: Enabled
Multicast router learning mode: Enable
MLD Fast-Leave: Enabled
MLD VLAN Mode: STATIC
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform  
Description**

N/A

## 10 MSDP Commands

### 10.1 clear ip msdp peer

Use this command to clear specific MSDP peer. This will clear the connection to the MSDP peer and then reestablish the connection to MSDP peer. The statistics of MSDP peer will be cleared at the same time.

**clear ip msdp peer** *peer-address*

| Parameter Description | Parameter           | Description                 |
|-----------------------|---------------------|-----------------------------|
|                       | <i>peer-address</i> | IP address of the MSDP peer |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** This command is used to clear the TCP connection to the specified MSDP peer and clear all the MSDP peer statistics.

**Configuration Examples** The following example clears MSDP peer of 218.14.5.23.

```
Ruijie# clear ip msdp peer 218.14.5.23
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** This command is supported only on L3 devices.

### 10.2 clear ip msdp sa-cache

Use this command to clear SA cache entries.

**clear ip msdp sa-cache** [ *group-address* ]

| Parameter Description | Parameter            | Description   |
|-----------------------|----------------------|---------------|
|                       | <i>group-address</i> | Group address |

**Defaults** N/A

**Command** Privileged EXEC mode  
**Mode**

**Usage Guide** Use this command to clear the SA cache entries learned from MSDP peer. If no multicast group address is specified, all SA cache entries will be cleared.  
 After SA cache entries are cleared, the MSDP device will need to relearn SA messages.

**Configuration** The following example clears the SA cache entries with the multicast group 224.1.1.1.

**Examples**

```
Ruijie# clear ip msdp sa-cache 224.1.1.1
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** This command is supported only on L3 devices.  
**Description**

### 10.3 clear ip msdp statistics

Use this command to clear the statistics of MSDP peers without resetting the TCP sessions.

**clear ip msdp statistics** [ *peer-address* ]

| Parameter Description | Parameter           | Description                                                                                             |
|-----------------------|---------------------|---------------------------------------------------------------------------------------------------------|
|                       | <i>peer-address</i> | IP address of MSDP peer whose statistics counters, reset count, and input/output count will be cleared. |

**Defaults** N/A

**Command** Privileged EXEC mode  
**Mode**

**Usage Guide** Use this command to clear the statistics of MSDP peers and view the new statistics of MSDP peers.  
 This command can clear the statistics of one or more MDSP peers without resetting the MSDP peer.

**Configuration** The following example clears the statistics of the MSDP peer with IP address being 61.83.1.52.

**Examples**

```
Ruijie# clear ip msdp statistics 61.83.1.52
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** This command is supported only on L3 devices.

**Description**

## 10.4 ip msdp default-peer

Use this command to define a default MSDP peer.

Use **no** or **default** form of this command to restore the default setting.

**ip msdp default-peer** *peer-address* [ **prefix-list** *prefix-list-name* ]

**no ip msdp default-peer** *peer-address*

**default ip msdp default-peer** *peer-address*

| Parameter Description | Parameter                                  | Description                    |
|-----------------------|--------------------------------------------|--------------------------------|
|                       | <i>peer-address</i>                        | IP address of the MSDP peer    |
|                       | <b>prefix-list</b> <i>prefix-list-name</i> | Specifies the BGP prefix list. |

**Defaults** By default, no default MSDP peer is configured.

**Command** Global configuration mode

**Mode**

**Usage Guide** The RPF-Peer calculation rule for the specified RP address may leads the loss of RPF-Peer information, which causes that the SA messages are dropped directly without the Peer-RPF check. With a default peer configured, the SA messages are ensured to pass the Peer-RFP check, so that the local host could accept the SA messages to learn the multicast source information carried by the SA messages.

If "prefix-list prefix-list-name" is not specified, all SA messages from the default MSDP peer will be accepted.

If "prefix-list prefix-list-name" is specified, only the SA messages from the RP specified by prefix-list prefix-list-name will be accepted.

If "prefix-list prefix-list-name" is specified but the prefix list is not configured, all SA messages from this default MSDP peer will be accepted.

**Configuration** The following example configures 172.16.33.1 as the default peer.

**Examples**

```
Ruijie(config)# ip msdp peer 172.16.33.1
Ruijie(config)# ip msdp peer 172.16.34.2
Ruijie(config)# ip msdp default-peer 172.16.33.1
```

| Related Commands | Command             | Description        |
|------------------|---------------------|--------------------|
|                  | <b>ip msdp peer</b> | Creates MSDP peer. |

**Platform** This command is supported only on layer-3 device.

**Description**

## 10.5 ip msdp description

Use this command to add descriptive information for MSDP peer.

Use **no** or **default** form of this command to restore the default setting.

**ip msdp description** *peer-address text*

**no ip msdp description** *peer-address*

**default ip msdp description** *peer-address*

| Parameter Description | Parameter           | Description                           |
|-----------------------|---------------------|---------------------------------------|
|                       | <i>peer-address</i> | IP address of the MSDP peer           |
|                       | <i>text</i>         | Descriptive information for MSDP peer |

**Defaults** No descriptive information is configured for MSDP peer.

**Command** Global configuration mode

**Mode**

**Usage Guide** The administrator can configure descriptive information for MSDP peers in order to identify them conveniently.

If the descriptive information A is specified for an MSDP peer, A is displayed. If no descriptive information is specified, "No description" is displayed.

**Configuration Examples** The following example configures the descriptive information for peer 172.17.1.2 as "customer-a".

```
Ruijie(config)# ip msdp description 172.171.1.2 customer-a
```

| Related Commands | Command                  | Description                                         |
|------------------|--------------------------|-----------------------------------------------------|
|                  | <b>show ip msdp peer</b> | Displays the descriptive information for MSDP peer. |

**Platform** This command is supported only on L3 devices.

**Description**

## 10.6 ip msdp filter-sa-request

Use this command to filter the SA request messages sent from MSDP peer.

Use the **no** or **default** form of this command to restore the default setting.

**ip msdp filter-sa-request** *peer-address [ list access-list ]*

**no ip msdp filter-sa-request** *peer-address*

**default ip msdp filter-sa-request** *peer-address*

| Parameter | Parameter | Description |
|-----------|-----------|-------------|
|-----------|-----------|-------------|

| Description                    |                                                                                   |
|--------------------------------|-----------------------------------------------------------------------------------|
| <i>peer-address</i>            | IP address of the MSDP peer                                                       |
| <b>list</b> <i>access-list</i> | The standard IP access list number or name for limiting multicast group addresses |

**Defaults** All SA request messages from MSDP peer will be accepted and replied.

**Command** Global configuration mode

**Mode**

**Usage Guide** Use this command to control which SA request messages will be accepted and replied.  
 If no access list is specified, all SA request messages will be ignored.  
 If a null access list is specified, all SA request messages will be ignored.  
 If an access list is specified, only the SA request messages from the multicast group permitted by the access list will be accepted, and other messages will be ignored.

**Configuration Examples** The following example configures to filter SA request messages from peer 172.16.223.1 and only accept SA request messages with group address falling within 224.0.1.0-224.0.1.255.

```
Ruijie(config)# ip msdp filter-sa-request 172.16.223.1 list 1
Ruijie(config)# access-list 1 permit 224.0.1.1 0.0.0.255
```

| Related Commands | Command             | Description        |
|------------------|---------------------|--------------------|
|                  | <b>ip msdp peer</b> | Creates MSDP peer. |

**Platform** This command is supported only on L3 devices.

**Description**

## 10.7 ip msdp mesh-group

Use this command to configure a MSDP peer to be a member of a mesh group.

Use the **no** form of this command to remove the configuration.

Use the **default** form of this command to restore the default settings.

**ip msdp mesh-group** *mesh-name* *peer-address*

**no ip msdp mesh-group** *mesh-name* *peer-address*

**default ip msdp mesh-group** *mesh-name* *peer-address*

| Parameter Description | Parameter                                                 | Description                        |
|-----------------------|-----------------------------------------------------------|------------------------------------|
|                       | <i>mesh-name</i>                                          | Name of mesh group, case sensitive |
| <i>peer-address</i>   | IP address of the MSDP peer to be a member of mesh group. |                                    |

**Defaults** No mesh group will be created, and MSDP peers do not belong to any mesh group.

**Command** Global configuration mode  
**Mode**

**Usage Guide** All MSDP peers in the mesh group shall be fully meshed, namely MSDP peer relationship has been established between every two members in the mesh group.  
The SA received by one member of the mesh group won't be forwarded to other members in the same mesh group, thus reducing SA flooding and simplify Peer-RPF forwarding.

**Configuration Examples** The following example configures MSDP peer at address 192.168.1.3 to be a member of the mesh group named "msdp-mesh".

```
Ruijie(config)# ip msdp mesh-group msdp-mesh 192.168.1.3
```

**Related Commands**

| Command                        | Description                             |
|--------------------------------|-----------------------------------------|
| <b>show ip msdp mesh-group</b> | Displays the information of mesh group. |

**Platform** This command is supported only on L3 devices.  
**Description**

## 10.8 ip msdp originator-id

Use this command to allow a speaker that originates a SA message to use the IP address of the interface as the originator address in the SA message.

Use the **no** form of this command to remove this configuration.

Use the **default** form of this command to restore the default setting.

**ip msdp originator-id** *interface-type* *interface-number*

**no ip msdp originator-id**

**default ip msdp originator-id**

**Parameter Description**

| Parameter               | Description      |
|-------------------------|------------------|
| <i>interface-type</i>   | Interface type   |
| <i>interface-number</i> | Interface number |

**Defaults** By default, the originator address in SA messages will be the RP address configured by PIM.

**Command** Global configuration mode  
**Mode**

**Usage Guide** The master IP address of this interface will be used as the originator address in the SA messages. If no IP address is configured for this interface, or the interface is shut down, then the originator address in the SA messages won't use the master IP address of this interface, but use the RP address configured by PIM.  
Under certain circumstances, you may expect to change the originator address in SA messages,



such as during Anycast-RP deployment. By this time, you can use this command to modify the originator address in SA messages.

**Configuration** The following example uses the IP address of Loopback0 as the RP address in SA messages.

**Examples**

```
Ruijie(config)# ip msdp originator-id loopback0
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** This command is supported only on L3 devices.

**Description**

## 10.9 ip msdp password

Use this command to enable MD5 encryption of the TCP connection between MSDP peers.

Use the **no** or **default** form of this command to restore the default setting.

**ip msdp password peer** *peer-address* [ *encryption-type* ] *string*

**no ip msdp password peer** *peer-address*

**default ip msdp password peer** *peer-address*

**Parameter  
Description**

| Parameter              | Description                                                                                                                                                    |
|------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>peer-address</i>    | IP address of MSDP peer                                                                                                                                        |
| <i>encryption-type</i> | Grade of password: 0 (lowest level)-7 (highest level). Currently, only 0 and 7 are supported. The default encryption type is 0.                                |
| <i>string</i>          | The password used for TCP MD5 authentication.<br>Range: up to 80 characters when the encryption type is 0; up to 160 characters when the encryption type is 7. |

**Defaults** MD5 encryption of the TCP connection between MSDP peers is disabled.

**Command** Global configuration mode


**Mode**


**Usage Guide** When it is needed to authenticate the MSDP peers, you can enable MD5 encryption of TCP connection between MSDP peers. In such a case, two interconnected MSDP peers must be configured with MD5 authentication with same password, or else the connection will fail. If the password is configured or changed, the local MSDP device won't terminate the current session, but will try to use the new password to maintain the current session until timeout. If you have configure the password locally for the MSDP peer but no password is configured on MSDP, the following warning message will be displayed on the console:

```
%TCP-6-BADAUTH: MD5 digest NOT expected but found (200.200.200.6,
39996) -> (200.200.200.16, 639)
```

If different MD5 passwords are configured between MSDP peers, the following warning message will be displayed on the console:

```
%TCP-6-BADAUTH: MD5 digest failed for (200.200.200.6,
12302) -> (200.200.200.16, 639)
```

 If the encryption type is 0, the encryption key for TCP is the string entered in the console. That is, this type of encryption is supported when Ruijie Networks MSDP devices communicates with those from other vendors. Thus, this encryption type is recommended for mutual communication between devices from different vendors.

 If the encryption type is 7, the entered encryption key must be even and not less than 4. Different from type 0, the encryption key is not the string entered in the console. Instead, it is a new string computed by Ruijie-defined algorithm. In addition, our algorithm is different from other private vendor-specific algorithms. Therefore, this encryption type is supported only when Ruijie Networks devices are mutually connected.

**Configuration** The following example configures the MD5 password of "test" for the MSDP peer of 10.32.43.144.

**Examples**

```
Ruijie(config)# ip msdp password peer 10.32.43.144 0 test
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** This command is supported only on L3 devices.

**Description**

## 10.10 ip msdp peer connect-source

Use this command to create MSDP peer.

Use **no** or **default** form of this command to remove MSDP peer.

**ip msdp peer** *peer-address* **connect-source** *interface-type interface-number*

**no ip msdp peer** *peer-address*

**default ip msdp peer** *peer-address*

**Parameter  
Description**

| Parameter                                        | Description                                                                                                                                                                                                                                                                                                                                      |
|--------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>peer-address</i>                              | IP address of MSDP peer<br>The peer MSDP device uses this address to communicate with the local MSDP device for TCP connection.                                                                                                                                                                                                                  |
| <i>interface-type</i><br><i>interface-number</i> | Interface type and interface number.<br>The local MSDP device uses the main address of this interface as the source IP for the TCP connection to the remote MSDP peer.<br>Loopback interface is recommended.<br>If no IP address is configured for this interface, or the interface is shut down, then MSDP peer relation cannot be established. |

**Defaults** No MSDP peer is created.

**Command Mode** Global configuration mode

**Usage Guide** To enable MSDP, MSDP peer must be created.

**Configuration Examples** The following example configures the main address of interface loopback 0 as the source address for establishing MSDP peer relation with 192.168.5.1.

```
Ruijie(config)# ip msdp peer 192.168.5.1 connect-source loopback 0
```

**Related Commands**

| Command                  | Description                               |
|--------------------------|-------------------------------------------|
| <b>show ip msdp peer</b> | Displays the information about MSDP peer. |

**Platform** This command is supported only on L3 devices.

**Description**

## 10.11 ip msdp redistribute

Use this command to configure which (S, G) entries from the multicast routing table can be advertised to MSDP peers.

Use the **no** form of this command to remove this configuration.

Use the **default** form of this command to restore the default settings.

**ip msdp redistribute** [ **list** *access-list-name* ] [ **route-map** *route-map* ]

**no ip msdp redistribute**

**default ip msdp redistribute**

**Parameter Description**

| Parameter                           | Description                                                                                                 |
|-------------------------------------|-------------------------------------------------------------------------------------------------------------|
| <b>list</b> <i>access-list-name</i> | Number or name of an extended IP access list that controls which multicast routes (S, G) can be advertised. |
| <b>route-map</b> <i>route-map</i>   | Defines route-map.                                                                                          |

**Defaults** All multicast sources (S, G) registered on the local RP will be advertised.

**Command Mode** Global configuration mode

**Usage Guide** After redistribution filtering is configured, the (S, G) information from the local AS or the other AS can be added to the MSDP only through redistribution filtering.

If "**list** *access-list-name*" is specified, only those matched multicast routes (S, G) will be advertised.

If "**route-map** *map-name*" is specified, only multicast routes (S, G) matching the criteria given in "*map-name*" will be advertised.

If two keywords are specified, then multicast routes (S, G) matching all conditions will be advertised.

If the "**ip msdp redistribute**" command is configured with no keywords, no multicast sources will be advertised.

**Configuration** The following example configures to only advertise multicast routes with multicast source being 200.200.200.0/24 and group address being 225.1.1.0/24.

**Examples**

```
Router(config)# ip msdp redistribute list 100
Router(config)# ip access-list extended 100
Router(config-ext-nacl)# permit ip 200.200.200.0 0.0.0.255 225.1.1.0
0.0.0.255
```

**Related  
Commands**

| Command                      | Description                                     |
|------------------------------|-------------------------------------------------|
| <b>ip msdp sa-filter in</b>  | Configures the incoming filter for SA messages. |
| <b>ip msdp sa-filter out</b> | Configures the outgoing filter for SA messages. |

**Platform** This command is supported only on L3 devices.

**Description**

## 10.12 ip msdp sa-filter in

Use this command to configure an incoming filter for SA messages.

Use the **no** or **default** form of this command to remove the incoming filter.

**ip msdp sa-filter in** *peer-address* [ **list** *access-list* ] [ **route-map** *route-map* ] [ **rp-list** *rp-access-list* ]  
[ **rp-route-map** *rp-route-map* ]

**no ip msdp sa-filter in** *peer-address*

**default ip msdp sa-filter in** *peer-address*

**Parameter  
Description**

| Parameter                               | Description                                                                                                          |
|-----------------------------------------|----------------------------------------------------------------------------------------------------------------------|
| <i>peer-address</i>                     | IP address of MSDP peer                                                                                              |
| <b>list</b> <i>access-list</i>          | Number or name of an extended IP access list that controls which multicast routes (S, G) can be received.            |
| <b>route-map</b> <i>route-map</i>       | Specify the name of route-map; only SA messages matching the criteria given in " <i>map-name</i> " can pass through. |
| <b>rp-list</b> <i>rp-access-list</i>    | Number or name of standard access list that controls RPs.                                                            |
| <b>rp-route-map</b> <i>rp-route-map</i> | Specify the name of route map for RP; only the SA messages matching <i>rp-map-name</i> can be accepted.              |

**Defaults** All incoming SA messages will be accepted without filtering.

**Command** Global configuration mode  
**Mode**

**Usage Guide** If the command is configured, but no access list or route map is specified, all incoming SA messages will be filtered.

If only the **list** keyword or the **route-map** keyword is used, the multicast source (S, G) in SA messages matching the criteria corresponding to this keyword will be accepted.

If only the **rp-list** keyword or the **rp-route-map** keyword is used, the SA message will be accepted if the RP address carried in SA message matches the criteria corresponding to this keyword.

If two or more keywords of **list**, **route-map**, **rp-list** and **rp-route-map** are used, the SA message will be accepted if any multicast source (S, G) in SA message meet the criteria corresponding to all keywords.

**Configuration** The following example configures that all SA messages from the peer of 10.234.1.43 will be filtered.

**Examples**

```
Ruijie(config)# ip msdp peer 10.234.1.43
Ruijie(config)# ip msdp sa-filter in 10.234.1.43
```

**Related Commands**

| Command                      | Description                                                              |
|------------------------------|--------------------------------------------------------------------------|
| <b>ip msdp peer</b>          | Configures MSDP peer.                                                    |
| <b>ip msdp sa-filter-out</b> | Configures the outgoing filter for SA messages received from MSDP peers. |

**Platform** This command is supported only on L3 devices.

**Description**

## 10.13 ip msdp sa-filter out

Use this command to configure an outgoing filter for SA messages.

Use the **no** or **default** form of this command to remove the outgoing filter.

**ip msdp sa-filter out** *peer-address* [ **list** *access-list* ] [ **route-map** *route-map* ] [ **rp-list** *rp-access-list* ] [ **rp-route-map** *rp-route-map* ]

**no ip msdp sa-filter out** *peer-address*

**default ip msdp sa-filter out** *peer-address*

**Parameter Description**

| Parameter                               | Description                                                                                                 |
|-----------------------------------------|-------------------------------------------------------------------------------------------------------------|
| <i>peer-address</i>                     | IP address of MSDP peer                                                                                     |
| <b>list</b> <i>access-list</i>          | Number or name of an extended IP access list that controls which multicast routes (S, G) can be received.   |
| <b>route-map</b> <i>route-map</i>       | Specify the name of route-map; only SA messages matching the criteria given in "map-name" can pass through. |
| <b>rp-list</b> <i>rp-access-list</i>    | Number or name of standard access list that controls RPs.                                                   |
| <b>rp-route-map</b> <i>rp-route-map</i> | Specify the name of route map for RP; only the SA messages                                                  |

|                                       |
|---------------------------------------|
| matching rp-map-name can be accepted. |
|---------------------------------------|

**Defaults** All SA messages received will be forwarded to the MSDP peer.

**Command** Global configuration mode

**Mode**

**Usage Guide** If the command is configured, but no access list or route map is specified, all SA messages won't be forwarded to this MSDP peer.

If only one keyword of **list**, **route-map**, **rp-list** and **rp-route-map** is used, the multicast source pair (S, G) will be forwarded to this MSDP peer if the criteria corresponding to this keyword are met.

If two or more keywords of **list**, **route-map**, **rp-list** and **rp-route-map** are used, the (S, G) pair will only be forwarded to this MSDP peer if criteria corresponding to all keywords are met.

**Configuration Examples** The following example allows only multicast sources that pass access list 100 to be forwarded to the peer of 10.234.1.43.

```
Ruijie(config)# ip msdp peer 10.234.1.43
Ruijie(config)# ip msdp sa-filter out 10.234.1.43 list 100
Ruijie(config)# access-list 100 permit ip 10.211.0.0 0.0.255.255 224.12.0.0
0.0.255.255
```

**Related Commands**

| Command                     | Description                                                              |
|-----------------------------|--------------------------------------------------------------------------|
| <b>ip msdp peer</b>         | Configures MSDP peer.                                                    |
| <b>ip msdp sa-filter-in</b> | Configures the incoming filter for SA messages received from MSDP peers. |

**Platform** This command is supported only on L3 devices.

**Description**

## 10.14 ip msdp sa-limit

Use this command to configure the allowable maximum number of Source-Active (SA) cache entries from a MSDP peer.

Use the **no** or **default** form of this command to restore the default settings.

**ip msdp sa-limit** *peer-address sa-limit*

**no ip msdp sa-limit** *peer-address*

**default ip msdp sa-limit** *peer-address*

**Parameter Description**

| Parameter           | Description                                                             |
|---------------------|-------------------------------------------------------------------------|
| <i>peer-address</i> | IP address of MSDP peer                                                 |
| <i>sa-limit</i>     | Maximum number of SA messages from an MSDP peer allowed in the SA cache |

**Defaults** The maximum number of SA messages from an MSDP peer allowed in the SA cache is not limited.

**Command Mode** Global configuration mode

**Usage Guide** It is suggested to configure this command on all MSDP peers to prevent SA flooding attacks from MSDP peers.  
When the local device has learned A (quantity) SA entries from an MSDP peer, and A is greater than B (the SA limit), the SA entries from this peer will not be cleared at once. Instead, the aging mechanism (no more than 135 seconds) will lower A to B. That is, this command is not effective immediately. It aims to saving effective multicast information best to raise networking productivity. If you want to clear the SA entries in such case, use the **clear ip msdp sa-cache** command.

**Configuration Examples** The following example configures the SA message limit to 100 for the MSDP peer with IP address being 172.16.3.1.

```
Ruijie(config)# ip msdp sa-limit 172.16.3.1 100
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** This command is supported only on L3 devices.

## 10.15 ip msdp shutdown

Use this command to shut down the connection to MSDP peer.

Use the **no** or **default** form of this command to restore the default settings.

**ip msdp shutdown** *peer-address*

**no ip msdp shutdown** *peer-address*

**default ip msdp shutdown** *peer-address*

**Parameter Description**

| Parameter           | Description                 |
|---------------------|-----------------------------|
| <i>peer-address</i> | IP address of the MSDP peer |

**Defaults** The connection to peer is not shut down.

**Command Mode** Global configuration mode

**Usage Guide** Only the TCP connection to the specified MSDP peer will be shut down. Neither the MSDP peer nor its configurations will be cleared.

**Configuration** The following example shuts down the MSDP peer at IP address 192.168.7.20.

**Examples** Ruijie(config)# **ip msdp shutdown** 192.168.7.20

**Related  
Commands**

| Command      | Description        |
|--------------|--------------------|
| ip msdp peer | Creates MSDP peer. |

**Platform** This command is supported only on L3 devices.

**Description**

## 10.16 ip msdp timer

Use this command to configure the interval for timer re-connection.

Use the **no** or **default** form of this command to restore the default settings.

**ip msdp timer** *interval*

**no ip msdp time**

**default ip msdp timer**

**Parameter  
Description**

| Parameter       | Description                                                                            |
|-----------------|----------------------------------------------------------------------------------------|
| <i>interval</i> | Interval for timer re-connection, within the range from 1 to 60 in the unit of seconds |

**Defaults** The default interval is 30 seconds.

**Command  
Mode** Global configuration mode

**Usage Guide** By default, the interval for timer re-connection is 30 seconds, that is, the peer in active end can initiate only one TCP connection within 30 seconds. In certain applications, the interval is expected to be decreased in order to accelerate convergence of MSDP peering relation.

**Configuration** The following example sets the interval for timer re-connection to 20 seconds.

**Examples** Ruijie(config)# **ip msdp timer** 20

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** This command is supported only on L3 devices.

**Description**



## 10.17 ip msdp ttl-threshold

Use this command to limit the TTL value of multicast data packets carried in SA messages in order to limit the transmission of multicast packets.

Use the **no** or **default** form of this command to restore to the default settings.

**ip msdp ttl-threshold** *peer-address* *tvl-value*

**no ip msdp ttl-threshold** *peer-address*

**default ip msdp ttl-threshold** *peer-address*

| Parameter Description | Parameter           | Description                          |
|-----------------------|---------------------|--------------------------------------|
|                       | <i>peer-address</i> | IP address of the MSDP peer          |
|                       | <i>tvl-value</i>    | TTL value in the range from 0 to 255 |

**Defaults** TTL threshold is 0 by default.

**Command** Global configuration mode

**Mode**

**Usage Guide** This command limits multicast data packets which are sent in data-encapsulated SA messages. Only multicast packets with an IP-header TTL greater than or equal to the *tvl-value* will be sent to the MSDP peer. If the TTL value of multicast data is less than the threshold configured, then the multicast data will be separated from SA messages and discarded, and the SA messages without multicast data will be sent to the MSDP peer.

This command only limits the transmission of multicast data in SA messages without compromising the transmission of multicast sources in SA messages

**Configuration** The following example configures the TTL threshold for peer at IP address 192.168.10.1 to 8 hops:

**Examples** Ruijie(config)# **ip msdp ttl-threshold** 192.168.10.1 8

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** This command is supported only on L3 devices.

**Description**

## 10.18 ip msdp peer-limit

Use this command to set the upper limit of MSDP peers.

Use the **no** form of this command to remove the configuration.

Use the **default** form of this command to restore the default settings.

**ip msdp peer-limit** *peer-limit*

**no ip msdp peer-limit**  
**default ip msdp peer-limit**

**Parameter  
Description**

| Parameter         | Description                                               |
|-------------------|-----------------------------------------------------------|
| <i>peer-limit</i> | The upper limit of MSDP peers, in the range from 1 to128. |

**Defaults** The default is 64.

**Command  
Mode** Global configuration mode

**Usage Guide** This command is used to set the upper limit of MSDP peers. If the number of existing MSDP peers exceeds the upper limit to be configured, you should delete some peers, or the configuration will fail.

**Configuration** The following example sets the upper limit of MSDP peers to 128.

**Examples** Ruijie(config)# ip msdp peer-limit 128

**Platform  
Description** This command is supported only on L3 devices.

## 10.19 ip msdp global-sa-limit

Use this command to configure the maximum SA cache.

Use the **no** form of this command to remove the configuration.

Use the **default** form of this command to restore the default settings.

**ip msdp global-sa-limit** *sa-limit*

**no ip msdp global-sa-limit** *sa-limit*

**default ip msdp global-sa-limit** *sa-limit*

**Parameter  
Description**

| Parameter       | Description                                       |
|-----------------|---------------------------------------------------|
| <i>sa-limit</i> | The maximum SA cache, in the range from1 to 4,096 |

**Defaults** The default SA cache is 1,024.

**Command  
Mode** Global configuration mode

**Usage Guide** This command is used to set the maximum SA cache. It's recommended to configure it at the beginning of startup.

When MSDP is running, the increase in maximum SA cache has no influence upon the previously learned entries; the decrease in maximum SA cache will clear all entries learned before and start

caching again.

**Configuration** The following example sets the maximum SA cache to 4,096.

**Examples** Ruijie(config)# ip msdp global-sa-limit 4096

**Platform**

This command is supported only on L3 devices.

**Description**

## 10.20 show ip msdp count

Use this command to display the number of sources and groups originated in SA messages and the number of SA messages from an MSDP peer in the SA cache.

**show ip msdp count** [ *as-number* ]

**Parameter  
Description**

| Parameter        | Description                                                                                                      |
|------------------|------------------------------------------------------------------------------------------------------------------|
| <i>as-number</i> | Displays the number of sources and groups originated in SA messages from the specified autonomous system number. |

**Defaults**

N/A

**Command  
Mode**

Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide**

N/A

**Configuration**

```
Ruijie# sh ip msdp count
```

**Examples**

```
SA State per Peer Counters, <Peer>: <# SA learned>
```

```
1.1.1.2      : 0
100.100.100.14 : 0
100.100.100.15 : 0
100.100.100.200: 0
200.200.200.2 : 2
200.200.200.3 : 0
200.200.200.6 : 0
200.200.200.13 : 0
200.200.200.66 : 0
```

```
SA State per ASN Counters, <asn>: <# sources>/<# groups>
```

```
Total entries: 2
```

```
100: 1/2 .
```

| Field             | Description                                                               |
|-------------------|---------------------------------------------------------------------------|
| 200.200.200.200:2 | MSDP peer with IP address 200.200.200.200; 2 SA messages in the SA cache. |

|               |                                                                         |
|---------------|-------------------------------------------------------------------------|
| Total entries | Total number of SA entries in the SA cache.                             |
| ?:1/2         | Unknown autonomous system: 1 source address/2 multicast group addresses |

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** This command is supported only on L3 devices.

**Description**

## 10.21 show ip msdp mesh-group

Use this command to display the information of mesh group.

**show ip msdp mesh-group**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults**

N/A

**Command Mode**

Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide**

N/A

**Configuration**

```
Ruijie# sh ip msdp mesh-group
```

**Examples**

```
MSDP peers in each Mesh-group,<Mesh-group name>:<# peers>
msdp-mesh
 1.1.1.2
 1.1.1.3
```

| Field     | Description                          |
|-----------|--------------------------------------|
| msdp-mesh | Name of mesh group                   |
| 1.1.1.2   | One MSDP peer under this mesh group. |

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform**

This command is supported only on L3 devices.

**Description**

## 10.22 show ip msdp peer

Use this command to display detailed information about the MSDP peer.

**show ip msdp peer** [ *peer-address* ]

| Parameter Description | Parameter           | Description                 |
|-----------------------|---------------------|-----------------------------|
|                       | <i>peer-address</i> | IP address of the MSDP peer |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** N/A

**Configuration Examples**

```
Ruijie#show ip msdp peer 20.0.0.1
MSDP PEER 20.0.0.1 (No description), AS unknown
  Connection status:
    State: Listen, Resets: 1, Connection source: GigabitEthernet 0/1 (20.0.0.2)
    Uptime(Downtime): 00:00:25, Message sent/received: 13/19
    Input messages discarded: 0
    Connection and counters cleared 00:13:25 ago
    Local Address of connection: 20.0.0.2
    MD5 signature protection on MSDP TCP connection: enabled
  SA Filtering:
    Input (S,G) Access-list filter: None
    Input (S,G) route-map filter: None
    Input RP Access-list filter: None
    Input RP Route-map filter: None
    Output (S,G) Access-list filter: None
    Output (S,G) Route-map filter: None
    Output RP Access-list filter: None
    Output RP Route-map filter: None
  SA-Requests:
    Input filter: None
  Peer ttl threshold: 0
  SAs learned from this peer: 2, SAs limit: No-limit
  Message counters:
    SA messages discarded: 0
    SA messages in/out: 13/0
    SA Requests discarded/in: 0/0
    SA Responses out: 0
    Data Packets in/out: 6/0
```

| Field                       | Description                                                                                            |
|-----------------------------|--------------------------------------------------------------------------------------------------------|
| MSDP Peer                   | IP address of MSDP peer.                                                                               |
| AS                          | Autonomous system to which the MSDP peer belongs. If it is an unknown AS, "unknown" will be displayed. |
| State:                      | State of the MSDP peer.                                                                                |
| Connection source:          | Interface used to obtain the source address for TCP connection.                                        |
| Uptime(Downtime):           | Up time/down time of MSDP peer.                                                                        |
| Messages sent/received:     | Number of SA messages received.                                                                        |
| SA Filtering:               | SA filtering information.                                                                              |
| SAs learned from this peer: | Number of SA entries learned from MSDP peer.                                                           |
| SAs limit:                  | SA message limit for this MSDP peer.                                                                   |

#### Related Commands

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** This command is supported only on L3 devices.

#### Description

## 10.23 show ip msdp rpf-peer

Use this command to display the information about MSDP RPF peer corresponding to the specified originator address.

**show ip msdp rpf-peer** *ip-address*

#### Parameter Description

| Parameter         | Description                                 |
|-------------------|---------------------------------------------|
| <i>ip-address</i> | IP address of the originator of SA messages |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example displays the rpf-peer information of RP at address 1.1.1.1:

```
Ruijie# sh ip msdp rpf-peer 1.1.1.1
RPF peer information for 1.1.1.1
RPF peer: 200.200.200.2
```

```
RPF rule: Peer is only active peer
RPF route/mask: Not-used
RPF type: Not-used
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** This command is only supported on L3 devices.

**Description**

## 10.24 show ip msdp sa-cache

Use this command to display (S, G) state learned.

**show ip msdp sa-cache** [ *group-address* | *source-address* ] [ *group-address* | *source-address* ]  
[ *as-number* ]

**Parameter  
Description**

| Parameter              | Description                                                                        |
|------------------------|------------------------------------------------------------------------------------|
| <i>group-address</i>   | Group address of the group or source about which (S, G) information is displayed   |
| <i>source -address</i> | Source address of the group or source about which (S, G) information is displayed. |
| <i>as-number</i>       | Autonomous system number generated by SA messages.                                 |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** N/A

**Configuration** The following example displays (S, G) state learned.

**Examples**

```
Ruijie# sh ip msdp sa-cache
MSDP Source-Active Cache: 2 entries
MSDP Source-Active Cache: 2 entries
(200.200.200.200, 227.1.2.2), RP: 20.20.20.20, (M)BGP/AS 100,
04:17:09/00:02:05, Peer 200.200.200.2
Learned from peer 200.200.200.2, RPF peer 200.200.200.2,
SAs received: 277, Encapsulated data received: 0
(200.200.200.200, 227.1.2.3), RP: 20.20.20.20, (M)BGP/AS 100,
04:17:09/00:02:05, Peer 200.200.200.2
Learned from peer 200.200.200.2, RPF peer 200.200.200.2,
SAs received: 277, Encapsulated data received: 0
```

| Field                        | Description                                                                                                                                                    |
|------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| (200.200.200.200, 227.1.2.2) | Source address and group address.                                                                                                                              |
| RP 20.20.20.20               | RP address generating SA messages.                                                                                                                             |
| MBGP/AS                      | The autonomous system of the RP generating SA messages is unknown.                                                                                             |
| 04:17:09/00:02:05            | The route has been cached for 4 hours 17 minutes and 9 seconds. If no SA message is received in 2 minutes and 5 seconds, it will be removed from the SA cache. |

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** This command is only supported on L3 devices.

**Description**

## 10.25 show ip msdp sa-originated

Use this command to display the (S, G) information to be sent by the local device. The (S, G) information has passed redistribution filtering.

**show ip msdp sa-originated**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** This command can be used to display the (S, G) information sent by the local device that is the RP in PIM-SM with the multicast source (S, G) registered and is configured with MSDP peer. (S, G) information displayed has passed redistribution filtering, but, whether the information can be sent to the MSDP peer requires the results of egress filtering for the information.

**Configuration Examples** The following is sample output of "show ip msdp sa-originated" command.

```
Ruijie# sh ip msdp sa-originated
MSDP Source-Active Originated: 5 entries
(192.168.23.78, 225.0.0.1), RP: 192.168.23.249
(192.168.23.79, 225.0.0.2), RP: 192.168.23.249
(192.168.23.80, 225.0.0.3), RP: 192.168.23.249
```



```
(192.168.23.81, 225.0.0.4), RP: 192.168.23.249
(192.168.23.82, 225.0.0.5), RP: 192.168.23.249
```

| Field                      | Description                                                                                           |
|----------------------------|-------------------------------------------------------------------------------------------------------|
| (192.168.23.78, 225.0.0.1) | The source address (the first IP address) and group address (the second IP address) of SA to be sent. |
| RP 192.168.23.249          | RP address of SA sent.                                                                                |

#### Related Commands

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** This command is only supported on L3 devices.

#### Description

## 10.26 show ip msdp summary

Use this command to display the summary information about all MSDP peers.

**show ip msdp summary**

#### Parameter Description

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** If the local device configured with MSDP peers is the PIM-SM Rendezvous Point (RP) and multicast sources (S,G) registers in the RP, the command will display: (S,G) to Send  
The displayed (S,G) have gone through redistribution filtering (command: **ip msdp redistribute**).  
However, whether these (S,G) will be delivered to MSDP peers successfully relies on the outgoing filter (command: **ip msdp sa-filter out**).

**Configuration Examples** The following example displays the summary information about all MSDP peers.

#### Examples

```
Ruijie# sh ip msdp summary

Msdp Peer Status Summary
Peer Address      As      State      Uptime/Downtime  Reset-Count
Sa-Count  Peer-description
200.200.200.2    100     Up         04:22:11         10         6616
No description
200.200.200.3    100     Down      19:17:13         4          0
```

`peer-A`

| Field           | Description                                      |
|-----------------|--------------------------------------------------|
| Peer Address    | IP address of MSDP peer                          |
| AS              | Autonomous system to which the MSDP peer belongs |
| State           | State of the MSDP peer                           |
| Uptime/Downtime | Up time or down time of MSDP peer                |

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform**

This command is only supported on L3 devices.

**Description**



## Security Configuration Commands

---

- 1 AAA Commands
- 2 RADIUS Commands
- 3 TACACS+ Commands
- 4 802.1X Commands
- 5 Web Authenticoiin Commands
- 6 SCC Commands
- 7 Global IP-MAC Binding Commands
- 8 Password-Policy Commands
- 9 Port Security Commands
- 10 Storm Control Commands
- 11 SSH Commands
- 12 URPF Commands
- 13 CPU Protection Commands
- 14 DHCP Snooping Commands
- 15 DHCPv6 Snooping Commands
- 16 ARP-Check Commands
- 17 DAI Commands

18 IP Source Guard Commands

19 IPv6 Source Guard Commands

20 Anti-ARP Spoofing Commands

21 NFPP Commands

22 DoS Protection Commands

# 1 AAA Commands

## 1.1 aaa accounting commands

Use this command to configure NAS command accounting.

Use the **no** form of this command to restore the default setting.

**aaa accounting commands** *level* { **default** | *list-name* } **start-stop** *method1* [ *method2...* ]

**no aaa accounting commands** *level* { **default** | *list-name* }

| Parameter   | Parameter        | Description                                                                                                             |
|-------------|------------------|-------------------------------------------------------------------------------------------------------------------------|
| Description | <i>level</i>     | The accounting command level, 0-15. The message shall be recorded before which command level is executed is determined. |
|             | <b>default</b>   | When this parameter is used, the following defined method list is used as the default method for command accounting.    |
|             | <i>list-name</i> | Name of the command accounting method list, which could be any character strings.                                       |
|             | <i>method</i>    | It must be one of the keywords listed in the following table. One method list can contain up to four methods.           |
|             | <b>none</b>      | Does not perform accounting.                                                                                            |
|             | <b>group</b>     | Uses the server group for accounting, the TACACS+ server group is supported.                                            |

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** RGOS enables the accounting command function after enabling the login authentication. After enabling the accounting function, it sends the command information to the security service. The configured accounting command method must be applied to the terminal line that needs accounting command; otherwise it is ineffective.

**Configuration** The following example enables NAS command accounting.

**Examples**

```
Ruijie(config)# aaa accounting commands 15 default start-stop group tacacs+
```

| Related Commands | Command                    | Description                                           |
|------------------|----------------------------|-------------------------------------------------------|
|                  | <b>aaa new-model</b>       | Enables the AAA security service.                     |
|                  | <b>aaa authentication</b>  | Defines AAA authentication.                           |
|                  | <b>accounting commands</b> | Applies the accounting commands to the terminal line. |

**Platform** N/A

**Description**

## 1.2 aaa accounting exec

Use this command to enable NAS access accounting.

Use the **no** form of this command to restore the default setting.

**aaa accounting exec** { **default** | *list-name* } **start-stop** *method1* [ *method2...*]

**no aaa accounting exec** { **default** | *list-name* }

| Parameter          | Parameter        | Description                                                                                                       |
|--------------------|------------------|-------------------------------------------------------------------------------------------------------------------|
| <b>Description</b> | <b>default</b>   | When this parameter is used, the following defined method list is used as the default method for Exec accounting. |
|                    | <i>list-name</i> | Name of the Exec accounting method list, which could be any character strings                                     |
|                    | <i>method</i>    | It must be one of the keywords: <b>none</b> and <b>group</b> . One method list can contain up to four methods.    |
|                    | <b>none</b>      | Does not perform accounting.                                                                                      |
|                    | <b>group</b>     | Uses the server group for accounting, the RADIUS and TACACS+ server group is supported.                           |

**Defaults** This function is disabled by default.

**Command** Global configuration mode

**Mode**

**Usage Guide** RGOS enables the exec accounting function after enabling the login authentication. After enabling the accounting function, it sends the account start information to the security server when the users log in the NAS CLI, and sends the account stop information to the security server when the users log out. If it does not send the account start information to the security server when a user logs in, it does not send the account stop information to the security server when a user logs out, either.

The configured exec accounting method must be applied to the terminal line that needs accounting command; otherwise it is ineffective.

**Configuration** The following example enables NAS access accounting.

**Examples**

```
Ruijie(config)# aaa accounting network start-stop group radius
```

| Related         | Command                    | Description                                       |
|-----------------|----------------------------|---------------------------------------------------|
| <b>Commands</b> | <b>aaa new-model</b>       | Enables the AAA security service.                 |
|                 | <b>aaa authentication</b>  | Defines AAA authentication.                       |
|                 | <b>accounting commands</b> | Applies the Exec accounting to the terminal line. |

**Platform** N/A  
**Description**

### 1.3 aaa accounting network

Use this command to enable network access accounting.

Use the **no** form of this command to restore the default setting.

**aaa accounting network { default | list-name } start-stop method1 [ method2..]**

**no aaa accounting network { default | list-name }**

| Parameter          | Parameter        | Description                                                                                                                                                                                               |
|--------------------|------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b> | <b>default</b>   | When this parameter is used, the following defined method list is used as the default method for Network accounting.                                                                                      |
|                    | <i>list-name</i> | Name of the accounting method list                                                                                                                                                                        |
|                    | <i>method</i>    | Sends accounting messages at both the start time and the end time of access. Users are allowed to access the network, no matter whether the start accounting message enables the accounting successfully. |
|                    | <b>none</b>      | Does not perform accounting.                                                                                                                                                                              |
|                    | <b>group</b>     | Uses the server group for accounting, the RADIUS and TACACS+ server group is supported.                                                                                                                   |

**Defaults** This function is disabled by default.

**Command** Global configuration mode  
**Mode**

**Usage Guide** RGOS performs accounting of user activities by sending record attributes to the security server. Use the **start-stop** keyword to set the user accounting option.

**Configuration** The following example enables network access accounting.

**Examples**

```
Ruijie(config)# aaa accounting network start-stop group radius
```

| Related         | Command                          | Description                                  |
|-----------------|----------------------------------|----------------------------------------------|
| <b>Commands</b> | <b>aaa new-model</b>             | Enables the AAA security service.            |
|                 | <b>aaa authorization network</b> | Defines a network authorization method list. |
|                 | <b>aaa authentication</b>        | Defines AAA authentication.                  |
|                 | <b>username</b>                  | Defines a local user database.               |

**Platform** N/A  
**Description**

## 1.4 aaa accounting update

Use this command to enable the accounting update function.

Use the **no** form of this command to restore the default setting.

**aaa accounting update**

**no aaa accounting update**

**Parameter  
Description**

N/A

**Defaults**

This function is disabled by default.

**Command  
Mode**

Global configuration mode

**Usage Guide**

If the AAA security service is not enabled, the accounting update function cannot be used. This command is used to set the accounting interval if the AAA security service has been enabled.

**Configuration**

The following example enables the accounting update function.

**Examples**

```
Ruijie(config)# aaa new-model
Ruijie(config)# aaa accounting update
```

**Related  
Commands**

| Command                       | Description                               |
|-------------------------------|-------------------------------------------|
| <b>aaa new-model</b>          | Enables the AAA security service.         |
| <b>aaa accounting network</b> | Defines a network accounting method list. |

**Platform  
Description**

N/A

## 1.5 aaa accounting update periodic

Use this command to set the interval of sending the accounting update message.

Use the **no** form of this command to restore the default setting.

**aaa accounting update periodic** *interval*

**no aaa accounting update periodic**

**Parameter  
Description**

| Parameter       | Description                                                                                                   |
|-----------------|---------------------------------------------------------------------------------------------------------------|
| <i>interval</i> | Interval of sending the accounting update message, in the unit of minutes. The shortest interval is 1 minute. |

**Defaults**

The default is 5 minutes.

**Command**

Global configuration mode



**Mode**

**Usage Guide** If the AAA security service is not enabled, the accounting update function cannot be used. This command is used to set the accounting interval if the AAA security service has been enabled.

**Configuration** The following example sets the interval of accounting update to 1 minute.

**Examples**

```
Ruijie(config)# aaa new-model
Ruijie(config)# aaa accounting update
Ruijie(config)# aaa accounting update periodic 1
```

**Related****Commands**

| Command                       | Description                               |
|-------------------------------|-------------------------------------------|
| <b>aaa new-model</b>          | Enables the AAA security service.         |
| <b>aaa accounting network</b> | Defines a network accounting method list. |

**Platform** N/A

**Description**

## 1.6 aaa authentication dot1x

Use this command to enable AAA authentication 802.1x and configure the 802.1x user authentication method list.

Use the **no** form of this command to delete the 802.1x user authentication method list.

**aaa authentication dot1x** { **default** | *list-name* } *method1* [ *method2...* ]

**no aaa authentication dot1x** { **default** | *list-name* }

**Parameter****Description**

| Parameter        | Description                                                                                                                                      |
|------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>default</b>   | When this parameter is used, the following defined 802.1x user authentication method list is used as the default method for user authentication. |
| <i>list-name</i> | Name of the 802.1x user authentication method list, which could be any character string                                                          |
| <i>method</i>    | It must be one of the keywords: <b>local</b> , <b>none</b> and <b>group</b> . One method list can contain up to four methods.                    |
| <b>local</b>     | Uses the local user name database for authentication.                                                                                            |
| <b>none</b>      | Does not perform authentication.                                                                                                                 |
| <b>group</b>     | Uses the server group for authentication. At present, the RADIUS server group is supported.                                                      |

**Defaults** N/A

**Command** Global configuration mode

**Mode**

**Usage Guide** If the AAA 802.1x security service is enabled on the device, users must use AAA for 802.1x user authentication negotiation. You must use the **aaa authentication dot1x** command to configure a default or optional method list for 802.1x user authentication.

The next method can be used for authentication only when the current method does not work.

**Configuration Examples** The following example defines an AAA authentication method list named **RDS\_D1X**. In the authentication method list, first the RADIUS security server is used for authentication. If the RADIUS security server does not respond, the local user database is used for authentication.

```
Ruijie(config)# aaa authentication dot1x rds_d1x group radius local
```

| Related Commands | Command                     | Description                                             |
|------------------|-----------------------------|---------------------------------------------------------|
|                  | <b>aaa new-model</b>        | Enables the AAA security service.                       |
|                  | <b>dot1x authentication</b> | Associates a specific method list with the 802.1x user. |
|                  | <b>username</b>             | Defines a local user database.                          |

**Platform** N/A

**Description**

## 1.7 aaa authentication enable

Use this command to enable AAA Enable authentication and configure the Enable authentication method list.

Use the **no** form of this command to delete the user authentication method list.

**aaa authentication enable default** *method1* [*method2...*]

**no aaa authentication enable default**

| Parameter Description | Parameter      | Description                                                                                                                            |
|-----------------------|----------------|----------------------------------------------------------------------------------------------------------------------------------------|
|                       | <b>default</b> | When this parameter is used, the following defined authentication method list is used as the default method for Enable authentication. |
|                       | <i>method</i>  | It must be one of the keywords: <b>local</b> , <b>none</b> and <b>group</b> . One method list can contain up to four methods.          |
|                       | <b>local</b>   | Uses the local user name database for authentication.                                                                                  |
|                       | <b>none</b>    | Does not perform authentication.                                                                                                       |
|                       | <b>group</b>   | Uses the server group for authentication. At present, the RADIUS and TACACS+ server groups are supported.                              |
|                       | <b>enable</b>  | Enables AAA Enable authentication.                                                                                                     |

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** If the AAA Enable authentication service is enabled on the device, users must use AAA for Enable

authentication negotiation. You must use the **aaa authentication enable** command to configure a default or optional method list for Enable authentication.

The next method can be used for authentication only when the current method does not work.

The Enable authentication function automatically takes effect after configuring the Enable authentication method list.

**Configuration Examples** The following example defines an AAA Enable authentication method list. In the authentication method list, first the RADIUS security server is used for authentication. If the RADIUS security server does not respond, the local user database is used for authentication.

```
Ruijie(config)# aaa authentication enable default group radius local
```

| Related Commands | Command              | Description                       |
|------------------|----------------------|-----------------------------------|
|                  | <b>aaa new-model</b> | Enables the AAA security service. |
|                  | <b>enable</b>        | Switchover the user level.        |
|                  | <b>username</b>      | Defines a local user database.    |

**Platform** N/A

**Description**

## 1.8 aaa authentication iportal

Use this command to enable AAA Portal Web user authentication.

Use the **no** form of this command to delete the authentication method list.

```
aaa authentication iportal { default | list-name } method1 [ method2...]
```

```
no aaa authentication iportal { default | list-name }
```

| Parameter Description | Parameter        | Description                                                                                                                                 |
|-----------------------|------------------|---------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <b>default</b>   | When this parameter is used, the following defined authentication method list is used as the default method for Login authentication.       |
|                       | <i>list-name</i> | Name of the user authentication method list, which could be any character strings                                                           |
|                       | <i>method</i>    | It must be one of the keywords: <b>local</b> , <b>none</b> , <b>subs</b> and <b>group</b> . One method list can contain up to four methods. |
|                       | <b>local</b>     | Uses the local user name database for authentication.                                                                                       |
|                       | <b>none</b>      | Does not perform authentication.                                                                                                            |
|                       | <b>group</b>     | Uses the server group for authentication. At present, the RADIUS server group is supported.                                                 |

|             |                                            |
|-------------|--------------------------------------------|
| <b>subs</b> | Uses the subs database for authentication. |
|-------------|--------------------------------------------|

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** If the AAA Portal Web security service is enabled on the device, users must use AAA for Portal Web authentication negotiation. You must use the **aaa authentication iportal** command to configure a default or optional method list for Portal Web authentication.

**Configuration Examples** The following example defines an AAA Portal Web authentication method list named **rds\_web**. First the RADIUS security server is used for authentication. If the RADIUS security server does not respond, the local user database is used for authentication.

```
Ruijie(config)# aaa authentication iportal rds_web group radius local
```

**Related Commands**

| Command                     | Description                                                    |
|-----------------------------|----------------------------------------------------------------|
| <b>aaa new-model</b>        | Enables the AAA security service.                              |
| <b>login authentication</b> | Applies the Login authentication method to the terminal lines. |
| <b>username</b>             | Defines a local user database.                                 |

**Platform Description** N/A

## 1.9 aaa authentication login

Use this command to enable AAA Login authentication and configure the Login authentication method list.

Use the **no** form of this command to delete the authentication method list.

```
aaa authentication login { default | list-name } method1 [ method2.. ]
```

```
no aaa authentication login { default | list-name }
```

| Parameter          | Parameter      | Description                                                       |
|--------------------|----------------|-------------------------------------------------------------------|
| <b>Description</b> | <b>default</b> | When this parameter is used, the following defined authentication |

|                  |                                                                                                                                             |
|------------------|---------------------------------------------------------------------------------------------------------------------------------------------|
|                  | method list is used as the default method for Login authentication.                                                                         |
| <b>list-name</b> | Name of the user authentication method list, which could be any character strings                                                           |
| <b>method</b>    | It must be one of the keywords: <b>local</b> , <b>none</b> , <b>group</b> and <b>subs</b> . One method list can contain up to four methods. |
| <b>local</b>     | Uses the local user name database for authentication.                                                                                       |
| <b>none</b>      | Does not perform authentication.                                                                                                            |
| <b>group</b>     | Uses the server group for authentication. At present, the RADIUS and TACACS+ server groups are supported.                                   |
| <b>subs</b>      | Uses the subs database for authentication.                                                                                                  |

**Defaults** N/A

**Command** Global configuration mode

**Mode**

**Usage Guide** If the AAA Login authentication security service is enabled on the device, users must use AAA for Login authentication negotiation. You must use the **aaa authentication login** command to configure a default or optional method list for Login authentication.

The next method can be used for authentication only when the current method does not work.

You need to apply the configured Login authentication method to the terminal line which needs Login authentication. Otherwise, the configured Login authentication method is invalid.

**Configuration Examples** The following example defines an AAA Login authentication method list named list-1. In the authentication method list, first the RADIUS security server is used for authentication. If the RADIUS security server does not respond, the local user database is used for authentication.

```
Ruijie(config)# aaa authentication login list-1 group radius local
```

**Related Commands**

| Command                     | Description                                                    |
|-----------------------------|----------------------------------------------------------------|
| <b>aaa new-model</b>        | Enables the AAA security service.                              |
| <b>login authentication</b> | Applies the Login authentication method to the terminal lines. |
| <b>username</b>             | Defines a local user database.                                 |

**Platform** N/A

**Description**

## 1.10 aaa authentication ppp

Use this command to enable the AAA authentication for PPP user and configure the PPP user authentication method list.

Use the **no** form of this command to delete the authentication method list.

**aaa authentication ppp** { **default** | *list-name* } *method1* [ *method2...* ]

**no aaa authentication ppp** { **default** | *list-name* }

| Parameter Description | Parameter        | Description                                                                                                                                 |
|-----------------------|------------------|---------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <b>default</b>   | When this parameter is used, the following defined authentication method list is used as the default method for PPP user authentication.    |
|                       | <i>list-name</i> | Name of the user authentication method list, which could be any character strings                                                           |
|                       | <i>method</i>    | It must be one of the keywords: <b>local</b> , <b>none</b> , <b>group</b> and <b>subs</b> . One method list can contain up to four methods. |
|                       | <b>local</b>     | Uses the local user name database for authentication.                                                                                       |
|                       | <b>none</b>      | Does not perform authentication.                                                                                                            |
|                       | <b>group</b>     | Uses the server group for authentication. At present, the RADIUS server group is supported.                                                 |
|                       | <b>subs</b>      | Uses the subs database for authentication.                                                                                                  |

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** If the AAA PPP security service is enabled on the device, users must use AAA authentication for PPP negotiation. You must use the **aaa authentication ppp** command to configure a default or optional method list for PPP user authentication.

The next method can be used for authentication only when the current method does not work.

**Configuration Examples** The following example defines an AAA authentication method list named `rds_ppp` for PPP session. In the authentication method list, first the RADIUS security server is used for authentication. If the RADIUS security server does not respond, the local user database is used for authentication.

```
Ruijie(config)# aaa authentication ppp rds_ppp group radius local
```

| Related | Command | Description |
|---------|---------|-------------|
|---------|---------|-------------|

| Commands                  |  |                                                      |
|---------------------------|--|------------------------------------------------------|
| <b>aaa new-model</b>      |  | Enables the AAA security service.                    |
| <b>ppp authentication</b> |  | Associates a specific method list with the PPP user. |
| <b>username</b>           |  | Defines a local user database.                       |

**Platform** N/A

**Description**

## 1.11 aaa authentication sslvpn

Use this command to enable AAA authentication for the SSL VPN user and configure the SSL VPN user authentication method list.

Use the **no** form of this command to delete the authentication method list.

**aaa authentication sslvpn** { **default** | *list-name* } *method1* [ *method2...*]

**no aaa authentication sslvpn** { **default** | *list-name* }

| Parameter Description | Parameter        | Description                                                                                                                                  |
|-----------------------|------------------|----------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <b>default</b>   | When this parameter is used, the following defined authentication method list is used as the default method for SSL VPN user authentication. |
|                       | <i>list-name</i> | Name of SSL VPN user authentication method list, which could be any character strings                                                        |
|                       | <i>method</i>    | It must be one of the keywords: <b>local</b> , <b>none</b> , <b>subs</b> and <b>group</b> . One method list can contain up to four methods.  |
|                       | <b>local</b>     | Use the local user name database for authentication.                                                                                         |
|                       | <b>none</b>      | Does not perform authentication.                                                                                                             |
|                       | <b>group</b>     | Uses the server group for authentication. At present, the RADIUS server group is supported.                                                  |
|                       | <b>subs</b>      | Uses the subs database for authentication.                                                                                                   |

**Defaults** N/A

**Command** Global configuration mode

**Mode**

**Usage Guide** If the SSL VPN security service is enabled on the device, users must use the AAA authentication for SSL VPN negotiation. You must use the **aaa authentication sslvpn** command to configure a default or optional method list for user authentication.

The next method can be used for authentication only when the current method does not work.

**Configuration Examples** The following example defines an AAA authentication method list named **rds\_sslvpn** for SSL VPN session. In the authentication method list, the RADIUS security server is first used for authentication. If the RADIUS security server does not respond, the local user database is used for authentication.

```
Ruijie(config)# aaa authentication sslvpn rds_sslvpn group radius local
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 1.12 aaa authentication web-auth

Use this command to enable AAA second-generation Web authentication and configure the second-generation Web authentication method list in global configuration mode.

Use the **no** form of this command to delete the authentication method list.

**aaa authentication web-auth** { **default** | *list-name* } *method1* [ *method2...* ]

**no aaa authentication web-auth** { **default** | *list-name* }

**Parameter Description**

| Parameter        | Description                                                                                                                                               |
|------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>default</b>   | When this parameter is used, the following defined authentication method list is used as the default method for the second-generation Web authentication. |
| <i>list-name</i> | Name of second-generation Web authentication method list, which could be any character strings                                                            |
| <i>method</i>    | It must be one of the keywords: <b>local</b> , <b>none</b> , <b>subs</b> and <b>group</b> . One method list can contain up to four methods.               |
| <b>local</b>     | Uses the local user name database for authentication.                                                                                                     |
| <b>none</b>      | Does not perform authentication.                                                                                                                          |



|              |                                                                                             |
|--------------|---------------------------------------------------------------------------------------------|
| <b>group</b> | Uses the server group for authentication. At present, the RADIUS server group is supported. |
| <b>subs</b>  | Uses the subs database for authentication.                                                  |

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** If the AAA second-generation Web security service is enabled on the device, users must use AAA for the second-generation Web authentication negotiation. You must use the **aaa authentication web-auth** command to configure a default or optional method list for user authentication. The next method can be used for authentication only when the current method does not work.

**Configuration Examples** The following example defines an AAA authentication method list named **rds\_web**. In the authentication method list, the RADIUS security server is first used for authentication. If the RADIUS security server does not respond, the local user database is used for authentication.

```
Ruijie(config)# aaa authentication web-auth rds_web group radius none
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 1.13 aaa authorization commands

Use this command to authorize the command executed by the user who has logged in the NAS CLI. Use the **no** form of this command to restore the default setting.

**aaa authorization commands** *level* { **default** | *list-name* } *method1* [ *method2...* ]

**no aaa authorization commands** *level* { **default** | *list-name* }

| Parameter Description | Parameter        | Description                                                                                                             |
|-----------------------|------------------|-------------------------------------------------------------------------------------------------------------------------|
|                       | <i>level</i>     | Command level to be authorized in the range from 0 to 15                                                                |
|                       | <b>default</b>   | When this parameter is used, the following defined method list is used as the default method for command authorization. |
|                       | <i>list-name</i> | Name of the user authorization method list, which could be any character strings                                        |
|                       | <i>method</i>    | It must be one of the keywords: <b>none</b> and <b>group</b> . One method list can contain up to four methods.          |
|                       | <b>none</b>      | Do not perform authorization.                                                                                           |
|                       | <b>group</b>     | Uses the server group for authorization. At present, the TACACS+ server group is supported.                             |

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** RGOS supports authorization of the commands executed by the users. When the users input and attempt to execute a command, AAA sends this command to the security server. This command is to be executed if the security server allows to. Otherwise, it will prompt command deny.

It is necessary to specify the command level when configuring the command authorization, and this specified command level is the default command level.

The configured command authorization method must be applied to terminal line which requires the command authorization. Otherwise, the configured command authorization method is ineffective.

**Configuration** The following example uses the TACACS+ server to authorize the level 15 command.

**Examples**

```
Ruijie(config)# aaa authorization commands 15 default group tacacs+
```

| Related Commands | Command                       | Description                                              |
|------------------|-------------------------------|----------------------------------------------------------|
|                  | <b>aaa new-model</b>          | Enables the AAA security service.                        |
|                  | <b>authorization commands</b> | Applies the command authorization for the terminal line. |

**Platform** N/A

**Description**

## 1.14 aaa authorization config-commands

Use this command to authorize the configuration commands (including in the global configuration mode and its sub-mode).

Use the **no** form of this command to restore the default setting.

**aaa authorization config-commands**

**no aaa authorization config-commands**

| Parameter          | Parameter | Description |
|--------------------|-----------|-------------|
| <b>Description</b> | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** If you only authorize the commands in the non-configuration mode (for example, privileged EXEC mode), you can use the **no** form of this command to disable the authorization function in the configuration mode, and execute the commands in the configuration mode and its sub-mode without command authorization.

**Configuration** The following example enables the configuration command authorization function.

**Examples**

```
Ruijie(config)# aaa authorization config-commands
```

| Related Commands | Command                           | Description                            |
|------------------|-----------------------------------|----------------------------------------|
|                  | <b>aaa new-model</b>              | Enables the AAA security service.      |
|                  | <b>aaa authorization commands</b> | Defines the AAA command authorization. |

**Platform** N/A

**Description**

## 1.15 aaa authorization console

Use this command to authorize the commands of the users who have logged in the console.

Use the **no** form of this command to restore the default setting.

**aaa authorization console**

**no aaa authorization console**

| Parameter          | Parameter | Description |
|--------------------|-----------|-------------|
| <b>Description</b> | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** RGOS supports to identify the users logged in from the console and from other terminals, configure whether to authorize the users logged in from the console or not. If the command authorization function is disabled on the console, the authorization method list applied to the console line is ineffective.

**Configuration** The following example enables the aaa authorization console function.

**Examples**

```
Ruijie(config)# aaa authorization console
```

| Related Commands | Command                           | Description                                             |
|------------------|-----------------------------------|---------------------------------------------------------|
|                  | <b>aaa new-model</b>              | Enables the AAA security service.                       |
|                  | <b>aaa authorization commands</b> | Defines the AAA command authorization.                  |
|                  | <b>authorization commands</b>     | Applies the command authorization to the terminal line. |

**Platform** N/A

**Description**

## 1.16 aaa authorization exec

Use this command to authorize the users logged in the NAS CLI and assign the authority level.

Use the **no** form of this command to restore the default setting.

**aaa authorization exec** { **default** | *list-name* } *method1* [ *method2...* ]

**no aaa authorization exec** { **default** | *list-name* }

| Parameter   | Parameter        | Description                                                                                                          |
|-------------|------------------|----------------------------------------------------------------------------------------------------------------------|
| Description | <b>default</b>   | When this parameter is used, the following defined method list is used as the default method for Exec authorization. |
|             | <i>list-name</i> | Name of the user authorization method list, which could be any character strings                                     |
|             | <i>method</i>    | It must be one of the keywords listed in the following table. One method list can contain up to four methods.        |
|             | <b>local</b>     | Uses the local user name database for authorization.                                                                 |
|             | <b>none</b>      | Does not perform authorization.                                                                                      |
|             | <b>group</b>     | Uses the server group for authorization. At present, the RADIUS server group is supported.                           |

**Defaults** This function is disabled by default.

**Command** Global configuration mode

**Mode**

**Usage Guide** RGOS supports authorization of users logged in the NAS CLI and assignment of CLI authority level (0-15). The **aaa authorization exec** function is effective on condition that Login authentication function has been enabled. It cannot enter the CLI if it fails to enable the **aaa authorization exec**. You must apply the exec authorization method to the terminal line; otherwise the configured method is ineffective.

**Configuration** The following example uses the RADIUS server to authorize Exec.

**Examples**

```
Ruijie(config)# aaa authorization exec default group radius
```

| Related  | Command                   | Description                                             |
|----------|---------------------------|---------------------------------------------------------|
| Commands | <b>aaa new-model</b>      | Enables the AAA security service.                       |
|          | <b>authorization exec</b> | Applies the command authorization to the terminal line. |
|          | <b>username</b>           | Defines a local user database.                          |

**Platform** N/A

**Description**

## 1.17 aaa authorization network

Use this command to authorize the service requests (including such protocols as PPP and SLIP) from the users that access the network.

Use the **no** form of this command to restore the default setting.

**aaa authorization network** { **default** | *list-name* } *method1* [ *method2...*]

**no aaa authorization network** { **default** | *list-name* }

| Parameter   | Parameter      | Description                                                                                                             |
|-------------|----------------|-------------------------------------------------------------------------------------------------------------------------|
| Description | <b>default</b> | When this parameter is used, the following defined method list is used as the default method for Network authorization. |
|             | <i>method</i>  | It must be one of the keywords: none and group. One method list can contain up to four methods.                         |
|             | <b>none</b>    | Does not perform authorization.                                                                                         |
|             | <b>group</b>   | Uses the server group for authorization. At present, the RADIUS server group is supported.                              |

**Defaults** This function is disabled by default.

**Command** Global configuration mode

**Mode**

**Usage Guide** RGOS supports authorization of all the service requests related to the network, such as PPP and SLIP. If authorization is configured, all the authenticated users or interfaces will be authorized automatically.

Three different authorization methods can be specified. Like authorization, the next method can be used for authorization only when the current authorization method does not work. If the current authorization method fails, other subsequent authorization method is not used.

The RADIUS server authorizes authenticated users by returning a series of attributes. Therefore, RADIUS authorization is based on RADIUS authorization. RADIUS authorization is performed only when the user passes the RADIUS authorization.

**Configuration** The following example uses the RADIUS server to authorize network services.

**Examples**

```
Ruijie(config)# aaa authorization network default group radius
```

| Related  | Command                   | Description                       |
|----------|---------------------------|-----------------------------------|
| Commands | <b>aaa new-model</b>      | Enables the AAA security service. |
|          | <b>aaa accounting</b>     | Defines AAA accounting.           |
|          | <b>aaa authentication</b> | Defines AAA authentication.       |
|          | <b>username</b>           | Defines a local user database.    |

**Platform** N/A

**Description**

## 1.18 aaa domain

Use this command to configure the domain attributes.

Use the **no** form of this command to restore the default setting.

**aaa domain** { **default** | *domain-name* }

**no aaa domain** { **default** | *domain-name* }

| Parameter   | Parameter          | Description                                          |
|-------------|--------------------|------------------------------------------------------|
| Description | <b>default</b>     | Uses this parameter to configure the default domain. |
|             | <i>domain-name</i> | The name of the specified domain                     |

**Defaults** No domain is configured by default.

**Command Mode** Global configuration mode

**Usage Guide** Use this command to configure the domain-name-based AAA service. The **default** is to configure the default domain. That is the method list used by the network device if the users are without domain information. The *domain-name* is the specified domain name, if the users are with this *domain name*, the method lists associated with this domain are used. At present, the system can configure up to 32 domains.

**Configuration** The following example configures the domain name.

**Examples**

```
Ruijie(config)# aaa domain ruijie.com
Ruijie(config-aaa-domain)#
```

| Related Commands | Command                  | Description                                |
|------------------|--------------------------|--------------------------------------------|
|                  | <b>aaa new-model</b>     | Enables the AAA security service.          |
|                  | <b>aaa domain enable</b> | Enables the domain-name-based AAA service. |
|                  | <b>show aaa domain</b>   | Displays the domain configuration.         |

**Platform** N/A

**Description**

## 1.19 aaa domain enable

Use this command to enable domain-name-based AAA service.

Use the **no** form of this command to restore the default setting.

**aaa domain enable**

**no aaa domain enable**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

- Defaults** This function is disabled by default.
- Command Mode** Global configuration mode
- Usage Guide** To perform the domain-name-based AAA service configuration, enable this service.

**Configuration** The following example enables the domain-name-based AAA service.

**Examples**

```
Ruijie(config)# aaa domain enable
```

| Related         | Command                 | Description                        |
|-----------------|-------------------------|------------------------------------|
| <b>Commands</b> | <b>aaa new-model</b>    | Enables the AAA security service.  |
|                 | <b>show aaa doomain</b> | Displays the domain configuration. |

**Platform** N/A

**Description**

## 1.20 aaa local authentication attempts

Use this command to set login attempt times.

**aaa local authentication attempts** *max-attempts*

| Parameter          | Parameter           | Description                          |
|--------------------|---------------------|--------------------------------------|
| <b>Description</b> | <i>max-attempts</i> | In the range from 1 to 2,147,483,647 |

**Defaults** The default is 3.

**Command Mode** Global configuration mode

**Usage Guide** Use this command to configure login attempt times.

**Configuration** The following example sets login attempt times to 6.

**Examples**

```
Ruijie #configure terminal
Ruijie(config)#aaa local authentication attempts 6
```

| Related         | Command                    | Description                                                    |
|-----------------|----------------------------|----------------------------------------------------------------|
| <b>Commands</b> | <b>show running-config</b> | Displays the current configuration of the switch.              |
|                 | <b>show aaa lockout</b>    | Displays the lockout configuration parameter of current login. |

**Platform** N/A

**Description**

## 1.21 aaa local authentication lockout-time

Use this command to configure the lockout-time period when the login user has attempted for more than the limited times.

**aaa local authentication lockout-time** *lockout-time*

| Parameter   | Parameter           | Description                                        |
|-------------|---------------------|----------------------------------------------------|
| Description | <i>lockout-time</i> | In the range from 1 to 3200 in the unit of minutes |

**Defaults** The default is 15 minutes.

**Command Mode** Global configuration mode

**Usage Guide** Use this command to configure the length of lockout-time when the login user has attempted for more than the limited times.

**Configuration Examples** The following example sets the lockout-time period to 5 minutes.

```
Ruijie#configure terminal
Ruijie(config)#aaa local authentication lockout-time 5
```

| Related Commands | Command                    | Description                                                    |
|------------------|----------------------------|----------------------------------------------------------------|
|                  | <b>show running-config</b> | Displays the current configuration of the switch.              |
|                  | <b>show aaa lockout</b>    | Displays the lockout configuration parameter of current login. |

**Platform Description** N/A

## 1.22 aaa log enable

Use this command to enable the system to print the syslog informing AAA authentication success. Use the **no** form of this command to restore the default setting.

**aaa log enable**

**no aaa log enable**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode



**Usage Guide** Use this command to enable the system to print the syslog informing aaa authentication success.

**Configuration** The following example disables the system to print the syslog informing aaa authentication success.

**Examples**

```
Ruijie(config)# no aaa log enable
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 1.23 aaa log rate-limit

Use this command to set the rate of printing the syslog informing AAA authentication success.

Use the **no** form of this command to restore the default printing rate.

**aaa log rate-limit** *num*

**no aaa log rate-limit**

| Parameter          | Parameter  | Description                                                                                                                      |
|--------------------|------------|----------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b> | <i>num</i> | The number of syslog entries printed per second. The range is from 0 to 65,535.<br>0 indicates the printing rate is not limited. |

**Defaults** The default is 5.

**Command** Global configuration mode

**Mode**

**Usage Guide** Too much printing may flood the screen or even reduce device performance. In this case, use this command to adjust the printing rate.

**Configuration** The following example sets the rate of printing the syslog informing AAA authentication success to 10.

**Examples**

```
Ruijie(config)# aaa log rate-limit 10
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 1.24 aaa new-model

Use this command to enable the RGOS AAA security service.

Use the **no** form of this command to restore the default setting.

**aaa new-model**

**no aaa new-model**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** Use this command to enable AAA. If AAA is not enabled, none of the AAA commands can be configured.

**Configuration Examples** The following example enables the AAA security service.

```
Ruijie(config)# aaa new-model
```

| Related Commands | Command                   | Description                                |
|------------------|---------------------------|--------------------------------------------|
|                  | <b>aaa authentication</b> | Defines a user authentication method list. |
|                  | <b>aaa authorization</b>  | Defines a user authorization method list.  |
|                  | <b>aaa accounting</b>     | Defines a user accounting method list.     |

**Platform Description** N/A

## 1.25 access-limit

Use this command to configure the number of users limit for the domain, which is only valid for the IEEE802.1 users.

Use the **no** form of this command to restore the default setting.

**access-limit num**

**no access-limit**

| Parameter   | Parameter  | Description                                                                    |
|-------------|------------|--------------------------------------------------------------------------------|
| Description | <i>num</i> | The number used for the user limitation is only valid for the IEEE802.1 users. |

**Defaults** By default, no number of users is limited.

**Command** Domain configuration mode

**Mode**

**Usage Guide** This command limits the number of users for the domain.

**Configuration** The following example sets the number of users to 20 for the domain named ruijie.com.

**Examples**

```
Ruijie(config)# aaa domain ruijie.com
Ruijie(config-aaa-domain)# access-limit 2
```

**Related****Commands**

| Command                  | Description                       |
|--------------------------|-----------------------------------|
| <b>aaa new-model</b>     | Enables the AAA security service. |
| <b>aaa domain enable</b> | Switchover the user level.        |
| <b>show aaa domain</b>   | Defines a local user database.    |

**Platform** N/A

**Description**

## 1.26 accounting network

Use this command to configure the Network accounting list.

Use the **no** form of this command to restore the default setting.

**accounting network { default | list-name }**

**no accounting network**

**Parameter****Description**

| Parameter        | Description                                             |
|------------------|---------------------------------------------------------|
| <b>default</b>   | Uses this parameter to specify the default method list. |
| <i>list-name</i> | The name of the network accounting list                 |

**Defaults**

With no method list specified, if the user sends the request, the device will attempt to specify the default method list for the user.

**Command**

Domain configuration mode

**Mode**

**Usage Guide** Use this command to configure the Network accounting method list for the specified domain.

**Configuration** The following example sets the Network accounting method list for the specified domain.

**Examples**

```
Ruijie(config)# aaa domain ruijie.com
Ruijie(config-aaa-domain)# accounting network default
```

**Related****Commands**

| Command                  | Description                                |
|--------------------------|--------------------------------------------|
| <b>aaa new-model</b>     | Enables the AAA security service.          |
| <b>aaa domain enable</b> | Enables the domain-name-based AAA service. |
| <b>show aaa domain</b>   | Displays the domain configuration.         |

**Platform** N/A

**Description**

## 1.27 authentication dot1x

Use this command to configure the IEEE802.1x authentication list.

Use the **no** form of this command to restore the default setting.

**authentication dot1x** { **default** | *list-name* }

**no authentication dot1x**

| Parameter          | Parameter        | Description                                            |
|--------------------|------------------|--------------------------------------------------------|
| <b>Description</b> | <b>default</b>   | Uses this parameter to specify the default method list |
|                    | <i>list-name</i> | The name of the specified method list                  |

**Defaults** With no method list specified, if users send the request, the device will attempt to specify the default method list for users.

**Command** Domain configuration mode

**Mode**

**Usage Guide** Specify an IEEE802.1x authentication method list for the domain.

**Configuration** The following example sets an IEEE802.1x authentication method list for the specified domain.

**Examples**

```
Ruijie(config)# aaa domain ruijie.com
Ruijie(config-aaa-domain)# authentication dot1x default
```

| Related         | Command                  | Description                                |
|-----------------|--------------------------|--------------------------------------------|
| <b>Commands</b> | <b>aaa new-model</b>     | Enables the AAA security service.          |
|                 | <b>aaa domain enable</b> | Enables the domain-name-based AAA service. |
|                 | <b>show aaa domain</b>   | Displays the domain configuration.         |

**Platform** N/A

**Description**

## 1.28 authorization network

Use this command to configure the Network authorization list.

Use the **no** form of this command to restore the default setting.

**authorization network** { **default** | *list-name* }

**no authorization network**

| Parameter | Parameter | Description |
|-----------|-----------|-------------|
|-----------|-----------|-------------|

|                    |                  |                                                         |
|--------------------|------------------|---------------------------------------------------------|
| <b>Description</b> | <b>default</b>   | Uses this parameter to specify the default method list. |
|                    | <i>list-name</i> | The name of the specified method list                   |

**Defaults** With no method list specified, if users send the request, the device will attempt to specify the default method list for users.

**Command Mode** Domain configuration mode

**Usage Guide** Specify an authorization method list for the domain.

**Configuration** The following example sets an authorization method list for the specified domain.

**Examples**

```
Ruijie(config)# aaa domain ruijie.com
Ruijie(config-aaa-domain)# authorization network default
```

| Related Commands | Command                  | Description                                |
|------------------|--------------------------|--------------------------------------------|
|                  | <b>aaa new-model</b>     | Enables the AAA security service.          |
|                  | <b>aaa domain enable</b> | Enables the domain-name-based AAA service. |
|                  | <b>show aaa domain</b>   | Displays the domain configuration.         |

**Platform Description** N/A

## 1.29 clear aaa local user lockout

Use this command to clear the lockout user list.

**clear aaa local user lockout { all | user-name word }**

| Parameter Description | Parameter             | Description                          |
|-----------------------|-----------------------|--------------------------------------|
|                       | <b>all</b>            | Indicates all locked users.          |
|                       | <b>user-name word</b> | Indicates the ID of the locked User. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** Use this command to clear all the user lists or a specified user list.

**Configuration** The following example clears the lockout user list.

**Examples**

```
Ruijie(config)# clear aaa local user lockout all
```

| Related | Command | Description |
|---------|---------|-------------|
|---------|---------|-------------|

|                 |                            |                                                                |
|-----------------|----------------------------|----------------------------------------------------------------|
| <b>Commands</b> | <b>show running-config</b> | Displays the current configuration of the switch.              |
|                 | <b>show aaa lockout</b>    | Displays the lockout configuration parameter of current login. |

**Platform** N/A

**Description**

## 1.30 show aaa accounting update

Use this command to display the accounting update information.

**show aaa accounting update**

|                    | Parameter | Description |
|--------------------|-----------|-------------|
| <b>Parameter</b>   |           |             |
| <b>Description</b> | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Mode**

**Usage Guide** Use this command to display the accounting update interval and whether the accounting update is enabled.

**Configuration** The following example displays the accounting update information.

**Examples** Ruijie# show aaa accounting update

|                         | Command                  | Description                                |
|-------------------------|--------------------------|--------------------------------------------|
| <b>Related Commands</b> | <b>aaa new-model</b>     | Enables the AAA security service.          |
|                         | <b>aaa domain enable</b> | Enables the domain-name-based AAA service. |

**Platform** N/A

**Description**

## 1.31 show aaa domain

Use this command to display all current domain information.

**show aaa domain [ default | domain-name ]**

|                    | Parameter          | Description                    |
|--------------------|--------------------|--------------------------------|
| <b>Parameter</b>   |                    |                                |
|                    | <b>default</b>     | Displays the default domain.   |
| <b>Description</b> | <i>domain-name</i> | Displays the specified domain. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** If no domain-name is specified, all domain information will be displayed.

**Configuration** The following example displays the domain named domain.com.

```
Ruijie(config)# show aaa domain domain.com
=====Domain domain.com=====
State: Active
Username format: Without-domain
Access limit: No limit
802.1X Access statistic: 0

Selected method list:
  authentication dot1x default
```

| Related Commands | Command                  | Description                                |
|------------------|--------------------------|--------------------------------------------|
|                  | <b>aaa new-model</b>     | Enables the AAA security service.          |
|                  | <b>aaa domain enable</b> | Enables the domain-name-based AAA service. |

**Platform** N/A

**Description**

## 1.32 show aaa lockout

Use this command to display the lockout configuration.

**show aaa lockout**

| Parameter          | Parameter | Description |
|--------------------|-----------|-------------|
| <b>Description</b> | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** Use this command to display the lockout configuration.

**Configuration** The following example displays the lockout configuration.

```
Ruijie# show aaa lockout
Lock tries: 3
Lock timeout: 15 minutes
```

| Related | Command | Description |
|---------|---------|-------------|
|---------|---------|-------------|

|                 |     |     |
|-----------------|-----|-----|
| <b>Commands</b> | N/A | N/A |
|-----------------|-----|-----|

**Platform** N/A

**Description**

## 1.33 show aaa group

Use this command to display all the server groups configured for AAA.

**show aaa group**

| Parameter          | Parameter | Description |
|--------------------|-----------|-------------|
| <b>Description</b> | N/A       | N/A         |

**Defaults** N/A

**Command** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Mode**

**Usage Guide** N/A

**Configuration** The following command displays all the server groups.

**Examples**

```
Ruijie# show aaa group
Type      Reference Name
-----
radius    1          radius
tacacs+   1          tacacs+
radius    1          dot1x_group
radius    1          login_group
radius    1          enable_group
```

| Related         | Command                 | Description                      |
|-----------------|-------------------------|----------------------------------|
| <b>Commands</b> | <b>aaa group server</b> | Configures the AAA server group. |

**Platform** N/A

**Description**

## 1.34 show aaa method-list

Use this command to display all AAA method lists.

**show aaa method-list**

| Parameter          | Parameter | Description |
|--------------------|-----------|-------------|
| <b>Description</b> | N/A       | N/A         |



**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** Use this command to display all AAA method lists.

**Configuration** The following example displays the AAA method list.

**Examples**

```
Ruijie# show aaa method-list
Authentication method-list
aaa authentication login default group radius
aaa authentication ppp default group radius
aaa authentication dot1x default group radius
aaa authentication dot1x san-f local group angel group rain none
aaa authentication enable default group radius
Accounting method-list
aaa accounting network default start-stop group radius
Authorization method-list
aaa authorization network default group radius
```

| Related  | Command                   | Description                               |
|----------|---------------------------|-------------------------------------------|
| Commands | <b>aaa authentication</b> | Defines a user authentication method list |
|          | <b>aaa authorization</b>  | Defines a user authorization method list  |
|          | <b>aaa accounting</b>     | Defines a user accounting method list     |

**Platform** N/A

**Description**

## 1.35 show aaa user

Use this command to display AAA user information.

**show aaa user { all | lockout | by-id *session-id* | by-name *user-name* }**

| Parameter   | Parameter                       | Description                                                                |
|-------------|---------------------------------|----------------------------------------------------------------------------|
| Description | <b>all</b>                      | Displays all AAA user information.                                         |
|             | <b>lockout</b>                  | Displays the locked AAA user information.                                  |
|             | <b>by-id <i>session-id</i></b>  | Displays the information of the AAA user that with a specified session ID. |
|             | <b>by-name <i>user-name</i></b> | Displays the information of the AAA user with a specified user name.       |

**Defaults** N/A

**Command** Privileged EXEC mode/Global configuration mode/Interface configuration mode  
**Mode**

**Usage Guide** Use this command to display AAA user information.

**Configuration** The following example displays AAA user information.

**Examples**

```
Ruijie#show aaa user all
-----
      Id ----- Name
2345687901      wwxy
-----

Ruijie# show aaa user by-id 2345687901
-----
      Id ----- Name
2345687901      wwxy

Ruijie# show aaa user by-name wwxy
-----
      Id ----- Name
2345687901      wwxy
-----

Ruijie# show aaa user lockout

Name                               Tries      Lock      Timeout (min)
-----
Ruijie#
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 1.36 state

Use this command to set whether the configured domain is valid.

Use the **no** form of this command to restore the default setting.

**state { block | active }**  
**no state**

| Parameter   | Parameter     | Description                       |
|-------------|---------------|-----------------------------------|
| Description | <b>block</b>  | The configured domain is invalid. |
|             | <b>active</b> | The configured domain is valid.   |

**Defaults** The default is active.

**Command Mode** Domain configuration mode

**Usage Guide** Use this command to set whether the specified configured domain is valid.

**Configuration** The following example sets the configured domain to be invalid.

**Examples**

```
Ruijie(config)# aaa domain ruijie.com
Ruijie(config-aaa-domain)# state block
```

| Related Commands | Command                       | Description                                |
|------------------|-------------------------------|--------------------------------------------|
|                  | <b>aaa new-model</b>          | Enables the AAA security service.          |
|                  | <b>aaa domain enable</b>      | Enables the domain-name-based AAA service. |
|                  | <b>show aaa domain enable</b> | Displays the domain configuration.         |

**Platform** N/A

**Description**

## 2 RADIUS Commands

### 2.1 aaa group server radius

Use this command to enter AAA server group configuration mode.

Use the **no** form of this command to restore the default setting.

**aaa group server radius** *name*  
**no aaa group server radius** *name*

| Parameter   | Parameter   | Description                                                                                                                     |
|-------------|-------------|---------------------------------------------------------------------------------------------------------------------------------|
| Description | <i>name</i> | Server group name. Keywords “radius” and “tacacs +” are excluded as they are the default RADIUS and TACACS+ server group names. |

**Defaults** N/A

**Command** Global configuration mode  
**Mode**

**Usage Guide** This command is used to configure a RADIUS AAA server group.

**Configuration** The following example configures a RADIUS AAA server group named ss.

```
Ruijie(config)# aaa group server radius ss
Ruijie(config-gs-radius)# end
Ruijie# show aaa group
Type      Reference Name
-----
radius    1          radius
tacacs+   1          tacacs+
radius    1          ss
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 2.2 ip radius source-interface

Use this command to specify the source IP address for the RADIUS packet.

Use the **no** form of this command to delete the source IP address for the RADIUS packet.

**ip radius source-interface** *interface-name*

**no radius source-interface** *interface-name*

**Parameter  
Description**

| Parameter             | Description                                                           |
|-----------------------|-----------------------------------------------------------------------|
| <i>interface-name</i> | Interface that the source IP address of the RADIUS packet belongs to. |

**Defaults** The source IP address of the RADIUS packet is set by the network layer.

**Command  
mode** Global configuration mode

**Usage Guide** In order to reduce the NAS information to be maintained on the RADIUS server, use this command to set the source IP address of the RADIUS packet. This command uses the first IP address of the specified interface as the source IP address of the RADIUS packet. This command is used in the layer 3 devices.

**Configuration** The following example specifies that the RADIUS packet obtains an IP address from the fastEthernet 0/0 interface and uses it as the source IP address of the RADIUS packet.

**Examples**

```
Ruijie(config)# ip radius source-interface fastEthernet 0/0
```

**Related Commands**

| Command                   | Description                                 |
|---------------------------|---------------------------------------------|
| <b>radius-server host</b> | Defines the RADIUS server.                  |
| <b>ip address</b>         | Configures the IP address of the interface. |

**Platform** N/A

**Description**

## 2.3 ip oob

Use this command to specify the MGMT port used in the TACACS+ server group.

Use the **no** form of this command to restore the default setting.

**ip oob** [ *via mgmt\_name* ]

**no ip oob**

**Parameter Description**

| Parameter        | Description    |
|------------------|----------------|
| <i>mgmt_name</i> | MGMT port name |

**Defaults** N/A

**Command** TACACS+ server group configuration mode

**Mode**

**Usage Guide** Use the **aaa group server tacacs+** command to enter TACACS+ server group configuration mode. If no port is specified as the MGMT port, MGMT Port 0 is default.

**Configuration****Examples****Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 2.4 ip vrf forwarding

Use this command to select a VRF for the AAA server group.

Use the **no** form of this command to restore the default setting.

**ip vrf forwarding** *vrf\_name*

**no ip vrf forwarding**

| Parameter Description | Parameter       | Description |
|-----------------------|-----------------|-------------|
|                       | <i>vrf_name</i> | VRF name    |

**Defaults** N/A

**Command** Server group configuration mode

**Mode**

**Usage Guide** This command is used to select a VRF for the specified server.

**Configuration** The following example selects the VRF named *vrf\_name* for AAA server group *ss*.

**Examples**

```
Ruijie(config)# aaa group server radius ss
Ruijie(config-gs-radius)# server 192.168.4.12
Ruijie(config-gs-radius)# server 192.168.4.13
Ruijie(config-gs-radius)# ip vrf forwarding vrf_name
Ruijie(config-gs-radius)# end
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 2.5 radius vendor-specific extend

Use this command to extend RADIUS not to differentiate the IDs of private vendors.

Use the **no** form of this command to restore the default setting.

**radius vendor-specific extend**

**no radius vendor-specific extend**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

- Defaults** Only the private vendor IDs of Ruijie are recognized.
- Command** Global configuration mode
- Mode**
- Usage Guide** This command is used to identify the attributes of all vendor IDs by type.

**Configuration** The following example extends RADIUS so as not to differentiate the IDs of private vendors:

**Examples**

```
Ruijie(config)# radius vendor-specific extend
```

**Related  
Commands**

| Command                   | Description                                                                     |
|---------------------------|---------------------------------------------------------------------------------|
| <b>radius attribute</b>   | Configures vendor type.                                                         |
| <b>radius set qos cos</b> | Sets the QoS value sent by the RADIUS server as the cos value of the interface. |

- Platform** N/A
- Description**

## 2.6 radius vendor-specific attribute support

Use this command to configure whether RADIUS accounting request packets carry the private attribute of a specified vendor.

Use the **no** form of this command to configure that RADIUS accounting request packets do not carry the private attribute of a specified vendor.

**radius vendor-specific attribute support { cisco | huawei | ms}**

**no radius vendor-specific attribute support { cisco | huawei | ms}**

**Parameter  
Description**

| Parameter     | Description                                   |
|---------------|-----------------------------------------------|
| <b>cisco</b>  | Indicates the private attribute of Cisco.     |
| <b>huawei</b> | Indicates the private attribute of Huawei.    |
| <b>ms</b>     | Indicates the private attribute of Microsoft. |

- Defaults** By default, RADIUS accounting request packets carry the private attribute of a specified vendor.
- Command** Global configuration mode
- Mode**
- Usage Guide** This command is used to configure whether RADIUS accounting request packets carry the private attribute of a specified vendor as required.
- Configuration** 1. The following example configures that RADIUS accounting request packets carry the private attribute of Huawei.
- Examples**

```
Ruijie(config)# radius vendor-specific attribute support huawei
```

2. The following example configures that RADIUS accounting request packets do not carry the private attribute of Huawei.

```
Ruijie(config)# no radius vendor-specific attribute support huawei
```

#### Related Commands

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 2.7 radius-server account update retransmit

Use this command to configure accounting update packet retransmission for the second generation Web authentication user.

Use the **no** form of this command to restore the default setting,

**radius-server account update retransmit**

**no radius-server account update retransmit**

#### Parameter Description

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** This function is enabled by default.

**Command Mode** Global configuration mode

**Usage Guide** This command is used to configure accounting update packet retransmission for the second generation Web authentication user exclusively.

**Configuration Examples** The following example configures accounting update packet retransmission for the second generation Web authentication user.

```
Ruijie(config)#radius-server account update retransmit
```

#### Related Commands

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A



## 2.8 radius-server attribute 31

Use this command to specify the MAC-based format of RADIUS Calling-Station-ID attribute.

Use the **no** form of this command to restore the default setting.

**radius-server attribute 31 mac format { ietf | normal | unformatted }**

**no radius-server attribute 31 mac format**

**Parameter Description**

| Parameter          | Description                                                                                                      |
|--------------------|------------------------------------------------------------------------------------------------------------------|
| <b>ietf</b>        | The standard format specified by the IETF RFC3580. '-' is used as the separator, for example: 00-D0-F8-33-22-AC. |
| <b>normal</b>      | Normal format representing the MAC address. ':' is used as the separator. For example: 00d0.f833.22ac.           |
| <b>unformatted</b> | No format and separator. By default, unformatted is used. For example: 00d0f83322ac.                             |

**Defaults**

The default format is unformatted.

**Command Mode**

Global configuration mode

**Usage Guide**

Some RADIUS security servers (mainly used to 802.1x authentication) may identify the IETF format only. In this case, the RADIUS Calling-Station-ID attribute shall be set as the IETF format type.

**Configuration Examples**

The following example defines the RADIUS Calling-Station-ID attribute as IETF format.

```
Ruijie(config)# radius-server attribute 31 mac format ietf
```

**Related Commands**

| Command                   | Description                |
|---------------------------|----------------------------|
| <b>radius-server host</b> | Defines the RADIUS server. |

**Platform Description**

N/A

## 2.9 radius-server attribute class

Use this command to analyze the flow control value of the RADIUS CLASS attributes.

Use the **no** form of this command to restore the default setting.

**radius-server attribute class user-flow-control { format-16bytes | format-32bytes }**

**no radius-server attribute class user-flow-control**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
|-----------|-------------|

|                          |                                                     |
|--------------------------|-----------------------------------------------------|
| <b>user-flow-control</b> | Analyzes flow control value in the CLASS attribute. |
| <b>format-16bytes</b>    | Sets the format of flow control value to 16 bytes.  |
| <b>format-32bytes</b>    | Sets the format of flow control value to 32 bytes.  |

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** This command is required if the server pushes the flow control value through the CLASS attribute.

**Configuration Examples** The following example analyzes the flow control value of the CLASS attribute and sets the format to 32 bytes.

```
Ruijie(config)#radius-server attribute class user-flow-control
format-32bytes
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A

## 2.10 radius-server dead-criteria

Use this command to configure criteria on a device to determine that the Radius server is unreachable.

Use the **no** form of this command to restore the default setting.

**radius-server dead-criteria** { **time** *seconds* [ **tries** *number* ] | **tries** *number* }

**no radius-server dead-criteria** { **time** [ **tries** ] | **tries** }

**Parameter Description**

| Parameter                  | Description                                                                                                                                                                                                                                                         |
|----------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>time</b> <i>seconds</i> | Configures the timeout value. If the device does not receive a correct response packet from the Radius server within the specified time, the Radius server is considered to be unreachable. The value is in the range from 1 to 120 in the unit of seconds.         |
| <b>tries</b> <i>number</i> | Configures the successive timeout times. When sending a request from the device to the Radius server times out for the specified times, the device considers that the Radius server is unreachable. The value is in the range from 1 to 100 in the unit of seconds. |

**Defaults** The default **time** *seconds* is 60 and **tries** *number* is 10.

**Command** Global configuration mode  
**Mode**

**Usage Guide** If a Radius server meets the timeout and timeout times at the same time, it is considered to be unreachable. This command is used to adjust the parameter conditions of timeout and timeout times.

**Configuration** The following example sets the timeout to 120 seconds and timeout times to 20.

**Examples**

```
Ruijie(config)# radius-server dead-criteria time 120 tries 20
```

**Related  
Commands**

| Command                       | Description                                                                                    |
|-------------------------------|------------------------------------------------------------------------------------------------|
| <b>radius-server host</b>     | Defines the RADIUS security server.                                                            |
| <b>radius-server deadtime</b> | Defines the duration when a device stops sending any requests to an unreachable Radius server. |
| <b>radius-server timeout</b>  | Defines the timeout for the packet re-transmission.                                            |

**Platform** N/A  
**Description**

## 2.11 radius-server deadtime

Use this command to configure the duration when a device stops sending any requests to an unreachable Radius server.

Use the **no** form of this command to restore the default setting.

**radius-server deadtime** *minutes*

**no radius-server deadtime**

**Parameter  
Description**

| Parameter      | Description                                                                                                                                                                    |
|----------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>minutes</i> | Defines the duration in minutes when the device stops sending any requests to the unreachable Radius server. The value is in the range from 1 to 1,440 in the unit of minutes. |

**Defaults** The default value of *minutes* is 0, that is, the device keeps sending requests to the unreachable Radius server.

**Command** Global configuration mode  
**Mode**

**Usage Guide** If active Radius server detection is enabled on the device, the time parameter of this command does not take effect on the Radius server. Otherwise, the Radius server becomes reachable when the duration set by this command is shorter than the unreachable time.

**Configuration** The following example sets the duration when the device stops sending requests to 1 minute.

**Examples** Ruijie(config)# radius-server deadtime 1

**Related  
Commands**

| Command                            | Description                                                            |
|------------------------------------|------------------------------------------------------------------------|
| <b>radius-server host</b>          | Defines the RADIUS security server.                                    |
| <b>radius-server dead-criteria</b> | Defines the criteria to determine that a Radius server is unreachable. |

**Platform** N/A

**Description**

## 2.12 radius-server host

Use this command to specify a RADIUS security server host.

Use the **no** form of this command to restore the default setting.

**radius-server host** [ **oob** [ **via** *mgmt-name* ] ] { *ipv4-address* | *ipv6-address* } [ **auth-port** *port-number* ] [ **acct-port** *port-number* ] [ **test username** *name* [ **idle-time** *time* ] ] [ **ignore-auth-port** ] [ **ignore-acct-port** ] [ **key** [ **0** | **7** ] *text-string* ]  
**no radius-server host** { *ipv4-address* | *ipv6-address* }

**Parameter  
Description**

| Parameter                           | Description                                                                                                                                                                               |
|-------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>oob</b> [ <i>via mgmt-name</i> ] | Specifies an MGMT port as the source port for TACACS+ communication. The default is MGMT Port 0.                                                                                          |
| <i>ipv4-address</i>                 | IPv6 address of the RADIUS security server host.                                                                                                                                          |
| <i>ipv6-address</i>                 | IPv4 address of the RADIUS security server host.                                                                                                                                          |
| <b>auth-port</b>                    | UDP port used for RADIUS authentication.                                                                                                                                                  |
| <i>port-number</i>                  | Number of the UDP port used for RADIUS authentication. If it is set to 0, this host does not perform authentication.                                                                      |
| <b>acct-port</b>                    | UDP port used for RADIUS accounting.                                                                                                                                                      |
| <i>port-number</i>                  | Number of the UDP port used for RADIUS accounting. If it is set to 0, this host does not perform accounting.                                                                              |
| <b>test username</b> <i>name</i>    | (Optional) Enables the active detection to the RADIUS security server and specify the username used by the active detection.                                                              |
| <b>idle-time</b> <i>time</i>        | (Optional) Sets the interval of sending the test packets to the reachable RADIUS security server, which is 60 minutes by default and in the range of 1 to 1440 minutes (namely 24 hours). |
| <b>ignore-auth-port</b>             | (Optional) Disables the detection to the authentication port on the RADIUS security server. It is enabled by default.                                                                     |
| <b>ignore-acct-port</b>             | (Optional) Disables the detection to the authentication port on the RADIUS security server. It is enabled by default.                                                                     |

|                                         |                                                                                                                                                  |
|-----------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>key</b> [ 0   7 ] <i>text-string</i> | Configure a shared key for the server. The type of encryption can be specified. 0 is no encryption and 7 is simple encryption. The default is 0. |
|-----------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|

**Defaults** No RADIUS host is specified by default.

**Command** Global configuration mode

**Mode**

**Usage Guide** In order to implement the AAA security service using RADIUS, you must define a RADIUS security server. You can define one or more RADIUS security servers using the **radius-server host** command.

**Configuration** The following example defines a RADIUS security server host:

**Examples**

```
Ruijie(config)# radius-server host 192.168.12.1
```

The following example defines a RADIUS security server host in the IPv4 environment, enable the active detection with the detection interval 60 minutes and disable the accounting UDP port detection:

```
Ruijie(config)# radius-server host 192.168.100.1 test username viven idle-time
60 ignore-acct-port
```

The following example defines a RADIUS security server host in the IPv6 environment

```
Ruijie(config)# radius-server host 3000::100
```

**Related  
Commands**

| Command                         | Description                                               |
|---------------------------------|-----------------------------------------------------------|
| <b>aaa authentication</b>       | Defines the AAA authentication method list                |
| <b>radius-server key</b>        | Defines a shared password for the RADIUS security server. |
| <b>radius-server retransmit</b> | Defines the number of RADIUS packet retransmissions.      |

**Platform** N/A

**Description**

## 2.13 radius-server key

Use this command to define a shared password for the network access server (device) to communicate with the RADIUS security server.

Use the **no** form of this command to restore the default setting.

**radius-server key** [ 0 | 7 ] *text-string*

**no radius-server key**

| Parameter | Parameter | Description |
|-----------|-----------|-------------|
|-----------|-----------|-------------|

|                    |                    |                                                                        |
|--------------------|--------------------|------------------------------------------------------------------------|
| <b>Description</b> |                    |                                                                        |
|                    | <i>text-string</i> | Text of the shared password                                            |
|                    | <b>0   7</b>       | Password encryption type.<br>0: no encryption;<br>7: Simply-encrypted. |

**Defaults** No shared password is specified by default.

**Command**

**Mode** Global configuration mode.

**Usage Guide** A shared password is the basis for communications between the device and the RADIUS security server. In order to allow the device to communicate with the RADIUS security server, you must define the same shared password on the device and the RADIUS security server.

**Configuration** The following example defines the shared password **aaa** for the RADIUS security server:

**Examples** Ruijie(config)# radius-server key aaa

|                         |                                 |                                                      |
|-------------------------|---------------------------------|------------------------------------------------------|
| <b>Related Commands</b> | <b>Command</b>                  | <b>Description</b>                                   |
|                         | <b>radius-server host</b>       | Defines the RADIUS security server.                  |
|                         | <b>radius-server retransmit</b> | Defines the number of RADIUS packet retransmissions. |
|                         | <b>radius-server timeout</b>    | Defines the timeout for the RADIUS packet.           |

**Platform** N/A

**Description**

## 2.14 radius-server retransmit

Use this command to configure the number of packet retransmissions before the device considers that the RADIUS security server does not respond.

Use the **no** form of this command to restore the default setting.

**radius-server retransmit** *retries*

**no radius-server retransmit**

|                              |                  |                                                                                                   |
|------------------------------|------------------|---------------------------------------------------------------------------------------------------|
| <b>Parameter Description</b> | <b>Parameter</b> | <b>Description</b>                                                                                |
|                              | <i>retries</i>   | Number of retransmissions in the range from 0 to 100. The value of 0 indicates no retransmission. |

**Defaults** The default is 3.

**Command** Global configuration mode.  
**Mode**

**Usage Guide** AAA uses the next method to authenticate users only when the current security server for authentication does not respond. When the device retransmits the RADIUS packet for the specified times and the interval between every two retries is timeout, the device considers that the security sever does not respond.

**Configuration** The following example sets the number of retransmissions to 4.

**Examples**

```
Ruijie(config)# radius-server retransmit 4
```

| Related<br>Commands | Command                      | Description                                      |
|---------------------|------------------------------|--------------------------------------------------|
|                     | <b>radius-server host</b>    | Defines the RADIUS security server.              |
|                     | <b>radius-server key</b>     | Defines a shared password for the RADIUS server. |
|                     | <b>radius-server timeout</b> | Defines the timeout for the RADIUS packet.       |

**Platform** N/A  
**Description**

## 2.15 radius-server source-port

Use this command to configure the source port to send RADIUS packets.

Use the **no** form of this command to restore the default setting.

**radius-server source-port** *port*

**no radius-server source-port**

| Parameter<br>Description | Parameter   | Description                                |
|--------------------------|-------------|--------------------------------------------|
|                          | <i>port</i> | The port ID, in the range from 0 to 65535. |

**Defaults** The default is a random number.

**Command** Global configuration mode  
**Mode**

**Usage Guide** The source port is random by default. This command is used to specify a source port.

**Configuration** The following example configures source port 10000 to send RADIUS packets.

**Examples**

```
Ruijie(config)# radius-server source-port 10000
```

| Related<br>Commands | Command | Description |
|---------------------|---------|-------------|
|---------------------|---------|-------------|

|     |     |
|-----|-----|
| N/A | N/A |
|-----|-----|

**Platform** N/A

**Description**

## 2.16 radius-server timeout

Use this command to set the time for the device to wait for a response from the security server after retransmitting the RADIUS packet.

Use the **no** form of this command to restore the default setting.

**radius-server timeout** *seconds*

**no radius-server timeout**

| Parameter<br>Description | Parameter      | Description |
|--------------------------|----------------|-------------|
|                          | <i>seconds</i> |             |

**Defaults** The default is 5 seconds.

**Command**

**Mode** Global configuration mode

**Usage Guide** This command is used to change the timeout of packet retransmission.

**Configuration** The following example sets the timeout to 10 seconds.

**Examples**

```
Ruijie(config)# radius-server timeout 10
```

| Related<br>Commands             | Command                   | Description                                              |
|---------------------------------|---------------------------|----------------------------------------------------------|
|                                 | <b>radius-server host</b> |                                                          |
| <b>radius-server retransmit</b> |                           | Defines the number of the RADIUS packet retransmissions. |
| <b>radius-server key</b>        |                           | Defines a shared password for the RADIUS server.         |

**Platform** N/A

**Description**

## 2.17 radius-server authentication attribute

Use this command to enable access-request packets to contain a specified RADIUS attribute.

Use the **no** or **default** form of this command to restore the default setting.

**radius-server authentication attribute** *type package*



**no radius-server authentication attribute *type* package**  
**default radius-server authentication attribute *type* package**

Use this command to disable access-request packets to contain a specified RADIUS attribute.  
 Use the **no** or **default** form of this command to restore the default setting.

**radius-server authentication attribute *type* unpackage**  
**no radius-server authentication attribute *type* unpackage**  
**default radius-server authentication attribute *type* unpackage**

| <b>Parameter Description</b>  | Parameter                                                                                  | Description                                 |
|-------------------------------|--------------------------------------------------------------------------------------------|---------------------------------------------|
|                               | <i>type</i>                                                                                | RADIUS attribute in the range from 1 to 255 |
| <b>Defaults</b>               | RFC-compliant                                                                              |                                             |
| <b>Command Mode</b>           | Global configuration mode                                                                  |                                             |
| <b>Usage Guide</b>            | Use this command to enable access-request packets to contain a specified RADIUS attribute. |                                             |
| <b>Configuration Examples</b> | The following example disables access-request packets to contain attribute NAS-PORT-ID.    |                                             |
|                               | <pre>Ruijie(config)# radius-server authentication attribute 87 unpackage</pre>             |                                             |
| <b>Platform Description</b>   | N/A                                                                                        |                                             |

## 2.18 radius-server account attribute

Use this command to enable account-request packets to contain a specified RADIUS attribute.  
 Use the **no** or **default** form of this command to restore the default setting.

**radius-server account attribute *type* package**  
**no radius-server account attribute *type* package**  
**default radius-server account attribute *type* package**

Use this command to disable account-request packets to contain a specified RADIUS attribute.  
 Use the **no** or **default** form of this command to restore the default setting.

**radius-server account attribute *type* unpackage**  
**no radius-server account attribute *type* unpackage**  
**default radius-server account attribute *type* unpackage**

| <b>Parameter Description</b> | Parameter   | Description                                 |
|------------------------------|-------------|---------------------------------------------|
|                              | <i>type</i> | RADIUS attribute in the range from 1 to 255 |

|                               |                                                                                                        |
|-------------------------------|--------------------------------------------------------------------------------------------------------|
| <b>Defaults</b>               | RFC-compliant                                                                                          |
| <b>Command Mode</b>           | Global configuration mode                                                                              |
| <b>Usage Guide</b>            | Use this command to enable or disable account-request packets to contain a specified RADIUS attribute. |
| <b>Configuration Examples</b> | The following example disables account-request packets to contain attribute NAS-PORT-ID.               |
| <b>Examples</b>               | <pre>Ruijie(config)# radius-server account attribute 87 unpackage</pre>                                |
| <b>Platform Description</b>   | N/A                                                                                                    |

## 2.19 radius-server authentication vendor

Use this command to enable access-request packets to contain vendor-specific RADIUS attributes.

Use the **no** or **default** form of this command to restore the default setting.

**radius-server authentication vendor [cmcc | microsoft | cisco] package**

**no radius-server authentication vendor *vendor\_name* package**

**default radius-server authentication vendor *vendor\_name* package**

| Parameter Description | Parameter                       | Description |
|-----------------------|---------------------------------|-------------|
|                       | <b>cmcc   microsoft   cisco</b> | Vendor name |

|                               |                                                                                                  |
|-------------------------------|--------------------------------------------------------------------------------------------------|
| <b>Defaults</b>               | Access-request packets do not contain vendor- specific RADIUS attributes by default.             |
| <b>Command Mode</b>           | Global configuration mode                                                                        |
| <b>Usage Guide</b>            | Use this command to enable access-request packets to contain vendor- specific RADIUS attributes. |
| <b>Configuration Examples</b> | The following example enables access-request packets to contain "cmcc".                          |
| <b>Examples</b>               | <pre>Ruijie(config)# radius-server authentication vendor cmcc package</pre>                      |
| <b>Platform Description</b>   | N/A                                                                                              |

## 2.20 radius-server account vendor

Use this command to enable account-request packets to contain vendor-specific RADIUS attributes.

Use the **no** or **default** form of this command to restore the default setting.

```
radius-server account vendor [cmcc | microsoft | cisco ] package
no radius-server account vendor vendor_name package
default radius-server account vendor vendor_name package
```

| Parameter<br>Description | Parameter | Description              |
|--------------------------|-----------|--------------------------|
|                          |           | cmcc   microsoft   cisco |

**Defaults** Account-request packets do not contain vendor- specific RADIUS attributes by default.

**Command Mode** Global configuration mode

**Usage Guide** Use this command to enable account-request packets to contain vendor-specific RADIUS attributes.

**Configuration Examples** The following example enables account-request packets to contain "cmcc".

```
Ruijie(config)# radius-server account vendor cmcc package
```

**Platform Description** N/A

## 2.21 radius set qos cos

Use this command to set the QoS value sent by the RADIUS server as the CoS value of the interface. Use the **no** form of this command to restore the default setting.

```
radius set qos cos
no radius set qos cos
```

| Parameter<br>Description | Parameter | Description |
|--------------------------|-----------|-------------|
|                          |           | N/A         |

**Defaults** Set the QoS value sent by the RADIUS server as the DSCP value.

**Command Mode** Global configuration mode.

**Usage Guide** This command is used to set the QoS value sent by the RADIUS server as the CoS value, and the DSCP value by default.

**Configuration Examples** The following example sets the QoS value sent by the RADIUS server as the CoS value of the interface:

```
Ruijie(config)# radius set qos cos
```

| Related Commands | Command | Description                          |
|------------------|---------|--------------------------------------|
|                  |         | <b>radius vendor-specific extend</b> |

**Platform** N/A

**Description**

## 2.22 radius support cui

Use this command to enable RADIUS to support the cui function.

Use the **no** form of this command to restore the default setting.

**radius support cui**

**no radius support cui**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       |           | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** This command is used to enable RADIUS to support the cui function.

**Configuration Examples** The following example enables RADIUS to support the cui function.

```
Ruijie(config)# radius support cui
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  |         | N/A         |

**Platform** N/A

**Description**

## 2.23 server auth-port acct-port

Use this command to add the server of the AAA server group.

Use the **no** form of this command to restore the default setting.

**server** { *ipv4-addr* | *ipv6-addr* } [ **auth-port** *port1* ] [ **acct-port** *port2* ]

**no server** { *ipv4-addr* | *ipv6-addr* } [ **auth-port** *port1* ] [ **acct-port** *port2* ]

| Parameter Description | Parameter        | Description                |
|-----------------------|------------------|----------------------------|
|                       | <i>ip-addr</i>   | Server IP address          |
|                       | <i>ipv6-addr</i> | Server IPv6 address        |
|                       | <i>port1</i>     | Server authentication port |
|                       | <i>port2</i>     | Server accounting port     |

**Defaults** No server is configured by default.

**Command Mode** Server group configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example adds server 192.168.4.12 to server group ss and sets the accounting port and authentication port to 5 and 6 respectively.

```
Ruijie(config)# aaa group server radius ss
Ruijie(config-gs-radius)# server 192.168.4.12 acct-port 5 auth-port 6
Ruijie(config-gs-radius)# end
Ruijie# show aaa group
Type      Reference Name
-----
radius    1          radius
tacacs+   1          tacacs+
radius    1          ss
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 2.24 show radius acct statistics

Use this command to display RADIUS accounting statistics.

**show radius acct statistics**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Global configuration mode/Privileged EXEC mode/Interface configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example displays RADIUS accounting statistics.

```
Ruijie#show radius acct statistics
Accounting Servers:

Server Index..... 1
Server Address..... 192.168.1.1
Server Port..... 1813
Msg Round Trip Time..... 0 (msec)
First Requests..... 1
Retry Requests..... 1
Accounting Responses..... 0
Malformed Msgs..... 0
Bad Authenticator Msgs..... 0
Pending Requests.....
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A

## 2.25 show radius auth statistics

Use this command to display RADIUS authentication statistics.

**show radius auth statistics**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** N/A

**Command Mode** Global configuration mode/Privileged EXEC mode/Interface configuration mode

**Usage Guide** N/A

**Configuration** The following example displays RADIUS authentication statistics.

```

Examples Ruijie#show radius auth statistics
Authentication Servers:

Server Index..... 1
Server Address..... 192.168.1.1
Server Port..... 1812
Msg Round Trip Time..... 0 (msec)
First Requests..... 0
Retry Requests..... 0
Accept Responses..... 0
Reject Responses..... 0
Challenge Responses..... 0
Malformed Msgs..... 0
Bad Authenticator Msgs..... 0
Pending Requests..... 0
Timeout Requests..... 0
Unknowntype Msgs..... 0
Other Drops..... 0
    
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  |         | N/A         |

**Platform** N/A

**Description**

## 2.26 show radius group

Use this command to display RADIUS server group configuration.

**show radius group**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       |           | N/A         |

**Defaults** N/A

**Command Mode** Global configuration mode/Privileged EXEC mode/Interface configuration mode

**Usage Guide** N/A

**Configuration** The following example displays RADIUS server group configuration.

**Examples**

```
Ruijie#show radius group
=====Radius group radius=====
Vrf:not-set
Server:192.168.1.1
  Server key:ruijie
  Authentication port:1812
  Accounting port:1813
  State:Active
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform**

N/A

**Description**

## 2.27 show radius parameter

Use this command to display global RADIUS server parameters.

**show radius parameter****Parameter  
Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults**

N/A

**Command  
Mode**

Global configuration mode/Privileged EXEC mode/Interface configuration mode

**Usage Guide**

N/A

**Configuration** The following example displays global RADIUS server parameters.

**Examples**

```
Ruijie# show radius parameter
Server Timeout: 5 Seconds
Server Deadtime: 0 Minutes
Server Retries: 3
Server Dead Criteria:
Time: 10 Seconds
Tries: 10
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |



**Platform** N/A  
**Description**

## 2.28 show radius server

Use this command to display the configuration of the RADIUS server.

**show radius server**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Global configuration mode/Privileged EXEC mode/Interface configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example displays the configuration of the RADIUS server.

```
Ruijie# show radius server
Server IP: 192.168.4.12
Accounting Port: 23
Authen Port: 77
Test Username: viven
Test Idle Time: 10 Minutes
Test Ports: Authen
Server State: Active
    Current duration 765s, previous duration 0s
Dead: total time 0s, count 0
Statistics:
Authen: request 15, timeouts 1
Author: request 0, timeouts 0
Account: request 0, timeouts 0

Server IP: 192.168.4.13
Accounting Port: 45
Authen Port: 74
Test Username: <Not Configured>
Test Idle Time: 60 Minutes
Test Ports: Authen and Accounting
Server State: Active
Current duration 765s, previous duration 0s
```

```
Dead: total time 0s, count 0
Statistics:
Authen: request 0, timeouts 0
Author: request 0, timeouts 0
Account: request 20, timeouts 0
```

**Related  
Commands**

| Command                         | Description                                          |
|---------------------------------|------------------------------------------------------|
| <b>radius-server host</b>       | Defines the RADIUS security server.                  |
| <b>radius-server retransmit</b> | Defines the number of RADIUS packet retransmissions. |
| <b>radius-server key</b>        | Defines a shared password for the RADIUS server.     |
| <b>radius-server timeout</b>    | Defines the packet transmission timeout.             |

**Platform** N/A**Description**

## 2.29 show radius vendor-specific

Use this command to display the configuration of the private vendors.

**show radius vendor-specific**

**Parameter  
Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** N/A**Command** Privileged EXEC mode**Mode****Usage Guide** N/A**Configuration** The following example displays the configuration of the private vendors.**Examples**

```
Ruijie#show radius vendor-specific
id  vendor-specific  type-value
-----
1   max-down-rate    1
2   port-priority    2
3   user-ip          3
4   vlan-id          4
5   last-supPLICANT-vers 5
ion
```

```

6 net-ip 6
7 user-name 7
8 password 8
9 file-directory 9
10 file-count 10
11 file-name-0 11
12 file-name-1 12
13 file-name-2 13
14 file-name-3 14
15 file-name-4 15
16 max-up-rate 16
17 current-supPLICANT-version 17
18 flux-max-high32 18
19 flux-max-low32 19
20 proxy-avoid 20
21 dialup-avoid 21
22 ip-privilege 22
23 login-privilege 42
26 ipv6-multicast-addr 79
ss
27 ipv4-multicast-addr 87
ss
    
```

**Related Commands**

| Command                         | Description                                          |
|---------------------------------|------------------------------------------------------|
| <b>radius-server host</b>       | Defines the RADIUS security server.                  |
| <b>radius-server retransmit</b> | Defines the number of RADIUS packet retransmissions. |
| <b>radius-server key</b>        | Defines a shared password for the RADIUS server.     |
| <b>radius-server timeout</b>    | Defines the packet transmission timeout.             |

**Platform** N/A

**Description**

## 2.30 show radius attribute

Use this command to display standard Radius attributes.

**show radius attribute**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Command** Global configuration mode/Privileged EXEC mode/Interface configuration mode  
**Mode**

**Usage Guide** N/A

**Configuration** The following example displays standard RADIUS attributes.

**Examples**

```
Ruijie#sh radius attribute
type          implicate
-----
1.....User-Name
2.....User-Password
3.....Chap-Password
4.....NAS-Ip-Addr
5.....Nas-Ip-Port
6.....Service-Type
7.....Framed-Protocol
8.....Frame-Ip-Address
9.....Framed-Ip-Mask
10.....Framed-Routing
11.....Filter-Id
12.....Framed-Mtu
13.....Framed-Compress
14.....Login-Ip-Host
15.....Login-Service
16.....Login-Tcp-Port
18.....Reply-Message
19.....Callback-Num
20.....Callback-Id
22.....Framed-Route
23.....Framed-IPX-Network
24.....State
25.....Class
26.....Vendor-Specific
27.....Session-Timeout
28.....Idle-Timeout
29.....Termination-Action
30.....Called-Station-Id
31.....Calling-Station-Id
32.....Nas-Id
33.....Proxy-State
34.....Login-LAT-Service
35.....Login-LAT-Node
36.....Login-LAT-Group
37.....Framed-AppleTalk-Link
```

```
38.....Framed-AppleTalk-Net
39.....Framed-AppleTalk-Zone
40.....Acct-Status-Type
41.....Acct-Delay-Time
42.....Acct-Input-Octets
43.....Acct-Output-Octets
44.....Acct-Session-Id
45.....Acct-Authentic
46.....Acct-Session-Time
47.....Acct-Input-Packet
48.....Acct-Output-Packet
49.....Acct-Terminate-Cause
50.....Acct-Multi-Session-ID
51.....Acct-Link-Count
52.....Acct-Input-Gigawords
53.....Acct-Output-Gigawords
60.....Chap-Challenge
61.....Nas-Port-Type
62.....Port-Limit
63.....Login-Lat-Port
64.....Tunnel-Type
65.....Tunnel-Medium-Type
66.....Tunnel-Client-EndPoint
67.....Tunnel-Service-EndPoint
79.....eap msg
80.....Message-Authenticator
81.....group id
85.....Acct-Interim-Interval
87.....Nas-Port-Id
89.....cui
95.....Nas-Ipv6-Addr
96.....Framed-Interface-Id
97.....Framed-Ipv6-Prefix
98.....Login-Ipv6-Host
99.....Framed-Ipv6-Route
100.....Framed-Ipv6-Pool
168.....Framed-Ipv6-Addr
```

**Platform**  
**Description**

N/A

## 3 TACACS+ Commands

### 3.1 aaa group server tacacs+

Use this command to configure different groups of TACACS+ server hosts.

Use the **no** form of this command to remove a specified TACACS server group.

**aaa group server tacacs+ group\_name**

**no aaa group server tacacs+ group\_name**

| Parameter   | Parameter         | Description                                                                                                             |
|-------------|-------------------|-------------------------------------------------------------------------------------------------------------------------|
| Description | <i>group_name</i> | TACACS+ server group name, which cannot be <b>radius</b> or <b>tacacs+</b> . The two names are the built-in group name. |

**Defaults** No TACACS+ server group is configured.

**Command** Global configuration mode

**Mode**

**Usage Guide** After you group different TACACS+ servers, the tasks of authentication, authorization and accounting can be implemented by different server groups.

**Configuration Examples** The following example configures a TACACS+ server group named tac1, and configures a TACACS+ server with IP address 1.1.1.1 in this group:

```
Ruijie(config)#aaa group server tacacs+ tac1
Ruijie(config-gs-tacacs)# server 1.1.1.1
```

| Related Commands | Command                  | Description                                            |
|------------------|--------------------------|--------------------------------------------------------|
|                  | <b>server</b>            | Configures server list of TACACS+ server group.        |
|                  | <b>ip vrf forwarding</b> | Configures VRF name supported by TACACS+ server group. |

**Platform** N/A

**Description**

### 3.2 ip tacacs source-interface

Use this command to use the IP address of a specified interface for all outgoing TACACS+ packets.

Use the **no** form of this command to disable use of the specified interface IP address.

**ip tacacs source-interface** *interface-name*

**no ip tacacs source-interface** *interface-name*

| Parameter   | Parameter             | Description                                |
|-------------|-----------------------|--------------------------------------------|
| Description | <i>interface-name</i> | Interface for the outgoing TACACS+ packets |

**Defaults** The source IP address of TACACS+ packets is set on the network layer.

**Command Mode** Global configuration mode

**Usage Guide** To decrease the work of maintaining massive NAS messages in TACACS+ server, use this command to use the IP address of a specified interface for all outgoing TACACS+ packets. This command specifies the primary IP address of the specified interface as the source address of TACACS+ packets on Layer 3 devices. If the specified interface is in a VRF instance, the route of this VRF instance is used for packet transmission.

**Configuration Examples** The following example specifies the IP address of GigabitEthernet 0/0 for the outgoing TACACS+ packets.

```
Ruijie(config)# ip tacacs source-interface gigabitEthernet 0/0
```

| Related Commands | Command                   | Description                                |
|------------------|---------------------------|--------------------------------------------|
|                  | <b>tacacs-server host</b> | Defines a TACACS+ server.                  |
|                  | <b>ip address</b>         | Configures the IP address of an interface. |

**Platform Description** N/A

### 3.3 ip oob

Use this command to specify the MGMT port used in the TACACS+ server group.

Use the **no** form of this command to restore the default setting.

**ip oob** [ *via mgmt\_name* ]

**no ip oob**

| Parameter   | Parameter        | Description    |
|-------------|------------------|----------------|
| Description | <i>mgmt_name</i> | MGMT port name |

**Defaults** N/A

|                      |                                                                                                                                         |
|----------------------|-----------------------------------------------------------------------------------------------------------------------------------------|
| <b>Command</b>       | TACACS+ server group configuration mode                                                                                                 |
| <b>Mode</b>          |                                                                                                                                         |
| <b>Usage Guide</b>   | Use the <b>aaa group server tacacs+</b> command to enter TACACS+ server group configuration mode. No MGMT port is specified by default. |
| <b>Configuration</b> | N/A                                                                                                                                     |
| <b>Examples</b>      |                                                                                                                                         |
| <b>Platform</b>      | N/A                                                                                                                                     |
| <b>Description</b>   |                                                                                                                                         |

### 3.4 ip vrf forwarding

Use this command to configure the VRF used in the TACACS+ server group.

Use the **no** form of this command to remove the VRF configuration from the TACACS+ server group.

**ip vrf forwarding** *vrf-name*

**no ip vrf forwarding**

| <b>Parameter</b><br><b>Description</b> | Parameter       | Description |
|----------------------------------------|-----------------|-------------|
|                                        | <i>vrf-name</i> | VRF name    |

**Defaults** N/A

**Command** TACACS+ server group configuration mode  
**Mode**

**Usage Guide** Before you configure this command, you need to use the **aaa group server tacacs+** command to enter TACACS+ server group configuration mode. The VRF instance must exist and be configured with a correct VRF name through the **vrf definition** command.

**Configuration** The following example specifies the VRF instance named vpn1 for the TACACS+ server group:

**Examples**

```
Ruijie(config)# aaa group server tacacs+ tac1
Ruijie(config-gs-tacacs)# server 1.1.1.1
Ruijie(config-gs-tacacs)# ip vrf forwarding vpn1
```

| <b>Related</b><br><b>Commands</b> | Command                         | Description                                       |
|-----------------------------------|---------------------------------|---------------------------------------------------|
|                                   | <b>aaa group server tacacs+</b> | Configures the TACACS+ server group.              |
|                                   | <b>server</b>                   | Configures a server list of TACACS+ server group. |



**Platform** N/A  
**Description**

### 3.5 server

Use this command to configure the IP address of the TACACS+ server for the group server.  
 Use the **no** form of this command to remove the TACACS+ server.

**server** { *ipv4-address* | *ipv6-address* }

**no server** { *ipv4-address* | *ipv6-address* }

| Parameter Description | Parameter           | Description                        |
|-----------------------|---------------------|------------------------------------|
|                       | <i>ipv4-address</i> | IPv4 address of the TACACS+ server |
|                       | <i>ipv6-address</i> | IPv6 address of the TACACS+ server |

**Defaults** No TACACS+ server is configured by default.

**Command Mode** TACACS+ server group configuration mode

**Usage Guide** You must configure the **aaa group server tacacs+** command before configuring this command.  
 To configure server address in TACACS+ group server, you must use the **tacacs-server host** command in global configuration mode.  
 If there is no response from the first host entry, the next host entry is tried.

**Configuration Examples** The following example configures a TACACS+ server group named tac1 and a TACACS+ server address 1.1.1.1 in this group.

```
Ruijie(config)#aaa group server tacacs+ tac1
Ruijie(config-gs-tacacs)# server 1.1.1.1
```

| Related Commands | Command                         | Description                        |
|------------------|---------------------------------|------------------------------------|
|                  | <b>aaa group server tacacs+</b> | Configures a TACACS+ server group. |

**Platform** N/A  
**Description**

### 3.6 show tacacs

Use this command to display the TACACS+ server configuration.

**show tacacs**

| Parameter<br>Description | Parameter | Description |
|--------------------------|-----------|-------------|
|                          |           | N/A         |

**Command Mode** Privileged EXEC mode/Global configuration/Interface configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example displays the TACACS+ server configuration.

```
Ruijie# show tacacs
Tacacs+ Server : 172.19.192.80/49
Socket Opens: 0
Socket Closes: 0
Total Packets Sent: 0
Total Packets Recv: 0
Reference Count: 0
```

| Related<br>Commands | Command | Description               |
|---------------------|---------|---------------------------|
|                     |         | <b>tacacs-server host</b> |

**Platform Description** N/A

### 3.7 tacacs-server host

Use this command to configure a TACACS+ host.

Use the **no** form of this command to remove the TACACS+ host.

**tacacs-server host** [ **oob** [ **via** *mgmt-name* ] ] { *ip-v4-address* | *ip-v6-address* } [ **port** *integer* ] [ **timeout** *integer* ] [ **key** [ **0** | **7** ] *text-string* ]

**no tacacs-server host** { *ip-address* | *ip-v6-address* }

| Parameter<br>Description | Parameter                                  | Description                                                                  |
|--------------------------|--------------------------------------------|------------------------------------------------------------------------------|
|                          |                                            | <i>ip-address</i>                                                            |
|                          | <i>ip-v6-address</i>                       | IPv6 address of the TACACS+ host                                             |
|                          | <b>oob</b> [ <b>via</b> <i>mgmt-name</i> ] | Specifies an MGMT port as the source port for TACACS+ communication.         |
|                          | <b>port</b> <i>integer</i>                 | Port number of the server. The range is from 1 to 65,535. The default is 49. |

|                               |                                                                                                                                                                |
|-------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>timeout</b> <i>integer</i> | Timeout time of TACACS+ host. The range is from 1 to 1,000.                                                                                                    |
| <b>key</b> <i>string</i>      | Configures an authentication and encryption key. The value can be 0 or 7.<br>0 indicates no encryption, while 7 indicates simple encryption. The default is 0. |

**Defaults** No TACACS+ host is specified by default.

**Command** Global configuration mode

**Mode**

**Usage Guide** The TACACS+ host must be configured to implement AAA security service. You can use this command to configure one or multiple TACACS+ hosts.

**Configuration** The following example configures a TACACS+ host.

**Examples** Ruijie(config)# tacacs-server host 192.168.12.1

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

### 3.8 tacacs-server key

Use this command to configure the authentication encryption key used for TACACS+ communications between the access server and the TACACS+ server.

Use the **no** form of this command to remove the authentication encryption key.

**tacacs-server key** [ 0 | 7 ] *string*

**no tacacs-server key**

**Parameter  
Description**

| Parameter     | Description                                                                        |
|---------------|------------------------------------------------------------------------------------|
| <i>string</i> | Key string                                                                         |
| 0   7         | Encryption type of key<br>0 indicates no encryption; 7 indicate simple encryption. |

**Defaults** No authentication encryption key is configured by default.

**Command** Global configuration mode

**Mode**

**Usage Guide** Use command to configure a global authentication and encryption key for TACACS+ communication. Use the **key** parameter in the **tacacs-server host** command to configure a server-based key.

**Configuration** The following example defines the authentication encryption key of TACACS+ server as aaa:

**Examples**

```
Ruijie(config)# tacacs-server key aaa
```

**Related Commands**

| Command                   | Description             |
|---------------------------|-------------------------|
| <b>tacacs-server host</b> | Defines a TACACS+ host. |

**Platform Description** N/A

### 3.9 tacacs-server timeout

Use this command to set the interval for which the server waits for a server host to reply. Use the **no** form of this command to restore the default timeout interval.

**tacacs-server timeout seconds**

**no tacacs-server timeout**

**Parameter Description**

| Parameter      | Description                                                          |
|----------------|----------------------------------------------------------------------|
| <i>seconds</i> | Timeout interval in the range from 1 to 1,000 in the unit of seconds |

**Defaults** The default is 5 seconds.

**Command Mode** Global configuration mode

**Usage Guide** Use command to configure a global timeout interval. Use the **timeout** parameter in the **tacacs-server host** command to configure a server-based interval.

**Configuration** The following example configures the timeout interval to 10 seconds.

**Examples**

```
Ruijie(config)# tacacs-server timeout 10
```

**Related Commands**

| Command                   | Description                           |
|---------------------------|---------------------------------------|
| <b>tacacs-server host</b> | Defines a TACACS+ secure server host. |

**Platform Description** N/A

## 4 802.1X Commands

### 4.1 aaa authorization ip-auth-mode

Use this command to set the IP authorization mode.

**aaa authorization ip-auth-mode { disable | supplicant | radius-server | dhcp-server | mixed }**

| Parameter   | Parameter            | Description                               |
|-------------|----------------------|-------------------------------------------|
| Description | <b>disable</b>       | Disables IP authorization mode.           |
|             | <b>supplicant</b>    | Enables supplicant authorization mode.    |
|             | <b>radius-server</b> | Enables Radius server authorization mode. |
|             | <b>dhcp-server</b>   | Enables DHCP server authorization mode.   |
|             | <b>mixed</b>         | Enables mixed authorization mode.         |

**Defaults** IP authorization mode is disabled by default.

**Command mode** Global configuration mode

**Usage Guide** Supplicant authorization mode supports only Ruijie supplicant.  
 Radius-server authorization mode requires the server to allocate IP addresses by framed-ip.  
 DHCP-server authorization mode requires the server to enable DHCP snooping or DHCP relay.  
 Mixed authorization mode supports multiple authorization methods.

**Configuration** The following example enables supplicant authentication mode.

**Examples**

```
Ruijie(config)# aaa authorization ip-auth-mode supplicant
```

| Related Commands | Command                    | Description                          |
|------------------|----------------------------|--------------------------------------|
|                  | <b>show running-config</b> | Displays the IP authentication mode. |

**Platform** N/A  
**Description**

### 4.2 clear dot1x user all

Use this command to clear all the 802.1X authentication users.

**clear dot1x user all**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** Use this command to clear all the 802.1X authentication users.

**Configuration** The following example clears all the 802.1X authentication users.

**Examples** Ruijie#clear dot1x user all

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

### 4.3 clear dot1x user mac

Use this command to clear 802.1X authentication users according to MAC addresses.

**clear dot1x user mac** *mac-addr*

| Parameter Description | Parameter       | Description |
|-----------------------|-----------------|-------------|
|                       | <i>mac-addr</i> | MAC address |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** Use this command to clear 802.1X authentication users according to MAC addresses.

**Configuration** The following example clears an 802.1X authentication user whose MAC address is 0012.3456.789A.

**Examples** Ruijie#clear dot1x user mac 0012.3456.789A

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

### 4.4 clear dot1x user name

Use this command to clear the 802.1 X authentication users according to the username.

**clear dot1x user name** *name-str*

| Parameter   | Parameter       | Description                                    |
|-------------|-----------------|------------------------------------------------|
| Description | <i>name-str</i> | The username of the 802.1X authentication user |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** Use this command to clear the 802.1 X authentication users according to the username.

**Configuration** The following example clears the 802.1X authentication user named 802.1X-user.

**Examples** Ruijie#clear dot1x user name dot1x-user

| Related  | Command | Description |
|----------|---------|-------------|
| Commands | N/A     | N/A         |

**Platform** N/A

**Description**

## 4.5 clear dot1x user ip

Use this command to clear 802.1X authentication users according to IP addresses.

**clear dot1x user ip** *ip-addr*

| Parameter   | Parameter      | Description |
|-------------|----------------|-------------|
| Description | <i>ip-addr</i> | IP address  |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** Use this command to clear 802.1X authentication users according to IP addresses.

**Configuration** The following example clears an 802.1X authentication user whose IP address is 11.1.1.1.

**Examples** Ruijie#clear dot1x user ip 11.1.1.1

**Platform** N/A

**Description**

## 4.6 dot1x accounting

Use this command to configure the accounting list.

**dot1x accounting** *list-name*

| Parameter   | Parameter        | Description                     |
|-------------|------------------|---------------------------------|
| Description | <i>list-name</i> | The name of the accounting list |

**Defaults** N/A

**Command Mode** Global configuration mode/WLAN security configuration mode

**Usage Guide** If AAA does not adopt 802.1X accounting as the default accounting method. Use this command to configure the 802.1X accounting method.  
Configuration in WLAN security configuration mode is prior to that in global configuration mode.

**Configuration Examples** The following example configures the accounting list.

```
Ruijie(config)# dot1x accounting dot1x-acct
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 4.7 dot1x acct-update base-on first-time server

Use this command to assign the accounting update interval for the first authentication.

Use the **no** form of this command to restore the default settings.

**dot1x acct-update base-on first-time server**

**no dot1x acct-update base-on first-time server**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** The assignment is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** Some portal servers do not support the assignment of accounting update interval during re-authentication.



Use this command if such servers demand users to issue accounting update packets according to the interval in the first authentication.

**Configuration** The following example assigns the accounting update interval for the first authentication.

**Examples**

```
Ruijie(config)# dot1x acct-update base-on first-time server
```

**Platform** N/A  
**Description**

## 4.8 dot1x auth-fail max-attempt

Use this command to set the maximum auth-attempts.

Use the **no** form of this command to restore the default setting.

**dot1x auth-fail max-attempt** *value*

**no dot1x auth-fail max-attempt**

| Parameter          | Parameter    | Description               |
|--------------------|--------------|---------------------------|
| <b>Description</b> | <i>value</i> | The maximum auth-attempts |

**Defaults** The default is 3.

**Command Mode** Global configuration mode

**Usage Guide** Use the **show dot1x** command to adjust the maximum authentication attempts for those failed users.

**Configuration** The following example sets the maximum auth-attempts to 2.

**Examples**

```
Ruijie(config)# dot1x auth-fail max-attempt 2
```

| Related Commands | Command           | Description                        |
|------------------|-------------------|------------------------------------|
|                  | <b>show dot1x</b> | Displays the 802.1x configuration. |

**Platform** N/A  
**Description**

## 4.9 dot1x auth-mode

Use this command to specify the 802.1X authentication mode.

**dot1x auth-mode** { **eap** | **chap** | **pap** }

| Parameter          | Parameter   | Description                          |
|--------------------|-------------|--------------------------------------|
| <b>Description</b> | <b>eap</b>  | Enables EAP-MD5 authentication mode. |
|                    | <b>chap</b> | Enables CHAP authentication mode.    |

|            |                                  |
|------------|----------------------------------|
| <b>pap</b> | Enables PAP authentication mode. |
|------------|----------------------------------|

**Defaults** The default is EAP-MD5 authentication mode.

**Command Mode** Global configuration mode

**Usage Guide** The selection of authentication mode depends on the suppliant and portal server.

**Configuration** The following example enables CHAP authentication mode.

**Examples** Ruijie(config)# dot1x auth-mode chap

| Related Commands | Command           | Description                      |
|------------------|-------------------|----------------------------------|
|                  | <b>show dot1x</b> | Displays the 802.1X information. |

**Platform Description** N/A

## 4.10 dot1x auth-address-table address

Use this command to configure the authentication address table.

**dot1x auth-address-table address** *mac-addr* **interface** *interface*

| Parameter Description | Parameter        | Description                                |
|-----------------------|------------------|--------------------------------------------|
|                       | <i>mac-addr</i>  | The MAC address of the authentication host |
|                       | <i>interface</i> | The interface of the authentication host   |

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** Only the specified interface with the specified MAC address is able to pass the 802.1x authentication.

**Configuration** The following example configures the authentication address table.

**Examples** Ruijie(config)# dot1x auth-address-table 00d0.f800.0cb2 interface fastethernet 0/1

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 4.11 dot1x authentication

Use this command to configure the authentication method list.

**dot1x authentication** *list-name*

|           | Parameter        | Description                |
|-----------|------------------|----------------------------|
| Parameter | <i>list-name</i> | Authentication method list |

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** If AAA does not adopt the default 802.1X authentication, use this command to configure the 802.1X authentication method.

**Configuration** The following example configures the authentication method list

**Examples** Ruijie(config)# dot1x authentication dot1x-authen

|                  | Command | Description |
|------------------|---------|-------------|
| Related Commands | N/A     | N/A         |

**Platform** N/A

**Description**

## 4.12 dot1x auto-req

Use this command to configure auto-request 802.1X authentication.

Use the **no** form of this command to restore the default setting.

**dot1x auto-req**

**no dot1x auto-req**

|           | Parameter | Description |
|-----------|-----------|-------------|
| Parameter | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** Enable this function for MAB. If the authentication agent is already in the terminal system, enable it by clicking.

**Configuration** The following example enables auto-request 802.1X authentication.

**Examples**

```
Ruijie(config)# dot1x auto-req
```

| Related Commands | Command                          | Description                                                |
|------------------|----------------------------------|------------------------------------------------------------|
|                  | <code>show dot1x auto-req</code> | Displays the automatic authentication request information. |

**Platform** N/A

**Description**

## 4.13 dot1x auto-req packet-num

Use this command to set the number of auto-request authentication packets.

**dot1x auto-req packet-num** *num*

| Parameter          | Parameter  | Description                                                                        |
|--------------------|------------|------------------------------------------------------------------------------------|
| <b>Description</b> | <i>num</i> | The number of auto-request authentication packets in the range from 0 to 1,000,000 |

**Defaults** The default is 0.

**Command** N/A

**Mode**

**Usage Guide** N/A

**Configuration** The following example sets the number of auto-request authentication packets to 100.

**Examples**

```
Ruijie(config)# dot1x auto-req packet-num 100
```

| Related Commands | Command                          | Description                                      |
|------------------|----------------------------------|--------------------------------------------------|
|                  | <code>show dot1x auto-req</code> | Displays the authentication request information. |

**Platform** N/A

**Description**

## 4.14 dot1x auto-req req-interval

Use this command to set the auto-request authentication interval.

**dot1x auto-req req-interval** *time*

| Parameter          | Parameter   | Description                                                                                    |
|--------------------|-------------|------------------------------------------------------------------------------------------------|
| <b>Description</b> | <i>time</i> | The auto-request authentication interval, in the range from 10 to 3,600 in the unit of seconds |

**Defaults** The default is 30 seconds.

**Command** Global configuration mode  
**Mode**

**Usage Guide** N/A

**Configuration** The following example sets the auto-request authentication interval to 50 seconds.

**Examples**

```
Ruijie(config)# dot1x auto-req req-interval 50
```

| Related         | Command                          | Description                                      |
|-----------------|----------------------------------|--------------------------------------------------|
| <b>Commands</b> | <code>show dot1x auto-req</code> | Displays the authentication request information. |

**Platform** N/A  
**Description**

## 4.15 dot1x auto-req user-detect

Use this command to enable online user detection for auto-request authentication.

Use the **no** form of this command to disable this function.

**dot1x auto-req user-detect**

**no dot1x auto-req user-detect**

| Parameter          | Parameter | Description |
|--------------------|-----------|-------------|
| <b>Description</b> | N/A       | N/A         |

**Defaults** This function is enabled by default.

**Command** Global configuration mode  
**Mode**

**Usage Guide** N/A

**Configuration** The following example enables online user detection for auto-request authentication.

**Examples**

```
Ruijie(config)# dot1x auto-req user-detect
```

| Related         | Command                          | Description                                      |
|-----------------|----------------------------------|--------------------------------------------------|
| <b>Commands</b> | <code>show dot1x auto-req</code> | Displays the authentication request information. |

**Platform** N/A  
**Description**

## 4.16 dot1x client-probe enable

Use this command to enable online user probe function.

Use the **no** form of this command to restore the default setting.

**dot1x client-probe enable**

**no dot1x client-probe enable**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** Use this command to enable online user probe function.

**Configuration Examples** The following example enables online user probe function.

```
Ruijie(config)# dot1x client-probe enable
```

| Related Commands | Command           | Description                    |
|------------------|-------------------|--------------------------------|
|                  | <b>show dot1x</b> | Displays 802.1X configuration. |

**Platform Description** N/A

## 4.17 dot1x critical

Use this command to enable the server IAB (Inaccessible Authentication Bypass) on the port.

Use the **no** form of this command to restore the default setting.

**dot1x critical**

**no dot1x critical**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** This functions is disabled by default.

**Command Mode** Interface configuration mode/VXLAN mode

**Usage Guide** With the IAB function enabled on the port, if there is only RADIUS authentication method in the 802.1X authentication method list and all RADIUS servers in this method list take no effect, the

switch will set the network accessing authority for users by the IAB method, and send the EAPOL-SUCCESS packets to the users.

Except for the RADIUS authentication method, if there are other authentication methods in the 802.1X authentication method list, the IAB function will take no effect. (Such as the **aaa authentication dot1x default group radius none**, there exists none authentication method after the RADIUS authentication method.

For the users of IAB authorized, as the user identity legality cannot be checked, no matter whether the accounting function is configured, they will not send the accounting request.

With the AAA multi-domain authentication enabled globally, the 802.1X user authentication will not use the globally configured method list. After all RADIUS servers in the 802.1X globally configured method list are checked to be invalid, the IAB will directly send the successful authentication to the user with no need to enter the username, the AAA multi-domain authentication on this port is useless.

**Configuration Examples** The following example enables the server IAB (Inaccessible Authentication Bypass) function on the port.

```
Ruijie(config-if-GigabitEthernet 0/5)#dot1x critical
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 4.18 dot1x critical recovery action reinitialize

Use this command to allow IAB users under the port to reinitialize authentication when the server has recovered.

Use the **no** form of this command to restore the default setting.

**dot1x critical recovery action reinitialize**

**no dot1x critical recovery action reinitialize**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode/VXLAN mode

**Usage Guide** After the port entering the inaccessible authentication bypass status, if the RADIUS server returns to normal, you need to reinitialize the authentication for all users that have accomplished the network access authorization through the inaccessible authentication bypass on ports in order to ensure the user legality.

**Configuration** The following example allows IAB users under the port to reinitialize authentication when the server has recovered.

**Examples**

```
Ruijie(config-if-GigabitEthernet 0/5)#dot1x critical recovery action
reinitialize
```

| Related  | Command | Description |
|----------|---------|-------------|
| Commands | N/A     | N/A         |

**Platform** N/A

**Description**

## 4.19 dot1x critical vlan

Use this command to configure the port in IAB status to jump to a specified auth-fail VLAN.

Use the **no** form of this command to disable this function.

**dot1x critical vlan**

**no dot1x critical vlan**

| Parameter   | Parameter      | Description                       |
|-------------|----------------|-----------------------------------|
| Description | <i>vlan-id</i> | The VLAN where the port will jump |

**Defaults** This function is disabled by default.

**Command** Interface configuration mode/VXLAN mode

**Mode**

**Usage Guide** With this function enabled, if no user authentication is performed on the ports initially, after all RADIUS servers are invalidated, the user will initiate the authentication and the port will enter the IAB status and to be added to the VLAN configured. If this function is disabled, the VLAN of the port is not changed when the port is in the IAB status.

**Configuration** The following example configures the port in IAB status to jump to a specified auth-fail VLAN.

**Examples**

```
Ruijie(config-if-GigabitEthernet 0/5)#dot1x critical vlan 10
```

| Related  | Command | Description |
|----------|---------|-------------|
| Commands | N/A     | N/A         |

**Platform** N/A

**Description**



## 4.20 dot1x dbg-filter

Use this command to enable debug information print for a user with a specified MAC address.

Use the **no** form of this command to clear the debug information.

**dot1x dbg-filter** *H.H.H*

**no dot1x dbg-filter** *H.H.H*

| Parameter   | Parameter    | Description               |
|-------------|--------------|---------------------------|
| Description | <i>H.H.H</i> | The MAC address of a user |

**Defaults** Debug information of all authentication users is printed by default.

**Command mode** Global configuration mode

**Usage Guide** Use this command to print the debug information of a specific user. If you want to locate the fault on the network where there are multiple users.

**Configuration Examples** The following example prints the debug information of the device with the specified MAC address.

```
Ruijie(config)# dot1x dbg-filter 00d0.f800.0001
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 4.21 dot1x default-user-limit

Use this command to set the maximum auth-user number on controlled interfaces.

Use the **no** form of this command to restore the default setting.

**dot1x default-user-limit** *num*

**no dot1x default-user-limit**

| Parameter   | Parameter  | Description                                                                                      |
|-------------|------------|--------------------------------------------------------------------------------------------------|
| Description | <i>num</i> | The maximum auth-user number allowed by a controlled interface, in the range from 1 to 1,000,000 |

**Defaults** The default is 1,000,000.

**Command mode** Interface configuration mode/ VXLAN mode

**Usage Guide** This command is used to limit the number of users to be authenticated on a specific port.

**Configuration** The following example sets the maximum auth-user number on a controlled interface.

**Examples**

```
Ruijie(config-if)# dot1x default-user-limit 10
```

| Related Commands | Command                                                    | Description                                                          |
|------------------|------------------------------------------------------------|----------------------------------------------------------------------|
|                  | <b>show dot1x port-control interface fastEthernet 0/10</b> | Displays the number of users allowed by a specific 802.1X interface. |
|                  | <b>show dot1x port-control interface fastEthernet 0/10</b> | Displays the number of users allowed by a specific 802.1X interface. |

**Platform** N/A

**Description**

## 4.22 dot1x default

Use this command to restore 802.1X configuration to the default setting.

**dot1x default**

| Parameter          | Parameter | Description |
|--------------------|-----------|-------------|
| <b>Description</b> | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** This command is used to restore 802.1X configuration for quick re-configuration.

**Configuration** The following example restores 802.1X configuration to the default setting.

**Examples**

```
Ruijie(config)# dot1x default
```

| Related Commands | Command           | Description                      |
|------------------|-------------------|----------------------------------|
|                  | <b>show dot1x</b> | Displays the 802.1X information. |

**Platform** N/A

**Description**

## 4.23 dot1x get-static-ip enable

Use this command to obtain static IP addresses.

**dot1x get-static-ip enable**

Use this command to restore the default setting.

**no dot1x get-static-ip enable****Parameter  
Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults**

This function is disabled by default.

**Command  
Mode**

Global configuration mode

**Usage Guide**

Enable this function when wireless terminals use static IP addresses and need to upload the static IP addresses to the server.

Note that the IP addresses are uploaded to the server via accounting packets. In addition, when static IP addresses are used, terminal identification information is not provided.

**Configuration**

The following example obtains static IP addresses.

**Examples**

```
Ruijie(config)# dot1x get-static-ip enable
```

**Platform****Description**

This command is supported only on wireless products.

## 4.24 dot1x mab-username upper

Use this command to enable uppercase letters in MAB user names.

**dot1x mab-username upper****Parameter  
Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults**

This function is disabled by default.

**Command  
Mode**

Global configuration mode.

**Usage Guide**

By default, lowercase letters are used in the user name of MAB. After this function is enabled, uppercase letters are used in new user names of MAB to meet server requirements.

**Configuration**

The following example enables uppercase letters in MAB user names.

**Examples**

```
Ruijie(config)# dot1x mab-username upper
```

**Related**

| Command | Description |
|---------|-------------|
|---------|-------------|

|                 |     |     |
|-----------------|-----|-----|
| <b>Commands</b> | N/A | N/A |
|-----------------|-----|-----|

**Platform** N/A

**Description**

## 4.25 dot1x mac-auth-bypass

Use this command to configure single MAB authentication.

Use the **no** form of this command to restore the default setting.

**dot1x mac-auth-bypass**

**no dot1x mac-auth-bypass**

| Parameter          | Parameter | Description |
|--------------------|-----------|-------------|
| <b>Description</b> | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command** Interface configuration mode

**Mode**

**Usage Guide** Use this command on a single dumb terminal.

**Configuration** The following example configures single MAB authentication.

**Examples**

```
Ruijie(config-if-GigabitEthernet 0/0)# dot1x mac-auth-bypass
```

| Related         | Command                                  | Description                                             |
|-----------------|------------------------------------------|---------------------------------------------------------|
| <b>Commands</b> | <b>show dot1x port-control interface</b> | Displays the information about 802.1X on the interface. |

**Platform** N/A

**Description**

## 4.26 dot1x mac-auth-bypass multi-user

Use this command to configure multiple MAB authentications.

Use the **no** form of this command to restore the default setting.

**dot1x mac-auth-bypass multi-user**

**no dot1x mac-auth-bypass multi-user**

| Parameter          | Parameter | Description |
|--------------------|-----------|-------------|
| <b>Description</b> | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command** Interface configuration mode/VXLAN mode  
**Mode**

**Usage Guide** Use this command when the interface is connected with multiple dumb terminals.

**Configuration** The following example configures multiple MAB authentications.

**Examples**

```
Ruijie(config-if-GigabitEthernet 0/0)# dot1x mac-auth-bypass multi-user
```

| Related  | Command | Description |
|----------|---------|-------------|
| Commands | N/A     | N/A         |

**Platform** N/A

**Description**

## 4.27 dot1x mac-auth-bypass timeout-activity

Use this command to set the MAB authentication timeout interval.

**dot1x mac-auth-bypass timeout-activity** *time*

**no dot1x mac-auth-bypass timeout-activity**

| Parameter   | Parameter   | Description                                                           |
|-------------|-------------|-----------------------------------------------------------------------|
| Description | <i>time</i> | The online time, in the range from 1 to 65,535 in the unit of seconds |

**Defaults** The default is 0 second.

**Command** Interface configuration mode/VXLAN mode  
**Mode**

**Usage Guide** Use this command to set the MAB authentication timeout interval for dumb terminals.

**Configuration** The following example sets the MAB authentication timeout interval.

**Examples**

```
Ruijie(config-if-GigabitEthernet 0/0)# dot1x mac-auth-bypass  
timeout-activity 3600
```

| Related  | Command                                  | Description                      |
|----------|------------------------------------------|----------------------------------|
| Commands | <b>show dot1x port-control interface</b> | Displays the 802.1X information. |
|          | <b>show dot1x port-control interface</b> | Displays the 802.1X information. |

**Platform** N/A

**Description**

## 4.28 dot1x mac-auth-bypass violation

Use this command to configure the MAB violation.

Use the **no** form of this command to restore the default setting.

**dot1x mac-auth-bypass violation**

**no dot1x mac-auth-bypass violation**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** This command is used to configure the MAB violation on the port with only one dumb terminal in single MAB environment.

**Configuration Examples** The following example configures the MAB violation.

```
Ruijie(config-if-GigabitEthernet 0/0)# dot1x mac-auth-bypass violation
```

| Related Commands | Command                                  | Description                      |
|------------------|------------------------------------------|----------------------------------|
|                  | <b>show dot1x port-control interface</b> | Displays the 802.1X information. |

**Platform** N/A

**Description**

## 4.29 dot1x mac-auth-bypass vlan

Use this command to configure the MAB VLAN function.

Use the **no** form of this command to restore the default setting.

**dot1x mac-auth-bypass vlan *vlan-list***

**no dot1x mac-auth-bypass vlan *vlan-list***

| Parameter   | Parameter        | Description               |
|-------------|------------------|---------------------------|
| Description | <i>vlan-list</i> | Configures the MAB VLANs. |

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode

**Mode**

**Usage Guide** Use this command to allow users within specified VLANs on the port to perform MAB authentication.

**Configuration** The following example configures MAB VLANs.

**Examples**

```
Ruijie(config-if-GigabitEthernet 0/0)# dot1x mac-auth-bypass vlan 5, 8-20
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 4.30 dot1x max-req

Use this command to set the maximum attempts of authentication requests.

**dot1x max-req** *num*

| Parameter          | Parameter  | Description      |
|--------------------|------------|------------------|
| <b>Description</b> | <i>num</i> | Maximum attempts |

**Defaults** The default is 3.

**Command** Global configuration mode

**Mode**

**Usage Guide** Use the **show dot1x** command to display the 802.1X configuration.

**Configuration** The following example sets the maximum attempts of authentication requests to 2.

**Examples**

```
Ruijie(config)# dot1x max-req 2
```

| Related Commands | Command           | Description                            |
|------------------|-------------------|----------------------------------------|
|                  | <b>show dot1x</b> | Displays the information about 802.1X. |

**Platform** N/A

**Description**

## 4.31 dot1x multi-account enable

Use this command to enable the user with one single MAC address to perform authentication with multiple accounts.

Use the **no** form of this command to restore the default setting.

**dot1x multi-account enable**

**no dot1x multi-account enable**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** Use the command to enable the multiple-account authentication if you want to switch the username in the authentication or re-authentication, especially in the windows domain authentication.

**Configuration Examples** The following example enables the multiple-account authentication.

```
Ruijie(config)# dot1x multi-account enable
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 4.32 dot1x multi-mab quiet-period

Use this command to set the quiet time after the multiple MAB authentication failure.

**dot1x multi-mab quiet-period** *time*

| Parameter   | Parameter   | Description                                                                                                                |
|-------------|-------------|----------------------------------------------------------------------------------------------------------------------------|
| Description | <i>time</i> | Sets the quiet period after the multiple MAB authentication failure, in the range from 0 to 65,535 in the unit of seconds. |

**Defaults** The default is 0 second, indicating no quiet period.

**Command Mode** Global configuration mode

**Usage Guide** The default setting is recommended.

**Configuration Examples** The following example sets the quiet period after the multiple MAB authentication failure to 2 seconds.

```
Ruijie(config)# dot1x multi-mab quiet-period 2
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |



**Platform** N/A

**Description**

## 4.33 dot1x mab-username format

Use this command to configure the MAB authentication user name format.

Use the **no** form of this command to restore the default setting.

**dot1x mab-username format [with-dot | with-colon | with-hyphen]**

**no dot1x mab-username format**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** By default, this function is disabled.

**Command Mode** Global configuration mode

**Usage Guide** **dot1x mab-username format with-dot** is used to configure the MAB authentication user name format xxxx.xxxx.xxxx.

**dot1x mab-username format with-colon** is used to configure the MAB authentication user name format xx:xx:xx:xx:xx:xx.

**dot1x mab-username format with-hyphen** is used to configure the MAB authentication user name format xx-xx-xx-xx-xx-xx.

**Configuration Examples** The following example configures the MAB authentication user name format.

```
Ruijie(config)# dot1x mab-username format with-hyphen
```

**Platform Description** N/A

## 4.34 dot1x port-control auto

Use this command to configure the 802.1X authentication on the port.

Use the **no** form of this command to restore the default setting.

**dot1x port-control auto**

**no dot1x port-control**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command** Interface configuration mode/VXLAN mode

**Mode**

**Usage Guide** Use the **show dot1x** command to display the 802.1X configuration.

**Configuration** The following example configures the 802.1X authentication on the port.

**Examples**

```
Ruijie(config-if-GigabitEthernet 0/0)# dot1x port-control auto
```

| Related Commands | Command           | Description                      |
|------------------|-------------------|----------------------------------|
|                  | <b>show dot1x</b> | Displays the 802.1X information. |

**Platform** N/A

**Description**

## 4.35 dot1x port-control-mode

By default, 802.1x adopts MAC address-based control mode. In this mode, only authenticated users have access to the network, while other users that connect to the same port cannot access the network. In the port-based control mode, however, if one user that connects to the port passes the authentication, this port becomes an authenticated port and all the users that connect to this port have access to the network. In the port-based single-user control mode, the port is authenticated when it allows only one authenticated user who is enable to use the network normally. If you find other users on the port, you should clear all the users on the port and re-authenticate. The authentication mode can be configured using the following commands

**dot1x port-control-mode { mac-based | port-based | port-based single-host}**

**no dot1x port-control-mode**

| Parameter Description | Parameter                     | Description                           |
|-----------------------|-------------------------------|---------------------------------------|
|                       | <b>mac-based</b>              | Enable the MAC address-based control. |
|                       | <b>port-based</b>             | Enable port-based control.            |
|                       | <b>port-based single-host</b> | Enable single host-based control.     |

**Defaults** MAC address-based access control is used by default.

**Command** Interface configuration mode.

**Mode**

**Usage Guide** Use the **show dot1x port-control** command to show the 802.1X configuration for the port. Single-host is port-based single-user 802.1x access control. Use **show dot1x port-control** to display port-based and use **show running-config** to display dot1x port-control-mode port-based single-host. Since single-host only supports the single-user form, setting default-user-limit on the port manually does not take effect in single-host mode. If you set default-user-limit on the port after setting single-host, only one user can be permitted to use the network still.

**Configuration** The following example sets the port to participate in authentication and enable port-based authentication.

**Examples**

```
Ruijie(config-if-GigabitEthernet 0/0)# dot1x port-control-mode port-based
```

**Related****Commands**

| Command                        | Description                     |
|--------------------------------|---------------------------------|
| <b>show dot1x port-control</b> | Displays the port control mode. |
| <b>Show running-config</b>     | Displays the configuration.     |

**Platform**

N/A

**Description**

## 4.36 dot1x probe-timer interval

Use this command to set the Ruijie terminal detection interval.

**dot1x probe-timer interval** *time*

**Parameter****Description**

| Parameter   | Description                                                                      |
|-------------|----------------------------------------------------------------------------------|
| <i>time</i> | Terminal detection interval in the range from 1 to 65,535 in the unit of seconds |

**Defaults**

The default is 20 seconds.

**Command**

Global configuration mode

**Mode****Usage Guide**

The default setting is recommended.

**Configuration** The following example sets Ruijie terminal detection interval to 30 seconds.

**Examples**

```
Ruijie(config)# dot1x probe-timer interval 30
```

**Related****Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform**

N/A

**Description**

## 4.37 dot1x probe-timer alive

Use this command to set the Ruijie terminal alive interval.

**dot1x probe-timer alive** *time*

**Parameter**

| Parameter | Description |
|-----------|-------------|
|-----------|-------------|

| <b>Description</b>      | <i>time</i>                                                                                                                                                                       | Terminal alive interval, in the range from 1 to 65,535 in the unit of seconds |             |     |     |  |
|-------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------|-------------|-----|-----|--|
| <b>Defaults</b>         | The default is 250 seconds.                                                                                                                                                       |                                                                               |             |     |     |  |
| <b>Command Mode</b>     | Global configuration mode                                                                                                                                                         |                                                                               |             |     |     |  |
| <b>Usage Guide</b>      | If the device does not receive the probe packet from the terminal when the terminal alive interval expires, the device is considered offline. The default setting is recommended. |                                                                               |             |     |     |  |
| <b>Configuration</b>    | The following example sets Ruijie terminal alive interval to 120 seconds.                                                                                                         |                                                                               |             |     |     |  |
| <b>Examples</b>         | <pre>Ruijie(config)# dot1x probe-timer alive 120</pre>                                                                                                                            |                                                                               |             |     |     |  |
| <b>Related Commands</b> | <table border="1"> <thead> <tr> <th>Command</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>N/A</td> <td>N/A</td> </tr> </tbody> </table>                               | Command                                                                       | Description | N/A | N/A |  |
| Command                 | Description                                                                                                                                                                       |                                                                               |             |     |     |  |
| N/A                     | N/A                                                                                                                                                                               |                                                                               |             |     |     |  |
| <b>Platform</b>         | N/A                                                                                                                                                                               |                                                                               |             |     |     |  |
| <b>Description</b>      |                                                                                                                                                                                   |                                                                               |             |     |     |  |

## 4.38 dot1x private-supPLICANT-only

Use this command to filter non-Ruijie clients.

Use the **no** form of this command to restore the default setting.

**dot1x private-supPLICANT-only**

**no dot1x private-supPLICANT-only**

| <b>Parameter</b>                          | <b>Parameter</b>                                                                                                                                                                                                                             | <b>Description</b> |             |                                           |                                                        |  |
|-------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------|-------------|-------------------------------------------|--------------------------------------------------------|--|
| <b>Description</b>                        | N/A                                                                                                                                                                                                                                          | N/A                |             |                                           |                                                        |  |
| <b>Defaults</b>                           | This function disabled by default.                                                                                                                                                                                                           |                    |             |                                           |                                                        |  |
| <b>Command Mode</b>                       | Global configuration mode                                                                                                                                                                                                                    |                    |             |                                           |                                                        |  |
| <b>Usage Guide</b>                        | This command is used for authentication supporting only Ruijie clients.                                                                                                                                                                      |                    |             |                                           |                                                        |  |
| <b>Configuration</b>                      | The following example filters non-Ruijie clients.                                                                                                                                                                                            |                    |             |                                           |                                                        |  |
| <b>Examples</b>                           | <pre>Ruijie(config)# dot1x private-supPLICANT-only</pre>                                                                                                                                                                                     |                    |             |                                           |                                                        |  |
| <b>Related Commands</b>                   | <table border="1"> <thead> <tr> <th>Command</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td><b>show dot1x private-supPLICANT-only</b></td> <td>Displays the information about the private supplicant.</td> </tr> </tbody> </table> | Command            | Description | <b>show dot1x private-supPLICANT-only</b> | Displays the information about the private supplicant. |  |
| Command                                   | Description                                                                                                                                                                                                                                  |                    |             |                                           |                                                        |  |
| <b>show dot1x private-supPLICANT-only</b> | Displays the information about the private supplicant.                                                                                                                                                                                       |                    |             |                                           |                                                        |  |
| <b>Platform</b>                           | N/A                                                                                                                                                                                                                                          |                    |             |                                           |                                                        |  |

**Description**

## 4.39 dot1x pseudo source-mac

Use this command to use a virtual MAC address as the source MAC address of the 802.1X packets sent by the device.

Use the **no** form of this command to restore the default setting.

**dot1x pseudo source-mac**

**no dot1x pseudo source-mac**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** This function is enabled by default.

**Command Mode** Global configuration mode

**Usage Guide** By default, the device uses its own MAC address as the source MAC address of the EAP packets for the 802.1X authentication. Some versions of the Ruijie supplicant judge whether the access device is a Ruijie device based on the source MAC address of the EAP packets. If the access device is a Ruijie device, the supplicant device performs some private features. Configure this command if you want to enable these features.

**Configuration Examples** The following example uses the virtual MAC address as the source MAC address of the 802.1X packets sent by the device:

```
Ruijie(config)# dot1x pseudo source-mac
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 4.40 dot1x redirect

Use this command to enable the second generation SU upgrade function.

Use the **no** form of this command to restore the default setting.

**dot1x redirect**

**no dot1x redirect**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** Redirect to the supplicant software download website through the browser. See *Web Authentication Configuration Guide* for details about parameters.

**Configuration Examples** The following example enables the second generation SU upgrade function,

```
Ruijie(config)# dot1x redirect
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 4.41 dot1x reauth-max

Use this command to set the maximum re-auth attempts.

```
dot1x reauth-max num
no dot1x reauth-max
```

| Parameter Description | Parameter    | Description                                          |
|-----------------------|--------------|------------------------------------------------------|
|                       | <i>num</i> , | Maximum re-auth attempts. The range is from 1 to 10. |

**Defaults** The default is 3.

**Command Mode** Global configuration mode

**Usage Guide** Use this command to specify the maximum number of supplicant re-authentications. Use the **show dot1x** command to display 802.1X configuration.

**Configuration Examples** The following example sets the maximum re-auth attempts to 2.

```
Ruijie(config)# dot1x reauth-max 2
```

| Related Commands | Command           | Description                      |
|------------------|-------------------|----------------------------------|
|                  | <b>show dot1x</b> | Displays the 802.1X information. |

**Platform Description** N/A

## 4.42 dot1x re-authentication

Use this command to enable timed re-authentication function.

Use the **no** form of the command to restore the default setting.

**dot1x re-authentication**

**no dot1x re-authentication**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** This command will re-authenticate the supplicant periodically after he passes the authentication. Use the **show dot1x** command to display 802.1X configuration. The default setting is recommended.

**Configuration Examples** The following example enables timed re-authentication function.

```
Ruijie(config)# dot1x re-authentication
```

| Related Commands | Command           | Description                      |
|------------------|-------------------|----------------------------------|
|                  | <b>show dot1x</b> | Displays the 802.1X information. |

**Platform Description** N/A

## 4.43 dot1x stationarity enable

In the port-based 802.1X control mode, dynamic users can transit freely among the ports by default.

Use this command to prevent users from transition.

Use the **no** form of this command to restore the default setting.

**dot1x stationarity enable**

**no dot1x stationarity enable**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** This command must be configured before user authentication. Otherwise, you need re-authenticate all the users.

**Configuration** The following example prevents the user from transiting from 802.1X port to other port.

**Examples**

```
Ruijie(config)# dot1x stationarity enable
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 4.44 dot1x timeout re-authperiod

Use this command to set the re-authentication interval when re-authentication is enabled.

**dot1x timeout re-authperiod** *time*

| Parameter          | Parameter   | Description                                                                    |
|--------------------|-------------|--------------------------------------------------------------------------------|
| <b>Description</b> | <i>time</i> | Authentication interval, in the range from 1 to 65,535 in the unit of seconds. |

**Defaults** The default is 3,600 seconds.

**Command Mode** Global configuration mode

**Usage Guide** Use the **show dot1x** command to display the 802.1X configuration.

**Configuration** The following example sets the re-authentication interval to 2,400 seconds.

**Examples**

```
Ruijie(config)# dot1x timeout re-authperiod 2400
```

| Related Commands | Command           | Description                            |
|------------------|-------------------|----------------------------------------|
|                  | <b>show dot1x</b> | Displays the information about 802.1X. |

**Platform** N/A

**Description**

## 4.45 dot1x timeout quiet-period

Use this command to set the quiet period when authentication fails.

**dot1x timeout quiet-period** *time*



| Parameter   | Parameter   | Description                                                         |
|-------------|-------------|---------------------------------------------------------------------|
| Description | <i>time</i> | Quiet period, in the range from 1 to 65,535 in the unit of seconds. |

**Defaults** The default is 10 seconds.

**Command Mode** Global configuration mode

**Usage Guide** The default value is recommended.

**Configuration Examples** The following example sets the quiet period after failed authentication.

```
Ruijie(config)# dot1x timeout quiet-period 60
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 4.46 dot1x timeout supp-timeout

Use this command to set the authentication timeout between the device and the supplicant.

**dot1x timeout supp-timeout *time***

| Parameter   | Parameter   | Description                                                                                            |
|-------------|-------------|--------------------------------------------------------------------------------------------------------|
| Description | <i>time</i> | Authentication timeout between the device and the supplicant<br>The range is from 1 to 65,535 seconds. |

**Defaults** The default is 3 seconds.

**Command Mode** Global configuration mode

**Usage Guide** Use the **show dot1x** command to show display 802.1X configuration.

**Configuration Examples** The following example sets the authentication timeout between the device and the supplicant to 10s:

```
Ruijie(config)# dot1x timeout supp-timeout 10
```

| Related Commands | Command           | Description                            |
|------------------|-------------------|----------------------------------------|
|                  | <b>show dot1x</b> | Displays the information about 802.1x. |

**Platform** N/A  
**Description**

## 4.47 dot1x timeout server-timeout

Use this command to set the server timeout interval.

**dot1x timeout server-timeout** *time*

| Parameter Description | Parameter   | Description                                                                       |
|-----------------------|-------------|-----------------------------------------------------------------------------------|
|                       | <i>time</i> | The server timeout interval, in the range from 1 to 65,535 in the unit of seconds |

**Defaults** The default is 5 seconds.

**Command Mode** Global configuration mode

**Usage Guide** By default, the timeout of the 802.1X server is less than that of the Radius server. Use this command to raise the 802.1X timeout so as to exceed the Radius value. For details, see *Configuration Guide*.

**Configuration Examples** The following example set the server timeout interval to 10 seconds.

```
Ruijie(config)# dot1x timeout server-timeout 10
```

| Related Commands | Command           | Description                      |
|------------------|-------------------|----------------------------------|
|                  | <b>show dot1x</b> | Displays the 802.1X information. |

**Platform** N/A  
**Description**

## 4.48 dot1x timeout tx-period

Use this command to set the request/id packet re-transmission interval.

**dot1x timeout tx-period** *time*

| Parameter Description | Parameter   | Description                                                                                      |
|-----------------------|-------------|--------------------------------------------------------------------------------------------------|
|                       | <i>time</i> | The request/id packet re-transmission interval, in range from 1 to 65,535 in the unit of seconds |

**Defaults** The default is 3 seconds for switches, and 4 seconds for wireless devices.

**Command** Global configuration mode  
**Mode**

**Usage Guide** Use the **show dot1x** command to display 802.1X configuration.

**Configuration** The following example sets the request/id packet re-transmission interval to 5 seconds.

**Examples**

```
Ruijie(config)# dot1x timeout tx-period 5
```

| Related         | Command           | Description                            |
|-----------------|-------------------|----------------------------------------|
| <b>Commands</b> | <b>show dot1x</b> | Displays the information about 802.1X. |

**Platform** N/A

**Description**

## 4.49 dot1x valid-ip-acct enable

Use this command to enable IP address-triggered accounting.

Use the **no** form of this command to restore the default setting.

**dot1x valid-ip-acct enable**

**no dot1x valid-ip-acct enable**

| Parameter          | Parameter | Description |
|--------------------|-----------|-------------|
| <b>Description</b> | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command** Global configuration mode  
**Mode**

**Usage Guide** Use this command to enable accounting only when users obtain valid IP addresses.

**Configuration** The following example enables IP address-triggered accounting.

**Examples**

```
Ruijie(config)#dot1x valid-ip-acct enable
```

**Platform** N/A

**Description**

## 4.50 dot1x valid-ip-acct timeout

Use this command to configure IP address-triggered accounting timeout.

Use the **no** form of this command to restore the default setting.

**dot1x valid-ip-acct timeout *time***

**no dot1x valid-ip-acct timeout**

|                               |                                                                                                                                                                     |                                                                |
|-------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------|
| <b>Parameter Description</b>  | <b>Parameter</b>                                                                                                                                                    | <b>Description</b>                                             |
|                               | <i>time</i>                                                                                                                                                         | IP address-triggered accounting timeout in the unit of minutes |
| <b>Defaults</b>               | The default is 5 minutes.                                                                                                                                           |                                                                |
| <b>Command Mode</b>           | Global configuration mode                                                                                                                                           |                                                                |
| <b>Usage Guide</b>            | The SNMP server will not start accounting until users obtain IP addresses. In this case, use this command to configure the IP address-triggered accounting timeout. |                                                                |
| <b>Configuration Examples</b> | The following example configures IP address-triggered accounting timeout.                                                                                           |                                                                |
|                               | <pre>Ruijie(config)# dot1x valid-ip-acct timeout 10</pre>                                                                                                           |                                                                |
| <b>Platform Description</b>   | N/A                                                                                                                                                                 |                                                                |

## 4.51 dot1x system disable

Use this command to disable global 802.1x. Use the **no** form of this command to restore the default settings.

**dot1x system disable**

**no dot1x system disable**

|                               |                                                                                                                                                                                                                                                              |                    |
|-------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------|
| <b>Parameter Description</b>  | <b>Parameter</b>                                                                                                                                                                                                                                             | <b>Description</b> |
|                               | N/A                                                                                                                                                                                                                                                          | N/A                |
| <b>Defaults</b>               | By default, global 802.1x is enabled.                                                                                                                                                                                                                        |                    |
| <b>Command Mode</b>           | Global configuration mode                                                                                                                                                                                                                                    |                    |
| <b>Usage Guide</b>            | (Optional) When the server is unreachable, disable global 802.1x, so users can access the Internet without authentication. After the server resumes reachability, enable global 802.1x, and users have to pass authentication before accessing the Internet. |                    |
| <b>Configuration Examples</b> | The following example disables global 802.1x.                                                                                                                                                                                                                |                    |
|                               | <pre>Ruijie(config)# dot1x system disable</pre>                                                                                                                                                                                                              |                    |
| <b>Related Commands</b>       | <b>Command</b>                                                                                                                                                                                                                                               | <b>Description</b> |
|                               | N/A                                                                                                                                                                                                                                                          | N/A                |

**Platform** N/A

**Description**

## 4.52 show dot1x

Use this command to display the 802.1X setting.

**show dot1x**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Mode**

**Usage Guide** N/A

**Configuration** The following example displays the 802.1X setting.

**Examples**

```
Ruijie#show dot1x

802.1X basic information:
 802.1X Status ..... enable
 Authentication Mode ..... eap
 Authorization mode ..... disable
 Total User Number ..... 0 (exclude dynamic user)
 Authenticated User Number ..... 0 (exclude dynamic user)
 Dynamic User Number ..... 0
 Re-authentication ..... disable
 Re-authentication Period ..... 3600 seconds
 Re-authentication max ..... 3 times
 Quiet Period ..... 10 seconds
 Tx Period ..... 30 seconds
 Supplicant Timeout ..... 3 seconds
 Server Timeout ..... 5 seconds
 Maximum Request ..... 3 times
 Client Online Probe ..... disable
 Eapol Tag ..... enable
 802.1x redirect ..... disable
 Private supplicant only ..... disable
```

| Related Commands | Command                | Description                                       |
|------------------|------------------------|---------------------------------------------------|
|                  | <b>dot1x auth-mode</b> | Sets the 802.1X authentication mode.              |
|                  | <b>dot1x max-req</b>   | Sets the maximum number of authentication request |

|                                     |                                                                               |
|-------------------------------------|-------------------------------------------------------------------------------|
|                                     | re-transmissions.                                                             |
| <b>dot1x port-control auto</b>      | Sets the port to participate in authentication.                               |
| <b>dot1x reauth-max</b>             | Sets the maximum number of the supplicant re-authentications.                 |
| <b>dot1x re-authentication</b>      | Sets the re-authentication attribute.                                         |
| <b>dot1x timeout quiet-period</b>   | Sets the time the device waits before re-authentication.                      |
| <b>dot1x timeout re-authperiod</b>  | Sets the re-authentication period for the supplicant.                         |
| <b>dot1x timeout server-timeout</b> | Sets the authentication timeout between the device and authentication server. |
| <b>dot1x timeout supp-timeout</b>   | Sets the authentication timeout between the device and the supplicant.        |
| <b>dot1x timeout tx-period</b>      | Sets the re-transmission interval.                                            |

**Platform** N/A

**Description**

## 4.53 show dot1x auth-address-table

Use this command to display 802.1X authentication address table.

**show dot1x auth-address-table** [ **address** *addr* | **interface** *interface* ]

| Parameter          | Parameter        | Description                                   |
|--------------------|------------------|-----------------------------------------------|
| <b>Description</b> | <i>addr</i>      | Physical IP address that can be authenticated |
|                    | <i>interface</i> | Interface number                              |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example displays the 802.1X authentication address table.

```
Ruijie #show dot1x auth-address-table
Interface      Address
-----
Fa0/1          00d0.f800.0c0e
Fa0/2          001a.c800.0102

Ruijie #show dot1x auth-address-table interface fastEthernet 0/1
Interface      Address
-----
Fa0/1          00d0.f800.0c0e
```

```
Ruijie #show dot1x auth-address-table address 00d0.f8.00.0c0e
Interface      Address
-----
Fa0/1          00d0.f800.0c0e
```

| Related Commands | Command                             | Description                                                                   |
|------------------|-------------------------------------|-------------------------------------------------------------------------------|
|                  | <b>dot1x auth-mode</b>              | Sets the 802.1x authentication mode.                                          |
|                  | <b>dot1x max-req</b>                | Sets the maximum number of authentication request re-transmissions.           |
|                  | <b>dot1x port-control auto</b>      | Sets the port to participate in authentication.                               |
|                  | <b>dot1x reauth-max</b>             | Sets the maximum number of the supplicant re-authentications.                 |
|                  | <b>dot1x re-authentication</b>      | Sets the re-authentication attribute.                                         |
|                  | <b>dot1x timeout quiet-period</b>   | Sets the time the device waits before re-authentication.                      |
|                  | <b>dot1x timeout re-authperiod</b>  | Sets the re-authentication period for the supplicant.                         |
|                  | <b>dot1x timeout server-timeout</b> | Sets the authentication timeout between the device and authentication server. |
|                  | <b>dot1x timeout supp-timeout</b>   | Sets the authentication timeout between the device and the supplicant.        |
|                  | <b>dot1x timeout tx-period</b>      | Sets the re-transmission interval.                                            |

**Platform** N/A

**Description**

## 4.54 show dot1x auto-req

Use this command to display the auto-request authentication information.

**show dot1x auto-req**

| Parameter          | Parameter | Description |
|--------------------|-----------|-------------|
| <b>Description</b> | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example displays the auto-request authentication information.

```
Ruijie# show dot1x auto-req
Auto-Req: Enabled
User-Detect : Enabled
Packet-Num : 0
```

```
Req-Interval: 30 Seconds
```

| Related Commands | Command                             | Description                                                                   |
|------------------|-------------------------------------|-------------------------------------------------------------------------------|
|                  | <b>dot1x auth-mode</b>              | Sets the 802.1X authentication mode.                                          |
|                  | <b>dot1x max-req</b>                | Sets the maximum number of authentication request re-transmissions.           |
|                  | <b>dot1x port-control auto</b>      | Sets the port to participate in authentication.                               |
|                  | <b>dot1x reauth-max</b>             | Sets the maximum number of the supplicant re-authentications.                 |
|                  | <b>dot1x re-authentication</b>      | Sets the re-authentication attribute.                                         |
|                  | <b>dot1x timeout quiet-period</b>   | Sets the time the device waits before re-authentication.                      |
|                  | <b>dot1x timeout re-authperiod</b>  | Sets the re-authentication period for the supplicant.                         |
|                  | <b>dot1x timeout server-timeout</b> | Sets the authentication timeout between the device and authentication server. |
|                  | <b>dot1x timeout supp-timeout</b>   | Sets the authentication timeout between the device and the supplicant.        |
|                  | <b>dot1x timeout tx-period</b>      | Sets the re-transmission interval.                                            |

**Platform** N/A

**Description**

## 4.55 show dot1x max-req

Use this command to display the maximum number of request/challenge packet transmission.

```
show dot1x max-req
```

| Parameter          | Parameter | Description |
|--------------------|-----------|-------------|
| <b>Description</b> | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example displays the maximum number of request/challenge packet transmission.

```
Ruijie#show dot1x max-req
```

```
Max-Req: 3 Times
```

| Related | Command | Description |
|---------|---------|-------------|
|---------|---------|-------------|



|                 |                                     |                                                                               |
|-----------------|-------------------------------------|-------------------------------------------------------------------------------|
| <b>Commands</b> | <b>dot1x auth-mode</b>              | Sets the 802.1X authentication mode.                                          |
|                 | <b>dot1x max-req</b>                | Sets the maximum number of authentication request re-transmissions.           |
|                 | <b>dot1x port-control auto</b>      | Sets the port to participate in authentication.                               |
|                 | <b>dot1x reauth-max</b>             | Sets the maximum number of the supplicant re-authentications.                 |
|                 | <b>dot1x re-authentication</b>      | Sets the re-authentication attribute.                                         |
|                 | <b>dot1x timeout quiet-period</b>   | Sets the time the device waits before re-authentication.                      |
|                 | <b>dot1x timeout re-authperiod</b>  | Sets the re-authentication period for the supplicant.                         |
|                 | <b>dot1x timeout server-timeout</b> | Sets the authentication timeout between the device and authentication server. |
|                 | <b>dot1x timeout supp-timeout</b>   | Sets the authentication timeout between the device and the supplicant.        |
|                 | <b>dot1x timeout tx-period</b>      | Sets the re-transmission interval.                                            |

**Platform** N/A

**Description**

## 4.56 show dot1x port-control

Use this command to display the port-control information.

**show dot1x port-control** [ **interface** *interface-type interface-number*]

| Parameter          | Parameter               | Description    |
|--------------------|-------------------------|----------------|
| <b>Description</b> | <i>interface-type</i>   | Interface type |
|                    | <i>interface-number</i> | Interface ID   |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** N/A

**Configuration** The following example displays the port-control information.

### Examples

```
Ruijie#show dot1x port-control
Interface Mode      Dynamic-User Static-User Max-User  Authened MAB
-----
Gi0/5   mac-based  0          0          unlimited no      disable
```

| Related Commands | Command                | Description                                       |
|------------------|------------------------|---------------------------------------------------|
|                  | <b>dot1x auth-mode</b> | Sets the 802.1X authentication mode.              |
|                  | <b>dot1x max-req</b>   | Sets the maximum number of authentication request |

|                                     |                                                                               |
|-------------------------------------|-------------------------------------------------------------------------------|
|                                     | re-transmissions.                                                             |
| <b>dot1x port-control auto</b>      | Sets the port to participate in authentication.                               |
| <b>dot1x reauth-max</b>             | Sets the maximum number of the supplicant re-authentications.                 |
| <b>dot1x re-authentication</b>      | Sets the re-authentication attribute.                                         |
| <b>dot1x timeout quiet-period</b>   | Sets the time the device waits before re-authentication.                      |
| <b>dot1x timeout re-authperiod</b>  | Sets the re-authentication period for the supplicant.                         |
| <b>dot1x timeout server-timeout</b> | Sets the authentication timeout between the device and authentication server. |
| <b>dot1x timeout supp-timeout</b>   | Sets the authentication timeout between the device and the supplicant.        |
| <b>dot1x timeout tx-period</b>      | Sets the re-transmission interval.                                            |

**Platform** N/A

**Description**

## 4.57 show dot1x private-supPLICANT-only

Use this command to display the information about the private supplicant.

**show dot1x private-supPLICANT-only**

| Parameter          | Parameter | Description |
|--------------------|-----------|-------------|
| <b>Description</b> | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** N/A

**Configuration** The following example displays the information about the private supplicant:

**Examples**

```
Ruijie#show dot1x private-supPLICANT-only

private-supPLICANT-only: Disabled
```

| Related Commands | Command                        | Description                                                         |
|------------------|--------------------------------|---------------------------------------------------------------------|
|                  | <b>dot1x auth-mode</b>         | Sets the 802.1X authentication mode.                                |
|                  | <b>dot1x max-req</b>           | Sets the maximum number of authentication request re-transmissions. |
|                  | <b>dot1x port-control auto</b> | Sets the port to participate in authentication.                     |
|                  | <b>dot1x reauth-max</b>        | Sets the maximum number of the supplicant                           |

|                                     |                                                                               |
|-------------------------------------|-------------------------------------------------------------------------------|
|                                     | re-authentications.                                                           |
| <b>dot1x re-authentication</b>      | Sets the re-authentication attribute.                                         |
| <b>dot1x timeout quiet-period</b>   | Sets the time the device waits before re-authentication.                      |
| <b>dot1x timeout re-authperiod</b>  | Sets the re-authentication period for the supplicant.                         |
| <b>dot1x timeout server-timeout</b> | Sets the authentication timeout between the device and authentication server. |
| <b>dot1x timeout supp-timeout</b>   | Sets the authentication timeout between the device and the supplicant.        |
| <b>dot1x timeout tx-period</b>      | Sets the re-transmission interval.                                            |

**Platform** N/A

**Description**

## 4.58 show dot1x probe-timer

Use this command to display the configuration of online user probe.

**show dot1x probe-timer**

| Parameter          | Parameter | Description |
|--------------------|-----------|-------------|
| <b>Description</b> | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** N/A

**Configuration** The following example displays the configuration of online user probe.

**Examples** Ruijie#show dot1x probe-timer

```
Hello Interval    : 20
Hello Alive       : 60
```

Field Description

| Command        | Description                    |
|----------------|--------------------------------|
| Hello Interval | Sets the probe period.         |
| Hello Alive    | Sets the probe alive interval. |

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A.        |

**Platform** N/A

**Description**

## 4.59 show dot1x re-authentication

Use this command to display re-authentication status.

**show dot1x re-authentication**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** N/A

**Configuration** The following example displays re-authentication status.

### Examples

```
Ruijie#show dot1x re-authentication
```

```
Reauth-Enabled: Disabled
```

| Command        | Description                          |
|----------------|--------------------------------------|
| Reauth-Enabled | Whether to enable re-authentication. |

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 4.60 show dot1x reauth-max

Use this command to display the maximum re-auth attempts.

**show dot1x reauth-max**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** N/A

**Configuration** The following example displays the maximum re-authentication attempts.

**Examples**

```
Ruijie#show dot1x reauth-max
Reauth-Max: 3 Times
```

| Command        | Description                                  |
|----------------|----------------------------------------------|
| Reauth-Enabled | Sets the maximum re-authentication attempts. |

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 4.61 show dot1x summary

Use this command to display the 802.1X authentication summary.

**show dot1x summary**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** It is convenient to display the 802.1X authentication summary according to the MAC address or username.

**Configuration** The following example displays the summary of 802.1X authentication.

**Examples**

```
Ruijie#show dot1x summary
ID      User      MAC          Interface VLAN INNER-VLAN Auth-State
Backend-State Port-Status User-Type Time
-----
-----
```

**Related Commands**

| Command                        | Description                                                         |
|--------------------------------|---------------------------------------------------------------------|
| <b>dot1x auth-mode</b>         | Sets the 802.1X authentication mode.                                |
| <b>dot1x max-req</b>           | Sets the maximum number of authentication request re-transmissions. |
| <b>dot1x port-control auto</b> | Sets the port to participate in authentication.                     |
| <b>dot1x reauth-max</b>        | Sets the maximum number of the supplicant re-authentications.       |

|                                     |                                                                               |
|-------------------------------------|-------------------------------------------------------------------------------|
| <b>dot1x re-authentication</b>      | Sets the re-authentication attribute.                                         |
| <b>dot1x timeout quiet-period</b>   | Sets the time the device waits before re-authentication.                      |
| <b>dot1x timeout re-authperiod</b>  | Sets the re-authentication period for the supplicant.                         |
| <b>dot1x timeout server-timeout</b> | Sets the authentication timeout between the device and authentication server. |
| <b>dot1x timeout supp-timeout</b>   | Sets the authentication timeout between the device and the supplicant.        |
| <b>dot1x timeout tx-period</b>      | Sets the re-transmission interval.                                            |

**Platform** N/A

**Description**

## 4.62 show dot1x timeout quiet-period

Use this command to display the time for the device to wait before re-authentication quiet period after the authentication failure.

**show dot1x timeout quiet-period**

| Parameter          | Parameter | Description |
|--------------------|-----------|-------------|
| <b>Description</b> | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** Use this command to display the time for the device to wait before re-authentication quiet period after the authentication failure.

**Configuration Examples** The following example shows how to displays the quiet period the time for the device to wait before re-authentication after the authentication failure.

```
Ruijie#show dot1x timeout quiet-period
```

```
Quiet-Period: 10 Seconds
```

Parameter Description:

| Parameter    | Description                                                                                |
|--------------|--------------------------------------------------------------------------------------------|
| Quiet-Period | The time for the device to wait before re-authentication after the authentication failure. |

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 4.63 show dot1x timeout re-authperiod

Use this command to display the re-authentication interval.

**show dot1x timeout re-authperiod**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** Use this command to display the re-authentication interval.

**Configuration** The following example displays the re-authentication interval.:

**Examples**

```
Ruijie#show dot1x timeout re-authperiod
```

```
Reauth-Period: 3600 Seconds
```

Parameter Description:

| Parameter     | Description                 |
|---------------|-----------------------------|
| Reauth-Period | Re-authentication interval. |

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 4.64 show dot1x timeout server-timeout

Use this command to display the authentication timeout period.

**show dot1x timeout server-timeout**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** Use this command to display the authentication timeout period.

**Configuration** Use this command to display the authentication timeout period:

**Examples**

```
Ruijie#show dot1x timeout server-timeout
```

```
Server-Timeout: 5 Seconds
```

Parameter Description:

| Parameter     | Description                                  |
|---------------|----------------------------------------------|
| Server-Period | AuthenticationServer timeout periodinterval. |

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 4.65 show dot1x timeout supp-timeout

Use this command to display the request/challenge packets re-transmission interval.

**show dot1x timeout supp-timeout**

**Parameter  
Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** N/A

**Command  
Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** Use this command to display the request/challenge packets re-transmission interval.

**Configuration** Use this command to display the request/challenge packets re-transmission interval:

**Examples**

```
Ruijie#show dot1x timeout supp-timeout
```

```
Supp-Timeout: 3 Seconds
```

Field Description:

| Field         | Description                                             |
|---------------|---------------------------------------------------------|
| Server-Period | The request/challenge packets re-transmission interval. |

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |



**Platform** N/A

**Description**

## 4.66 show dot1x timeout tx-period

Use this command to display the request/id packets re-transmission interval.

**show dot1x timeout tx-period**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** Use this command to display the request/id packets re-transmission interval.

**Configuration** Use this command to display the request/ id packets re-transmission interval:

**Examples** Ruijie#show dot1x timeout tx-period

```
Tx-Period: 30 Seconds
```

Parameter Description:

| Parameter | Description                                  |
|-----------|----------------------------------------------|
| Tx-Period | Request/id packets re-transmission interval. |

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 4.67 show dot1x user mac

Use this command to display the information about 802.1X authentication users based on MAC addresses.

**show dot1x user mac mac-addr**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | mac-addr  | MAC address |

**Defaults** N/A

**Command** Privileged EXEC mode/Global configuration mode/Interface configuration mode  
**Mode**

**Usage Guide** Use the **show dot1x summary** command to display 802.1X authentication summaries. And use this command to display detailed information of a specific user based on its MAC address.

**Configuration Examples** The following example displays the information about the 802.1X authentication user according to the user's MAC address.

```
Ruijie#show dot1x user mac 0023.aeaa.4286
```

```
User name: ts-user
User id: 16777225
Type: static
Mac address is 0023.aeaa.4286
Vlan id is 2
Access from port Gi0/5
Time online: 0days 0h 0m17s
User ip address is 192.168.3.21
Max user number on this port is 0
Authorization session time is 1000 seconds
Supplicant is private
Start accounting
Permit proxy user
Permit dial user
IP privilege is 0
user acl-name ts-user_6_0_0 :
```

Parameter Description:

| Parameter                    | Description                             |
|------------------------------|-----------------------------------------|
| User name                    | User name                               |
| User id                      | User ID                                 |
| Type                         | User type                               |
| Mac address                  | User's MAC address                      |
| Vlan id                      | User VLAN ID                            |
| Access from port             | The port that user access from          |
| Time online                  | User online time                        |
| User ip address              | User IP address                         |
| Max user number on this port | The maximum number of users on the port |
| Authorization session time   | The authorized session time             |
| Supplicant is private        | Whether the terminal is a Ruijie device |
| Start accounting             | The accounting is enabled.              |
| Permit proxy user            | The user is allowed to use the proxy.   |
| Permit dial user             | The user is allowed to dial.            |
| IP privilege                 | The IP privilege level                  |

|               |                     |
|---------------|---------------------|
| user acl-name | The ACL information |
|---------------|---------------------|

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 4.68 show dot1x user name

Use this command to display information about 802.1X authentication users based on usernames.

**show dot1x user name** *name*

| Parameter Description | Parameter   | Description |
|-----------------------|-------------|-------------|
|                       | <i>name</i> | User name   |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** Use the **show dot1x summary** command to display 802.1X authentication summaries. And use this command to display detailed information of a specific user based on its username.

**Configuration Examples** The following example displays the information about the 802.1X authentication user according to the user name.

```
Ruijie#show dot1x user name ts-user

User name: ts-user
User id: 16777225
Type: static
Mac address is 0023.aeaa.4286
Vlan id is 2
Access from port Gi0/5
Time online: 0days 0h 0m17s
User ip address is 192.168.3.21
Max user number on this port is 0
Authorization session time is 1000 seconds
Supplicant is private
Start accounting
Permit proxy user
Permit dial user
IP privilege is 0
user acl-name ts-user_6_0_0 :
```

Parameter Description:

| Parameter                    | Description                              |
|------------------------------|------------------------------------------|
| User name                    | User name                                |
| User id                      | User ID                                  |
| Type                         | User type                                |
| Mac address                  | User's MAC address                       |
| Vlan id                      | User VLAN ID                             |
| Access from port             | The port that user access from           |
| Time online                  | User online time                         |
| User ip address              | User IP address                          |
| Max user number on this port | The maximum number of users on the port  |
| Authorization session time   | The authorized session time              |
| Supplicant is private        | Whether the terminal is a Ruijie device. |
| Start accounting             | The accounting is enabled.               |
| Permit proxy user            | The user is allowed to use the proxy.    |
| Permit dial user             | The user is allowed to dial.             |
| IP privilege                 | The IP privilege level.                  |
| user acl-name                | The ACL information.                     |

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform  
Description**

N/A

## 5 Web Authentication Commands

### 5.1 accounting

Use this command to set an accounting method for the template.

Use the **no** form of this command to restore the default setting.

**accounting** { *method-list* }

**no accounting**

| Parameter Description | Parameter          | Description             |
|-----------------------|--------------------|-------------------------|
|                       | <i>method-list</i> | Name of the method list |

**Defaults** N/A

**Command Mode** Template configuration mode

**Usage Guide** The *method-list* parameter in this command should be consistent with network accounting list name configured in AAA.

**Configuration Examples** The following example sets the **mlist1** accounting method for the **eportalv2** template.

```
Ruijie(config.tmplt.eportalv2)# accounting mlist1
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

### 5.2 authentication

Use this command to set an authentication method for the template.

Use the **no** form of this command to restore the default setting.

**authentication** { *method-list* }

**no authentication**

| Parameter Description | Parameter          | Description             |
|-----------------------|--------------------|-------------------------|
|                       | <i>method-list</i> | Name of the method list |

**Defaults** N/A

**Command Mode** Template configuration mode

**Usage Guide** The *method-list* parameter in this command should be consistent with the Web authentication method list configured in AAA.  
The first generation authentication does not support the authentication method list configuration.

**Configuration** The following example sets the **mlist1** authentication method for the **eportalv2** template.

**Examples**

```
Ruijie(config.tmplt.eportalv2)#authentication mlist1
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 5.3 bindmode

Use this command to set a binding mode for the template.

Use the **no** form of this command to restore the default setting.

**bindmode { ip-mac-mode | ip-only-mode }**

**no bindmode**

**Parameter Description**

| Parameter           | Description                                                                                                                                                                                    |
|---------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>ip-mac-mode</b>  | IP+MAC mode. The device will write both the IP address information and the MAC address information into the forwarding entry.                                                                  |
| <b>ip-only-mode</b> | IP only mode. The device writes only the IP address information into the forwarding entry. On the L3 network, it is recommended to adopt this mode in case that the MAC address is inaccurate. |

**Defaults** The default is **ip-mac-mode**.

**Command Mode** Template configuration mode

**Usage Guide** N/A

**Configuration** The following example adopts the IP only mode for the **eportalv2** template.

**Examples**

```
Ruijie(config.tmplt.eportalv2)# bindmode ip-only-mode
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 5.4 clear web-auth direct-arp

Use this command to clear all ARP resources exempt from authentication.

**clear web-auth direct-arp**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example clears all ARP resources exempt from authentication.

**Examples** Ruijie# clear web-auth direct-arp

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 5.5 clear web-auth direct host

Use this command to clear all authentication-exempted users.

**clear web-auth direct-host [range]**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example clears all authentication-exempted users.

**Examples** Ruijie# clear web-auth direct-host

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 5.6 clear web-auth direct-site

Use this command to clear all authentication-exempted network resources.

**clear web-auth direct-site [range]**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example clears all authentication-exempted network resources.

**Examples** Ruijie# clear web-auth direct-site

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**



## 5.7 clear web-auth user

Use this command to force the user to go offline.

**clear web-auth user** { **all** | **ip** { *ip-address* | *ipv6-address* } | **mac** *mac-address* | **name** *name-string* }

| Parameter Description | Parameter           | Description                        |
|-----------------------|---------------------|------------------------------------|
|                       | <i>ip-address</i>   | Specifies the user's IPv4 address. |
|                       | <i>ipv6-address</i> | Specifies the user's IPv6 address. |
|                       | <i>mac-address</i>  | Specifies the user's MAC address.  |
|                       | <i>name-string</i>  | Specifies the user name.           |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration Examples** The following example forces all users to go offline.

```
Ruijie(config) clear web-auth user all
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 5.8 fmt

Use this command to set the URL redirection format in the second template configuration mode.

**fmt** { **cmcc-ext1** | **cmcc-ext2** | **cmcc-normal** }

Use this command to set the URL redirection format in the first template configuration mode.

**fmt** { **ace** | **ruijie** | **custom** }

| Parameter Description | Parameter          | Description          |
|-----------------------|--------------------|----------------------|
|                       | <b>cmcc-ext1</b>   | Extended CMCC format |
|                       | <b>cmcc-ext2</b>   | Liaoning CMCC format |
|                       | <b>cmcc-normal</b> | Standard CMCC format |

|                               |                                                                                                |
|-------------------------------|------------------------------------------------------------------------------------------------|
| <b>Defaults</b>               | The default URL redirection format is Ruijie format.                                           |
| <b>Command Mode</b>           | Template configuration mode                                                                    |
| <b>Usage Guide</b>            | Use this command to set the URL redirection format based on the corresponding portal standard. |
| <b>Configuration Examples</b> | The following example sets the URL redirection format to extended CMCC format.                 |
| <b>Examples</b>               | <pre>Ruijie(config.tmplt.eportalv2)#fmt cmcc-ext1</pre>                                        |
| <b>Platform Description</b>   | N/A                                                                                            |

## 5.9 http redirect direct-arp

Use this command to set the address range of the authentication-exempted ARP.

Use the **no** form of this command to restore the default setting.

**http redirect direct-arp** { *ip-address* [ *ip-mask* ] }

**no http redirect direct-arp** { *ip-address* [ *ip-mask* ] }

| <b>Parameter Description</b> | Parameter         | Description          |
|------------------------------|-------------------|----------------------|
|                              | <i>ip-address</i> | IPv4 address         |
|                              | <i>ip-mask</i>    | (Optional) IPv4 mask |

| <b>Defaults</b>               | No authentication-exempted ARP resource is configured by default.                                                                                                                                                     |             |
|-------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------|
| <b>Command Mode</b>           | Global configuration mode                                                                                                                                                                                             |             |
| <b>Usage Guide</b>            | The user cannot learn the ARPs of devices such as the gateway with the ARP CHECK function enabled. Use this command to enable the device to learn the ARP within a specified IP address range without authentication. |             |
| <b>Configuration Examples</b> | The following example sets the IP address 172.16.0.1 as the authentication-exempted ARP resource.                                                                                                                     |             |
| <b>Examples</b>               | <pre>Ruijie(config)# http redirect direct-arp 172.16.0.1</pre>                                                                                                                                                        |             |
| <b>Related Commands</b>       | Command                                                                                                                                                                                                               | Description |
|                               | N/A                                                                                                                                                                                                                   | N/A         |
| <b>Platform Description</b>   | N/A                                                                                                                                                                                                                   |             |

## 5.10 http redirect direct-site

Use this command to set the range of authentication-exempted network resources.

Use the **no** form of this command to restore the default setting.

**http redirect direct-site** { *ipv6-address* | *ipv4-address* [ *ip-mask* ] [ **arp** ] | *mac-address* | range *startip-address endip-address* } [description *description-str*] [group *group-name*]

**no http redirect direct-site** { *ipv6-address* | *ipv4-address* [ *ip-mask* ] | *mac-address* | range *startip-address endip-address* }

### Parameter Description

| Parameter              | Description                                                                                                                                                                                               |
|------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>ipv6-address</i>    | IPv6 address of the authentication-exempted network resources                                                                                                                                             |
| <i>ip-address</i>      | IPv4 address of the authentication-exempted network resources                                                                                                                                             |
| <i>ip-mask</i>         | IPv4 address mask of the authentication-exempted network resources (optional)                                                                                                                             |
| <b>arp</b>             | If the ARP Check is enabled on the access device, the keyword arp is needed for ARP binding of the authentication-exempted network resources (optional). It is necessary for IPv4 network resources only. |
| <i>mac-address</i>     | MAC address of the authentication-exempted user                                                                                                                                                           |
| <i>startip-address</i> | Start IP address of the authentication-exempted user                                                                                                                                                      |
| <i>endip-address</i>   | End IP address of the authentication-exempted user                                                                                                                                                        |
| <i>group-name</i>      | Group name of the authentication-exempted user                                                                                                                                                            |
| <i>description-str</i> | Description of the authentication-exempted user                                                                                                                                                           |

**Defaults** No authentication-exempted network resource is set.

**Command** Global configuration mode

**Mode**

**Usage Guide** When Web/802.1x authentication is enabled, all users must pass Web/client authentication to access network resources. This command is used to make certain network resources available to unauthenticated users. All users can access the authentication-exempted Web sites. Up to 50 authentication-exempted users are supported.

**Configuration Examples** The following example sets the Web site with IP address 172.16.0.1 as the authentication-exempted resource.

```
Ruijie(config)# http redirect direct-site 172.16.0.1
```

The following example sets the Web site with MAC address 0000:5e00:0101 as the authentication-exempted resource.

```
Ruijie(config)# http redirect direct-site 0000:5e00:0101
```

The following example sets the range from 10.0.0.1 to 12.0.0.1 as authentication-exempted network resources.

```
Ruijie(config)# http redirect direct-site range 10.0.0.1 12.0.0.1
```

**Related  
Commands**

| Command                   | Description                                  |
|---------------------------|----------------------------------------------|
| <b>show http redirect</b> | Displays the HTTP redirection configuration. |

**Platform** N/A  
**Description**

## 5.11 http redirect port

Use this command to redirect users' HTTP redirection request to a certain destination port.

Use the **no** form of this command to restore the default setting.

**http redirect port** *port-num*

**no http redirect port** *port-num*

**Parameter  
Description**

| Parameter       | Description                          |
|-----------------|--------------------------------------|
| <i>port-num</i> | Destination port of the HTTP request |

**Defaults** The default is port 80.

**Command  
Mode** Global configuration mode

**Usage Guide** When you access the network resource, you send HTTP packets. The access device can intercept such HTTP packets to detect your access. If the access device detects that an unauthenticated user is accessing the network resource, it stops the users with an authentication page/client download page.

By default, the access device intercepts users' HTTP packets with port 80 to check whether they are accessing network resources.

This command is used to change the destination port of HTTP packets that are intercepted by the access device.

Up to 10 ports can be configured, excluding port 80 and port 443.

**Configuration** The following example redirects users' HTTP requests with port 8080.

**Examples**

```
Ruijie(config)# http redirect port 8080
```

The following example does not redirect users' HTTP requests with port 80.

```
Ruijie(config)# no http redirect port 80
```

**Related  
Commands**

| Command                   | Description                                  |
|---------------------------|----------------------------------------------|
| <b>show http redirect</b> | Displays the HTTP redirection configuration. |

**Platform** N/A  
**Description**

## 5.12 http redirect session-limit

Use this command to set the total number of HTTP sessions that can be originated by an unauthenticated user, or the maximum number of HTTP sessions that can be originated by an unauthenticated user connected to each port.

Use the **no** form of this command to restore the default setting.

**http redirect session-limit** *session-num* [ **port** *port-session-num* ]

**no http redirect session-limit**

| Parameter Description | Parameter               | Description                                                                                                                                 |
|-----------------------|-------------------------|---------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <i>session-num</i>      | Total number of HTTP sessions that can be originated by an unauthenticated user, in the range from 1 to 255.                                |
|                       | <i>port-session-num</i> | The maximum number of HTTP sessions that can be originated by an unauthenticated user connected to each port, in the range from 1 to 65535. |

**Defaults** Totally 255 HTTP sessions can be originated by an unauthenticated user, and 300 HTTP sessions that can be originated by an unauthenticated user connected to each port.

**Command Mode** Global configuration mode

**Usage Guide** To prevent HTTP attacks caused by unauthenticated users from using up the TCP connections of the access device, the maximum number of HTTP sessions by unauthenticated users must be limited on the access device.

In addition to authentication, other programs may also occupy HTTP sessions. Therefore, it is not recommended that the maximum number of HTTP sessions by unauthenticated users be 1

**Configuration Examples** The following example sets the maximum number of HTTP sessions originated by an unauthenticated user to 4.

```
Ruijie(config)# http redirect session-limit 4
```

| Related Commands | Command                   | Description                                  |
|------------------|---------------------------|----------------------------------------------|
|                  | <b>show http redirect</b> | Displays the HTTP redirection configuration. |

**Platform** N/A  
**Description**

## 5.13 http redirect timeout

Use this command to set the timeout for the redirection connection maintenance.

Use the **no** form of this command to restore the default setting.

**http redirect timeout** *seconds*

**no http redirect timeout**

| Parameter<br>Description | Parameter      | Description                                                                                                   |
|--------------------------|----------------|---------------------------------------------------------------------------------------------------------------|
|                          | <i>seconds</i> | Set the timeout for the redirection connection maintenance, in the range from 1 to 10 in the unit of seconds. |

**Defaults** The default is 3 seconds.

**Command Mode** Global configuration mode

**Usage Guide** This command is used to set the timeout for the redirection connection maintenance. After the three-way handshake succeeds, the redirection connection is maintained until the user sends an HTTP GET/HEAD packet and the system returns an HTTP redirection packet. This timeout is set to prevent users from occupying TCP connections for long without sending any GET/HEAD packets.

**Configuration** The following example sets the timeout for the redirection connection maintenance to 4 seconds.

**Examples** Ruijie(config)# http redirect timeout 4

| Related<br>Commands | Command                   | Description                                  |
|---------------------|---------------------------|----------------------------------------------|
|                     | <b>show http redirect</b> | Displays the HTTP redirection configuration. |

**Platform Description** N/A

## 5.14 ip

Use this command to set an IP address for the portal server.

Use the **no** form of this command to restore the default setting.

**port** { *ip-address* }

**no port**

| Parameter<br>Description | Parameter         | Description                           |
|--------------------------|-------------------|---------------------------------------|
|                          | <i>ip-address</i> | The IPv4 address of the portal server |

**Defaults** No IP address is set for the portal server by default.

**Command Mode** Template configuration mode

**Usage Guide** This command takes place of the **http redirect** [*ip-address*] command, which is now hidden as a compatible command.

**Configuration** The following example sets the IP address of the eportalv1 template to 172.16.0.1.

```
Ruijie(config.tmplt.eportalv1)#ip 172.16.0.1
Ruijie(config.tmplt.eportalv1)#
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A

## 5.15 ip portal source-interface

Use this command to specify a communication port for the portal server.

Use the **no** form of this command to restore the default setting.

**ip portal source-interface** *interface-type interface-num*

**no ip portal source-interface**

**Parameter Description**

| Parameter             | Description |
|-----------------------|-------------|
| <i>interface-type</i> | Port type   |
| <i>interface-num</i>  | Port No.    |

**Defaults** No communication interface is specified by default.

**Command Mode** Global configuration mode

**Usage Guide** N/A

**Configuration** The following example specifies an aggregate port as the communication port.

```
Ruijie (config)# ip portal source-interface Aggregateport 1
```

**Platform Description** N/A

## 5.16 port

Use this command to set a surveillance port for the portal server.

Use the **no** form of this command to restore the default setting.

**port** { *port-num* }

**no port**

| Parameter Description | Parameter   | Description                                                                                    |
|-----------------------|-------------|------------------------------------------------------------------------------------------------|
|                       | <i>port</i> | The surveillance port of the portal server, which is on only the 2nd generation portal server, |

**Defaults** The default is 50100 based on the UDP protocol.

**Command Mode** Template configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example sets the surveillance port number of the eportalv2 server to 10000.

```
Ruijie(config.tmplt.eportalv2)#port 10000
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 5.17 redirect

Use this command to specify the encapsulation format of the Web-auth URL.

**redirect** { *http* | *js* }

**no redirect**

| Parameter Description | Parameter   | Description                      |
|-----------------------|-------------|----------------------------------|
|                       | <i>http</i> | HTTP encapsulation format        |
|                       | <i>js</i>   | Java Script encapsulation format |

**Defaults** The default encapsulation format is Java Script.



**Command** Template configuration mode  
**Mode**

**Usage Guide** N/A

**Configuration** The following example specifies HTTP as the encapsulation format of the Web-auth URL.

**Examples** Ruijie(config.tmplt.eportalv2)#redirect http

**Platform**  
**Description** N/A

## 5.18 show web-auth acl

Use this command to display whitelist configuration.

**show web-auth acl [white-url ]**

**Parameter**  
**Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Command** Privileged EXEC mode  
**Mode**

**Usage Guide** The command is used to check the whitelist configuration of web authentication.

**Configuration** The following example displays whitelist configuration.

**Examples** Ruijie# show web-auth acl

```
White URL List:0
-----
```

**Platform**  
**Description** N/A

## 5.19 show web-auth authmng

Use this command to display authentication experience data.

**show web-auth authmng [statistic | abnormal]**

**Parameter**  
**Description**

| Parameter | Description |
|-----------|-------------|
|-----------|-------------|

|     |     |
|-----|-----|
| N/A | N/A |
|-----|-----|

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays authentication experience data.

**Examples** Ruijie# show web-auth authmng statistic

The following example displays abnormal authentication experience data.

```
Ruijie# show web-auth authmng abnormal
record num:0, value:3000, max-num:1000, clock:1
```

| Field      | Description                                                                                                              |
|------------|--------------------------------------------------------------------------------------------------------------------------|
| record num | Number of records.                                                                                                       |
| value      | Timeout period in the unit of ms. By default, one abnormal record is generated when the timeout exceeds 3s.              |
| max-num    | Maximum number of records.                                                                                               |
| clock      | The time when the record is written into flash in the range from 0 o'clock to 23 o'clock. The default time is 1 o'clock. |

Abnormal records are stored in the directory: /data/security/authmanage/webauth/.

**Platform Description** N/A

## 5.20 show web-auth control

Use this command to display the authentication configuration.

**show web-auth control**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration Examples** The following example displays the authentication configuration and statistics information on the interface.

```
Ruijie(config)#show web-auth control
Port                Control  Server Name          Online User Count
-----
GigabitEthernet 0/1  On      <not configured>    0
Ruijie(config)#
```

| Field             | Description                                                                                                              |
|-------------------|--------------------------------------------------------------------------------------------------------------------------|
| Port              | Name of the authentication port.                                                                                         |
| Control           | Displays whether the Web authentication is enabled on the port or not.                                                   |
| Server Name       | The customized server name on the port. <b>&lt;not configured&gt;</b> indicates the server name has not been configured. |
| Online User Count | The number of online users on this port.                                                                                 |

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 5.21 show web-auth direct-arp

Use this command to display the address range of the authentication-exempted ARP.

**show web-auth direct-arp**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** | N/A

**Configuration Examples** The following example displays the address range of the authentication-exempted ARP.

```
Ruijie(config)#show web-auth direct-arp
Direct arps:
Address      Mask
-----
1.1.1.1      255.255.255.255
2.2.2.2      255.255.255.255
```

```
Ruijie (config) #
```

| Field   | Description   |
|---------|---------------|
| Address | IPv4 address. |
| Mask    | IPv4 mask.    |

#### Related Commands

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 5.22 show web-auth direct-host

This command is used to display the Web authentication-exempted users.

**show web-auth direct-host**

#### Parameter Description

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration Examples** The following example displays the Web authentication-exempted users.

```
Ruijie# show web-auth direct-host
Direct hosts:
  Address           Mask           Port   ARP Binding  Group  Description
  -----
  192.168.0.1       255.255.255.255  Gi0/2   On           N/A    N/A
  192.168.4.11     255.255.255.255  Gi0/10  On           N/A    N/A
  192.168.5.0      255.255.255.0   Gi0/16  Off          N/A    N/A
```

| Field   | Description                                        |
|---------|----------------------------------------------------|
| Address | IP address of the user free of authentication      |
| Mask    | IP address mask of the user free of authentication |

|             |                                                             |
|-------------|-------------------------------------------------------------|
| Port        | Access device port that is bound with the user's IP address |
| ARP Binding | Enable/Disable ARP binding                                  |

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 5.23 show web-auth direct site

Use this command to display the range of the Web authentication-exempted network resources.

**show web-auth direct-site**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** No network resource without authentication is set.

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration Examples** The following example displays the range of the Web authentication-exempted network resources without authentication.

```
Ruijie(config)#show web-auth direct-site
Direct sites:
  Address      Mask          ARP Binding
  -----
  1.1.1.1      255.255.255.255 Off
  2.2.2.2      255.255.255.255 On
Ruijie(config)#
```

| Field       | Description                                           |
|-------------|-------------------------------------------------------|
| Address     | IP address.                                           |
| Mask        | IP mask.                                              |
| ARP Binding | Displays whether the ARP binding function is enabled. |

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 5.24 show web-auth parameter

Use this command to display the HTTP redirect configuration.

**show web-auth parameter**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration Examples** The following example displays the HTTP redirect configuration

```
Ruijie# show web-auth parameter
  session-limit: 10
  timeout:      5
```

| Field         | Description                                                                |
|---------------|----------------------------------------------------------------------------|
| session-limit | Total number of HTTP sessions that are created by an unauthenticated user. |
| timeout       | Timeout interval of the redirection connection.                            |

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 5.25 show web-auth portal-check

Use this command to display the portal-check configuration.

**show web-auth portal-check**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the portal-check configuration.

**Examples**

```
Ruijie#sh web portal-check
Check:      Enable
Interval:   3s
Timeout:    5s
Retransmit: 3
Escape:     Enable
Nokick:     Disable
```

**Platform Description** N/A

**5.26 show web-auth rdport**

Use this command to display the TCP interception port.

**show web-auth rdport**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the TCP interception port.

**Examples**

```
Ruijie#show web-auth rdport
Rd-Port:
```

```
80 443
Ruijie#
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 5.27 show web-auth syslog ip

Use this command to display online and offline records about users.

**show web-auth syslog ip** *ip-address*

**Parameter  
Description**

| Parameter         | Description          |
|-------------------|----------------------|
| <i>ip-address</i> | A user's IP address. |

**Defaults** N/A

**Command  
Mode** Privileged EXEC mode

**Usage Guide** This command cannot be used to save original data after hot backup.

**Configuration** The following example displays online and offline records of users.

**Examples**

```
Ruijie#show web-auth syslog ip 192.168.197.35
Address: 192.168.197.35 Core-index 0 Current index 2
Index:          0
Time:           2015-10-16 20:37:34
Behavior:       ONLINE
Mac:           00d0.f822.33e7
Vid:           101
Port:          Gi3/1
Timeused:       0d 00:00:00
Flow_up:        0
Flow_down:      0

Index:          1
Time:           2015-10-16 20:42:08
Behavior:       OFFLINE
Mac:           00d0.f822.33e7
Vid:           101
```



|            |             |
|------------|-------------|
| Port:      | Gi3/1       |
| Timeused:  | 0d 00:04:27 |
| Flow_up:   | 2107872     |
| Flow_down: | 2108224     |

| Field     | Description                       |
|-----------|-----------------------------------|
| Index     | The number of the record.         |
| Time      | Time when the record is made.     |
| Behavior  | Online or offline behavior.       |
| MAC       | The Mac address of a user.        |
| Vid       | The VLAN ID of a user.            |
| Port      | The user port.                    |
| Timeused  | The time when a user gets online. |
| Flow UP   | The uplink traffic of a user.     |
| Flow down | The downlink traffic of a user.   |

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform**

N/A

**Description**

## 5.28 show web-auth template

Use this command to display the portal server configuration.

**show web-auth template**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults**

N/A

**Command Mode**

Privileged EXEC mode

**Usage Guide**

Use this command to display the portal server configuration.

**Configuration**

The following example displays the port server configuration.

**Examples**

```
Ruijie#show web-auth template
Webauth Template Settings:
-----
Name:      eportalv1
Url:       http://17.17.1.21:8080/eportal/index.jsp
Ip:        17.17.1.21
BindMode:  ip-mac-mode
Type:      v1
-----
Name:      eportalv2
Url:       http://17.17.1.21:8080/eportal/index.jsp
Ip:        17.17.1.21
BindMode:  ip-only-mode
Type:      v2
Port:      50100
Acctmlist:
Authmlist:
Ruijie#
```

| Field     | Description                                                                                                                  |
|-----------|------------------------------------------------------------------------------------------------------------------------------|
| Name      | Template name.                                                                                                               |
| Url       | Server homepage address.                                                                                                     |
| Ip        | Server IP address.                                                                                                           |
| Type      | Server type, including the first generation portal server v1, the second generation portal server v2, and internal is intra. |
| Port      | The protocol packet communication port of the server, which is on only the second generation portal server.                  |
| Acctmlist | Accounting method list name, which is on the second generation portal and internal servers.                                  |
| Authmlist | Authentication method list name. which is on only the second generation portal and internal servers.                         |

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform**

N/A

**Description**

## 5.29 show web-auth user

Use this comma to display the online information, including IP address, interface, and online duration, of all users or the specified users.

**show web-auth user** { all | ip *ip-address* | mac *mac-address* | name *name-string* }

| Parameter Description | Parameter          | Description               |
|-----------------------|--------------------|---------------------------|
|                       | <i>ip-address</i>  | IPv4 address of the user. |
|                       | <i>mac-address</i> | MAC address of the user.  |
|                       | <i>name-string</i> | User name.                |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration Examples** The following example displays the global Web authentication configuration and statistics.

```
Ruijie# show web-auth user all
Current user num : 4, online 2
```

| Address      | Online | Time Limit  | Time Used   | Status  | Name |
|--------------|--------|-------------|-------------|---------|------|
| 192.168.0.11 | On     | 0d 01:00:00 | 0d 00:15:10 | Active  |      |
| 192.168.0.13 | On     | 0d 01:00:00 | 0d 00:00:59 | Active  | 111  |
| 192.168.0.25 | Off    | 0d 01:00:00 | 0d 00:00:59 | Create  |      |
| 192.168.0.46 | Off    | 0d 01:00:00 | 0d 01:00:00 | Destroy | 222  |

```
Ruijie# show web-auth user ip 192.168.0.11
Address      : 192.168.0.11
Mac         : 00d0.f800.2233
Port        : Gi0/2
Online      : On
Time Limit  : 0d 01:00:00
Time Used   : 0d 00:15:10
Time Start  : 2009-02-22 20:05:10
Status      : Active
```

| Field      | Description                                        |
|------------|----------------------------------------------------|
| Address    | IP address of the user                             |
| Mac        | MAC address of the user                            |
| Port       | Access device port connected to the user           |
| Online     | Whether the user is online                         |
| Time Limit | Available duration of the user. 0 means unlimited. |
| Time Used  | Online duration of the user                        |

|            |                                                                                                                                                                                |
|------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Time Start | Time when the user passes authentication and gets online                                                                                                                       |
| Status     | User status. Active means the user is normally online, Create means the user is created without any settings, Destroy means the user is deleted with its settings not cleared. |

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description**

N/A

## 5.30 url

Use this command to set the portal server URL.

Use the **no** form of this command to restore the default setting.

**url** *url-string*

**no url**

**Parameter Description**

| Parameter         | Description                                                                                                           |
|-------------------|-----------------------------------------------------------------------------------------------------------------------|
| <i>url-string</i> | Portal server URL, starting with <b>http://</b> or <b>https://</b> . The maximum length of this address is 255 bytes. |

**Defaults**

On the first/second/inner/wifidog auth, no portal server URL is set by default.

On WeChat auth, the URL when MCP/WMC server adopts WeChat and MSG auth by default.

**Command Mode**

Template configuration mode

**Usage Guide**

This command takes place of the **http redirect homepage** [ *url-string* ] command, which is now hidden as a compatible command.,

If no URL is specified, the default URL in the **http://[ ip-address ]** format will be adopted, among which **ip-address** is the IP address of the server.

**Configuration Examples**

The following example sets the eportalv1 template URL to **http://www.web-auth.net/login**.

**Examples**

```
Ruijie(config.tmplt.eportalv1)#url http://www.web-auth.net/login
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform**

N/A

**Description**

## 5.31 web-auth acl

The whitelist users can access partial network resources before auth, and the blacklist users can not access partial network resources after auth. Use **no** form of this command to restore the default setting.

**web-auth acl** {white-url name }

**no web-auth acl** { white-url name }

| Parameter Description | Parameter | Description   |
|-----------------------|-----------|---------------|
|                       | name      | Whitelist URL |

**Command Mode** Global configuration mode

**Usage Guide** The command is used to check the whitelist configuration of web authentication.

**Configuration** The following example configures whitelist.

**Examples** Ruijie (config)# web-auth acl white-url www.ruijie.com.cn

**Platform Description** N/A

## 5.32 web-auth dhcp-check

Use this command to enable DHCP IP address check.

Use **no** form of this command to restore the default setting.

**web-auth dhcp-check**

**no web-auth dhcp-check**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** DHCP IP address check is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** Only users whose IP addresses are allocated by DHCP are allowed to take authentication.

**Configuration** The following example enables DHCP IP address check.

**Examples** `Ruijie (config)# web-auth dhcp-check`

**Platform** N/A  
**Description**

### 5.33 web-auth dhcp-check vlan

Use this command to check whether the IP address of a client is assigned by the DHCP server.  
 Use the **no** form of this command to restore the default setting.

**web-auth dhcp-check {vlan [vlan-list]}**  
**no web-auth dhcp-check**

**Parameter**  
**Description**

| Parameter | Description                                                                            |
|-----------|----------------------------------------------------------------------------------------|
| vlan-list | Indicates the VLAN range in which DHCP address check needs to be enabled in interface. |

**Defaults** By default, this function is disabled.

**Command** Interface configuration mode  
**Mode**

**Usage Guide** N/A

**Configuration** The following example checks whether the IP address of a client is assigned by the DHCP server.

**Examples** `Ruijie(config-if-TenGigabitEthernet 3/1)# web-auth dhcp-check vlan 1,3-4`

**Related**  
**Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

### 5.34 web-auth dhcp-server check

Use this command to disable DHCP server detection.

**no web-auth dhcp-server check**

Use this form of this command to restore the default setting.

**web-auth dhcp-server check**

**Parameter**

| Parameter | Description |
|-----------|-------------|
|-----------|-------------|

|                    |     |     |
|--------------------|-----|-----|
| <b>Description</b> |     |     |
|                    | N/A | N/A |

**Defaults** By default, this function is enabled.

**Command Mode** Global configuration mode

**Usage Guide** N/A

**Configuration** The following example disables DHCP server detection.

**Examples** Ruijie (config)# no web-auth dhcp-server check

|                         |                |                    |
|-------------------------|----------------|--------------------|
| <b>Related Commands</b> | <b>Command</b> | <b>Description</b> |
|                         | N/A            | N/A                |

**Platform** N/A

**Description**

## 5.35 web-auth direct-host

Use this command to set the authentication-exempted IP/MAC address range.

Use the **no** form of this command to restore the default setting.

**web-auth direct-host** { *ipv4-address* [ *ip-mask* ] [ **arp** ] | *ipv6-address* } [ **port** *interface-name* ]

**no web-auth direct-host** { *ipv4-address* [ *ip-mask* ] | *ipv6-address* }

|                              |                                   |                                                                                                                                                                                                 |
|------------------------------|-----------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Parameter Description</b> | <b>Parameter</b>                  | <b>Description</b>                                                                                                                                                                              |
|                              | <i>ip-address</i>                 | IPv4 address of authentication-exempted user                                                                                                                                                    |
|                              | <i>ip-mask</i>                    | Mask of the IPv4 address free of authentication (optional).                                                                                                                                     |
|                              | <b>port</b> <i>interface-name</i> | Binds user's IP address with a port of the access device (optional).                                                                                                                            |
|                              | <b>arp</b>                        | If ARP CHECK is enabled on the access device, keyword arp is needed for ARP binding of the IP address used by users free of authentication (optional). It is necessary for IPv4 addresses only. |

**Defaults** No user is exempted from authentication. All users must pass the Web authentication to access the restricted network resources.

**Command Mode** Global configuration mode

**Usage Guide** When a user is set to be exempted from authentication, it can access all reachable network resources

without Web authentication.

Up to 50 users can be set to be exempted from authentication.

**Configuration Examples** The following example sets the user with the IP address 172.16.0.1 to be exempted from authentication.

```
Ruijie(config)# web-auth direct-host 172.16.0.1
```

The following example sets the user with the IP address FF02::/64 to be exempted from authentication.

```
Ruijie(config)# web-auth direct-host FF02::/64
```

**Related Commands**

| Command                          | Description                                    |
|----------------------------------|------------------------------------------------|
| <b>show web-auth direct-host</b> | Displays the users free of Web authentication. |

**Platform** N/A  
**Description**

## 5.36 web-auth enable

Use this command to enable the Web authentication function on a port. This command is compatible with the **web-auth port-control** command.

Use the **no** form of this command to restore the default setting.

**web-auth enable [ eportalv1 | eportalv2 | *template-name* ]**

**no web-auth enable**

**Parameter Description**

| Parameter            | Description                                            |
|----------------------|--------------------------------------------------------|
| <b>eportalv1</b>     | Applies the first generation authentication template.  |
| <b>eportalv2</b>     | Applies the second generation authentication template. |
| <i>template-name</i> | Customized template.                                   |

**Defaults** The Web authentication function is disabled on the port by default.  
 The **default** template is eportalv1.

**Command Mode** Interface configuration mode

**Usage Guide** To ensure the Web authentication function, the authentication page URL should be configured. Because template applications are integrated into the controlled switch, the template or the server applications of the interface where the Web authentication function is disabled will be automatically cleared. This command is compatible with the original command that used to apply the template or server application in the global configuration mode.



**Configuration** The following example enables the Web authentication function on gigabitEthernet 0/14.

**Examples**

```
Ruijie(config)# interface GigabitEthernet 0/14
Ruijie(config-if-GigabitEthernet 0/14)# web-auth enable
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 5.37 web-auth linkdown-timeout

Use this command to set the link-down timeout.

Use the **no** form of this command to restore the default setting.

**web-auth linkdown-timeout** { *timeout* }

**no web-auth linkdown-timeout**

| Parameter Description | Parameter      | Description       |
|-----------------------|----------------|-------------------|
|                       | <i>timeout</i> | Link-down timeout |

**Defaults** By default, the timeout is 60 seconds.

**Command Mode** Global configuration mode

**Usage Guide** N/A

**Configuration** The following example sets the link-down timeout to 30 seconds.

**Examples**

```
Ruijie (config)# web-auth linkdown-timeout 30
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 5.38 web-auth logging enable

Use this command to enable the Web authentication syslog function.

Use the **no** form of this command to restore the default setting.

**web-auth logging enable { num }**  
**no web-auth logging enable**

**Parameter  
Description**

| Parameter  | Description                                                                                                                                               |
|------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>num</i> | The syslog printing rate, indicating how many syslog entries can be printed in a second. The value is in the range from 0 to 65535. 0 indicates no limit. |

**Defaults** This function is disabled by default.

**Command  
Mode** Global configuration mode

**Usage Guide** This command is used to limit the syslog printing rate for only the functional module.

**Configuration** The following example enables the syslog printing with no rate limit.

**Examples** Ruijie(config)# web-auth logging enable 0

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform  
Description** N/A

## 5.39 web-auth portal

Use this command to map different portal servers with users in different subnets.

Use the **no** form of this command to restore the default setting.

**web-auth portal { eportalv1 | eportalv2| name }**  
**no web-auth portal { eportalv1 | eportalv2| name }**

**Parameter  
Description**

| Parameter   | Description        |
|-------------|--------------------|
| <i>name</i> | Portal server name |

**Defaults** This function is disabled by default.

**Command  
Mode** Global configuration mode

**Usage Guide** N/A

**Configuration**  
**Examples**

N/A

**Platform**  
**Description**

N/A

## 5.40 web-auth portal extension

Use this command to enable portal extension to support CMCC portal server.

Use the **no** form of this command to restore the default setting.

**web-auth portal extension**

**no web-auth portal extension**

**default web-auth portal extension**

**Parameter**  
**Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** By default, Ruijie portal server is supported.

**Command** Global configuration mode  
**Mode**

**Usage Guide** N/A

**Configuration** The following example disables portal extension.

**Examples** Ruijie (config)# no web-auth portal extension

**Platform**  
**Description**

N/A

## 5.41 web-auth portal key

Use this command to set the communication key between the access device and the authentication server.

Use the **no** form of this command to clear the communication key between the redirected Web request of a user and the authentication server.

**web-auth portal key** *key-string*

**no web-auth portal key**

**Parameter**  
**Description**

| Parameter         | Description                                         |
|-------------------|-----------------------------------------------------|
| <i>key-string</i> | Communication key between the access device and the |

|  |                                                                    |
|--|--------------------------------------------------------------------|
|  | authentication server. The maximum length of the key is 255 bytes. |
|--|--------------------------------------------------------------------|

**Defaults** No key is set by default.

**Command Mode** Global configuration mode

**Usage Guide** To use the Web authentication function, the communication key between the access device and the authentication server must be set.

**Configuration Examples** The following example sets the communication key between the access device and the authentication server to web-auth.

```
Ruijie(config)# web-auth portal key web-auth
```

**Related Commands**

| Command                       | Description                                       |
|-------------------------------|---------------------------------------------------|
| <b>http redirect</b>          | Sets the IP address of the authentication server. |
| <b>http redirect homepage</b> | Sets the address of the authentication homepage.  |
| <b>web-auth port-control</b>  | Enables the Web authentication on the port.       |

**Platform** N/A

**Description**

## 5.42 web-auth portal-check

Use this command to enable portal server check.

Use the **no** form of this command to restore the default setting.

**web-auth portal-check [ interval *intsec* ] [ timeout *tosec* ] [ retransmit *retires* ]**

**no web-auth porta-check**

**Parameter Description**

| Parameter      | Description                                                                                        |
|----------------|----------------------------------------------------------------------------------------------------|
| <i>intsec</i>  | Check interval in the range from 1 to 1,000 in the unit of seconds.<br>The default is 10 seconds.  |
| <i>tosec</i>   | Timeout interval in the range from 1 to 1,000 in the unit of seconds.<br>The default is 5 seconds. |
| <i>retires</i> | Retry count in the range from 1 to 100.<br>The default is 3.                                       |

**Defaults** Portal server check is disabled by default.

**Command** Global configuration mode  
**Mode**

**Usage Guide** It is recommended to use this command when there are multiple servers.

**Configuration** The following example enables portal server check.

**Examples** Ruijie (config)# web-auth portal-check interval 20 timeout 2 retransmit 2

**Platform**  
**Description** N/A

## 5.43 web-auth portal-escape

Use this command to enable portal-escape function.

Use the **no** form of this command to restore the default setting.

**web-auth portal-escape**

**no web-auth portal-escape**

| Parameter<br>Description | Parameter | Description |
|--------------------------|-----------|-------------|
|                          |           | N/A         |

**Defaults** This function is disabled by default.

**Command** Global configuration mode  
**Mode**

**Usage Guide** Use this command together with **web-auth portal-check** command to sustain key services when the portal server is abnormal.

**Configuration** The following example enables portal-escape function.

**Examples** Ruijie (config)# web-auth portal-escape

**Platform**  
**Description** N/A

## 5.44 web-auth template

Use this command to create the first generation authentication template and enter its configuration mode.

**web-auth template eportalv1**

Use this command to create the customized first generation authentication template and enter its

configuration mode.

**web-auth template** { template-name } v1

Use this command to create the second generation authentication template and enter its configuration mode.

**web-auth template eportalv2**

Use this command to create the customized second generation authentication template and enter its configuration mode.

**web-auth template** { template-name } v2

Use this command to remove the template.

**no web-auth template** { template-name }

**Parameter  
Description**

| Parameter            | Description                                              |
|----------------------|----------------------------------------------------------|
| <b>eportalv1</b>     | Applies the first generation authentication template.    |
| <b>eportalv2</b>     | Applies the second generation authentication template.   |
| <i>template-name</i> | Sets the name of the customized authentication template. |

**Defaults**

No template is configured by default.

**Command  
Mode**

Global configuration mode

**Usage Guide**

You can enter the **eportalv1** template mode to configure the IP address and URL instead of executing the **http redirect** and **http redirect homepage** commands. The **http redirect** and **http redirect homepage** commands are compatible on the device, which will be converted to this command.

The original command **portal-server** is compatible on the device, which will be converted to this command.

To ensure the Web authentication function, configure and apply a functional portal server. The **eportalv1** template is applied by default. The IP address, the URL and the communication secret key of the **eportalv1** template should be configured. If no URL format is specified, the default **http://[ ip-address ]** format will be adopted. The IP address of the portal server is the network resource exempted from authentication, so the unauthenticated user can access it. The device limits the uplink traffic that accesses the IP address to prevent attacks. The upper limit is proportionate to the number of the physical ports.

**Configuration**

The following example configures the **eportalv1** template.

**Examples**

```
Ruijie(config)# web-auth template eportalv1
Ruijie(config.tmplt.eportalv1) #
```

**Related**

| Command | Description |
|---------|-------------|
|---------|-------------|

|                 |     |     |
|-----------------|-----|-----|
| <b>Commands</b> |     |     |
|                 | N/A | N/A |

**Platform** N/A

**Description**

## 5.45 web-auth update-interval

Use this command to set the interval at which the online user information is updated.

Use the **no** form of this command to restore the default setting.

**web-auth update-interval** {seconds}

**no web-auth update-interval**

|                              |                  |                                                                                   |
|------------------------------|------------------|-----------------------------------------------------------------------------------|
| <b>Parameter Description</b> | <b>Parameter</b> | <b>Description</b>                                                                |
|                              | seconds          | Update interval in seconds, in the range from 30 to 3,600 in the unit of seconds. |

**Defaults** The default is 180 seconds.

**Command** Global configuration mode

**Mode**

**Usage Guide** N/A

**Configuration Examples** The following example sets the interval at which the online user information is updated to 60 seconds.

```
Ruijie(config)# web-auth update-interval 60
```

|                         |                |                    |
|-------------------------|----------------|--------------------|
| <b>Related Commands</b> | <b>Command</b> | <b>Description</b> |
|                         | N/A            | N/A                |

**Platform** N/A

**Description**

## 5.46 web-auth vlan-control

Use this command to configure the authenticable VLAN list.

Use the **no** form of this command to restore the default setting.

**web-auth vlan-control** vlan-list

**no web-auth vlan-control**

|                  |                  |                    |
|------------------|------------------|--------------------|
| <b>Parameter</b> | <b>Parameter</b> | <b>Description</b> |
|------------------|------------------|--------------------|

|                    |                  |                         |
|--------------------|------------------|-------------------------|
| <b>Description</b> |                  |                         |
|                    | <i>vlan-list</i> | Authenticable VLAN list |

**Defaults** The default is port-control authentication.

**Command** Interface configuration mode

**Mode**

**Usage Guide** N/A

**Configuration** Use this command to configure the authenticable VLAN list.

**Examples** Ruijie (config-if-GigabitEthernet 0/1)# web-auth vlan-control 1

**Platform** N/A  
**Description**

## 6 SCC Commands

### 6.1 Identifier Description

The following is a list of command identifiers used in commands for reference:

| Identifier | Description                                                         |
|------------|---------------------------------------------------------------------|
| vlanlist   | Authentication-exemption VLAN list                                  |
| interval   | Authenticated-user online-status detection interval                 |
| thredshold | The traffic threshold of authenticated-user online-status detection |

### 6.2 authmanage user-escape

Use this command to enable user escape.

**authmanage user-escape** { **enable** | **time** *time-value1* | **when authentication-time** *time-value2* | **when timeout-ratio** *ratio-number* | **life** *life-value* }

Use this command to disable user escape.

**no authmanage user-escape** { **enable** | **time** | **when authentication-time** | **when timeout-ratio** | **life** }

|                                        |                    |                                                                                                                                                                                  |
|----------------------------------------|--------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Parameter</b><br><b>Description</b> | <b>Parameter</b>   | <b>Description</b>                                                                                                                                                               |
|                                        | <i>time-value1</i> | Indicates the escape duration, in the unit of minutes.                                                                                                                           |
|                                        | <i>time-value2</i> | Indicates the authentication duration, in the unit of ms. When the value exceeds that of <i>time-value2</i> , part of users is allowed to escape for <i>time-value1</i> minutes. |



|                     |                                                                                                                                                     |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>ratio-number</i> | When the ratio of authenticated users exceeds the value of <i>ratio-number</i> , part of users is allowed to escape for <i>time-value1</i> minutes. |
| <i>life-value</i>   | Indicates the escape lifetime, in the unit of minute.                                                                                               |

**Defaults**

*time-value1*: The value is 30 minutes by default and can be set to 10 minutes to 240 minutes.

*time-value2*: The default value is 5,000, which indicates that part of users are allowed to escape when the average handling duration exceeds 5s. The value ranges from 1,000 to 10,000.

*ratio-number*: The default value is 10, which indicates that the part of users are allowed to escape when the ratio of timeout authentication users exceed 10%. The value ranges from 1 to 100.

*life-value*: The value is 30 minutes by default and can be set to 10 minutes to 240 minutes.

**Command**

Global configuration mode

**Mode****Default Level**

14

**Usage Guide**

User escape needs to be enabled only when the system is detected to fail timely authentication.

**Configuration**

The following example enables user escape in global configuration mode.

**Examples**

```
Ruijie(config)# authmanage user-escape enable
```

**Verification**

Run **show authmanage user-escape** to display user escape configuration.

**Prompt****Messages**

N/A

**Common****Errors**

N/A

**Platforms**

This command is supported only on switches.

## 6.3 direct-vlan

Use this command to configure authentication-exemption VLANs.

**direct-vlan** *vlanlist*

Use this command to delete the authentication-exemption VLAN configuration.

**no direct-vlan** *vlanlist*

**Parameter Description**

| Parameter       | Description                                         |
|-----------------|-----------------------------------------------------|
| <i>vlanlist</i> | VLAN list, which can be a VLAN or a group of VLANs. |

|                               |                                                                                                                                                                                                                                                                                                             |
|-------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Defaults</b>               | By default, no authentication-exemption VLANs are configured.                                                                                                                                                                                                                                               |
| <b>Command Mode</b>           | Global/Interface configuration mode                                                                                                                                                                                                                                                                         |
| <b>Default Level</b>          | 14                                                                                                                                                                                                                                                                                                          |
| <b>Usage Guide</b>            | You can use this command to configure authentication-exemption VLANs, so that users in specified VLANs can access the Internet without experiencing dot1x or Web authentication.<br>In interface configuration mode, the command takes effect on users from authentication-exempted VLANs of the interface. |
| <b>Configuration Examples</b> | The following example configures the VLAN2 as an authentication-exemption VLAN.                                                                                                                                                                                                                             |
| <b>Examples</b>               | <pre>Ruijie(config)# direct-vlan 2</pre>                                                                                                                                                                                                                                                                    |
| <b>Verification</b>           | Use the <b>show direct-vlan</b> command to display the authentication-exemption VLAN configuration.                                                                                                                                                                                                         |
| <b>Prompt Messages</b>        | N/A                                                                                                                                                                                                                                                                                                         |
| <b>Common Errors</b>          | N/A                                                                                                                                                                                                                                                                                                         |
| <b>Platforms</b>              | N/A                                                                                                                                                                                                                                                                                                         |

## 6.4 nac-author-user maximum

Use this command to configure the limit on IPv4 user capacity on a port.

**nac-author-user maximum** *max-user-num*

Use this command to remove the limit on the IPv4 user capacity on a port.

**no nac-author-user maximum**

| Parameter Description | Parameter           | Description                                                                    |
|-----------------------|---------------------|--------------------------------------------------------------------------------|
|                       | <i>max-user-num</i> | Defines the maximum number of IPv4 access users. The range is from 1 to 1,024. |

**Defaults** By default, the number of IPv4 access users is not limited.

**Command Mode** Interface configuration mode

**Default Level** 14

**Usage Guide** Use this command to configure the maximum number of IPv4 access users on a port.

**Configuration** The following example restricts the maximum number of IPv4 users to 100 on interface Gi 0/1.

**Examples**

```
Ruijie(config)#int gigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)#nac-author-user maximum 100
```

**Verification**

1. Use the **show nac-author-user** command to display the current and the maximum numbers of IPv4 access users on all ports.
2. Use the **show nac-author-user interface interface-name** command to display the current and the maximum numbers of IPv4 access users on the specified port.

**Prompt Messages** N/A

**Common Errors** N/A

**Platforms** N/A

## 6.5 offline-detect interval threshold

Use this command to configure user online-status detection, so that a user is disconnected when its traffic is lower than a specified threshold or is zero in a specified interval.

**offline-detect interval interval threshold threshold**

Use this command to restore the default user online-status detection configuration.

**default offline-detect**

Use this command to disable user online-status detection.

**no offline-detect**

**Parameter Description**

| Parameter        | Description                                                                                                                                                                                |
|------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>interval</i>  | Indicates the interval of traffic detection (in minutes). The range is from 1 to 65,535 in minutes on a non-switch device or from 6 to 65,535 in minutes on a switch.                      |
| <i>threshold</i> | Indicates the traffic threshold (in bytes). The range is from 0 to 4,294,967,294 in bytes. The value of 0 indicates that the user is disconnected when no traffic of the user is detected. |

**Defaults** By default, the detection interval is 8 hours and the traffic threshold is 0.

|                               |                                                                                                                                                                                                        |
|-------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Command Mode</b>           | Global configuration mode                                                                                                                                                                              |
| <b>Default Level</b>          | 14                                                                                                                                                                                                     |
| <b>Usage Guide</b>            | You can use this command to configure user online-status detection to enable the device to disconnect the authenticated user whose traffic is lower than a specified value and end accounting process. |
| <b>Configuration Examples</b> | The following example directly disconnects a user for the user's traffic is lower than 5 Kbytes within 5 minutes.<br><pre>Ruijie(config)#offline-detect interval 5 threshold 5120</pre>                |
| <b>Verification</b>           | Use the <b>show running</b> command to display the configuration of online-status detection for authenticated users.                                                                                   |
| <b>Prompt Messages</b>        | N/A                                                                                                                                                                                                    |
| <b>Common Errors</b>          | N/A                                                                                                                                                                                                    |
| <b>Platforms</b>              | N/A                                                                                                                                                                                                    |

## 6.6 show direct-vlan

Use this command to display the authentication-exemption VLAN configuration.

**show direct-vlan**

|                               |                                                                                                                                            |                    |
|-------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------|--------------------|
| <b>Parameter Description</b>  | <b>Parameter</b>                                                                                                                           | <b>Description</b> |
|                               | <i>interface-name</i>                                                                                                                      | Interface name     |
| <b>Command Mode</b>           | Privileged EXEC mode                                                                                                                       |                    |
| <b>Level</b>                  | 14                                                                                                                                         |                    |
| <b>Usage Guide</b>            | N/A                                                                                                                                        |                    |
| <b>Configuration Examples</b> | The following example displays the authentication-exemption VLAN configuration.<br><pre>Ruijie #show direct-vlan direct-vlan 5,7,100</pre> |                    |
| <b>Prompt</b>                 | N/A                                                                                                                                        |                    |

**Messages****Platforms** N/A**6.7 show nac-author-user interface**

Use this command to display the capacity limit and current number of IPv4 users on all interfaces or a specified interface.

**show nac-author-user** [ **interface** *interface-name* ]

| Parameter Description | Parameter             | Description    |
|-----------------------|-----------------------|----------------|
|                       | <i>interface-name</i> | Interface name |

**Command Mode** Privileged EXEC mode**Level** 14**Usage Guide** N/A**Configuration** The following example displays the current number and capacity limit of IPv4 users on interface Gi 0/1.

**Examples**

```
Ruijie#show nac-author-user interface gi 0/1
Port      Cur_num  Max_num
-----  -
Gi0/1     0        100
```

**Prompt Messages** N/A**Platforms** N/A**6.8 station-move permit**

Use this command to enable authenticated-user migration.

**station-move permit**

Use this command to disable authenticated-user migration.

**no station-move permit**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

|                               |                                                                                                                                                                                           |
|-------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Defaults</b>               | Authenticated-user migration is not permitted by default.                                                                                                                                 |
| <b>Command Mode</b>           | Global configuration mode                                                                                                                                                                 |
| <b>Level</b>                  | 14                                                                                                                                                                                        |
| <b>Usage Guide</b>            | You can enable the authenticated-user migration function to allow the online users to be authenticated again and get online from different physical locations (different ports or VLANs). |
| <b>Configuration Examples</b> | The following examples enables authenticated-user migration.<br><pre>Ruijie(config)#station-move permit</pre>                                                                             |
| <b>Verification</b>           | Use the <b>show running</b> command to check whether the authenticated-user migration function is enabled.                                                                                |
| <b>Prompt Messages</b>        | N/A                                                                                                                                                                                       |
| <b>Common Errors</b>          | N/A                                                                                                                                                                                       |
| <b>Platforms</b>              | N/A                                                                                                                                                                                       |

## 7 Global IP-MAC Binding Commands

### 7.1 address-bind

Use this command to configure global IP-MAC address binding. Use the **no** form of this command to restore the default setting.

**address-bind** { *ip-address* | *ipv6-address* } *mac-address*

**no address-bind** { *ip-address* | *ipv6-address* } *mac-address*

| Parameter   | Parameter           | Description              |
|-------------|---------------------|--------------------------|
| Description | <i>ip-address</i>   | IPv4 address to be bound |
|             | <i>ipv6-address</i> | IPv6 address to be bound |
|             | <i>mac-address</i>  | MAC address to be bound  |

**Defaults** N/A

**Command** Global configuration mode

**Mode**

**Usage Guide** N/A

**Configuration** The following example configures global IP-MAC address binding.

**Examples**

```
Ruijie# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)# address-bind 192.168.5.1 00d0.f800.0001
```

| Related Commands | Command                  | Description                                        |
|------------------|--------------------------|----------------------------------------------------|
|                  | <b>show address-bind</b> | Displays the IP address-MAC address binding table. |

**Platform** N/A

**Description**

### 7.2 address-bind install

Use this command to enable a binding policy globally. Use the **no** form of this command to restore the default setting.

**address-bind install**

**no address-bind install**

| Parameter | Parameter | Description |
|-----------|-----------|-------------|
|-----------|-----------|-------------|

|                    |     |     |
|--------------------|-----|-----|
| <b>Description</b> | N/A | N/A |
|--------------------|-----|-----|

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** If you bind an IP address to a MAC address, run this command to make the installation policy take effect.

**Configuration** The following example enables a binding policy.

**Examples**

```
Ruijie# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)# address-bind 192.168.5.1 00d0.f800.0001
Ruijie(config)# address-bind install
```

| <b>Related Commands</b> | <b>Command</b> | <b>Description</b> |
|-------------------------|----------------|--------------------|
|                         | N/A            | N/A                |

**Platform Description** N/A

## 7.3 address-bind ipv6-mode

This command is used to set the IPv6 address binding mode. Use the **no** form of this command to restore the default setting.

This command is also used to set the compatible mode.

**address-bind ipv6-mode { compatible | loose | strict }**

**no address-bind ipv6-mode**

| <b>Parameter Description</b> | <b>Parameter</b>  | <b>Description</b> |
|------------------------------|-------------------|--------------------|
|                              | <b>compatible</b> | Compatible mode    |
|                              | <b>loose</b>      | Loose mode         |
|                              | <b>strict</b>     | Strict mode        |

**Defaults** The default is strict mode.

**Command Mode** Global configuration mode.

**Usage Guide** N/A

**Configuration** The following example configures the IPv6 address binding mode.

**Examples**

```
Ruijie# configure terminal
```



```
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)# address-bind ipv6-mode compatible
```

| Related Commands | Command                         | Description                                           |
|------------------|---------------------------------|-------------------------------------------------------|
|                  | <b>show address-bind uplink</b> | Displays the exceptional port of the address binding. |

**Platform** N/A

**Description**

## 7.4 address-bind uplink

This command is used to configure the exception port. Use the **no** form of this command to restore the default setting.

**address-bind uplink** *interface-id*

**no address-bind uplink** *interface-id*

| Parameter          | Parameter           | Description                               |
|--------------------|---------------------|-------------------------------------------|
| <b>Description</b> | <i>interface-id</i> | Switching port or layer 2 aggregate port. |

**Defaults** All ports are non-exception ports by default.

**Command Mode** Global configuration mode.

**Usage Guide** If you have bound an IP address and a MAC address, the switch will discard the packets that have the same source IP address but different source MAC address.

If the port is an exceptional port and is installed (see address-bind install), this binding policy does not take effect.

**Configuration** The following example configures the exception port.

**Examples**

```
Ruijie# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)# address-bind uplink GigabitEthernet 0/1
```

| Related Commands | Command                         | Description                                       |
|------------------|---------------------------------|---------------------------------------------------|
|                  | <b>show address-bind uplink</b> | Displays the exceptional port of address binding. |

**Platform** N/A

**Description**

## 7.5 show address-bind

Use this command to display global IP address-MAC address binding.

**show address-bind**

|                     |                       |                    |
|---------------------|-----------------------|--------------------|
| <b>Parameter</b>    | <b>Parameter</b>      | <b>Description</b> |
| <b>Description</b>  | N/A                   | N/A                |
| <b>Defaults</b>     | N/A                   |                    |
| <b>Command Mode</b> | Privileged EXEC mode. |                    |
| <b>Usage Guide</b>  | N/A                   |                    |

**Configuration** The following example displays global IPv4 address-MAC address binding.

**Examples**

```
Ruijie#show address-bind
Total Bind Addresses in System : 1
IP Address          Binding MAC Addr
-----
192.168.5.1        00d0.f800.0001
```

| Field                          | Description                            |
|--------------------------------|----------------------------------------|
| Total Bind Addresses in System | IPv4 address-MAC address binding count |
| IP Address                     | Bound IP address                       |
| Binding MAC Addr               | Bound MAC address                      |

|                         |                     |                                         |
|-------------------------|---------------------|-----------------------------------------|
| <b>Related Commands</b> | <b>Command</b>      | <b>Description</b>                      |
|                         | <b>address-bind</b> | Enables IP address-MAC address binding. |

**Platform** N/A  
**Description**

## 7.6 show address-bind uplink

Use this command to display the exception port.

**show address-bind uplink**

|                     |                  |                    |
|---------------------|------------------|--------------------|
| <b>Parameter</b>    | <b>Parameter</b> | <b>Description</b> |
| <b>Description</b>  | N/A              | N/A                |
| <b>Defaults</b>     | N/A              |                    |
| <b>Command mode</b> | N/A              |                    |
| <b>Usage Guide</b>  | N/A              |                    |

**Configuration** The following example displays the exception port.

**Examples**

```
Ruijie#show address-bind uplink
Port      State
-----  -
Gi0/1     Enabled
Default   Disabled
```

| Field | Description                                                                                                                                       |
|-------|---------------------------------------------------------------------------------------------------------------------------------------------------|
| Port  | Short for exception ports. All ports are non-exception ports by default.                                                                          |
| State | Indicates whether the port is exception port. State Enabled indicates that it is an exception port while state Disabled indicates that it is not. |

**Related****Commands**

| Command                    | Description              |
|----------------------------|--------------------------|
| <b>address-bind uplink</b> | Sets the exception port. |

**Platform**

N/A

**Description**

## 8 Password-Policy Commands

### 8.1 password policy life-cycle

Use this command to set the password lifecycle. Use the **no** form of this command to restore the default setting.

**password policy life-cycle** *days*


**no password policy life-cycle**

| Parameter Description | Parameter   | Description                                                                     |
|-----------------------|-------------|---------------------------------------------------------------------------------|
|                       | <i>days</i> | Sets the password lifecycle, in the range from 1 to 65,535 in the unit of days. |

**Defaults** No password lifecycle is set by default.

**Command Mode** Global configuration mode

**Usage Guide** This command is used to set the password lifecycle. After the password lifecycle expires, the system reminds you to change the password when you login next time.

 This function is valid for the global password (the `enable password` and the `enable secret` commands) and the local user password (the `username name password password` command) while not valid for the password in line mode.

**Configuration Examples** The following example sets the password lifecycle to 90 days.

```
Ruijie(config)# password policy life-cycle 90
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

### 8.2 password policy min-size

Use this command to set the minimum length of the password. Use the **no** form of this command to restore the default setting.

**password policy min-size** *length*


**no password policy min-size**

| Parameter<br>Description | Parameter | Description   |
|--------------------------|-----------|---------------|
|                          |           | <i>length</i> |

**Defaults** No minimum length of the password is set by default.

**Command Mode** Privileged EXEC mode

**Usage Guide** This command is used to set the minimum length of the password,

-  This function is valid for the global password (the enable password and the enable secret commands) and the local user password (the username *name* password *password* command) while not valid for the password in line mode.

**Configuration** The following example sets the minimum length of the password to 8.

**Examples** Ruijie(config)# password policy min-size 8

| Related<br>Commands | Command | Description |
|---------------------|---------|-------------|
|                     |         | N/A         |

**Platform Description** N/A

### 8.3 password policy no-repeat-times

Use this command to ban the use of passwords used in the past several times. Use the no form of this command to restore the default setting.

**password policy no-repeat-times** *times*

**no password policy no-repeat-times**

| Parameter<br>Description | Parameter | Description  |
|--------------------------|-----------|--------------|
|                          |           | <i>times</i> |


**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** After this function is enabled, passwords used in the past several times are recorded. If the

new password has been used, the alarm message is displayed and password configuration fails.

This command is used to set the maximum number of password entries. When the actual number of password entries exceeds the configured number, the new password overwrites the oldest password.

 This function is valid for the global password (the `enable password` and the `enable secret` commands) and the local user password (the `username name password password` command) while not valid for the password in line mode.

#### Configuration

The following example bans the use of passwords used in the past five times.

#### Examples

```
Ruijie(config)# password policy no-repeat-times 5
```

#### Related Commands

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A

## 8.4 password policy strong

Use this command to enable strong password check.

**password policy strong**

**no password policy strong**

#### Parameter Description

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

#### Defaults

This function is disabled by default.


#### Command Mode

Global configuration mode

#### Usage Guide

If the following two kinds of passwords are set not matching the strength policy, the alarm message is displayed.

1. The password the same as the username.
2. The simple password containing only characters or numbers.

 This function is valid for the global password (the `enable password` and the `enable secret` commands) and the local user password (the `username name password password` command) while not valid for the password in line mode.

**Configuration** The following example configures the strong password check.

**Examples** `Ruijie(config)# password policy strong`

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 8.5 service password-encryption

Use this command to encrypt a password. Use the **no** form of this command to restore default setting.

**service password-encryption**

**no service password-encryption**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** This command is disabled by default. Various passwords are displayed in plain text, unless they are encrypted. After you run the **service password-encryption** and **show running** or **write** command to save your configuration, the password changes into cipher text. If you disable the command, the password in cipher text cannot be restored to plain text.

**Configuration** The following example encrypts the password:

**Examples** `Ruijie(config)# service password-encryption`

| Related Commands | Command                | Description                             |
|------------------|------------------------|-----------------------------------------|
|                  | <b>enable password</b> | Sets passwords of different privileges. |

**Platform Description** N/A

## 8.6 show password policy

Use this command to display the password security policy set by the user.

**show password policy**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** This command is used to display the password security policy set by the user.

**Configuration Examples** The following example displays the password security policy set by the user.

```
Ruijie#show password policy
Global password policy configurations:
Password encryption:           Enabled
Password strong-check:        Enabled
Password min-size:             Enabled (6 characters)
Password life-cycle:           Enabled (90 days)
Password no-repeat-times:      Enabled (max history record: 5)
```

| Field                    | Description                                        |
|--------------------------|----------------------------------------------------|
| Password encryption      | Whether to encrypt the password.                   |
| Password strong-check    | Whether to enable password strong-check.           |
| Password min-size        | Whether to set the minimum length of the password. |
| Password life-cycle      | Whether to set the password lifecycle.             |
| Password no-repeat-times |                                                    |

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A



## 9 Port Security Commands

### 9.1 switchport port-security

Use this command to configure port security and the way to deal with violation.

Use the **no** form of this command to restore the default setting.

**switchport port-security** [ violation { protect | restrict | shutdown } ]


**no switchport port-security** [ violation ]

| Parameter Description | Parameter       | Description                                                                                     |
|-----------------------|-----------------|-------------------------------------------------------------------------------------------------|
|                       | <b>protect</b>  | Discards the packets breaching security.                                                        |
|                       | <b>restrict</b> | Discards the packets breaching security and sends the Trap message.                             |
|                       | <b>shutdown</b> | Discards the packets breaching the security, sends the Trap message and disables the interface. |

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** With port security, you can strictly control the input on a specific port by restricting access to the MAC address and IP address (optional) of the port on the switch. After you configure some secure addresses for the port security-enabled port, only the packets from these addresses can be forwarded. In addition, you can also restrict the maximum number of secure addresses on a port. If you set the maximum value to 1 and configure one secure address for this port, the workstation (whose address is the configured secure Mac address) connected to this port will occupy all the bandwidth of this port exclusively.

 If the violation handling mode is changed after violation occurs, the new mode takes effect only after the violation mode is restarted.

**Configuration Examples** The following example enables port security on interface gigabitethernet 1/1, and the way to deal with violation is **shutdown**:

```
Ruijie(config)#interface gigabitethernet 1/1
Ruijie(config-if)# switchport port-security
Ruijie(config-if)# switchport port-security violation shutdown
```

| Related Commands | Command                   | Description                      |
|------------------|---------------------------|----------------------------------|
|                  | <b>show port-security</b> | Displays port security settings. |

**Platform** N/A

**Description**

## 9.2 switchport port-security aging

Use this command to set the aging time for all secure addresses on an interface.

Use the **no** form of this command to restore the default setting.

**switchport port-security aging {static | time *time* }**

**no switchport port-security aging {static | time }**

**Parameter  
Description**

| Parameter               | Description                                                                                                                                                                      |
|-------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>static</b>           | Applies the aging time to both manually configured secure addresses and automatically learned addresses. Otherwise, apply it to only the automatically learned secure addresses. |
| <b>time <i>time</i></b> | Specifies the aging time for the secure address on this port. Its range is 0-1,440 in minutes. If you set it to 0, the aging function is disabled actually.                      |

**Defaults** No secure address is aged by default.


**Command** Interface configuration mode

**Mode**

**Usage Guide** In interface configuration mode, use the **no switchport port-security aging time** command to disable the aging for security addresses on the port. Use the **no switchport port-security aging static** command to apply the aging time to only the dynamically learned security address.

Use the **show port-security** command to display configuration.

When both port security and 802.1X authentication functions are enabled, 802.1X clients must get re-authenticated for network access once the secure addresses are aged.

 To enable this function, you need to set the maximum number of secure addresses. In this way, you can make the switch automatically add or delete the secure addresses on the interface.

**Configuration Examples** The following example sets the aging time for all secure addresses on interface gigabitethernet 1/1 to eight minutes.

```
Ruijie# configure terminal
Ruijie(config)# interface gigabitethernet 1/1
Ruijie(config-if)# switchport port-security aging time 8
Ruijie(config-if)# switchport port-security aging static
Ruijie(config-if)# end
```

**Related**

| Command | Description |
|---------|-------------|
|---------|-------------|

| Commands                  |                                  |
|---------------------------|----------------------------------|
| <b>show port-security</b> | Displays port security settings. |

**Platform** N/A

**Description**

### 9.3 switchport port-security binding

Use these commands to configure secure address binding manually in the interface configuration mode through performing the source IP address plus source MAC address binding or only the source IP address binding. With this binding configured, only the packets match the binding secure address could enter the switch, others will be discarded.

Use the **no** form of these commands to remove the binding addresses.

**switchport port-security binding** [ *mac-address* **vlan** *vlan\_id* ] { *ipv4-address* | *ipv6-address* }

**switchport port-security binding** { *ipv4-address* | *ipv6-address* }

**no switchport port-security binding** [ *mac-address* **vlan** *vlan\_id* ] { *ipv4-address* | *ipv6-address* }

**no switchport port-security binding** { *ipv4-address* | *ipv6-address* }


| Parameter Description | Parameter           | Description                               |
|-----------------------|---------------------|-------------------------------------------|
|                       | <i>mac-address</i>  | The source MAC addresses to be bound      |
|                       | <i>vlan_id</i>      | VLAN ID of the binding source MAC address |
|                       | <i>ipv4-address</i> | Binds IPv4 addresses.                     |
|                       | <i>ipv6-address</i> | Binds IPv6 addresses.                     |

**Defaults** N/A

**Command Mode** Interface configuration mode

**Usage Guide**

1. For packets complying with IP/IP-MAC binding, they can be forwarded only if MAC addresses are secure addresses.
2. For dynamic secure addresses, packets cannot be forwarded before bound even if their addresses comply with the binding list.

 Network is often accessible to static users with secure addresses without authorization. If authorization is configured, these users must comply with it.

**Configuration Examples** The following example binds the IP address 192.168.1.100 on interface g 0/10:

```
Ruijie# configure terminal
Ruijie(config)#interface gigabitethernet 0/10
Ruijie(config-if)# switchport port-security binding 192.168.1.100
Ruijie(config-if)# end
```

The following example binds the IP address 192.168.1.100 and MAC address 00d0.f800.5555 with VLAN ID 1 on interface g 0/10.

```
Ruijie# configure terminal
Ruijie(config)#interface gigabitethernet 0/10
Ruijie(config-if)# switchport port-security binding 00d0.f800.5555 vlan 1
192.168.1.100
Ruijie(config-if)# end
```

#### Related Commands

| Command                                           | Description                                                    |
|---------------------------------------------------|----------------------------------------------------------------|
| <b>show port-security</b>                         | Displays port security settings.                               |
| <b>switchport port-security</b>                   | Enables the port-security.                                     |
| <b>switchport port-security binding interface</b> | Configures the secure address binding in privileged EXEC mode. |
| <b>switchport port-security mac-address</b>       | Sets the static secure address.                                |
| <b>switchport port-security aging</b>             | Sets the aging time for secure address.                        |

**Platform** N/A

#### Description

## 9.4 switchport port-security binding-filter logging

Use this command to enable binding filter logging.

Use the **no** form of these commands to restore the default setting.

**switchport port-security binding-filter logging [ rate-limit *rate* ]**

**no switchport port-security binding-filter logging**

#### Parameter Description

| Parameter                     | Description                                                                                                                                        |
|-------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>rate-limit <i>rate</i></b> | Indicates the printing rate of binding filter logging. The default rate is 10logs/minute. The configurable range is from 1 to 120 logs per minute. |

**Defaults** By default, binding filter logging is disabled.

**Command Mode** Global configuration mode

- Usage Guide**
1. If you run the **switchport port-security binding-filter logging** command without configuring the *rate* parameter, binding filter logging is enabled and the default printing rate, 10logs/minute, is adopted.
  2. After binding filter logging is enabled, for packets that do not comply with IP/IP-MAC binding, warnings are printed.
  3. After binding filter logging is enabled, if the printing rate exceeds the configured rate, the number of

suppressed packets is displayed.

**Configuration** The following example enables binding filter logging.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# switchport port-security binding-filter logging
Ruijie(config)# end
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 9.5 switchport port-security interface binding

Use these commands to configure secure address binding manually in the privileged EXEC mode through performing the source IP address plus source MAC address binding or only the source IP address binding. With this binding configured, only the packets match the binding secure address could enter the switch, others will be discarded.

Use the **no** form of these commands to remove the binding addresses.

**switchport port-security interface** *interface-id* **binding** [ *mac-address* **vlan** *vlan\_id* ] { *ipv4-address* | *ipv6-address* }

**switchport port-security interface** *interface-id* **binding** { *ipv4-address* | *ipv6-address* }

**no switchport port-security interface** *interface-id* **binding** [ *mac-address* **vlan** *vlan\_id* ] { *ipv4-address* | *ipv6-address* }

**no switchport port-security interface** *interface-id* **binding** { *ipv4-address* | *ipv6-address* }

**Parameter  
Description**

| Parameter           | Description                               |
|---------------------|-------------------------------------------|
| <i>interface-id</i> | Binds interface ID.                       |
| <i>mac-address</i>  | Binds source MAC address.                 |
| <i>vlan_id</i>      | VLAN ID of the binding source MAC address |
| <i>ipv4-address</i> | Binds IPv4 address.                       |
| <i>ipv6-address</i> | Binds IPv6 address .                      |

**Defaults** N/A

**Command  
Mode** Global configuration mode

**Usage Guide**

1. For packets complying with IP/IP-MAC binding, they can be forwarded only if MAC addresses are secure addresses.
2. For dynamic secure addresses, packets cannot be forwarded before bound even if their addresses

comply with the binding list.

**Configuration** The following example binds the IP address 192.168.1.100 on the interface g 0/10.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# switchport port-security binding interface g0/10 binding
192.168.1.100
Ruijie(config)# end
```

The following example binds the IP address 192.168.1.100 and MAC address 00d0.f800.5555 with VLAN ID 1 on the interface g 0/10.

```
Ruijie# configure terminal
Ruijie(config)# switchport port-security binding interface g0/10 binding
00d0.f800.5555 vlan 1 192.168.1.100
Ruijie(config)# end
```

**Related  
Commands**

| Command                                     | Description                                                            |
|---------------------------------------------|------------------------------------------------------------------------|
| <b>show port-security</b>                   | Displays port security settings.                                       |
| <b>switchport port-security</b>             | Enables the port-security.                                             |
| <b>switchport port-security binding</b>     | Configures the secure address binding in interface configuration mode. |
| <b>switchport port-security mac-address</b> | Sets the static secure address.                                        |
| <b>switchport port-security aging</b>       | Sets the aging time for secure address.                                |

**Platform** N/A

**Description**

## 9.6 switchport port-security mac-address


Use this command to configure the static secure address.

Use the **no** form of this command to remove the configuration.

**switchport port-security mac-address *mac-address* [ vlan *vlan-id* ]**

**no switchport port-security mac-address *mac-address* [ vlan *vlan-id* ]**

**Parameter  
Description**

| Parameter          | Description                                                                                                                                                                                    |
|--------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>mac-address</i> | Static secure MAC address                                                                                                                                                                      |
| <i>vlan-id</i>     | VLAN ID of the MAC address<br><br> The configuration of <i>vlan-id</i> is only supported on the TRUNK port. |

**Defaults** N/A

**Command** Interface configuration mode  
**Mode**

**Usage Guide** N/A

**Configuration Examples** The following example sets the static secure address and VLAN ID of TRUNK port 10 to 00d0.f800.5555 and 2 respectively.

```
Ruijie# configure terminal
Ruijie(config)#interface gigabitethernet 0/10
Ruijie(config-if)# switchport port-security mac-address 00d0.f800.5555 vlan
2
Ruijie(config-if)# end
```

**Related Commands**

| Command                                               | Description                                             |
|-------------------------------------------------------|---------------------------------------------------------|
| <b>show port-security</b>                             | Displays port security settings.                        |
| <b>switchport port-security</b>                       | Enables the port-security.                              |
| <b>switchport port-security binding</b>               | Configures the secure address binding.                  |
| <b>switchport port-security mac-address interface</b> | Sets the static secure address in privileged EXEC mode. |
| <b>switchport port-security aging</b>                 | Sets the aging time for the secure address.             |

**Platform** N/A  
**Description**

## 9.7 switchport port-security interface mac-address


Use this command to configure the static secure address.

Use the **no** form of this command to remove the configuration.

**switchport port-security interface** *interface-id* **mac-address** *mac-address* [ **vlan** *vlan-id* ]

**no switchport port-security interface** *interface-id* **mac-address** *mac-address* [ **vlan** *vlan-id* ]

**Parameter Description**

| Parameter           | Description                                                                                                                                                                                |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>interface-id</i> | Interface ID                                                                                                                                                                               |
| <i>mac-address</i>  | Static secure address                                                                                                                                                                      |
| <i>vlan-id</i>      | VLAN ID of the MAC address<br> The configuration of <i>vlan-id</i> is only supported on the TRUNK port. |

**Defaults** N/A

**Command** Glocal configuration mode  
**Mode**

**Usage Guide** N/A

**Configuration Examples** The following example sets the static secure address and VLAN ID of TRUNK port 10 to 00d0.f800.5555 and 2 respectively.

```
Ruijie# configure terminal
Ruijie(config)# switchport port-security interface g0/10 mac-address
00d0.f800.5555 vlan 2
Ruijie(config)# end
```

**Related Commands**

| Command                                     | Description                                                     |
|---------------------------------------------|-----------------------------------------------------------------|
| <b>show port-security</b>                   | Displays port security settings.                                |
| <b>switchport port-security</b>             | Enables the port-security.                                      |
| <b>switchport port-security binding</b>     | Configures the secure address binding.                          |
| <b>switchport port-security mac-address</b> | Sets the static secure address in interface configuration mode. |
| <b>switchport port-security aging</b>       | Sets the aging time for the secure address.                     |

**Platform** N/A  
**Description**

## 9.8 switchport port-security maximum

Use this command to set the maximum number of port secure addresses.

Use the **no** form of this command to restore the default setting.

**switchport port-security maximum** *value*

**no switchport port-security maximum**

**Parameter Description**

| Parameter    | Description                                                       |
|--------------|-------------------------------------------------------------------|
| <i>value</i> | Maximum number of the secure address, in the range from 1 to 128. |

**Defaults** The default is 128.

**Command** Interface configuration mode  
**Mode**

**Usage Guide** The number of the secure address contains the sum of static secure address and dynamically learnt secure address, 128 by default.  
 If the number of the secure address you set is less than current number, it will prompt this setting failure.



**Configuration** The following example sets the maximum number of the secure address to 2 for interface g 0/10.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)#interface gigabitethernet 0/10
Ruijie(config-if)# switchport port-security maximum 2
Ruijie(config-if)# end
```

**Related  
Commands**

| Command                                     | Description                                                         |
|---------------------------------------------|---------------------------------------------------------------------|
| <b>show port-security</b>                   | Displays port security settings.                                    |
| <b>switchport port-security</b>             | Enables the port-security.                                          |
| <b>switchport port-security binding</b>     | Configures the secure address binding.                              |
| <b>Switchport port-security mac-address</b> | Sets the static secure address in the interface configuration mode. |
| <b>switchport port-security aging</b>       | Sets the aging time for the port secure address.                    |

**Platform** N/A

**Description**

## 9.9 switchport port-security mac-address sticky

Use this command to configure the Sticky MAC secure address.

Use the **no** form of this command to restore the default setting.

**switchport port-security mac-address sticky** *mac-address* [ **vlan** *vlan-id* ]

**no switchport port-security mac-address sticky** *mac-address* [ **vlan** *vlan-id* ]


Use the command without parameters to enable the Sticky MAC address learning.

Use the **no** form of this command to disable the Sticky MAC address learning.

**switchport port-security mac-address sticky**

**no switchport port-security mac-address sticky**

**Parameter  
Description**

| Parameter          | Description                                                                                                                                                  |
|--------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>mac-address</i> | Static secure address                                                                                                                                        |
| <i>vlan-id</i>     | Vlan ID of the MAC address                                                                                                                                   |
|                    |  The configuration of <i>vlan-id</i> is only supported on the TRUNK port. |

**Defaults** This function is disabled by default.

**Command** Interface configuration mode

**Mode**

**Usage Guide** Sticky MAC addresses, either static or dynamic, are special addresses free from aging.

**Configuration** The following example sets the MAC address and VLAN ID of TRUNK port 10 to 00d0.f800.5555 to 2 respectively.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)#interface gigabitethernet 0/10
Ruijie(config-if)# switchport port-security mac-address 00d0.f800.5555 vlan
2
Ruijie(config-if)# end
```

The following example enables the Sticky MAC address learning on interface g0/10.

```
Ruijie# configure terminal
Ruijie(config)#interface gigabitethernet 0/10
Ruijie(config-if)# switchport port-security sticky mac-address
Ruijie(config-if)# end
```

**Related  
Commands**

| Command                                               | Description                                                     |
|-------------------------------------------------------|-----------------------------------------------------------------|
| <b>show port-security</b>                             | Displays port security settings.                                |
| <b>switchport port-security</b>                       | Enables the port-security.                                      |
| <b>switchport port-security binding</b>               | Configures the secure address binding.                          |
| <b>switchport port-security mac-address interface</b> | Sets the static secure address in privileged EXEC mode.         |
| <b>switchport port-security mac-address</b>           | Sets the static secure address in interface configuration mode. |
| <b>switchport port-security aging</b>                 | Sets the aging time for the secure address.                     |

**Platform** N/A

**Description**

## 9.10 show port-security

Use this command to display the port security configuration and the secure address.

**show port-security** [ **address** [ **interface** *interface-id* ] | **binding** [ **interface** *interface-id* ] | **interface** *interface-id* | **all** ]

**Parameter  
Description**

| Parameter                            | Description                                                                               |
|--------------------------------------|-------------------------------------------------------------------------------------------|
| <b>address</b>                       | Displays all secure addresses, or the secure address of the specified port.               |
| <b>binding</b>                       | Displays all port security bindings, or the port security bindings of the specified port. |
| <b>interface</b> <i>interface-id</i> | Displays the port security configuration of the specified port.                           |
| <b>all</b>                           | Displays all valid secure addresses and valid port security bindings.                     |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** To display all port security configuration and violation management, execute the command without any parameter. To display the security configuration, the secure address, or the port security binding of the specified interface, execute the command with the corresponding parameter.

**Configuration Examples** The following example displays the port security statistics.

```
Ruijie#show port-security
NO. SecurePort MaxSecureAddr CurrentAddr CurrentIpBind CurrentIpMacBind
SecurityAction
          (Count)      (Count)      (Count)      (Count)
-----
-----
1   Gi0/1   128          2          2          1          protect
-----
-----
Total secure addresses in System : 2
Total secure bindings in System : 3
```

| Field                            | Description                                                |
|----------------------------------|------------------------------------------------------------|
| NO.                              | Serial number.                                             |
| Secure Port                      | Port name                                                  |
| MaxSecureAddr(count)             | The maximum number of secure addresses on the port.        |
| CurrentAddr(count)               | The current number of secure addresses on the port.        |
| CurrentIpBind (count)            | The current number of IP addresses bindings on the port.   |
| CurrentIpMacBind (count)         | The current number of IP-MAC address bindings on the port. |
| Security Action                  | Violation management.                                      |
| Total secure addresses in System | The total number of secure addresses on the device.        |
| Total secure bindings in System  | The total number of port security bindings on the device,  |

The following example displays the port security configuration on interface GigabitEthernet 0/1.

```
Ruijie#show port-security interface gigabitEthernet 0/1
Interface           : GigabitEthernet 0/1
Port status         : down
Port Security       : enabled
```

```
SecureStatic address aging : disabled
Sticky dynamic address    : disabled
Violation mode            : protect
Maximum MAC Addresses     : 128
Total MAC Addresses       : 2
Configured MAC Addresses  : 2
Dynamic MAC Addresses     : 0
Sticky MAC Addresses      : 0
Total security binding    : 3
IPv4-ONLY Binding Addresses : 1
IPv6-ONLY Binding Addresses : 1
IPv4-MAC Binding Addresses : 1
IPv6-MAC Binding Addresses : 0
Aging time(min)          : 0
```

| Field                       | Description                                                                            |
|-----------------------------|----------------------------------------------------------------------------------------|
| Interface                   | Port name.                                                                             |
| Port status                 | Port status.                                                                           |
| Port Security               | Displays whether the port security is enabled.                                         |
| SecureStatic address aging  | Displays whether the static secure address aging is enabled.                           |
| Sticky dynamic address      | Displays whether the dynamic secure address is converted to the sticky secure address, |
| Violation mode              | Port violation management.                                                             |
| Maximum MAC Addresses       | The maximum number of secure addresses on the port.                                    |
| Total MAC Addresses         | The number of valid secure addresses on the port.                                      |
| Configured MAC Addresses    | The number of static secure addresses.                                                 |
| Dynamic MAC Addresses       | The number of dynamic secure addresses.                                                |
| Sticky MAC Addresses        | The number of sticky secure addresses,                                                 |
| Total security binding      | The number of valid port security bindings.                                            |
| IPv4-ONLY Binding Addresses | The number of IPv4 addresses bindings.                                                 |
| IPv6-ONLY Binding Addresses | The number of IPv6 addresses bindings.                                                 |
| IPv4-MAC Binding Addresses  | The number of IPv4-MAC address bindings.                                               |
| IPv6-MAC Binding Addresses  | The number of IPv6-MAC address bindings.                                               |
| Aging time(min)             | The aging time of the secure address.                                                  |

The following example displays all secure addresses on the device.

```
Ruijie#show port-security address
NO.  VLAN  MacAddress      PORT          TYPE          RemainingAge (mins)
STATUS
-----
-----
```

```

1 1 00d0.f800.073c GigabitEthernet 0/1 Configured --
active
2 1 00d0.f800.073d GigabitEthernet 0/1 Configured --
active
    
```

| Field               | Description                           |
|---------------------|---------------------------------------|
| NO.                 | Serial number.                        |
| Vlan                | VLAN ID.                              |
| Mac Address         | MAC address.                          |
| Port                | Port name.                            |
| Type                | Secure address type.                  |
| Remaining Age(mins) | The aging time of the secure address. |
| STATUS              | The secure address status.            |

The following example displays all port security bindings on the device.

```

Ruijie#show port-security binding
NO.  VLAN MacAddress  PORT      IpAddress
FilterType FilterStatus
-----
-----
1 1 00d0.f800.073c Gi0/1 192.168.12.202 ipv4-mac
active
2 -- -- Gi0/1 192.168.0.1 ipv4-only
active
3 -- -- Gi0/1 ffaa:ddcc::1 ipv6-only
activ
    
```

| Field        | Description                                      |
|--------------|--------------------------------------------------|
| NO.          | Serial number.                                   |
| Vlan         | VLAN ID.                                         |
| Mac Address  | MAC address.                                     |
| Port         | Port name.                                       |
| IpAddress    | IP address.                                      |
| FilterType   | The filtering type of the port security binding. |
| FilterStatus | The status of the port security binding.         |

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 10 Storm Control Commands

### 10.1 show storm-control

Use this command to display storm suppression information.

**show storm-control** [ *interface-type interface-number* ]

| Parameter Description | Parameter                                        | Description             |
|-----------------------|--------------------------------------------------|-------------------------|
|                       | <i>interface-type</i><br><i>interface-number</i> | Specifies an interface. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example displays storm control configuration on FastEthernet 0/1.

```
Ruijie# show storm-control fastEthernet 0/1
Interface          Broadcast Control Multicast Control Unicast Control
Action
-----
FastEthernet 0/1  1%          50%          1%          none
```

| Related Commands | Command              | Description                |
|------------------|----------------------|----------------------------|
|                  | <b>storm-control</b> | Enables storm suppression. |

**Platform** N/A

**Description**

### 10.2 storm-control

Use this command to enable the storm suppression for unknown unicast packets.

Use the **no** or **default** form of this command to restore the default setting.

**storm-control unicast** [ { *level percent* | *pps packets* | *rate-bps* } ]

**no storm-control unicast**

**default storm-control unicast**

Use this command to enable the storm suppression for multicast packets.  
 Use the **no** or **default** form of this command to restore the default setting.  
**storm-control multicast** [ { **level percent** | **pps packets** | **rate-bps** } ]  
**no storm-control multicast**  
**default storm-control multicast**

Use this command to enable the storm suppression for broadcast packets.  
 Use the **no** or **default** form of this command to restore the default setting.  
**storm-control broadcast** [ { **level percent** | **pps packets** | **rate-bps** } ]  
**no storm-control broadcast**  
**default storm-control broadcast**

| Parameter Description | Parameter            | Description                                               |
|-----------------------|----------------------|-----------------------------------------------------------|
|                       | <b>level percent</b> | Sets the bandwidth percentage, for example, 20 means 20%. |
|                       | <b>pps packets</b>   | Sets the pps, which means packets per second.             |
|                       | <b>rate-bps</b>      | Rate allowed                                              |

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** Too many broadcast, multicast or unicast packets received on a port may cause storm and thus slow network and increase timeout. Protocol stack implementation errors or wrong network configuration may also lead to such storms.  
 A device can implement the storm suppression to a broadcast, a multicast, or a unicast storm respectively. When excessive broadcast, multicast or unknown unicast packets are received, the switch temporarily prohibits forwarding of relevant types of packets till data streams are recovered to the normal state (then packets will be forwarded normally).

**Configuration Examples** The following example enables the multicast storm suppression on FastEthernet 0/1 and sets the allowed rate to 4M.

```
Ruijie(config)# int fastEthernet 0/1
Ruijie(config-if-FastEthernet 0/1)# storm-control multicast 4096
```

| Related Commands | Command                   | Description                             |
|------------------|---------------------------|-----------------------------------------|
|                  | <b>show storm-control</b> | Displays storm suppression information. |

**Platform Description** N/A

# 11 SSH Commands

## 11.1 crypto key generate

Use this command to generate a public key to the SSH server.

**crypto key generate { rsa | dsa }**


| Parameter   | Parameter  | Description           |
|-------------|------------|-----------------------|
| Description | <b>rsa</b> | Generates an RSA key. |
|             | <b>dsa</b> | Generates a DSA key.  |


**Defaults** By default, the SSH server does not generate a public key.

**Command** Global configuration mode

**Mode**

**Usage Guide** When you need to enable the SSH SERVER service, use this command to generate a public key on the SSH server and enable the SSH SERVER service by command **enable service ssh-server** at the same time. SSH 1 uses the RSA key; SSH 2 uses the RSA or DSA key. Therefore, if a RSA key has been generated, both SSH1 and SSH2 can use it. If only a DSA key is generated, only SSH2 can use it.

 Only DSA/RSA authentication is available for one connection. Also, the key algorithm may differ in different client. Thus, it is recommended to generate both RSA and DSA keys so as to ensure connection with the portal server.

 RSA has a minimum modulus of 512 bits and a maximum modulus of 2,048 bits; DSA has a minimum modulus of 360 bits and a maximum modulus of 2,048 bits. For some clients like SCP clients, a 768-bit or more key is required. Thus, it is recommended to generate the key of 768 bits or more.

 A key can be deleted by using the **no crypto key generate** command. The **no crypto key zeroize** command is not available.

**Configuration** The following example generates an RSA key to the SSH server.

**Examples**

```
Ruijie# configure terminal
Ruijie(con fig)# crypto key generate rsa
```

| Related Commands | Command                                 | Description                                                    |
|------------------|-----------------------------------------|----------------------------------------------------------------|
|                  | <b>show ip ssh</b>                      | Displays the current status of the SSH server.                 |
|                  | <b>crypto key zeroize { rsa   dsa }</b> | Deletes DSA and RSA keys and disables the SSH server function. |



**Platform** N/A  
**Description**

## 11.2 crypto key zeroize

Use this command to delete a public key to the SSH server.

**crypto key zeroize { rsa | dsa }**

|                    | Parameter  | Description          |
|--------------------|------------|----------------------|
| <b>Parameter</b>   |            |                      |
| <b>Description</b> | <b>rsa</b> | Deletes the RSA key. |
|                    | <b>dsa</b> | Deletes the DSA key. |

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** This command deletes the public key to the SSH server. After the key is deleted, the SSH server state becomes DISABLE. If you want to disable the SSH server, run the **no enable service ssh-server** command.

**Configuration Examples** The following example deletes a RSA key to the SSH server.

```
Ruijie# configure terminal
Ruijie(config)# crypto key zeroize rsa
```

|                         | Command                                  | Description                                    |
|-------------------------|------------------------------------------|------------------------------------------------|
| <b>Related Commands</b> | <b>show ip ssh</b>                       | Displays the current status of the SSH server. |
|                         | <b>crypto key generate { rsa   dsa }</b> | Generates DSA and RSA keys.                    |

**Platform** N/A  
**Description**

## 11.3 disconnect ssh

Use this command to disconnect the established SSH connection.

**disconnect ssh [ vty ] session-id**

|                    | Parameter         | Description                                                     |
|--------------------|-------------------|-----------------------------------------------------------------|
| <b>Parameter</b>   |                   |                                                                 |
| <b>Description</b> | <b>vtty</b>       | Established VTY connection                                      |
|                    | <i>session-id</i> | ID of the established SSH connection, in the range from 0 to 35 |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** You can disconnect a SSH connection by entering the ID of the SSH connection or disconnect a SSH connection by entering the specified VTY connection ID. Only connections of the SSH type can be disconnected.

**Configuration Examples** The following example disconnects the established SSH connection by specifying the SSH session ID.

```
Ruijie# disconnect ssh 1
```

The following example disconnects the established SSH connection by specifying the VTY session ID.

```
Ruijie# disconnect ssh vty 1
```

**Related Commands**

| Command                                  | Description                                                    |
|------------------------------------------|----------------------------------------------------------------|
| <b>show ssh</b>                          | Displays the information about the established SSH connection. |
| <b>clear line vty <i>line_number</i></b> | Disconnects the current VTY connection.                        |

**Platform Description** N/A

## 11.4 ip scp server enable

Use this command to enable the SCP server function on a network device.

Use the **no** form of this command to restore the default setting.

**ip scp server enable**

**no ip scp server enable**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** Secure Copy (SCP) enables an authenticated user to transfer files to/from a remote device in an encrypted way, with high security and guarantee.

**Configuration Examples** The following example enables the SCP server function.

```
Ruijie# configure terminal
Ruijie(config)# ip scp server enable
```

| Related Commands | Command            | Description                                    |
|------------------|--------------------|------------------------------------------------|
|                  | <b>show ip ssh</b> | Displays the current status of the SSH server. |

**Platform** N/A

**Description**

## 11.5 ip scp server topdir

Use this command to set the path for uploading/downloading files to/from the SCP server.

Use the **no** form of this command to restore the default settings.

**ip scp server topdir** {**flash:/path** | **flash2:/path** | **usb0:/path** | **usb1:/path** | **sd0:/path** | **sata0:/path** | **tmp:/path**}

**no ip scp server topdir**

| Parameter Description | Parameter     | Description                                                                                                                                                        |
|-----------------------|---------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <b>flash</b>  | Selects the file transfer path from the extended flash memory. The file transfer path is <b>flash:/</b> by default.                                                |
|                       | <b>flash2</b> | Selects the file transfer path from Extended Flash Memory 2. This option is supported only when the device has the data2 partition.                                |
|                       | <b>usb0</b>   | Selects the file transfer path from USB Disk 0. This option is supported only when the device has one USB interface and is connected with an extended USB device.  |
|                       | <b>usb1</b>   | Selects the file transfer path from USB Disk 1. This option is supported only when the device has two USB interfaces and is connected with extended USB devices.   |
|                       | <b>sd0</b>    | Selects the file transfer path from the SD card. This option is supported only when the device has an SD card interface and is connected with an extended SD card. |
|                       | <b>sata0</b>  | Selects the file transfer path from the hard disk. This option is supported only when the device has the SATA partition.                                           |
|                       | <b>tmp</b>    | Sets the file transfer path to <b>tmp/vsd/</b> .                                                                                                                   |

**Defaults** The file transfer path is **flash:/** by default.

**Command Mode** Global configuration mode

**Default Level** 14

**Usage Guide** This command is used to change the file transfer path for uploading and downloading files.

**Configuration Examples** The following example changes the file transfer path to **tmp/vsd**.

```
Ruijie# configure terminal
```

```
Ruijie(config)# ip scp server topdir tmp:/
```

## 11.6 ip ssh access-class

Use this command to set the ACL filtering of the SSH server.

**ip ssh access-class** { *access-list-number* | *access-list-name* }

Use the **no** form of this command to delete the ACL filtering of the SSH server.

**no ip ssh access-class**

| Parameter   | Parameter                 | Description                                                                                                                                                                           |
|-------------|---------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Description | <i>access-list-number</i> | The ACL number and the number range is configurable. The standard ACL number ranges are 1 to 99 and 1,300 to 1,999. The extended ACL number ranges are 100 to 199 and 2,000 to 2,699. |
|             | <i>access-list-name</i>   | An ACL name.                                                                                                                                                                          |

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** Run this command to perform ACL filtering for all connections to the SSH server. In line mode, ACL filtering is performed only for specific lines. However, ACL filtering rules of the SSH are effective to all SSH connections.

**Configuration Examples** The following example performs the ACL filtering named testv4 for all connections to the SSH server.

### Examples

```
Ruijie# configure terminal
Ruijie(config)# ip ssh access-class testv4
```

**Platform** N/A

**Description**

## 11.7 ip ssh authentication-retries

Use this command to set the authentication retry times of the SSH server.

Use the **no** form of this command to restore the default setting.

**ip ssh authentication-retries** *retry times*

**no ip ssh authentication-retries**

| Parameter   | Parameter          | Description                                     |
|-------------|--------------------|-------------------------------------------------|
| Description | <i>retry times</i> | Authentication retry times, ranging from 0 to 5 |

**Defaults** The default is 3.

**Command** Global configuration mode  
**Mode**

**Usage Guide** User authentication is considered failed if authentication is not successful when the configured authentication retry times on the SSH server is exceeded. Use the **show ip ssh** command to display the configuration of the SSH server

**Configuration** The following example sets the authentication retry times to 2.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# ip ssh authentication-retries 2
```

| Related Commands | Command            | Description                                    |
|------------------|--------------------|------------------------------------------------|
|                  | <b>show ip ssh</b> | Displays the current status of the SSH server. |

**Platform** N/A  
**Description**

## 11.8 ip ssh cipher-mode

Use this command to set the SSH server encryption mode.

Use the **no** form of this command to restore the default setting.

**ip ssh cipher-mode { cbc | ctr | others }**

**no ip ssh cipher-mode**

| Parameter Description | Parameter     | Description                                                                                                                                   |
|-----------------------|---------------|-----------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <b>cbc</b>    | Encryption mode: CBC (Cipher Block Chaining)<br>Encryption algorithm: DES-CBC, 3DES-CBC, AES-128-CBC, AES-192-CBC, AES-256-CBC, Blow fish-CBC |
|                       | <b>ctr</b>    | Encryption mode: CTR (Counter)<br>Encryption algorithm: AES128-CTR, AES192-CTR, AES256-CTR                                                    |
|                       | <b>others</b> | Encryption mode: Others<br>Encryption algorithm: RC4                                                                                          |

**Defaults** All encryption modes are supported by default.

**Command** Global configuration mode  
**Mode**

**Usage Guide** This command is used to set the SSH server encryption mode.  
 For Ruijie Networks, the SSHv1 server supports DES-CBC, 3DES-CBC, and Blowfish-CBC; the SSHv2 server supports AES128-CTR, AES192-CTR, AES256-CTR, DES-CBC, 3DES-CBC, AES-128-CBC, AES-192-CBC, AES-256-CBC, Blowfish-CBC, and RC4. All these algorithms can be grouped into CBC, CTR and Other as shown above.  
 With the advancement of cryptography study, CBC and Others encryption modes are proved to easily

decipher. It is recommended to enable the CTR mode to raise assurance for organizations and enterprises demanding high security.

**Configuration** The following example enables CTR encryption mode.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# ip ssh cipher-mode ctr
```

**Platform** N/A

**Description**

## 11.9 ip ssh hmac-algorithm

Use this command to set the algorithm for message authentication.

Use the **no** form of this command to restore the default setting.

**ip ssh hmac-algorithm { md5 | md5-96 | sha1 | sha1-96 }**

**no ip ssh hmac-algorithm**

**Parameter**

**Description**

| Parameter | Description       |
|-----------|-------------------|
| md5       | MD5 algorithm     |
| md5-96    | MD5-96 algorithm  |
| sha1      | SHA1 algorithm    |
| sha1-96   | SHA1-96 algorithm |

**Defaults**

SSHv1: all the algorithms are not supported.

SSHv2: all the algorithms are supported.

**Command**

Global configuration mode

**Mode**

**Usage Guide**

Ruijie SSHv1 servers do not support algorithms for message authentication.

For Ruijie Networks, the SSHv1 server does not support message authentication algorithms; the SSHv2 server supports MD5, MD5-96, SHA1, and SHA1-96 algorithms. Set the algorithm on your demand.

**Configuration**

The following example sets the algorithm for message authentication to SHA1.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# ip ssh hmac-algorithm sha1
```

**Platform** N/A

**Description**

## 11.10 ip ssh key-exchange

Use this command to configure support for DH key exchange method on the SSH server

Use the **no** form of this command to restore the default setting.

```
ip ssh key-exchange { dh_group_exchange_sha1 | dh_group14_sha1 | dh_group1_sha1 }
no ip ssh key-exchange
```

| Parameter   | Parameter                     | Description                                                                                                                     |
|-------------|-------------------------------|---------------------------------------------------------------------------------------------------------------------------------|
| Description | <b>dh_group_exchange_sha1</b> | Indicates configuration of diffie-hellman-group-exchange-sha1 for keyexchange. The key has 2,048 bytes, which cannot be edited. |
|             | <b>dh_group14_sha1</b>        | Indicates configuration of diffie-hellman-group14-sha1 for keyexchange. The key has 2,048 bytes.                                |
|             | <b>dh_group1_sha1</b>         | Indicates configuration of diffie-hellman-group1-sha1 for keyexchange. The key has 1,024 bytes.                                 |

**Defaults** By default, the SSHv1 server does not support DH key exchange method, while the SSHv2 server supports diffie-hellman-group-exchange-sha1 and diffie-hellman-group14-sha1 for key exchange.

**Command** Global configuration mode

**Mode**

**Usage Guide** N/A

**Configuration** The following example configures the support for diffie-hellman-group14-sha1.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# ip ssh key-exchange dh_group14_sha1
```

| Related  | Command            | Description                                    |
|----------|--------------------|------------------------------------------------|
| Commands | <b>show ip ssh</b> | Displays the current status of the SSH server. |

**Platform** N/A

**Description**

## 11.11 ip ssh peer

Use this command to associate the public key file and the user name on the client. During client login authentication, you can specify a public key file based on the user name.

Use the **no** form of this command to restore the default setting.

```
ip ssh peer username public-key { rsa | dsa } filename
no ip ssh peer username public-key { rsa | dsa } filename
```

| Parameter   | Parameter       | Description                 |
|-------------|-----------------|-----------------------------|
| Description | <i>username</i> | User name                   |
|             | <i>filename</i> | Name of a public key file   |
|             | <b>rsa</b>      | The public key is a RSA key |
|             | <b>dsa</b>      | The public key is a DSA key |

**Defaults** N/A

**Command** Global configuration mode  
**Mode**

**Usage Guide** N/A

**Configuration** The following example sets RSA and DSA key files associated with user **test**.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# ip ssh peer test public-key rsa flash:rsa.pub
Ruijie(config)# ip ssh peer test public-key dsa flash:dsa.pub
```

| Related  | Command            | Description                                    |
|----------|--------------------|------------------------------------------------|
| Commands | <b>show ip ssh</b> | Displays the current status of the SSH server. |

**Platform** N/A  
**Description**

## 11.12 ip ssh port

Use this command to set a monitoring port ID for the SSH server.

**ip ssh port** *port*

Use either of the following commands to restore the monitoring port ID of the SSH server to the default value.

**no ip ssh port**

**ip ssh port 22**

| Parameter   | Parameter   | Description                                                                |
|-------------|-------------|----------------------------------------------------------------------------|
| Description | <i>port</i> | Monitoring port ID of the SSH server. The value ranges from 1025 to 65535. |

**Defaults** N/A

**Command** Global configuration mode  
**Mode**

**Default Level** 14

**Usage Guide** N/A

**Configuration** The following example sets the monitoring port ID of the SSH server to 10000.

**n Examples**

```
Ruijie# configure terminal
Ruijie(config)# ip ssh port 10000
```

**Verification** Run the **show ip ssh** command to display the configured monitoring port ID of the SSH server.



**Prompts**

1. If the required port ID is the same as the current value, a prompt is displayed, indicating that the current port ID is the required value.

```
Ruijie(config)# ip ssh port 22
% SSH tcp-port has been 22
```

2. If a port in the monitoring state is configured as the monitoring port of the SSH server, a prompt is displayed, indicating that the port is already in the monitoring state and you are required to set another port ID, and the SSH server still uses the previous port ID.

```
Ruijie(config)# ip ssh port 10000
% SSH open tcp-port(10000) failed, please use another tcp-port, otherwise the system will use the old tcp-port(22)!
```

3. If a monitoring error occurs after a monitoring port ID is configured for the SSH server, a port ID configuration failure prompt is displayed.

```
Ruijie(config)# ip ssh port 10000
% SSH change to tcp-port(10000) fail!
```

4. If a port ID is configured successfully, a port ID configuration success prompt is displayed.

```
Ruijie(config)# ip ssh port 10000
% SSH change to tcp-port(10000) success!
```

## 11.13 ip ssh time-out

Use this command to set the authentication timeout for the SSH server.

Use the **no** form of this command to restore the default setting.

**ip ssh time-out** *time*

**no ip ssh time-out**

| Parameter   | Parameter   | Description                                                               |
|-------------|-------------|---------------------------------------------------------------------------|
| Description | <i>time</i> | Authentication timeout, in the range from 1 to 120 in the unit of seconds |

**Defaults** The default is 120 seconds.

**Command** Global configuration mode

**Mode**

**Usage Guide** The authentication is considered timeout and failed if the authentication is not successful within 120 seconds starting from receiving a connection request. Use the **show ip ssh** command to display the configuration of the SSH server.

**Configuration** The following example sets the timeout value to 100 seconds.

**Examples** Ruijie# configure terminal

```
Ruijie(config)# ip ssh time-out 100
```

| Related  | Command            | Description                                    |
|----------|--------------------|------------------------------------------------|
| Commands | <b>show ip ssh</b> | Displays the current status of the SSH server. |

**Platform** N/A

**Description**

## 11.14 ip ssh version

Use this command to set the version of the SSH server.

Use the **no** form of this command to restore the default setting.

**ip ssh version { 1 / 2 }**

**no ip ssh version**

| Parameter   | Parameter | Description                                  |
|-------------|-----------|----------------------------------------------|
| Description | <b>1</b>  | Supports the SSH1 client connection request. |
|             | <b>2</b>  | Supports the SSH2 client connection request. |

**Defaults** SSH1 and SSH2 are compatible by default.

**Command** Global configuration mode

**Mode**

**Usage Guide** This command is used to configure the SSH connection protocol version supported by SSH server. By default, the SSH server supports SSH1 and SSH2. If Version 1 or 2 is set, only the SSH client of this version can connect to the SSH server. Use the **show ip ssh** command to display the current status of SSH server.

**Configuration** The following example sets the version of the SSH server.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# ip ssh version 2
```

| Related  | Command            | Description                                    |
|----------|--------------------|------------------------------------------------|
| Commands | <b>show ip ssh</b> | Displays the current status of the SSH server. |

**Platform** N/A

**Description**

## 11.15 ipv6 ssh access-class

Use this command to set the IPv6 ACL filtering of the SSH server.

**ipv6 ssh access-class accessv6-list-name**

Use the **no** form of this command to delete the IPv6 ACL filtering of the SSH server.

**no ipv6 ssh access-class**

| <b>Parameter Description</b>  | <table border="1"> <thead> <tr> <th>Parameter</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td><i>accessv6-list-name</i></td> <td>An IPv6 ACL name.</td> </tr> </tbody> </table>                                                       | Parameter | Description | <i>accessv6-list-name</i> | An IPv6 ACL name. |
|-------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------|-------------|---------------------------|-------------------|
| Parameter                     | Description                                                                                                                                                                                                                                     |           |             |                           |                   |
| <i>accessv6-list-name</i>     | An IPv6 ACL name.                                                                                                                                                                                                                               |           |             |                           |                   |
| <b>Defaults</b>               | N/A                                                                                                                                                                                                                                             |           |             |                           |                   |
| <b>Command Mode</b>           | Global configuration mode                                                                                                                                                                                                                       |           |             |                           |                   |
| <b>Usage Guide</b>            | Run this command to perform IPv6 ACL filtering for all connections to the SSH server. In line mode, IPv6 ACL filtering is performed only for specific lines. However, IPv6 ACL filtering rules of the SSH are effective to all SSH connections. |           |             |                           |                   |
| <b>Configuration Examples</b> | <p>The following example performs the IPv6 ACL filtering named testv6 for all connections to the SSH server.</p> <pre>Ruijie# configure terminal Ruijie(config)# ipv6 ssh access-class testv6</pre>                                             |           |             |                           |                   |
| <b>Platform Description</b>   | N/A                                                                                                                                                                                                                                             |           |             |                           |                   |

## 11.16 show crypto key mypubkey

Use this command to display the information about the public key part of the public key to the SSH server.

**show crypto key mypubkey { rsa | dsa }**

| <b>Parameter Description</b> | <table border="1"> <thead> <tr> <th>Parameter</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td><b>rsa</b></td> <td>Displays the RSA key.</td> </tr> <tr> <td><b>dsa</b></td> <td>Displays the DSA key.</td> </tr> </tbody> </table> | Parameter | Description | <b>rsa</b> | Displays the RSA key. | <b>dsa</b> | Displays the DSA key. |
|------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------|-------------|------------|-----------------------|------------|-----------------------|
| Parameter                    | Description                                                                                                                                                                                                                                  |           |             |            |                       |            |                       |
| <b>rsa</b>                   | Displays the RSA key.                                                                                                                                                                                                                        |           |             |            |                       |            |                       |
| <b>dsa</b>                   | Displays the DSA key.                                                                                                                                                                                                                        |           |             |            |                       |            |                       |
| <b>Defaults</b>              | N/A                                                                                                                                                                                                                                          |           |             |            |                       |            |                       |
| <b>Command Mode</b>          | Privileged EXEC mode/Global configuration mode                                                                                                                                                                                               |           |             |            |                       |            |                       |
| <b>Usage Guide</b>           | This command is used to show the information about the public key part of the generated public key on the SSH server, including key generation time, key name, contents in the public key part, etc.                                         |           |             |            |                       |            |                       |
| <b>Configuration</b>         | The following example displays the information about the public key part of the public key to the SSH                                                                                                                                        |           |             |            |                       |            |                       |

**Examples**

```
server.
Ruijie(config)#show crypto key mypubkey rsa
% Key pair was generated at: 7:1:25 UTC Jan 16 2013
Key name: RSA1 private
Usage: SSH Purpose Key
Key is not exportable.
Key Data:
    AAAAAwEA AQAAAEAA 2m6H/J+2 xOMLW5MR 8tOmpW1I XU1QItVN mLdR+G7O
Q10kz+4/
    /IgyR0ge 1sZNg32u dFEifZ6D zfLySPqC MTWLfw==

% Key pair was generated at: 7:1:25 UTC Jan 16 2013
Key name: RSA private
Usage: SSH Purpose Key
Key is not exportable.
Key Data:
    AAAAAwEA AQAAAEAA 0E5w2H0k v744uTIR yzBd/7AM 8pLItnW3 XH3LhEEi
BbZGZvn3
    LEYYfQ9s pgYL0ZQf S0s/GY0X gJOMsc6z i8OAKQ==
```

| Related Commands | Command                                  | Description                 |
|------------------|------------------------------------------|-----------------------------|
|                  | <b>crypto key generate { rsa   dsa }</b> | Generates DSA and RSA keys. |

**Platform** N/A  
**Description**

### 11.17 show ip ssh

Use this command to display the information of the SSH server.

**show ip ssh**

| Parameter          | Parameter | Description |
|--------------------|-----------|-------------|
| <b>Description</b> | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode

**Usage Guide** This command is used to display the information of the SSH server, including version, enablement state, port ID, encryption, message authentication algorithm, authentication timeout, and authentication retry times.

Note: If no key is generated for the SSH server, the SSH version is still unavailable even if this SSH version has been configured.

**Configuration** The following example displays the information of the SSH server.

**Examples**

```
Ruijie(config)#show ip ssh
SSH Disable - version 1.99
please generate rsa and dsa key to enable SSH
SSH Port:                22
SSH Cipher Mode:         cbc,ctr,others
SSH HMAC Algorithm:      md5-96,md5,sha1-96,sha1
Authentication timeout: 120 secs
Authentication retries: 3
SSH SCP Server:          disabled

// 显示 SSH Server 功能和 SCP 功能均已打开的配置信息
Ruijie(config)#show ip ssh
SSH Enable - version 1.99
SSH Port:                22
SSH Cipher Mode:         cbc,ctr,others
SSH HMAC Algorithm:      md5-96,md5,sha1-96,sha1
Authentication timeout: 120 secs
Authentication retries: 3
SSH SCP Server:          enabled
```

**Related  
Commands**

| Command                              | Description                                             |
|--------------------------------------|---------------------------------------------------------|
| <b>ip ssh version {1   2}</b>        | Configures the version for the SSH server.              |
| <b>ip ssh time-out time</b>          | Sets the authentication timeout for the SSH server.     |
| <b>ip ssh authentication-retries</b> | Sets the authentication retry times for the SSH server. |

**Platform** N/A

**Description**

## 11.18 show ssh

Use this command to display the information about the established SSH connection.

**show ssh**

**Parameter  
Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** N/A

**Command  
Mode** Privileged EXEC mode/Global configuration mode

**Usage Guide** This command is used to display the information about the established SSH connection, including VTY number of connection, SSH version, encryption algorithm, message authentication algorithm, connection status, and user name.

**Configuration** The following example displays the information about the established SSH connection:

**Examples**

```
Ruijie#show ssh
Connection Version Encryption      Hmac      Compress  State
Username
      0      1.5 blowfish                      zlib      Session started test
      1      2.0 aes256-cbc    hmac-sha1  zlib      Session started test
```

## Field Description

| Field      | Description                      |
|------------|----------------------------------|
| Connection | VTY number                       |
| Version    | SSH version                      |
| Encryption | Encryption algorithm             |
| Hmac       | Message authentication algorithm |
| Compress   | Compress algorithm               |
| State      | Connection state                 |
| Username   | Username                         |

**Related****Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform**

N/A

**Description**

## 12 URPF Commands

### 12.1 clear ip urpf

Use this command to clear IPv4 URPF packet drop statistics.

**clear ip urpf** [ **interface** *interface-name* ]

**Parameter Description**

| Parameter                              | Description                                   |
|----------------------------------------|-----------------------------------------------|
| <b>interface</b> <i>interface-name</i> | Clears statistics on the specified interface. |

**Defaults**

N/A

**Command Mode**

Privileged EXEC mode

**Usage Guide** If no interface is specified, IPv4 URPF packet drop statistics on all interfaces are cleared by default.

**Configuration** The following example clears IPv4 URPF packet drop statistics on port GigabitEthernet 0/1.

**Examples**

```
Ruijie# clear ip urpf interface gigabitEthernet0/1
```

The following example clears IPv4 URPF packet drop statistics on all interfaces.

```
Ruijie# clear ip urpf
```

**Related  
Commands**

| Command     | Description                                     |
|-------------|-------------------------------------------------|
| showip urpf | Displays the URPF configuration and statistics. |

**Platform** N/A

**Description**

## 12.2 ip verify unicast source reachable-via (Interface Configuration Mode)

Use this command to enable the IPv4 URPF feature in the interface configuration mode.

Use the **no** form of this command to restore the default setting.

**ip verify unicast source reachable-via { rx | any } [ allow-default ]**

**no ip verify unicast**

**Parameter  
Description**

| Parameter            | Description                                                                                                                                                                                                   |
|----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>rx</b>            | URPF check in the strict mode. In the strict mode, the egress port for the forwarding entry in the forwarding list found through the source address for the IP packet shall be matched with the ingress port. |
| <b>any</b>           | URPF check in the loose mode. In the loose mode, the forwarding entry for the source address for the IP packet can be found in the forwarding list.                                                           |
| <b>allow-default</b> | (Optional) Allows using the default route to check URPF.                                                                                                                                                      |

**Defaults** This function is disabled by default.

**Command  
Mode** Interface configuration mode





**Usage Guide** To determine whether the route for the source address is in the forwarding list or not and the packet validity, enable the URPF feature to check the source address for the received IP packets. If no forwarding entry is matched, the packets are illegal.

Enabling URPF feature in the interface configuration mode enables URPF check for the received packets on the interface.

By default, the default route is not used for URPF check. Use the keyword allow-default to enable the

URPF check.

By default, the packets that failed to pass the URPF check are dropped. With ACL (acl-name) configured, the ACL matching continues when the routing fails. The packets will be dropped if the ACL is inexistent or the deny ACE is matched; otherwise, if the permit ACE is matched, the packets will be forwarded.

-  After this command is used, URPF check on IPv4 packets will be enabled.
-  This function is supported only on routed and Layer 3 interfaces, and have the following restrictions:
  - Not support the ACL association;  
Not support to use the IPv6 route with prefix in 65 to 127 bits for the URPF check;
  - After enabling the URPF feature, the range of packets received on the interface will be expanded, that is, the URPF feature is enabled for all packets received on the physical ports.
  - After enabling the URPF feature, it halves the route forwarding capacity.
  - After enabling the URPF feature in the strict mode, the user can match the equivalent route when URPF check is enabled for the packets received on the interface.
-  URPF feature cannot be configured in the global configuration mode and in the interface configuration mode at the same time.
-  URPF feature cannot be configured on range interface.

**Configuration Examples** The following example checks the URPF feature of the received packets in the strict mode on the interface GigabitEthernet 0/1.

```
Ruijie(config)# interface gigabitEthernet0/1
Ruijie(config-if-GigabitEthernet 0/1)# ip verify unicast source reachable-via rx
```

**Related Commands**

| Command             | Description                    |
|---------------------|--------------------------------|
| <b>show ip urpf</b> | Displays the URPF information. |

**Platform Description** N/A

## 12.3 ip verify urpf drop-rate compute interval

Use this command to set the URPF drop-rate compute interval.

Use the **no** form of this command to restore the default setting.

**ip verify urpf drop-rate compute interval** *seconds*

**no ip verify urpf drop-rate compute interval**

**Parameter Description**

| Parameter      | Description                                                       |
|----------------|-------------------------------------------------------------------|
| <i>seconds</i> | Sets the URPF drop-rate compute interval, in the range from 30 to |



|  |                             |
|--|-----------------------------|
|  | 300 in the unit of seconds. |
|--|-----------------------------|

**Defaults** The default is 30 seconds.

**Command Mode** Global configuration mode

**Usage Guide** The URPF drop-rate is computed globally for both IPv4 and IPv6 packets on interfaces enabled with URPF.

**Configuration** The following example sets the URPF drop-rate compute interval as 60 seconds.

**Examples** Ruijie(config)# ip verify urpf drop-rate compute interval 60

**Related Commands**

| Command                                          | Description                                     |
|--------------------------------------------------|-------------------------------------------------|
| <b>ip verify urpf drop-rate notify</b>           | Sets the URPF drop-rate information monitoring. |
| <b>ip verify urpf drop-rate notify hold-down</b> | Sets the URPF drop-rate warning interval.       |
| <b>ip verify urpf notification threshold</b>     | Sets the URPF drop-rate threshold.              |

**Platform** N/A

**Description**

## 12.4 ip verify urpf drop-rate notify

Use this command to enable the URPF drop-rate monitoring.

Use the **no** or **default** form of this command to restore the default setting.

**ip verify urpf drop-rate notify**

**no ip verify urpf drop-rate notify**

**default ip verify urpf drop-rate notify**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** This command is used to enable the URPF drop-rate monitoring, notifying the user of the URPF packet drop information by means of Syslog or Trap for the convenience of the user network monitoring.  
URPF feature cannot be configured on range interface.

**Configuration** The following example enables the URPF drop-rate monitoring on port GigabitEthernet 0/1.

**Examples**

```
Ruijie(config)# interface gigabitEthernet0/1
Ruijie(config-if-GigabitEthernet 0/1)# ip verify urpf drop-rate notify
```

**Related Commands**

| Command                                          | Description                               |
|--------------------------------------------------|-------------------------------------------|
| <b>ip verify urpf drop-rate compute interval</b> | Sets the URPF drop-rate compute interval. |
| <b>ip verify urpf drop-rate notify hold-down</b> | Sets the URPF drop-rate warning interval. |
| <b>ip verify urpf notification threshold</b>     | Sets the URPF drop-rate threshold.        |

**Platform** N/A

**Description**

## 12.5 ip verify urpf drop-rate notify hold-down

Use this command to set the URPF drop-rate notification interval.

Use the **no** form of this command to restore to the default setting.

**ip verify urpf drop-rate notify hold-down** *seconds*

**no ip verify urpf drop-rate notify hold-down**

**Parameter Description**

| Parameter      | Description                                                                                        |
|----------------|----------------------------------------------------------------------------------------------------|
| <i>seconds</i> | Sets the URPF drop-rate notification interval, in the range from 30 to 300 in the unit of seconds. |

**Defaults** The default is 300 seconds.

**Command** Global configuration mode

**Mode**

**Usage Guide** N/A

**Configuration** The following example sets the URPF drop-rate notification interval as 60 seconds.

**Examples**

```
Ruijie(config)# ip verify urpf drop-rate notify hold-down 60
```

**Related Commands**

| Command                                          | Description                                 |
|--------------------------------------------------|---------------------------------------------|
| <b>ip verify urpf drop-rate compute interval</b> | Sets the URPF drop-rate computing interval. |
| <b>ip verify urpf drop-rate notify</b>           | Sets the URPF drop-rate monitoring.         |
| <b>ip verify urpf notification threshold</b>     | Sets the URPF drop-rate threshold.          |

**Platform** N/A

**Description**

## 12.6 ip verify urpf notification threshold

Use this command to set the URPF drop-rate threshold.

Use the **no** form of this command to restore the default setting.

**ip verify urpf notification threshold** *rate-value*

**no ip verify urpf notification threshold**

| Parameter Description | Parameter                          | Description                                                                                                      |
|-----------------------|------------------------------------|------------------------------------------------------------------------------------------------------------------|
|                       | <b>threshold</b> <i>rate-value</i> | Sets the URPF drop-rate threshold, in the range from 0 to 4,294,967,295 in the unit of packets per second (pps). |

**Defaults** The default is 1,000 pps.

**Command** Interface configuration mode

**Mode**

**Usage Guide** The threshold 0 indicates that once the device detects a dropped packet due to the IPv4 URPF check, the notification is sent.

The user can adjust the drop-rate threshold value according to the actual network performance. URPF feature cannot be configured on range interface.

**Configuration** The following example sets the URPF drop-rate threshold 10pps on the interface GigabitEthernet 0/1.

**Examples**

```
Ruijie(config)# interface gigabitEthernet0/1
Ruijie(config-if-GigabitEthernet 0/1)# ipv6 verify urpf drop-rate notify
Ruijie(config-if-GigabitEthernet 0/1)# ipv6 verify urpf notification
threshold 10
```

| Related Commands | Command                                          | Description                                     |
|------------------|--------------------------------------------------|-------------------------------------------------|
|                  | <b>ip verify urpf drop-rate compute interval</b> | Sets the URPF drop-rate computing interval.     |
|                  | <b>ip verify urpf drop-rate notify</b>           | Sets the URPF drop-rate information monitoring. |
|                  | <b>ip verify urpf drop-rate notify hold-down</b> | Sets the URPF drop-rate notification interval.  |

**Platform** N/A

**Description**

## 12.7 show ip urpf

Use this command to display the IPv4 URPF configuration and statistics.

**show ip urpf** [ **interface** *interface-name* ]

| Parameter Description | Parameter                              | Description                                                           |
|-----------------------|----------------------------------------|-----------------------------------------------------------------------|
|                       | <b>interface</b> <i>interface-name</i> | Displays the configuration and statistics on the specified interface. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** The global configuration and statistics of all interfaces are displayed by default.

**Configuration Examples** The following example displays IPv4 URPF configuration and statistics on port GigabitEthernet 0/1.

### Examples

```
Ruijie# show ip urpf interface gigabitEthernet0/21
IP verify source reachable-via RX
IP verify URPF drop-rate notify disabled
IP verify URPF notification threshold is 1000pps
Number of drop packets in this interface is 124
Number of drop-rate notification counts in this interface is 0
```

| Field                                                          | Description                                                                                                                      |
|----------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------|
| IP verify source reachable-via xx                              | xx in strict mode is displayed as RX and in loose mode as ANY.                                                                   |
| IP verify URPF drop-rate notify xx                             | If drop rate notification is enabled, xx is displayed as enabled. Otherwise, it is displayed as disabled.                        |
| IP verify URPF notification threshold is xxpps                 | The threshold of URPF drop rate, in the range from 0 to 4294967295 in the unit of packets per second (pps). The default is 1000. |
| Number of drop packets in this interface is x                  | The number of drop packets                                                                                                       |
| Number of drop-rate notification counts in this interface is x | The URPF drop-rate notification counts                                                                                           |

The following example displays IPv4 URPF configuration and statistics.

```
Ruijie# show ip urpf
IP verify URPF drop-rate compute interval is 30s
IP verify URPF drop-rate notify hold-down is 300s

Interface GigabitEthernet 0/1
IP verify source reachable-via RX
IP verify URPF drop-rate notify disabled
IP verify URPF notification threshold is 1000pps
```

```
Number of drop packets in this interface is 124
```

```
Number of drop-rate notification counts in this interface is 2
```

| Field                                          | Description                                                                                                                         |
|------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------|
| IP verify URPF drop-rate compute interval is x | Drop-rate computing interval                                                                                                        |
| IP verify URPF drop-rate notify hold-down is x | Drop-rate notification interval                                                                                                     |
| Interface interface-name                       | interface-name is the name of the interface on which URPF is applied. Configuration and statistics on this interface are displayed. |

**Related  
Commands**

| Command                                          | Description                               |
|--------------------------------------------------|-------------------------------------------|
| <b>ip verify unicast source reachable-via</b>    | Enables the URPF features.                |
| <b>ip verify urpf drop-rate compute interval</b> | Sets the URPF drop-rate compute interval. |
| <b>ip verify urpf drop-rate notify hold-down</b> | Sets the URPF drop-rate warning interval. |
| <b>ip verify urpf notification threshold</b>     | Sets the URPF drop-rate threshold.        |
| <b>clear ip urpf</b>                             | Clears the URPF statistical information.  |

**Platform** N/A  
**Description**

# 13 CPU Protection Commands

## 13.1 clear cpu-protect-counters

Use this command to clear the CPP statistics.

**clear cpu-protect counters** [ device *device\_num* ]

| Parameter Description | Parameter         | Description                                                                                                                                                                                                                                                                |
|-----------------------|-------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <i>device_num</i> | As a single physical device, there is no device parameter; As a VSU, the device parameter indicates the chassis or the box-type device. If no device parameter is specified, that indicates this command takes effect to the master chassis or the master box-type device. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration Examples** The following example clears the CPP statistics.

```
Ruijie(config)#show cpu-protect type bpdu
Packet Type      Traffic-class  Bandwidth(pps)  Rate(pps)  Drop(pps)
Total    Total Drop
-----  -
bpdu          6           200             0           0           600         50
Ruijie#clear cpu-protect counters
Ruijie(config)#show cpu-protect type bpdu
Packet Type      Traffic-class  Bandwidth(pps)  Rate(pps)  Drop(pps)
Total    Total Drop
-----  -
bpdu          6           200             0           0           0           0
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 13.2 clear cpu-protect-counters mboard

Use this command to clear the CPP statistics on the supervisor module.

**clear cpu-protect counters mboard**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example clears the CPP statistics on the supervisor module.

**Examples**

```
Ruijie(config)#show cpu-protect type bpdu
Packet Type      Traffic-class  Bandwidth(pps)  Rate(pps)  Drop(pps)
Total      Total Drop
-----
-----
bpdu          6          200          0          0          600          50
Ruijie#clear cpu-protect counters mboard
Ruijie(config)#show cpu-protect type bpdu
Packet Type      Traffic-class  Bandwidth(pps)  Rate(pps)  Drop(pps)
Total      Total Drop
-----
-----
bpdu          6          200          0          0          0          0
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 13.3 cpu-protect cpu bandwidth

Use this command to configure the bandwidth for the CPU port. Use the **no** form of this command to restore the default setting.

**cpu-protect cpu bandwidth *bandwidth\_value***

**no cpu-protect cpu bandwidth**

| Parameter Description | Parameter              | Description                                                                                     |
|-----------------------|------------------------|-------------------------------------------------------------------------------------------------|
|                       | <i>bandwidth_value</i> | An integer number ranges from 0 to 100000 (PPS). Indicates the bandwidth value of the CPU port. |

**Defaults** The default CPU port bandwidth varies with products.

**Command Mode** Global configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example sets the CPU port bandwidth to 32000pps.

```
Ruijie# configure terminal
Ruijie(config)# cpu-protect cpu bandwidth 32000
Ruijie#show cpu-protect cpu
%cpu port bandwidth: 32000(pps)
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 13.4 cpu-protect traffic-class bandwidth

Use this command to configure the bandwidth for each priority queue. Use the **no** form of this command to restore the default setting.

**cpu-protect traffic-class** *traffic-class-num* **bandwidth** *bandwidth\_value*

**no cpu-protect traffic-class** *traffic-class-num* **bandwidth**

| Parameter Description | Parameter                | Description                                                                                     |
|-----------------------|--------------------------|-------------------------------------------------------------------------------------------------|
|                       | <i>traffic-class-num</i> | A default integer that varies with products, indicating the queue priority                      |
|                       | <i>bandwidth_value</i>   | An integer number ranges from 0 to 100000 (pps). Indicates the bandwidth value of the CPU port. |

**Defaults** The default bandwidth of each priority queue varies with products.

**Command** Global configuration mode



**Mode****Usage Guide** N/A**Configuration** The following example sets the priority queue 5 to 3500 pps.**Examples**

```
Ruijie# configure terminal
Ruijie(config)# cpu-protect traffic-class 5 bandwidth 3500
Ruijie#show cpu-protect traffic-class 5
Traffic-class   Bandwidth(pps)  Rate(pps)      Drop(pps)
-----
5               3500            0              0
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A**Description**

## 13.5 cpu-protect type bandwidth

Use this command to configure the bandwidth of a specific packet.

Use the **no** form of this command to restore the default setting.

**cpu-protect type** *packet-type* **bandwidth** *bandwidth\_value*

**no cpu-protect type** *packet-type* **bandwidth**

**Parameter  
Description**

| Parameter              | Description                                                                                    |
|------------------------|------------------------------------------------------------------------------------------------|
| <i>packet-type</i>     | Packet type, which varies with products                                                        |
| <i>bandwidth_value</i> | An integer number ranges from 0 to 32000 (pps). Indicates the bandwidth value of the CPU port. |

**Defaults** The default CPU port bandwidth varies with products.**Command** Global configuration mode**Mode****Usage Guide** N/A**Configuration** The following example sets the BPDU bandwidth to 200 pps.**Examples**

```
Ruijie# configure terminal
Ruijie(config)# cpu-protect type bpdu bandwidth 200
Ruijie(config)#show cpu-protect type bpdu
Packet Type      Traffic-class  Bandwidth(pps)  Rate(pps)  Drop(pps)
```

| Total | Total Drop |       |       |       |       |
|-------|------------|-------|-------|-------|-------|
| ----- | -----      | ----- | ----- | ----- | ----- |
| bpdu  | 6          | 200   | 0     | 0     | 0     |

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

### 13.6 cpu-protect type traffic-class

Use this command to set the priority queue (PQ) of the packet.  
 Use the **no** form of this command to restore the default setting.

**cpu-protect type** *packet-type* **traffic-class** *traffic-class-num*  
**no cpu-protect type** *packet-type* **traffic-class**

| Parameter Description | Parameter                | Description                                                                             |
|-----------------------|--------------------------|-----------------------------------------------------------------------------------------|
|                       |                          | <i>packet-type</i>                                                                      |
|                       | <i>traffic-class-num</i> | An integer number varying with products. Indicates the bandwidth value of the CPU port. |

**Defaults** The default PQ varies with products.

**Command Mode** Global configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example sets the PQ of BPDU packets to 5.

```
Ruijie# configure terminal
Ruijie(config)# cpu-protect type bpdu traffic-class 5
Ruijie(config)#show cpu-protect type bpdu
Packet Type      Traffic-class  Bandwidth(pps)  Rate(pps)  Drop(pps)
Total    Total Drop
-----
-----
bpdu      5          200          0          0          0          0
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  |         |             |

|     |     |
|-----|-----|
| N/A | N/A |
|-----|-----|

**Platform** N/A

**Description**

## 13.7 show cpu-protect

Use this command to display all CPP configuration and statistics.

**show cpu-protect** [ **device** *device\_num* ]

| Parameter Description | Parameter         | Description                                                                                                                                                                                                                                                                |
|-----------------------|-------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <i>device_num</i> | As a single physical device, there is no device parameter; As a VSU, the device parameter indicates the chassis or the box-type device. If no device parameter is specified, that indicates this command takes effect to the master chassis or the master box-type device. |

**Defaults** N/A

**Command Mode** All configuration mode

**Usage Guide** N/A

**Configuration** N/A

**Examples**

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 13.8 show cpu-protect cpu

Use this command to display the configurations of the CPU port.

**show cpu-protect cpu**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command** All configuration modes

**Mode**

**Usage Guide** N/A

**Configuration** The following example displays the configuration of the CPU port.

**Examples**

```
Ruijie#show cpu-protect cpu
%cpu port bandwidth: 32000(pps)
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 13.9 show cpu-protect mboard

Use this command to display the statistics of various packets of CPU protection on the management board.

**show cpu-protect mboard**

**Parameter  
Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** N/A

**Command** All configuration modes

**Mode**

**Usage Guide** This command displays the statistics of the packets received by CPU on the management board.

**Configuration** The following example displays the CPP configuration and statistics of the master device.

**Examples**

```
Ruijie#show cpu-protect mboard
%cpu port bandwidth: 80000(pps)
Traffic-class  Bandwidth(pps)  Rate(pps)      Drop(pps)
-----
0              8000              0              0
1              8000              0              0
2              8000              0              0
3              8000              0              0
```

|              |               |                |           |           |   |   |
|--------------|---------------|----------------|-----------|-----------|---|---|
| 4            | 8000          | 0              | 0         |           |   |   |
| 5            | 8000          | 0              | 0         |           |   |   |
| 6            | 8000          | 0              | 0         |           |   |   |
| 7            | 8000          | 0              | 0         |           |   |   |
| Packet Type  | Traffic-class | Bandwidth(pps) | Rate(pps) | Drop(pps) |   |   |
| Total        | Total Drop    |                |           |           |   |   |
| -----        |               |                |           |           |   |   |
| bpdu         | 6             | 128            | 0         | 0         | 0 | 0 |
| arp          | 3             | 10000          | 0         | 0         | 0 | 0 |
| arp-dai      | 3             | 10000          | 0         | 0         | 0 | 0 |
| arp-proxy    | 3             | 10000          | 0         | 0         | 0 | 0 |
| tpp          | 7             | 128            | 0         | 0         | 0 | 0 |
| dot1x        | 4             | 128            | 0         | 0         | 0 | 0 |
| gvrp         | 5             | 128            | 0         | 0         | 0 | 0 |
| rldp         | 6             | 128            | 0         | 0         | 0 | 0 |
| larp         | 6             | 128            | 0         | 0         | 0 | 0 |
| rerp         | 6             | 128            | 0         | 0         | 0 | 0 |
| reup         | 6             | 128            | 0         | 0         | 0 | 0 |
| lldp         | 5             | 128            | 0         | 0         | 0 | 0 |
| cdp          | 5             | 128            | 0         | 0         | 0 | 0 |
| dhcps        | 4             | 128            | 0         | 0         | 0 | 0 |
| dhcps6       | 4             | 128            | 0         | 0         | 0 | 0 |
| dhcp6-client | 4             | 128            | 0         | 0         | 0 | 0 |
| dhcp6-server | 4             | 128            | 0         | 0         | 0 | 0 |
| dhcp-relay-c | 4             | 128            | 0         | 0         | 0 | 0 |
| dhcp-relay-s | 4             | 128            | 0         | 0         | 0 | 0 |
| option82     | 4             | 128            | 0         | 0         | 0 | 0 |
| tunnel-bpdu  | 5             | 128            | 0         | 0         | 0 | 0 |
| tunnel-gvrp  | 5             | 128            | 0         | 0         | 0 | 0 |
| unknown-v6mc | 3             | 128            | 0         | 0         | 0 | 0 |
| known-v6mc   | 3             | 128            | 0         | 0         | 0 | 0 |
| xgv6-ipmc    | 3             | 128            | 0         | 0         | 0 | 0 |
| stargv6-ipmc | 3             | 128            | 0         | 0         | 0 | 0 |
| unknown-v4mc | 3             | 128            | 0         | 0         | 0 | 0 |
| known-v4mc   | 3             | 128            | 0         | 0         | 0 | 0 |
| xgv-ipmc     | 3             | 128            | 0         | 0         | 0 | 0 |
| sgv-ipmc     | 3             | 128            | 0         | 0         | 0 | 0 |
| udp-helper   | 4             | 128            | 0         | 0         | 0 | 0 |
| dvmrp        | 5             | 128            | 0         | 0         | 0 | 0 |
| igmp         | 4             | 128            | 0         | 0         | 0 | 0 |
| icmp         | 4             | 128            | 0         | 0         | 0 | 0 |
| ospf         | 5             | 128            | 0         | 0         | 0 | 0 |
| ospf3        | 5             | 128            | 0         | 0         | 0 | 0 |

|                    |   |       |   |   |   |   |
|--------------------|---|-------|---|---|---|---|
| pim                | 6 | 128   | 0 | 0 | 0 | 0 |
| pimv6              | 6 | 128   | 0 | 0 | 0 | 0 |
| rip                | 6 | 128   | 0 | 0 | 0 | 0 |
| ripng              | 6 | 128   | 0 | 0 | 0 | 0 |
| vrrp               | 6 | 128   | 0 | 0 | 0 | 0 |
| vrrp6              | 6 | 128   | 0 | 0 | 0 | 0 |
| ttl0               | 6 | 128   | 0 | 0 | 0 | 0 |
| ttl1               | 6 | 128   | 0 | 0 | 0 | 0 |
| err_hop_limit      | 1 | 800   | 0 | 0 | 0 | 0 |
| local-ipv4         | 6 | 128   | 0 | 0 | 0 | 0 |
| local-ipv6         | 6 | 128   | 0 | 0 | 0 | 0 |
| route-host-v4      | 0 | 4096  | 0 | 0 | 0 | 0 |
| route-host-v6      | 0 | 4096  | 0 | 0 | 0 | 0 |
| mld                | 0 | 1000  | 0 | 0 | 0 | 0 |
| nd-snp-ns-na       | 6 | 128   | 0 | 0 | 0 | 0 |
| nd-snp-rs          | 6 | 128   | 0 | 0 | 0 | 0 |
| nd-snp-ra-redirect | 6 | 128   | 0 | 0 | 0 | 0 |
| 0                  |   |       |   |   |   |   |
| nd-non-snp         | 6 | 128   | 0 | 0 | 0 | 0 |
| erps               | 4 | 128   | 0 | 0 | 0 | 0 |
| mpls-ttl0          | 6 | 128   | 0 | 0 | 0 | 0 |
| mpls-ttl1          | 6 | 128   | 0 | 0 | 0 | 0 |
| mpls-ctrl          | 6 | 128   | 0 | 0 | 0 | 0 |
| isis               | 5 | 2000  | 0 | 0 | 0 | 0 |
| bgp                | 1 | 128   | 0 | 0 | 0 | 0 |
| cfm                | 0 | 128   | 0 | 0 | 0 | 0 |
| fcoe-fip           | 6 | 128   | 0 | 0 | 0 | 0 |
| fcoe-local         | 6 | 128   | 0 | 0 | 0 | 0 |
| bfd-echo           | 6 | 5120  | 0 | 0 | 0 | 0 |
| bfd-ctrl           | 6 | 5120  | 0 | 0 | 0 | 0 |
| madp               | 7 | 1000  | 0 | 0 | 0 | 0 |
| ip4-other          | 6 | 128   | 0 | 0 | 0 | 0 |
| ip6-other          | 6 | 128   | 0 | 0 | 0 | 0 |
| non-ip-other       | 6 | 20000 | 0 | 0 | 0 | 0 |
| trill              | 2 | 1000  | 0 | 0 | 0 | 0 |
| trill-oam          | 2 | 1000  | 0 | 0 | 0 | 0 |
| efm                | 2 | 1000  | 0 | 0 | 0 | 0 |

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform  
Description**

N/A

### 13.10 show cpu-protect summary

Use this command to display the CPP configuration and statistics of the master device.

**show cpu-protect summary**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** All configuration modes

**Usage Guide** N/A

```

Configuration Ruijie#show cpu-protect summary
Examples %cpu port bandwidth: 100000(pps)
Traffic-class  Bandwidth(pps)  Rate(pps)  Drop(pps)
-----
0              6000              0          0
1              6000              0          0
2              6000              0          0
3              6000              0          0
4              6000              0          0
5              6000              0          0
6              6000              0          0
7              6000              0          0

Packet Type      Traffic-class  Bandwidth(pps)  Rate(pps)  Drop(pps)  Total
Total Drop
-----
-----
bpdu             6              128             0           0           0           0
arp              1              3000            0           0           0           0
tpp              6              128             0           0           0           0
dot1x           2              1500            0           0           0           0
gvrp            5              128             0           0           0           0
rldp            5              128             0           0           0           0
lACP            5              256             0           0           0           0
rerp            5              128             0           0           0           0
reup            5              128             0           0           0           0
lldp            5              768             0           0           0           0
cdp             5              768             0           0           0           0
dhcps           2              1500            0           0           0           0
    
```

|                    |   |      |   |   |   |   |
|--------------------|---|------|---|---|---|---|
| dhcps6             | 2 | 1500 | 0 | 0 | 0 | 0 |
| dhcp6-client       | 2 | 1500 | 0 | 0 | 0 | 0 |
| dhcp6-server       | 2 | 1500 | 0 | 0 | 0 | 0 |
| dhcp-relay-c       | 2 | 1500 | 0 | 0 | 0 | 0 |
| dhcp-relay-s       | 2 | 1500 | 0 | 0 | 0 | 0 |
| option82           | 2 | 1500 | 0 | 0 | 0 | 0 |
| tunnel-bpdu        | 2 | 128  | 0 | 0 | 0 | 0 |
| tunnel-gvrp        | 2 | 128  | 0 | 0 | 0 | 0 |
| unknown-v6mc       | 1 | 128  | 0 | 0 | 0 | 0 |
| xgv6-ipmc          | 1 | 128  | 0 | 0 | 0 | 0 |
| stargv6-ipmc       | 1 | 128  | 0 | 0 | 0 | 0 |
| unknown-v4mc       | 1 | 128  | 0 | 0 | 0 | 0 |
| xgv-ipmc           | 2 | 128  | 0 | 0 | 0 | 0 |
| stargv-ipmc        | 2 | 128  | 0 | 0 | 0 | 0 |
| udp-helper         | 1 | 128  | 0 | 0 | 0 | 0 |
| dvmrp              | 4 | 128  | 0 | 0 | 0 | 0 |
| igmp               | 2 | 1000 | 0 | 0 | 0 | 0 |
| icmp               | 3 | 1600 | 0 | 0 | 0 | 0 |
| ospf               | 4 | 2000 | 0 | 0 | 0 | 0 |
| ospf3              | 4 | 2000 | 0 | 0 | 0 | 0 |
| pim                | 4 | 1000 | 0 | 0 | 0 | 0 |
| pimv6              | 4 | 1000 | 0 | 0 | 0 | 0 |
| rip                | 4 | 128  | 0 | 0 | 0 | 0 |
| ripng              | 4 | 128  | 0 | 0 | 0 | 0 |
| vrrp               | 6 | 256  | 0 | 0 | 0 | 0 |
| vrrpv6             | 6 | 256  | 0 | 0 | 0 | 0 |
| ttl0               | 0 | 128  | 0 | 0 | 0 | 0 |
| ttl1               | 0 | 2000 | 0 | 0 | 0 | 0 |
| hop-limit          | 0 | 800  | 0 | 0 | 0 | 0 |
| local-ipv4         | 3 | 4000 | 0 | 0 | 0 | 0 |
| local-ipv6         | 3 | 4000 | 0 | 0 | 0 | 0 |
| v4uc-route         | 1 | 800  | 0 | 0 | 0 | 0 |
| v6uc-route         | 1 | 800  | 0 | 0 | 0 | 0 |
| rt-host            | 4 | 3000 | 0 | 0 | 0 | 0 |
| mld                | 2 | 1000 | 0 | 0 | 0 | 0 |
| nd-snp-ns-na       | 1 | 3000 | 0 | 0 | 0 | 0 |
| nd-snp-rs          | 1 | 1000 | 0 | 0 | 0 | 0 |
| nd-snp-ra-redirect | 1 | 1000 | 0 | 0 | 0 | 0 |
| erps               | 5 | 128  | 0 | 0 | 0 | 0 |
| mpls-ttl0          | 4 | 128  | 0 | 0 | 0 | 0 |
| mpls-ttl1          | 4 | 128  | 0 | 0 | 0 | 0 |
| mpls-ctrl          | 4 | 128  | 0 | 0 | 0 | 0 |
| isis               | 4 | 2000 | 0 | 0 | 0 | 0 |
| bgp                | 4 | 2000 | 0 | 0 | 0 | 0 |



|              |   |      |   |   |      |   |
|--------------|---|------|---|---|------|---|
| cfm          | 5 | 512  | 0 | 0 | 0    | 0 |
| web-auth     | 2 | 2000 | 0 | 0 | 0    | 0 |
| fcoe-fip     | 4 | 1000 | 0 | 0 | 0    | 0 |
| fcoe-local   | 4 | 1000 | 0 | 0 | 0    | 0 |
| bfd          | 6 | 5120 | 0 | 0 | 0    | 0 |
| micro-bfd    | 6 | 5120 | 0 | 0 | 0    | 0 |
| micro-bfd-v6 | 6 | 5120 | 0 | 0 | 0    | 0 |
| dldp         | 6 | 3200 | 0 | 0 | 0    | 0 |
| other        | 0 | 4096 | 0 | 0 | 0    | 0 |
| trill        | 4 | 1000 | 0 | 0 | 0    | 0 |
| efm          | 5 | 1000 | 0 | 0 | 0    | 0 |
| ipv6-all     | 0 | 2000 | 0 | 0 | 0    | 0 |
| ip-option    | 0 | 800  | 0 | 0 | 0    | 0 |
| mgmt         | - | 4000 | 4 | 0 | 4639 | 0 |
| dns          | 2 | 200  | 0 | 0 | 0    | 0 |
| sdn          | 0 | 5000 | 0 | 0 | 0    | 0 |
| sdn_of_fetch | 0 | 5000 | 0 | 0 | 0    | 0 |
| sdn_of_copy  | 0 | 5000 | 0 | 0 | 0    | 0 |
| sdn_of_trap  | 0 | 5000 | 0 | 0 | 0    | 0 |
| vxlan-non-uc | 1 | 512  | 0 | 0 | 0    | 0 |
| local-telnet | 3 | 1000 | 0 | 0 | 0    | 0 |
| local-snmp   | 3 | 1000 | 0 | 0 | 0    | 0 |
| local-ssh    | 3 | 1000 | 0 | 0 | 0    | 0 |

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 13.11 show cpu-protect traffic-class

Use this command to display the summarized configuration and statistics of priority queues.

**show cpu-protect traffic-class** {*traffic-class-num* | **all**} [**device** *device\_num*]

**Parameter Description**

| Parameter                | Description                                                                                                                                                                                                    |
|--------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>traffic-class-num</i> | A default integer that varies with products, indicating the queue priority.                                                                                                                                    |
| <i>all</i>               | Displays configurations and statistics of all priority queues.                                                                                                                                                 |
| <i>device_num</i>        | As a single physical device, there is no device parameter; As a VSU, the device parameter indicates the chassis or the box-type device. If no device parameter is specified, that indicates this command takes |

|  |                                                             |
|--|-------------------------------------------------------------|
|  | effect to the master chassis or the master box-type device. |
|--|-------------------------------------------------------------|

**Defaults** N/A

**Command** All configuration modes

**Mode**

**Usage Guide** N/A

**Configuration** The following example displays the summarized configuration and statistics of priority queues.

**Examples**

```
Ruijie#show cpu-protect traffic-class all
Traffic-class  Bandwidth(pps)  Rate(pps)      Drop(pps)
-----
0              8000             0              0
1              8000             0              0
2              8000             0              0
3              8000             0              0
4              8000             0              0
5              3200             0              0
6              8000             0              0
7              8000             0              0
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 13.12 show cpu-protect type

Use this command to display the statistics of the specified type of packets

**show cpu-protect type** *packet-type* [ **device** *device\_num* ]

**Parameter  
Description**

| Parameter         | Description                                                                                                                                                                                                                                                                |
|-------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>packt-type</i> | Packet type, which varies with products                                                                                                                                                                                                                                    |
| <i>all</i>        | Displays the configurations and statistics of all packet types.                                                                                                                                                                                                            |
| <i>device_num</i> | As a single physical device, there is no device parameter; As a VSU, the device parameter indicates the chassis or the box-type device. If no device parameter is specified, that indicates this command takes effect to the master chassis or the master box-type device. |

**Defaults** N/A

**Command** All configuration modes

**Mode**

**Usage Guide** N/A

**Configuration** The following example displays the statistics of the ICMP packets.

**Examples**

```
Ruijie(config)#show cpu-protect type icmp
Packet Type      Traffic-class  Bandwidth(pps)  Rate(pps)  Drop(pps)
Total    Total Drop
-----
icmp          5             1500             50          0           10000
100
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 14 DHCP Snooping Commands

### 14.1 clear ip dhcp snooping binding

Use this command to delete the dynamic user information from the DHCP Snooping binding database.


**clear ip dhcp snooping binding** [ *ip* ] [ *mac* ] [ **vlan** *vlan-id* ] [ **interface** *interface-id* ]

| Parameter Description | Parameter           | Description                                      |
|-----------------------|---------------------|--------------------------------------------------|
|                       | <i>mac</i>          | Specifies the user MAC address to be cleared.    |
|                       | <i>vlan-id</i>      | Specifies the ID of the VLAN to be cleared.      |
|                       | <i>ip</i>           | Specifies the IP address to be cleared.          |
|                       | <i>interface-id</i> | Specifies the ID of the interface to be cleared. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** Use this command to clear the current dynamic user information from the DHCP Snooping binding database.

 After this command is used, all the DHCP clients connecting interfaces with IP Source Guard function enabled should request IP addresses again, or they cannot access network.

**Configuration Examples** The following example clears the dynamic database information from the DHCP Snooping binding database.

```
Ruijie# clear ip dhcp snooping binding
Ruijie# show ip dhcp snooping binding
Total number of bindings: 0
MacAddress IpAddress Lease(sec) Type VLAN Interface
-----
```

| Related Commands | Command                              | Description                                                     |
|------------------|--------------------------------------|-----------------------------------------------------------------|
|                  | <b>show ip dhcp snooping binding</b> | Displays the information of the DHCP Snooping binding database. |

**Platform Description** N/A

## 14.2 ip dhcp snooping

Use this command to enable the DHCP Snooping function globally.

Use the **no** form of this command to restore the default setting.

**ip dhcp snooping**

**no ip dhcp snooping**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command** Global configuration mode

**Mode**

**Usage Guide** The **show ip dhcp snooping** command is used to display whether the DHCP Snooping function is enabled.

**Configuration** The following example enables the DHCP Snooping function.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# ip dhcp snooping
Ruijie(config)# end
```

| Related Commands | Command                      | Description                                              |
|------------------|------------------------------|----------------------------------------------------------|
|                  | <b>show ip dhcp snooping</b> | Displays the configuration information of DHCP Snooping. |
|                  | <b>ip dhcp snooping vlan</b> | Configures DHCP Snooping enabled VLAN.                   |

**Platform** N/A

**Description**

## 14.3 ip dhcp snooping bootp-bind

Use this command to enable DHCP Snooping BOOTP-bind function.

Use the **no** form of this command to restore the default setting.

**ip dhcp snooping bootp-bind**

**no ip dhcp snooping bootp-bind**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** By default, the DHCP Snooping only forwards BOOTP packets. With this function enabled, it can Snoop BOOTP packets. After the BOOTP client requests an address successfully, the DHCP Snooping adds the BOOTP user to the static binding database.

**Configuration** The following example enables the DHCP Snooping BOOTP-bind function.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# ip dhcp snooping bootp-bind
Ruijie(config)# end
```

**Related Commands**

| Command                      | Description                               |
|------------------------------|-------------------------------------------|
| <b>show ip dhcp snooping</b> | Displays the DHCP Snooping configuration. |

**Platform** N/A  
**Description**

## 14.4 ip dhcp snooping check-giaddr

Use this command to enable DHCP Snooping to support the function of processing Relay requests. Use the **no** form of this command to restore the default setting.

**ip dhcp snooping check-giaddr**

**no ip dhcp snooping check-giaddr**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** After the feature is enabled, services using DHCP Snooping binding entries generated based on Relay requests, such as IP Source Guard/802.1x authentication, cannot be deployed. Otherwise, users fail to access the Internet.  
After the feature is enabled, the **ip dhcp snooping verify mac-address** command cannot be used. Otherwise, DHCP Relay requests will be discarded and as a result, users fail to obtain addresses.

**Configuration** The following example enables DHCP Snooping to support the function of processing Relay requests.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# ip dhcp snooping check-giaddr
Ruijie(config)# end
```

**Related Commands**

| Command                      | Description                                                  |
|------------------------------|--------------------------------------------------------------|
| <b>show ip dhcp snooping</b> | Displays the configuration information of the DHCP Snooping. |

**Platform** N/A

**Description**

## 14.5 ip dhcp snooping database

Use this command to configure file backup of the DHCP Snooping binding database.

Use the **no** form of this command to restore the default setting.

**ip dhcp snooping database sata0** [interval *time*]

**no ip dhcp snooping database sata0**

**Parameter Description**

| Parameter   | Description                                                                                                                        |
|-------------|------------------------------------------------------------------------------------------------------------------------------------|
| <i>time</i> | Indicates the interval of storing the database in the unit of second. The range is from 10s to 86,400s. The default value is 300s. |

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** After this feature is enabled, the DHCP Snooping database can be written to the backup file of a specified type. In this way, users are able to resume communication immediately after restart of the device.

**Configuration Examples** The following example sets configures file backup of the DHCP Snooping binding database with the default interval.

```
Ruijie# configure terminal
Ruijie(config)# ip dhcp snooping database sata0
Ruijie(config)# end
```

**Related**

| Command | Description |
|---------|-------------|
|---------|-------------|

| Commands                     |                                                              |
|------------------------------|--------------------------------------------------------------|
| <b>show ip dhcp snooping</b> | Displays the configuration information of the DHCP Snooping. |
| <b>show run</b>              | Displays the current backup mode.                            |

**Platform** N/A

**Description**

## 14.6 ip dhcp snooping database write-delay

Use this command to configure the switch to write the dynamic user information of the DHCP Snooping binding database into the flash periodically.

Use the **no** form of this command to restore the default setting.

**ip dhcp snooping database write-delay** *time*

**no ip dhcp snooping database write-delay**

| Parameter Description | Parameter   | Description                                                                                                                                                               |
|-----------------------|-------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <i>time</i> | The interval at which the system writes the dynamic user information of the DHCP Snooping database into the flash, in the range from 600 to 86,400 in the unit of seconds |

**Defaults** This function is disabled by default.

**Command** Global configuration mode

**Mode**

**Usage Guide** This function writes user information into flash in case of loss after restart. In that case, users need to obtain IP addresses again for normal communication.

 Too fast writing will reduce flash durability.

**Configuration Examples** The following example sets the interval at which the switch writes the user information into the flash to 3,600 seconds.

```
Ruijie# configure terminal
Ruijie(config)# ip dhcp snooping database write-delay 3600
Ruijie(config)# end
```

| Related Commands | Command                      | Description                                                  |
|------------------|------------------------------|--------------------------------------------------------------|
|                  | <b>show ip dhcp snooping</b> | Displays the configuration information of the DHCP Snooping. |



**Platform** N/A  
**Description**

## 14.7 ip dhcp snooping database write-to-flash

Use this command to write the dynamic user information of the DHCP binding database into flash in real time.

**ip dhcp snooping database write-to-flash**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** This command is used to write the dynamic user information of the DHCP binding database into flash in real time.

**Configuration Examples** The following example writes the dynamic user information of the DHCP binding database into flash.

```
Ruijie# configure terminal
Ruijie(config)# ip dhcp snooping database write-to-flash
Ruijie(config)# end
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 14.8 ip dhcp snooping information option

Use this command to add option82 to the DHCP request message.

Use the **no** form of this command to restore the default setting.

**ip dhcp snooping information option [ standard-format ]**


**no ip dhcp snooping information option [ standard-format ]**

| Parameter Description | Parameter              | Description                            |
|-----------------------|------------------------|----------------------------------------|
|                       | <b>standard-format</b> | The option82 uses the standard format. |

**Defaults** This function is disabled by default,

**Command Mode** Global configuration mode

**Usage Guide** This command adds option82 to the DHCP request messages based on which the DHCP server assigns IP addresses.  
By default, this function is in extended mode.

 DHCP Relay function adds option82 by default. Therefore, it is unnecessary to enable functions of DHCP Snooping option82 and DHCP Relay at the same time.

**Configuration Examples** The following example adds option82 to the DHCP request message.

```
Ruijie# configure terminal
Ruijie(config)# ip dhcp snooping information option
Ruijie(config)# end
```

**Related Commands**

| Command                      | Description                               |
|------------------------------|-------------------------------------------|
| <b>show ip dhcp snooping</b> | Displays the DHCP Snooping configuration. |

**Platform** N/A

**Description**

## 14.9 ip dhcp snooping information option format remote-id

Use this command to set the option82 sub-option remote-id as the customized character string.

Use the **no** form of this command to restore the default setting.

**ip dhcp snooping information option format remote-id { string *ascii-string* | hostname }**

**no ip dhcp snooping information option format remote-id { string *ascii-string* | hostname }**

**Parameter Description**

| Parameter                         | Description                                                                            |
|-----------------------------------|----------------------------------------------------------------------------------------|
| <b>string</b> <i>ascii-string</i> | The content of the option82 remote-id extension format is customized character string. |
| <b>hostname</b>                   | The content of the option82 remote-id extension format hostname                        |

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** This command sets the remote-id in the option82 to be added to the DHCP request message as the

customized character string. The DHCP server will assign the IP address according to the option82 information.

**Configuration Examples** The following example adds the option82 into the DHCP request packets with the content of remote-id as hostname.

```
Ruijie# configure terminal
Ruijie(config)# ip dhcp snooping information option format remote-id hostname
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A

## 14.10 ip dhcp snooping monitor

Use this command to enable DHCP Snooping monitoring.  
Use the **no** form of this command to restore the default setting.

**ip dhcp snooping monitor**  
**no ip dhcp snooping monitor**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** After the feature is enabled, DHCP Snooping generates binding entries according to the interaction process by copying DHCP packets. It, however, does not check the validity of packets.

**Configuration Examples** The following example enables DHCP Snooping monitoring.

```
Ruijie# configure terminal
Ruijie(config)# ip dhcp snooping monitor
Ruijie(config)# end
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 14.11 ip dhcp snooping suppression

Use this command to set the port to be the suppression status.

Use the **no** form of this command to restore the default setting.

**ip dhcp snooping suppression**

**no ip dhcp snooping suppression**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode/WLAN security configuration mode

**Usage Guide** This command denies all DHCP request messages under the port, that is, all the users under the port are prohibited to request IP addresses through DHCP.  
This command is only supported on Layer 2 switch interfaces and aggregate ports (APs).

**Configuration** The following example sets **fastEthernet 0/2** and **WLAN 1** to be in the suppression status.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# interface fastEthernet 0/2
Ruijie(config-if)# ip dhcp snooping suppression
Ruijie(config-if)# end
Ruijie# configure terminal
Ruijie(config)# wlansec 1
Ruijie(config-wlansec)# ip dhcp snooping suppression
Ruijie(config-if-wlansec)# end
```

| Related Commands | Command                      | Description                               |
|------------------|------------------------------|-------------------------------------------|
|                  | <b>show ip dhcp snooping</b> | Displays the DHCP Snooping configuration. |

**Platform Description** N/A

## 14.12 ip dhcp snooping trust

Use this command to set the trusted ports for DHCP Snooping.

Use the **no** form of this command to restore the default setting.

**ip dhcp snooping trust**  
**no ip dhcp snooping trust**

| Parameter<br>Description | Parameter | Description |
|--------------------------|-----------|-------------|
|                          |           | N/A         |

**Defaults** All ports are untrusted by default.

**Command Mode** Interface configuration mode

**Usage Guide** Use this command to set a port as a trusted port. The DHCP response messages received under the trust port are forwarded normally, but the response messages received under the untrusted port will be discarded. This command is only supported on Layer 2 switch interfaces and aggregate ports (APs).

**Configuration** The following example sets fastEthernet 0/1 as a trusted port:

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if)# ip dhcp snooping trust
Ruijie(config-if)# end
```

| Related<br>Commands | Command | Description                  |
|---------------------|---------|------------------------------|
|                     |         | <b>show ip dhcp snooping</b> |

**Platform** N/A

**Description**

## 14.13 ip dhcp snooping verify mac-address

Use this command to check whether the source MAC address of the DHCP request message matches against the **client addr** field of the DHCP message.

Use the **no** form of this command to restore the default setting.

**ip dhcp snooping verify mac-address**  
**no ip dhcp snooping verify mac-address**

| Parameter<br>Description | Parameter | Description |
|--------------------------|-----------|-------------|
|                          |           | N/A         |

**Defaults** This function is disabled by default.

**Command** Global configuration mode  
**Mode**

**Usage Guide** Use this command to check the source MAC address of the DHCP request message. If the MAC address in the link-layer header is different from the CHADDR (Client MAC Address), the check fails ,and the packets will be discarded.

**Configuration** The following example enables the check of the source MAC address of the DHCP request message.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# ip dhcp snooping verify mac-address
Ruijie(config)# end
```

**Related Commands**

| Command                      | Description                               |
|------------------------------|-------------------------------------------|
| <b>show ip dhcp snooping</b> | Displays the DHCP Snooping configuration. |

**Platform** N/A

**Description**

## 14.14 ip dhcp snooping vlan

Use this command to enable DHCP Snooping for the specific VLAN.

Use the **no** form of this command to restore the default setting.

**ip dhcp snooping vlan** {vlan-rng | { vlan-min [ vlan-max ] } }

**no ip dhcp snooping vlan** {vlan-rng | { vlan-min [ vlan-max ] } }

**Parameter Description**

| Parameter       | Description                             |
|-----------------|-----------------------------------------|
| <i>vlan-rng</i> | VLAN range of effective DHCP Snooping   |
| <i>vlan-min</i> | Minimum VLAN of effective DHCP Snooping |
| <i>vlan-max</i> | Maximum VLAN of effective DHCP Snooping |

**Defaults** By default, once the DHCP Snooping is enabled globally, it takes effect for all VLANs.

**Command** Global configuration mode  
**Mode**

**Usage Guide** Use this command to enable DHCP Snooping for specified VLANs globally.

**Configuration** The following example enables the DHCP Snooping function in VLAN 1000.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# ip dhcp snooping vlan 1000
Ruijie(config)# end
```

The following example enables the DHCP Snooping function from VLAN1 to VLAN10.

```
Ruijie# configure terminal
Ruijie(config)# ip dhcp snooping vlan 1-10
Ruijie(config)# end
```

#### Related Commands

| Command                 | Description                     |
|-------------------------|---------------------------------|
| <b>ip dhcp snooping</b> | Enables DHCP Snooping globally. |

**Platform** N/A

**Description**

## 14.15 renew ip dhcp snooping database

Use this command to import the information in current flash to the DHCP Snooping binding database manually as needed.

**renew ip dhcp snooping database**


#### Parameter Description

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** This command is used to import the flash file information to the DHCP Snooping database in real time.

 Records out of lease time and repeated will be neglected.

**Configuration Examples** The following example imports the flash file information to the DHCP Snooping database.

```
Ruijie# renew ip dhcp snooping database
```

#### Related Commands

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 14.16 show ip dhcp snooping

Use this command to display the DHCP Snooping configuration.

**show ip dhcp snooping**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration Examples** The following example displays the DHCP Snooping configuration.

```
Ruijie# show ip dhcp snooping
Switch DHCP snooping status :ENABLE
Verification of hwaddr field status :DISABLE
DHCP snooping database write-delay time: 0 seconds
DHCP snooping option 82 status: ENABLE
DHCP snooping Support Bootp bind status: ENABLE
Interface                                     Trusted                                     Rate
limit(pps)
-----
-----
GigabitEthernet 0/4                           YES                                     unlimited
Default   No
```

| Related Commands | Command                                    | Description                                                          |
|------------------|--------------------------------------------|----------------------------------------------------------------------|
|                  | <b>ip dhcp snooping</b>                    | Enables the DHCP Snooping globally.                                  |
|                  | <b>ip dhcp snooping verify mac-address</b> | Enables the check of source MAC address of DHCP Snooping packets.    |
|                  | <b>ip dhcp snooping write-delay</b>        | Sets the interval of writing user information to FLASH periodically. |
|                  | <b>ip dhcp snooping information option</b> | Adds option82 to the DHCP request message.                           |
|                  | <b>ip dhcp snooping bootp-bind</b>         | Enables the DHCP Snooping bootp bind function.                       |
|                  | <b>ip dhcp snooping trust</b>              | Sets the port as a trust port.                                       |

**Platform Description** N/A



## 14.17 show ip dhcp snooping binding

Use this command to display the information of the DHCP Snooping binding database.

**show ip dhcp snooping binding**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** This command is used to display all the information of the DHCP Snooping binding database.

**Configuration** 1: The following example displays the information of the DHCP Snooping binding database.

**Examples**

```
Ruijie# show ip dhcp snooping binding
Total number of bindings: 1
NO.  MACADDRESS      IPADDRESS      LEASE (SEC)   TYPE          VLAN
INTERFACE
-----
-----
1     0000.0000.0001     1.1.1.1       78128         DHCP-Snooping 1
GigabitEthernet 0/1
2     0000.0000.0002     2.2.2.2       78111         DHCP-Snooping 1   WLAN 1
```

2: For products supporting QINQ termination, the following example displays the information of the inner VLAN.

```
Ruijie# show ip dhcp snooping binding
Total number of bindings: 1
NO.  MACADDRESS      IPADDRESS      LEASE (SEC)   TYPE          VLAN
INNER-VLAN INTERFACE
-----
-----
1     0000.0000.0001     1.1.1.1       78128         DHCP-Snooping 1   10
GigabitEthernet 0/1
```

3: For products supporting VXLAN, the following example displays the information of the VXLAN.

```
Ruijie# show ip dhcp snooping binding
Total number of bindings: 1
NO.  MACADDRESS      IPADDRESS      LEASE (SEC)   TYPE          VLAN
INNER-VLAN VXLAN  INTERFACE
-----
-----
1     0000.0000.0001     1.1.1.1       78128         DHCP-Snooping 0   0
```

1 GigabitEthernet 0/1

| Parameter                | Description                                                                                           |
|--------------------------|-------------------------------------------------------------------------------------------------------|
| Total number of bindings | The total number of bindings in the DHCP Snooping database.                                           |
| NO.                      | The record order.                                                                                     |
| MacAddress               | The MAC address of the user.                                                                          |
| IpAddress                | The IP address of the user.                                                                           |
| Lease(sec)               | The lease time of the record.                                                                         |
| Type                     | The record type.                                                                                      |
| VLAN                     | The VLAN where the user belongs.                                                                      |
| INNER-VLAN               | The inner VLAN of the user. It is applicable to all QINQ-termination products.                        |
| VXLAN                    | The VXLAN where the user belongs.                                                                     |
| Interface                | The user's connection interface. It can be a either a wired access interface or wireless access WLAN. |

**Related Commands**

| Command                               | Description                                                                  |
|---------------------------------------|------------------------------------------------------------------------------|
| <b>ip dhcp snooping binding</b>       | Adds the static user information to the DHCP Snooping database.              |
| <b>clear ip dhcp snooping binding</b> | Clears the dynamic user information from the DHCP Snooping binding database. |

**Platform** N/A  
**Description**

## 15 DHCPv6 Snooping Commands

### 15.1 clear ipv6 dhcp snooping binding

Use this command to clear all the user information in the DHCPv6 Snooping binding database.

**clear ipv6 dhcp snooping binding** [ *mac* | **vlan** *vlan-id* | *ipv6-address* | **interface** *interface-id* ]

| Parameter Description | Parameter           | Description                                 |
|-----------------------|---------------------|---------------------------------------------|
|                       | <i>mac</i>          | Specifies the MAC address to be deleted.    |
|                       | <i>vlan-id</i>      | Specifies the ID of the VLAN to be cleared. |
|                       | <i>ipv6-address</i> | Specifies the IPv6 address to be cleared.   |
|                       | <i>interface-id</i> | Specifies the interface to be cleared.      |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** This command is used to clear the generated user information in the DHCPv6 Snooping binding database.

**Configuration Examples** The following example clears all the user information in the DHCPv6 Snooping binding database.

```
Ruijie# clear ipv6 dhcp snooping binding
Ruijie# show ipv6 dhcp snooping binding
NO.  MacAddress      IPv6 Address  Lease(sec)  VLAN  Interface
FilterType  FilterStatus
-----
-----
Total number of bindings: 0
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

### 15.2 clear ipv6 dhcp snooping prefix

Use this command to clear all the user information in the DHCPv6 Snooping prefix list.

**clear ipv6 dhcp snooping prefix** [ *mac* | **vlan** *vlan-id* | *ipv6-prefix* | **interface** *interface-id* ]

**Parameter  
Description**

| Parameter           | Description                                 |
|---------------------|---------------------------------------------|
| <i>mac</i>          | Specifies the MAC address to be deleted.    |
| <i>vlan-id</i>      | Specifies the ID of the VLAN to be cleared. |
| <i>ipv6-address</i> | Specifies the IPv6 address to be cleared.   |
| <i>interface-id</i> | Specifies the interface to be cleared.      |

**Defaults** N/A

**Command  
Mode** Privileged EXEC mode

**Usage Guide** This command is used to clear the generated user information in the DHCPv6 Snooping prefix list.

**Configuration** The following example clears all the user information in the DHCPv6 Snooping binding database

**Examples**

```
Ruijie# clear ipv6 dhcp snooping prefix
Ruijie# show ipv6 dhcp snooping prefix
NO. MacAddress      IPv6 Prefix Lease(sec) VLAN Interface
FilterType FilterStatus
-----
-----
Total number of prefixes: 0
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform  
Description** N/A

## 15.3 clear ipv6 dhcp snooping statistics

Use this command to clear the statistical information of the DHCPv6 packets.

**clear ipv6 dhcp snooping statistics**

**Parameter  
Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** N/A

**Command** Privileged EXEC mode  
**Mode**

**Usage Guide** This command is used to clear the statistical information of the DHCPv6 packets.

**Configuration** The following example clears the statistical information of the DHCPv6 packets.

**Examples**

```
Ruijie# clear ipv6 dhcp snooping statistics
Ruijie# show ipv6 dhcp snooping statistics
Packets Processed by DHCPv6 Snooping = 0
Packets Dropped Because
Received on untrusted ports      = 0
Relay forward                    = 0
No binding entry                 = 0
Binding fail                     = 0
Unknown packet                   = 0
Unknown output interface        = 0
No enough memory                 = 0
Admin filter-dhcpv6-pkt         = 0
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 15.4 ipv6 dhcp snooping

Use this command to enable the DHCPv6 Snooping function globally.

Use the **no** form of this command to restore the default setting.

**ipv6 dhcp snooping**

**no ipv6 dhcp snooping**

**Parameter  
Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command** Global configuration mode  
**Mode**

**Usage Guide** The **show ip dhcpv6 snooping** command is used to display whether the DHCPv6 Snooping function is enabled.

**Configuration** The following example enables the DHCPv6 Snooping function globally.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# ipv6 dhcp snooping
Ruijie(config)# end
```

| Related Commands | Command | Description                    |
|------------------|---------|--------------------------------|
|                  |         | <b>show ipv6 dhcp snooping</b> |

**Platform** N/A

**Description**

## 15.5 ipv6 dhcp snooping binding-delay

Use this command to add the dynamic binding entry to the hardware filtering list after the delay.

Use the **no** form of this command to restore the default setting.

**ipv6 dhcp snooping binding-delay** *seconds*

**no ipv6 dhcp snooping binding-delay**

| Parameter Description | Parameter | Description    |
|-----------------------|-----------|----------------|
|                       |           | <i>seconds</i> |

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** By default, the dynamic binding entries are added to the hardware filtering list in real time. With this command configured, if no IPv6 address conflict is detected within the specified time, the dynamic binding entries are added to the hardware filtering list.

**Configuration** The following example sets the delay to 10 seconds.

**Examples**

```
Ruijie(config)# ipv6 dhcp snooping binding-delay 10
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  |         | N/A         |

**Platform** N/A

**Description**

## 15.6 ipv6 dhcp snooping database write-delay

Use this command to write the dynamic user information of the DHCPv6 Snooping binding database into the flash periodically.

Use the **no** form of this command to restore the default setting.

**ipv6 dhcp snooping database write-delay** *time*

**no ipv6 dhcp snooping database write-delay**

### Parameter Description

| Parameter   | Description                                                                                                                                                           |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>time</i> | The interval ranging from 600 to 86,400 in the unit of seconds, at which the system writes the dynamic user information of the DHCP Snooping database into the flash. |

**Defaults** This function is disabled by default.

**Command** Global configuration mode

**Mode**

**Usage Guide** This function writes user information into flash and can avoid loss after restart. In that case, users need to obtain IP addresses again for normal communication.

 Too fast writing will reduce flash durability.

**Configuration Examples** The following example sets the interval at which the switch writes the user information into the flash to 3,600 seconds.

```
Ruijie# configure terminal
Ruijie(config)# ip dhcp snooping database write-delay 3600
Ruijie(config)# end
```

### Related Commands

| Command                        | Description                                 |
|--------------------------------|---------------------------------------------|
| <b>show ipv6 dhcp snooping</b> | Displays the DHCPv6 Snooping configuration. |

**Platform** N/A

**Description**

## 15.7 ipv6 dhcp snooping database write-to-flash

Use this command to write the dynamic user information of the DHCPv6 binding database into flash in real time.

**ipv6 dhcp snooping database write-to-flash**

|                               |                                                                                                                      |                    |
|-------------------------------|----------------------------------------------------------------------------------------------------------------------|--------------------|
| <b>Parameter Description</b>  | <b>Parameter</b>                                                                                                     | <b>Description</b> |
|                               | N/A                                                                                                                  | N/A                |
| <b>Defaults</b>               | N/A                                                                                                                  |                    |
| <b>Command Mode</b>           | Global configuration mode                                                                                            |                    |
| <b>Usage Guide</b>            | Use this command to write the dynamic user information of the DHCPv6 binding database into flash in real time.       |                    |
| <b>Configuration Examples</b> | The following example writes the dynamic user information of the DHCPv6 binding database into flash.                 |                    |
|                               | <pre>Ruijie# configure terminal Ruijie(config)# ipv6 dhcp snooping database write-to-flash Ruijie(config)# end</pre> |                    |
| <b>Related Commands</b>       | <b>Command</b>                                                                                                       | <b>Description</b> |
|                               | N/A                                                                                                                  | N/A                |
| <b>Platform Description</b>   | N/A                                                                                                                  |                    |

## 15.8 ipv6 dhcp snooping information option

Use this command to add option18/37 to the DHCPv6 request packets.


Use the **no** form of this command to restore the default setting.

**ipv6 dhcp snooping information option [ standard-format ]**

**no ipv6 dhcp snooping information option [ standard-format ]**

|                              |                                                                                                                                                                                                                                                                              |                                           |
|------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------|
| <b>Parameter Description</b> | <b>Parameter</b>                                                                                                                                                                                                                                                             | <b>Description</b>                        |
|                              | <b>standard-format</b>                                                                                                                                                                                                                                                       | The Option18/37 uses the standard format. |
| <b>Defaults</b>              | This function is disabled by default.                                                                                                                                                                                                                                        |                                           |
| <b>Command Mode</b>          | Global configuration mode                                                                                                                                                                                                                                                    |                                           |
| <b>Usage Guide</b>           | With this command configured, the option18/37 will be added to the DHCPv6 request packets and the DHCPv6 server will assign the addresses according to the option18/37 information. Use this command without parameter <b>standard-format</b> to enable the standard format. |                                           |



 DHCPv6 Relay function adds option18/37 by default. Therefore, it is unnecessary to enable functions of DHCP Snooping option18/37 and DHCPv6 Relay at the same time.

**Configuration** The following example adds the option18/37 into the DHCPv6 packets.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# ipv6 dhcp snooping information option
Ruijie(config)# end
Ruijie# show ipv6 dhcp snooping
Switch DHCPv6 snooping status :ENABLE
DHCPv6 snooping vlan: 1-4094
DHCPv6 snooping database write-delay time: 0 seconds
DHCPv6 snooping option 18/37 status: ENABLE
DHCPv6 snooping link detection :DISABLE
Interface           Trusted   Filter DHCP
-----
FastEthernet0/10    yes      DISABLE
```

**Related  
Commands**

| Command                        | Description                                                    |
|--------------------------------|----------------------------------------------------------------|
| <b>show ipv6 dhcp snooping</b> | Displays the configuration information of the DHCPv6 Snooping. |

**Platform** N/A

**Description**

## 15.9 ipv6 dhcp snooping information option format remote-id

Use this command to add option37 remote-id customized character string into the DHCPv6 request packets.

Use the **no** form of this command to restore the default setting.

**ipv6 dhcp snooping information option format remote-id [ string *ascii-string* | hostname ]**

**no ipv6 dhcp snooping information option format remote-id [ string *ascii-string* | hostname ]**

**Parameter  
Description**

| Parameter                         | Description                                                                        |
|-----------------------------------|------------------------------------------------------------------------------------|
| <b>string <i>ascii-string</i></b> | The content of Option37 remote-id extension format is customized character string. |
| <b>hostname</b>                   | The content of Option37 remote-id extension format is hostname.                    |

**Defaults** This function is disabled by default.

**Command** Global configuration mode

**Mode**

**Usage Guide** With this command configured, the option37 remote-id will be added to the DHCPv6 request packets with the content as the customized and the DHCPv6 server will assign the addresses according to the option37 information.

**Configuration Examples** The following example adds the option37 remote-id to the DHCPv6 request packets with the content being hostname.

```
Ruijie# configure terminal
Ruijie(config)# ipv6 dhcp snooping information option format remote-id
hostname
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A

## 15.10 ipv6 dhcp snooping filter-dhcp-pkt

Use this command to filter all received DHCPv6 request packets.

Use the **no** form of this command to restore the default setting.

**ipv6 dhcp snooping filter-dhcp-pkt**

**no ipv6 dhcp snooping filter-dhcp-pkt**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** Use this command to filter all received DHCPv6 request packets, that is, to avoid all the DHCPv6 users on this interface to apply for the addresses.  
This command is valid only on 2-layer wired switch ports, aggregate ports and sub interfaces as well as in air interfaces.

**Configuration Examples** The following example filters all DHCPv6 request packets on interface FastEthernet 0/1 and WLAN 1.

```
Ruijie# configure terminal
Ruijie(config)# interface GigabitEthernet 0/2
Ruijie(config-if-GigabitEthernet 0/2)# ipv6 dhcp snooping filter-dhcp-pkt
Ruijie(config-if-GigabitEthernet 0/2)# end
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 15.11 ipv6 dhcp snooping link-detection

Use this command to clear the dynamic binding entry on an interface when the interface links down. Use the **no** form of this command to restore the default setting.

**ipv6 dhcp snooping link-detection**  
**no ipv6 dhcp snooping link-detection**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** By default, the dynamic binding entries are not cleared on a wired interface when the interface links down. With this function enabled, the dynamic binding entries are auto-cleared on an interface when the interface is in the LINK DOWN status.

**Configuration Examples** The following example clears the dynamic binding entry on a wired interface when the interface is in the LINK DOWN status.

```
Ruijie# configure terminal
Ruijie(config)# ipv6 dhcp snooping link-detection
```

| Related Commands | Command                        | Description                                                    |
|------------------|--------------------------------|----------------------------------------------------------------|
|                  | <b>show ipv6 dhcp snooping</b> | Displays the configuration information of the DHCPv6 Snooping. |

**Platform**  
**Description** N/A

## 15.12 ipv6 dhcp snooping trust

Use this command to set the specified DHCPv6 Snooping ports as the trusted ports.

Use the **no** form of this command to restore the default setting.

**ipv6 dhcp snooping trust**

**no ipv6 dhcp snooping trust**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** All ports are untrusted ports by default.

**Command Mode** Interface configuration mode

**Usage Guide**

1. Use this command to set a port as a trusted port. The DHCPv6 Server response messages received under the trust port are forwarded normally, but the response messages received under the untrusted port will be discarded.
2. This command is valid only on Layer 2 wired switch ports and aggregate ports.

**Configuration** The following example sets **FastEthernet 0/1** as a trust port:

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# interface GigabitEthernet 0/1
Ruijie(config-if)# ipv6 dhcp snooping trust
Ruijie(config-if)# end
```

| Related Commands | Command                        | Description                                 |
|------------------|--------------------------------|---------------------------------------------|
|                  | <b>show ipv6 dhcp snooping</b> | Displays the DHCPv6 Snooping configuration. |

**Platform Description** N/A

## 15.13 ipv6 dhcp snooping vlan

Use this command to enable DHCPv6 Snooping for the specific VLAN.

Use the **no** form of this command to disable this function.

**ipv6 dhcp snooping vlan** { *vlan-rng* | { *vlan-min* [ *vlan-max* ] } }

**no ipv6 dhcp snooping vlan** { *vlan-rn* | { *vlan-min* [ *vlan-max* ] } }

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|-----------------------|-----------|-------------|

|                 |                            |
|-----------------|----------------------------|
| <i>vlan-rng</i> | Sets the valid VLAN range. |
| <i>vlan-min</i> | Minimum VLAN ID            |
| <i>vlan-max</i> | Maximum VLAN ID            |

**Defaults** By default, once the DHCPv6 Snooping is enabled globally, it takes effect for all VLANs.

**Command** Global configuration mode

**Mode**

**Usage Guide** With the global DHCPv6 snooping enabled, this function is enabled in all VLANs by default.

**Configuration** The following example enables the DHCPv6 Snooping function in VLAN 1000.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# ipv6 dhcp snooping vlan 1000
Ruijie(config)# end
```

The following example enables the DHCPv6 Snooping function in VLAN 1 to VLAN 10.

```
Ruijie# configure terminal
Ruijie(config)# ipv6 dhcp snooping vlan 1-10
Ruijie(config)# end
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 15.14 ipv6 dhcp snooping vlan information option change-vlan-to vlan

Use this command to enable the function of adding the option18 interface-is into the DHCP request packets and change the VLAN to the specified VLAN for the forwarding.

Use the **no** form of this command to restore the default setting.

**ipv6 dhcp snooping vlan *vlan-id* information option change-vlan-to vlan *vlan-id***

**no ipv6 dhcp snooping vlan *vlan-id* information option change-vlan-to vlan *vlan-id***

**Parameter  
Description**

| Parameter      | Description                                  |
|----------------|----------------------------------------------|
| <i>vlan-id</i> | Specifies the ID of the VLAN to be replaced. |

**Defaults** This function is disabled by default.

**Command** Interface configuration mode

**Mode**

**Usage Guide** With this command enabled, the option18 interface-id will be added into the DHCPv6 request packets and the VLAN will be changed to the specified one and the DHCP server will assign the addresses according to the optionq8 information.

**Configuration Examples** The following example adds the option18 interface-id into the DHCPv6 request packets and changes the VLAN4094 in the option to VLAN 4093.

```
Ruijie# configure terminal
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if)# ipv6 dhcp snooping vlan 4094 information option
change-vlan-to vlan 4093
Ruijie(config-if)# end
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 15.15 ipv6 dhcp snooping vlan information option format-type

### interface-id string

Use this command to enable the function of adding the option18 into the DHCP request packets and filling the option18 interface-id with the content being the user-defined (the storage format is ASCII) and performing the packet forwarding.

Use the **no** form of this command to restore the default setting.

**ipv6 dhcp snooping vlan** *vlan-id* **information option format-type interface-id string** *ascii-string*  
**no ipv6 dhcp snooping vlan** *vlan-id* **information option format-type interface-id string**  
*ascii-string*

**Parameter Description**

| Parameter           | Description                                       |
|---------------------|---------------------------------------------------|
| <i>vlan-id</i>      | The VLAN where the DHCPv6 request packets are     |
| <i>ascii-string</i> | User-defined content for filling the interface-id |

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** With this command configured, the option18 interface-id will be added into the DHCPv6 request packets with the content being user-defined and the DHCPv6 server will assign the addresses according to the option18 information.

**Configuration** The following example adds the option18 interface-id to the DHCPv6 request packets with the content being *port-name*.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if)# ipv6 dhcp snooping vlan 4094 information option format-type
interface-id string port-name
Ruijie(config-if)# end
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 15.16 renew ipv6 dhcp snooping database

Use this command to import the information in current flash to the DHCPv6 Snooping binding database manually as needed.

**renew ipv6 dhcp snooping database**


**Parameter  
Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** N/A

**Command  
Mode** Privileged EXEC mode

**Usage Guide** This command is used to import the flash file information to the DHCPv6 Snooping database in real time.

 Records out of lease time and repeated will be neglected.

**Configuration** The following example imports the flash file information to the DHCPv6 Snooping database.

**Examples**

```
Ruijie# renew ipv6 dhcp snooping database
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 15.17 show ipv6 dhcp snooping

Use this command to display the setting of the DHCPv6 Snooping.

**show ipv6 dhcp snooping**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration Examples** The following example displays the setting of the DHCPv6 Snooping.

```
Ruijie# show ipv6 dhcp snooping
Switch DHCPv6 snooping status :ENABLE
DHCPv6 snooping vlan: 1-4094
DHCPv6 snooping database write-delay time: 0 seconds
DHCPv6 snooping option 18/37 status: DISABLE
DHCPv6 snooping link detection :DISABLE
Interface           Trusted   Filter DHCP
-----
FastEthernet0/10    yes      DISABLE
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 15.18 show ipv6 dhcp snooping vlan

Use this command to display the VLAN with DHCPv6 Snooping function disabled.

**show ipv6 dhcp snooping vlan**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|-----------------------|-----------|-------------|



|     |     |
|-----|-----|
| N/A | N/A |
|-----|-----|

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** This command is used to display the VLAN with DHCPv6 Snooping function disabled.

**Configuration** The following example displays the VLAN with DHCPv6 Snooping function disabled.

**Examples** Ruijie#show ipv6 dhcp snooping vlan

```
VLAN Name      Closed
-----
```

```
2   VLAN 2      YES
```

| Field | Description                                    |
|-------|------------------------------------------------|
| VLAN  | VLAN ID                                        |
| NAME  | VLAN name                                      |
| Close | Indicates whether DHCPv6 Snooping is disabled. |

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A

## 15.19 show ipv6 dhcp snooping binding

Use this command to display the information of the DHCPv6 Snooping binding database.

**show ipv6 dhcp snooping binding** [ *mac* ] [ **vlan** *vlan-id* ] [ *ipv6-address* ] [ **interface** *interface-id* ]

| Parameter Description | Parameter           | Description                              |
|-----------------------|---------------------|------------------------------------------|
|                       | <i>mac</i>          | Displays the MAC address binding entry.  |
|                       | <i>vlan_id</i>      | Displays the VLAN binding entry.         |
|                       | <i>ipv6-address</i> | Displays the IPv6 address binding entry. |
|                       | <i>interface-id</i> | Displays the interface binding entry.    |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the information of the DHCP Snooping binding database.

### Examples

```
Ruijie# show ipv6 dhcp snooping binding
Total number of bindings: 1
NO.   MacAddress          IPv6 Address              Lease (sec)
VLAN  Interface
-----
-----
1     00d0.f801.0101       2001::10                  42368          2
GigabitEthernet 0/1
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 15.20 show ipv6 dhcp snooping prefix

Use this command to display all user information in the DHCPv6 Snooping prefix list.

**show ipv6 dhcp snooping prefix** [ *mac* | **vlan** *vlan-id* | *ipv6-prefix* | **interface** *interface-id* ]

| Parameter Description | Parameter           | Description                             |
|-----------------------|---------------------|-----------------------------------------|
|                       | <i>mac</i>          | Displays the MAC address prefix entry.  |
|                       | <i>vlan_id</i>      | Displays the VLAN prefix entry.         |
|                       | <i>ipv6-prefix</i>  | Displays the IPv6 address prefix entry. |
|                       | <i>interface-id</i> | Displays the interface prefix entry.    |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration Examples** The following example displays all user information in the DHCPv6 Snooping prefix list.

```
Ruijie# show ipv6 dhcp snooping prefix
Total number of prefix: 1

NO.   MacAddress          IPv6 Prefix          Lease(sec)  VLAN   Interface
-----
1     00d0.f801.0101     2001:2002::          42368      2     GigabitEthernet 0/1
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 15.21 show ipv6 dhcp snooping statistics

Use this command to display the statistical information of the DHCPv6 packets.

**show ipv6 dhcp snooping statistics**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the statistical information of the DHCPv6 packets.

```

Examples Ruijie# show ipv6 dhcp snooping statistics
Packets Processed by DHCPv6 Snooping = 0
Packets Dropped Because
Received on untrusted ports      = 0
Relay forward                    = 0
No binding entry                = 0
Binding fail                    = 0
Unknown packet                  = 0
Unknown output interface        = 0
No enough memory                = 0
Admin filter-dhcpv6-pkt        = 0
    
```

| Field                       | Description                                                                                                                                   |
|-----------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|
| Received on untrusted ports | The discarded server response packets on the untrust port.                                                                                    |
| Relay forward               | The packets that have been relayed once are discarded.                                                                                        |
| No binding entry            | The binding entries of the release/decline packets are in-existent or error and the packets are discarded.                                    |
| Binding fail                | The entry binding fails and the packets are discarded due to a lack of the hardware resources.                                                |
| Unknown packet              | The unknown DHCP packets.                                                                                                                     |
| Unknown output interface    | The packets on the unknown output interface. The MAC address for the interface is not found or the trust port is not configured.              |
| No enough memory            | There is no enough memory.                                                                                                                    |
| Admin filter-dhcpv6-pkt     | The filtered DHCPv6 packets configured by the administrator. Use the <b>ipv6 dhcp snooping filter-dhcp-pkt</b> command to filter the packets. |

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A

## 16 ARP-Check Commands

### 16.1 arp-check

Use this command to enable the ARP check function on the Layer 2 interface.

Use the **no** form of this command to restore the default setting.

**arp-check**

**no arp-check**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command mode** Interface configuration mode

**Usage Guide** The ARP check function generates the ARP filtering information according to legal user information, implementing the illegal ARP packet filtering on the network.

**Configuration** This following example enables the APR check function on interface GigabitEthernet 0/1.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# interface GigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)# arp-check
Ruijie(config-if-GigabitEthernet 0/1)# end
```

| Related Commands | Command                               | Description                     |
|------------------|---------------------------------------|---------------------------------|
|                  | <b>show interfaces arp-check list</b> | Displays the ARP check entries. |

**Platform** N/A

**Description**

### 16.2 show interfaces arp-check list

Use this command to display the ARP check entries on the Layer 2 interface.

**show { interfaces [ *interface-type interface-number* ] } arp-check list**

| Parameter Description | Parameter             | Description          |
|-----------------------|-----------------------|----------------------|
|                       | <i>interface-type</i> | Wired interface type |

|                         |                        |
|-------------------------|------------------------|
| <i>interface-number</i> | Wired interface number |
|-------------------------|------------------------|

**Command mode** Privileged EXEC mode

**Usage Guide** Use this command to display the ARP check entries.

**Configuration Examples** The following example displays the ARP check entries.

```
Ruijie(config)#show interfaces arp-check list
INTERFACE                SENDER MAC      SENDER IP      POLIC
Y SOURCE
-----
-----
GigabitEthernet 0/1      00D0.F800.0003  192.168.1.3
address-bind
GigabitEthernet 0/1      00D0.F800.0001  192.168.1.1
port-security
GigabitEthernet 0/4                192.168.1.3
port-security
GigabitEthernet 0/5      00D0.F800.0003  192.168.1.3
address-bind
GigabitEthernet 0/7      00D0.F800.0006  192.168.1.6      AAA
ip-auth-mode
GigabitEthernet 0/8      00D0.F800.0007  192.168.1.7      GSN
```

| Field         | Description         |
|---------------|---------------------|
| INTERFACE     | Interface name      |
| SENDER MAC    | Source MAC address  |
| SENDER IP     | Source IP address   |
| POLICY SOURCE | Source of the entry |

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 17 DAI Commands

### 17.1 ip arp inspection trust

Use this command to configure the L2 port to a trusted port.

Use the **no** form of this command to restore the L2 port to an untrusted port.

**ip arp inspection trust**

**no ip arp inspection trust**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** The L2 port is untrusted.

**Command Mode** Interface configuration mode

**Usage Guide** If it is necessary to make the ARP message received by some interface pass the DAI inspection unconditionally, you can set the interface to a trusted port, indicating that you do not need to check whether the ARP message received by this interface is legal.

**Configuration Examples** The following example sets the gigabitEthernet 0/19 interface as the trusted port.

```
Ruijie# configure terminal
Ruijie(config)# interface gigabitEthernet 0/19
Ruijie(config-if-GigabitEthernet 0/19)# ip arp inspection trust
Ruijie(config-if-GigabitEthernet 0/19)# end
```

| Related Commands | Command                                 | Description                                                                                                   |
|------------------|-----------------------------------------|---------------------------------------------------------------------------------------------------------------|
|                  | <b>show ip arp inspection interface</b> | Displays related DAI information on the interface, including the trust state and rate limit of the interface. |

**Platform Description** N/A

### 17.2 ip arp inspection vlan

Use this command to configure the DAI function on the VLAN.

Use the **no** form of this command to disable this function.

```
ip arp inspection vlan { vlan-id | word }
no ip arp inspection vlan { vlan-id | word }
```


**Parameter Description**

| Parameter      | Description                                    |
|----------------|------------------------------------------------|
| <i>vlan-id</i> | VLAN ID, ranging from 1 to 4094                |
| <i>word</i>    | String of the VLAN range, such as 1,3-5,7,9-11 |

**Defaults** The DAI function on all VLANs is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** To make this command take effect, you need to enable the ARP Check function first,

 Not all ports of the VLAN support the ARP packet detection function. For example, the DHCP Snooping Trust port does not support any security detection, including this function.

**Configuration Examples** The following example detects the received ARP packets on the VLAN1 interfaces:

```
Ruijie# configure terminal
Ruijie(config)# ip arp inspection
Ruijie(config)# ip arp inspection vlan 1
Ruijie(config)# end
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A

## 17.3 show ip arp inspection vlan

Use this command to verify whether the DAI function on the VLAN is enabled.

```
show ip arp inspection vlan [ vlan-id | word ]
```

**Parameter Description**

| Parameter      | Description                                    |
|----------------|------------------------------------------------|
| <i>vlan-id</i> | VLAN ID, ranging from 1 to 4094                |
| <i>word</i>    | String of the VLAN range, such as 1,3-5,7,9-11 |

**Defaults** N/A

**Command** Privileged EXEC mode



**Mode**

**Usage Guide** Use this command to verify whether the DAI function on the VLAN is enabled.

**Configuration** The following example verifies whether the DAI function on the VLAN is enabled:

```
Examples Ruijie# show ip arp inspection vlan
Vlan      Configuration
-----  -
1                               Active
```

Parameter Description:

| Parameter     | Description                    |
|---------------|--------------------------------|
| Vlan          | VLAN number.                   |
| Configuration | DAI status (active / inactive) |

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 17.4 show ip arp inspection interface

Use this command to verify whether the interface is a DAI trust interface.

**show ip arp inspection interface**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command** Privileged EXEC mode  
**Mode**

**Usage Guide** Use this command to verify whether the interface is a DAI trust interface.

**Configuration** The following example verifies the DAI trust state of all :

```
Examples Ruijie#show ip arp inspection interface
Interface      Trust State
-----  -
GigabitEthernet 0/1    Untrusted
Default                               Untrusted
```

Parameter Description:

| Parameter   | Description      |
|-------------|------------------|
| Interface   | Interface name.  |
| Trust State | DAI trust state. |

#### Related Commands

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 18 IP Source Guard Commands

### 18.1 ip source binding

Use this command to add static user information to IP source address binding database.

Use the **no** form of this command to delete static user information from IP source address binding database.

**ip source binding** *mac-address* { **vlan** *vlan-id* } *ip-address* { **interface** *interface-id* | **ip-mac** | **ip-only** }

**no ip source binding** *mac-address* { **vlan** *vlan-id* } *ip-address* { **interface** *interface-id* | **ip-mac** | **ip-only** }

#### Parameter Description


| Parameter           | Description                         |
|---------------------|-------------------------------------|
| <i>mac-address</i>  | Adds user MAC address statically.   |
| <i>vlan-id</i>      | Adds user VLAN ID statically.       |
| <i>ip-address</i>   | Adds user IP address statically.    |
| <i>interface-id</i> | Adds user interface ID statically.  |
| <b>ip-mac</b>       | The global binding type is IP+MAC   |
| <b>ip-only</b>      | The global binding type is IP only. |

**Defaults** No static address is added by default.

**Command Mode** Global configuration mode

**Usage Guide** This command allows specific clients to go through IP source guard detection instead of DHCP. This command is supported on the wired L2 switching port, AP port, and sub interface. This command enables global binding for IP source guard so that specific clients will get detected on all interfaces.

 A static IPv6 source binding is valid either on wired interfaces or in global configuration mode.

 A new binding will overwrite the old one sharing the same configuration.

**Configuration** The following example adds the interface ID of static users.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# ip source binding 0000.0000.0001 vlan 1 1.1.1.1 interface
GigabitEthernet 0/1
Ruijie(config)# end
```

The following example adds static user information based on IP-MAC binding.

```
Ruijie# configure terminal
Ruijie(config)# ip source binding 0000.0000.0001 vlan 1 1.1.1.1 ip-mac
Ruijie(config)# end
```

The following example adds static user information based on IP binding.

```
Ruijie# configure terminal
Ruijie(config)# ip source binding 0000.0000.0001 vlan 1 1.1.1.1 ip-only
Ruijie(config)# end
```

**Related  
Commands**

| Command                       | Description                                                         |
|-------------------------------|---------------------------------------------------------------------|
| <b>show ip source binding</b> | Displays the binding information of IP source address and database. |

**Platform** N/A

**Description**

## 18.2 ip verify source

Use this command to enable IP Source Guard function on the interface.

Use the **no** form of this command to restore the default setting.

**ip verify source [ port-security ]**

**no ip verify source**

**Parameter  
Description**

| Parameter            | Description                                              |
|----------------------|----------------------------------------------------------|
| <b>port-security</b> | Configures IP Source Guard to do IP+MAC-based detection. |

**Defaults** This function is disabled by default.


**Command** Interface configuration mode

**Mode**

**Usage Guide** This command enables IP Source Guard function on the interface to do IP-based or IP+MAC-based

detection.

This command is supported on the wired L2 switching port, AP port, and sub interface

 IP Source Guard takes effect only on DHCP Snooping untrusted port. In other words, IP Source Guard does not take effect when configuring it on Trust port or the port which is not controlled by DHCP Snooping.

### Configuration

The following example enables IP-based IP Source Guard function.

### Examples

```
Ruijie# configure terminal
Ruijie(config)# interface GigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)# ip verify source
Ruijie(config-if)# end
```

The following example enables IP+MAC-based IP Source Guard function.

```
Ruijie# configure terminal
Ruijie(config)# interface GigabitEthernet 0/2
Ruijie(config-if-GigabitEthernet 0/2)# ip verify source port-security
Ruijie(config-if)# end
```

### Related Commands

| Command                      | Description                                       |
|------------------------------|---------------------------------------------------|
| <b>show ip verify source</b> | Displays user filtering entry of IP Source Guard. |

### Platform

N/A

### Description

## 18.3 ip verify source exclude-vlan

Use this command to exclude a VLAN from the IP source guard configuration on the port.

Use the **no** form of this command to restore the function.

**ip verify source exclude-vlan** *vlan-id*

**no ip verify source exclude-vlan** *vlan-id*

### Parameter Description

| Parameter      | Description                                                     |
|----------------|-----------------------------------------------------------------|
| <i>vlan-id</i> | The ID of VLAN excluded from the IP source guard configuration. |

### Defaults

This function is disabled by default.

### Command Mode


Interface configuration mode

### Usage Guide

- This command is used to exclude a VLAN from the IP source guard configuration. IP packets in

this VLAN are forwarded without being checked and filtered.

- Once the IP source guard function is disabled, the excluded VLAN is cleared automatically.
- This command is supported on the wired L2 switching port, AP port, and sub interface.

 Only when the IP source guard configuration is enabled on the port can a VLAN be excluded.

**Configuration Examples** The following example configuration configures the IP source guard configuration for the port and excludes a VLAN.

```
Ruijie# configure terminal
Ruijie(config)# interface GigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)# ip verify source
Ruijie(config-if-GigabitEthernet 0/1)# ip verify exclude-vlan 1
Ruijie(config-if)# end
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 18.4 show ip source binding

Use this command to display the binding information of IP source addresses and database.

**show ip source binding** [ *ip-address* ] [ *mac-address* ] [ **dhcp-snooping** ] [ **static** ] [ **vlan** *vlan-id* ] [ **interface** *interface-id* ]

**Parameter Description**

| Parameter            | Description                                                   |
|----------------------|---------------------------------------------------------------|
| <i>ip-address</i>    | Displays user binding information of corresponding IP.        |
| <i>mac-address</i>   | Displays user binding information of corresponding MAC.       |
| <b>dhcp-snooping</b> | Displays binding information of dynamic user.                 |
| <b>static</b>        | Displays binding information of static user.                  |
| <i>vlan-id</i>       | Displays user binding information of corresponding VLAN.      |
| <i>interface-id</i>  | Displays user binding information of corresponding interface. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration Examples** The following example displays the binding information of IP source guard addresses and database.

```
Ruijie# show ip source binding static
Ruijie#show ip source binding static
Total number of bindings: 5
NO.      MACADDRESS      IPADDRESS      LEASE (SEC)    TYPE      VLAN      INTERFACE
-----
1        0001.0002.0001   1.2.3.2        Infinite       Static    1         Global
2        0001.0002.0002   1.2.3.3        Infinite       Static    1         GigabitEthernet 0/5
3        0001.0002.0003   1.2.3.4        Infinite       Static    1         Global
4        0001.0002.0004   1.2.3.5        Infinite       Static    1         Global
```

**Related Commands**

| Command                  | Description                   |
|--------------------------|-------------------------------|
| <b>ip source binding</b> | Sets the binding static user. |

**Platform** N/A

**Description**

## 18.5 show ip verify source

Use this command to display user filtering entry of IP Source Guard.

**show ip verify source** [ **interface** *interface-id* ]

**Parameter Description**

| Parameter           | Description                                               |
|---------------------|-----------------------------------------------------------|
| <i>interface-id</i> | Displays user filtering entry of corresponding interface. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** If IP Source Guard is not enabled on the corresponding interface, the printing information will be shown on the terminal as: "IP source guard is not configured on the interface FastEthernet 0/10"  
Now, IP Source Guard supports the following filtering modes:  
**inactive-restrict-off**: the IP Source Guard is disabled on bound interfaces.  
**inactive--not-apply**: the IP Source Guard cannot adds bound entries into filtering entries for system errors.  
**active**: the IP Source Guard is active.

**Configuration Examples** The following example displays user filtering entry of IP Source Guard.

```
Ruijie # show ip verify source
Total number of bindings: 7
```

| NO.            | INTERFACE           | FILTERTYPE    | FILTERSTATUS          | IPADDRESS     |
|----------------|---------------------|---------------|-----------------------|---------------|
| MACADDRESS     | VLAN                | TYPE          |                       |               |
| 1              | Global              | IP+MAC        | Inactive-not-apply    | 192.168.0.127 |
| 0001.0002.0003 | 1                   | Static        |                       |               |
| 2              | GigabitEthernet 0/5 | IP-ONLY       | Active                | 1.2.3.4       |
| 0001.0002.0004 | 1                   | DHCP-Snooping |                       |               |
| 3              | Global              | IP-ONLY       | Active                | 1.2.3.7       |
| 0001.0002.0007 | 1                   | Static        |                       |               |
| 4              | Global              | IP+MAC        | Active                | 1.2.3.6       |
| 0001.0002.0006 | 1                   | Static        |                       |               |
| 5              | GigabitEthernet 0/1 | UNSET         | Inactive-restrict-off | 1.2.3.9       |
| 0001.0002.0009 | 1                   | DHCP-Snooping |                       |               |
| 6              | GigabitEthernet 0/5 | IP-ONLY       | Active                | Deny-All      |

**Related  
Commands**

| Command                 | Description                            |
|-------------------------|----------------------------------------|
| <b>ip verify source</b> | Sets IP Source Guard on the interface. |

**Platform  
Description**

N/A

## 19 IPv6 Source Guard Commands

### 19.1 ipv6 source binding

Use this command to configure a static IPv6 source binding.

Use the **no** form of this command to delete a static IPv6 source binding.

```
ipv6 source binding mac-address vlan vlan-id ipv6-address { interface interface-id | | ip-mac | ip-only }
no ipv6 source binding mac-address vlan vlan-id ipv6-address { interface interface-id | | ip-mac |
ip-only }
```

#### Parameter Description

| Parameter           | Description        |
|---------------------|--------------------|
| <i>mac-address</i>  | MAC address        |
| <i>vlan-id</i>      | VLAN ID            |
| <i>ipv6-address</i> | IPv6 address       |
| <i>interface-id</i> | Wired interface ID |
| <b>ip-mac</b>       | IPv6-MAC binding   |
| <b>ip-only</b>      | IPv6-only binding  |


**Defaults** No static IPv6 source binding is configured by default.

**Command Mode** Global configuration mode

**Usage Guide**

- Use this command to exempt trusted hosts from IPv6 source guard.
- This command is supported only on Layer 2 ports, aggregate ports and encapsulated sub interfaces.

 A static IPv6 source binding is valid either on wired interfaces or in global configuration mode.

 A new binding will overwrite the old one sharing the same configuration.

**Configuration Examples** The following example configures static IPv6 source bindings on GigabitEthernet 0/1.

```
Ruijie# configure terminal
Ruijie(config)# ipv6 source binding 0000.0000.0001 vlan 1 1::1 interface
GigabitEthernet 0/1
Ruijie(config)# end
```

The following example configures a static IPv6-MAC binding.

```
Ruijie# configure terminal
Ruijie(config)# ipv6 source binding 0000.0000.0001 vlan 1 1::1 ip-mac
Ruijie(config)# end
```

The following example configures a static IPv6-only binding.



```
Ruijie# configure terminal
Ruijie(config)# ipv6 source binding 0000.0000.0001 vlan 1 1::1 ip-only
Ruijie(config)# end
```

**Platform**  
**Description**

N/A

## 19.2 ipv6 verify source

Use this command to enable IPv6 source guard.

Use the **no** form of this command to restore the default setting.

**ipv6 verify source [ port-security ]**

**no ipv6 verify source**

| Parameter Description | Parameter            | Description                        |
|-----------------------|----------------------|------------------------------------|
|                       | <b>port-security</b> | Enables source IPv6-MAC filtering. |

**Defaults** IPv6 source guard is disabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** Use this command to enable IPv6 source guard with source IPv6 filtering or source IPv6-MAC filtering. This command is supported only on Layer 2 ports, aggregate ports and encapsulated sub interface.

 Currently, the IPv6 source guard feature of Ruijie devices filters traffic based on the DHCPv6 Snooping database or on manually configured IPv6 source bindings. A port with only IPv6 source guard enabled cannot realize normal network access for connected hosts.

**Configuration** The following example enables IPv6 source guard based on source IPv6 filtering.

### Examples

```
Ruijie# configure terminal
Ruijie(config)# interface GigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)# ipv6 verify source
Ruijie(config-if)# end
```

The following example enables IPv6 source guard based on source IPv6-MAC filtering.

```
Ruijie# configure terminal
Ruijie(config)# interface GigabitEthernet 0/2
Ruijie(config-if-GigabitEthernet 0/2)# ipv6 verify source port-security
Ruijie(config-if)# end
```

**Platform** N/A

**Description**

## 19.3 show ipv6 source binding

Use this command to display the IPv6 source binding database.

**show ipv6 source binding** [ *ipv6-address* ] [ *mac-address* ] [ **dhcp-snooping** ] [ **static** ] [ **vlan** *vlan-id* ]  
[ **interface** *interface-id* ]

**Parameter Description**

| Parameter            | Description                                |
|----------------------|--------------------------------------------|
| <i>ipv6-address</i>  | Displays the source IPv6 address bindings. |
| <i>mac-address</i>   | Displays the source MAC address bindings.  |
| <b>dhcp-snooping</b> | Displays the DHCP snooping bindings.       |
| <b>static</b>        | Displays the static IPv6 source bindings.  |
| <i>vlan-id</i>       | Displays the VLAN bindings.                |
| <i>interface-id</i>  | Displays the interface bindings.           |

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the IPv6 source binding database.

**Examples**

```
Ruijie# show ipv6 source binding
Total number of bindings: 7
NO.      Filter Type  Filter Status      IPv6 Address
MACAddress  VLAN Type  Interface
-----
-----
-----
1        IPv6+MAC    Inactive-system-error  2000::127
0001.0002.0003  1    Static      Global
2        IPv6-ONLY   Active          2008::4
0001.0002.0004  1    DHCPv6-Snooping  GigabitEthernet 0/5
3        IPv6-ONLY   Active          2008::7
0001.0002.0007  1    Static      Global
4        IPv6+MAC    Active          2008::1
0001.0002.0006  1    Static      Global
5        UNSET       Inactive-restrict-off  2008::9
0001.0002.0009  1    DHCPv6-Snooping  GigabitEthernet 0/1
6        IPv6-ONLY   Active          Deny-All
GigabitEthernet 0/5
```

**Platform** N/A

**Description**

## 20 Anti-ARP Spoofing Commands

### 20.1 anti-arp-spoofing ip

Use this command to enable anti-ARP spoofing.

Use the **no** form of this command to disable this function.

**anti-arp-spoofing ip** *ip-address*

**no anti-arp-spoofing ip** *ip-address*

| Parameter Description | Parameter         | Description        |
|-----------------------|-------------------|--------------------|
|                       | <i>ip-address</i> | Gateway IP address |

**Defaults** The anti-ARP spoofing function is disabled by default.

**Command Mode** Interface configuration mode/Wireless security configuration mode

**Usage Guide** This command is used to enable anti-ARP spoofing on only L2 interfaces.  
This command is used on AC/AP only in wireless security configuration mode.  
Use the **show anti-arp-spoofing** command to display the configuration.

**Configuration** The following example enables anti-ARP spoofing.

**Examples**

```
Ruijie(config)#interface fastEthernet 0/1
Ruijie(config-if)#anti-arp-spoofing ip 192.168.1.1
```

| Related Commands | Command                       | Description                                   |
|------------------|-------------------------------|-----------------------------------------------|
|                  | <b>show anti-arp-spoofing</b> | Displays the anti-ARP spoofing configuration. |

**Platform** N/A

**Description**

### 20.2 show anti-arp-spoofing

Use this command to display the anti-ARP spoofing configuration on all interfaces.

**show anti-arp-spoofing**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** This command is used to display the anti-ARP spoofing configuration on all interfaces.

**Configuration** The following example displays the anti-ARP-spoofing configuration on all interfaces.

**Examples**

```
Ruijie#show anti-arp-spoofing
NO      PORT      IP          STATUS
-----
1       Gi0/1      192.168.1.1  active
```

Field Description

| Field  | Description              |
|--------|--------------------------|
| NO     | Order number             |
| PORT   | Port number              |
| IP     | Gateway IP               |
| STATUS | Anti-ARP spoofing status |

**Related Commands**

| Command                     | Description                   |
|-----------------------------|-------------------------------|
| <b>anti-arp-spoofing ip</b> | Configures anti-ARP spoofing. |

**Platform Description** N/A

## 21 NFPP Commands

### 21.1 arp-guard attack-threshold

Use this command to set the global attack threshold. When the packet rate exceeds the attack threshold, the attack occurs.

Use the **no** or **default** form of this command to restore the default setting.

**arp-guard attack-threshold** { **per-src-ip** | **per-src-mac** | **per-port** } *pps*

**no arp-guard attack-threshold** { **per-src-ip** | **per-src-mac** | **per-port** }

**default arp-guard attack-threshold** { **per-src-ip** | **per-src-mac** | **per-port** }

| Parameter Description | Parameter          | Description                                                              |
|-----------------------|--------------------|--------------------------------------------------------------------------|
|                       | <b>per-src-ip</b>  | Sets the attack threshold for each source IP address.                    |
|                       | <b>per-src-mac</b> | Sets the attack threshold for each source MAC address.                   |
|                       | <b>per-port</b>    | Sets the attack threshold for each port.                                 |
|                       | <i>pps</i>         | Sets the attack threshold, in the range from 1 to 19,999 in unit of pps. |

**Defaults** The default value varies with products. For details, see the *Configuration Guide*.

**Command** NFPP configuration mode.

**Mode**

**Usage Guide** The attack threshold shall be equal to or greater than the rate-limit threshold.

**Configuration** The following example sets the global attack threshold.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# arp-guard attack-threshold per-src-ip 2
Ruijie(config-nfpp)# arp-guard attack-threshold per-src-mac 3
Ruijie(config-nfpp)# arp-guard attack-threshold per-port 50
```

| Related Commands | Command                            | Description                                             |
|------------------|------------------------------------|---------------------------------------------------------|
|                  | <b>nfpp arp-guard policy</b>       | Displays the rate-limit threshold and attack threshold. |
|                  | <b>show nfpp arp-guard summary</b> | Displays the configuration.                             |
|                  | <b>show nfpp arp-guard hosts</b>   | Displays the monitored host.                            |
|                  | <b>clear nfpp arp-guard hosts</b>  | Clears the isolated host.                               |

**Platform** N/A

**Description**

## 21.2 arp-guard enable

Use this command to enable the anti-ARP guard function globally.

Use the **no** or **default** form of this command to restore the default setting.

**arp-guard enable**

**no arp-guard enable**

**default arp-guard enable**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** This function is enabled by default.

**Command Mode** NFPP configuration mode.

**Usage Guide** N/A

**Configuration Examples** The following example enables the anti-ARP guard function globally.

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# arp-guard enable
```

| Related Commands | Command                            | Description                                   |
|------------------|------------------------------------|-----------------------------------------------|
|                  | <b>nfpp arp-guard enable</b>       | Enables the anti-ARP attack on the interface. |
|                  | <b>show nfpp arp-guard summary</b> | Displays the configuration.                   |

**Platform** N/A

**Description**

## 21.3 arp-guard isolate-period

Use this command to set the arp-guard isolate time globally.

Use the **no** or **default** form of this command to restore the default setting.

**arp-guard isolate-period** { *seconds* | **permanent** }

**no arp-guard isolate-period**

**default arp-guard isolate-period**

| Parameter Description | Parameter      | Description                                                                                     |
|-----------------------|----------------|-------------------------------------------------------------------------------------------------|
|                       | <i>seconds</i> | Sets the isolate time. The value is 0, or in the range from 30 to 86400 in the unit of seconds. |

|                  |                      |
|------------------|----------------------|
| <b>permanent</b> | Permanent isolation. |
|------------------|----------------------|

**Defaults** The default isolate time is 0, which means no isolation.

**Command** NFPP configuration mode.

**Mode**

**Usage Guide** N/A

**Configuration** The following example sets the arp-guard isolate time globally to 180 seconds.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# arp-guard isolate-period 180
```

**Related  
Commands**

| Command                              | Description                             |
|--------------------------------------|-----------------------------------------|
| <b>nfpp arp-guard isolate-period</b> | Sets the isolate time on the interface. |
| <b>show nfpp arp-guard summary</b>   | Displays the configuration.             |

**Platform** N/A

**Description**

## 21.4 arp-guard isolate-forwarding enable

Use this command to enable packet forwarding through NFPP isolation.

Use the **no** form of this command to disable this function.

Use the **default** form of this command to restore the default setting.

**arp-guard isolate-forwarding enable**

**no arp-guard isolate-forwarding enable**

**default arp-guard isolate-forwarding enable**

**Parameter  
Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** This function is enabled by default.

**Command** NFPP configuration mode

**Mode**

**Usage Guide** N/A

**Configuration** The following example enables packet forwarding through NFPP isolation.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# arp-guard isolate-forwarding enable
```



| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 21.5 arp-guard monitored-host-limit

Use this command to set the maximum monitored host number.

Use the **no** or **default** form of this command to restore the default setting.

**arp-guard monitored-host-limit** *number*

**no arp-guard monitored-host-limit**

**default arp-guard monitored-host-limit**

| Parameter Description | Parameter | Description   |
|-----------------------|-----------|---------------|
|                       |           | <i>number</i> |

**Defaults** The default is 20000.

**Command Mode** NFPP configuration mode

**Usage Guide** If the monitored host number has reached the default 20,000, the administrator shall set the max-number smaller than 20,000 and it will prompt the message that %ERROR: The value that you configured is smaller than current monitored hosts 20,000, please clear a part of monitored hosts to remind the administrator of the invalid configuration and removing the monitored hosts.

When the maximum monitored host number has been exceeded, it prompts the message that %NFPP\_ARP\_GUARD-4-SESSION\_LIMIT: Attempt to exceed limit of 20000 monitored hosts to remind the administrator.

**Configuration Examples** The following example sets the maximum monitored host number to 200.

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# arp-guard monitored-host-limit 200
```

| Related Commands | Command | Description                        |
|------------------|---------|------------------------------------|
|                  |         | <b>show nfpp arp-guard summary</b> |

**Platform** N/A  
**Description**

## 21.6 arp-guard monitor-period

Use this command to configure the arp guard monitor time.

Use the **no** or **default** form of this command to restore the default setting.

**arp-guard monitor-period** *seconds*

**no arp-guard monitor-period**

**default arp-guard monitor-period**

| Parameter Description | Parameter      | Description                                                                    |
|-----------------------|----------------|--------------------------------------------------------------------------------|
|                       | <i>seconds</i> | Sets the monitor time, in the range from 180 to 86,400 in the unit of seconds. |

**Defaults** The default is 600.

**Command** NFPP configuration mode

**Mode**

**Usage Guide** When the attacker is detected, if the isolate period is 0, the attacker will be monitored by the software and the timeout time will be the monitor period. During the software monitoring, if the isolate period is not 0, the software-monitored attacker will be auto-isolated by the hardware and the timeout time will be the isolate period. The monitor period is valid with the isolate period 0.  
If the isolate period has changed to be 0, the attackers on the interface will be removed rather than being monitored by the software.

**Configuration** The following example sets the arp guard monitor time to 180 seconds.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# arp-guard monitor-period 180
```

| Related Commands | Command                            | Description                       |
|------------------|------------------------------------|-----------------------------------|
|                  | <b>show nfpp arp-guard summary</b> | Displays the configuration.       |
|                  | <b>show nfpp arp-guard hosts</b>   | Displays the monitored host list. |
|                  | <b>clear nfpp arp-guard hosts</b>  | Clears the isolated host.         |

**Platform** N/A

**Description**

## 21.7 arp-guard rate-limit

Use this command to set the arp guard rate limit.

Use the **no** or **default** form of this command to restore the default setting.

**arp-guard rate-limit** { **per-src-ip** | **per-src-mac** | **per-port** } *pps*

```
no arp-guard rate-limit { per-src-ip | per-src-mac | per-port }
default arp-guard rate-limit { per-src-ip | per-src-mac | per-port }
```

**Parameter  
Description**

| Parameter          | Description                                       |
|--------------------|---------------------------------------------------|
| <b>per-src-ip</b>  | Sets the rate limit for each source IP address.   |
| <b>per-src-mac</b> | Sets the rate limit for each source MAC address.  |
| <b>per-port</b>    | Sets the rate limit for each port.                |
| <i>pps</i>         | Sets the rate limit, in the range of 1 to 19,999. |

**Defaults** The default value varies with products. For details, see the *Configuration Guide*.

**Command  
Mode** NFPP configuration mode

**Usage Guide** N/A

**Configuration** The following example sets the arp guard rate limit.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# arp-guard rate-limit per-src-ip 2
Ruijie(config-nfpp)# arp-guard rate-limit per-src-mac 3
Ruijie(config-nfpp)# arp-guard rate-limit per-port 50
```

**Related  
Commands**

| Command                            | Description                                   |
|------------------------------------|-----------------------------------------------|
| <b>nfpp arp-guard policy</b>       | Sets the rate limit and the attack threshold. |
| <b>show nfpp arp-guard summary</b> | Displays the configuration.                   |

**Platform  
Description** N/A

## 21.8 arp-guard ratelimit-forwarding enable

Use this command to set the port based arp guard rate limit.

Use the **no** form of this command to disable this function.

Use the **default** form of this command to restore the default setting.

**arp-guard ratelimit-forwarding enable**

**no arp-guard ratelimit-forwarding enable**

**default arp-guard ratelimit-forwarding enable**

**Parameter  
Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** This function is enabled by default.

**Command Mode** NFPP configuration mode

**Usage Guide** N/A

**Configuration** The following example sets the port based arp guard rate limit.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# arp-guard ratelimit-forwarding enable
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 21.9 arp-guard scan-threshold

Use this command to set the global scan threshold.

Use the **no** or **default** form of this command to restore the default setting.

**arp-guard scan-threshold** *pkt-cnt*

**no arp-guard scan-threshold**

**default arp-guard scan-threshold**

**Parameter Description**

| Parameter      | Description                                                                    |
|----------------|--------------------------------------------------------------------------------|
| <i>pkt-cnt</i> | Sets the scan threshold, in the range from 1 to 19,999 in the unit of seconds. |

**Defaults** The default value varies with products. For details, see the *Configuration Guide*.

**Command Mode** NFPP configuration mode

**Usage Guide** The scanning may occur on the condition that:

- More than 15 packets are received within 10 seconds;
- The source MAC address for the link layer is constant while the source IP address is uncertain;
- The source MAC and IP address for the link layer is constant while the destination IP address is uncertain.

**Configuration** The following example sets the global scan threshold to 20pps.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# arp-guard scan-threshold 20
```

| Related<br>Commands | Command                              | Description                          |
|---------------------|--------------------------------------|--------------------------------------|
|                     | <b>nfpp arp-guard scan-threshold</b> | Sets the scan threshold on the port. |
|                     | <b>show nfpp arp-guard summary</b>   | Displays the configuration.          |
|                     | <b>show nfpp arp-guard scan</b>      | Displays the ARP guard scan table.   |
|                     | <b>clear nfpp arp-guard scan</b>     | Clears the ARP guard scan table.     |

**Platform** N/A

**Description**

## 21.10 clear nfpp arp-guard hosts

Use this command to clear the monitored host isolation.

**clear nfpp arp-guard hosts** [ **vlan** *vid* ] [ **interface** *interface-id* ] [ *ip-address* | *mac-address* ]

| Parameter<br>Description | Parameter           | Description                         |
|--------------------------|---------------------|-------------------------------------|
|                          | <i>vid</i>          | Sets the VLAN ID.                   |
|                          | <i>interface-id</i> | Sets the interface name and number. |
|                          | <i>ip-address</i>   | Sets the IP address.                |
|                          | <i>mac-address</i>  | Sets the MAC address.               |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example clears the monitored host isolation.

**Examples**

```
Ruijie# clear nfpp arp-guard hosts vlan 1 interface g0/1
```

| Related<br>Commands | Command                           | Description                                    |
|---------------------|-----------------------------------|------------------------------------------------|
|                     | <b>arp-guard attack-threshold</b> | Sets the global attack threshold.              |
|                     | <b>nfpp arp-guard policy</b>      | Sets the limit threshold and attack threshold. |
|                     | <b>show nfpp arp-guard hosts</b>  | Displays the monitored host.                   |

**Platform** N/A

**Description**

## 21.11 clear nfpp arp-guard scan

Use this command to clear ARP scanning table.

**clear nfpp arp-guard scan**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example clears ARP scanning table.

**Examples** Ruijie# clear nfpp arp-guard scan

| Related Commands | Command                           | Description                       |
|------------------|-----------------------------------|-----------------------------------|
|                  | <b>arp-guard attack-threshold</b> | Sets the global attack threshold. |
|                  | <b>nfpp arp-guard policy</b>      | Sets the attack threshold.        |
|                  | <b>show nfpp arp-guard scan</b>   | Displays the ARP scanning table.  |

**Platform** N/A

**Description**

## 21.12 clear nfpp define *name* hosts

Use this command to clear the monitored hosts. If the host is isolated, you need to release it.

**clear nfpp define *name* hosts [ vlan *vid* ] [ interface *interface-id* ] [ *ip-address* ] [ *mac-address* ] [ *ipv6-address* ]**

| Parameter Description | Parameter           | Description        |
|-----------------------|---------------------|--------------------|
|                       | <i>name</i>         | Defines guard name |
|                       | <i>vid</i>          | VLAN ID            |
|                       | <i>interface-id</i> | Interface name     |
|                       | <i>ip-address</i>   | IP address         |
|                       | <i>mac</i>          | MAC address        |

|                     |              |
|---------------------|--------------|
| <i>ipv6-address</i> | IPv6 address |
|---------------------|--------------|

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** Use this command without the parameter to clear all monitored hosts in the self-defined range.

**Configuration** The following example clears the monitored hosts.

**Examples** Ruijie# `clear nfpp define tcp hosts vlan 1 interface g 0/1`

| Related Commands | Command                             | Description                  |
|------------------|-------------------------------------|------------------------------|
|                  | <code>show nfpp define hosts</code> | Displays the isolated hosts. |

**Platform** N/A

**Description**

## 21.13 clear nfpp dhcp-guard hosts

Use this command to clear the DHCP monitored hosts, that it, release them from isolation.

**clear nfpp dhcp-guard hosts** [ **vlan** *vid* ] [ **interface** *interface-id* ] [ *mac-address* ]

| Parameter Description | Parameter                           | Description       |
|-----------------------|-------------------------------------|-------------------|
|                       | <i>vid</i>                          | Sets the VLAN ID. |
| <i>interface-id</i>   | Sets the interface name and number. |                   |
| <i>mac-address</i>    | Sets the MAC address.               |                   |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** Use this command without the parameter to clear all monitored hosts.

**Configuration** The following example clears the DHCP monitored hosts.

**Examples** Ruijie# `clear nfpp dhcp-guard hosts vlan 1 interface g0/1`

| Related Commands | Command                                  | Description                       |
|------------------|------------------------------------------|-----------------------------------|
|                  | <code>dhcp-guard attack-threshold</code> | Sets the global attack threshold. |

|                                   |                                                |
|-----------------------------------|------------------------------------------------|
| <b>nfpp dhcp-guard policy</b>     | Sets the limit threshold and attack threshold. |
| <b>show nfpp dhcp-guard hosts</b> | Displays the monitored host.                   |

**Platform** N/A

**Description**

## 21.14 clear nfpp dhcpv6-guard hosts

Use this command to clear the DHCPv6 monitored host isolation.

**clear nfpp dhcpv6-guard hosts** [ **vlan** *vid* ] [ **interface** *interface-id* ] [ *mac-address* ]

| Parameter Description | Parameter           | Description                         |
|-----------------------|---------------------|-------------------------------------|
|                       | <i>vid</i>          | Sets the VLAN ID.                   |
|                       | <i>interface-id</i> | Sets the interface name and number. |
|                       | <i>mac-address</i>  | Sets the MAC address.               |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** Use this command without the parameter to clear all monitored hosts

**Configuration Examples** The following example clears the DHCPv6 monitored hosts.

```
Ruijie# clear nfpp dhcpv6-guard hosts vlan 1 interface g0/1
```

| Related Commands | Command                              | Description                                    |
|------------------|--------------------------------------|------------------------------------------------|
|                  | <b>dhcpv6-guard attack-threshold</b> | Sets the global attack threshold.              |
|                  | <b>nfpp dhcpv6-guard policy</b>      | Sets the limit threshold and attack threshold. |
|                  | <b>show nfpp dhcpv6-guard hosts</b>  | Displays the monitored host.                   |

**Platform** N/A

**Description**

## 21.15 clear nfpp icmp-guard hosts

Use this command to clear the ICMP monitored hosts.

**clear nfpp icmp-guard hosts** [ **vlan** *vid* ] [ **interface** *interface-id* ] [ *ip-address* ]

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|-----------------------|-----------|-------------|



|                     |                                     |
|---------------------|-------------------------------------|
| <i>vid</i>          | Sets the VLAN ID.                   |
| <i>interface-id</i> | Sets the interface name and number. |
| <i>ip-address</i>   | Sets the IP address.                |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** Use this command without the parameter to clear all monitored hosts.

**Configuration** The following example clears the ICMP monitored hosts.

**Examples** Ruijie# clear nfpp icmp-guard hosts vlan 1 interface g0/1

**Related Commands**

| Command                            | Description                                    |
|------------------------------------|------------------------------------------------|
| <b>icmp-guard attack-threshold</b> | Sets the global attack threshold.              |
| <b>nfpp icmp-guard policy</b>      | Sets the limit threshold and attack threshold. |
| <b>show nfpp icmp-guard hosts</b>  | Displays the monitored host.                   |

**Platform** N/A

**Description**

## 21.16 clear nfpp ip-guard hosts

Use this command to clear the monitored host isolation.

**clear nfpp ip-guard hosts** [ **vlan** *vid* ] [ **interface** *interface-id* ] [ *ip-address* ]

**Parameter Description**

| Parameter           | Description                         |
|---------------------|-------------------------------------|
| <i>vid</i>          | Sets the VLAN ID.                   |
| <i>interface-id</i> | Sets the interface name and number. |
| <i>ip-address</i>   | Sets the IP address.                |

**Defaults** N/A.

**Command Mode** Privileged EXEC mode

**Usage Guide** Use this command without the parameter to clear all monitored hosts.

**Configuration** The following example clears the monitored host isolation.

**Examples** Ruijie# clear nfpp ip-guard hosts vlan 1 interface g0/1

| Related<br>Commands | Command                          | Description                                    |
|---------------------|----------------------------------|------------------------------------------------|
|                     | <b>ip-guard attack-threshold</b> | Sets the global attack threshold.              |
|                     | <b>nfpp ip-guard policy</b>      | Sets the limit threshold and attack threshold. |
|                     | <b>show nfpp ip-guard hosts</b>  | Displays the monitored host.                   |

**Platform** N/A

**Description**

## 21.17 clear nfpp nd-guard hosts

Use this command to remove the speed limit on the monitored host.

**clear nfpp nd-guard hosts** [**vlan** *vid*] [**interface** *interface-id*]

| Parameter<br>Description | Parameter           | Description                         |
|--------------------------|---------------------|-------------------------------------|
|                          | <i>vid</i>          | Sets the VLAN ID.                   |
|                          | <i>interface-id</i> | Sets the interface name and number. |

**Defaults** N/A

**Command  
Mode** Privileged EXEC mode

**Usage Guide** This command without any parameter is used to remove speed limit on all monitored hosts.

**Configuration  
Examples** The following example removes speed limit on interface g0/1 in VLAN 1.

```
Ruijie# clear nfpp nd-guard hosts vlan 1 interface g0/1
```

**Prompt** N/A

**Messages**

**Platform** N/A

**Description**

## 21.18 clear nfpp log

Use this command to clear the NFPP log buffer area.

**clear nfpp log**

| Parameter | Parameter | Description |
|-----------|-----------|-------------|
|-----------|-----------|-------------|

|                    |     |     |
|--------------------|-----|-----|
| <b>Description</b> |     |     |
|                    | N/A | N/A |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example clears the NFPP log buffer area.

**Examples** Ruijie# clear nfpp log

| <b>Related Commands</b> | Command              | Description                                                 |
|-------------------------|----------------------|-------------------------------------------------------------|
|                         | <b>show nfpp log</b> | Displays the NFPP log configuration or the log buffer area. |

**Platform** N/A

**Description**

## 21.19 define

Use this command to define the anti-attack type.

Use the **no** or **default** form of this command to restore the default setting.

**define** *name*

**no define** *name*

**default define** *name*

| <b>Parameter Description</b> | Parameter   | Description                               |
|------------------------------|-------------|-------------------------------------------|
|                              | <i>name</i> | Name of the user-defined anti-attack type |

**Defaults** N/A

**Command Mode** NFPP configuration mode

**Usage Guide** Use this command to define the anti-attack type.

**Configuration** The following example creates the user-defined anti-attack type.

**Examples** Ruijie(config)# nfpp  
 Ruijie(config-nfpp)# define tcp  
 Ruijie(config-nfpp-define)#

| Related Commands | Command | Description                     |
|------------------|---------|---------------------------------|
|                  |         | <b>show nfpp define summary</b> |

**Platform** N/A

**Description**

## 21.20 define *name* enable

Use this command to enable the user-defined anti-attack globally.

Use the **no** or **default** form of this command to restore the default setting.

**define name enable**

**no define name enable**

**default define name enable**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       |           | <i>name</i> |

**Defaults** This function is disabled by default.

**Command** NFPP configuration mode

**Mode**

**Usage Guide** This command takes effect only after the match, rate-limit and attack-threshold have been configured.

**Configuration** The following example enabled the user-defined anti-attack globally.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)#define tcp enable
```

| Related Commands | Command | Description                     |
|------------------|---------|---------------------------------|
|                  |         | <b>show nfpp define summary</b> |

**Platform** N/A

**Description**

## 21.21 dhcp-guard attack-threshold

Use this command to set the global attack threshold. When the packet rate exceeds the attack threshold, the attack occurs.

Use the **no** or **default** form of this command to restore the default setting.

**dhcp-guard attack-threshold { per-src-mac | per-port } pps**

**no dhcp-guard attack-threshold { per-src-mac | per-port }**

**default dhcp-guard attack-threshold { per-src-mac | per-port }**

| Parameter Description | Parameter          | Description                                                        |
|-----------------------|--------------------|--------------------------------------------------------------------|
|                       | <b>per-src-mac</b> | Sets the attack threshold for each source MAC address.             |
|                       | <b>per-port</b>    | Sets the attack threshold for each port.                           |
|                       | <i>pps</i>         | Sets the attack threshold, in pps. The valid range is 1 to 19,999. |

**Defaults** The default value varies with products. For details, see the *Configuration Guide*.

**Command** NFPP configuration mode

**Mode**

**Usage Guide** N/A

**Configuration** The following example sets the global attack threshold.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# dhcp-guard attack-threshold per-src-mac 15
Ruijie(config-nfpp)# dhcp-guard attack-threshold per-port 200
```

| Related Commands | Command                             | Description                                             |
|------------------|-------------------------------------|---------------------------------------------------------|
|                  | <b>nfpp dhcp-guard policy</b>       | Displays the rate-limit threshold and attack threshold. |
|                  | <b>show nfpp dhcp-guard summary</b> | Displays the configuration.                             |
|                  | <b>show nfpp dhcp-guard hosts</b>   | Displays the monitored host list.                       |
|                  | <b>clear nfpp dhcp-guard hosts</b>  | Clears the monitored host.                              |

**Platform** N/A

**Description**

## 21.22 dhcp-guard enable

Use this command to enable the DHCP anti-attack function.

Use the **no** or **default** form of this command to restore the default setting.

**dhcp-guard enable**

**no dhcp-guard enable**

**default dhcp-guard enable**

| Parameter<br>Description | Parameter | Description |
|--------------------------|-----------|-------------|
|                          |           | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** NFPP configuration mode

**Usage Guide** N/A

**Configuration** The following example enables the DHCP anti-attack function.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# dhcp-guard enable
```

| Related<br>Commands | Command | Description |
|---------------------|---------|-------------|
|                     |         | N/A         |

**Platform Description** N/A

## 21.23 dhcp-guard isolate-period

Use this command to set the isolate time globally.

Use the **no** or **default** form of this command to restore the default setting.

**dhcp-guard isolate-period** { *seconds* | **permanent** }

**no dhcp-guard isolate-period**

**default dhcp-guard isolate-period**

| Parameter<br>Description | Parameter        | Description          |
|--------------------------|------------------|----------------------|
|                          |                  | <i>seconds</i>       |
|                          | <b>permanent</b> | Permanent isolation. |

**Defaults** The default isolate time is 0, which means no isolation.

**Command Mode** NFPP configuration mode

**Usage Guide** The isolate period can be configured globally or based on the interface. For one interface, if the isolate period is not set based on the interface, the global value shall be adopted; or the interface-based isolate period shall be adopted.

**Configuration** The following example sets the isolate time globally to 180 seconds.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# dhcp-guard isolate-period 180
```

**Related Commands**

| Command                               | Description                             |
|---------------------------------------|-----------------------------------------|
| <b>nfpp dhcp-guard isolate-period</b> | Sets the isolate time on the interface. |
| <b>show nfpp dhcp-guard summary</b>   | Displays the configuration.             |

**Platform**

N/A

**Description**

## 21.24 dhcp-guard monitored-host-limit

Use this command to set the maximum monitored host number.

Use the **no** or **default** form of this command to restore the default setting.

**dhcp-guard monitored-host-limit** *number*

**no dhcp-guard monitored-host-limit**

**default dhcp-guard monitored-host-limit**

**Parameter Description**

| Parameter     | Description                                                              |
|---------------|--------------------------------------------------------------------------|
| <i>number</i> | The maximum monitored host number, in the range from 1 to 4,294,967,295. |

**Defaults**

The default is 20,000.

**Command**

NFPP configuration mode

**Mode****Usage Guide**

If the monitored host number has reached the default 20,000, the administrator shall set the max-number smaller than 20,000 and it will prompt the message that %ERROR: The value that you configured is smaller than current monitored hosts 20,000, please clear a part of monitored hosts to remind the administrator of the invalid configuration and removing the monitored hosts.

When the maximum monitored host number has been exceeded, it prompts the message that %NFPP\_ARP\_GUARD-4-SESSION\_LIMIT: Attempt to exceed limit of 20000 monitored hosts to remind the administrator.

**Configuration** The following example sets the maximum monitored host number to 200.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# dhcp-guard monitored-host-limit 200
```

**Related**

| Command | Description |
|---------|-------------|
|---------|-------------|

|                 |                                     |                             |
|-----------------|-------------------------------------|-----------------------------|
| <b>Commands</b> |                                     |                             |
|                 | <b>show nfpp dhcp-guard summary</b> | Displays the configuration. |

**Platform** N/A

**Description**

## 21.25 dhcp-guard monitor-period

Use this command to configure the monitor time.

Use the **no** or **default** form of this command to restore the default setting.

**dhcp-guard monitor-period** *seconds*

**no dhcp-guard monitor-period**

**default dhcp-guard monitor-period**

|                              |                  |                                                                                |
|------------------------------|------------------|--------------------------------------------------------------------------------|
| <b>Parameter Description</b> | <b>Parameter</b> | <b>Description</b>                                                             |
|                              | <i>seconds</i>   | Sets the monitor time, in the range from 180 to 86,400 in the unit of seconds. |

**Defaults** The default is 600 seconds.

**Command Mode** NFPP configuration mode

**Usage Guide** When the attacker is detected, if the isolate period is 0, the attacker will be monitored by the software and the timeout time will be the monitor period. During the software monitoring, if the isolate period is not 0, the software-monitored attacker will be auto-isolated by the hardware and the timeout time will be the isolate period. The monitor period is valid with the isolate period 0.

If the isolate period has changed to be 0, the attackers on the interface will be removed rather than being monitored by the software.

**Configuration Examples** The following example sets the monitor time to 180 seconds.

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# dhcp-guard monitor-period 180
```

|                         |                                     |                                   |
|-------------------------|-------------------------------------|-----------------------------------|
| <b>Related Commands</b> | <b>Command</b>                      | <b>Description</b>                |
|                         | <b>show nfpp dhcp-guard summary</b> | Displays the configuration.       |
|                         | <b>show nfpp dhcp-guard hosts</b>   | Displays the monitored host list. |
|                         | <b>clear nfpp dhcp-guard hosts</b>  | Clears the isolated host.         |

**Platform** N/A

**Description**



## 21.26 dhcp-guard rate-limit

Use this command to set the rate-limit threshold globally.

Use the **no** or **default** form of this command to restore the default setting.

**dhcp-guard rate-limit** { per-src-mac | per-port } pps

**no dhcp-guard rate-limit** { per-src-mac | per-port }

**default dhcp-guard rate-limit** { per-src-mac | per-port }

| Parameter Description | Parameter          | Description                                       |
|-----------------------|--------------------|---------------------------------------------------|
|                       | <b>per-src-mac</b> | Sets the rate limit for each source MAC address.  |
|                       | <b>per-port</b>    | Sets the rate limit for each port.                |
|                       | <i>pps</i>         | Sets the rate limit, in the range of 1 to 19,999. |

**Defaults** The default value varies with products. For details, see the *Configuration Guide*.

**Command Mode** NFPP configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example sets the rate-limit threshold globally.

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# dhcp-guard rate-limit per-src-mac 8
Ruijie(config-nfpp)# dhcp-guard rate-limit per-port 100
```

| Related Commands | Command                             | Description                                   |
|------------------|-------------------------------------|-----------------------------------------------|
|                  | <b>nfpp dhcp-guard policy</b>       | Sets the rate limit and the attack threshold. |
|                  | <b>show nfpp dhcp-guard summary</b> | Displays the configuration.                   |

**Platform Description** N/A

## 21.27 dhcpv6-guard attack-threshold

Use this command to set the global attack threshold. When the packet rate exceeds the attack threshold, the attack occurs.

Use the **no** or **default** form of this command to restore the default setting.

**dhcpv6-guard attack-threshold** { per-src-mac | per-port } pps

**no dhcpv6-guard attack-threshold** {per-src-mac | per-port}

**default dhcpv6-guard attack-threshold** { per-src-mac | per-port }

| Parameter Description | Parameter          | Description                                                      |
|-----------------------|--------------------|------------------------------------------------------------------|
|                       | <b>per-src-mac</b> | Sets the attack threshold for each source MAC address.           |
|                       | <b>per-port</b>    | Sets the attack threshold for each port.                         |
|                       | <i>pps</i>         | Sets the attack threshold, in the range is from 1 to 19,999 pps. |

**Defaults** The default value varies with products. For details, see the *Configuration Guide*.

**Command** NFPP configuration mode

**Mode**

**Usage Guide** N/A.

**Configuration** The following example sets the global attack threshold.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# dhcpv6-guard attack-threshold per-src-mac 15
Ruijie(config-nfpp)# dhcpv6-guard attack-threshold per-port 200
```

**Related Commands**

| Command                               | Description                                             |
|---------------------------------------|---------------------------------------------------------|
| <b>nfpp dhcpv6-guard policy</b>       | Displays the rate-limit threshold and attack threshold. |
| <b>show nfpp dhcpv6-guard summary</b> | Displays the configuration.                             |
| <b>show nfpp dhcpv6-guard hosts</b>   | Displays the monitored host list.                       |
| <b>clear nfpp dhcpv6-guard hosts</b>  | Clears the monitored host.                              |

**Platform** N/A

**Description**

## 21.28 dhcpv6-guard enable

Use this command to enable the DHCPv6 anti-attack function.

Use the **no** or **default** form of this command to restore the default setting.

**dhcpv6-guard enable**

**no dhcpv6-guard enable**

**default dhcpv6-guard enable**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** NFPP configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example enables the DHCPv6 anti-attack function globally.

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# dhcpv6-guard enable
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A

## 21.29 dhcpv6-guard monitored-host-limit

Use this command to set the maximum monitored host number.

Use the **no** or **default** form of this command to restore the default setting.

**dhcpv6-guard monitored-host-limit** *number*

**no dhcpv6-guard monitored-host-limit**

**default dhcpv6-guard monitored-host-limit**

**Parameter Description**

| Parameter     | Description                                                              |
|---------------|--------------------------------------------------------------------------|
| <i>number</i> | The maximum monitored host number, in the range from 1 to 4,294,967,295. |

**Defaults** The default is 20,000.

**Command Mode** NFPP configuration mode

**Usage Guide** If the monitored host number has reached the default 20,000, the administrator shall set the max-number smaller than 20,000 and it will prompt the message that %ERROR: The value that you configured is smaller than current monitored hosts 20,000, please clear a part of monitored hosts to remind the administrator of the invalid configuration and removing the monitored hosts.

When the maximum monitored host number has been exceeded, it prompts the message that %NFPP\_DHCPV6\_GUARD-4-SESSION\_LIMIT: Attempt to exceed limit of 20000 monitored hosts to remind the administrator.

**Configuration** The following example sets the maximum monitored host number to 200.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# dhcpv6-guard monitored-host-limit 200
```

**Related  
Commands**

| Command                               | Description                 |
|---------------------------------------|-----------------------------|
| <b>show nfpp dhcpv6-guard summary</b> | Displays the configuration. |

**Platform**

N/A

**Description**

## 21.30 dhcpv6-guard monitor-period

Use this command to configure the monitor time.

Use the **no** or **default** form of this command to restore the default setting.

**dhcpv6-guard monitor-period** *seconds*

**no dhcpv6-guard monitor-period**

**default dhcpv6-guard monitor-period**

**Parameter  
Description**

| Parameter      | Description                                                                    |
|----------------|--------------------------------------------------------------------------------|
| <i>seconds</i> | Sets the monitor time, in the range from 180 to 86,400 in the unit of seconds. |

**Defaults**

The default is 600 seconds.

**Command**

NFPP configuration mode

**Mode****Usage Guide**

When the attacker is detected, if the isolate period is 0, the attacker will be monitored by the software and the timeout time will be the monitor period. During the software monitoring, if the isolate period is not 0, the software-monitored attacker will be auto-isolated by the hardware and the timeout time will be the isolate period. The monitor period is valid with the isolate period 0.

If the isolate period has changed to be 0, the attackers on the interface will be removed rather than being monitored by the software.

**Configuration**

The following example sets the monitor time to 180 seconds.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# dhcpv6-guard monitor-period 180
```

**Related  
Commands**

| Command                               | Description                       |
|---------------------------------------|-----------------------------------|
| <b>show nfpp dhcpv6-guard summary</b> | Displays the configuration.       |
| <b>show nfpp dhcpv6-guard hosts</b>   | Displays the monitored host list. |

|                                      |                           |
|--------------------------------------|---------------------------|
| <b>clear nfpp dhcpv6-guard hosts</b> | Clears the isolated host. |
|--------------------------------------|---------------------------|

**Platform** N/A

**Description**

## 21.31 dhcpv6-guard rate-limit

Use this command to set the rate-limit threshold globally.

Use the **no** or **default** form of this command to restore the default setting.

**dhcpv6-guard rate-limit { per-src-mac | per-port } pps**

**no dhcpv6-guard rate-limit { per-src-mac | per-port }**

**default dhcpv6-guard rate-limit { per-src-mac | per-port }**

| Parameter Description | Parameter          | Description                                         |
|-----------------------|--------------------|-----------------------------------------------------|
|                       | <b>per-src-mac</b> | Sets the rate limit for each source MAC address.    |
|                       | <b>per-port</b>    | Sets the rate limit for each port.                  |
|                       | <i>pps</i>         | Sets the rate limit, in the range from 1 to 19,999. |

**Defaults** The default value varies with products. For details, see the *Configuration Guide*.

**Command** NFPP configuration mode

**Mode**

**Usage Guide** N/A

**Configuration** The following example sets the rate-limit threshold globally.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# dhcpv6-guard rate-limit per-src-mac 8
Ruijie(config-nfpp)# dhcpv6-guard rate-limit per-port 100
```

| Related Commands | Command                               | Description                                   |
|------------------|---------------------------------------|-----------------------------------------------|
|                  | <b>nfpp dhcpv6-guard policy</b>       | Sets the rate limit and the attack threshold. |
|                  | <b>show nfpp dhcpv6-guard summary</b> | Displays the configuration.                   |

**Platform** N/A

**Description**

## 21.32 global-policy

Use this command to set the rate-limit threshold and attack threshold based on the host or port.

Use the **no** or **default** form of this command to restore the default setting.

**global-policy** { **per-src-mac** | **per-src-ip** | **per-port** } *rate-limit-pps* *attack-threshold-pps*

**no global-policy** { **per-src-mac** | **per-src-ip** | **per-port** }

**default global-policy** { **per-src-mac** | **per-src-ip** | **per-port** }

**Parameter  
Description**

| Parameter                   | Description                                                                        |
|-----------------------------|------------------------------------------------------------------------------------|
| <b>per-src-ip</b>           | Performs the rate statistics based on the source IP / VID and port.                |
| <b>per-src-mac</b>          | Performs the rate statistics based on the source MAC / VID and port.               |
| <b>per-port</b>             | Performs the rate statistics based on each physical port of receiving the packets. |
| <i>rate-limit-pps</i>       | Sets the rate-limit threshold.                                                     |
| <i>attack-threshold-pps</i> | Sets the attack threshold.                                                         |

**Defaults**

By default, no rate-limit threshold and attack threshold is configured. To enable self-defined anti-attack, these two parameters must be set.

**Command**

NFPP define configuration mode

**Mode**

**Usage Guide**

To create a user-defined anti-attack type, the classification rule for the rate statistics must be specified, that is, recognize the host based on the source IP address/ source MAC address for the user-defined packets rate statistics based on the user / port and specify the rate-limit threshold and attack threshold for each classification. The rate-limit threshold shall be equal to or greater than the attack threshold. If the rate is greater than the rate-limit threshold, the packets that meet this classification rule will be discarded. If the rate exceeds the attack threshold, the user will be regarded as an attacker. The log will be printed and the trap will be sent.

**Configuration**

The following example sets the rate-limit threshold and attack threshold based on the host or port.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# nfpp define tcp
Ruijie(config-nfpp-define)# global-policy per-src-ip 10 20
Ruijie(config-nfpp-define)# global-policy per-port 100 200
```

**Related  
Commands**

| Command                                      | Description                                         |
|----------------------------------------------|-----------------------------------------------------|
| <b>nfpp define</b> <i>name</i> <b>policy</b> | Sets the rate-limit threshold and attack threshold. |
| <b>show nfpp define summary</b>              | Displays the user-defined anti-attack configuration |

**Platform**

N/A

**Description**

## 21.33 icmp-guard attack-threshold

Use this command to set the global attack threshold. When the packet rate exceeds the attack threshold, the attack occurs.

Use the **no** or **default** form of this command to restore the default setting.

**icmp-guard attack-threshold** { **per-src-ip** | **per-port** } *pps*

**no icmp-guard attack-threshold** { **per-src-ip** | **per-port** }

**default icmp-guard attack-threshold** { **per-src-ip** | **per-port** }

| Parameter Description | Parameter         | Description                                                                  |
|-----------------------|-------------------|------------------------------------------------------------------------------|
|                       | <b>per-src-ip</b> | Sets the attack threshold for each source IP address.                        |
|                       | <b>per-port</b>   | Sets the attack threshold for each port.                                     |
|                       | <i>pps</i>        | Sets the attack threshold, in the range from 1 to 19,999 in the unit of pps. |

**Defaults** The default value varies with products. For details, see the *Configuration Guide*.

**Command Mode** NFPP configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example sets the global attack threshold.

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# icmp-guard attack-threshold per-src-ip 600
Ruijie(config-nfpp)# icmp-guard attack-threshold per-port 1200
```

| Related Commands | Command                             | Description                                             |
|------------------|-------------------------------------|---------------------------------------------------------|
|                  | <b>nfpp icmp-guard policy</b>       | Displays the rate-limit threshold and attack threshold. |
|                  | <b>show nfpp icmp-guard summary</b> | Displays the configuration.                             |
|                  | <b>show nfpp icmp-guard hosts</b>   | Displays the monitored host list.                       |
|                  | <b>clear nfpp icmp-guard hosts</b>  | Clears the monitored host.                              |

**Platform Description** N/A

## 21.34 icmp-guard enable

Use this command to enable the ICMP anti-attack function.

Use the **no** or **default** form of this command to restore the default setting.

**icmp-guard enable**

**no icmp-guard enable**

**default icmp-guard enable**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** This function is enabled by default.

**Command** NFPP configuration mode

**Mode**

**Usage Guide** N/A

**Configuration** The following example enables the ICMP anti-attack function globally.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# icmp-guard enable
```

| Related Commands | Command                             | Description                                             |
|------------------|-------------------------------------|---------------------------------------------------------|
|                  | <b>nfpp icmp-guard enable</b>       | Enables the ICMP anti-attack function on the interface. |
|                  | <b>show nfpp icmp-guard summary</b> | Displays the configuration.                             |

**Platform** N/A

**Description**

## 21.35 icmp-guard isolate-period

Use this command to set the isolate time globally.

Use the **no** or **default** form of this command to restore the default setting.

**icmp-guard isolate-period** { *seconds* | **permanent** }

**no icmp-guard isolate-period**

**default icmp-guard isolate-period**

| Parameter Description | Parameter        | Description                                                                                        |
|-----------------------|------------------|----------------------------------------------------------------------------------------------------|
|                       | <i>seconds</i>   | Sets the isolate time. The value is in the range is 0 or from 30 to 86,400 in the unit of seconds. |
|                       | <b>permanent</b> | Permanent isolation.                                                                               |

**Defaults** The default isolate time is 0, which means no isolation.



**Command** NFPP configuration mode

**Mode**

**Usage Guide** The isolate period can be configured globally or based on the interface. For one interface, if the isolate period is not set based on the interface, the global value shall be adopted; or the interface-based isolate period shall be adopted.

**Configuration** The following example sets the isolate time globally to 180 seconds.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# icmp-guard isolate-period 180
```

**Related  
Commands**

| Command                               | Description                             |
|---------------------------------------|-----------------------------------------|
| <b>nfpp icmp-guard isolate-period</b> | Sets the isolate time on the interface. |
| <b>show nfpp icmp-guard summary</b>   | Displays the configuration.             |

**Platform** N/A

**Description**

## 21.36 icmp-guard monitored-host-limit

Use this command to set the maximum monitored host number.

Use the **no** or **default** form of this command to restore the default setting.

**icmp-guard monitored-host-limit** *number*

**no icmp-guard monitored-host-limit**

**default icmp-guard monitored-host-limit**

**Parameter  
Description**

| Parameter     | Description                                                              |
|---------------|--------------------------------------------------------------------------|
| <i>number</i> | The maximum monitored host number, in the range from 1 to 4,294,967,295. |

**Defaults** The default is 20,000.

**Command** NFPP configuration mode

**Mode**

**Usage Guide** If the monitored host number has reached the default 20,000, the administrator shall set the max-number smaller than 20,000 and it will prompt the message that %ERROR: The value that you configured is smaller than current monitored hosts 20,000, please clear a part of monitored hosts to remind the administrator of the invalid configuration and removing the monitored hosts.

When the maximum monitored host number has been exceeded, it prompts the message that %NFPP\_ARP\_GUARD-4-SESSION\_LIMIT: Attempt to exceed limit of 20,000 monitored hosts to

remind the administrator.

**Configuration** The following example sets the maximum monitored host number to 200.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# icmp-guard monitored-host-limit 200
```

**Related  
Commands**

| Command                             | Description                 |
|-------------------------------------|-----------------------------|
| <b>show nfpp icmp-guard summary</b> | Displays the configuration. |

**Platform** N/A

**Description**

## 21.37 icmp-guard monitor-period

Use this command to configure the monitor time.

Use the **no** or **default** form of this command to restore the default setting.

**icmp-guard monitor-period** *seconds*

**no icmp-guard monitor-period**

**default icmp-guard monitor-period**

**Parameter  
Description**

| Parameter      | Description                                                     |
|----------------|-----------------------------------------------------------------|
| <i>seconds</i> | Sets the monitor time, in the range from 180 to 86,400 seconds. |

**Defaults** The default is 600.

**Command** NFPP configuration mode

**Mode**

**Usage Guide** When the attacker is detected, if the isolate period is 0, the attacker will be monitored by the software and the timeout time will be the monitor period. During the software monitoring, if the isolate period is not 0, the software-monitored attacker will be auto-isolated by the hardware and the timeout time will be the isolate period. The monitor period is valid with the isolate period 0.

If the isolate period has changed to be 0, the attackers on the interface will be removed rather than being monitored by the software.

**Configuration** The following example sets the monitor time to 180 seconds.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# icmp-guard monitor-period 180
```

**Related  
Commands**

| Command                             | Description                 |
|-------------------------------------|-----------------------------|
| <b>show nfpp icmp-guard summary</b> | Displays the configuration. |

|                                    |                                   |
|------------------------------------|-----------------------------------|
| <b>show nfpp icmp-guard hosts</b>  | Displays the monitored host list. |
| <b>clear nfpp icmp-guard hosts</b> | Clears the isolated host.         |

**Platform** N/A

**Description**

## 21.38 icmp-guard rate-limit

Use this command to set the rate-limit threshold globally.

Use the **no** or **default** form of this command to restore the default setting.

**icmp-guard rate-limit { per-src-ip | per-port } pps**

**no icmp-guard rate-limit { per-src-ip | per-port }**

**default icmp-guard rate-limit { per-src-ip | per-port }**

| Parameter<br>Description | Parameter       | Description                                         |
|--------------------------|-----------------|-----------------------------------------------------|
|                          |                 | <b>per-src-ip</b>                                   |
|                          | <b>per-port</b> | Sets the rate limit for each port.                  |
|                          | <i>pps</i>      | Sets the rate limit, in the range from 1 to 19,999. |

**Defaults** The default value varies with products. For details, see the *Configuration Guide*.

**Command** NFPP configuration mode

**Mode**

**Usage Guide** N/A

**Configuration** The following example sets the rate-limit threshold globally.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# icmp-guard rate-limit per-src-ip 500
Ruijie(config-nfpp)# icmp-guard rate-limit per-port 800
```

| Related<br>Commands | Command                             | Description                   |
|---------------------|-------------------------------------|-------------------------------|
|                     |                                     | <b>nfpp icmp-guard policy</b> |
|                     | <b>show nfpp icmp-guard summary</b> | Displays the configuration.   |

**Platform** N/A

**Description**

## 21.39 icmp-guard trusted-host

Use this command to set the trusted hosts free from monitoring.

Use the **no** or **default** form of this command to restore the default setting.

**icmp-guard trusted-host** *ip mask*

**no icmp-guard trusted-host** { **all** | *ip mask* }

**default icmp-guard trusted-host**

| Parameter Description | Parameter   | Description                                     |
|-----------------------|-------------|-------------------------------------------------|
|                       | <i>ip</i>   | Sets the IP address.                            |
|                       | <i>mask</i> | Sets the IP mask.                               |
|                       | <b>all</b>  | Deletes the configuration of all trusted hosts. |

**Defaults** No trusted host is configured by default.

**Command** NFPP configuration mode

**Mode**

**Usage Guide** The administrator can use this command to set the trusted host free from monitoring. The ICMP packets are allowed to send to the trusted host CPU without any rate-limit and warning configuration. Configure the mask to set all hosts in one network segment free from monitoring. UP to 500 trusted hosts are supported.

**Configuration** The following example sets the trusted hosts free from monitoring.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# icmp-guard trusted-host 1.1.1.0 255.255.255.0
```

| Related Commands | Command                                  | Description                 |
|------------------|------------------------------------------|-----------------------------|
|                  | <b>show nfpp icmp-guard trusted-host</b> | Displays the configuration. |

**Platform** N/A

**Description**

## 21.40 ip-guard attack-threshold

Use this command to set the global attack threshold. When the packet rate exceeds the attack threshold, the attack occurs.

Use the **no** or **default** form of this command to restore the default setting.

**ip-guard attack-threshold** { **per-src-ip** | **per-port** } *pps*

**no ip-guard attack-threshold** { **per-src-ip** | **per-port** }

**default ip-guard attack-threshold** { **per-src-ip** | **per-port** }

| Parameter Description | Parameter         | Description                                                        |
|-----------------------|-------------------|--------------------------------------------------------------------|
|                       | <b>per-src-ip</b> | Sets the attack threshold for each source IP address.              |
|                       | <b>per-port</b>   | Sets the attack threshold for each port.                           |
|                       | <i>pps</i>        | Sets the attack threshold, in pps. The valid range is 1 to 19,999. |

**Defaults** The default value varies with products. For details, see the *Configuration Guide*.

**Command Mode** NFPP configuration mode

**Usage Guide** The attack threshold shall be equal to or larger than the rate-limit threshold.

**Configuration** The following example sets the global attack threshold.

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# ip-guard attack-threshold per-src-ip 2
Ruijie(config-nfpp)# ip-guard attack-threshold per-port 50
```

| Related Commands | Command                           | Description                                             |
|------------------|-----------------------------------|---------------------------------------------------------|
|                  | <b>nfpp ip-guard policy</b>       | Displays the rate-limit threshold and attack threshold. |
|                  | <b>show nfpp ip-guard summary</b> | Displays the configuration.                             |
|                  | <b>show nfpp ip-guard hosts</b>   | Displays the monitored host list.                       |
|                  | <b>clear nfpp ip-guard hosts</b>  | Clears the monitored host.                              |

**Platform** N/A  
**Description**

## 21.41 ip-guard enable

Use this command to enable IP guard.

Use the **no** or **default** form of this command to restore the default setting.

**ip-guard enable**

**no ip-guard enable**

**default ip-guard enable**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

- Defaults** This function is enabled by default.
- Command** NFPP configuration mode.
- Mode**
- Usage Guide** This configuration aims at attacks whose destination IP address is not the local one. For those with the local address as the destination, CPP (CPU Protect Policy) will limit their rates.

**Configuration** The following example enables the IP guard globally.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# ip-guard enable
```

| Related Commands | Command | Description                 |
|------------------|---------|-----------------------------|
|                  |         | <b>nfpp ip-guard enable</b> |

**Platform** N/A

**Description**

## 21.42 ip-guard isolate-period

Use this command to set the isolate time globally.

Use the **no** or **default** form of this command to restore the default setting.

**ip-guard isolate-period** { *seconds* | **permanent** }

**no ip-guard isolate-period**

**default ip-guard isolate-period**

| Parameter Description | Parameter        | Description         |
|-----------------------|------------------|---------------------|
|                       |                  | <i>seconds</i>      |
|                       | <b>permanent</b> | Permanent isolation |

**Defaults** The default isolate time is 0 second, which means no isolation.

**Command** NFPP configuration mode

**Mode**

**Usage Guide** N/A.

**Configuration** The following example sets the isolate time globally to 180 seconds.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# ip-guard isolate-period 180
```

| Related Commands | Command                             | Description                             |
|------------------|-------------------------------------|-----------------------------------------|
|                  | <b>nfpp ip-guard isolate-period</b> | Sets the isolate time on the interface. |
|                  | <b>show nfpp ip-guard summary</b>   | Displays the configuration.             |

**Platform** N/A

**Description**

## 21.43 ip-guard monitor-period

Use this command to configure the monitor time.

Use the **no** or **default** form of this command to restore the default setting.

**ip-guard monitor-period** *seconds*

**no ip-guard monitor-period**

**default ip-guard monitor-period**

| Parameter Description | Parameter      | Description |
|-----------------------|----------------|-------------|
|                       | <i>seconds</i> |             |

**Defaults** The default is 600 seconds.

**Command** NFPP configuration mode

**Mode**

**Usage Guide** When the attacker is detected, if the isolate period is 0, the attacker will be monitored by the software and the timeout time will be the monitor period. During the software monitoring, if the isolate period is not 0, the software-monitored attacker will be auto-isolated by the hardware and the timeout time will be the isolate period. The monitor period is valid with the isolate period 0.

If the isolate period has changed to be 0, the attackers on the interface will be removed rather than being monitored by the software

**Configuration** The following example sets the monitor time to 180 seconds.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# ip-guard monitor-period 180
```

| Related Commands | Command                           | Description                       |
|------------------|-----------------------------------|-----------------------------------|
|                  | <b>show nfpp ip-guard summary</b> | Displays the configuration.       |
|                  | <b>show nfpp ip-guard hosts</b>   | Displays the monitored host list. |
|                  | <b>clear nfpp ip-guard hosts</b>  | Clears the isolated host.         |

**Platform** N/A

**Description**

## 21.44 ip-guard monitored-host-limit

Use this command to set the maximum monitored host number.

Use the **no** or **default** form of this command to restore the default setting.

**ip-guard monitored-host-limit** *number*

**no ip-guard monitored-host-limit**

**default ip-guard monitored-host-limit**

**Parameter  
Description**

| Parameter     | Description                                                              |
|---------------|--------------------------------------------------------------------------|
| <i>number</i> | The maximum monitored host number, in the range from 1 to 4,294,967,295. |

**Defaults** The default is 20,000 seconds.

**Command  
Mode** NFPP configuration mode

**Usage Guide** If the monitored host number has reached the default 20,000, the administrator shall set the max-number smaller than 20,000 and it will prompt the message that %ERROR: The value that you configured is smaller than current monitored hosts 20,000, please clear a part of monitored hosts to remind the administrator of the invalid configuration and removing the monitored hosts.

When the maximum monitored host number has been exceeded, it prompts the message that %NFPP\_ARP\_GUARD-4-SESSION\_LIMIT: Attempt to exceed limit of 20,000 monitored hosts to remind the administrator.

**Configuration** The following example sets the maximum monitored host number to 200.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# ip-guard monitored-host-limit 200
```

**Related  
Commands**

| Command                           | Description                 |
|-----------------------------------|-----------------------------|
| <b>show nfpp ip-guard summary</b> | Displays the configuration. |

**Platform** N/A

**Description**

## 21.45 ip-guard rate-limit

Use this command to set the rate-limit threshold globally.



Use the **no** or **default** form of this command to restore the default setting.

**ip-guard rate-limit** { **per-src-ip** | **per-port** } *pps*

**no ip-guard rate-limit** { **per-src-ip** | **per-port** }

**default ip-guard rate-limit** {**per-src-ip** | **per-port** }

| Parameter Description | Parameter         | Description                                       |
|-----------------------|-------------------|---------------------------------------------------|
|                       | <b>per-src-ip</b> | Sets the rate limit for each source IP address.   |
|                       | <b>per-port</b>   | Sets the rate limit for each port.                |
|                       | <i>pps</i>        | Sets the rate limit, in the range of 1 to 19,999. |

**Defaults** The default value varies with products. For details, see the *Configuration Guide*.

**Command** NFPP configuration mode

**Mode**

**Usage Guide** N/A

**Configuration** The following example sets the rate-limit threshold globally.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# ip-guard rate-limit per-src-ip 2
Ruijie(config-nfpp)# ip-guard rate-limit per-port 50
```

| Related Commands | Command                           | Description                                   |
|------------------|-----------------------------------|-----------------------------------------------|
|                  | <b>nfpp ip-guard policy</b>       | Sets the rate limit and the attack threshold. |
|                  | <b>show nfpp ip-guard summary</b> | Displays the configuration.                   |

**Platform** N/A

**Description**

## 21.46 ip-guard scan-threshold

Use this command to set the global scan threshold.

Use the **no** or **default** form of this command to restore the default setting.

**ip-guard scan-threshold** *pkt-cnt*

**no ip-guard scan-threshold**

**default ip-guard scan-threshold**

| Parameter Description | Parameter      | Description                                             |
|-----------------------|----------------|---------------------------------------------------------|
|                       | <i>pkt-cnt</i> | Sets the scan threshold, in the range from 1 to 19,999. |

**Defaults** The default value varies with products. For details, see the *Configuration Guide*.

**Command** NFPP configuration mode.

**Mode**

**Usage Guide** N/A

**Configuration** The following example sets the global scan threshold to 20 pps.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# ip-guard scan-threshold 20
```

**Related  
Commands**

| Command                             | Description                          |
|-------------------------------------|--------------------------------------|
| <b>nfpp ip-guard scan-threshold</b> | Sets the scan threshold on the port. |
| <b>show nfpp ip-guard summary</b>   | Displays the configuration.          |

**Platform** N/A

**Description**

## 21.47 ip-guard trusted-host

Use this command to set the trusted hosts free form monitoring.

Use the **no** or **default** form of this command to restore the default setting.

**ip-guard trusted-host** *ip mask*

**no ip-guard trusted-host** { **all** | *ip mask* }

**default ip-guard trusted-host**

**Parameter  
Description**

| Parameter   | Description                                     |
|-------------|-------------------------------------------------|
| <i>ip</i>   | Sets the IP address.                            |
| <i>mask</i> | Sets the IP mask.                               |
| <b>all</b>  | Deletes the configuration of all trusted hosts. |

**Defaults** N/A

**Command** NFPP configuration mode

**Mode**

**Usage Guide** The administrator can use this command to set the trusted host free from monitoring. The ICMP packets are allowed to sent to the trusted host CPU without any rate-limit and warning configuration. Configure the mask to set all hosts in one network segment free from monitoring. UP to 500 trusted hosts are supported.

**Configuration** The following example sets the trusted hosts free form monitoring.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# ip-guard trusted-host 1.1.1.0 255.255.255.0
```

**Related  
Commands**

| Command                                | Description                 |
|----------------------------------------|-----------------------------|
| <b>show nfpp ip-guard trusted-host</b> | Displays the configuration. |

**Platform** N/A

**Description**

## 21.48 log-buffer enable

Use this command to display logs on the screen.

Use the **no** or the **default** form of this command to restore the default setting.

**log-buffer enable**

**no log-buffer enable**

**default log-buffer enable**

**Parameter  
Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** Logs are stored in the cache by default.

**Command  
Mode** NFPP configuration mode

**Usage Guide** N/A

**Configuration** The following example displays logs on the screen.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# log-buffer enable
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 21.49 log-buffer entries

Use this command to set the NFPP log buffer area size.

Use the **no** or **default** form of this command to restore the default setting.

**log-buffer entries** *number*

**no log-buffer entries**

**default log-buffer entries**

| Parameter Description | Parameter     | Description                                         |
|-----------------------|---------------|-----------------------------------------------------|
|                       | <i>number</i> | The buffer area size, in the range from 0 to 1,024. |

**Defaults** The default is 256.

**Command Mode** NFPP configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example sets the NFPP log buffer area size.

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# log-buffer entries 50
```

| Related Commands | Command                                                                    | Description                                                          |
|------------------|----------------------------------------------------------------------------|----------------------------------------------------------------------|
|                  | <b>log-buffer logs</b> <i>number_of_message interval length_in_seconds</i> | Displays the rate of the syslog generated from the NFPP buffer area. |
|                  | <b>show nfpp log</b>                                                       | Displays the NFPP log configuration or the log buffer area.          |

**Platform** N/A

**Description**

## 21.50 log-buffer logs

Use this command to set the rate of syslog generated from the NFPP log buffer area.

Use the **no** or **default** form of this command to restore the default setting.

**log-buffer logs** *number\_of\_message interval length\_in\_seconds*

**no log-buffer logs**

**default log-buffer logs**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|-----------------------|-----------|-------------|

|                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|--------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>number_of_message</i> | The valid range is from 0 to 1024.<br>0 indicates that all logs are recorded in the specific buffer area and no syslogs are generated.                                                                                                                                                                                                                                                                                                                    |
| <i>length_in_seconds</i> | The valid range is from 0 to 86400(one day).<br>0 indicates not to write the log to the buffer area but generate the syslog immediately.<br>With both the <i>number_of_message</i> and <i>length_in_seconds</i> values are 0, it indicates not to write the log to the buffer area but generate the syslog immediately.<br>The parameter <i>number_of_message /length_in_second</i> indicates the rate of syslog generated from the NFPP log buffer area. |

**Defaults** By default, *number\_of\_message* is 0 and *length\_in\_seconds* is 0.

**Command** NFPP configuration mode

**Mode**

**Usage Guide** N/A

**Configuration** The following example sets the rate of syslog generated from the NFPP log buffer area.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# log-buffer logs 2 interval 12
```

**Related  
Commands**

| Command                                 | Description                                                 |
|-----------------------------------------|-------------------------------------------------------------|
| <b>log-buffer entries</b> <i>number</i> | Sets the NFPP log buffer area size.                         |
| <b>show nfpp log summary</b>            | Displays the NFPP log configuration or the log buffer area. |

**Platform** N/A

**Description**

## 21.51 logging

Use this command to set the VLAN or the interface log for NFPP.

Use the **no** or **default** form of this command to restore the default setting.

**logging vlan** *vlan-range*

**logging interface** *interface-id*

**no logging vlan** *vlan-range*

**no logging interface** *interface-id*

**default logging**

**Parameter  
Description**

| Parameter | Description |
|-----------|-------------|
|-----------|-------------|

|                     |                                                                |
|---------------------|----------------------------------------------------------------|
| <i>vlan-range</i>   | Sets the specified VLAN range, in the format such as "1-3, 5". |
| <i>interface-id</i> | Sets the interface ID.                                         |

**Defaults** All logs are recorded by default.

**Command** NFPP configuration mode

**Mode**

**Usage Guide** Use this command to filter the logs and records the logs within the specified VLAN range or the specified port

**Configuration** The following example records the logs in VLAN 1, VLAN 2, VLAN 3 and VLAN 5 only.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# logging vlan 1-3,5
```

The following example records the logs on the interface GigabitEthernet 0/1 only.

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# logging interface G 0/1
```

**Related  
Commands**

| Command                      | Description                                                 |
|------------------------------|-------------------------------------------------------------|
| <b>show nfpp log summary</b> | Displays the NFPP log configuration or the log buffer area. |

**Platform** N/A

**Description**

## 21.52 match

Use this command to specify the message matching filed for the user-defined anti-attack.

```
match [ etype type ] [ src-mac smac [ src-mac-mask smac_mask ] ] [ dst-mac dmac
[ dst-mac-mask dst_mask ] ] [ protocol protocol ] [ src-ip sip [ src-ip-mask sip-mask ] ] [ src-ipv6
sipv6 [ src-ipv6-masklen sipv6-masklen ] ] [ dst-ip dip [ dst-ip-mask dip-mask ] ] [ dst-ipv6 dipv6
[ dst-ipv6-masklen dipv6-masklen ] ] [ src-port sport ] [ dst-port dport ]
```

**Parameter  
Description**

| Parameter        | Description                     |
|------------------|---------------------------------|
| <i>type</i>      | Ethernet link layer packet type |
| <i>smac</i>      | Source MAC address              |
| <i>smac_mask</i> | Source MAC address mask         |
| <i>dmac</i>      | Destination MAC address         |
| <i>dmac_mask</i> | Destination MAC address mask    |
| <i>protocol</i>  | IPv4/v6 message protocol        |

|                     |                                              |
|---------------------|----------------------------------------------|
| <i>sip</i>          | Source IPv4 address                          |
| <i>sip_mask</i>     | Source IPv4 address mask                     |
| <i>sip6</i>         | Source IPv6 address                          |
| <i>sip6_masklen</i> | Source IPv6 address mask                     |
| <i>dip</i>          | Destination IPv4 address                     |
| <i>dip_mask</i>     | Destination IPv4 address mask                |
| <i>dip6</i>         | Destination IPv6 address                     |
| <i>dip6_masklen</i> | Length of the destination IPv6 address mask. |
| <i>sport</i>        | Source port                                  |
| <i>dport</i>        | Destination port                             |

**Defaults** N/A

**Command** NFPP configuration mode

**Mode**

**Usage Guide** Use this command to create a new user-defined anti-attack type and specify the message fields to be matched.

**Configuration** The following example specifies the message matching filed for the user-defined anti-attack.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# nfpp define tcp
Ruijie(config-nfpp-define)#match etype 0x0800 protocol 0x06
```

**Related  
Commands**

| Command                         | Description                                         |
|---------------------------------|-----------------------------------------------------|
| <b>show nfpp define summary</b> | Displays the user-defined anti-attack configuration |

**Platform** N/A

**Description**

## 21.53 monitored-host-limit

Use this command to set the maximum monitored host number.

Use the **no** or **default** form of this command to restore the default setting.

**monitored-host-limit** *number*

**no monitored-host-limit**

**default monitored-host-limit**

**Parameter  
Description**

| Parameter     | Description                                               |
|---------------|-----------------------------------------------------------|
| <i>number</i> | The maximum monitored host number, in the range from 1 to |

|  |                |
|--|----------------|
|  | 4,294,967,295. |
|--|----------------|

**Defaults** The default is 20,000.

**Command Mode** NFPP define configuration mode

**Usage Guide** If the monitored host number has reached the default 20,000, the administrator shall set the max-number smaller than 20,000 and it will prompt the message that %ERROR: The value that you configured is smaller than current monitored hosts 20,000, please clear a part of monitored hosts to remind the administrator of the invalid configuration and removing the monitored hosts.  
When the maximum monitored host number has been exceeded, it prompts the message that % %NFPP\_DEFINE-4-SESSION\_LIMIT: Attempt to exceed limit of name's 20,000 monitored hosts. to remind the administrator

**Configuration** The following example sets the maximum monitored host number.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# nfpp define tcp
Ruijie(config-nfpp-define)#monitored-host-limit 500
```

**Related Commands**

| Command                         | Description                                         |
|---------------------------------|-----------------------------------------------------|
| <b>show nfpp define summary</b> | Displays the user-defined anti-attack configuration |

**Platform** N/A  
**Description**

## 21.54 monitor period

Use this command to set the monitoring time.

Use the **no** or **default** form of this command to restore the default setting.

**monitor-period** *seconds*

**no monitor-period**

**default monitor-period**

**Parameter Description**

| Parameter      | Description                                                                    |
|----------------|--------------------------------------------------------------------------------|
| <i>seconds</i> | Sets the monitor time, in the range from 180 to 86,400 in the unit of seconds. |

**Defaults** The default is 600 seconds.

**Command** NFPP define configuration mode



**Mode**

**Usage Guide** When the attacker is detected, if the isolate period is 0, the attacker will be monitored by the software and the timeout time will be the monitor period. During the software monitoring, if the isolate period is not 0, the software-monitored attacker will be auto-isolated by the hardware and the timeout time will be the isolate period. The monitor period is valid with the isolate period 0. If the isolate period has changed to be 0, the attackers on the interface will be removed rather than being monitored by the software.

**Configuration** The following example sets the monitoring time to 1,000 seconds.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# define tcp
Ruijie(config-nfpp-define)#monitor-period 1000
```

**Related Commands**

| Command                         | Description                                          |
|---------------------------------|------------------------------------------------------|
| <b>show nfpp define summary</b> | Displays the user-defined anti-attack configuration. |

**Platform** N/A

**Description**

## 21.55 nd-guard attack-threshold

Use this command to set the global attack threshold. When the packet rate exceeds the attack threshold, the attack occurs.

Use the **no** or **default** form of this command to restore the default setting.

**nd-guard attack-threshold per-port { ns-na | rs | ra-redirect } pps**

**no nd-guard attack-threshold per-port { ns-na | rs | ra-redirect }**

**default nd-guard attack-threshold per-port { ns-na | rs | ra-redirect }**

**Parameter Description**

| Parameter          | Description                                                                     |
|--------------------|---------------------------------------------------------------------------------|
| <b>ns-na</b>       | Sets the neighbor request and neighbor advertisement.                           |
| <b>rs</b>          | Sets the router request.                                                        |
| <b>ra-redirect</b> | Sets the router advertisement and the redirect packets.                         |
| <i>pps</i>         | Sets the attack threshold, in the range from 1 to 19999 in the unit of seconds. |

**Defaults** The default value varies with products. For details, see the *Configuration Guide*.

**Command** NFPP configuration mode.

**Mode**

**Usage Guide** The attack threshold shall be equal to or larger than the rate-limit threshold.

**Configuration** The following example sets the global attack threshold.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# nd-guard attack-threshold per-port ns-na 20
Ruijie(config-nfpp)# nd-guard attack-threshold per-port rs 10
Ruijie(config-nfpp)# nd-guard attack-threshold per-port ra-redirect 10
```

**Related  
Commands**

| Command                           | Description                                             |
|-----------------------------------|---------------------------------------------------------|
| <b>nfpp ip-guard policy</b>       | Displays the rate-limit threshold and attack threshold. |
| <b>show nfpp ip-guard summary</b> | Displays the configuration.                             |

**Platform** N/A

**Description**

## 21.56 nd-guard enable

Use this command to enable the ND anti-attack function.

Use the **no** or **default** form of this command to restore the default setting.

**nd-guard enable**

**no nd-guard enable**

**default nd-guard enable**

**Parameter  
Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** This function is enabled by default.

**Command** NFPP configuration mode

**Mode**

**Usage Guide** N/A

**Configuration** The following example enables the ND anti-attack function.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# nd-guard enable
```

**Related  
Commands**

| Command                     | Description                                           |
|-----------------------------|-------------------------------------------------------|
| <b>nfpp nd-guard enable</b> | Enables the ND anti-attack function on the interface. |

|                                   |                             |
|-----------------------------------|-----------------------------|
| <b>show nfpp nd-guard summary</b> | Displays the configuration. |
|-----------------------------------|-----------------------------|

**Platform** N/A

**Description**

## 21.57 nd-guard rate-limit

Use this command to set the rate-limit threshold globally.

Use the **no** or **default** form of this command to restore the default setting.

**nd-guard rate-limit per-port { ns-na | rs | ra-redirect } pps**

**no nd-guard rate-limit per-port { ns-na | rs | ra-redirect }**

**default nd-guard rate-limit per-port { ns-na | rs | ra-redirect }**

**Parameter  
Description**

| Parameter          | Description                                                                     |
|--------------------|---------------------------------------------------------------------------------|
| <b>ns-na</b>       | Sets the neighbor request and neighbor advertisement.                           |
| <b>rs</b>          | Sets the router request.                                                        |
| <b>ra-redirect</b> | Sets the router advertisement and the redirect packets.                         |
| <i>pps</i>         | Sets the attack threshold, in the range is from 1 to 19,999 in the unit of pps. |

**Defaults** The default value varies with products. For details, see the *Configuration Guide*.

**Command** NFPP configuration mode

**Mode**

**Usage Guide** N/A

**Configuration** The following example sets the rate-limit threshold globally.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# nd-guard rate-limit per-port ns-na 10
Ruijie(config-nfpp)# nd-guard rate-limit per-port rs 5
Ruijie(config-nfpp)# nd-guard rate-limit per-port ra-redirect 5
```

**Related  
Commands**

| Command                           | Description                                   |
|-----------------------------------|-----------------------------------------------|
| <b>nfpp nd-guard policy</b>       | Sets the rate limit and the attack threshold. |
| <b>show nfpp nd-guard summary</b> | Displays the configuration.                   |

**Platform** N/A

**Description**

## 21.58 nd-guard ratelimit-forwarding enable

Use this command to enable the ND-guard ratelimit-forwarding on the interface.

**nd-guard ratelimit-forwarding enable**

Use this command to disable the ND-guard ratelimit-forwarding on the interface.

**no nd-guard ratelimit-forwarding enable**

Use this command to restore the default setting.

**default nd-guard ratelimit-forwarding enable**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** The function is enabled by default.

**Command Mode** NFPP configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example enables the ND-guard ratelimit-forwarding on the interface.

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# nd-guard ratelimit-forwarding enable
```

**Platform Description** N/A

## 21.59 nfpp

Use this command to enter NFPP configuration mode.

**nfpp**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** Use this command to enter NFPP configuration mode and make further configuration.

**Configuration** The following example enters NFPP configuration mode.

**Examples**

```
Ruijie(config)# nfpp
```

**Platform** N/A

**Description**

## 21.60 nfpp arp-guard enable

Use this command to enable the anti-ARP attack function on the interface.

Use the **no** or **default** form of this command to restore the default setting.

**nfpp arp-guard enable**

**no nfpp arp-guard enable**

**default nfpp arp-guard enable**

**Parameter  
Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** The anti-ARP attack function is not enabled on the interface.

**Command** Interface configuration mode

**Mode**

**Usage Guide** The interface anti-ARP attack configuration is prior to the global configuration.

**Configuration** The following example enables the anti-ARP attack function on the interface.

**Examples**

```
Ruijie(config)# interface G0/1
Ruijie(config-if)# nfpp arp-guard enable
```

**Related  
Commands**

| Command                            | Description                           |
|------------------------------------|---------------------------------------|
| <b>arp-guard enable</b>            | Enables the anti-ARP attack function. |
| <b>show nfpp arp-guard summary</b> | Displays the configuration.           |

**Platform** N/A

**Description**

## 21.61 nfpp arp-guard isolate-period

Use this command to set the isolate period in the interface configuration mode.

Use the **no** or **default** form of this command to restore the default setting.

```

nfpp arp-guard isolate-period { seconds | permanent }
no nfpp arp-guard isolate-period
default nfpp arp-guard isolate-period

```

| Parameter Description | Parameter        | Description                                                                                        |
|-----------------------|------------------|----------------------------------------------------------------------------------------------------|
|                       | <i>seconds</i>   | Sets the isolate period. The value is 0, or in the range from 30 to 86,400 in the unit of seconds. |
|                       | <b>permanent</b> | Permanent isolation                                                                                |

**Defaults** By default, the isolate period is not configured.

**Command Mode** Interface configuration mode

**Usage Guide** N/A

**Configuration** The following example sets the isolate period in the interface configuration mode.

```

Examples Ruijie(config)# interface G0/1
Ruijie(config-if)# nfpp arp-guard isolate-period 180

```

| Related Commands | Command                            | Description                     |
|------------------|------------------------------------|---------------------------------|
|                  | <b>arp-guard isolate-period</b>    | Sets the global isolate period. |
|                  | <b>show nfpp arp-guard summary</b> | Displays the configuration.     |

**Platform Description** N/A

## 21.62 nfpp arp-guard policy

Use this command to set the rate-limit threshold and the attack threshold.

Use the **no** or **default** form of this command to restore the default setting.

```

nfpp arp-guard policy { per-src-ip | per-src-mac | per-port } rate-limit-pps attack-threshold-pps
no nfpp arp-guard policy { per-src-ip | per-src-mac | per-port }
default nfpp arp-guard policy { per-src-ip | per-src-mac | per-port }

```

| Parameter Description | Parameter          | Description                                                                         |
|-----------------------|--------------------|-------------------------------------------------------------------------------------|
|                       | <b>per-src-ip</b>  | Sets the rate-limit threshold and the attack threshold for each source IP address.  |
|                       | <b>per-src-mac</b> | Sets the rate-limit threshold and the attack threshold for each source MAC address. |

|                             |                                                                       |
|-----------------------------|-----------------------------------------------------------------------|
| <b>per-port</b>             | Sets the rate-limit threshold and the attack threshold for each port. |
| <i>rate-limit-pps</i>       | Sets the rate-limit threshold, in the range from 1 to 19999.          |
| <i>attack-threshold-pps</i> | Sets the attack threshold, in the range from 1 to 19999.              |

**Defaults** By default, the rate-limit threshold and the attack threshold are not configured.

**Command** Interface configuration mode

**Mode**

**Usage Guide** The attack threshold value shall be equal to or greater than the rate-limit threshold.

**Configuration** The following example sets the rate-limit threshold and the attack threshold.

**Examples**

```
Ruijie(config)# interface G 0/1
Ruijie(config-if)# nfpp arp-guard policy per-src-ip 2 10
Ruijie(config-if)# nfpp arp-guard policy per-src-mac 3 10
Ruijie(config-if)# nfpp arp-guard policy per-port 50 100
```

**Related  
Commands**

| Command                            | Description                           |
|------------------------------------|---------------------------------------|
| <b>arp-guard attack-threshold</b>  | Sets the global attack threshold.     |
| <b>arp-guard rate-limit</b>        | Sets the global rate-limit threshold. |
| <b>show nfpp arp-guard summary</b> | Displays the configuration.           |
| <b>show nfpp arp-guard hosts</b>   | Displays the monitored host.          |
| <b>clear nfpp arp-guard hosts</b>  | Clears the isolated host.             |

**Platform** N/A

**Description**

## 21.63 nfpp arp-guard scan-threshold

Use this command to set the scan threshold.

Use the **no** or **default** form of this command to restore the default setting.

**nfpp arp-guard scan-threshold** *pkt-cnt*

**no nfpp arp-guard scan-threshold**

**default nfpp arp-guard scan-threshold**

**Parameter  
Description**

| Parameter      | Description                                             |
|----------------|---------------------------------------------------------|
| <i>pkt-cnt</i> | Sets the scan threshold, in the range from 1 to 19,999. |

**Defaults** By default, the sport-based scan threshold is not configured.

**Command** Interface configuration mode

**Mode****Usage Guide** N/A**Configuration** The following example sets the scan threshold to 20 pps.**Examples**

```
Ruijie(config)# interface G 0/1
Ruijie(config-if)# nfpp arp-guard scan-threshold 20
```

**Related  
Commands**

| Command                            | Description                       |
|------------------------------------|-----------------------------------|
| <b>arp-guard attack-threshold</b>  | Sets the global attack threshold. |
| <b>show nfpp arp-guard summary</b> | Displays the configuration.       |
| <b>show nfpp arp-guard scan</b>    | Displays the ARP scan table.      |
| <b>clear nfpp arp-guard scan</b>   | Clears the ARP scan table.        |

**Platform** N/A**Description**

## 21.64 nfpp define *name* enable

Use this command to enable the user-defined anti-attack function on the interface.

Use the **no** or **default** form of this command to restore the default setting.

**nfpp define *name* enable**

**no nfpp define *name* enable**

**default nfpp define *name* enable**

**Parameter  
Description**

| Parameter   | Description                               |
|-------------|-------------------------------------------|
| <i>name</i> | Name of the user-defined anti-attack type |

**Defaults** N/A**Command** Interface configuration mode.**Mode****Usage Guide** This command takes effect only after the name of the user-defined anti-attack and the match, rate-count, rate-limit and the attack-threshold have been configured.**Configuration** The following example enables the user-defined anti-attack function on the interface.**Examples**

```
Ruijie(config)# interface G0/1
Ruijie(config-if)# nfpp define tcp enable
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
|---------|-------------|



|                                 |                                                      |
|---------------------------------|------------------------------------------------------|
| <b>show nfpp define summary</b> | Displays the user-defined anti-attack configuration. |
|---------------------------------|------------------------------------------------------|

**Platform** N/A

**Description**

## 21.65 nfpp define policy

Use this command to set the local rate-limit threshold and the attack threshold.

Use the **no** or **default** form of this command to restore the default setting.

**nfpp define** *name* **policy** { **per-src-ip** | **per-src-mac** | **per-port** } *rate-limit-pps* *attack-threshold-pps*

**no nfpp define** *name* **policy** {**per-src-ip** | **per-src-mac** | **per-port**}

**default nfpp define** *name* **policy** { **per-src-ip** | **per-src-mac** | **per-port** }

**Parameter Description**

| Parameter                   | Description                                                   |
|-----------------------------|---------------------------------------------------------------|
| <b>per-src-ip</b>           | Sets the attack threshold for each source IP address.         |
| <b>per-src-mac</b>          | Sets the attack threshold for each source MAC address.        |
| <b>per-port</b>             | Sets the attack threshold for each port.                      |
| <i>rate-limit-pps</i>       | Sets the rate-limit threshold, in the range from 1 to 19,999. |
| <i>attack-threshold-pps</i> | Sets the attack threshold, in the range of from 1 to 19,999.  |

**Defaults** By default, the rate-limit threshold and the attack threshold are not configured.

**Command** Interface configuration mode

**Mode**

**Usage Guide** The attack threshold value shall be equal to or greater than the rate-limit threshold.

**Configuration** The following example sets the local rate-limit threshold and the attack threshold.

**Examples**

```
Ruijie(config)# interface G 0/1
Ruijie(config-if)# nfpp define tcp policy per-src-ip 2 10
Ruijie(config-if)# nfpp define tcp policy per-port 50 100
```

**Related Commands**

| Command                         | Description                                                |
|---------------------------------|------------------------------------------------------------|
| <b>define-policy</b>            | Sets the global rate-limit threshold and attack threshold. |
| <b>show nfpp define summary</b> | Displays the user-defined anti-attack configuration.       |

**Platform** N/A

**Description**

## 21.66 nfpp dhcp-guard enable

Use this command to enable the DHCP anti-attack function on the interface.

Use the **no** or **default** form of this command to restore the default setting.

**nfpp dhcp-guard enable**

**no nfpp dhcp-guard enable**

**default nfpp dhcp-guard enable**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** The DHCP anti-attack function is not enabled on the interface.

**Command Mode** Interface configuration mode

**Usage Guide** The interface DHCP anti-attack configuration is prior to the global configuration

**Configuration Examples** The following example enables the DHCP anti-attack function on the interface.

```
Ruijie(config)# interface G0/1
Ruijie(config-if)# nfpp dhcp-guard enable
```

| Related Commands | Command                             | Description                           |
|------------------|-------------------------------------|---------------------------------------|
|                  | <b>dhcp-guard enable</b>            | Enables the anti-ARP attack function. |
|                  | <b>show nfpp dhcp-guard summary</b> | Displays the configuration.           |

**Platform** N/A

**Description**

## 21.67 nfpp dhcp-guard policy

Use this command to set the rate-limit threshold and the attack threshold on the port.

Use the **no** or **default** form of this command to restore the default setting.

**nfpp dhcp-guard policy { per-src-mac | per-port } rate-limit-pps attack-threshold-pps**

**no nfpp dhcp-guard policy { per-src-mac | per-port }**

**default nfpp dhcp-guard policy { per-src-mac | per-port }**

| Parameter Description | Parameter          | Description                                                                                   |
|-----------------------|--------------------|-----------------------------------------------------------------------------------------------|
|                       | <b>per-src-mac</b> | Sets the rate-limit threshold and the attack threshold for the designated source MAC address. |

|                             |                                                                                 |
|-----------------------------|---------------------------------------------------------------------------------|
| <b>per-port</b>             | Sets the rate-limit threshold and the attack threshold for the designated port. |
| <i>rate-limit-pps</i>       | Sets the rate-limit threshold, in the range from 1 to 19,999.                   |
| <i>attack-threshold-pps</i> | Sets the attack threshold, in the range from 1 to 19,999.                       |

**Defaults** The rate-limit threshold and the attack threshold are not configured by default. So the device adopts the rate-limit threshold and the attack threshold that are set in the global configuration mode.

**Command** Interface configuration mode

**Mode**

**Usage Guide** The attack threshold value shall be equal to or greater than the rate-limit threshold.

**Configuration** The following example sets the rate-limit threshold and the attack threshold on interface G0/1.

**Examples**

```
Ruijie(config)#interface G 0/1
Ruijie(config-if)# nfpp dhcpv6-guard policy per-src-mac 3 10
Ruijie(config-if)# nfpp dhcpv6-guard policy per-port 50 100
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 21.68 nfpp dhcpv6-guard enable

Use this command to enable the DHCPv6 anti-attack function on the interface.

Use the **no** or **default** form of this command to restore the default setting.

**nfpp dhcpv6-guard enable**

**no nfpp dhcpv6-guard enable**

**default nfpp dhcpv6-guard enable**

**Parameter  
Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** The DHCPv6 anti-attack function is not enabled on the interface.

**Command** Interface configuration mode

**Mode**

**Usage Guide** The interface DHCPv6 anti- attack configuration is prior to the global configuration.

**Configuration** The following example enables the DHCPv6 anti-attack function on interface G0/1.

**Examples**

```
Ruijie(config)# interface G0/1
Ruijie(config-if)# nfpp dhcpv6-guard enable
```

**Related  
Commands**

| Command                               | Description                           |
|---------------------------------------|---------------------------------------|
| <b>dhcpv6-guard enable</b>            | Enables the anti-ARP attack function. |
| <b>show nfpp dhcpv6-guard summary</b> | Displays the configuration.           |

**Platform** N/A

**Description**

## 21.69 nfpp dhcpv6-guard policy

Use this command to set the rate-limit threshold and the attack threshold.

Use the **no** or **default** form of this command to restore the default setting.

**nfpp dhcpv6-guard policy { per-src-mac | per-port } rate-limit-pps attack-threshold-pps**

**no nfpp dhcpv6-guard policy { per-src-mac | per-port }**

**default nfpp dhcpv6-guard policy { per-src-mac | per-port }**

**Parameter  
Description**

| Parameter                   | Description                                                                         |
|-----------------------------|-------------------------------------------------------------------------------------|
| <b>per-src-mac</b>          | Sets the rate-limit threshold and the attack threshold for each source MAC address. |
| <b>per-port</b>             | Sets the rate-limit threshold and the attack threshold for each port.               |
| <i>rate-limit-pps</i>       | Sets the rate-limit threshold, in the range of from1 to 19,999.                     |
| <i>attack-threshold-pps</i> | Sets the attack threshold, in the range from1 to19,999.                             |

**Defaults** By default, the rate-limit threshold and the attack threshold are not configured.

**Command  
Mode** Interface configuration mode

**Usage Guide** The attack threshold value shall be equal to or greater than the rate-limit threshold.

**Configuration** The following example sets the rate-limit threshold and the attack threshold.

**Examples**

```
Ruijie(config)# interface G 0/1
Ruijie(config-if)# nfpp dhcpv6-guard policy per-src-mac 3 10
Ruijie(config-if)# nfpp dhcpv6-guard policy per-port 50 100
```

**Related  
Commands**

| Command                              | Description                       |
|--------------------------------------|-----------------------------------|
| <b>dhcpv6-guard attack-threshold</b> | Sets the global attack threshold. |

|                                       |                                       |
|---------------------------------------|---------------------------------------|
| <b>dhcpv6-guard rate-limit</b>        | Sets the global rate-limit threshold. |
| <b>show nfpp dhcpv6-guard summary</b> | Displays the configuration.           |
| <b>show nfpp dhcpv6-guard hosts</b>   | Displays the monitored host.          |
| <b>clear nfpp dhcpv6-guard hosts</b>  | Clears the isolated host.             |

**Platform** N/A

**Description**

## 21.70 nfpp icmp-guard enable

Use this command to enable the ICMP anti-attack function on the interface.

Use the **no** or **default** form of this command to restore the default setting.

**nfpp icmp-guard enable**

**no nfpp icmp-guard enable**

**default nfpp icmp-guard enable**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** The ICMP anti-attack function is not enabled on the interface.

**Command** Interface configuration mode

**Mode**

**Usage Guide** The interface ICMP anti- attack configuration is prior to the global configuration.

**Configuration** The following example enables the ICMP anti-attack function on the interface.

**Examples**

```
Ruijie(config)# interface G0/1
Ruijie(config-if)# nfpp icmp-guard enable
```

| Related Commands | Command                             | Description                           |
|------------------|-------------------------------------|---------------------------------------|
|                  | <b>icmp-guard enable</b>            | Enables the anti-ARP attack function. |
|                  | <b>show nfpp icmp-guard summary</b> | Displays the configuration.           |

**Platform** N/A

**Description**

## 21.71 nfpp icmp-guard isolate-period

Use this command to set the isolate period in the interface configuration mode.

Use the **no** or **default** form of this command to restore the default setting.

```

nfpp icmp-guard isolate-period { seconds | permanent }
no nfpp icmp-guard isolate-period
default nfpp icmp-guard isolate-period

```

| Parameter Description | Parameter        | Description                                                                                       |
|-----------------------|------------------|---------------------------------------------------------------------------------------------------|
|                       | <i>seconds</i>   | Sets the isolate period. The value is 0 or in the range from 30 to 86,400 in the unit of seconds. |
|                       | <b>permanent</b> | Permanent isolation                                                                               |

**Defaults** By default, the isolate period is not configured.

**Command Mode** Interface configuration mode

**Usage Guide** N/A

**Configuration** The following example sets the isolate period in the interface configuration mode.

```

Ruijie(config)# interface G0/1
Ruijie(config-if)# nfpp icmp-guard isolate-period 180

```

| Related Commands | Command                             | Description                     |
|------------------|-------------------------------------|---------------------------------|
|                  | <b>icmp-guard isolate-period</b>    | Sets the global isolate period. |
|                  | <b>show nfpp icmp-guard summary</b> | Displays the configuration.     |

**Platform Description** N/A

## 21.72 nfpp icmp-guard policy

Use this command to set the rate-limit threshold and the attack threshold.

Use the **no** or **default** form of this command to restore the default setting.

```

nfpp icmp-guard policy { per-src-ip | per-port } rate-limit-pps attack-threshold-pps
no nfpp icmp-guard policy { per-src-ip | per-port }
default nfpp icmp-guard policy { per-src-ip | per-port }

```

| Parameter Description | Parameter             | Description                                                                        |
|-----------------------|-----------------------|------------------------------------------------------------------------------------|
|                       | <b>per-src-ip</b>     | Sets the rate-limit threshold and the attack threshold for each source IP address. |
|                       | <b>per-port</b>       | Sets the rate-limit threshold and the attack threshold for each port.              |
|                       | <i>rate-limit-pps</i> | Sets the rate-limit threshold, in the range from 1 to 19,999.                      |

|                             |                                                       |
|-----------------------------|-------------------------------------------------------|
| <i>attack-threshold-pps</i> | Sets the attack threshold, in range from 1 to 19,999. |
|-----------------------------|-------------------------------------------------------|

**Defaults** By default, the rate-limit threshold and the attack threshold are not configured.

**Command Mode** Interface configuration mode

**Usage Guide** The attack threshold value shall be equal to or greater than the rate-limit threshold.

**Configuration** The following example sets the rate-limit threshold and the attack threshold.

**Examples**

```
Ruijie(config)# interface G 0/1
Ruijie(config-if)# nfpp icmp-guard policy per-src-ip 5 10
Ruijie(config-if)# nfpp icmp-guard policy per-port 100 200
```

**Related Commands**

| Command                             | Description                           |
|-------------------------------------|---------------------------------------|
| <b>icmp-guard attack-threshold</b>  | Sets the global attack threshold.     |
| <b>icmp-guard rate-limit</b>        | Sets the global rate-limit threshold. |
| <b>show nfpp icmp-guard summary</b> | Displays the configuration.           |
| <b>show nfpp icmp-guard hosts</b>   | Displays the monitored host.          |
| <b>clear nfpp icmp-guard hosts</b>  | Clears the isolated host.             |

**Platform** N/A

**Description**

## 21.73 nfpp ip-guard enable

Use this command to enable the IP anti-attack function on the interface.

Use the **no** or **default** form of this command to restore the default setting.

**nfpp ip-guard enable**

**no nfpp ip-guard enable**

**default nfpp ip-guard enable**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** The IP anti-attack function is disabled on the interface.

**Command Mode** Interface configuration mode

**Usage Guide** The interface IP anti-attack configuration is prior to the global configuration.

**Configuration** The following example enables the IP anti-attack function on the interface.

**Examples**

```
Ruijie(config)# interface G0/1
Ruijie(config-if)# nfpp ip-guard enable
```

| Related Commands | Command                           | Description                 |
|------------------|-----------------------------------|-----------------------------|
|                  |                                   | <b>ip-guard enable</b>      |
|                  | <b>show nfpp ip-guard summary</b> | Displays the configuration. |

**Platform** N/A

**Description**

## 21.74 nfpp ip-guard isolate-period

Use this command to set the isolate period in the interface configuration mode.

Use the **no** or **default** form of this command to restore the default setting.

**nfpp ip-guard isolate-period** { *seconds* | **permanent** }

**no nfpp ip-guard isolate-period**

**default nfpp ip-guard isolate-period**

| Parameter Description | Parameter        | Description         |
|-----------------------|------------------|---------------------|
|                       |                  | <i>seconds</i>      |
|                       | <b>permanent</b> | Permanent isolation |

**Defaults** By default, the isolate period is not configured.

**Command** Interface configuration mode

**Mode**

**Usage Guide** N/A

**Configuration** The following example sets the isolate period in the interface configuration mode.

**Examples**

```
Ruijie(config)# interface G0/1
Ruijie(config-if)# nfpp ip-guard isolate-period 180
```

| Related Commands | Command                           | Description                    |
|------------------|-----------------------------------|--------------------------------|
|                  |                                   | <b>ip-guard isolate-period</b> |
|                  | <b>show nfpp ip-guard summary</b> | Displays the configuration.    |



**Platform** N/A  
**Description**

## 21.75 nfpp ip-guard policy

Use this command to set the rate-limit threshold and the attack threshold.

Use the **no** or **default** form of this command to restore the default setting.

**nfpp ip-guard policy** { **per-src-ip** | **per-port** } *rate-limit-pps attack-threshold-pps*

**no nfpp ip-guard policy** { **per-src-ip** | **per-port** }

**default nfpp ip-guard policy** { **per-src-ip** | **per-port** }

| Parameter Description | Parameter                   | Description                                                                        |
|-----------------------|-----------------------------|------------------------------------------------------------------------------------|
|                       | <b>per-src-ip</b>           | Sets the rate-limit threshold and the attack threshold for each source IP address. |
|                       | <b>per-port</b>             | Sets the rate-limit threshold and the attack threshold for each port.              |
|                       | <i>rate-limit-pps</i>       | Sets the rate-limit threshold, in the range from 1 to 19,999.                      |
|                       | <i>attack-threshold-pps</i> | Sets the attack threshold, in the range from 1 to 19,999.                          |

**Defaults** By default, the rate-limit threshold and the attack threshold are not configured.

**Command Mode** Interface configuration mode

**Usage Guide** The attack threshold value shall be equal to or greater than the rate-limit threshold.

**Configuration Examples** The following example sets the rate-limit threshold and the attack threshold.

```
Ruijie(config)# interface G 0/1
Ruijie(config-if)# nfpp ip-guard policy per-src-ip 2 10
Ruijie(config-if)# nfpp ip-guard policy per-port 50 100
```

| Related Commands | Command                           | Description                           |
|------------------|-----------------------------------|---------------------------------------|
|                  | <b>ip-guard attack-threshold</b>  | Sets the global attack threshold.     |
|                  | <b>ip-guard rate-limit</b>        | Sets the global rate-limit threshold. |
|                  | <b>show nfpp ip-guard summary</b> | Displays the configuration.           |
|                  | <b>show nfpp ip-guard hosts</b>   | Displays the monitored host.          |
|                  | <b>clear nfpp ip-guard hosts</b>  | Clears the isolated host.             |

**Platform** N/A  
**Description**

## 21.76 nfpp ip-guard scan-threshold

Use this command to set the scan threshold.

Use the **no** or **default** form of this command to restore the default setting.

**nfpp ip-guard scan-threshold** *pkt-cnt*

**no nfpp ip-guard scan-threshold**

**default nfpp ip-guard scan-threshold**

| Parameter Description | Parameter      | Description                                             |
|-----------------------|----------------|---------------------------------------------------------|
|                       | <i>pkt-cnt</i> | Sets the scan threshold, in the range from 1 to 19,999. |

**Defaults** By default, the sport-based scan threshold is not configured.

**Command Mode** Interface configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example sets the scan threshold to 20pps.

```
Ruijie(config)# interface G 0/1
Ruijie(config-if)# nfpp ip-guard scan-threshold 20
```

| Related Commands | Command                           | Description                       |
|------------------|-----------------------------------|-----------------------------------|
|                  | <b>ip-guard attack-threshold</b>  | Sets the global attack threshold. |
|                  | <b>show nfpp ip-guard summary</b> | Displays the configuration.       |

**Platform** N/A

**Description**

## 21.77 nfpp nd-guard enable

Use this command to enable the ND anti-attack function on the interface.

Use the **no** or **default** form of this command to restore the default setting.

**nfpp nd-guard enable**

**no nfpp nd-guard enable**

**default nfpp nd-guard enable**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** The ND anti-attack function is disabled on the interface.

**Command** Interface configuration mode

**Mode**

**Usage Guide** The interface ND anti-attack configuration is prior to the global configuration.

**Configuration** The following example enables the ND anti-attack function on the interface.

**Examples**

```
Ruijie(config)# interface G0/1
Ruijie(config-if)# nfpp nd-guard enable
```

**Related  
Commands**

| Command                           | Description                          |
|-----------------------------------|--------------------------------------|
| <b>nd-guard enable</b>            | Enables the ND anti-attack function. |
| <b>show nfpp nd-guard summary</b> | Displays the configuration.          |

**Platform** N/A

**Description**

## 21.78 nfpp nd-guard policy

Use this command to set the rate-limit threshold and the attack threshold.

Use the **no** or **default** form of this command to restore the default setting.

**nfpp nd-guard policy per-port { ns-na | rs | ra-redirect } rate-limit-pps attack-threshold-pps**

**no nfpp nd-guard policy per-port { ns-na | rs | ra-redirect }**

**default nfpp nd-guard policy per-port { ns-na | rs | ra-redirect }**

**Parameter  
Description**

| Parameter                   | Description                                                   |
|-----------------------------|---------------------------------------------------------------|
| <b>ns-na</b>                | Sets the neighbor request and neighbor advertisement.         |
| <b>rs</b>                   | Sets the router request.                                      |
| <b>ra-redirect</b>          | Sets the router advertisement and the redirect packets.       |
| <i>rate-limit-pps</i>       | Sets the rate-limit threshold, in the range from 1 to 19,999. |
| <i>attack-threshold-pps</i> | Sets the attack threshold, in the range from 1 to 19,999.     |

**Defaults** By default, the rate-limit threshold and the attack threshold are not configured.

**Command** Interface configuration mode

**Mode**

**Usage Guide** The attack threshold value shall be equal to or greater than the rate-limit threshold.

**Configuration** The following example sets the rate-limit threshold and the attack threshold.

**Examples**

```
Ruijie(config)# interface G 0/1
Ruijie(config-if)# nfpp nd-guard policy per-port ns-na 50 100
Ruijie(config-if)# nfpp nd-guard policy per-port rs 10 20
Ruijie(config-if)# nfpp nd-guard policy per-port ra-redirect 10 20
```

**Related  
Commands**

| Command                           | Description                           |
|-----------------------------------|---------------------------------------|
| <b>nd-guard attack-threshold</b>  | Sets the global attack threshold.     |
| <b>nd-guard rate-limit</b>        | Sets the global rate-limit threshold. |
| <b>show nfpp nd-guard summary</b> | Displays the configuration.           |

**Platform** N/A**Description**

## 21.79 show nfpp arp-guard hosts

Use this command to display the monitored host.

```
show nfpp arp-guard hosts [ statistics | [ [ vlan vid ] [ interface interface-id ] [ ip-address | mac-address ] ] ]
```

**Parameter  
Description**

| Parameter           | Description                                                 |
|---------------------|-------------------------------------------------------------|
| <b>statistics</b>   | Displays the statistical information of the monitored host. |
| <i>vid</i>          | The VLAN ID                                                 |
| <i>interface-id</i> | The interface name                                          |
| <i>ip-address</i>   | The IP address                                              |
| <i>mac-address</i>  | The MAC address                                             |

**Defaults** N/A**Command** Privileged EXEC mode**Mode****Usage Guide** N/A**Configuration** The following example displays the statistical information of the monitored host.**Examples**

```
Ruijie# show nfpp arp-guard hosts statistics
success    fail    total
-----    ----    -----
100        20     120
```

The following example shows the monitored host.

```
Ruijie# show nfpp arp-guard hosts
If column 1 shows '*', it means "hardware do not isolate user" .
```

| VLAN          | interface | IP address | MAC address    | remain-time(s) |
|---------------|-----------|------------|----------------|----------------|
| 1             | Gi0/1     | 1.1.1.1    | -              | 110            |
| 2             | Gi0/2     | 1.1.2.1    | -              | 61             |
| *3            | Gi0/3     | -          | 0000.0000.1111 | 110            |
| 4             | Gi0/4     | -          | 0000.0000.2222 | 61             |
| Total:4 hosts |           |            |                |                |

#### Related Commands

| Command                           | Description                 |
|-----------------------------------|-----------------------------|
| <b>clear nfpp arp-guard hosts</b> | Clears the monitored hosts. |

**Platform** N/A

**Description**

## 21.80 show nfpp arp-guard scan

Use this command to display the ARP scan list.

```
show nfpp arp-guard scan [ statistics ] [ [ vlan vid ] [ interface interface-id ] [ ip-address ] [ mac-address ] ]
```

#### Parameter Description

| Parameter           | Description                                                |
|---------------------|------------------------------------------------------------|
| <b>statistics</b>   | Displays the statistical information of the ARP scan list. |
| <i>vid</i>          | The VLAN ID                                                |
| <i>interface-id</i> | The interface name                                         |
| <i>ip-address</i>   | The IP address                                             |
| <i>mac-address</i>  | The MAC address                                            |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration Examples** The following example displays the ARP scan list.

```
Ruijie# show nfpp arp-guard scan statistics
arp-guard table has 4 record(s).
```

The following example displays the ARP scan list.

```
Ruijie# show nfpp arp-guard scan
VLAN   interface  IP address  MAC address  timestamp
----   -
1      Gi0/1     1.1.1.1    -            110
2      Gi0/2     1.1.2.1    -            61
*3     Gi0/3     -          0000.0000.1111  110
4      Gi0/4     -          0000.0000.2222  61
```

```

1      Gi0/1      -      0000.0000.0001  2008-01-23 16:23:10
2      Gi0/2      1.1.1.1      0000.0000.0002  2008-01-23 16:24:10
3      Gi0/3      -      0000.0000.0003  2008-01-23 16:25:10
4      Gi0/4      -      0000.0000.0004  2008-01-23 16:26:10
Total:4 record(s)

```

The following example displays the ARP scan list.

```

Ruijie# show nfpp arp-guard scan vlan 1 interface G 0/1 0000.0000.0001
VLAN   interface  IP address  MAC address  timestamp
----   -
1      Gi0/1      -          0000.0000.0001  2008-01-23 16:23:10
Total:1 record(s)

```

#### Related Commands

| Command                              | Description                     |
|--------------------------------------|---------------------------------|
| <b>arp-guard scan-threshold</b>      | Sets the global scan threshold. |
| <b>nfpp arp-guard scan-threshold</b> | Sets the scan threshold.        |
| <b>clear nfpp arp-guard scan</b>     | Clears the ARP scan list.       |

**Platform** N/A

**Description**

## 21.81 show nfpp arp-guard summary

Use this command to display the configuration.

**show nfpp arp-guard summary**

#### Parameter Description

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the configuration.

#### Examples

```

Ruijie# show nfpp arp-guard summary
(Format of column Rate-limit and Attack-threshold is
per-src-ip/per-src-mac/per-port.)
Interface  Status  Isolate-period  Rate-limit  Attack-threshold  Scan-threshold
Global     Enable  300             4/5/60     8/10/100         15

```

|        |         |     |        |          |    |
|--------|---------|-----|--------|----------|----|
| Gi 0/1 | Enable  | 180 | 5/-/-  | 8/-/-    | -  |
| Gi 0/2 | Disable | 200 | 4/5/60 | 8/10/100 | 20 |

Maximum count of monitored hosts: 1000  
Monitor period:300s

| Field             | Description                                                                                                                                                     |
|-------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Interface(Global) | Global configuration                                                                                                                                            |
| Status            | Enables/Disables the anti-attack function.                                                                                                                      |
| Rate-limit        | In the format of the rate-limit threshold for the source IP address/ the rate-limit threshold for the source MAC address/ the rate-limit threshold for the port |
| Attack-threshold  | In the same format as the rate-limit.                                                                                                                           |
| Scan-threshold    | Scan threshold                                                                                                                                                  |

#### Related Commands

| Command                               | Description                                            |
|---------------------------------------|--------------------------------------------------------|
| <b>arp-guard attack-threshold</b>     | Sets the global attack threshold.                      |
| <b>arp-guard enable</b>               | Enables the anti-ARP attack function.                  |
| <b>arp-guard isolate-period</b>       | Sets the global isolate time.                          |
| <b>arp-guard monitor-period</b>       | Sets the monitor period.                               |
| <b>arp-guard monitored-host-limit</b> | Sets the maximum number of the monitored hosts.        |
| <b>arp-guard rate-limit</b>           | Sets the global rate-limit threshold.                  |
| <b>arp-guard scan-threshold</b>       | Sets the global scan threshold.                        |
| <b>nfpp arp-guard enable</b>          | Enables the anti-ARP attack function on the interface. |
| <b>nfpp arp-guard isolate-period</b>  | Sets the isolate time.                                 |
| <b>nfpp arp-guard policy</b>          | Sets the rate-limit threshold and attack threshold.    |
| <b>nfpp arp-guard scan-threshold</b>  | Sets the scan threshold.                               |

**Platform** N/A

#### Description

## 21.82 show nfpp define hosts

Use this command to display the monitored hosts.

```
show nfpp define hosts name [statistics | [[vlan vid] [interface interface-id] [ip-address]
[mac-address] [ipv6-address]]]
```

#### Parameter Description

| Parameter | Description |
|-----------|-------------|
|-----------|-------------|

|                     |                                             |
|---------------------|---------------------------------------------|
| <i>name</i>         | Name of the user-defined anti-attack type   |
| <b>statistics</b>   | Displays the statistics of monitored hosts. |
| <i>vid</i>          | VLAN ID                                     |
| <i>interface-id</i> | Interface name                              |
| <i>ip-address</i>   | IP address                                  |
| <i>mac-address</i>  | MAC address                                 |
| <i>ipv6-address</i> | IPv6 address                                |

**Defaults** N/A

**Command** Privileged EXEC mode

**Mode**

**Usage Guide** This command allows filtering the hosts with parameters specified

**Configuration** The following example displays the monitored hosts.

**Examples**

```
Ruijie#show nfpp define hosts abc
If col_filter 1 shows '*', it means "hardware do not isolate host".
VLAN   interface  MAC address   remain-time(s)
----   -
*1     Gi4/2       00d0.f822.33e5 592
Total: 1 host
```

**Related  
Commands**

| Command                        | Description                                                  |
|--------------------------------|--------------------------------------------------------------|
| <b>clear nfpp define hosts</b> | Clears the monitored hosts of user-defined anti-attack type. |

**Platform** N/A

**Description**

## 21.83 show nfpp define summary

Use this command to display the configuration.

**show nfpp define summary** [ *name* ]

**Parameter  
Description**

| Parameter   | Description                               |
|-------------|-------------------------------------------|
| <i>name</i> | Name of the user-defined anti-attack type |

**Defaults** N/A

**Command** Privileged EXEC mode



**Mode**

**Usage Guide** This command can be used to display the configuration. Without the name specified, all user-defined anti-attack types will be displayed.

**Configuration** The following example displays the configuration.

**Examples**

```
Ruijie#show nfpp define summary abc
Define abc summary:
match etype 0x800 src-ip 1.1.1.1 src-ip-mask 255.255.255.255
Maximum count of monitored hosts: 20000
Monitor period:600s
(Format of column Rate-limit and Attack-threshold is
per-src-ip/per-src-mac/per-port.)
Interface Status Rate-limit Attack-threshold
Global Disable -/10/- -/20/-
Gi4/1 Enable -/-/- -/-/-
```

| Field            | Description                                                                                                                                                     |
|------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Interface        | If the interface field is displayed as Global, it means that is configured in the global configuration mode.                                                    |
| Status           | Enables/ Disables the anti-attack function.                                                                                                                     |
| Rate-limit       | In the format of the rate-limit threshold for the source IP address/ the rate-limit threshold for the source MAC address/ the rate-limit threshold for the port |
| Attack-threshold | In the same format as the rate-limit.                                                                                                                           |

**Related Commands**

| Command                     | Description                                                  |
|-----------------------------|--------------------------------------------------------------|
| <b>match</b>                | Clears the monitored hosts of user-defined anti-attack type. |
| <b>policy</b>               | Attack threshold and rate-limit threshold.                   |
| <b>isolate-period</b>       | Isolates time                                                |
| <b>monitored-period</b>     | Monitored time                                               |
| <b>monitored-host-limit</b> | Maximum monitored host number                                |

**Platform** N/A

**Description**

## 21.84 show nfpp define trusted-host

Use this command to display the trusted host free from monitoring.

**show nfpp define trusted-host** *name*

**Parameter**

| Parameter | Description |
|-----------|-------------|
|-----------|-------------|

|                    |                                                       |
|--------------------|-------------------------------------------------------|
| <b>Description</b> |                                                       |
|                    | <i>name</i> Name of the user-defined anti-attack type |

**Defaults** N/A.

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the trusted host configuration.

**Examples**

```
Ruijie# show nfpp define trusted-host tcp
Define tcp:
IP address      mask
-----      -
1.1.1.0        255.255.255.0
1.1.2.0        255.255.255.0
Total:2 record(s)
```

|                         |                     |                               |
|-------------------------|---------------------|-------------------------------|
| <b>Related Commands</b> | <b>Command</b>      | <b>Description</b>            |
|                         | <b>trusted-host</b> | Configures the trusted hosts. |

**Platform Description** N/A

## 21.85 show nfpp dhcp-guard hosts

Use this command to display the monitored host.

**show nfpp dhcp-guard hosts** [**statistics** | [[**vlan** *vid*] [**interface** *interface-id*] [*mac-address*]]]

|                              |                     |                                                             |
|------------------------------|---------------------|-------------------------------------------------------------|
| <b>Parameter Description</b> | <b>Parameter</b>    | <b>Description</b>                                          |
|                              | <b>statistics</b>   | Displays the statistical information of the monitored host. |
|                              | <i>vid</i>          | VLAN ID                                                     |
|                              | <i>interface-id</i> | Interface name                                              |
|                              | <i>mac</i>          | MAC address                                                 |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the monitored host.

```

Examples Ruijie# show nfpp dhcp-guard hosts statistics
success    fail    total
-----    ----    -----
100        20     120

```

The following example displays the monitored host.

```

Ruijie# show nfpp dhcp-guard hosts
If column 1 shows '*', it means "hardware failed to isolate host".
VLAN interface MAC address remain-time(seconds)
----  -
1     gi0/2     0000.0000.0001  10
*2    gi0/1     0000.0000.0002  20
Total:2 host(s)

```

**Related  
Commands**

| Command                            | Description                |
|------------------------------------|----------------------------|
| <b>clear nfpp dhcp-guard hosts</b> | Clears the monitored host. |

**Platform** N/A

**Description**

## 21.86 show nfpp dhcp-guard summary

Use this command to display the configuration.

**show nfpp dhcp-guard summary**

**Parameter  
Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** N/A

**Command  
Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the configuration.

```

Examples Ruijie# show nfpp dhcp-guard summary
(Format of column Rate-limit and Attack-threshold is
per-src-ip/per-src-mac/per-port.)

```

```

Interface  Status  Isolate-period  Rate-limit  Attack-threshold
Global      Enable  300             -/5/150    -/10/300
Gi 0/1     Enable  180            -/6/-      -/8/-
Gi 0/2     Disable 200            -/5/30     -/10/50

Maximum count of monitored hosts: 1000
Monitor period:300s
    
```

| Field             | Description                                                                                                                                                     |
|-------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Interface(Global) | Global configuration                                                                                                                                            |
| Status            | Enables/Disables the anti-attack function.                                                                                                                      |
| Isolate-period    | Isolate period                                                                                                                                                  |
| Rate-limit        | In the format of the rate-limit threshold for the source IP address/ the rate-limit threshold for the source MAC address/ the rate-limit threshold for the port |
| Attack-threshold  | In the same format as the rate-limit.                                                                                                                           |

**Related Commands**

| Command                                | Description                                             |
|----------------------------------------|---------------------------------------------------------|
| <b>dhcp-guard attack-threshold</b>     | Sets the global attack threshold.                       |
| <b>dhcp-guard enable</b>               | Enables the DHCP anti-attack function.                  |
| <b>dhcp-guard isolate-period</b>       | Sets the global isolate time.                           |
| <b>dhcp-guard monitor-period</b>       | Sets the monitor period.                                |
| <b>dhcp-guard monitored-host-limit</b> | Sets the maximum number of the monitored hosts.         |
| <b>dhcp-guard rate-limit</b>           | Sets the global rate-limit threshold.                   |
| <b>nfpp dhcp-guard enable</b>          | Enables the DHCP anti-attack function on the interface. |
| <b>nfpp dhcp-guard isolate-period</b>  | Sets the isolate time.                                  |
| <b>nfpp dhcp-guard policy</b>          | Sets the rate-limit threshold and attack threshold.     |

**Platform** N/A

**Description**

## 21.87 show nfpp dhcpv6-guard hosts

Use this command to display the monitored host.

**show nfpp dhcpv6-guard hosts** [**statistics** | [[**vlan** *vid*] [**interface** *interface-id*] [*mac-address*]]]

**Parameter Description**

| Parameter         | Description                                                 |
|-------------------|-------------------------------------------------------------|
| <b>statistics</b> | Displays the statistical information of the monitored host. |

|                     |                    |
|---------------------|--------------------|
| <i>vid</i>          | The VLAN ID        |
| <i>interface-id</i> | The interface name |
| <i>mac-address</i>  | The MAC address    |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the monitored host.

**Examples**

```
Ruijie# show nfpp dhcpv6-guard hosts
If column 1 shows '*', it means "hardware failed to isolate host".
VLAN interface MAC address remain-time(seconds)
-----
*1 gi0/2 0000.0000.0001 10
*2 gi0/1 0000.0000.0002 20
Total:2 host(s)
```

**Related Commands**

| Command                              | Description                |
|--------------------------------------|----------------------------|
| <b>clear nfpp dhcpv6-guard hosts</b> | Clears the monitored host. |

**Platform** N/A

**Description**

## 21.88 show nfpp dhcpv6-guard summary

Use this command to display the configuration.

**show nfpp dhcpv6-guard summary**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the configuration.

**Examples**

```
Ruijie#show nfpp dhcpv6-guard summary
```

```
(Format of column Rate-limit and Attack-threshold is
per-src-ip/per-src-mac/per-port.)
```

```
Interface Status Rate-limit Attack-threshold
Global Enable -/5/1200 -/10/1500
```

```
Maximum count of monitored hosts: 20000
```

```
Monitor period: 600s
```

| Field             | Description                                                                                                                                                     |
|-------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Interface(Global) | Global configuration                                                                                                                                            |
| Status            | Enables/Disables the anti-attack function.                                                                                                                      |
| Rate-limit        | In the format of the rate-limit threshold for the source IP address/ the rate-limit threshold for the source MAC address/ the rate-limit threshold for the port |
| Attack-threshold  | In the same format as the rate-limit.                                                                                                                           |

**Related Commands**

| Command                                  | Description                                               |
|------------------------------------------|-----------------------------------------------------------|
| <b>dhcpv6-guard attack-threshold</b>     | Sets the global attack threshold.                         |
| <b>dhcpv6-guard enable</b>               | Enables the DHCPv6 anti-attack function.                  |
| <b>dhcpv6-guard monitor-period</b>       | Sets the monitor period.                                  |
| <b>dhcpv6-guard monitored-host-limit</b> | Sets the maximum number of the monitored hosts.           |
| <b>dhcpv6-guard rate-limit</b>           | Sets the global rate-limit threshold.                     |
| <b>nfpp dhcpv6-guard enable</b>          | Enables the DHCPv6 anti-attack function on the interface. |
| <b>nfpp dhcpv6-guard policy</b>          | Sets the rate-limit threshold and attack threshold.       |

**Platform** N/A

**Description**

## 21.89 show nfpp icmp-guard hosts

Use this command to display the monitored host.

```
show nfpp icmp-guard hosts [statistics | [[vlan vid] [interface interface-id] [ip-address]]]
```

**Parameter Description**

| Parameter         | Description                                                 |
|-------------------|-------------------------------------------------------------|
| <b>statistics</b> | Displays the statistical information of the monitored host. |
| <i>vid</i>        | The VLAN ID                                                 |

|                     |                    |
|---------------------|--------------------|
| <i>interface-id</i> | The interface name |
| <i>ip-address</i>   | The IP address     |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the monitored host.

**Examples**

```
Ruijie# show nfpp icmp-guard hosts statistics
success    fail    total
-----    ----    -----
100        20     120
```

The following example displays the monitored host.

```
Ruijie# show nfpp icmp-guard hosts
If column 1 shows '*', it means "hardware failed to isolate host".
VLAN interface IP address      remain-time(s)
----  -
1     Gi0/1      1.1.1.1      110
2     Gi0/2      1.1.2.1      61
Total:2 host(s)
```

**Related Commands**

| Command                            | Description                |
|------------------------------------|----------------------------|
| <b>clear nfpp icmp-guard hosts</b> | Clears the monitored host. |

**Platform Description** N/A

## 21.90 show nfpp icmp-guard summary

Use this command to display the configuration.

**show nfpp icmp-guard summary**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** N/A

**Command** Privileged EXEC mode

**Mode**

**Usage Guide** N/A

**Configuration** The following example displays the configuration.

**Examples**

```
Ruijie# show nfpp icmp-guard summary
(Format of column Rate-limit and Attack-threshold is
per-src-ip/per-src-mac/per-port.)
Interface  Status  Isolate-period  Rate-limit  Attack-threshold
Global     Enable  300             4-/60      8-/100
Gi 0/1     Enable  180             5-/        8-/
Gi 0/2     Disable 200             4-/60      8-/100

Maximum count of monitored hosts: 1000
Monitor period:300s
```

| Field             | Description                                                                                                                                                     |
|-------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Interface(Global) | Global configuration                                                                                                                                            |
| Status            | Enables/Disables the anti-attack function.                                                                                                                      |
| Isolate-period    | Isolate period                                                                                                                                                  |
| Rate-limit        | In the format of the rate-limit threshold for the source IP address/ the rate-limit threshold for the source MAC address/ the rate-limit threshold for the port |
| Attack-threshold  | In the same format as the rate-limit.                                                                                                                           |

**Related Commands**

| Command                                | Description                                             |
|----------------------------------------|---------------------------------------------------------|
| <b>icmp-guard attack-threshold</b>     | Sets the global attack threshold.                       |
| <b>icmp-guard enable</b>               | Enables the ICMP anti-attack function.                  |
| <b>icmp-guard isolate-period</b>       | Sets the global isolate time.                           |
| <b>icmp-guard monitor-period</b>       | Sets the monitor period.                                |
| <b>icmp-guard monitored-host-limit</b> | Sets the maximum number of the monitored hosts.         |
| <b>icmp-guard rate-limit</b>           | Sets the global rate-limit threshold.                   |
| <b>nfpp icmp-guard enable</b>          | Enables the ICMP anti-attack function on the interface. |
| <b>nfpp icmp-guard isolate-period</b>  | Sets the isolate time.                                  |
| <b>nfpp icmp-guard policy</b>          | Sets the rate-limit threshold and attack threshold.     |

**Platform** N/A

**Description**



## 21.91 show nfpp icmp-guard trusted-host

Use this command to display the trusted host free from being monitored.

**show nfpp icmp-guard trusted-host**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the trusted host free from being monitored.

```

Ruijie# show nfpp icmp-guard trusted-host
IP address      mask
-----
1.1.1.0         255.255.255.0
1.1.2.0         255.255.255.0
Total:2 record(s)

```

| Related Commands | Command                        | Description            |
|------------------|--------------------------------|------------------------|
|                  | <b>icmp-guard trusted-host</b> | Sets the trusted host. |

**Platform** N/A

**Description**

## 21.92 show nfpp ip-guard hosts

Use this command to display the monitored host.

**show nfpp ip-guard hosts** [**statistics** | [[**vlan** *vid*] [**interface** *interface-id*] [*ip-address*]]]

| Parameter Description | Parameter           | Description                                                 |
|-----------------------|---------------------|-------------------------------------------------------------|
|                       | <b>statistics</b>   | Displays the statistical information of the monitored host. |
|                       | <i>vid</i>          | The VLAN ID.                                                |
|                       | <i>interface-id</i> | The interface name.                                         |
|                       | <i>mac-address</i>  | The MAC address.                                            |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the monitored host.

**Examples**

```
Ruijie# show nfpp ip-guard hosts statistics
success   fail    total
-----   ----   -----
100       20     120
```

The following example displays the monitored host.

```
Ruijie#show nfpp ip-guard hosts
If column 1 shows '*', it means "hardware do not isolate host" .
VLAN  interface IP address  Reason      remain-time(s)
----  -
1     Gi0/1      1.1.1.1    ATTACK      110
2     Gi0/2      1.1.2.1    SCAN        61
Total:2 host(s)
```

**Related Commands**

| Command                          | Description                |
|----------------------------------|----------------------------|
| <b>clear nfpp ip-guard hosts</b> | Clears the monitored host. |

**Platform Description** N/A

## 21.93 show nfpp ip-guard summary

Use this command to display the configuration.

**show nfpp ip-guard summary**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the configuration.

**Examples**

```
Ruijie# show nfpp ip-guard summary
(Format of column Rate-limit and Attack-threshold is
per-src-ip/per-src-mac/per-port.)
Interface Status Isolate-period Rate-limit Attack-threshold Scan-threshold
Global      Enable  300          4/-/60      8/-/100     15
Gi 0/1      Enable  180          5/-/-       8/-/-       -
Gi 0/2      Disable 200          4/-/60      8/-/100     20

Maximum count of monitored hosts: 1000
Monitor period..300s
```

| Field             | Description                                                                                                                                                     |
|-------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Interface(Global) | Global configuration                                                                                                                                            |
| Status            | Enables/Disables the anti-attack function.                                                                                                                      |
| Isolate-period    | Isolate period                                                                                                                                                  |
| Rate-limit        | In the format of the rate-limit threshold for the source IP address/ the rate-limit threshold for the source MAC address/ the rate-limit threshold for the port |
| Attack-threshold  | In the same format as the rate-limit.                                                                                                                           |
| Scan-threshold    | Scan threshold                                                                                                                                                  |

**Related Commands**

| Command                              | Description                                           |
|--------------------------------------|-------------------------------------------------------|
| <b>ip-guard attack-threshold</b>     | Sets the global attack threshold.                     |
| <b>ip-guard enable</b>               | Enables the IP anti-attack function.                  |
| <b>ip-guard isolate-period</b>       | Sets the global isolate time.                         |
| <b>ip-guard monitor-period</b>       | Sets the monitor period.                              |
| <b>ip-guard monitored-host-limit</b> | Sets the maximum number of the monitored hosts.       |
| <b>ip-guard rate-limit</b>           | Sets the global rate-limit threshold.                 |
| <b>nfpp ip-guard enable</b>          | Enables the IP anti-attack function on the interface. |
| <b>nfpp ip-guard isolate-period</b>  | Sets the isolate time.                                |
| <b>nfpp ip-guard policy</b>          | Sets the rate-limit threshold and attack threshold.   |

**Platform** N/A

**Description**

## 21.94 show nfpp ip-guard trusted-host

Use this command to display the trusted host free from being monitored.

**show nfpp ip-guard trusted-host**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the trusted host free from being monitored.

**Examples**

```
Ruijie# show nfpp ip-guard trusted-host
IP address      mask
-----
1.1.1.0         255.255.255.0
1.1.2.0         255.255.255.0
Total.2 record(s)
```

| Related Commands | Command                      | Description            |
|------------------|------------------------------|------------------------|
|                  | <b>ip-guard trusted-host</b> | Sets the trusted host. |

**Platform Description** N/A

## 21.95 show nfpp log

Use this command to display the NFPP log configuration.

### **show nfpp log summary**

Use this command to display the NFPP log buffer area content.

### **show nfpp log buffer [ statistics ]**

| Parameter Description | Parameter         | Description                                                       |
|-----------------------|-------------------|-------------------------------------------------------------------|
|                       | <b>statistics</b> | Displays the statistical information of the NFPP log buffer area. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** When the log buffer area is full, the subsequent logs are to be dropped, and an entry with all attributes "-" is displayed in the log buffer area. The administrator shall increase the capacity of the log buffer area or improve the rate of generating the syslog.

The generated syslog in the log buffer area carries with the timestamp, for example:

%NFPP\_ARP\_GUARD-4-DOS\_DETECTED:

Host<IP=N/A,MAC=0000.0000.0004,port=Gi4/1,VLAN=1> was detected.(2009-07-01 13:00:00)

**Configuration** The following example displays the NFPP log configuration.

```
Examples Ruijie#show nfpp log summary
Total log buffer size : 10
Syslog rate : 1 entry per 2 seconds
Logging:
VLAN 1-3, 5
interface Gi 0/1
interface Gi 0/2
```

The following example displays the log number in the buffer area.

```
Ruijie#show nfpp log buffer statistics
There are 6 logs in buffer.
```

The following example shows the NFPP log buffer area:

```
Ruijie#show nfpp log buffer
Protocol VLAN Interface IP address MAC address Reason Timestamp
-----
ARP 1 Gi0/1 1.1.1.1 - DoS 2009-05-30
16:23:10
ARP 1 Gi0/1 1.1.1.1 - ISOLATED 2009-05-30
16:23:10
ARP 1 Gi0/1 1.1.1.2 - DoS 2009-05-30
16:23:15
ARP 1 Gi0/1 1.1.1.2 - ISOLATE_FAILED 2009-05-30
16:23:15
ARP 1 Gi0/1 - 0000.0000.0001 SCAN 2009-05-30
16:30:10
ARP - Gi0/2 - - PORT_ATTACKED 2009-05-30
16:30:10
```

| Field    | Description                                        |
|----------|----------------------------------------------------|
| Protocol | ARP, IP, ICMP, DHCP,DHCPv6, NS-NA, RS, RA-REDIRECT |
| Reason   | DoS, ISOLATED, ISOLATE_FAILE, SCAN, PORT_ATTACKED  |

| Related Commands | Command               | Description |
|------------------|-----------------------|-------------|
|                  | <b>clear nfpp log</b> |             |

**Platform** N/A

**Description**

## 21.96 show nfpp nd-guard summary

Use this command to display the configuration.

**show nfpp nd-guard summary**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command** Privileged EXEC mode

**Mode**

**Usage Guide** N/A

**Configuration** The following example displays the configuration.

**Examples**

```
Ruijie# show nfpp nd-guard summary
(Format of column Rate-limit and Attack-threshold is NS-NA/RS/RA-REDIRECT.)
Interface Status Rate-limit Attack-threshold
Global      Enable  20/5/10   40/10/20
Gi 0/1      Enable  15/15/15  30/30/30
Gi 0/2      Disable -/5/30    -/10/50
```

| Field             | Description                                                             |
|-------------------|-------------------------------------------------------------------------|
| Interface(Global) | Global configuration                                                    |
| Status            | Enables/Disables the anti-attack function.                              |
| Rate-limit        | In the format of the rate-limit threshold for the NS-NA/RS/RA-REDIRECT. |
| Attack-threshold  | In the same format as the rate-limit.                                   |

**Related Commands**

| Command                          | Description                                           |
|----------------------------------|-------------------------------------------------------|
| <b>nd-guard attack-threshold</b> | Sets the global attack threshold.                     |
| <b>nd-guard enable</b>           | Enables the ND anti-attack function.                  |
| <b>nd-guard rate-limit</b>       | Sets the global rate-limit threshold.                 |
| <b>nfpp nd-guard enable</b>      | Enables the ND anti-attack function on the interface. |
| <b>nfpp nd-guard policy</b>      | Sets the rate-limit threshold and attack              |

|  |            |
|--|------------|
|  | threshold. |
|--|------------|

**Platform** N/A**Description**

## 21.97 show nfpp nd-guard hosts

Use this command to display the monitored host.

**show nfpp nd-guard hosts** [**statistics** | [[**vlan** *vid*] [**interface** *interface-id*]]]

**Parameter Description**

| Parameter           | Description                                    |
|---------------------|------------------------------------------------|
| <b>statistics</b>   | Displays the statistics of the monitored host. |
| <i>vid</i>          | Sets the VLAN ID.                              |
| <i>interface-id</i> | Sets the interface name and number.            |

**Command Mode**

Privileged EXEC mode

**Usage Guide**

N/A

**Configuration**

The following example displays the statistics of the host monitored by ND-guard.

**Examples**

```
Ruijie#show nfpp nd-guard hosts statistics
success   fail    total
-----   -
10        2      12
```

The following example displays the host monitored by ND-guard. The “remain-time(s)” refers to the remaining time of isolation.

```
Ruijie#show nfpp nd-guard hosts
If col_filter 1 shows '*', it means "hardware do not isolate host".
VLAN   interface  ND-guard      remain-time(s)
-----
-      Gi4/2      ns-na-guard    174
-      Gi4/2      rs-guard       98
-      Gi4/2      ra-redirect-guard 127
Total: 3 hosts
```

**Platform** N/A**Description**

## 21.98 trusted-host

Use this command to set the trusted hosts free form monitoring.

Use the **no** or **default** form of this command to restore the default setting,  
**trusted-host** { *mac mac\_mask* | *ip mask* | *IPv6/prefixlen* }  
**no trusted-host** { **all** | *mac mac\_mask* | *ip mask* | *IPv6/prefixlen* }  
**default trusted-host**

| Parameter Description | Parameter             | Description                                                                      |
|-----------------------|-----------------------|----------------------------------------------------------------------------------|
|                       | <i>ip</i>             | Sets the IP address                                                              |
|                       | <i>mac</i>            | MAC address                                                                      |
|                       | <i>mac_mask</i>       | MAC address mask                                                                 |
|                       | <i>IPv6/prefixlen</i> | IPv6 address and mask length                                                     |
|                       | <i>mask</i>           | IP mask                                                                          |
|                       | <b>all</b>            | Deletes the configuration of all trusted hosts with the no form of this command. |

**Defaults** N/A

**Command** NFPP define configuration mode

**Mode**

**Usage Guide** The administrator can use this command to set the trusted host free from monitoring. The ICMP packets are allowed to be sent to the trusted host CPU without any rate-limit and warning configuration. Configure the mask to set all hosts in one network segment free from monitoring. UP to 500 trusted hosts are supported.

Before configuring the trusted-host, the match type must be configured. If the message type configured by the match is Ipv4, the Ipv6 trusted addresses are not allowed. In the same way, if the message type is IPv6, the IPv4 trusted addresses are not allowed.

**Configuration** The following example sets the trusted hosts free form monitoring.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# define tcp
Ruijie(config-nfpp-define)#trusted-host 1.1.1.1 255.255.255.255
```

**Related Commands**

| Command                              | Description                              |
|--------------------------------------|------------------------------------------|
| <b>show nfpp define trusted-host</b> | Displays the trusted host configuration. |

**Platform** N/A

**Description**

## 21.99 no all-guard enable

Use this command to disable all NFPP guards (except guards self-defined and enabled in interface configuration mode).



**no all-guard enable**

Use this command to enable all NFPP guards.

**all-guard enable**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Command Mode**  
NFPP configuration mode

- Usage Guide**
- By default, all basic NFPP guards are enabled.
  - This global command supports basic NFPP guards including ARP-GUARD, IP-GUARD, ICMP-GUARD, DHCP-GUARD, DHCPv6-GUARD and ND-GUARD.
  - The **no** form command will disable all guards, which is displayed guard-by-guard by using the **show running-config** command. The exception is guards self-defined and configured in interface configuration mode.

**Configuration Examples**

```
Ruijie(config)#show running-config | begin nfpp
nfpp
  log-buffer enable
  arp-guard rate-limit per-port 201
  arp-guard attack-threshold per-port 210
!
Ruijie(config)# nfpp
Ruijie(config-nfpp)#no all-guard enable
Ruijie(config-nfpp)#show running-config | begin nfpp
nfpp
  log-buffer enable
  no arp-guard enable
  arp-guard rate-limit per-port 201
  arp-guard attack-threshold per-port 210
  no icmp-guard enable
  no ip-guard enable
  no dhcp-guard enable
  no dhcpv6-guard enable
  no nd-guard enable
!
Ruijie(config-nfpp)#all-guard enable
Ruijie(config-nfpp)#show running-config | begin nfpp
nfpp
  log-buffer enable
  arp-guard rate-limit per-port 201
  arp-guard attack-threshold per-port 210
!
```

```
no service password-encryption
!
```

**Platform** N/A  
**Description**

## 22 DoS Protection Commands

### 22.1 ip deny invalid-l4port

Use this command to enable the anti-attack of the self-consumption.

Use the **no** form of this command to restore the default setting.

**ip deny invalid-l4port**

**no ip deny invalid-l4port**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example enables the anti-attack of the self-consumption.

```
Ruijie(config)# ip deny invalid-l4port
```

The following example disables the anti-attack of the self-consumption.

```
Ruijie(config)# no ip deny invalid-l4port
```

| Related Commands | Command                            | Description                                                |
|------------------|------------------------------------|------------------------------------------------------------|
|                  | <b>show ip deny invalid-l4port</b> | Displays the state of anti-attack of the self-consumption. |

**Platform** N/A

**Description**

### 22.2 ip deny invalid-tcp

Use this command to enable the anti-attack of the invalid TCP packets.

Use the **no** form of this command to restore the default setting.

**ip deny invalid-tcp**

**no ip deny invalid-tcp**

| Parameter<br>Description | Parameter | Description |
|--------------------------|-----------|-------------|
|                          |           | N/A         |

**Defaults** The function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example enables the anti-attack of the invalid TCP packets:

```
Ruijie(config)# ip deny invalid-tcp
```

The following example disables the anti-attack of the invalid TCP packets:

```
Ruijie(config)# no ip deny invalid-tcp
```

| Related<br>Commands | Command | Description                     |
|---------------------|---------|---------------------------------|
|                     |         | <b>show ip deny invalid-tcp</b> |

**Platform Description** N/A

## 22.3 ip deny land

Use this command to enable the anti-land-attack.

Use the **no** form of this command to restore the default setting.

**ip deny land**

**no ip deny land**

| Parameter<br>Description | Parameter | Description |
|--------------------------|-----------|-------------|
|                          |           | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** N/A

**Configuration** The following example enables the anti-land-attack:

**Examples**

```
Ruijie(config)# ip deny land
```

The following example disables the anti-land-attack:

```
Ruijie(config)# no ip deny land
```

**Related  
Commands**

| Command                  | Description                          |
|--------------------------|--------------------------------------|
| <b>show ip deny land</b> | Displays the anti-land-attack state. |

**Platform** N/A

**Description**

## 22.4 show ip deny

Use this command to display the state of the anti-DOS-attack.

**show ip deny**

**Parameter  
Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** N/A

**Command  
Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the state of the anti-DOS-attack.

**Examples**

```
ruijie#show ip deny
  Protect against Land attack          On
  Protect against invalid L4port attack Off
  Protect against invalid TCP attack   Off
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 22.5 show ip deny invalid-l4port

Use this command to display the state of the anti-consumption-attack.

**show ip deny invalid-l4port**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the state of the anti-consumption-attack.

**Examples**

```
Ruijie# show ip deny invalid-l4port
DoS Protection Mode          State
-----
protect against invalid l4port attack Off
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 22.6 show ip deny invalid-tcp

Use this command to display the state of the anti-attack of the invalid TCP packets.

**show ip deny invalid-tcp**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the state of the anti-attack of the invalid TCP packets.

**Examples**

```
Ruijie# show ip deny invalid-tcp
DoS Protection Mode                State
-----
protect against invalid tcp attack  On
```

**Related  
Commands**

| Command                    | Description                                         |
|----------------------------|-----------------------------------------------------|
| <b>ip deny invalid-tcp</b> | Enables the anti-attack of the invalid TCP packets. |

**Platform** N/A

**Description**

## 22.7 show ip deny land

Use this command to display the anti-land-attack state.

**show ip deny land**

**Parameter  
Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** N/A

**Command  
Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the anti-land-attack state.

**Examples**

```
Ruijie# show ip deny land
DoS Protection Mode                State
-----
protect against land attack        On
```

**Related  
Commands**

| Command                | Description                            |
|------------------------|----------------------------------------|
| <b>no ip deny land</b> | Enables the anti-land-attack function. |

**Platform** N/A

**Description**







## ACL & QoS Configuration Commands

---

1. ACL Commands
2. QoS Commands
3. MMU Commands

# 1 ACL Commands

## 1.1 Command ID Table

For IDs used in the following commands, refer to the command ID table below:

| ID                   | Meaning                                                                                                                                                                                                                                                                                                                                                            |
|----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ID                   | Number of access list. Range:<br>Standard IP ACL: 1 to 99, 1300 to 1999<br>Extended IP ACL: 100 to 199,2000 to 2699<br>Extended MAC ACL: 700 to 799<br>Extended expert ACL: 2700 to 2899                                                                                                                                                                           |
| name                 | ACL name                                                                                                                                                                                                                                                                                                                                                           |
| sn                   | ACL SN (products can be set according to the priority)                                                                                                                                                                                                                                                                                                             |
| start-sn             | Start sequence number                                                                                                                                                                                                                                                                                                                                              |
| inc-sn               | Sequence number increment                                                                                                                                                                                                                                                                                                                                          |
| deny                 | If matched, access is denied.                                                                                                                                                                                                                                                                                                                                      |
| permit               | If matched, access is permitted.                                                                                                                                                                                                                                                                                                                                   |
| port                 | Protocol number. For IPv6, this field can be IPv6, ICMP, TCP, UDP and numbers 0 to 255. For IPv4, it can be one of EIGRP, GRE, IPINIP, IGMP, NOS, OSPF, ICMP, UDP, TCP,AHP, ESP, PCP, PIM and IP, or it can be numbers 0 to 255 that represent the IP protocol. It is described when some important protocols, such as ICMP, TCP and UDP, are listed individually. |
| interface <i>idx</i> | Interface index                                                                                                                                                                                                                                                                                                                                                    |
| src                  | Packet source IP address (host address or network address)                                                                                                                                                                                                                                                                                                         |
| src-wildcard         | Source IP address wildcard. It can be discontinuous, for example, 0.255.0.32.                                                                                                                                                                                                                                                                                      |
| src-ipv6-pfix        | Source IPv6 network address or network type                                                                                                                                                                                                                                                                                                                        |
| dst-ipv6-pfix        | Destination IPv6 network address or network type                                                                                                                                                                                                                                                                                                                   |
| pfix-len             | Prefix mask length                                                                                                                                                                                                                                                                                                                                                 |
| src-ipv6-addr        | Source IPv6 address                                                                                                                                                                                                                                                                                                                                                |
| dst-ipv6-addr        | Destination IPv6 address                                                                                                                                                                                                                                                                                                                                           |
| dscp                 | Differential service code point, and code point value. Range: 0 to 63                                                                                                                                                                                                                                                                                              |
| flow-label           | Flow label in the range 0 to 1048575                                                                                                                                                                                                                                                                                                                               |
| dst                  | Packet destination IP address (host address or network address)                                                                                                                                                                                                                                                                                                    |
| dst-wildcard         | Destination IP address wildcard. It can be discontinuous, such as 0.255.0.32                                                                                                                                                                                                                                                                                       |
| fragment             | Packet fragment filtering.                                                                                                                                                                                                                                                                                                                                         |

|                               |                                                                                                                                                                                                          |
|-------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| precedence                    | Packet precedence value (0 to 7)                                                                                                                                                                         |
| range                         | The layer 4 port number range of the packet.                                                                                                                                                             |
| time-range <i>tm-rng-name</i> | Time range of packet filtering, named <i>tm-rng-name</i>                                                                                                                                                 |
| tos                           | Type of service (0 to 15)                                                                                                                                                                                |
| cos                           | Class of service (0-7)                                                                                                                                                                                   |
| cos inner <i>cos</i>          | COS of the packet tag                                                                                                                                                                                    |
| icmp-type                     | ICMP message type (0 to 255)                                                                                                                                                                             |
| icmp-code                     | ICMP message type code (0 to 255)                                                                                                                                                                        |
| icmp-message                  | ICMP message type name (0 to 255)                                                                                                                                                                        |
| operator port[port]           | Operator (lt-smaller, eq-equal, gt-greater, neq-unequal, range-range)<br><i>port</i> indicates the port number. Dyadic operation needs two port numbers, while other operators only need one port number |
| src-mac-addr                  | Physical address of the source host                                                                                                                                                                      |
| dst-mac-addr                  | Physical address of the destination host                                                                                                                                                                 |
| VID <i>vid</i>                | VLAN ID                                                                                                                                                                                                  |
| VID inner <i>vid</i>          | VID of the tag                                                                                                                                                                                           |
| ethernet-type                 | Ethernet protocol type. 0x value can be entered.                                                                                                                                                         |
| match-all <i>tcpf</i>         | Match all bits of the TCP flag.                                                                                                                                                                          |
| established                   | Match the RST or ACK bit of the TCP flag.                                                                                                                                                                |
| <i>text</i>                   | Remark text                                                                                                                                                                                              |
| <i>in</i>                     | Filter the incoming packets of the interface                                                                                                                                                             |
| <i>out</i>                    | Filter the outgoing packets of the interface                                                                                                                                                             |
| {rule mask offset}+           | rule: Hexadecimal value field; mask: Hexadecimal mask field<br>offset: Refer to the offset table<br>“+” sign indicates at least one group                                                                |
| log                           | Output the matching syslog when the packet matches the ACL rule.                                                                                                                                         |

| Letter | Meaning                                       | Offset | Letter | Meaning                | Offset |
|--------|-----------------------------------------------|--------|--------|------------------------|--------|
| A      | Destination MAC                               | 0      | O      | TTL field              | 34     |
| B      | Source MAC                                    | 6      | P      | Protocol number        | 35     |
| C      | Data frame length field                       | 12     | Q      | IP check sum           | 36     |
| D      | VLAN tag field                                | 14     | R      | Source IP address      | 38     |
| E      | DSAP (Destination Service Access Point) field | 18     | S      | Destination IP address | 42     |
| F      | SSAP (Source Service Access Point) field      | 19     | T      | TCP source port        | 46     |
| G      | Ctrl field                                    | 20     | U      | TCP destination port   | 48     |

|   |                        |    |    |                                    |    |
|---|------------------------|----|----|------------------------------------|----|
| H | Org Code field         | 21 | V  | Sequence number                    | 50 |
| I | Encapsulated data type | 24 | W  | Confirmation field                 | 54 |
| J | IP version number      | 26 | XY | IP header length and reserved bits | 58 |
| K | TOS field              | 27 | Z  | Resrved bits and flags bit         | 59 |
| L | Length of IP packet    | 28 | a  | Windows size field                 | 60 |
| M | ID                     | 30 | b  | Others                             | 62 |
| N | Flags field            | 32 |    |                                    |    |

## 1.2 access-list

Use this command to create an access list to filter data packets. Use the **no** form of this command to remove the specified access list.

- Standard IP access list (1 to 99, 1300 to 1999)

```
access-list id { deny | permit } { source source-wildcard | host source | any | interface idx }
[time-range tm-range-name] [log]
```

- Extended IP access list (100 to 199, 2000 to 2699)

```
access-list id {deny | permit} protocol {source source-wildcard | host source | any} interface idx }
{destination destination-wildcard | host destination | any} [precedence precedence] [tos tos] | [dscp
dscp] [fragment] [range lower upper] [time-range time-range-name] [log]
```

- Extended MAC access list (700 to 799)

```
access-list id {deny | permit} {any | host source-mac-address | source-mac-address mask } {any |
host destination-mac-address | destination-mac-address mask } [ethernet-type][cos [out][inner in]]
```

- Extended expert access list (2700 to 2899)

```
access-list id {deny | permit} [protocol] [ethernet-type][cos [out][inner in]] [VID [out][inner in]]
{source source-wildcard | host source | any} {host source-mac-address | any} {destination
destination-wildcard | host destination | any} {host destination-mac-address | any} [precedence
precedence] [tos tos] | [dscp dscp] [fragment] [time-range time-range-name]
```

- When you select the Ethernet-type field or cos field:

```
access-list id {deny | permit} [ethernet-type]/cos [out][inner in]] [VID [out][inner in]] {source
source-wildcard | host source | any} {host source-mac-address | any} {destination
destination-wildcard | host destination | any} {host destination-mac-address | any} [time-range
time-range-name]
```

- When you select the protocol field:

```
access-list id {deny | permit} protocol [VID [out][inner in]] {source source-wildcard | host source |
any} {host source-mac-address | any} {destination destination-wildcard | host destination | any}
{host destination-mac-address | any} [precedence precedence] [tos tos] | [dscp dscp] [fragment]
[range lower upper] [time-range time-range-name]
```

- Extended expert ACLs of some important protocols:

### Internet Control Message Protocol (ICMP)

```
access-list id {deny | permit} icmp [VID [out][inner in]] {source source-wildcard | host source | any}
{host source-mac-address | any} {destination destination-wildcard | host destination | any} {host
destination-mac-address | any} [icmp-type] [ [ icmp-type [icmp-code] ] ] [ icmp-message ] ]
[precedence precedence] [tos tos] | [dscp dscp] [fragment] [time-range time-range-name]
```

**Transmission Control Protocol (TCP)**

**access-list** *id* {deny | permit} tcp [VID [out][inner in]]{source source-wildcard | host Source | any} {host source-mac-address | any } ] {destination destination-wildcard | host destination | any} {host destination-mac-address | any} ] [precedence precedence] [tos tos] | [dscp dscp] [fragment] [range lower upper] [time-range time-range-name] [ match-all tcp-flag | established ]

**User Datagram Protocol (UDP)**

**access-list** *id* { deny | permit } udp[ VID [ out ] [ inner in ] ] { source source –wildcard | host source | any } { host source-mac-address | any } ] { destination destination-wildcard | host destination | any } { host destination-mac-address | any } [ [precedence precedence ] [ tos tos ] | [dscp dscp]] [ fragment ] [ range lower upper ][ time-range time-range-name ]

**Parameter Description**

| Parameter                      | Description                                                                                                                                                                                                                                            |
|--------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>id</i>                      | Access list number. The ranges available are 1 to 99, 100 to 199, 1300 to 1999, 2000 to 2699, 2700 to 2899, and 700 to 799.                                                                                                                            |
| <b>deny</b>                    | If not matched, access is denied.                                                                                                                                                                                                                      |
| <b>permit</b>                  | If matched, access is permitted.                                                                                                                                                                                                                       |
| <i>source</i>                  | Specify the source IP address (host address or network address).                                                                                                                                                                                       |
| <i>source-wildcard</i>         | It can be discontinuous, for example, 0.255.0.32.                                                                                                                                                                                                      |
| <i>protocol</i>                | IP protocol number. It can be one of EIGRP, GRE, IPINIP, IGMP, NOS, OSPF, ICMP, UDP, TCP, and IP. It can also be a number representing the IP protocol between 0 and 255. The important protocols such as ICMP, TCP, and UDP are described separately. |
| <i>destination</i>             | Specify the destination IP address (host address or network address).                                                                                                                                                                                  |
| <i>destination-wildcard</i>    | Wildcard of the destination IP address. It can be discontinuous, for example, 0.255.0.32.                                                                                                                                                              |
| <b>fragment</b>                | Packet fragment filtering                                                                                                                                                                                                                              |
| <b>precedence</b>              | Specify the packet priority.                                                                                                                                                                                                                           |
| <i>precedence</i>              | Packet precedence value (0 to 7)                                                                                                                                                                                                                       |
| <b>range</b>                   | Layer4 port number range of the packet.                                                                                                                                                                                                                |
| <i>lower</i>                   | Lower limit of the layer4 port number.                                                                                                                                                                                                                 |
| <i>upper</i>                   | Upper limit of the layer4 port number.                                                                                                                                                                                                                 |
| <b>time-range</b>              | Time range of packet filtering                                                                                                                                                                                                                         |
| <i>time-range-name</i>         | Time range name of packet filtering                                                                                                                                                                                                                    |
| <b>tos</b>                     | Specify type of service.                                                                                                                                                                                                                               |
| <i>tos</i>                     | ToS value (0 to 15)                                                                                                                                                                                                                                    |
| <b>dscp</b>                    | Differentiated service code point                                                                                                                                                                                                                      |
| <i>dscp</i>                    | Code point value, ranging from 0 to 63                                                                                                                                                                                                                 |
| <i>icmp-type</i>               | ICMP message type (0 to 255)                                                                                                                                                                                                                           |
| <i>icmp-code</i>               | ICMP message type code (0 to 255)                                                                                                                                                                                                                      |
| <i>icmp-message</i>            | ICMP message type name                                                                                                                                                                                                                                 |
| <b>host source-mac-address</b> | Source physical address                                                                                                                                                                                                                                |
| <b>host</b>                    | Destination physical address                                                                                                                                                                                                                           |

|                         |                                                            |
|-------------------------|------------------------------------------------------------|
| destination-mac-address |                                                            |
| <b>VID</b> vid          | Match the specified VID.                                   |
| <i>ethernet-type</i>    | Ethernet type                                              |
| <b>match-all</b>        | Match all the bits of the TCP flag.                        |
| <i>tcp-flag</i>         | Match the TCP flag.                                        |
| <b>established</b>      | Match the RST or ACK bits, not other bits of the TCP flag. |

**Defaults** N/A

**Command** Global configuration mode.

**Mode**

**Usage Guide** To filter the data by using the access control list, you must first define a series of rule statements by using the access list. You can use ACLs of the appropriate types according to the security needs:

The standard IP ACL (1 to 99, 1300 to 1999) only controls the source IP addresses.

The extended IP ACL (100 to 199, 2000 to 2699) can enforce strict control over the source and destination IP addresses.

The extended MAC ACL (700 to 799) can match against the source/destination MAC addresses and Ethernet type.

The extended expert access list (2700 to 2899) is a combination of the above and can match and filter the VLAN ID.

For the layer-3 routing protocols including the unicast routing protocol and multicast routing protocol, the following parameters are not supported by the ACL: **precedence** *precedence/tos tos/fragments/range lower upper/time-range time-range-name*

The TCP Flag includes part or all of the following:

- urg
- ack
- psh
- rst
- syn
- fin

The packet precedence is as below:

- critical
- flash
- flash-override
- immediate
- internet
- network
- priority
- routine

The service types are as below:

- max-reliability

- max-throughput
- min-delay
- min-monetary-cost
- normal

The ICMP message types are as below:

- administratively-prohibited
- dod-host-prohibited
- dod-net-prohibited
- echo
- echo-reply
- fragment-time-exceeded
- general-parameter-problem
- host-isolated
- host-precedence-unreachable
- host-redirect
- host-tos-redirect
- host-tos-unreachable
- host-unknown
- host-unreachable
- information-reply
- information-request
- mask-reply
- mask-request
- mobile-redirect
- net-redirect
- net-tos-redirect
- net-tos-unreachable
- net-unreachable
- network-unknown
- no-room-for-option
- option-missing
- packet-too-big
- parameter-problem
- port-unreachable
- precedence-unreachable
- protocol-unreachable
- redirect
- device-advertisement
- device-solicitation
- source-quench
- source-route-failed
- time-exceeded
- timestamp-reply

- timestamp-request
- ttl-exceeded
- unreachable

The TCP ports are as follows. A port can be specified by port name and port number:

- bgp
- chargen
- cmd
- daytime
- discard
- domain
- echo
- exec
- finger
- ftp
- ftp-data
- gopher
- hostname
- ident
- irc
- klogin
- kshell
- ldp
- login
- nntp
- pim-auto-rp
- pop2
- pop3
- smtp
- sunrpc
- syslog
- tacacs
- talk
- telnet
- time
- uucp
- whois
- www

The UDP ports are as follows. A UDP port can be specified by port name and port number.

- biff
- bootpc
- bootps
- discard



- dnsix
- domain
- echo
- isakmp
- mobile-ip
- nameserver
- netbios-dgm
- netbios-ns
- netbios-ss
- ntp
- pim-auto-rp
- rip
- snmp
- snmptrap
- sunrpc
- syslog
- tacacs
- talk
- tftp
- time
- who
- xdmcp

The Ethernet types are as below:

- aarp
- appletalk
- decnet-iv
- diagnostic
- etype-6000
- etype-8042
- lat
- lavc-sca
- mop-console
- mop-dump
- mumps
- netbios
- vines-echo
- xns-idp

The UDF headers are as below:

- I2-head
- I3-head
- I4-head
- I5-head

Run **no {sn | permit | deny}** in ACL mode to delete ACEs.

**Configuration** 1. Example of the standard IP ACL

**Examples** The following basic IP ACL allows the packets whose source IP addresses are 192.168.1.64 - 192.168.1.127 to pass:

```
Ruijie (config)#access-list 1 permit 192.168.1.64 0.0.0.63
```

2. Example of the extended IP ACL

The following extended IP ACL allows the DNS messages and ICMP messages to pass:

```
Ruijie(config)#access-list 102 permit tcp any any eq domain log
Ruijie(config)#access-list 102 permit udp any any eq domain log
Ruijie(config)#access-list 102 permit icmp any any echo log
Ruijie(config)#access-list 102 permit icmp any any echo-reply
```

3. Example of the extended MAC ACL

This example shows how to deny the host with the MAC address 00d0f8000c0c to provide service with the protocol type 100 on gigabit Ethernet port 1/1. The configuration procedure is as below:

```
Ruijie(config)#access-list 702 deny host 00d0f8000c0c any aarp
Ruijie(config)# interface gigabitethernet 1/1
Ruijie(config-if)# mac access-group 702 in
```

4. Example of the extended expert ACL

The following example shows how to create and display an extended expert ACL. This expert ACL denies all the TCP packets with the source IP address 192.168.12.3 and the source MAC address 00d0.f800.0044.

```
Ruijie(config)#access-list 2702 deny tcp host 192.168.12.3 mac 00d0.f800.0044
any any
Ruijie(config)# access-list 2702 permit any any any any
Ruijie(config)# show access-lists
expert access-list extended 2702
10 deny tcp host 192.168.12.3 mac 00d0.f800.0044 any any
10 permit any any any any
```

**Related  
Commands**

| Command           | Description                                  |
|-------------------|----------------------------------------------|
| show access-lists | Show all the ACLs.                           |
| mac access-group  | Apply the extended MAC ACL on the interface. |

**Platform** N/A

**Description**

## 1.3 access-list list-remark

Use this command to write a helpful comment (remark) for an access list. Use the **no** form of this command to remove the remark.

**access-list** *id* **list-remark** *text*

**no access-list** *id* **list-remark**

| Parameter Description | Parameter   | Description                                                                                                                                                                         |
|-----------------------|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <i>id</i>   | Access list number.<br>Standard IP ACL: 1 to 99, 1300 to 1999.<br>Extended IP ACL: 100 to 199. 2000 to 2699.<br>Extended MAC ACL: 700 to 799.<br>Extended Expert ACL: 2700 to 2899. |
|                       | <i>text</i> | Comment that describes the access list.                                                                                                                                             |

**Defaults** The access lists have no remarks by default.

**Command Mode** Global configuration mode

**Usage Guide** You can use this command to write a helpful comment for a specified access list. If the specified access list does not exist, the command will create the access list, then add remarks for the access list.

**Configuration Examples** The following example writes a comment of “this acl is to filter the host 192.168.4.12” for ACL100.

```
Ruijie(config)# ip access-list extended 100
Ruijie(config)# access-list 100 list-remark this acl is to filter the host
192.168.4.12
```

| Related Commands | Command                       | Description                                                                                |
|------------------|-------------------------------|--------------------------------------------------------------------------------------------|
|                  | show access- lists            | Displays all access lists, including the remarks for the access lists.                     |
|                  | show access-lists <i>id</i>   | Displays the access list of a specified number, including the remarks for the access list. |
|                  | show access-lists <i>name</i> | Displays the access list of a specified name, including the remarks for the access list.   |

**Platform Description**

## 1.4 access-list remark

Use this command to write a helpful comment (remark) for an entry in a numbered access list. Use the **no** form of this command to remove the remark.

**access-list** *id* **remark** *text*

**no access-list** *id* **remark** *text*

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|-----------------------|-----------|-------------|

|             |                                                                                                                                                                                     |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>id</i>   | Access list number.<br>Standard IP ACL: 1 to 99, 1300 to 1999.<br>Extended IP ACL: 100 to 199. 2000 to 2699.<br>Extended MAC ACL: 700 to 799.<br>Extended Expert ACL: 2700 to 2899. |
| <i>text</i> | Comment that describes the access list entry.                                                                                                                                       |

**Defaults** The access list entries have no remarks by default.

**Command** Global configuration mode

**Mode**

**Usage Guide** You can use this command to write a helpful comment for an entry in a specified access list. If the specified access list does not exist, the command will create the access list, then add remarks for the access entry.

**Configuration** The following example writes a comment for an entry in ACL102.

**Examples** Ruijie(config)# access-list 102 remark deny-host-10.1.1.1

**Related  
Commands**

| Command                       | Description                                                                                      |
|-------------------------------|--------------------------------------------------------------------------------------------------|
| show access-lists             | Displays all access lists, including the remarks for the access list entries.                    |
| show access-lists <i>id</i>   | Displays the access list of a specified number, including the remarks for the access list entry. |
| show access-lists <i>name</i> | Displays the access list of a specified name, including the remarks for the access list entry.   |

**Platform**

**Description**

## 1.5 clear counters access-list

Use this command to clear counters of packets matching ACLs.

**clear counters access-list** [*id* | *name* ]

**Parameter  
Description**

| Parameter   | Description        |
|-------------|--------------------|
| <i>id</i>   | Access list number |
| <i>name</i> | Access list name   |

**Defaults**

**Command** Privileged EXEC mode

**Mode**

**Usage Guide** This command is used to clear the counters of packets matching the specified or all ACLs.

**Configuration** The following example clears the packet matching counter of ACL No. 2700:

**Examples**

```
Ruijie #show access-lists 2700
expert access-list extended 2700
    10 permit ip VID 4 host 192.168.3.55 any host 192.168.99.6 any (88 matches)
    20 deny tcp any any eq login any any (33455 matches)
    30 permit tcp any any host 192.168.6.9 any (10 matches)

Ruijie# clear counters access-list 2700
Ruijie #show access-lists 2700
expert access-list extended 2700
    10 permit ip VID 4 host 192.168.3.55 any host 192.168.99.6 any
    20 deny tcp any any eq login any any
    30 permit tcp any any host 192.168.6.9 any
```

**Related  
Commands**

| Command            | Description                  |
|--------------------|------------------------------|
| expert access-list | Defines an expert ACL.       |
| deny               | Defines a deny ACL entry.    |
| permit             | Defines a permits ACL entry. |

**Platform** N/A

**Description**

## 1.6 clear access-list counters

Use this command to clear counters of packets matching the deny entries in ACLs.

**clear access-list counters** [*id* | *name*]

**Parameter  
Description**

| Parameter   | Description        |
|-------------|--------------------|
| <i>id</i>   | Access list number |
| <i>name</i> | Access list name   |

**Defaults**

**Command** Privileged EXEC mode

**Mode**

**Usage Guide** This command is used to clear the counters of packets matching the deny entries in ACLs.

**Configuration** The following example clears the packet matching counter of ACL No. 1:

**Examples** Before configuration:

```
Ruijie #show access-lists
ip access-list standard 1
  10 deny host 50.1.1.2 (10 matches)
  20 permit host 60.1.1.2 (15 matches)
  (10 packets filtered)
```

After configuration:

```
Ruijie# end
Ruijie# clear access-list counters
Ruijie# show access-lists
ip access-list standard 1
  10 deny host 50.1.1.2 (10 matches)
  20 permit host 60.1.1.2 (15 matches)
```

**Related  
Commands**

| Command            | Description                  |
|--------------------|------------------------------|
| expert access-list | Defines an expert ACL.       |
| deny               | Defines a deny ACL entry.    |
| permit             | Defines a permits ACL entry. |

**Platform** N/A

**Description**

## 1.7 deny

One or multiple **deny** conditions are used to determine whether to forward or discard the packet. In ACL configuration mode, you can modify the existent ACL or configure according to the protocol details.

### 1. Standard IP ACL

```
[sn] deny {source source-wildcard | host source | any} interface idx [{time-range tm-range-name}]
[ log ]
```

### 2. Extended IP ACL

```
[ sn ] deny protocol source source-wildcard destination destination-wildcard [ [precedence
precedence ] [ tos tos ] | [dscp dscp] [ecn ecn] ] [ fragment ] [ range lower upper ] [ time-range
time-range-name ] [ log ]
```

Extended IP ACLs of some important protocols:

- Internet Control Message Prot (ICMP)

```
[sn] deny icmp {source source-wildcard | host source | any} {destination destination-wildcard |
```

**host** *destination* | **any** [*icmp-type*] [[*icmp-type* [*icmp-code*]] | [*icmp-message*]] [**precedence** *precedence*] [**tos** *tos*] [**fragment**] [**time-range** *time-range-name*]

- Transmission Control Protocol (TCP)

[ *sn* ] **deny tcp** { *source* *source-wildcard* | **host** *Source* | **any** } { *destination* *destination-wildcard* | **host** *destination* | **any** } [ [**precedence** *precedence*] [ **tos** *tos*] | [**dscp** *dscp*]] [ **fragment**] [ **range** *lower upper*] [ **time-range** *time-range-name*] [ **match-all** *tcp-flag* | **established** ]

- User Datagram Protocol (UDP)

[ *sn* ] **deny udp** { *source* *source-wildcard* | **host** *source* | **any** } [ { *destination* *destination-wildcard* | **host** *destination* | **any** } ] [ [**precedence** *precedence*] [ **tos** *tos*] | [**dscp** *dscp*]] [ **fragment**] [ **range** *lower upper*] [ **time-range** *time-range-name* ]

### 3. Extended MAC ACL

[ *sn* ] **deny** { **any** | **host** *source-mac-address* } { **any** | **host** *destination-mac-address* } [ *ethernet-type* ] [ **cos** [ *out*] ] [ **inner** *in* ] ]

### 4. Extended expert ACL

[ *sn* ] **deny** [ *protocol* | [ *ethernet-type*] [ **cos** [ *out*] ] [ **inner** *in* ] ] ] [ [ **VID** [ *out*] ] [ **inner** *in* ] ] ] { *source* *source-wildcard* | **host** *source* | **any** } { **host** *source-mac-address* | **any** } { *destination* *destination-wildcard* | **host** *destination* | **any** } { **host** *destination-mac-address* | **any** } [ [**precedence** *precedence*] [ **tos** *tos*] | [**dscp** *dscp*]] [ **fragment**] [ **range** *lower upper*] [ **time-range** *time-range-name* ]

- When you select the ethernet-type field or cos field:

[ *sn* ] **deny** [ [ *ethernet-type*] [ **cos** [ *out*] ] [ **inner** *in* ] ] ] [ [ **VID** [ *out*] ] [ **inner** *in* ] ] ] { *source* *source-wildcard* | **host** *source* | **any** } { **host** *source-mac-address* | **any** } { *destination* *destination-wildcard* | **host** *destination* | **any** } { **host** *destination-mac-address* | **any** } [ **time-range** *time-range-name* ]

- When you select the protocol field:

[ *sn* ] **deny protocol** [ [ **VID** [ *out*] ] [ **inner** *in* ] ] ] { *source* *source-wildcard* | **host** *source* | **any** } { **host** *source-mac-address* | **any** } { *destination* *destination-wildcard* | **host** *destination* | **any** } { **host** *destination-mac-address* | **any** } [ [**precedence** *precedence*] [ **tos** *tos*] | [**dscp** *dscp*]] [ **fragment**] [ **range** *lower upper*] [ **time-range** *time-range-name* ]

- Extended expert ACLs of some important protocols

### Internet Control Message Protocol (ICMP)

[ *sn* ] **deny icmp** [ [ **VID** [ *out*] ] [ **inner** *in* ] ] ] { *source* *source-wildcard* | **host** *source* | **any** } { **host** *source-mac-address* | **any** } { *destination* *destination-wildcard* | **host** *destination* | **any** } { **host** *destination-mac-address* | **any** } [ *icmp-type*] [ [ *icmp-type* [*icmp-code*]] | [*icmp-message*] ] ] [ [**precedence** *precedence*] [ **tos** *tos*] | [**dscp** *dscp*]] [ **fragment**] [ **time-range** *time-range-name* ]

### Transmission Control Protocol (TCP)

[ *sn* ] **deny tcp** [ [ **VID** [ *out*] ] [ **inner** *in* ] ] ] { *source* *source-wildcard* | **host** *Source* | **any** } { **host** *source-mac-address* | **any** } { *destination* *destination-wildcard* | **host** *destination* | **any** } { **host** *destination-mac-address* | **any** } [ [**precedence** *precedence*] [ **tos** *tos*] | [**dscp** *dscp*]] [ **fragment**] [ **range** *lower upper*] [ **time-range** *time-range-name*] [ **match-all** *tcp-flag* | **established** ]

### User Datagram Protocol (UDP)

[ *sn* ] **deny udp** [ [ **VID** [ *out*] ] [ **inner** *in* ] ] ] { *source* *source-wildcard* | **host** *source* | **any** } { **host** *source-mac-address* | **any** } { *destination* *destination-wildcard* | **host** *destination* | **any** } { **host** *destination-mac-address* | **any** } [ [**precedence** *precedence*] [ **tos** *tos*] | [**dscp** *dscp*]] [ **fragment**] [ **range** *lower upper*] [ **time-range** *time-range-name* ]

**Address Resolution Protocol (ARP)**

[sn] deny arp {vid vlan-id}[ host source-mac-address | any] [host destination-mac-address | any] {sender-ip sender-ip-wildcard | host sender-ip | any} {sender-mac sender-mac-wildcard | host sender-mac | any} {target-ip target-ip-wildcard | host target-ip | any}

## 5. Extended IPv6 ACL

[sn] deny protocol{source-ipv6-prefix/prefix-length | any | host source-ipv6-address } {destination-ipv6-prefix / prefix-length | any| hostdestination-ipv6-address} [dscp dscp] [flow-label flow-label] [fragment] [range lower upper] [time-range time-range-name]

Extended ipv6 ACLs of some important protocols:

**Internet Control Message Protocol (ICMP)**

[sn]deny icmp {source-ipv6-prefix / prefix-length | any source-ipv6-address | host} {destination-ipv6-prefix / prefix-length| host destination-ipv6-address | any} [icmp-type] [[icmp-type [icmp-code]] | [icmp-message]] [dscp dscp] [flow-label flow-label] [fragment] [time-range time-range-name]

**Transmission Control Protocol (TCP)**

[ sn ] deny tcp { source-ipv6-prefix / prefix-length | hostsource-ipv6-address | any } { destination-ipv6-prefix /prefix-length | host destination-ipv6-address | any } ] [ dscp dscp ] [ flow-label flow-label ] [ fragment ] [ range lower upper ] [ time-range time-range-name ] [ match-all tcp-flag | established ]

**User Datagram Protocol (UDP)**

[ sn ] deny udp { source-ipv6-prefix/prefix-length | host source-ipv6-address | any } { destination-ipv6-prefix /prefix-length | host destination-ipv6-address | any } [ dscp dscp ] [ flow-label flow-label ] [ fragment ] [ range lower upper ] [ time-range time-range-name ]

**Parameter Description**

| Parameter                   | Description                                                                                                                                                                                                                                            |
|-----------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>sn</i>                   | ACL entry sequence number                                                                                                                                                                                                                              |
| <b>deny</b>                 | If not matched, access is denied.                                                                                                                                                                                                                      |
| <i>source</i>               | Specify the source IP address (host address or network address).                                                                                                                                                                                       |
| <i>source-wildcard</i>      | It can be discontinuous, for example, 0.255.0.32.                                                                                                                                                                                                      |
| <i>protocol</i>             | IP protocol number. It can be one of EIGRP, GRE, IPINIP, IGMP, NOS, OSPF, ICMP, UDP, TCP, and IP. It can also be a number representing the IP protocol between 0 and 255. The important protocols such as ICMP, TCP, and UDP are described separately. |
| <i>destination</i>          | Specify the destination IP address (host address or network address).                                                                                                                                                                                  |
| <i>destination-wildcard</i> | Wildcard of the destination IP address. It can be discontinuous, for example, 0.255.0.32.                                                                                                                                                              |
| <b>fragment</b>             | Packet fragment filtering                                                                                                                                                                                                                              |
| <b>precedence</b>           | Specify the packet priority.                                                                                                                                                                                                                           |
| <i>precedence</i>           | Packet precedence value (0 to 7)                                                                                                                                                                                                                       |
| <b>range</b>                | Layer4 port number range of the packet.                                                                                                                                                                                                                |
| <i>lower</i>                | Lower limit of the layer4 port number.                                                                                                                                                                                                                 |
| <i>upper</i>                | Upper limit of the layer4 port number.                                                                                                                                                                                                                 |



|                                               |                                                                                         |
|-----------------------------------------------|-----------------------------------------------------------------------------------------|
| <b>time-range</b>                             | Time range of packet filtering                                                          |
| <i>time-range-name</i>                        | Time range name of packet filtering                                                     |
| <b>tos</b>                                    | Specify type of service.                                                                |
| <i>tos</i>                                    | ToS value (0 to 15)                                                                     |
| <i>icmp-type</i>                              | ICMP message type (0 to 255)                                                            |
| <i>icmp-code</i>                              | ICMP message type code (0 to 255)                                                       |
| <i>icmp-message</i>                           | ICMP message type name                                                                  |
| <b>host</b> <i>source-mac-address</i>         | Source physical address                                                                 |
| <b>host</b><br><i>destination-mac-address</i> | Destination physical address                                                            |
| <b>VID</b> <i>vid</i>                         | Match the specified VID.                                                                |
| <i>ethernet-type</i>                          | Ethernet type                                                                           |
| <b>match-all</b>                              | Match all the bits of the TCP flag.                                                     |
| <i>tcp-flag</i>                               | Match the TCP flag.                                                                     |
| <b>established</b>                            | Match the RST or ACK bits, not other bits of the TCP flag.                              |
| <i>source-ipv6-prefix</i>                     | Source IPv6 network address or network type                                             |
| <i>destination-ipv6-prefix</i>                | Destination IPv6 network address or network type                                        |
| <i>prefix-length</i>                          | Prefix mask length                                                                      |
| <i>source-ipv6-address</i>                    | Source IPv6 address                                                                     |
| <i>destination-ipv6-address</i>               | Destination IPv6 address                                                                |
| <b>dscp</b>                                   | Differential Service Code Point                                                         |
| <i>dscp</i>                                   | Code value, within the range of 0 to 63                                                 |
| <i>flow-label</i>                             | Flow label                                                                              |
| <i>flow-label</i>                             | Flow label value, within the range of 0 to 1048575.                                     |
| <i>protocol</i>                               | For the IPv6, the field can be ipv6   icmp   tcp   udp and number in the range 0 to 255 |
| <b>time-range</b>                             | Time range of the packet filtering                                                      |
| <i>time-range-name</i>                        | Time range name of the packet filtering                                                 |

**Defaults** No entry

**Command mode** ACL configuration mode.

**Usage Guide** Use this command to configure the filtering entry of ACLs in ACL configuration mode.

**Configuration Examples** The following example shows how to create and display an extended expert ACL. This expert ACL denies all the TCP packets with the source IP address 192.168.4.12 and the source MAC address 001300498272.

```
Ruijie(config)#expert access-list extended 2702
Ruijie(config-exp-nacl)#deny tcp host
192.168.4.12 host 0013.0049.8272 any any
Ruijie(config-exp-nacl)#permit any any any any
Ruijie(config-exp-nacl)#show access-lists
```

```
expert access-list extended 2702
10 deny tcp host 192.168.4.12 host 0013.0049.8272 any any
20 permit any any any any
Ruijie(config-exp-nacl)#
```

This example shows how to use the extended IP ACL. The purpose is to deny the host with the IP address 192.168.4.12 to provide services through the TCP port 100 and apply the ACL to Interface gigabitethernet 1/1. The configuration procedure is as below:

```
Ruijie(config)# ip access-list extended ip-ext-acl
Ruijie(config-ext-nacl)# deny tcp host 192.168.4.12 eq 100 any
Ruijie(config-ext-nacl)# show access-lists
ip access-list extended ip-ext-acl
10 deny tcp host 192.168.4.12 eq 100 any
Ruijie(config-ext-nacl)#exit
Ruijie(config)#interface gigabitethernet 1/1
Ruijie(config-if)#ip access-group ip-ext-acl in
Ruijie(config-if)#
```

This example shows how to use the extended MAC ACL. The purpose is to deny the host with the MAC address 0013.0049.8272 to send Ethernet frames of the type 100 and apply the rule to Interface gigabitethernet 1/1. The configuration procedure is as below:

```
Ruijie(config)#mac access-list extended mac1
Ruijie(config-mac-nacl)#deny host 0013.0049.8272 any aarp
Ruijie(config-mac-nacl)# show access-lists
mac access-list extended mac1
10 deny host 0013.0049.8272 any aarp
Ruijie(config-mac-nacl)#exit
Ruijie(config)# interface gigabitethernet 1/1
Ruijie(config-if)# mac access-group mac1 in
```

This example shows how to use the standard IP ACL. The purpose is to deny the host with the IP address 192.168.4.12 and apply the rule to Interface gigabitethernet 1/1. The configuration procedure is as below:

```
Ruijie(config)#ip access-list standard 34
Ruijie(config-ext-nacl)# deny host 192.168.4.12
Ruijie(config-ext-nacl)#show access-lists
ip access-list standard 34
10 deny host 192.168.4.12
Ruijie(config-ext-nacl)#exit
Ruijie(config)# interface gigabitethernet 1/1
Ruijie(config-if)# ip access-group 34 in
```

This example shows how to use the extended IPV6 ACL. The purpose is to deny the host with the IP address 192.168.4.12 and apply the rule to Interface gigabitethernet 1/1. The configuration procedure is as below:

```
Ruijie(config)#ipv6 access-list extended v6-acl
Ruijie(config-ipv6-nacl)#11 deny ipv6 host 192.168.4.12 any
Ruijie(config-ipv6-nacl)#show access-lists
```

```

ipv6 access-list extended v6-acl
11 deny ipv6 host 192.168.4.12 any
Ruijie(config-ipv6-nacl)# exit
Ruijie(config)# interface gigabitethernet 1/1
Ruijie(config-if)# ipv6 traffic-filter v6-acl in

```

#### Related Commands

| Command             | Description                                     |
|---------------------|-------------------------------------------------|
| show access-lists   | Displays all ACLs.                              |
| ipv6 traffic-filter | Applies the extended IPv6 ACL on the interface. |
| ip access-group     | Applies the IP ACL on the interface.            |
| mac access-group    | Applies the extended MAC ACL on the interface.  |
| ip access-list      | Defines an IP ACL.                              |
| mac access-list     | Defines an extended MAC ACL.                    |
| expert access-list  | Defines an extended expert ACL.                 |
| ipv6 access-list    | Defines an extended IPv6 ACL.                   |
| permit              | Permits the access.                             |

**Platform** N/A

#### Description

## 1.8 expert access-group

Use this command to apply the specified expert access list on the specified interface or globally. Use the **no** form of the command to remove the application.

**expert access-group** { *id* | *name* } { **in** | **out** }

**no expert access-group** { *id* | *name* } { **in** | **out** }

#### Parameter Description

| Parameter   | Description                              |
|-------------|------------------------------------------|
| <i>id</i>   | Expert access list number: 2700 to 2899  |
| <i>name</i> | Name of the expert access list           |
| <b>in</b>   | Specifies filtering on inbound packets.  |
| <b>out</b>  | Specifies filtering on outbound packets. |

**Defaults** No expert access list is applied on the interface or globally.

**Command mode** Global/Interface configuration mode.

**Usage Guide** This command is used to apply the specified access list globally or on the interface to control the input

and output data streams. Use the **show access-group** command to view the setting. Use the **expert access-group { id | name } { in | out } counter-only** command on the interface to only collect packet statistics and not filter packets.

**Configuration Examples** The following example shows how to apply the **access-list accept\_00d0f8xxxxxx** only to Gigabit interface 0/1:

```
Ruijie(config)# interface GigaEthernet 0/1
Ruijie(config-if)# expert access-group
accept_00d0f8xxxxxx_only in
```

The following example applies the ACL numbered 2700 on interface fastEthernet0/1 to collect statistics on incoming packets:

```
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if-FastEthernet 0/1)#expert access-group 2700 in counter-only
```

**Related Commands**

| Command           | Description                     |
|-------------------|---------------------------------|
| show access-group | Displays the ACL configuration. |

**Platform Description** N/A

## 1.9 expert access-list advanced

Use this command to create an advanced expert access list and place the device in expert advanced access list configuration mode. Use the **no** form of this command to remove the advanced expert access list.

**expert access-list advanced name**

**no expert access-list advanced name**

**Parameter Description**

| Parameter   | Description                             |
|-------------|-----------------------------------------|
| <i>name</i> | Name of the advanced expert access list |

**Defaults** N/A

**Command mode** Global configuration mode

**Usage Guide** Use this command to create an advanced expert access list (namely, ACL80) to match your custom fields.

**Configuration Examples** The following example creates an advanced expert access list named adv-acl.

```
Ruijie(config)# expert access-list advanced adv-acl
Ruijie(config-exp-dacl)# show access-lists
```

```
expert access-list advanced adv-acl
```

**Related  
Commands**

| Command                       | Description                                   |
|-------------------------------|-----------------------------------------------|
| show access-lists             | Displays all access lists.                    |
| show access-lists <i>name</i> | Displays the access list of a specified name. |

**Platform** N/A  
**Description**

## 1.10 expert access-list extended

Use this command to create an extended expert access list. Use the **no** form of the command to remove the ACL.

**expert access-list extended** {*id* | *name*}

**no expert access-list extended** {*id* | *name*}

**Parameter  
Description**

| Parameter   | Description                                      |
|-------------|--------------------------------------------------|
| <i>id</i>   | Extended expert access list number: 2700 to 2899 |
| <i>name</i> | Name of the extended expert access list          |

**Defaults** N/A

**Command mode** Global configuration mode.

**Usage Guide** Use the **show access-lists** command to display the ACL configurations.

**Configuration** Create an extended expert ACL named exp-acl:

**Examples**

```
Ruijie(config)# expert access-list extended exp-acl
Ruijie(config-exp-nacl)# show access-lists expert access-list extended
exp-acl
Ruijie(config-exp-nacl)#
```

Create an extended expert ACL numbered 2704:

```
Ruijie(config)# expert access-list extended 2704
Ruijie(config-exp-nacl)# show access-lists access-list extended 2704
Ruijie(config-exp-nacl)#
```

**Related  
Commands**

| Command                  | Description                       |
|--------------------------|-----------------------------------|
| <b>show access-lists</b> | Displays the extended expert ACLs |

**Platform** N/A

**Description**

## 1.11 expert access-list counter

Use this command to enable the counter of packets matching the specified expert access list. Use the **no** form of this command to disable this function.

**expert access-list counter** { *id* | *name* }

**no expert access-list counter** { *id* | *name* }

**Parameter Description**

| Parameter   | Description                              |
|-------------|------------------------------------------|
| <i>id</i>   | Expert access list number: 2700 to 2899. |
| <i>name</i> | Name of the access list.                 |

**Defaults** The counter of the packets matching the expert access list is disabled.

**Command mode** Global configuration mode

**Usage Guide** Use this command to enable the counter of packets matching the specified expert access list, so that you can analyze the counters to learn whether the network is attacked by the illegal packets.

**Configuration Examples** The following example enables the counter of packets matching the extended expert access list named exp-acl:

```
Ruijie(config)# expert access-list counter exp-acl
Ruijie(config)# show access-lists
expert access-list extended exp-acl
 10 permit ip VID 4 host 192.168.3.55 any host 192.168.99.6 any (16 matches)
 20 deny tcp any any eq login any any (78 matches)
```

The following example disables the counter of packets matching the extended expert access list named exp-acl.

```
Ruijie(config)#no expert access-list counter exp-acl
Ruijie(config)# show access-lists
expert access-list extended 2700
 10 permit ip VID 4 host 192.168.3.55 any host 192.168.99.6 any
 20 deny tcp any any eq login any any
```

**Related Commands**

| Command           | Description                       |
|-------------------|-----------------------------------|
| show access-lists | Displays the extended expert ACL. |

**Platform** N/A

## Description

## 1.12 expert access-list new-fragment-mode

Use this command to switch the matching mode of fragmentation packets. Use the **no** form of this command to restore the default matching mode of fragmentation packets.

**expert access-list new-fragment-mode** { *id* | *name* }

**no expert access-list new-fragment-mode** { *id* | *name* }

### Parameter Description

| Parameter   | Description                              |
|-------------|------------------------------------------|
| <i>id</i>   | Expert access list number: 2700 to 2899. |
| <i>name</i> | Name of the expert access list.          |

### Defaults

Use the default matching mode of fragmentation packets. By default, if the access rule is tagged with fragment, it will match all packets except for the first fragmentation packet. If the access rule is not tagged with fragment, all packets including the first and all subsequent fragmentation packets will be matched.

### Command mode

Global configuration mode

### Usage Guide

Use this command to switch and control the matching mode of access rules to fragmentation packets.

### Configuration Examples

The following example switches the matching mode of fragmentation packets for the ACL 2700 from the default mode to a new matching mode:

```
Ruijie(config)#expert access-list new-fragment-mode 2700
```

### Related Commands

| Command | Description |
|---------|-------------|
| -       | -           |

### Platform

N/A

### Description

## 1.13 expert access-list resequence

Use this command to resequence an expert access list. Use the **no** form of this command to restore the default order of access entries.

**expert access-list resequence** { *id* | *name* } *start-sn inc-sn*

**no expert access-list resequence** { *id* | *name* }

### Parameter

| Parameter | Description |
|-----------|-------------|
|-----------|-------------|

| Description     |                                                          |
|-----------------|----------------------------------------------------------|
| <i>id</i>       | Expert access list number: 2700 to 2899.                 |
| <i>name</i>     | Name of the expert access list                           |
| <i>start-sn</i> | Start sequence number. Range: 1 to 2147483647            |
| <i>inc-sn</i>   | Increment of the sequence number. Range: 1 to 2147483647 |

**Defaults**      *start-sn*: 10  
*inc-sn*: 10

**Command mode**      Global configuration mode

**Usage Guide**      Use this command to change the order of the access entries.

**Configuration**      The following example resequences entries of expert access list “exp-acl”:

**Examples**      Before the configuration:

```
Ruijie# show access-lists
expert access-list extended exp-acl
 10 permit ip any any any any
 20 deny ip any any any any
```

After the configuration:

```
Ruijie# config
Ruijie(config)# expert access-list resequence exp-acl 21 43
Ruijie(config)# exit
Ruijie# show access-lists
expert access-list extended exp-acl
 21 permit ip any any any any
 64 deny ip any any any any
```

**Related Commands**

| Command           | Description                 |
|-------------------|-----------------------------|
| show access-lists | Displays all access lists.. |

**Platform**      N/A  
**Description**

## 1.14 global access-group

Use this command to apply the global access list on the interface. Use the **no** form of this command to remove the global access list from the interface.

**global access-group**  
**no global access-group**



| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** By default, the global access list is applied on the interface.

**Command mode** Interface configuration mode

**Usage Guide** N/A

**Configuration** The following example applies the global access list on interface fastEthernet0/0.

**Examples**

```
Ruijie(config)# interface fastEthernet 0/0
Ruijie(config-if-GigabitEthernet 0/0)#global access-group
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 1.15 ip access-group

Use this command to apply a specific access list globally or to an interface. Use the **no** form of this command to remove the access list from the interface.

**ip access-group** {*id* | *name*} {**in** | **out**}

**no ip access-group** { *id* | *name*} {**in** | **out**}

| Parameter Description | Parameter   | Description                                                                 |
|-----------------------|-------------|-----------------------------------------------------------------------------|
|                       | <i>id</i>   | IP access list or extended IP access list number:<br>1 to 199, 1300 to 2699 |
|                       | <i>name</i> | Name of the IP ACL                                                          |
|                       | in          | Filters the incoming packets of the interface.                              |
|                       | out         | Filters the outgoing packets of the interface.                              |

**Defaults** No access list is applied globally or on the interface by default.

**Command mode** Global, interface

**Usage Guide** Use this command to control access to a specified interface, VXLAN or globally.

**Configuration** The following example applies the ACL 120 on interface fastEthernet0/0 to filter the incoming packets:

**Examples**

```
Ruijie(config)# interface fastEthernet 0/0
Ruijie(config-if)# ip access-group 120 in
```

**Related Commands**

| Command           | Description        |
|-------------------|--------------------|
| access-list       | Defines an ACL.    |
| show access-lists | Displays all ACLs. |

**Platform** N/A

**Description**

## 1.16 ip access-list

Use this command to create a standard IP access list or extended IP access list. Use the **no** form of the command to remove the access list.

**ip access-list** {**extended** | **standard**} {*id* | *name*}

**no ip access-list** {**extended** | **standard**} {*id* | *name*}

**Parameter Description**

| Parameter   | Description                                                                                    |
|-------------|------------------------------------------------------------------------------------------------|
| <i>id</i>   | Access list number:<br>Standard: 1 to 99, 1300 to 1999;<br>Extended: 100 to 199, 2000 to 2699. |
| <i>name</i> | Name of the access list                                                                        |

**Defaults** N/A

**Command mode** Global configuration mode

**Usage Guide** Configure a standard access list if you need to filter on source address only. If you want to filter on anything other than source address, you need to create an extended access list. Refer to **deny** or **permit** in the two modes. Use the **show access-lists** command to display the ACL configurations.

**Configuration** The following example creates a standard access list named std-acl.

**Examples**

```
Ruijie(config)# ip access-list standard std-acl
Ruijie(config-std-nacl)# show access-lists
ip access-list standard std-acl
Ruijie(config-std-nacl)#
```

The following example creates an extended ACL numbered 123:

```
Ruijie(config)# ip access-list extended 123
Ruijie(config-ext-nacl)# show access-lists
ip access-list extended 123
```

#### Related Commands

| Command           | Description        |
|-------------------|--------------------|
| show access-lists | Displays all ACLs. |

**Platform** N/A  
**Description**

## 1.17 ip access-list log-update interval

Use this command to configure the interval at which the IPv4 access list log is updated. Use the **no** form of this command to restore the default interval.

**ip access-list log-update interval** *time*

**no ip access-list log-update interval**

#### Parameter Description

| Parameter   | Description                                                                                                                                                                                                                                                                                                                  |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>time</i> | For the access rule with the <b>log</b> option, a packet hit is output at the interval of ACL logging output. The interval ranges from 0 to 1440 minutes, and the default value is 5 minutes, indicating that the ACL matching log of a specified flow is output every 5 minutes. 0 indicates that no ACL logging is output. |

**Defaults** The default interval at which the IPv4 access list log is updated is 5 minutes.

**Command mode** Global configuration mode

**Usage Guide** Use this command to configure the interval at which the IPv4 access list log is updated.

**Configuration Examples** The following example configures the interval for the IPv4 access list log update to 10 minutes:

#### Examples

```
Ruijie# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)# ip access-list log-update interval 10
```

#### Related Commands

| Command        | Description                               |
|----------------|-------------------------------------------|
| ip access-list | Defines an IPv4 access list.              |
| deny           | Defines the <b>deny</b> access entries.   |
| permit         | Defines the <b>permit</b> access entries. |

|              |                                                |
|--------------|------------------------------------------------|
| show running | Displays running configurations of the device. |
|--------------|------------------------------------------------|

**Platform**  
**Description**

N/A

## 1.18 ip access-list counter

Use this command to enable the counter of packets matching the standard or extended IP access list. Use the **no** form of this command to disable the counter.

**ip access-list counter** { *id* | *name* }

**no ip access-list counter** { *id* | *name* }

| Parameter Description | Parameter   | Description                                                                                                                     |
|-----------------------|-------------|---------------------------------------------------------------------------------------------------------------------------------|
|                       | <i>id</i>   | IP access list number:<br>Standard IP access list: 1 to 99, 1300 to 1999;<br>Extended IP access list: 100 to 199, 2000 to 2699. |
|                       | <i>name</i> | Name of the IP access list.                                                                                                     |

**Defaults** The counter of packets matching the standard or extended IP access list is disabled by default.

**Command mode** Global configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example enables the counter of packets matching the standard access list:

```
Ruijie(config)# ip access-list counter std-acl
Ruijie(config-std-nacl)# show access-lists
ip access-list standard std-acl
 10 permit 195.168.6.0 0.0.0.255 (999 matches)
 20 deny host 5.5.5.5 time-range tm (2000 matches)
```

The following example disables the counter of packets matching the standard access list:

```
Ruijie(config)#no ip access-list counter std-acl
Ruijie(config-std-nacl)# show access-lists
ip access-list standard std-acl
 10 permit 195.168.6.0 0.0.0.255
 20 deny host 5.5.5.5 time-range tm
```

| Related Commands | Command           | Description                |
|------------------|-------------------|----------------------------|
|                  | show access-lists | Displays all access lists. |

**Platform**  
**Description** N/A

## 1.19 ip access-list new-fragment-mode

Use this command to switch the matching mode of fragmentation packets of standard or extended IP access list. Use the **no** form of this command to restore the default matching mode of fragmentation packets.

**ip access-list new-fragment-mode** { *id* | *name* }

**no ip access-list new-fragment-mode** { *id* | *name* }

| Parameter Description | Parameter   | Description                                                                                                                     |
|-----------------------|-------------|---------------------------------------------------------------------------------------------------------------------------------|
|                       | <i>id</i>   | IP access list number:<br>Standard IP access list: 1 to 99, 1300 to 1999;<br>Extended IP access list: 100 to 199, 2000 to 2699. |
|                       | <i>name</i> | Name of the standard or extended IP access list                                                                                 |

**Defaults** Use the default matching mode of fragmentation packets. By default, if the access rule is tagged with fragment, it will match all packets except for the first fragmentation packet. If the access rule is not tagged with fragment, all packets including the first and all subsequent fragmentation packets will be matched.

**Command mode** Global configuration mode

**Usage Guide** This command is used to switch and control the fragmentation packet matching mode of access rules.

**Configuration Examples** The following example switches the fragmentation packet matching mode of the ACL 100 from the default mode to a new mode:

```
Ruijie(config)#ip access-list new-fragment-mode 100
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform**  
**Description** N/A

## 1.20 ip access-list resequence

Use this command to resequence a standard or extended IP access list. Use the **no** form of this

command to restore the default order of access entries.

**ip access-list resequence** { *id* | *name* } *start-sn* *inc-sn*

**no ip access-list resequence** { *id* | *name* }

| Parameter Description | Parameter       | Description                                                                                                                     |
|-----------------------|-----------------|---------------------------------------------------------------------------------------------------------------------------------|
|                       | <i>id</i>       | IP access list number:<br>Standard IP access list: 1 to 99, 1300 to 1999;<br>Extended IP access list: 100 to 199, 2000 to 2699. |
|                       | <i>name</i>     | Name of the standard or extended IP access list                                                                                 |
|                       | <i>start-sn</i> | Start sequence number. Range: 1 to 2147483647                                                                                   |
|                       | <i>inc-sn</i>   | Increment of the sequence number. Range: 1 to 2147483647                                                                        |

**Defaults**      *start-sn*: 10  
                  *inc-sn*: 10

**Command mode**      Global configuration mode

**Usage Guide**      Use this command to change the order of the access entries.

**Configuration Examples**      The following example resequences entries of ACL1:

**Examples**      Before the configuration:

```
Ruijie# show access-lists
ip access-list standard 1
10 permit host 192.168.4.12
20 deny any any
```

After the configuration:

```
Ruijie# config
Ruijie(config)# ip access-list resequence 1 21 43
Ruijie(config)# exit
Ruijie# show access-lists
ip access-list standard 1
21 permit host 192.168.4.12
64 deny any any
```

| Related Commands | Command           | Description                 |
|------------------|-------------------|-----------------------------|
|                  | show access-lists | Displays all access lists.. |

**Platform Description**      N/A

## 1.21 ipv6 access-list

Use this command to create an IPv6 access list and to place the device in IPv6 access list configuration mode. Use the **no** form of this command to remove the access list.

**ipv6 access-list** *name*

**no ipv6 access-list** *name*

| Parameter Description | Parameter   | Description                   |
|-----------------------|-------------|-------------------------------|
|                       | <i>name</i> | Name of the IPv6 access list. |

**Defaults** N/A

**Command mode** Global configuration mode

**Usage Guide** To filter the IPv6 packets through the access list, you need to define an IPv6 access list by using the **ipv6 access-list** command.

**Configuration** The following example creates an IPv6 access list named v6-acl:

**Examples**

```
Ruijie(config)# ipv6 access-list v6-acl
Ruijie(config-ipv6-nacl)# show access-lists
ipv6 access-list extended v6-acl
Ruijie(config-ipv6-nacl)#
```

| Related Commands | Command           | Description                |
|------------------|-------------------|----------------------------|
|                  | show access-lists | Displays all access lists. |

**Platform** N/A

**Description**

## 1.22 ipv6 access-list counter

Use this command to enable the counter of packets matching the IPv6 access list. Use the **no** form of this command to disable the counter.

**ipv6 access-list counter** *name*

**no ipv6 access-list counter** *name*

| Parameter Description | Parameter   | Description                   |
|-----------------------|-------------|-------------------------------|
|                       | <i>name</i> | Name of the IPv6 access list. |

|                     |                                                                                                                                     |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------|
| <b>Defaults</b>     | -                                                                                                                                   |
| <b>Command mode</b> | Global configuration mode                                                                                                           |
| <b>Usage Guide</b>  | Use this command to enable the counter of packets matching the IPv6 access list to monitor the IPv6 packets matching and filtering. |

**Configuration** The following example enables the counter of packets matching the IPv6 access list named v6-acl:

**Examples**

```
Ruijie(config)# ipv6 access-list v6-acl
Ruijie(config-ipv6-nacl)# show access-lists
ipv6 access-list acl-v6
 10 permit icmp any any (7 matches)
 20 deny tcp any any (7 matches)
```

The following example disables the counter of packets matching the IPv6 access list named v6-acl:

```
Ruijie(config)#no ipv6 access-list v6-acl counter
Ruijie(config-ipv6-nacl)# show access-lists
ipv6 access-list acl-v6
 10 permit icmp any any
 20 deny tcp any any
```

**Related Commands**

| Command           | Description                |
|-------------------|----------------------------|
| show access-lists | Displays all access lists. |

**Platform** N/A  
**Description**

## 1.23 ipv6 access-list log-update interval

Use this command to configure the interval at which the IPv6 access list log is updated. Use the **no** form of this command to restore the default interval.

**ipv6 access-list log-update interval** *time*

**no ipv6 access-list log-update interval**

**Parameter Description**

| Parameter   | Description                                                                                                                                                                                                                                                                                                                     |
|-------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>time</i> | For the access rule with the <b>logging</b> option, a packet hit is output at the interval of ACL logging output. The interval ranges from 0 to 1440 minutes, and the default value is 5 minutes, indicating that the ACL matching log of a specific flow is output every 5 minutes. 0 indicates that no ACL logging is output. |



**Defaults** By default, the value is 5 minutes.

**Command mode** Global configuration mode

**Usage Guide** Use this command to configure the interval at which the IPv6 access list log is updated.

**Configuration Examples** The following example configures the interval for the IPv6 access list log update to 10 minutes:

```
Ruijie# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)# ipv6 access-list log-update interval 9
```

**Related Commands**

| Command          | Description                                        |
|------------------|----------------------------------------------------|
| ipv6 access-list | Defines an IPv6 access list.                       |
| deny             | Defines the <b>deny</b> access entries.            |
| permit           | Defines the <b>permit</b> access entries.          |
| show running     | Displays the running configurations of the device. |

**Platform Description** N/A

## 1.24 ipv6 access-list resequence

Use this command to resequence an IPv6 access list. Use the **no** form of this command to restore the default order of access entries.

**ipv6 access-list resequence** *name start-sn inc-sn*

**no ipv6 access-list resequence** *name*

**Parameter Description**

| Parameter       | Description                                              |
|-----------------|----------------------------------------------------------|
| <i>name</i>     | Name of the IPv6 access list                             |
| <i>start-sn</i> | Start sequence number. Range: 1 to 2147483647            |
| <i>inc-sn</i>   | Increment of the sequence number. Range: 1 to 2147483647 |

**Defaults** *start-sn*: 10  
*inc-sn*: 10

**Command mode** Global configuration mode

**Usage Guide** Use this command to change the order of the access entries.

**Configuration** The following example resequences entries of IPv6 access list "v6-acl":

**Examples** Before the configuration:

```
Ruijie# show access-lists
ipv6 access-list v6-acl
 10 permit ipv6 any any
 20 deny ipv6 any any
```

After the configuration:

```
Ruijie# config
Ruijie(config)# ipv6 access-list resequence v6-acl 21 43
Ruijie(config)# exit
Ruijie# show access-lists
ipv6 access-list v6-acl
 21 permit ipv6 any any
 64 deny ipv6 any any
```

**Related  
Commands**

| Command           | Description                 |
|-------------------|-----------------------------|
| show access-lists | Displays all access lists.. |

**Platform** N/A

**Description**

## 1.25 ipv6 traffic-filter

Use this command to apply an IPv6 access list on the specified interface/VXLAN. Use the **no** form of the command to remove the IPv6 access list from the interface.

**ipv6 traffic-filter** *name* { **in** | **out** }

**no ipv6 traffic-filter** *name* { **in** | **out** }

**Parameter  
Description**

| Parameter   | Description                             |
|-------------|-----------------------------------------|
| <i>name</i> | Name of IPv6 access list                |
| in          | Specifies filtering on inbound packets  |
| out         | Specifies filtering on outbound packets |

**Defaults** N/A

**Command  
mode** Interface configuration mode.

**Usage Guide** Use this command to apply the IPv6 access list to a specified interface to filter the inbound or outbound packets.

**Configuration** The following example applies the IPv6 access list named **v6-acl** to interface GigabitEthernet 0/1:

**Examples**

```
Ruijie(config)# interface GigaEthernet 0/1
Ruijie(config-if)# ipv6 traffic-filter v6-acl in
```

**Related  
Commands**

| Command           | Description                                   |
|-------------------|-----------------------------------------------|
| show access-group | Displays ACL configurations on the interface. |

**Platform** N/A

**Description**

## 1.26 list-remark

Use this command to write a helpful comment (remark) for an access list. Use the **no** form of this command to remove the remark.

**list-remark** *text*

**no list-remark**

**Parameter  
Description**

| Parameter   | Description                             |
|-------------|-----------------------------------------|
| <i>text</i> | Comment that describes the access list. |

**Defaults** The access lists have no remarks by default.

**Command  
mode** ACL configuration mode

**Usage Guide** You can use this command to write a helpful comment for a specified access list.

**Configuration** The following example writes a comment of “this acl is to filter the host 192.168.4.12” for ACL102.

**Examples**

```
Ruijie(config)# ip access-list extended 102
Ruijie(config-ext-nacl)# list-remark this acl is to filter the host
192.168.4.12
Ruijie(config-ext-nacl)# show access-lists
ip access-list extended 102
deny ip host 192.168.4.12 any
1000 hits
this acl is to filter the host 192.168.4.12
Ruijie(config-ext-nacl)#
```

**Related  
Commands**

| Command           | Description                  |
|-------------------|------------------------------|
| show access-lists | Displays all access lists.   |
| ip access-list    | Defines an IPv4 access list. |

|                         |                                                                         |
|-------------------------|-------------------------------------------------------------------------|
| access-list list remark | Adds a helpful comment for an access list in global configuration mode. |
|-------------------------|-------------------------------------------------------------------------|

**Platform** N/A

**Description**

## 1.27 mac access-group

Use this command to apply the specified MAC access list globally or on the specified interface.. Use the **no** form of the command to remove the access list from the interface.

**mac access-group** { *id* | *name* } { **in** | **out** }

**no mac access-group** { *id* | *name* } { **in** | **out** }

**Parameter Description**

| Parameter   | Description                                           |
|-------------|-------------------------------------------------------|
| <i>id</i>   | MAC access list number. The range is from 700 to 799. |
| <i>name</i> | Name of the MAC access list                           |
| in          | Specifies filtering on the inbound packets.           |
| out         | Specifies filtering on the outbound packets.          |

**Defaults** No MAC access list is applied by default.

**Command mode** Global/Interface configuration mode.

**Usage Guide** Use this command to apply the access list globally or to the interface to filter the inbound or outbound packets based on the MAC address.

**Configuration Examples** The following example applies the MAC access-list **accept\_00d0f8xxxxxx\_only** to interface GigabitEthernet 1/1:

```
Ruijie(config)# interface GigaEthernet 1/1
Ruijie(config-if-GigabitEthernet 1/1)# mac access-group
accept_00d0f8xxxxxx_only in
```

**Related Commands**

| Command           | Description                                      |
|-------------------|--------------------------------------------------|
| show access-group | Displays the ACL configuration on the interface. |

**Platform** N/A

**Description**

## 1.28 mac access-list extended

Use this command to create an extended MAC access list. Use the **no** form of the command to remove the MAC access list.

**mac access-list extended** { *id* | *name* }

**no mac access-list extended** { *id* | *name* }

| Parameter Description | Parameter   | Description                                                    |
|-----------------------|-------------|----------------------------------------------------------------|
|                       | <i>id</i>   | Extended MAC access list number. The range is from 700 to 799. |
|                       | <i>name</i> | Name of the extended MAC access list                           |

**Defaults** N/A

**Command mode** Global configuration mode.

**Usage Guide** To filter the packets based on the MAC address, you need to define a MAC access list by using the **mac access-list extended** command.

**Configuration Examples** The following command creates an extended MAC access list named mac-acl:

```
Ruijie(config)# mac access-list extended mac-acl
```

```
Ruijie(config-mac-nacl)# show access-lists mac access-list extended mac-acl
```

The following command creates an extended MAC access list numbered 704:

```
Ruijie(config)# mac access-list extended 704
```

```
Ruijie(config-mac-nacl)# show access-lists mac access-list extended 704
```

| Related Commands | Command           | Description                |
|------------------|-------------------|----------------------------|
|                  | show access-lists | Displays all access lists. |

**Platform** N/A

**Description**

## 1.29 mac access-list counter

Use this command to enable the counter of packet matching the extended MAC access list. Use the **no** form of this command to disable the counter.

**mac access-list counter** { *id* | *name* }

**no mac access-list counter** { *id* | *name* }

| Parameter Description | Parameter | Description                                                    |
|-----------------------|-----------|----------------------------------------------------------------|
|                       | <i>id</i> | Extended MAC access list number. The range is from 700 to 799. |

|             |                                      |
|-------------|--------------------------------------|
| <i>name</i> | Name of the extended MAC access list |
|-------------|--------------------------------------|

**Defaults** The counter is disabled by default.

**Command mode** Global configuration mode

**Usage Guide** Use this command to enable the counter of packets matching the MAC access list to monitor the packets matching and filtering.

**Configuration Examples** The following example enables the counter of packet matching the extended MAC access list named mac-acl:

```
Ruijie(config)# mac access-list counter mac-acl
Ruijie(config)# show access-lists
mac access-list extended mac-acl
 10 permit host 0023.56ac.8965 any (170 matches)
 20 deny any any etype-any cos 6 (239 matches)
```

The following example disables the counter of packet matching the extended MAC access list named mac-acl:

```
Ruijie(config)#no mac access-list counter mac-acl
Ruijie(config)# show access-lists
mac access-list extended mac-acl
 10 permit host 0023.56ac.8965 any
 20 deny any any etype-any cos 6
```

**Related Commands**

| Command           | Description                |
|-------------------|----------------------------|
| show access-lists | Displays all access lists. |

**Platform Description** N/A

## 1.30 mac access-list resequence

Use this command to resequence an extended MAC access list. Use the **no** form of this command to restore the default order of access entries.

**mac access-list resequence** { *id* | *name* } *start-sn inc-sn*

**no mac access-list resequence** { *id* | *name* }

**Parameter Description**

| Parameter   | Description                                  |
|-------------|----------------------------------------------|
| <i>id</i>   | Extended MAC access list number: 700 to 799. |
| <i>name</i> | Name of the extended MAC access list         |

|                 |                                                          |
|-----------------|----------------------------------------------------------|
| <i>start-sn</i> | Start sequence number. Range: 1 to 2147483647            |
| <i>inc-sn</i>   | Increment of the sequence number. Range: 1 to 2147483647 |

**Defaults**      *start-sn*: 10  
*inc-sn*: 10

**Command mode**      Global configuration mode

**Usage Guide**      Use this command to change the order of the access entries.

**Configuration**      The following example resequences entries of extended MAC access list "mac-acl":

**Examples**      Before the configuration:

```
Ruijie# show access-lists
mac access-list extended mac-acl
 10 permit any any etype-any
 20 deny any any etype-any
```

After the configuration:

```
Ruijie# config
Ruijie(config)# mac access-list resequence exp-acl 21 43
Ruijie(config)# exit
Ruijie# show access-lists
mac access-list extended mac-acl
 21 permit any any etype-any
 64 deny any any etype-any
```

**Related Commands**

| Command           | Description                 |
|-------------------|-----------------------------|
| show access-lists | Displays all access lists.. |

**Platform**      N/A

**Description**

## 1.31 permit

One or multiple **permit** conditions are used to determine whether to forward or discard the packet. In ACL configuration mode, you can modify the existent ACL or configure according to the protocol details.

1. Standard IP ACL

```
[ sn ] permit {source source-wildcard | host source | any | interface idx } [ time-range tm-range-name] [ log ]
```

2. Extended IP ACL

```
[ sn ] permit protocol source source-wildcard destination destination-wildcard [ [precedence
```

*precedence* ] [ **tos** *tos* ] | [ **dscp** *dscp* ] ] [ **fragment** ] [ **range** *lower upper* ] [ **time-range** *time-range-name* ] [ **log** ]

Extended IP ACLs of some important protocols:

Internet Control Message Protocol (ICMP)

[ *sn* ] **permit icmp** { *source source-wildcard* | **host** *source* | **any** } { *destination destination-wildcard* | **host** *destination* | **any** } [ *icmp-type* ] [ [ *icmp-type* [ *icmp-code* ] ] ] [ *icmp-message* ] ] [ [ **precedence** *precedence* ] [ **tos** *tos* ] | [ **dscp** *dscp* ] ] [ **fragment** ] [ **time-range** *time-range-name* ]

Transmission Control Protocol (TCP)

[ *sn* ] **permit tcp** { *source source-wildcard* | **host** *Source* | **any** } { *destination destination-wildcard* | **host** *destination* | **any** } ] [ [ **precedence** *precedence* ] [ **tos** *tos* ] | [ **dscp** *dscp* ] ] [ **fragment** ] [ **range** *lower upper* ] [ **time-range** *time-range-name* ] [ **match-all** *tcp-flag* | **established** ]

User Datagram Protocol (UDP)

[ *sn* ] **permit udp** { *source source-wildcard* | **host** *source* | **any** } { *destination destination-wildcard* | **host** *destination* | **any** } [ [ **precedence** *precedence* ] [ **tos** *tos* ] | [ **dscp** *dscp* ] ] [ **fragment** ] [ **range** *lower upper* ] [ **time-range** *time-range-name* ]

### 3. Extended MAC ACL

[*sn*] **permit** { **any** | **host** *source-mac-address* | *source-mac-address mask* } { **any** | **host** *destination-mac-address* | *destination-mac-address mask* } [ *ethernet-type* ] [ **cos** [ *out* ] [ **inner** *in* ] ]

### 4. Extended expert ACL

[ *sn* ] **permit** [ **protocol** | [ *ethernet-type* ] [ **cos** [ *out* ] [ **inner** *in* ] ] ] [ **VID** [ *out* ] [ **inner** *in* ] ] { *source source-wildcard* | **host** *source* | **any** } { **host** *source-mac-address* | **any** } { *destination destination-wildcard* | **host** *destination* | **any** } { **host** *destination-mac-address* | **any** } [ [ **precedence** *precedence* ] [ **tos** *tos* ] | [ **dscp** *dscp* ] ] [ **fragment** ] [ **range** *lower upper* ] [ **time-range** *time-range-name* ]

When you select the Ethernet-type field or cos field:

[*sn*] **permit** { *ethernet-type* | **cos** [ *out* ] [ **inner** *in* ] ] [ **VID** [ *out* ] [ **inner** *in* ] ] { *source source-wildcard* | **host** *source* | **any** } { **host** *source-mac-address* | **any** } { *destination destination-wildcard* | **host** *destination* | **any** } { **host** *destination-mac-address* | **any** } [ **time-range** *time-range-name* ]

When you select the protocol field:

[ *sn* ] **permit protocol** [ **VID** [ *out* ] [ **inner** *in* ] ] { *source source-wildcard* | **host** *Source* | **any** } { **host** *source-mac-address* | **any** } { *destination destination-wildcard* | **host** *destination* | **any** } { **host** *destination-mac-address* | **any** } [ [ **precedence** *precedence* ] [ **tos** *tos* ] | [ **dscp** *dscp* ] ] [ **fragment** ] [ **range** *lower upper* ] [ **time-range** *time-range-name* ]

Extended expert ACLs of some important protocols:

Internet Control Message Protocol (ICMP)

[ *sn* ] **permit icmp** [ **VID** [ *out* ] [ **inner** *in* ] ] { *source source-wildcard* | **host** *source* | **any** } { **host** *source-mac-address* | **any** } { *destination destination-wildcard* | **host** *destination* | **any** } { **host** *destination-mac-address* | **any** } [ *icmp-type* ] [ [ *icmp-type* [ *icmp-code* ] ] ] [ *icmp-message* ] ] [ [ **precedence** *precedence* ] [ **tos** *tos* ] | [ **dscp** *dscp* ] ] [ **fragment** ] [ **time-range** *time-range-name* ]

Transmission Control Protocol (TCP)

[ *sn* ] **permit tcp** [ **VID** [ *out* ] [ **inner** *in* ] ] { *source source-wildcard* | **host** *Source* | **any** } { **host** *source-mac-address* | **any** } { *destination destination-wildcard* | **host** *destination* | **any** } { **host** *destination-mac-address* | **any** } [ [ **precedence** *precedence* ] [ **tos** *tos* ] | [ **dscp** *dscp* ] ] [ **fragment** ] [ **range** *lower upper* ] [ **time-range** *time-range-name* ] [ **match-all** *tcp-flag* | **established** ]



User Datagram Protocol (UDP)

```
[ sn ] permit udp [ VID [ out ] [ inner in ] ] { source source-wildcard | host source | any } { host source-mac-address | any } { destination destination-wildcard | host destination | any } { host destination-mac-address | any } [ [precedence precedence ] [ tos tos ] | [dscp dscp] ] [ fragment ] [ range lower upper ] [ time-range time-range-name ]
```

Address Resolution Protocol (ARP)

```
[sn] permit arp {vid vlan-id} [host source-mac-address | any] [host destination-mac-address | any] {sender-ip sender-ip-wildcard | host sender-ip | any} {sender-mac sender-mac-wildcard | host sender-mac | any} {target-ip target-ip-wildcard | host target-ip | any}
```

5. Extended IPv6 ACL

```
[sn] permit protocol {source-ipv6-prefix / prefix-length | any | host source-ipv6-address} {destination-ipv6-prefix / prefix-length | any | host destination-ipv6-address} [dscp dscp] [flow-label flow-label] [fragment] [range lower upper] [time-range time-range-name]
```

Extended IPv6 ACLs of some important protocols:

Internet Control Message Protocol (ICMP)

```
[sn] permit icmp {source-ipv6-prefix / prefix-length | any source-ipv6-address | host} {destination-ipv6-prefix / prefix-length | host destination-ipv6-address | any} [icmp-type] [[icmp-type [icmp-code]] | [icmp-message]] [dscp dscp] [flow-label flow-label][fragment] [time-range time-range-name]
```

Transmission Control Protocol (TCP)

```
[ sn ] permit tcp { source-ipv6-prefix / prefix-length | host source-ipv6-address | any } { destination-ipv6-prefix / prefix-length | host destination-ipv6-address | any } [ dscp dscp ] [ flow-label flow-label ] [ fragment ] [ range lower upper ] [ time-range time-range-name ] [ match-all tcp-flag | established ]
```

User Datagram Protocol (UDP)

```
[ sn ] permit udp { source-ipv6-prefix / prefix-length | host source-ipv6-address | any } { destination-ipv6-prefix / prefix-length | host destination-ipv6-address | any } [ dscp dscp ] [ flow-label flow-label ] [ fragment ] [ range lower upper ] [ time-range time-range-name ]
```

**Parameter Description**

| Parameter            | Description                                                                                                                                                                                                                                            |
|----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| sn                   | ACL entry sequence number                                                                                                                                                                                                                              |
| permit               | If matched, access is permitted.                                                                                                                                                                                                                       |
| source               | Specify the source IP address (host address or network address).                                                                                                                                                                                       |
| source-wildcard      | It can be discontinuous, for example, 0.255.0.32.                                                                                                                                                                                                      |
| protocol             | IP protocol number. It can be one of EIGRP, GRE, IPINIP, IGMP, NOS, OSPF, ICMP, UDP, TCP, and IP. It can also be a number representing the IP protocol between 0 and 255. The important protocols such as ICMP, TCP, and UDP are described separately. |
| destination          | Specify the destination IP address (host address or network address).                                                                                                                                                                                  |
| destination-wildcard | Wildcard of the destination IP address. It can be discontinuous, for example, 0.255.0.32.                                                                                                                                                              |
| fragment             | Packet fragment filtering                                                                                                                                                                                                                              |

|                                 |                                                                                                      |
|---------------------------------|------------------------------------------------------------------------------------------------------|
| precedence                      | Specify the packet priority.                                                                         |
| precedence                      | Packet precedence value (0 to 7)                                                                     |
| range                           | Layer4 port number range of the packet.                                                              |
| lower                           | Lower limit of the layer4 port number.                                                               |
| upper                           | Upper limit of the layer4 port number.                                                               |
| time-range                      | Time range of packet filtering                                                                       |
| time-range-name                 | Time range name of packet filtering                                                                  |
| tos                             | Specify type of service.                                                                             |
| tos                             | ToS value (0 to 15)                                                                                  |
| icmp-type                       | ICMP message type (0 to 255)                                                                         |
| icmp-code                       | ICMP message type code (0 to 255)                                                                    |
| icmp-message                    | ICMP message type name                                                                               |
| host source-mac-address         | Source physical address                                                                              |
| host destination-mac-address    | Destination physical address                                                                         |
| VID vid                         | Match the specified VID.                                                                             |
| ethernet-type                   | Ethernet type                                                                                        |
| match-all                       | Match all the bits of the TCP flag.                                                                  |
| tcp-flag                        | Match the TCP flag.                                                                                  |
| established                     | Match the RST or ACK bits, not other bits of the TCP flag.                                           |
| <i>source-ipv6-prefix</i>       | Source IPv6 network address or network type                                                          |
| <i>destination-ipv6-prefix</i>  | Destination IPv6 network address or network type                                                     |
| <i>prefix-length</i>            | Prefix mask length                                                                                   |
| <i>source-ipv6-address</i>      | Source IPv6 address                                                                                  |
| <i>destination-ipv6-address</i> | Destination IPv6 address                                                                             |
| <b>dscp</b>                     | Differential Service Code Point                                                                      |
| <i>dscp</i>                     | Code value, within the range of 0 to 63                                                              |
| flow-label                      | Flow label                                                                                           |
| <i>flow-label</i>               | Flow label value, within the range of 0 to 1048575.                                                  |
| <i>protocol</i>                 | For the IPv6, the field can be <code>ipv6   icmp   tcp   udp</code> and number in the range 0 to 255 |
| time-range                      | Time range of the packet filtering                                                                   |
| <i>time-range-name</i>          | Time range name of the packet filtering                                                              |

**Defaults** N/A

**Command mode** ACL configuration mode.

**Usage Guide** Use this command to configure the **permit** conditions for the ACL in ACL configuration mode.

**Configuration Examples** The following example shows how to create and display an Expert Extended ACL. This expert ACL permits all the TCP packets with the source IP address 192.168.4.12 and the source MAC address

001300498272.

```
Ruijie(config)#expert access-list extended exp-acl
Ruijie(config-exp-nacl)#permit tcp host 192.168.4.12 host 0013.0049.8272
any any
Ruijie(config-exp-nacl)#deny any any any any
Ruijie(config-exp-nacl)#show access-lists
expert access-list extended exp-acl
10 permit tcp host 192.168.4.12 host 0013.0049.8272 any any
20 deny any any any any
Ruijie(config-exp-nacl)#
```

This example shows how to use the extended IP ACL. The purpose is to permit the host with the IP address 192.168.4.12 to provide services through the TCP port 100 and apply the ACL to interface gigabitethernet 1/1. The configuration procedure is as below:

```
Ruijie(config)# ip access-list extended 102
Ruijie(config-ext-nacl)# permit tcp host 192.168.4.12 eq 100 any
Ruijie(config-ext-nacl)# show access-lists
ip access-list extended 102
10 permit tcp host 192.168.4.12 eq 100 any
Ruijie(config-ext-nacl)#exit
Ruijie(config)#interface gigabitethernet 1/1
Ruijie(config-if)#ip access-group 102 in
Ruijie(config-if)#
```

This example shows how to use the extended MAC ACL. The purpose is to permit the host with the MAC address 0013.0049.8272 to send Ethernet frames through the type 100 and apply the ACL to interface gigabitethernet 1/1. The configuration procedure is as below:

```
Ruijie(config)#mac access-list extended 702
Ruijie(config-mac-nacl)#permit host 0013.0049.8272 any aarp
Ruijie(config-mac-nacl)#show access-lists
mac access-list extended 702
10 permit host 0013.0049.8272 any aarp 702
Ruijie(config-mac-nacl)#exit
Ruijie(config)#interface gigabitethernet 1/1
Ruijie(config-if)#mac access-group 702 in
```

This example shows how to use the standard IP ACL. The purpose is to permit the host with the IP address 192.168.4.12 and apply the ACL to interface gigabitethernet 1/1. The configuration procedure is as below:

```
Ruijie(config)#ip access-list standard std-acl
Ruijie(config-std-nacl)#permit host 192.168.4.12
Ruijie(config-std-nacl)#show access-lists
ip access-list standard std-acl
 10 permit host 192.168.4.12
Ruijie(config-std-nacl)#exit
Ruijie(config)# interface gigabitethernet 1/1
Ruijie(config-if)# ip access-group std-acl in
```

This example shows how to use the extended IPV6 ACL. The purpose is to permit the host with the IP address 192.168.4.12 and apply the ACL to interface gigabitethernet 1/1. The configuration procedure is as below:

```
Ruijie(config)#ipv6 access-list extended v6-acl
Ruijie(config-ipv6-nacl)#11 permit ipv6 host ::192.168.4.12 any
Ruijie(config-ipv6-nacl)# show access-lists
ipv6 access-list extended v6-acl
11 permit ipv6 host ::192.168.4.12 any
Ruijie(config-ipv6-nacl)# exit
Ruijie(config)#interface gigabitethernet 1/1
Ruijie(config-if)#ipv6 traffic-filter v6-acl in
```

#### Related Commands

| Command             | Description                                             |
|---------------------|---------------------------------------------------------|
| show access-lists   | Displays all access lists.                              |
| ipv6 traffic-filter | Applies the extended IPv6 access list to the interface. |
| ip access-group     | Applies the IP access list to the interface.            |
| mac access-group    | Applies the extended MAC access list to the interface.  |
| ip access-list      | Defines an IP access list.                              |
| mac access-list     | Defines an extended MAC access list.                    |
| expert access-list  | Define an extended expert access list.                  |
| ipv6 access-list    | Defines an extended IPv6 access list.                   |
| deny                | Defines the <b>deny</b> access entry.                   |

**Platform** N/A

**Description**

## 1.32 redirect destination interface

Use this command to redirect the traffic matching the access list to the specified interface. Use the **no** form of this command to remove the redirection.

**redirect destination interface** *interface-name* **acl** { *id* | *name* } **in**

**no redirect destination interface** *interface-name* **acl** { *id* | *name* } **in**

#### Parameter Description

| Parameter             | Description        |
|-----------------------|--------------------|
| <i>interface-name</i> | Redirect interface |
| <i>id</i>             | Access list number |
| <i>name</i>           | Access list name   |

**Defaults** No redirection is configured.

**Command mode** Interface configuration mode

**Usage Guide** Use this command to configure access redirection, namely, to redirect the traffic matching the access list to the specified interface. You can monitor the operation of a specified access list by using this command.

**Configuration** The following example configures access redirection.

**Examples**

```
Ruijie(config)# interface gigabitEthernet 0/3
Ruijie(config-if-GigabitEthernet 0/3)# redirect destination interface
gigabitEthernet 0/2 acl1 in
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A

## 1.33 remark

Use this command to write a helpful comment (remark) for an entry in the access list. Use the **no** form of this command to remove the remark.

**[sn] remark text**

**no [sn] remark**

**Parameter Description**

| Parameter   | Description                              |
|-------------|------------------------------------------|
| <i>text</i> | Comment that describes the access entry. |
| <i>sn</i>   | The sequence number of the ACE.          |

**Defaults** The access entries have no remarks.

**Command mode** ACL configuration mode.

**Usage Guide** Use this command to write a helpful comment for an access entry. Up to 100 characters are allowed in the remark. Two access entry remarks in one access list entry are not allowed. Removing an access entry may delete the remark for it as well. If *sn* is specified, the remark is applied to the specified ACE; otherwise, the remark is applied to the

last ACE.

**Configuration** The following example writes remarks for the entry in extended IP access list 102.

**Examples**

```
Ruijie(config)# ip access-list extended 102
Ruijie(config-ext-nacl)# remark first_remark
Ruijie(config-ext-nacl)# 10 permit tcp 1.1.1.1 0.0.0.0 2.2.2.2 0.0.0.0
Ruijie(config-ext-nacl)# 10 remark second_remark
Ruijie(config-ext-nacl)# permit tcp 3.3.3.3 0.0.0.0 4.4.4.4 0.0.0.0
Ruijie(config-ext-nacl)# end
Ruijie#
```

**Related  
Commands**

| Command           | Description                |
|-------------------|----------------------------|
| show access-lists | Displays all access lists. |
| ip access-list    | Defines an IP access list. |

**Platform** N/A

**Description**

## 1.34 security access-group

Use this command to configure an interface secure channel. Use the **no** form of this command to restore to default settings.

**security access-group** { *id* | *name* }

**no security access-group**

**Parameter  
Description**

| Parameter   | Description              |
|-------------|--------------------------|
| <i>id</i>   | Access list number.      |
| <i>name</i> | Name of the access list. |

**Defaults** N/A

**Command  
mode** Interface configuration mode

**Usage Guide** If a device is configured authentications such as 802.1x or Web authentication, the user cannot access the external network before passing the authentication. You can use this command to configure a secure channel for the users on the specified interface to access the external network without authentication.

**Configuration** The following example configures a secure channel on interface GigaEthernet 1/1:

**Examples**

```
Ruijie(config)# interface GigaEthernet 1/1
Ruijie(config-if-GigabitEthernet 1/1)# security access-group 1
```

**Related  
Commands**

| Command       | Description                                |
|---------------|--------------------------------------------|
| show secu-acl | Displays the secure channel configuration. |

**Platform** N/A  
**Description**

## 1.35 security global access-group

Use this command to configure the global secure channel.

**security global access-group** { *id* | *name* }

**no security global access-group**

**Parameter  
Description**

| Parameter   | Description              |
|-------------|--------------------------|
| <i>id</i>   | Access list number.      |
| <i>name</i> | Name of the access list. |

**Defaults** -

**Command mode** Global configuration mode

**Usage Guide** If a device is configured authentications such as 802.1x or Web authentication, the user cannot access the external network before passing the authentication. You can use this command to configure a global secure channel for some users to access the external network without authentication.

**Configuration Examples** The following example configures a global secure channel.

```
Ruijie(config)#security global access-group 1
```

**Related  
Commands**

| Command       | Description                                 |
|---------------|---------------------------------------------|
| show secu-acl | Displays the secure channel configuration.. |

**Platform** N/A  
**Description**

## 1.36 security uplink enable

Use this command to configure an exceptional interface of the global secure channel.

**security uplink enable**

**no security uplink enable****Parameter  
Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** The global secure channel takes effect on all interfaces by default.

**Command mode** Interface configuration mode.

**Usage Guide** The global secure channel takes effect on all interfaces by default. To disable the secure channel function on some interfaces, you can use this command to configure the interface as exceptional.

**Configuration Examples** The following example configures interface GigaEthernet 1/1 as an exceptional interface of the secure channel.

```
Ruijie(config)# interface GigaEthernet 1/1
Ruijie(config-if-GigabitEthernet 1/1)# security uplink enable
```

**Related  
Commands**

| Command       | Description                                |
|---------------|--------------------------------------------|
| show secu-acl | Displays the secure channel configuration. |

**Platform Description** N/A

## 1.37 show access-group

Use this command to display the access list applied to the interface.

**show access-group [ interface *interface-name* ]**

**Parameter  
Description**

| Parameter        | Description    |
|------------------|----------------|
| <i>interface</i> | Interface name |

**Defaults** -

**Command mode** Privileged EXEC mode

**Usage Guide** Use this command to display the access list configuration on the specified interface. If no interface is specified, access list configuration on all interfaces is displayed.

**Configuration** Ruijie# show access-group



**Examples**

```
ip access-list standard ipstd3
Applied On interface GigabitEthernet 0/1.
ip access-list standard ipstd4
Applied On interface GigabitEthernet 0/2.
ip access-list extended 101
Applied On interface GigabitEthernet 0/3.
ip access-list extended 102
Applied On interface GigabitEthernet 0/8.
```

**Related  
Commands**

| Command             | Description                                      |
|---------------------|--------------------------------------------------|
| ip access-group     | Applies the IP access list to the interface.     |
| mac access-group    | Applies the MAC access list to the interface.    |
| expert access-group | Applies the expert access list to the interface. |
| ipv6 traffic-filter | Applies the IPv6 access list to the interface.   |

**Platform** N/A**Description**

## 1.38 show access-lists

Use this command to display all access lists or the specified access list.

**show access-lists** [ *id* | *name* ] [ **summary** ]

**Parameter  
Description**

| Parameter   | Description                |
|-------------|----------------------------|
| <i>id</i>   | Access list number         |
| <i>name</i> | Name of the IP access list |
| summary     | Access list summary        |

**Defaults** N/A**Command  
mode** Global configuration mode**Usage Guide** Use this command to display the specified access list. If no access list number or name is specified, all the access lists are displayed.**Configuration****Examples**

```
Ruijie# show access-lists n_acl
ip access-list standard n_acl
Ruijie# show access-lists 102
ip access-list extended 102
```

```
Ruijie# show access-lists
ip access-list standard n_acl
ip access-list extended 101
permit icmp host 192.168.1.1 any log (1080 matches)
  permit tcp host 1.1.1.1 any established
  deny ip any any (80021 matches)
mac access-list extended mac_acl
expert access-list extended exp_acl
ipv6 access-list extended v6_acl
petmit ipv6 ::192.168.4.12 any (100 matches)
deny any any (9 matches)
```

**Related Commands**

| Command            | Description                             |
|--------------------|-----------------------------------------|
| ip access-list     | Defines an IP access list.              |
| mac access-list    | Defines an extended MAC access list.    |
| expert access-list | Defines an extended expert access list. |
| ipv6 access-list   | Defines an extended IPv6 access list.   |

**Platform** N/A

**Description**

### 1.39 show expert access-group

Use this command to display the expert access list applied to the interface.

**show expert access-group [ interface *interface-name* ]**

**Parameter Description**

| Parameter             | Description    |
|-----------------------|----------------|
| <i>interface-name</i> | Interface name |

**Defaults** -

**Command mode** Privileged EXEC mode

**Usage Guide** Use this command to display the expert access list configured on the interface. If no interface is specified, the expert access lists on all interfaces are displayed.

**Configuration Examples**

```
Ruijie# show expert access-group interface gigabitethernet 0/2
expert access-group ee in
Applied On interface GigabitEthernet 0/2.
```

**Related**

| Command | Description |
|---------|-------------|
|---------|-------------|

| Commands           |                                         |
|--------------------|-----------------------------------------|
| expert access-list | Defines an extended expert access list. |

**Platform** N/A

**Description**

## 1.40 show ip access-group

Use this command to display the standard and extended IP access lists on the interface.

**show ip access-group [ interface *interface-name* ]**

| Parameter Description | Parameter                       | Description    |
|-----------------------|---------------------------------|----------------|
|                       | <i>Interface Interface-name</i> | Interface name |

**Defaults** N/A

**Command mode** Privileged EXEC mode

**Usage Guide** Use this command to display the standard and extended IP access lists configured on the interface. If no interface is specified, the standard and extended IP access lists on all interfaces are displayed.

**Configuration Examples**

```
Ruijie# show ip access-group interface gigabitethernet 0/1
ip access-group aaa in
Applied On interface GigabitEthernet 0/1.
```

| Related Commands | Command        | Description                |
|------------------|----------------|----------------------------|
|                  | ip access-list | Defines an IP access list. |

**Platform** N/A

**Description**

## 1.41 show ipv6 traffic-filter

Use this command to display the IPv6 access list on the interface.

**show ipv6 traffic-filter [ interface *interface-name* ]**

| Parameter Description | Parameter             | Description    |
|-----------------------|-----------------------|----------------|
|                       | <i>interface-name</i> | Interface name |

**Defaults**

-

**Command mode**

Privileged EXEC mode

**Usage Guide**

Use this command to display the IPv6 access list configured on the interface. If no interface is specified, the IPv6 access lists on all interfaces are displayed.

**Configuration**

```
Ruijie# show ipv6 traffic-filter interface gigabitethernet 0/4
```

**Examples**

```
ipv6 access-group v6 in
Applied On interface GigabitEthernet 0/4.
```

**Related Commands**

| Command          | Description                  |
|------------------|------------------------------|
| ipv6 access-list | Defines an IPv6 access list. |

**Platform**

N/A

**Description**

## 1.42 show mac access-group

Use this command to display the MAC access list on the interface.

**show mac access-group [ interface *interface-name* ]**

**Parameter Description**

| Parameter             | Description    |
|-----------------------|----------------|
| <i>interface-name</i> | Interface name |

**Defaults**

N/A

**Command mode**

Privileged EXEC mode

**Usage Guide**

Use this command to display the MAC access list configured on the interface. If no interface is specified, the MAC access lists on all interfaces are displayed.

**Configuration**

```
Ruijie# show mac access-group interface gigabitethernet 0/3
```

**Examples**

```
mac access-group mm in
Applied On interface GigabitEthernet 0/3.
```

**Related Commands**

| Command         | Description                |
|-----------------|----------------------------|
| mac access-list | Defines a MAC access list. |

**Platform** N/A  
**Description**

## 1.43 show redirect interface

Use this command to display the access redirection configuration.

**show redirect [ interface *interface-name* ]**

| Parameter Description | Parameter                              | Description    |
|-----------------------|----------------------------------------|----------------|
|                       | <b>interface</b> <i>interface-name</i> | Interface name |

**Defaults** N/A

**Command mode** Privileged EXEC mode

**Usage Guide** Use this command to display the access redirection configuration on the interface. If no interface is specified, the access redirection configuration on all interfaces is displayed.

**Configuration Examples** The following example displays the access redirection configuration on interface GigabitEthernet 0/3.

```
Ruijie #show redirect interface gigabitEthernet 0/3
acl redirect configuration on interface gigabitEthernet 0/3
redirect destination interface gigabitEthernet 0/3 acl 1 in
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 1.44 svi router-acls enable

Use this command to enable the SVI filter only for the Layer3 packets. Use the **no** form of this command to disable this function.

**svi router-acls enable**

**no svi router-acls enable**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|-----------------------|-----------|-------------|

|     |      |
|-----|------|
| N/A | N/A. |
|-----|------|

**Defaults** The SVI filter takes effect for both Layer2 and Layer3 packets by default.

**Command mode** Global configuration mode

**Usage Guide** Use this command to make the SVI filter take effect only for the Layer3 packets,

**Configuration** The following example enables the SVI filter only for the Layer3 packets.

**Examples** Ruijie(config)#svi router-acls enable

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 2 QoS Commands

### 2.1 class

Use this command to add reference to an existing class map. Use the **no** form of this command to remove the class from the policy map.

**class** *class-map-name*

**no class** *class-map-name*

| Parameter   | Parameter             | Description               |
|-------------|-----------------------|---------------------------|
| Description | <i>class-map-name</i> | Reference to a class map. |

**Defaults** The function is disabled by default.

**Command Mode** Policy configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example adds reference to the class map named cmap1.

```
Ruijie(config)# class-map cmap1
Ruijie(config-cmap)# match ip dscp 5
Ruijie(config-cmap)# exit

Ruijie(config)# policy-map pmap1
Ruijie(config-pmap)# class cmap1
Ruijie(config-pmap-c)# end
```

| Related Commands | Command                                                                                  | Description              |
|------------------|------------------------------------------------------------------------------------------|--------------------------|
|                  | <b>show policy-map</b> [ <i>policy-map-name</i> [ <b>class</b> <i>class-map-name</i> ] ] | Displays the policy map. |

**Platform Description** N/A

## 2.2 class map

Use this command to create a class map and enter class-map configuration mode. Use the **no** or **default** form of this command to remove a class map.

**class-map** *class-map-name*

**no class-map** *class-map-name*

**default class-map** *class-map-name*

| Parameter   | Parameter             | Description                                                           |
|-------------|-----------------------|-----------------------------------------------------------------------|
| Description | <i>class-map-name</i> | Class map name. The class map name can be a maximum of 31 characters. |

**Defaults** None

**Command Mode** Global configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example creates a class map named cm\_acl to match an access list named me.

```
Ruijie(config)# mac access-list extended me
Ruijie(config-ext-macl)# permit host 1111.2222.3333 any
Ruijie(config-ext-macl)# exit

Ruijie(config)# class-map cm_acl
Ruijie(config-cmap)# match access-group me
Ruijie(config-cmap)# exit
```

The following example creates a class map named cm\_dscp to match DHCP 8, 16 and 24.

```
Ruijie(config)# class-map cm_dscp
Ruijie(config-cmap)# match ip dscp 8 16 24
Ruijie(config-cmap)# exit
```

| Related Commands | Command                                         | Description             |
|------------------|-------------------------------------------------|-------------------------|
|                  | <b>show class-map</b> [ <i>class-map-name</i> ] | Displays the class map. |

**Platform Description** N/A



## 2.3 drr-queue bandwidth

Use this command to set the DRR queue weight ratio. Use the **no** or **default** form of this command to restore the default setting.

**drr-queue bandwidth** *weight1...weight8*

**no drr-queue bandwidth**

**default drr-queue bandwidth**

| Parameter   | Parameter                | Description                                                                                                                                                                                                                                             |
|-------------|--------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Description | <i>weight1...weight8</i> | 8 queue weights. The default queue weight ratio is 1:1:1:1:1:1:1:1. For the products supporting the SP scheduling policy, the weight range is from 0 to 15. For the products not supporting the SP scheduling policy, the weight range is from 1 to 15. |

**Defaults** The default queue weight ratio is 1:1:1:1:1:1:1:1.

**Command Mode** Global configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example configures the DRR queue weight ratio to 1:1:1:2:2:4:6:8.

### Examples

```
Ruijie(config)# drr-queue bandwidth 1:1:1:2:2:4:6:8
```

| Related Commands | Command                     | Description                           |
|------------------|-----------------------------|---------------------------------------|
|                  | <b>show mls qos queuing</b> | Displays information about the queue. |

**Platform Description** N/A

## 2.4 match

Use this command to define a match criteria in class map configuration mode. Use the **no** form of this command to remove the match criteria.

**match** { **access-group** *access\_list* | **ip** { **dscp** *dscp-vlaue-list* | **precedence** *pre-vlaue-list* } }

**no match** { **access-group** *access\_list* | **ip** { **dscp** *dscp-vlaue-list* | **precedence** *pre-vlaue-list* } }

| Parameter   | Parameter                              | Description                                                                                               |
|-------------|----------------------------------------|-----------------------------------------------------------------------------------------------------------|
| Description | <b>access-group</b> <i>access_list</i> | Identifies a numbered or named access list as the match criteria.                                         |
|             | <b>ip dscp</b> <i>dscp-vlaue-list</i>  | Identifies DSCP values as the match criteria. Multiple DSCP can be configured. The range is from 0 to 63. |

**Defaults** None

**Command Mode** Class map configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example creates a class map named cmap1 to match DSCP 20, 22, 24 and 30.

```
Ruijie(config)# class-map cmap1
Ruijie(config-cmap)# match ip dscp 20 22 24 30
```

**Related Commands**

| Command                                         | Description             |
|-------------------------------------------------|-------------------------|
| <b>show class-map</b> [ <i>class-map-name</i> ] | Displays the class map. |

**Platform** N/A

**Description**

## 2.5 mls qos cos

Use this command to configure the CoS value of an interface. Use the **no** form of this command to restore the default setting.

**mls qos cos** *default-cos*

**no mls qos cos**

| Parameter          | Parameter          | Description                                           |
|--------------------|--------------------|-------------------------------------------------------|
| <b>Description</b> | <i>default-cos</i> | CoS value of the interface. The range is from 0 to 7. |

**Defaults** The default CoS value is 0.

**Command Mode** Interface configuration mode.

**Usage Guide** N/A

**Configuration Examples** The following example configures the default CoS value to 7.

```
Ruijie(config)# interface gigabitethernet 1/1
Ruijie(config-if)# mls qos cos 7
```

**Related Commands**

| Command                                           | Description                                      |
|---------------------------------------------------|--------------------------------------------------|
| <b>show mls qos interface</b> <i>interface-id</i> | Displays information of the specified interface. |

**Platform** N/A  
**Description**

## 2.6 mls qos map cos-dscp

Use this command to map the CoS value to the DSCP value. Use the **no** or **default** form of this command to restore the default CoS-DSCP mapping.

**mls qos map cos-dscp** *dscp1...dscp8*  
**no mls qos map cos-dscp**  
**default mls qos map cos-dscp**

| Parameter          | Parameter            | Description                                          |
|--------------------|----------------------|------------------------------------------------------|
| <b>Description</b> | <i>dscp1...dscp8</i> | Specifies the DSCP value. The range is from 0 to 63. |

**Defaults** By default, the CoS 0, 1, 2, 3, 4, 5, 6, 7 is mapped to the DSCP 0, 8, 16, 24, 32, 40, 48, 56 respectively.

**Command Mode** Global configuration mode

**Usage Guide** N/A

**Configuration Examples**

```
Ruijie(config)# mls qos map cos-dscp 8 10 16 18 24 26 32 34
```

| Related Commands | Command                           | Description                    |
|------------------|-----------------------------------|--------------------------------|
|                  | <b>show mls qos maps cos-dscp</b> | Displays the CoS-DSCP mapping. |

**Platform** N/A  
**Description**

## 2.7 mls qos map dscp-cos

Use this command to map the DSCP value to the CoS value. Use the **no** or **default** form of this command to restore the default DSCP-CoS mapping.

**mls qos map dscp-cos** *dscp-list to cos*  
**no mls qos map dscp-cos**  
**default mls qos map dscp-cos**

| Parameter          | Parameter        | Description                           |
|--------------------|------------------|---------------------------------------|
| <b>Description</b> | <i>dscp-list</i> | DSCP list. The range is from 0 to 63. |
|                    | <i>cos</i>       | CoS value. The range is from 0 to 7.  |

**Defaults** The default DSCP-CoS mapping is listed below:

|             |              |               |               |               |               |               |               |
|-------------|--------------|---------------|---------------|---------------|---------------|---------------|---------------|
| DSCP<br>0-7 | DSCP<br>8-15 | DSCP<br>16-23 | DSCP<br>24-31 | DSCP<br>32-39 | DSCP<br>40-47 | DSCP<br>48-55 | DSCP<br>56-63 |
| CoS 0       | CoS 1        | CoS 2         | CoS 3         | CoS 4         | CoS 5         | CoS 6         | CoS 7         |

**Command** Global configuration mode.

**Mode**

**Usage Guide** N/A

**Configuration Examples** Ruijie(config)# mls qos map dscp-cos 8 10 16 18 to 0

| Related         | Command                       | Description                    |
|-----------------|-------------------------------|--------------------------------|
| <b>Commands</b> | show mls qos maps<br>dscp-cos | Displays the DSCP-CoS mapping. |

**Platform** N/A

**Description**

## 2.8 mls qos map ip-precedence-dscp

Use this command to map the IP precedence to the DSCP value. Use the **no** or **default** form of this command to restore the default IP-precedence to DSCP mapping.

**mls qos map ip-precedence-dscp** *dscp1 ... dscp8*

**no mls qos map ip-precedence-dscp**

**default mls qos map ip-precedence-dscp**

| Parameter          | Parameter            | Description                           |
|--------------------|----------------------|---------------------------------------|
| <b>Description</b> | <i>dscp1...dscp8</i> | DSCP list. The range is from 0 to 63. |

**Defaults** By default, the IP precedence 0, 1, 2, 3, 4, 5, 6, 7 is mapped to the DSCP 0, 8, 16, 24, 32, 40, 48, 56 respectively.

**Command** Global configuration mode.

**Mode**

**Usage Guide** N/A

**Configuration Examples** Ruijie(config)# mls qo map ip-prec -dscp 8 10 16 18 24 26 32 34

| <b>Related Commands</b> | <b>Command</b>                       | <b>Description</b>                          |
|-------------------------|--------------------------------------|---------------------------------------------|
|                         | <b>show mls qos maps ip-pre-dscp</b> | Displays the IP-precedence to DSCP mapping. |

**Platform** N/A  
**Description**

## 2.9 mls qos scheduler

Use this command to configure the output queue scheduling. Use the **no** or **default** form of this command to restore the default scheduler.

**mls qos scheduler [ sp | rr | wrr | drr ]**  
**no mls qos scheduler**

| <b>Parameter Description</b> | <b>Parameter</b> | <b>Description</b>                                          |
|------------------------------|------------------|-------------------------------------------------------------|
|                              | <b>sp</b>        | Specifies the absolute priority scheduling.                 |
|                              | <b>rr</b>        | Specifies the round-robin scheduling.                       |
|                              | <b>wrr</b>       | Specifies the frame count weighted round-robin scheduling.  |
|                              | <b>drr</b>       | Specifies the frame length weighted round-robin scheduling. |

**Defaults** The default queue scheduling is **wrr** globally, no queue scheduling is configured on the interface.

**Command Mode** Global configuration mode.

**Usage Guide** N/A

**Configuration Examples** The following example specifies the sp scheduling.

```
Ruijie(config)# mls qos scheduler sp
```

| <b>Related Commands</b> | <b>Command</b>                | <b>Description</b>                    |
|-------------------------|-------------------------------|---------------------------------------|
|                         | <b>show mls qos scheduler</b> | Displays the output queue scheduling. |

**Platform** N/A  
**Description**

## 2.10 mls qos trust

Use this command to configure the trust mode on an interface. Use the **no** or **default** form of this command to restore the default setting.

**mls qos trust { cos | dscp | ip-precedence }**  
**no mls qos trust**  
**default mls qos trust**

| Parameter   | Parameter            | Description                      |
|-------------|----------------------|----------------------------------|
| Description | <b>cos</b>           | Specifies the CoS trust mode.    |
|             | <b>dscp</b>          | Specifies the DSCP trust mode.   |
|             | <b>ip-precedence</b> | Specifies the IP-PRE trust mode. |

**Defaults** No trust mode is configured by default.

**Command** Interface configuration mode.

**Mode**

**Usage Guide** N/A

**Configuration** The following example configures the CoS trust mode.

**Examples**

```
Ruijie(config)# interface gigabitethernet 1/1
Ruijie(config-if)# mls qos trust cos
```

| Related  | Command                                           | Description                                     |
|----------|---------------------------------------------------|-------------------------------------------------|
| Commands | <b>show mls qos interface</b> <i>interface-id</i> | Displays the specified interface configuration. |

**Platform** N/A

**Description**

## 2.11 police

Use this command to configure traffic policing for a class map in a policy map. Use the **no** form of this command to remove traffic policing for the class map.

**police** *rate-bps burst-byte* [ **exceed-action** { **drop** | **dscp** *new-dscp* | **cos** *new-cos* [ **none-tos** ] } ]

**no police**

| Parameter   | Parameter                   | Description                                                                                                                                  |
|-------------|-----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|
| Description | <i>rate-bps</i>             | Bandwidth limit value per second (The unit is KBits). This value depends on the specific product.                                            |
|             | <i>burst-byte</i>           | Burst traffic limit value (The unit is KBytes). This value depends on the specific product.                                                  |
|             | <b>drop</b>                 | Drops the packet. This is available only when the packet exceeds the bandwidth limit.                                                        |
|             | <b>dscp</b> <i>new-dscp</i> | Modifies the DSCP value of the packet. This is available only when the packet exceeds bandwidth limit. The DSCP value range is from 0 to 63. |
|             | <b>cos</b> <i>new-cos</i>   | Modifies the CoS value of the packet. This is available only when the packet exceeds bandwidth limit. The CoS value range is from 0 to 7.    |

|                 |                              |
|-----------------|------------------------------|
| <b>none-tos</b> | Modifies the CoS value only. |
|-----------------|------------------------------|

**Defaults** No traffic policing is configured for the class map by default.

**Command Mode** Policy map class configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example configures traffic policing which modifies the DSCP value of the packet to 16 for class map "cm-acl" in policy map "pmap1".

```
Ruijie(config)# policy-map pmap1
Ruijie(config-pmap)# class cm-acl

Ruijie(config-pmap-c)# police 102400 4096 exceed-action dscp 16
```

| Related Commands | Command                                                                                  | Description                            |
|------------------|------------------------------------------------------------------------------------------|----------------------------------------|
|                  | <b>show policy-map</b> [ <i>policy-map-name</i> [ <b>class</b> <i>class-map-name</i> ] ] | Displays the policy map configuration. |

**Platform Description** N/A

## 2.12 policy map

Use the following command to create a policy map and enter policy map configuration mode. Use the **no** or **default** form of this command to remove the specified policy map.

**policy-map** *policy-map-name*

**no policy-map** *policy-map-name*

**default policy-map** *policy-map-name*

| Parameter Description | Parameter              | Description                                                             |
|-----------------------|------------------------|-------------------------------------------------------------------------|
|                       | <i>policy-map-name</i> | Policy map name. The policy map name can be a maximum of 31 characters. |

**Defaults** No policy map is configured by default.

**Command Mode** Global configuration mode.

**Usage Guide** N/A

**Configuration** The following example creates policy map “po”, and then adds a reference to class map “cmap1”.

**Examples** Sets the rate limit value to 10 Mbps, the burst traffic limit value to 256 Kbps, and discard packets which exceed the limit.

```
Ruijie(config)# policy-map po
Ruijie(config-pmap)# class cmap1
Ruijie(config-pmap-c)# police 10240 256 exceed-action drop
```

| Related Commands | Command                                                                                  | Description                            |
|------------------|------------------------------------------------------------------------------------------|----------------------------------------|
|                  | <b>show policy-map</b> [ <i>policy-map-name</i> [ <b>class</b> <i>class-map-name</i> ] ] | Displays the policy map configuration. |

**Platform** N/A

**Description**

## 2.13 priority-queue

Use this command to configure the output queue scheduling policy to SP. Use the **no** or **default** form of this command to restore the default queue scheduling policy.

**priority-queue**

**no priority-queue**

| Parameter          | Parameter | Description |
|--------------------|-----------|-------------|
| <b>Description</b> | N/A       | N/A         |

**Defaults** The default output queue scheduling policy is WRR.

**Command** Global configuration mode.

**Mode**

**Usage Guide** This command shares the same configuration with the **mls qos scheduler sp**. The **show run** command displays this configuration in the **mls qos scheduler sp** item instead of **priority-queue**.

**Configuration** The following example configures the output queue scheduling policy to SP.

**Examples**

```
Ruijie(config)# priority-queue
```

| Related Commands | Command                       | Description                                  |
|------------------|-------------------------------|----------------------------------------------|
|                  | <b>show mls qos scheduler</b> | Displays the output queue scheduling policy. |

**Platform** N/A

**Description**



## 2.14 priority-queue cos-map

Use this command to configure the mapping between the CoS value and the queue ID. Use the **no** or **default** form of this command to restore the default CoS mapping to the queue.

**priority-queue cos-map** *qid* *cos0* [*cos1* [*cos2* [*cos3* [*cos4* [*cos5* [*cos6* [*cos7*]]]]]]]

**no priority-queue cos-map**

**default priority-queue cos-map**

| Parameter   | Parameter            | Description                          |
|-------------|----------------------|--------------------------------------|
| Description | <i>qid</i>           | Queue ID. The range is from 1 to 8.  |
|             | <i>cos0 ... cos7</i> | CoS value. The range is from 0 to 7. |

**Defaults** The default mapping between the CoS value and the queue ID is listed below:

| Queue 1 | Queue 2 | Queue 3 | Queue 4 | Queue 5 | Queue 6 | Queue 7 | Queue 8 |
|---------|---------|---------|---------|---------|---------|---------|---------|
| CoS 0   | CoS 1   | CoS 2   | CoS 3   | CoS 4   | CoS 5   | CoS 6   | CoS 7   |

**Command** Global configuration mode.

**Mode**

**Usage Guide** N/A

**Configuration** The following example maps the CoS 3, 5 to the output queue 1.

**Examples**

```
Ruijie(config)#priority-queue cos-map 1 3 5
```

| Related  | Command                     | Description                 |
|----------|-----------------------------|-----------------------------|
| Commands | <b>show mls qos queuing</b> | Displays the output queues. |

**Platform** N/A

**Description**

## 2.15 qos mc-queue cos-map

This command is used to configure the mapping between CoS values of multicast queues.

**qos mc-queue cos-map** *cos0-qid* *cos1-qid* *cos2-qid* *cos3-qid* *cos4-qid* *cos5-qid* *cos6-qid* *cos7-qid*

**no qos mc-queue cos-map**

| Parameter   | Parameter       | Description                                                                                                       |
|-------------|-----------------|-------------------------------------------------------------------------------------------------------------------|
| Description | <i>cosN-qid</i> | Queue ID mapped by the packet whose CoS is N. The value of N ranges from 0 to 7, and queue ID ranges from 1 to 3. |

**Defaults** The default value is different from products.

**Command** Global configuration mode

**Mode**

**Usage Guide** In the case of default configuration, the relevant trust mode must be enabled. For example, packets can enter the default mapped queue only when CoS is trusted.

**Configuration Examples**

The following example sets the CoS 0, 1, 2, 3, 4, 5, 6, 7 to be mapped to the multicast queues 1 1 1 2 2 2 2 3 respectively.

```
Ruijie(config)# qos mc-queue cos-map 1 1 1 2 2 2 2 3
```

**Related Commands**

| Command                          | Description                                     |
|----------------------------------|-------------------------------------------------|
| <b>show qos mc-queue cos-map</b> | This command is used to view the queue mapping. |

**Platform** N/A  
**Description**

## 2.16 qos queue

Use this command to configure a minimum or maximum of the interface bandwidth to a queue. Use the **no** or **default** form of this command to remove the minimum or maximum of the interface bandwidth.

**qos queue** *queue-id* **bandwidth** { **minimum** | **maximum** } *bandwidth*

**no qos queue** *queue-id* **bandwidth** { **minimum** | **maximum** }

**default qos queue** *queue-id* **bandwidth** { **minimum** | **maximum** }

**Parameter Description**

| Parameter                                                                   | Description                                                                                                                                                 |
|-----------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>queue</b>                                                                | Configure the minimum or maximum of the interface bandwidth to the queue on the device supporting both unicast and multicast queue bandwidth configuration. |
| <i>queue-id</i>                                                             | Queue ID. The range is from 1 to 8.                                                                                                                         |
| <b>bandwidth</b><br>{ <b>minimum</b>   <b>maximum</b> }<br><i>bandwidth</i> | Bandwidth value. The value range depends on the specific product.                                                                                           |

**Defaults** No minimum or maximum of interface bandwidth to a queue is configured by default.

**Command Mode** Interface configuration mode

**Usage Guide** Support global configuration mode and interface configuration mode. Function that these two modes support is different.

**Configuration Examples** The following example configures the minimum interface bandwidth of queue 1 to 5 Mbps and the maximum to 10 Mbps; the minimum interface bandwidth of queue 2 to 1 Mbps and the maximum to 5

Mbps;

```
Ruijie(config)# interface gigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)# qos queue 1 bandwidth maximum 10240
Ruijie(config-if-GigabitEthernet 0/1)# qos queue 1 bandwidth minimum 5120
Ruijie(config-if-GigabitEthernet 0/1)# qos queue 2 bandwidth minimum 2048
```

| Related Commands | Command                                               | Description                                    |
|------------------|-------------------------------------------------------|------------------------------------------------|
|                  | <b>show qos bandwidth [ interfaces interface-id ]</b> | Displays the interface bandwidth of the queue. |

**Platform** N/A  
**Description**

## 2.17 queueing wred

Use this command to enable the WRED (Weighted Random Early Detection) function. Use the **no** or **default** form of this command to disable the WRED function.

**queueing wred**

**no queueing wred**

**default queueing wred**

| Parameter          | Parameter | Description |
|--------------------|-----------|-------------|
| <b>Description</b> | N/A       | N/A         |

**Defaults** WRED is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example enables WRED.

```
Ruijie(config)# queueing wred
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 2.18 rate-limit

Use this command to configure rate limiting on the interface. Use the **no** or **default** form of this command to remove rate limiting from the interface.

**rate-limit** { **input** | **output** } *bps burst-size*

**no rate-limit** { **input** | **output** }

**default rate-limit** { **input** | **output** }

| Parameter   | Parameter         | Description                                                                                       |
|-------------|-------------------|---------------------------------------------------------------------------------------------------|
| Description | <b>input</b>      | Configures input rate limiting.                                                                   |
|             | <b>output</b>     | Configures output rate limiting.                                                                  |
|             | <i>bps</i>        | Bandwidth limit value per second (The unit is KBits). This value depends on the specific product. |
|             | <i>burst-size</i> | Burst traffic limit value (The unit is KBytes). This value depends on the specific product.       |

**Defaults** Rate limiting is not configured by default.

**Command** Interface configuration mode.

**Mode**

**Usage Guide** N/A

**Configuration Examples** The following example configures the rate limit value to 10 Mbps, and the burst traffic limit value to 256 Kbps.

```
Ruijie(config)# interface gigabitethernet 1/3
Ruijie(config-if-GigabitEthernet 1/3)# rate-limit input 10240 256
```

| Related Commands | Command                                                                 | Description                                                |
|------------------|-------------------------------------------------------------------------|------------------------------------------------------------|
|                  | <b>show mls qos rate-limit</b> [ <b>interface</b> <i>interface-id</i> ] | Displays the rate limiting configuration of the interface. |

**Platform** N/A

**Description**

## 2.19 service-policy

Use this command to apply the policy map to the interface, the virtual group or globally. Use the **no** or **default** form of this command to remove the policy map.

**service-policy** { **input** | **output** } *policy-map-name*

**no service-policy** { **input** | **output** } *policy-map-name*

**default service-policy** { **input** | **output** } *policy-map-name*

| Parameter   | Parameter              | Description                                     |
|-------------|------------------------|-------------------------------------------------|
| Description | <i>policy-map-name</i> | Policy map name                                 |
|             | <b>input</b>           | Applies the policy map to the input direction.  |
|             | <b>output</b>          | Applies the policy map to the output direction. |

**Defaults** No policy map is configured on the interface or virtual group by default.

**Command Mode** Interface configuration mode, and virtual group configuration mode.

**Usage Guide** N/A

**Configuration Examples** The following example applies policy map “po” to the input direction of interface GigabitEthernet 1/3.

```
Ruijie(config)# interface gigabitethernet 1/3
Ruijie(config-if-GigabitEthernet 1/3)# service-policy input po
```

The following example applies policy map “po” to the output direction of virtual group 3.

```
Ruijie(config)# virtual-group 3
Ruijie(config-VirtualGroup)# service-policy output po
```

| Related Commands | Command                                    | Description                                                 |
|------------------|--------------------------------------------|-------------------------------------------------------------|
|                  | <b>show mls qos interface policers</b>     | Displays the policy map configuration on the interface.     |
|                  | <b>show mls qos virtual-group policers</b> | Displays the policy map configuration on the virtual group. |

**Platform Description** N/A

## 2.20 set

Use this command to configure the CoS, DSCP or VID value for the traffic. Use the **no** form of this command to remove the CoS, DSCP or VID value from the traffic.

```
set { ip dscp new-dscp | cos new-cos | [ none-tos ] vid new-vid }
no set { ip dscp | cos | vid }
```

| Parameter   | Parameter                      | Description                                                            |
|-------------|--------------------------------|------------------------------------------------------------------------|
| Description | <b>ip dscp</b> <i>new-dscp</i> | Configures the DSCP value for the traffic. The range is from 0 to 63.  |
|             | <b>cos</b> <i>new-cos</i>      | Configures the CoS value for the traffic. The range is from 0 to 7.    |
|             | <b>none-tos</b>                | Configures the CoS value only.                                         |
|             | <b>vid</b> <i>new-vid</i>      | Configures the VID value for the traffic. The range is from 1 to 4094. |

**Defaults** No CoS, DSCP or VID value is configured for the traffic in policy map class mode.

**Command Mode** Policy map class configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example creates policy map “pmap1”, and adds a reference to class map “cmap1”.

```
Ruijie(config)# policy-map pmap1
Ruijie(config-pmap)# class cmap1
```

The following example modifies the CoS value of the traffic to 3.

```
Ruijie(config-pmap-c)# set cos 3
```

| Related Commands | Command                                                                                               | Description                                             |
|------------------|-------------------------------------------------------------------------------------------------------|---------------------------------------------------------|
|                  | <b>show</b><br><b>policy-map</b> [ <i>policy-map-name</i><br>[ <b>class</b> <i>class-map-name</i> ] ] | Displays the policy map configuration on the interface. |

**Platform** N/A

**Description**

## 2.21 show class-map

Use this command to display the class map.

**show class-map** [ *class-map-name* ]

| Parameter          | Parameter             | Description     |
|--------------------|-----------------------|-----------------|
| <b>Description</b> | <i>class-map-name</i> | Class map name. |

**Defaults** None

**Command Mode** Privileged EXEC mode, global configuration mode, interface configuration mode.

**Usage Guide** N/A

**Configuration Examples** The following example displays all class maps.

```
Ruijie# show class-map
```

```
Class Map cmap1
  Match ip dscp 20 40
Class Map cmap2
  Match access-group 110
```

The fields in the output of this command are described in the following table.

| Field     | Description                   |
|-----------|-------------------------------|
| Class Map | Indicates the class map name. |
| Match     | Indicates the matched rule.   |

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 2.22 show mls qos interface

Use this command to display the QoS configuration of the interface.

**show mls qos interface** [ *interface-id* ] [ **policers** ]

| Parameter          | Parameter           | Description                                                |
|--------------------|---------------------|------------------------------------------------------------|
| <b>Description</b> | <i>interface-id</i> | Interface name                                             |
|                    | <b>policers</b>     | Displays the traffic policing configured on the interface. |

**Defaults** None

**Command Mode** Privileged EXEC mode, global configuration mode, interface configuration mode.

**Usage Guide** N/A

**Configuration Examples** The following example displays the QoS configuration of interface GigabitEthernet 1/3.

```
Ruijie# show mls qos interface gigabitethernet 1/3
Interface: GigabitEthernet 1/3
Ratelimit input: 10240 256
Ratelimit output: 51200 4096
Attached input policy-map: pmap1
Attached output policy-map:
Default trust: dscp
```

```
Default cos: 3
```

The fields in the output of this command are described in the following table.

| Field                      | Description                                |
|----------------------------|--------------------------------------------|
| Interface                  | Indicates the interface name.              |
| Ratelimit input            | Indicates the input rate limit value .     |
| Ratelimit output           | Indicates the output rate limit value .    |
| Attached input policy-map  | Indicates the input policy map .           |
| Attached output policy-map | Indicates the output policy map.           |
| Default trust              | Indicates the trust mode of the interface. |
| Default cos                | Indicates the default CoS value.           |

The following example displays the QoS configuration of all interfaces.

```
Ruijie# show mls qos interface policers
Interface: GigabitEthernet 0/1
Attached input policy-map: pmap1
Attached output policy-map: pmap1
Interface: GigabitEthernet 0/2
Attached input policy-map: p1
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 2.23 show mls qos maps

Use this command to display DSCP-CoS mapping, CoS-DSCP mapping and IP-PRE-DSCP mapping.

**show mls qos maps [ cos-dscp | dscp-cos | ip-prec-dscp ]**

| Parameter Description | Parameter           | Description                        |
|-----------------------|---------------------|------------------------------------|
|                       | <b>cos-dscp</b>     | Displays the CoS-DSCP mapping.     |
|                       | <b>dscp-cos</b>     | Displays the DSCP-CoS mapping.     |
|                       | <b>ip-prec-dscp</b> | Displays the IP-PRE-DSCP mapping.. |

**Defaults** None

**Command Mode** Privileged EXEC mode, global configuration mode, interface configuration mode.



**Usage Guide** N/A

**Configuration** The following example displays the CoS-DSCP mapping.

**Examples**

```
Ruijie# show mls qos maps cos-dscp
cos dscp
---- ----
0 0
1 8
2 16
3 24
4 32
5 40
6 48
7 56
```

The fields in the output of this command are described in the following table.

| Field | Description                       |
|-------|-----------------------------------|
| cos   | Indicates the CoS value.          |
| dscp  | Indicates the DSCP value mapped . |

The following example displays the DSCP- CoS mapping.

```
Ruijie# show mls qos maps dscp-cos
dscp cos      dscp cos      dscp cos      dscp cos
---- ----      ---- ----      ---- ----      ---- ----
0 0           1 0           2 0           3 0
4 0           5 0           6 0           7 0
8 1           9 1           10 1          11 1
12 1          13 1          14 1          15 1
16 2          17 2          18 2          19 2
20 2          21 2          22 2          23 2
24 3          25 3          26 3          27 3
28 3          29 3          30 3          31 3
32 4          33 4          34 4          35 4
36 4          37 4          38 4          39 4
40 5          41 5          42 5          43 5
```

|    |   |    |   |    |   |    |   |
|----|---|----|---|----|---|----|---|
| 44 | 5 | 45 | 5 | 46 | 5 | 47 | 5 |
| 48 | 6 | 49 | 6 | 50 | 6 | 51 | 6 |
| 52 | 6 | 53 | 6 | 54 | 6 | 55 | 6 |
| 56 | 7 | 57 | 7 | 58 | 7 | 59 | 7 |
| 60 | 7 | 61 | 7 | 62 | 7 | 63 | 7 |

The fields in the output of this command are described in the following table.

| Field | Description                      |
|-------|----------------------------------|
| dscp  | Indicates the DSCP value.        |
| cos   | Indicates the CoS value mapped . |

The following example displays the IP-PRE-DSCP mapping.

```
Ruijie# show mls qos maps ip-prec-dscp
ip-precedence dscp
-----
0 0
1 8
2 16
3 24
4 32
5 40
6 48
7 56
```

The fields in the output of this command are described in the following table.

| Field         | Description                       |
|---------------|-----------------------------------|
| ip-precedence | Indicates the IP-PRE value.       |
| dscp          | Indicates the DSCP value mapped . |

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description**

N/A

## 2.24 show mls qos queueing

Use this command to display the QoS queueing configuration.

**show mls qos queueing [ interface *interface-id* ]**

| Parameter   | Parameter                     | Description      |
|-------------|-------------------------------|------------------|
| Description | interface <i>interface-id</i> | ID of interface. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode, global configuration mode, interface configuration mode.

**Usage Guide** N/A

**Configuration Examples** The following example displays the QoS queuing configuration.

```
Ruijie# show mls qos queueing

Cos-queue map:

cos qid
--- ---
0 1
1 2
2 3
3 4
4 5
5 6
6 7
7 8

wrr bandwidth weights:

qid weights
--- -----
1 1
2 2
3 3
4 4
5 5
6 6
7 7
8 8
```

```

drp bandwidth weights:
qid weights
---
1 3
2 3
3 3
4 3
5 3
6 3
7 3
8 3

wfq bandwidth weights:
qid weights
---
1 3
2 4
3 5
4 6
5 7
6 8
7 9
8 10

Interface: GigabitEthernet 0/1
Wrr queue bandwidth: 1 1 1 1 2 2 2 2
Drr queue bandwidth: 1 1 2 2 2 2 4 4
Wfq queue bandwidth: 1 1 2 2 4 4 4 4
    
```

The fields in the output of this command are described in the following table.

| Field                 | Description                                                   |
|-----------------------|---------------------------------------------------------------|
| Cos-queue map         | Indicates the mapping between the CoS value and the queue ID. |
| wrr bandwidth weights | Indicates the WRR queue weight.                               |
| drr bandwidth weights | Indicates the DRR queue weight.                               |
| wfq bandwidth weights | Indicates the WFQ queue weight.                               |
| cos                   | Indicates the CoS value.                                      |

|                       |                                 |
|-----------------------|---------------------------------|
| qid                   | Indicates the queue ID.         |
| Weights               | Indicates the weight value      |
| Interface             | Interface name                  |
| wrr bandwidth weights | Indicates the WRR queue weight. |
| drr bandwidth weights | Indicates the DRR queue weight. |
| wfq bandwidth weights | Indicates the WFQ queue weight. |

```
Ruijie# show mls qos queueing interface gigabitEthernet 0/1
Interface: GigabitEthernet 0/1

Wrr queue bandwidth: 1 1 1 1 2 2 2 2
Drr queue bandwidth: 1 1 2 2 2 2 4 4
Wfq queue bandwidth: 1 1 2 2 4 4 4 4
```

|                       |                                 |
|-----------------------|---------------------------------|
| Interface             | Interface name                  |
| wrr bandwidth weights | Indicates the WRR queue weight. |
| drr bandwidth weights | Indicates the DRR queue weight. |
| wfq bandwidth weights | Indicates the WFQ queue weight. |

| Related  | Command | Description |
|----------|---------|-------------|
| Commands | N/A     | N/A         |

**Platform** N/A

**Description**

## 2.25 show mls qos rate-limit

Use this command to display the rate limiting configuration of the interface.

**show mls qos rate-limit** [ **interface** *interface-id* ]

| Parameter   | Parameter           | Description    |
|-------------|---------------------|----------------|
| Description | <i>interface-id</i> | Interface name |

**Defaults** N/A

**Command Mode** Privileged EXEC mode, global configuration mode, interface configuration mode.

**Usage Guide** N/A

**Configuration Examples** The following example displays the rate limiting configuration of all interfaces.

```
Ruijie# show mls qos rate-limit
Interface: GigabitEthernet 0/1

rate limit input Kbps = 10240 burst = 256
```

```
Interface: GigabitEthernet 0/3
rate limit output Kbps = 102400 burst = 4096
```

The fields in the output of this command are described in the following table.

| Field                                | Description                                                                      |
|--------------------------------------|----------------------------------------------------------------------------------|
| Interface                            | Indicates the interface name.                                                    |
| rate limit input Kbps = x burst = y  | Indicates the input rate limit value, and the input burst traffic limit value.   |
| rate limit output Kbps = x burst = y | Indicates the output rate limit value, and the output burst traffic limit value. |

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 2.26 show mls qos scheduler

Use this command to display the queue scheduling policy.

**show mls qos scheduler** [ **interface** *interface-id* ]

| Parameter          | Parameter                            | Description    |
|--------------------|--------------------------------------|----------------|
| <b>Description</b> | <b>interface</b> <i>interface-id</i> | Interface name |

**Defaults** None

**Command Mode** Privileged EXEC mode, global configuration mode, interface configuration mode.

**Usage Guide** N/A

**Configuration Examples** The following example displays the queue scheduling policy.

```
Ruijie# show mls qos scheduler
Global Multi-Layer Switching scheduling
Weighted Round Robin
Interface GigabitEthernet 0/1 Multi-Layer Switching scheduling:
Deficit Round Robin
```

The fields in the output of this command are described in the following table.

| Field                | Description                                   |
|----------------------|-----------------------------------------------|
| Weighted Round Robin | Indicates that the queue scheduling policy is |

|                     |                                                                                                                                                                                                 |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                     | <p>WRR.</p> <p>The other queue scheduling policies are listed as follows:</p> <p>SP: Strict Priority</p> <p>RR: Round Robin</p> <p>DRR: Deficit Round Robin</p> <p>WFQ: Weighted Fair Queue</p> |
| Interface           | Interface name                                                                                                                                                                                  |
| Deficit Round Robin | The queue scheduling is DRR                                                                                                                                                                     |

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 2.27 show mls qos virtual-group

Use this command to display the policy map configuration on the virtual group.

**show mls qos virtual-group** [ *virtual-group-number* | **policers** ]

| Parameter Description | Parameter                   | Description                                                  |
|-----------------------|-----------------------------|--------------------------------------------------------------|
|                       | <i>virtual-group-number</i> | Virtual group number. The range is from 1 to 128.            |
|                       | <b>policers</b>             | Displays the policy map configuration on all virtual groups. |

**Defaults** None

**Command Mode** Privileged EXEC mode, global configuration mode, interface configuration mode.

**Usage Guide** N/A

**Configuration Examples** The following example displays the policy map configuration on all virtual groups.

```
Ruijie# show mls qos virtual-group policers
Virtual-group: 1
Attached input policy-map: pmap1
Virtual-group: 20
Attached output policy-map: pmap2
```

The fields in the output of this command are described in the following table.

| Field | Description |
|-------|-------------|
|-------|-------------|

|                            |                                                               |
|----------------------------|---------------------------------------------------------------|
| Virtual-group              | Indicates the virtual group number.                           |
| Attached input policy-map  | Indicates the policy map applied on the input virtual group.  |
| Attached output policy-map | Indicates the policy map applied on the output virtual group. |

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 2.28 show policy-map

Use this command to display policy maps.

**show policy-map** [ *policy-map-name* [ **class** *class-map-name* ] ]

| Parameter          | Parameter              | Description     |
|--------------------|------------------------|-----------------|
| <b>Description</b> | <i>policy-map-name</i> | Policy map name |
|                    | <i>class-map-name</i>  | Class map name  |

**Defaults** None

**Command Mode** Privileged EXEC mode, global configuration mode, interface configuration mode.

**Usage Guide** N/A

**Configuration Examples** The following example displays configuration of policy map "pmap1".

```
Ruijie# show policy-map pmap1

Policy Map pmap1
  Class cmap1
    set ip dscp 16
  Class cmap2
    police 10240 256 exceed-action dscp 8
  Class cmap3
    police 512000 4096 exceed-action drop
```



The fields in the output of this command are described in the following table.

| Field      | Description                                                                             |
|------------|-----------------------------------------------------------------------------------------|
| Policy Map | Indicates the policy map name.                                                          |
| Class      | Indicates the class map name.                                                           |
| set        | Indicates that the DSCP value is modified in this example.                              |
| police     | Indicates bandwidth limit configuration and the action policy for the violated packets. |

The following example displays the action policy for the traffic of class map “cmap1” in policy map “pmap1”.

```
Ruijie#show policy-map pmap1 class cmap1
Class cmap1
set ip dscp 16
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 2.29 show qos bandwidth

Use this command to display the bandwidth configuration.

**show qos bandwidth** [ **interfaces** *interface-id* ]

| Parameter Description | Parameter           | Description    |
|-----------------------|---------------------|----------------|
|                       | <i>interface-id</i> | Interface name |

**Defaults** None

**Command Mode** Privileged EXEC mode, global configuration mode, interface configuration mode.

**Usage Guide** N/A

**Configuration Examples** The following example displays the bandwidth configuration of interface GigabitEthernet 0/1. (Taking the device supporting the bandwidth configuration of the unicast queue or the multicast queue for example. )

```
Ruijie# show qos bandwidth interface gigabitEthernet 0/1
```

```

Interface: GigabitEthernet 0/1
-----
uc-queue-id | minimum-bandwidth | maximum-bandwidth
-----
          1           5120           10240
          2             0             0
          3             0             0
          4             0             0
          5             0             0
          6             0             0
          7             0             0
          8             0             0
-----
Total ucast-queue minimum-bandwidth:           5120
Total ucast-queue maximum-bandwidth:          10240

Interface: GigabitEthernet 0/1
-----
mc-queue-id | minimum-bandwidth | maximum-bandwidth
-----
          1           1024           5120
          2             0             0
          3             0             0
          4             0            2048
-----
Total mcast-queue minimum-bandwidth:           1024
Total mcast-queue maximum-bandwidth:          5120
    
```

The fields in the output of this command are described in the following table.

| Field             | Description                                    |
|-------------------|------------------------------------------------|
| Interface         | Indicates the interface name.                  |
| queue-id          | Indicates the queue ID.                        |
| uc-queue-id       | Indicates the unicast queue ID.                |
| mc-queue-id       | Indicates the multicast queue ID.              |
| minimum-bandwidth | Indicates the minimum bandwidth configuration. |

|                                                                            |                                                                                                            |
|----------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------|
|                                                                            | The unit is Kbps.                                                                                          |
| maximum-bandwidth                                                          | Indicates the maximum bandwidth configuration. The unit is Kbps.                                           |
| Total queue minimum-bandwidth<br>Total queue maximum-bandwidth             | Indicates the total bandwidth of minimum and maximum when both unicast and multicast queues are displayed. |
| Total ucast-queue minimum-bandwidth<br>Total ucast-queue maximum-bandwidth | Indicates the total bandwidth of minimum and maximum when only unicast queue is displayed.                 |
| Total mcast-queue minimum-bandwidth<br>Total mcast-queue maximum-bandwidth | Indicates the total bandwidth of minimum and maximum when only multicast queue is displayed.               |

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 2.30 show qos mc-queue cos-map

This command is used to display the mapping between multicast queues and priorities.

**show qos mc-queue cos-map**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | -         | -           |

**Defaults** -

**Command Mode** Privileged EXEC mode, global configuration mode or interface configuration mode.

**Usage Guide** -

**Configuration Examples** The following example displays the mapping between multicast queues and priorities

```
Ruijie# show qos mc-queue cos-map
Cos to multicast queue map:
Cos      Queue id
-----  -
0        1
1        1
```

|   |   |
|---|---|
| 2 | 1 |
| 3 | 1 |
| 4 | 2 |
| 5 | 2 |
| 6 | 2 |
| 7 | 3 |

| Related Commands | Command         | Description     |
|------------------|-----------------|-----------------|
|                  | <b>Cos</b>      | Cos value       |
|                  | <b>Queue id</b> | Queue ID of Cos |

**Platform** N/A

**Description**

## 2.31 show qos mc-queue scheduler

This command is used to display the scheduling algorithm for multicast queues.

**show qos mc-queue scheduler [ interfaces *interface-id* ]**

| Parameter          | Parameter                                | Description                |
|--------------------|------------------------------------------|----------------------------|
| <b>Description</b> | <b>interfaces</b><br><i>interface-id</i> | Interface to be displayed. |

**Defaults** -

**Command Mode** Privileged EXEC mode, global configuration mode or interface configuration mode.

**Usage Guide** -

**Configuration Examples** The following example displays the scheduling algorithm for multicast queues.

```
Ruijie# show qos mc-queue scheduler
Multicast queue scheduler:
Interface GigabitEthernet 0/0 :
    Strict Priority

Interface GigabitEthernet 0/1 :
    Strict Priority

Interface GigabitEthernet 0/2 :
```

```

Weighted Round Robin
Queue id      Weight
-----      -
1             1
2             2
3             4
    
```

| Related Commands | Command                                                      | Description                                                                      |
|------------------|--------------------------------------------------------------|----------------------------------------------------------------------------------|
|                  | <b>qos mc-queue scheduler mode {sp   wrr}</b>                | This command is used to configure the scheduling algorithm for multicast queues. |
|                  | <b>qos mc-queue scheduler weight weight1 weight2 weight3</b> | This command is used to configure the WRR algorithm weight for multicast queues. |

**Platform** N/A  
**Description**

## 2.32 show queueing wred interface

Use this command to display WRED settings on the interface.

**show queueing wred interface** *interface-id*

| Parameter Description | Parameter           | Description    |
|-----------------------|---------------------|----------------|
|                       | <i>interface-id</i> | Interface name |

**Defaults** None

**Command mode** Privileged EXEC mode, global configuration mode, interface configuration mode.

**Usage Guide** N/A

**Configuration Examples** The following example displays the WRED settings on interface GigabitEthernet 0/1.

```

Ruijie#show queueing wred interface gigabitEthernet 0/1
-----
qid  min_1  prob_1  min_2  prob_2
-----
1    100    60      80     80
2    100    60      80     80
3    100    60      80     80
4    100    60      80     80
5    100    60      80     80
    
```

```

6   100  60      80   80
7   100  60      80   80
8   100  60      80   80

-----
cos  qid  threshold_id
-----
0   1    1
1   2    1
2   3    1
3   4    1
4   5    1
5   6    1
6   7    1
7   8    1
    
```

The fields in the output of this command are described in the following table.

| Field                | Description                                                        |
|----------------------|--------------------------------------------------------------------|
| qid                  | Indicates the queue ID.                                            |
| cos qid threshold_id | Indicates the mapping of CoS value, queue ID and threshold number. |

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A.    | N/A.        |

**Platform Description**

N/A.

### 2.33 show virtual-group

Use this command to display the member port in the virtual group.

**show virtual-group** [ *virtual-group-number* | **summary** ]

**Parameter Description**

| Parameter                   | Description                                       |
|-----------------------------|---------------------------------------------------|
| <i>virtual-group-number</i> | Virtual group number. The range is from 1 to 128. |
| <b>summary</b>              | Displays the member port in all virtual groups.   |

**Defaults**

N/A

**Command Mode**

Privileged EXEC mode, global configuration mode, interface configuration mode.

**Usage Guide** N/A

**Configuration** The following example displays the member port in all virtual groups.

**Examples**

```
Ruijie# show virtual-group summary

virtual-group      member
-----
1                  Gi0/1 Gi0/2
2                  Gi0/0
```

The fields in the output of this command are described in the following table.

| Field         | Description                                     |
|---------------|-------------------------------------------------|
| virtual-group | Indicates the virtual group number.             |
| member        | Indicates the member port in the virtual group. |

**Related**

**Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 2.34 virtual-group

Use this command to create a virtual group in global configuration mode.

Use this command to configure add an interface to a virtual group in interface configuration mode.

Use the **no** or **default** form of this command to remove a virtual group in global configuration mode.

Use the **no** or **default** form of this command to remove an interface from a virtual group in interface configuration mode.

**virtual-group** *virtual-group-number*

**no virtual-group** *virtual-group-number*

**default virtual-group** *virtual-group-number*

**Parameter**

**Description**

| Parameter                   | Description                                       |
|-----------------------------|---------------------------------------------------|
| <i>virtual-group-number</i> | Virtual group number. The range is from 1 to 128. |

**Defaults**

No virtual group is configured, or no interface is added to a virtual group, by default.

**Command**

Interface configuration mode, global configuration mode.

**Mode**

**Usage Guide**

The member port added to the virtual group must be a physical port or an aggregate port member.

The member ports of a virtual group must be on the same module of a chassis switch or on the same box switch.

**Configuration** The following example sets the interface gigabitEthernet 1/3 as the member of virtual group 3:

**Examples**

```
Ruijie(config)# interface gigabitEthernet 1/3
Ruijie(config-if)# virtual-group 3
```

**Related  
Commands**

| Command                                                                    | Description                               |
|----------------------------------------------------------------------------|-------------------------------------------|
| <b>show virtual-group</b> [ <i>virtual-group-number</i>   <b>summary</b> ] | Displays the virtual group configuration. |

**Platform** N/A  
**Description**

## 2.35 wrr-queue bandwidth

Use this command to set the WRR weight ratio. Use the **no** or **default** form of this command to restore the default setting.

**wrr-queue bandwidth** *weight1 ... weight8*

**no wrr-queue bandwidth**

**default wrr-queue bandwidth**

| Parameter          | Parameter                | Description                                                                                                                                                                                                                                                   |
|--------------------|--------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b> | <i>weight1...weight8</i> | 8 queue weights. The default queue weight ratio is 1:1:1:1:1:1:1:1.<br>For the products supporting the SP scheduling policy, the weight range is from 0 to 15.<br>For the products not supporting the SP scheduling policy, the weight range is from 1 to 15. |

**Defaults** The default queue weight ratio is 1:1:1:1:1:1:1:1.

**Command Mode** Global/Interface configuration mode

**Usage Guide** If the weight value is 0, the SP scheduling policy is applied.

**Configuration Examples** The following example configures the WRR queue weight ratio to 1:1:1:1:2:2:4:8.

**Examples**

```
Ruijie(config)# wrr-queue bandwidth 1 1 1 1 2 2 4 8
```

**Related  
Commands**

| Command                     | Description                             |
|-----------------------------|-----------------------------------------|
| <b>show mls qos queuing</b> | Displays the QoS queuing configuration. |



**Platform** N/A  
**Description**

## 2.36 wrr-queue cos-map

Use this command to map the CoS value to a threshold for a specified queue. Use the **no** or **default** form of this command to restore the default settings

**wrr-queue cos-map** *threshold\_id* *cos1* [*cos2* [*cos3* [*cos4* [*cos5* [*cos6* [*cos7* [*cos8* ]]]]]]]]

**no wrr-queue cos-map** *threshold\_id*

**default wrr-queue cos-map** *threshold\_id*

**Parameter Description**

| Parameter           | Description                                                                               |
|---------------------|-------------------------------------------------------------------------------------------|
| <i>threshold_id</i> | Threshold number. The range is from 1 to 2. Up to two threshold values can be configured. |
| <i>cos_N</i>        | CoS value. The range is from 0 to 7. Up to 8 CoS values can be configured.                |

**Defaults** All CoS values are mapped to the threshold 1.

**Command mode** Interface configuration mode.

**Usage Guide** DSCP-threshold mapping can be enabled by mapping DSCP-CoS to CoS-threshold. When all CoS values are mapped to one threshold on the interface, it changes the enabled WRED to RED.

**Configuration Examples** The following example enters the interface GigabitEthernet 1/3 to map CoS 1, 2 to threshold 2.

```
Ruijie(config)# interface gigabitethernet 1/3
Ruijie(config-if-GigabitEthernet 1/3)#wrr-queue cos-map 2 1 6
```

**Related Commands**

| Command                                                 | Description                                       |
|---------------------------------------------------------|---------------------------------------------------|
| <b>show queueing wred interface</b> <i>interface-id</i> | Displays the WRED configuration on the interface. |

**Platform** N/A.  
**Description**

## 2.37 wrr-queue random-detect min-threshold

Use this command to configure the minimum WRED drop threshold. Use the **no** or **default** form of this command to restore the default WRED drop threshold.

**wrr-queue random-detect min-threshold** *queue\_id* *thr1* [ *thr2* ]

**no wrr-queue random-detect min-threshold** *queue\_id*

**default wrr-queue random-detect min-threshold** *queue\_id*

| Parameter Description | Parameter       | Description                                                                               |
|-----------------------|-----------------|-------------------------------------------------------------------------------------------|
|                       | <i>queue_id</i> | Queue ID.                                                                                 |
|                       | <i>thrN</i>     | Up to two threshold values can be configured. The threshold value range is from 1 to 100. |

**Defaults** Two threshold values are configured, and the default threshold values are 100 and 80.

**Command mode** Interface configuration mode.

**Usage Guide** Because the maximum value of the configuration range is equal to the current higher threshold, you need to pay attention to the setting of the higher threshold when configuring the lower threshold.

**Configuration** The following example configures the low WRED drop thresholds to 60 and 70 for queue 1.

### Examples

```
Ruijie(config)# interface gigabitethernet 1/3
Ruijie(config-if-GigabitEthernet 1/3)# wrr-queue random-detect min-threshold
1 60 70
```

| Related Commands | Command                                                 | Description                                       |
|------------------|---------------------------------------------------------|---------------------------------------------------|
|                  | <b>show queueing wred interface</b> <i>interface-id</i> | Displays the WRED configuration on the interface. |

**Platform** N/A.  
**Description**

## 2.38 wrr-queue random-detect probability

Use this command to configure the WRED packet drop probability. Use the **no** or **default** form of this command to restore the WRED packet drop probability.

**wrr-queue random-detect probability** *queue\_id* *prob1* [ *prob2* ]

**no wrr-queue random-detect probability** *queue\_id*

**default wrr-queue random-detect probability** *queue\_id*

| Parameter Description | Parameter       | Description                                                                                 |
|-----------------------|-----------------|---------------------------------------------------------------------------------------------|
|                       | <i>queue_id</i> | Queue ID.                                                                                   |
|                       | <i>proN</i>     | Up to two probability values can be configured. The threshold value range is from 1 to 100. |

**Defaults** Two packet drop probability values are configured, and the default probability values are 100 and 80.

**Command mode** Interface configuration mode.

**Usage Guide** N/A

**Configuration Examples** The following example configures the WRED packet drop values to 50 and 70 for queue 1.

```
Ruijie(config)# interface gigabitethernet 1/3
Ruijie(config-if-GigabitEthernet 1/3)# wrr-queue random-detect probability 1
50 70
```

| Related Commands | Command                                                 | Description                                       |
|------------------|---------------------------------------------------------|---------------------------------------------------|
|                  | <b>show queueing wred interface</b> <i>interface-id</i> | Displays the WRED configuration on the interface. |

**Platform Description** N/A.



## 3 MMU Commands

### 3.1 mmu buffer-mode

Use this command to configure global buffer mode.

**mmu buffer-mode { normal | burst-enhance | qos-enhance | flowctrl-enhance }**

Use the **no** form of this command to restore the default setting.

**no mmu buffer-mode**

| Parameter Description | Parameter               | Description              |
|-----------------------|-------------------------|--------------------------|
|                       | <b>normal</b>           | Normal buffer mode       |
|                       | <b>burst-enhance</b>    | Burst enhancement        |
|                       | <b>qos-enhance</b>      | QoS enhancement          |
|                       | <b>flowctrl-enhance</b> | Flow control enhancement |

**Defaults** The default buffer mode varies from product.

**Command Mode** Global configuration mode

**Default Level** 14

**Usage Guide** N/A

**Configuration Examples** The following example configures the normal buffer mode.

```
Ruijie# mmu buffer-mode normal
```

**Platform Description** N/A

### 3.2 clear queue-buffer peaked

Use this command to clear the historical peak value of the queue buffer.

**clear queue-buffer peaked**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       |             |

**Command Mode** Privileged EXEC mode

**Default Level** 14

**Usage Guide** N/A

**Configuration** The following example clears the historical peak value of the buffer.

**Examples**

```
Ruijie# clear queue-buffer peaked
Ruijie#
```

**Platform Description** N/A

### 3.3 clear queue-counters

Use this command to clear queue statistics.

**clear queue-counter** [*interface interface \_id*]

| Parameter Description | Parameter           | Description |
|-----------------------|---------------------|-------------|
|                       | <i>interface_id</i> | Port Number |

**Command Mode** Privileged EXEC mode

**Default Level** 14

**Usage Guide** N/A

**Configuration** The following example clears all queue statistics.

**Examples**

```
Ruijie# clear queue-counter
Ruijie#
```

The following example clears queue statistics of an interface.

```
Ruijie# clear queue-counter Interface TenGigabitEthernet 1/9
Ruijie#
```

**Platform Description** N/A

### 3.4 mmu usage-warn-limit

Use this command to configure the usage warning threshold.

**mmu usage-warn-limit** [{ **unicast** } { *queue-id1* [*queue-id2* [*queue-idN*]]] **set** *value*

Use the **no** form of this command to restore the default setting.

**no mmu usage-warn-limit**

| Parameter Description | Parameter           | Description                                             |
|-----------------------|---------------------|---------------------------------------------------------|
|                       | <b>unicast</b>      | Performs buffer management on the output unicast queue. |
|                       | <i>queue-idN</i>    | Queue ID                                                |
|                       | <i>priority-idN</i> | Priority group ID                                       |
|                       | <i>value</i>        | Usage warning threshold.                                |

**Defaults** The default threshold is 0.

**Command Mode** Global configuration mode/Interface configuration mode

**Default Level** 14

**Usage Guide** If the buffer usage for the port group exceeds the global threshold, a warning log is printed. If the buffer usage for the queue exceeds the queue threshold, a warning log is printed. To avoid producing excessive logs, the warning log for a port group/queue is printed only once within 30 seconds.

**Configuration Examples** The following example sets the usage warning threshold globally.

```
Ruijie#config
Ruijie(config)# mmu usage-warn-limit set 90
```

The following example sets the usage warning threshold for unicast queue 3 and 8 to 80%.

```
Ruijie#config
Ruijie(config)# int te1/1
Ruijie(config-if)# mmu usage-warn-limit unicast 3 8 set 80
```

**Platform Description** N/A

### 3.5 mmu queue-guarantee

Use this command to configure the guaranteed buffer.

**mmu queue-guarantee output** { **unicast** } { *queue-id1* [*queue-id2* [*queue-idN*]] { **set** *value*

Use the **no** form of this command to restore the default setting.

**no mmu queue-guarantee output { unicast }**

| Parameter Description | Parameter        | Description                                                 |
|-----------------------|------------------|-------------------------------------------------------------|
|                       | <b>output</b>    | Performs buffer management on the output queue.             |
|                       | <b>unicast</b>   | Performs buffer management on the output unicast queue.     |
|                       | <i>queue-idN</i> | Queue ID                                                    |
|                       | <i>value</i>     | Sets the number of guaranteed buffer, in the unit of cells. |

**Defaults** The default varies with different products.

**Command Mode** Interface configuration mode

**Default Level** 14

**Usage Guide** This command is executed in different ways on different devices.

**Configuration Examples** The following example configures guaranteed buffer for unicast queue.

```
Ruijie#config
Ruijie(config)# interface tenGigabitEthernet 1/9
Ruijie(config-if)#mmu queue-guarantee ouput unicast 1 3 7 8 set 15
Ruijie(config-if)#exit
Ruijie(config)#exit
Ruijie#
```

**Platform Description** N/A

### 3.6 mmu queue-thredshold

Use this command to configure the shared buffer.

**mmu queue-thredshold output { unicast } { queue-id1 [queue-id2 [queue-idN] ] } set th%**

Use the **no** form of this command to restore the default setting.

**no mmu queue-thredshold output { unicast }**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|-----------------------|-----------|-------------|



|                  |                                                         |
|------------------|---------------------------------------------------------|
| <b>output</b>    | Performs buffer management on the output queue.         |
| <b>unicast</b>   | Performs buffer management on the output unicast queue. |
| <i>queue-idN</i> | Queue ID                                                |
| <i>th%</i>       | Total shared buffer * threshold = Available buffer      |

**Defaults** The default varies with different products.

**Command Mode** Interface configuration mode

**Default Level** 14

**Usage Guide** N/A

**Configuration** The following example configures shared buffer for unicast queue.

**Examples**

```
Ruijie#config
Ruijie(config)# interface tenGigabitEthernet 1/9
Ruijie(config-if)#mmu queue-threshold ouput unicast 1 3 7 8 set 80
Ruijie(config-if)#exit
```

**Platform Description** N/A

### 3.7 mmu fc-threshold

Use this command to configure the inbound buffer threshold.

**mmu fc-threshold set** *th%*

Use the **no** form of this command to restore the default setting.

**no mmu fc-threshold**

| Parameter Description | Parameter  | Description                                           |
|-----------------------|------------|-------------------------------------------------------|
|                       | <i>th%</i> | Indicates the percentage of inbound buffer threshold. |

**Defaults** The default varies with different products.

**Command Mode** Interface configuration mode

**Usage Guide** This command is executed in different ways on different devices.  
This command only takes effect when flow control/PFC is enabled.

**Configuration** The following example configures inbound buffer threshold of priority group.

**Examples**

```
Ruijie#config
Ruijie(config)# interface tenGigabitEthernet 0/9
Ruijie(config-if)#mmu fc-threshold set 80
Ruijie(config-if)#exit
```

**Platform**

N/A

**Description**

### 3.8 show queue-buffer interface

Use this command to display buffer usage of interfaces.

**show queue-buffer interface** { *interface-id*}

| Parameter Description | Parameter           | Description |
|-----------------------|---------------------|-------------|
|                       | <i>interface-id</i> | Interface   |

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Default Level** 14

**Usage Guide** N/A

**Configuration Examples** The following example displays buffer usage of the specified interface based on output queue.

```
Ruijie(config)#show queue-buffer interface hundredGigabitEthernet 0/1
Interface HundredGigabitEthernet 0/1:
Slice 1:
Type      Queue  Used cells  Available cells  Usage  Usage warn limit  Usage warn count  Peaked
cells
Unicast   1      42288      0                100%  0%                0
42288
Unicast   2      0          42280            0%    0%                0                0
Unicast   3      0          42280            0%    0%                0                0
Unicast   4      0          42280            0%    0%                0                0
Unicast   5      0          42280            0%    0%                0                0
Unicast   6      0          42280            0%    0%                0                0
Unicast   7      0          42280            0%    0%                0                0
Unicast   8      0          42280            0%    0%                0                0
Multicast 1      0          668              0%    0%                0
3442
Multicast 2      0          668              0%    0%                0                0
Multicast 3      0          668              0%    0%                0                0
```

|           |       |            |                        |             |                  |                   |                     |
|-----------|-------|------------|------------------------|-------------|------------------|-------------------|---------------------|
| Multicast | 4     | 0          | 668                    | 0%          | 0%               | 0                 | 0                   |
| Multicast | 5     | 0          | 668                    | 0%          | 0%               | 0                 | 0                   |
| Multicast | 6     | 0          | 668                    | 0%          | 0%               | 0                 | 0                   |
| Multicast | 7     | 0          | 668                    | 0%          | 0%               | 0                 | 0                   |
| Multicast | 8     | 0          | 668                    | 0%          | 0%               | 0                 | 0                   |
| Slice 3:  |       |            |                        |             |                  |                   |                     |
| Type      | Queue | Used cells | Available cells        | Usage       | Usage warn limit | Usage warn count  | Peaked cells        |
| Unicast   | 1     | 0          | 42287                  | 0%          | 0%               | 0                 | 0                   |
| Unicast   | 2     | 0          | 42287                  | 0%          | 0%               | 0                 | 0                   |
| Unicast   | 3     | 0          | 42287                  | 0%          | 0%               | 0                 | 0                   |
| Unicast   | 4     | 0          | 42287                  | 0%          | 0%               | 0                 | 0                   |
| Unicast   | 5     | 0          | 42287                  | 0%          | 0%               | 0                 | 0                   |
| Unicast   | 6     | 0          | 42287                  | 0%          | 0%               | 0                 | 0                   |
| Unicast   | 7     | 0          | 42287                  | 0%          | 0%               | 0                 | 0                   |
| Unicast   | 8     | 0          | 42287                  | 0%          | 0%               | 0                 | 0                   |
| Multicast | 1     | 0          | 5292                   | 0%          | 0%               | 0                 | 0                   |
| Multicast | 2     | 0          | 5292                   | 0%          | 0%               | 0                 | 0                   |
| Multicast | 3     | 0          | 5292                   | 0%          | 0%               | 0                 | 0                   |
| Multicast | 4     | 0          | 5292                   | 0%          | 0%               | 0                 | 0                   |
| Multicast | 5     | 0          | 5292                   | 0%          | 0%               | 0                 | 0                   |
| Multicast | 6     | 0          | 5292                   | 0%          | 0%               | 0                 | 0                   |
| Multicast | 7     | 0          | 5292                   | 0%          | 0%               | 0                 | 0                   |
| Multicast | 8     | 0          | 5292                   | 0%          | 0%               | 0                 | 0                   |
| Slot      | Slice | PortGroup  | Total cells            | Total usage | Usage warn limit | Static used cells | Global shared cells |
|           |       |            | Available shared cells |             |                  |                   |                     |
| 0         | 1     | 1          | 53248                  | 79%         | 90%              | 8                 | 47564               |
|           |       |            | 5284                   |             |                  |                   |                     |
| 0         | 2     | 1          | 53248                  | 79%         | 90%              | 8                 | 47564               |
|           |       |            | 5284                   |             |                  |                   |                     |
| 0         | 3     | 1          | 53248                  | 0%          | 90%              | 0                 | 47564               |
|           |       |            | 47564                  |             |                  |                   |                     |
| 0         | 4     | 1          | 53248                  | 0%          | 90%              | 0                 | 47564               |
|           |       |            | 47564                  |             |                  |                   |                     |

| Field           | Description                                                                                   |
|-----------------|-----------------------------------------------------------------------------------------------|
| Slice           | No. of the module on the chip for buffer division                                             |
| Type            | Queue type, including unicast queue and multicast queue                                       |
| Queue           | Queue No., ranging from 1 to 8 by default and can be switched to 0 to 7 through configuration |
| Used cells      | Size of the occupied buffer in a queue, in the unit of cell                                   |
| Available cells | Size of the available buffer in a queue, in the unit of cell                                  |

|                        |                                                                        |
|------------------------|------------------------------------------------------------------------|
| Usage                  | Percentage of the occupied buffer in a queue                           |
| Usage warn limit       | Buffer usage warning threshold of a specific port group or queue       |
| Usage warn count       | Number of times that the occupied buffer exceeds the warning threshold |
| Peaked cells           | Historical peak value of the used buffer                               |
| Slot                   | Slot No. of the line card                                              |
| PortGroup              | Port group No., starting from 1                                        |
| Total cells            | Total buffer on a specified slice                                      |
| Total usage            | Percentage of the occupied buffer on a specified slice                 |
| Static used cells      | Size of the occupied guarantee buffer on a specified slice             |
| Global shared cells    | Total shared buffer on a specified slice                               |
| Available shared cells | Size of the available shared buffer on a specified slice               |

The following example displays the buffer queue information of all interfaces.

```
Ruijie#show queue-buffer
Interface HundredGigabitEthernet 0/1:
Slice 1:
Type      Queue  Used cells  Available cells  Usage  Usage warn limit  Usage warn count  Peaked
cells
Unicast   1      22383      1                99%   50%              686
42288
Unicast   2      0          22384            0%    0%              0                0
Unicast   3      0          22384            0%    0%              0                0
Unicast   4      22391      0                100%  0%              0
22416
Unicast   5      0          22384            0%    0%              0                0
Unicast   6      0          22384            0%    0%              0                0
Unicast   7      0          22384            0%    0%              0                0
Unicast   8      0          22384            0%    0%              0                0
Multicast 1      0          357              0%    0%              0
3442
Multicast 2      0          357              0%    0%              0                0
Multicast 3      0          357              0%    0%              0                0
Multicast 4      0          357              0%    0%              0                0
Multicast 5      0          357              0%    0%              0                0
Multicast 6      0          357              0%    0%              0                0
Multicast 7      0          357              0%    0%              0                0
Multicast 8      0          357              0%    0%              0                0

Slice 3:
Type      Queue  Used cells  Available cells  Usage  Usage warn limit  Usage warn count  Peaked
```

```

cells
Unicast 1 0 42287 0% 50% 0 0
Unicast 2 0 42287 0% 0% 0 0
Unicast 3 0 42287 0% 0% 0 0
Unicast 4 0 42287 0% 0% 0 0
Unicast 5 0 42287 0% 0% 0 0
Unicast 6 0 42287 0% 0% 0 0
Unicast 7 0 42287 0% 0% 0 0
Unicast 8 0 42287 0% 0% 0 0
Multicast 1 0 5292 0% 0% 0 0
Multicast 2 0 5292 0% 0% 0 0
Multicast 3 0 5292 0% 0% 0 0
Multicast 4 0 5292 0% 0% 0 0
Multicast 5 0 5292 0% 0% 0 0
Multicast 6 0 5292 0% 0% 0 0
Multicast 7 0 5292 0% 0% 0 0
Multicast 8 0 5292 0% 0% 0 0

Slot Slice PortGroup Total cells Total usage Usage warn limit Static used cells Global
shared cells Available shared cells
0 1 1 53248 84% 90% 16 47564
2797
0 2 1 53248 0% 90% 0 47564
47564
0 3 1 53248 0% 90% 0 47564
47564
0 4 1 53248 0% 90% 0 47564
47564
.....
Interface HundredGigabitEthernet 0/64:
Slice 2:
Type Queue Used cells Available cells Usage Usage warn limit Usage warn count Peaked
cells
Unicast 1 0 42287 0% 0% 0 42288
Unicast 2 0 42287 0% 0% 0 0
Unicast 3 0 42287 0% 0% 0 0
Unicast 4 0 42287 0% 0% 0 0
Unicast 5 0 42287 0% 0% 0 0
Unicast 6 0 42287 0% 0% 0 0
Unicast 7 0 42287 0% 0% 0 0
Unicast 8 0 42287 0% 0% 0 0
Multicast 1 0 5292 0% 0% 0 0
3442
    
```



### 3.9 show queue-counter interface

Use this command to display buffer queue statistics of interfaces.

**show queue-counter interface** *interface-id*

| Parameter Description | Parameter           | Description |
|-----------------------|---------------------|-------------|
|                       | <i>interface-id</i> | Interface   |

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Default Level** 14

**Usage Guide** N/A

**Configuration Examples** The following example displays buffer queue statistics of the specified interface based on output queue.

```
Ruijie#show queue-counter interface gigabitEthernet 0/9
Interface HundredGigabitEthernet 4/1:
  Unicast
  Queue    Transmitted Bytes    Dropped Bytes    Frame Loss Rate(%)    Transmit Rate(bps)
  1         0                    0                0                     0
  2         0                    0                0                     0
  3         0                    0                0                     0
  4         0                    0                0                     0
  5         0                    0                0                     0
  6         0                    0                0                     0
  7         0                    0                0                     0
  8         62797                0                0                     656
  Multicast
  Queue    Transmitted Bytes    Dropped Bytes    Frame Loss Rate(%)    Transmit Rate(bps)
  1         0                    0                0                     0
  2         0                    0                0                     0
  3         0                    0                0                     0
  4         0                    0                0                     0
  5         0                    0                0                     0
  6         0                    0                0                     0
  7         0                    0                0                     0
  8         0                    0                0                     0
  Unicast
  Queue    Transmitted Packets    Dropped Packets    Frame Loss Rate(%)    Transmit Rate(pps)
  1         0                    0                0                     0
  2         0                    0                0                     0
  3         0                    0                0                     0
```

|           |                     |                 |                    |                    |
|-----------|---------------------|-----------------|--------------------|--------------------|
| 4         | 0                   | 0               | 0                  | 0                  |
| 5         | 0                   | 0               | 0                  | 0                  |
| 6         | 0                   | 0               | 0                  | 0                  |
| 7         | 0                   | 0               | 0                  | 0                  |
| 8         | 472                 | 0               | 0                  | 0                  |
| Multicast |                     |                 |                    |                    |
| Queue     | Transmitted Packets | Dropped Packets | Frame Loss Rate(%) | Transmit Rate(pps) |
| 1         | 0                   | 0               | 0                  | 0                  |
| 2         | 0                   | 0               | 0                  | 0                  |
| 3         | 0                   | 0               | 0                  | 0                  |
| 4         | 0                   | 0               | 0                  | 0                  |
| 5         | 0                   | 0               | 0                  | 0                  |
| 6         | 0                   | 0               | 0                  | 0                  |
| 7         | 0                   | 0               | 0                  | 0                  |
| 8         | 0                   | 0               | 0                  | 0                  |

The following example displays buffer queue statistics of all interfaces.

```
Ruijie#show queue-counter
Interface HundredGigabitEthernet 0/1:
  Unicast
  Queue    Transmitted Bytes    Dropped Bytes    Frame Loss Rate(%)    Transmit
  Rate (bps)
    1      117380835776        1056130216960        89.99
  50525032
    2              0                    0                    0
  0
    3              0                    0                    0
  0
    4      2736178496         24624019520        89.99
  50525056
    5              0                    0                    0
  0
    6              0                    0                    0
  0
    7              0                    0                    0
  0
    8      1200887           0                    0
  664
  Multicast
  Queue    Transmitted Bytes    Dropped Bytes    Frame Loss Rate(%)    Transmit
  Rate (bps)
    1      24098176            233925440        90.66
  0
    2              0                    0                    0
```



|   |            |                     |                 |                    |          |
|---|------------|---------------------|-----------------|--------------------|----------|
| 0 |            |                     |                 |                    |          |
| 0 | 3          | 0                   | 0               | 0                  |          |
| 0 | 4          | 0                   | 0               | 0                  |          |
| 0 | 5          | 0                   | 0               | 0                  |          |
| 0 | 6          | 0                   | 0               | 0                  |          |
| 0 | 7          | 0                   | 0               | 0                  |          |
| 0 | 8          | 0                   | 0               | 0                  |          |
| 0 |            |                     |                 |                    |          |
|   | Unicast    |                     |                 |                    |          |
|   | Queue      | Transmitted Packets | Dropped Packets | Frame Loss Rate(%) | Transmit |
|   | Rate (pps) |                     |                 |                    |          |
|   | 1          | 1834075559          | 16502034640     | 89.99              |          |
|   | 75183      |                     |                 |                    |          |
|   | 2          | 0                   | 0               | 0                  |          |
| 0 |            |                     |                 |                    |          |
|   | 3          | 0                   | 0               | 0                  |          |
| 0 |            |                     |                 |                    |          |
|   | 4          | 42752789            | 384750305       | 89.99              |          |
|   | 75183      |                     |                 |                    |          |
|   | 5          | 0                   | 0               | 0                  |          |
| 0 |            |                     |                 |                    |          |
|   | 6          | 0                   | 0               | 0                  |          |
| 0 |            |                     |                 |                    |          |
|   | 7          | 0                   | 0               | 0                  |          |
| 0 |            |                     |                 |                    |          |
|   | 8          | 9306                | 0               | 0                  |          |
| 0 |            |                     |                 |                    |          |
|   | Multicast  |                     |                 |                    |          |
|   | Queue      | Transmitted Packets | Dropped Packets | Frame Loss Rate(%) | Transmit |
|   | Rate (pps) |                     |                 |                    |          |
|   | 1          | 376534              | 3655085         | 90.66              |          |
| 0 |            |                     |                 |                    |          |
|   | 2          | 0                   | 0               | 0                  |          |
| 0 |            |                     |                 |                    |          |
|   | 3          | 0                   | 0               | 0                  |          |
| 0 |            |                     |                 |                    |          |
|   | 4          | 0                   | 0               | 0                  |          |
| 0 |            |                     |                 |                    |          |
|   | 5          | 0                   | 0               | 0                  |          |

```
0
  6          0          0          0
0
  7          0          0          0
0
  8          0          0          0
0Gi0/24      0          0          0          0.000
.....
Interface HundredGigabitEthernet 0/64:
  Unicast
  Queue      Transmitted Bytes      Dropped Bytes      Frame Loss Rate(%)      Transmit
Rate (bps)
    1          83892643136          754894738496          89.99
0
    2           0          0          0
0
    3           0          0          0
0
    4           0          0          0
0
    5           0          0          0
0
    6           0          0          0
0
    7           0          0          0
0
    8          1203321          0          0
664
  Multicast
  Queue      Transmitted Bytes      Dropped Bytes      Frame Loss Rate(%)      Transmit
Rate (bps)
    1          126178880          1208592000          90.54
0
    2           0          0          0
0
    3           0          0          0
0
    4           0          0          0
0
    5           0          0          0
0
    6           0          0          0
0
    7           0          0          0
```

| Queue     | Transmitted Packets | Dropped Packets | Frame Loss Rate(%) | Transmit Rate (pps) |
|-----------|---------------------|-----------------|--------------------|---------------------|
| 0         | 8                   | 0               | 0                  | 0                   |
| Unicast   |                     |                 |                    |                     |
| 0         | 1                   | 1310822549      | 11795230289        | 89.99               |
| 0         | 2                   | 0               | 0                  | 0                   |
| 0         | 3                   | 0               | 0                  | 0                   |
| 0         | 4                   | 0               | 0                  | 0                   |
| 0         | 5                   | 0               | 0                  | 0                   |
| 0         | 6                   | 0               | 0                  | 0                   |
| 0         | 7                   | 0               | 0                  | 0                   |
| 0         | 8                   | 9317            | 0                  | 0                   |
| Multicast |                     |                 |                    |                     |
| 0         | 1                   | 1971545         | 18884250           | 90.54               |
| 0         | 2                   | 0               | 0                  | 0                   |
| 0         | 3                   | 0               | 0                  | 0                   |
| 0         | 4                   | 0               | 0                  | 0                   |
| 0         | 5                   | 0               | 0                  | 0                   |
| 0         | 6                   | 0               | 0                  | 0                   |
| 0         | 7                   | 0               | 0                  | 0                   |
| 0         | 8                   | 0               | 0                  | 0                   |

**Platform Description** N/A





## Reliability Configuration Commands

---

1. REUP Commands
2. RLDP Commands
3. VRRP Commands
4. VRRP Plus Commands
5. BFD Commands
6. IP Event Dampening Commands
7. VSU Commands
8. RNS&Track Commands

# 1 REUP Commands

## 1.1 link state group

Use this command to add the port into the specified link state track group. The **no** form of this command is used to delete a port from the specified link state track group.

**link state group** *num* { **upstream** | **downstream** }

**no link state group**

| Parameter Description | Parameter         | Description                                                                |
|-----------------------|-------------------|----------------------------------------------------------------------------|
|                       | <i>num</i>        | ID of the link state track group.                                          |
|                       | <b>upstream</b>   | Configures the port to be an upstream port in the link state track group.  |
|                       | <b>downstream</b> | Configures the port to be a downstream port in the link state track group. |

**Defaults** The port is not added into any link state track group.

**Command Mode** Interface configuration mode.

**Usage Guide** First create a link state track group and then add a port into the specified link state track group.

**Configuration Examples** The following example shows how to add the port fa0/2 into the link state track group:

```
Ruijie(config)# link state track 1
Ruijie(config)# interface fa 0/2
Ruijie(config-if)# link state group 1 upstream
```

| Related Commands | Command                 | Description                       |
|------------------|-------------------------|-----------------------------------|
|                  | <b>link state track</b> | Enables a link state track group. |

**Platform Description** N/A.

## 1.2 link state track

Use this command to enable the link state track group. The **no** form of this command is used to disable a link state track group

**link state track** [ *num* | **up-delay** *timer* ]

**no link state track** [ *num* ]

| Parameter Description | Parameter             | Description                                                        |
|-----------------------|-----------------------|--------------------------------------------------------------------|
|                       | <i>num</i>            | Interface ID of the link aggregation group.                        |
|                       | <b>up-delay timer</b> | Delay time for link up. By default, there is no delay for link up. |

**Defaults** N/A.

**Command Mode** Global configuration mode.

**Usage Guide** First create a link state track group and then add a port into the specified link state track group.

**Configuration Examples** The following example shows how to create a link state track group:

```
Ruijie(config)# link state track 1
```

The following example shows how to create a link state track group and set the down link to become up after 30s when uplink becomes up:

```
Ruijie(config)# link state track 1 up-delay 30
```

| Related Commands | Command                 | Description                                            |
|------------------|-------------------------|--------------------------------------------------------|
|                  | <b>link state group</b> | Adds the port to the specified link state track group. |

**Platform** N/A.

**Description**

### 1.3 mac-address-table move update max-update-rate

Use this command to configure the maximum number of MAC address update packets sent per second.

**mac-address-table move update max-update-rate** *pkts-per-second*

**no mac-address-table move update max-update-rate**

| Parameter Description | Parameter              | Description                                                                                                                |
|-----------------------|------------------------|----------------------------------------------------------------------------------------------------------------------------|
|                       | <i>pkts-per-second</i> | The maximum number of MAC address update packets sent per second. It ranges from 0 to 32000, and the default value is 150. |

**Defaults** A maximum of 150 MAC address update packets are sent per second.

**Command** Global configuration mode.

**Mode**

**Usage Guide** When a link is switched, REUP sends a certain number of MAC address update packets to an uplink device in every second to recover downlink data transmission of the uplink device.

**Configuration Examples** The following example shows how to configure the maximum number of MAC address update packets sent per second:

```
Ruijie(config)# mac-address-table move update max-update-rate 20
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A.    | N/A.        |

**Platform Description** N/A.

## 1.4 mac-address-table move update receive

Use this command to enable REUP to receive the mac-address-table update messages.

**mac-address-table move update receive**

**no mac-address-table move update receive**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A.      | N/A.        |

**Defaults** Disabled.

**Command Mode** Global configuration mode.

**Usage Guide** The dual link backup switchover will lead to the loss of downstream data flow, for the MAC address for the uplink switch has not been updated in time. Therefore, it is necessary to update the MAC address table of the uplink switch, to reduce the loss of L2 data flow. You need to enable the switch of receiving the MAC address update messages on the uplink switch.

**Configuration Examples** Ruijie(config)# mac-address-table move update receive

**Related Commands**

| Command                                      | Description                                                     |
|----------------------------------------------|-----------------------------------------------------------------|
| <b>mac-address-table move update transit</b> | Enables REUP to transmit the mac-address-table update messages. |



**Platform** N/A.

**Description**

## 1.5 mac-address-table move update receive vlan

Use this command to configure the VLANs processing MAC address update packets.

**mac-address-table move update receive vlan** *vlan-range*

**no mac-address-table move update receive vlan** *vlan-range*

| Parameter   | Parameter         | Description                                               |
|-------------|-------------------|-----------------------------------------------------------|
| Description | <i>vlan-range</i> | Range of the VLANs processing MAC address update packets. |

**Defaults** All VLANs process MAC address update packets.

**Command** Global configuration mode.

**Mode**

**Usage Guide** This command can be used to disable some VLANs from processing MAC address update packets. VLANs disabled from processing MAC address update packets can still recover downlink data transmission of the uplink device using MAC address update packets, but the capability to provide convergence on link failure will be degraded.

**Configuration** The following example configures VLANs processing MAC address update packets:

**Examples**

```
Ruijie(config)# no mac-address-table move update receive vlan 20
```

| Related Commands | Command                                      | Description                                         |
|------------------|----------------------------------------------|-----------------------------------------------------|
|                  | <b>mac-address-table move update receive</b> | Enables REUP to receive MAC address update packets. |

**Platform** N/A.

**Description**

## 1.6 mac-address-table move update transit

Use this command to enable REUP to transmit the mac-address-table update messages.

**mac-address-table move update transit**

**no mac-address-table move update transit**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A.      | N/A.        |

**Defaults** Disabled.

**Command Mode** Global configuration mode.

**Usage Guide** In order to reduce the link switchover and the loss of the downstream data flow, it is necessary to enable the switch of receiving the MAC address update messages on the uplink switch.

**Configuration Examples**

```
Ruijie(config)# mac-address-table move update transit
```

**Related Commands**

| Command                                           | Description                                                     |
|---------------------------------------------------|-----------------------------------------------------------------|
| <b>mac-address-table move update transit vlan</b> | Enables REUP to transmit the mac-address-table update messages. |

**Platform** N/A.

**Description**

## 1.7 mac-address-table move update transit vlan

Use this command to enable REUP to transmit the mac-address update messages.

**mac-address-table move update transit vlan** *vid*

**no mac-address-table move update transit vlan**

**Parameter Description**

| Parameter  | Description                                             |
|------------|---------------------------------------------------------|
| <i>vid</i> | ID of the VLAN transmitting MAC address update packets. |

**Defaults** Transmit the MAC-address update messages in the default VLAN on the port.

**Command Mode** Interface configuration mode.

**Usage Guide** When a link is switched, the VLAN enabled to transmit MAC address update packets will send MAC address update packets to its uplink device.

**Configuration Examples** The following example configures VLANs transmitting MAC address update packets:

```
Ruijie(config)# mac-address-table move update transit
```

**Related Commands**

| Command                                      | Description                 |
|----------------------------------------------|-----------------------------|
| <b>mac-address-table move update transit</b> | Enables REUP to receive the |

|  |                                    |
|--|------------------------------------|
|  | mac-address-table update messages. |
|--|------------------------------------|

**Platform** N/A.

**Description**

## 1.8 mac-address-table update group

Use this command to set the mac-address-table update group.

**mac-address-table update group** [ *group-num* ]

**no mac-address-table update group**

| Parameter   | Parameter        | Description                            |
|-------------|------------------|----------------------------------------|
| Description | <i>group-num</i> | The mac-address-table update group ID. |

**Defaults** By default, no mac-address-table update group is configured.

**Command** Interface configuration mode.

**Mode**

**Usage Guide** In order to reduce the flood due to the MAC address update and the influence on the normal data transmission of the switch, Ruijie products add a configuration of MAC address update group. Only if all the interfaces are added to a MAC address update group, the downstream data transmission be restored rapidly.

**Configuration** Ruijie(config-if)# mac-address-table update group 2

**Examples**

| Related Commands | Command                                           | Description                                              |
|------------------|---------------------------------------------------|----------------------------------------------------------|
|                  | <b>show mac-address-table update group detail</b> | Displays the mac-address-table update group information. |

**Platform** N/A.

**Description**

## 1.9 switchport backup interface *interface-id*

Use this command to configure the REUP dual link backup interface.

**switchport backup interface** *interface-id*

**no switchport backup**

| Parameter | Parameter | Description |
|-----------|-----------|-------------|
|-----------|-----------|-------------|

|                    |                     |                                  |
|--------------------|---------------------|----------------------------------|
| <b>Description</b> |                     |                                  |
|                    | <i>interface-id</i> | Interface ID of the backup link. |

**Defaults** N/A.

**Command** Interface configuration mode.

**Mode**

**Usage Guide** Enter the primary interface configuration mode, the *interface-id* in the parameter is for the backup interface. When the active link fails, the backup link transmission is restored rapidly

**Configuration Examples** The following example shows how to set the dual link backup, with fa 0/1 and fa 0/2 as primary interface and backup interface:

```
Ruijie(config)# interface fa 0/1
Ruijie(config-if)# switchport backup interface fa 0/2
```

| <b>Related Commands</b> | Command                                 | Description                                                |
|-------------------------|-----------------------------------------|------------------------------------------------------------|
|                         | <b>show interface switchport backup</b> | Displays the dual link backup configuration on the switch. |

**Platform** N/A.

**Description**

## 1.10 switchport backup interface preemption

Use this command to configure the REUP link preemption function.

**switchport backup interface** *interface-id* **preemption mode** { **forced** | **bandwidth** | **off** }

**switchport backup interface** *interface-id* **preemption delay** *delay-time*

**no switchport backup interface** *interface-id* **preemption delay**

| <b>Parameter Description</b> | Parameter           | Description                          |
|------------------------------|---------------------|--------------------------------------|
|                              | <i>interface-id</i> | The interface id of the backup link. |
|                              | <i>delay-time</i>   | The preemption delay time.           |

**Defaults** The preemption function is disabled by default.

The default preemption delay time is 35s.

**Command** Interface configuration mode.

**Mode**

**Usage Guide** The preemption mode includes **forced**, **bandwidth** and **off**. In the **bandwidth** preemption mode, the interface with high bandwidth has priority over other interfaces to transmit the data. In the **forced**

preemption mode, the primary has priority over backup interfaces to transmit the data. No preemption event occurs in the **off** preemption mode. By default, the preemption mode is off.

The preemption delay refers to the delay time of the link switchover after the restoration of the link failure.

**Configuration Examples** The following example shows how to set the dual link backup, with fa 0/1 and fa 0/2 as the primary interface and backup interface, set the bandwidth preemption mode and 40s preemption delay:

```
Ruijie(config)# interface fa 0/1
Ruijie(config-if)# switchport backup interface fa 0/2
preemption mode bandwidth
Ruijie(config-if)# switchport backup interface fa 0/2
preemption delay 40
```

**Related Commands**

| Command                                 | Description                                  |
|-----------------------------------------|----------------------------------------------|
| <b>show interface switchport backup</b> | Displays the dual link backup configuration. |

**Platform Description** N/A.

## 1.11 switchport backup interface prefer

Use this command to configure VLAN load balancing on a link. The **no** form of this command is used to delete the configured VLAN load strategy.

**switchport backup interface** *interface-id* **prefer instance** *instance-range*

**no switchport backup interface** *interface-id* **prefer**

| Parameter Description | Parameter             | Description                                        |
|-----------------------|-----------------------|----------------------------------------------------|
|                       | <i>interface-id</i>   | Interface ID of the backup link.                   |
|                       | <i>instance-range</i> | Instance range of loading on the backup interface. |

**Defaults** No VLAN load on the backup interface.

**Command Mode** Interface configuration mode.

**Usage Guide** MSTP instance mapping can be used to modify the mapping between an instance and a VLAN.

**Configuration Examples** The following example configures VLAN load balancing on dual links.

```
Ruijie(config)# interface gigabitEthernet 0/1
Ruijie(config-if)# switchport backup interface gigabitEthernet 0/2 prefer
instance 1
```

| Related Commands | Command                                 | Description                                                   |
|------------------|-----------------------------------------|---------------------------------------------------------------|
|                  | <b>show interface switchport backup</b> | Displays the configuration of dual-link backup on the switch. |
|                  | <b>spanning-tree mst configuration</b>  | Configures MSTP instances.                                    |

**Platform** N/A.  
**Description**

## 1.12 show interfaces switchport backup

Use this command to display the dual link backup information on the interfaces.

**show interfaces** [ *interface-id* ] **switchport backup** [ *detail* ]

| Parameter Description | Parameter           | Description                                                   |
|-----------------------|---------------------|---------------------------------------------------------------|
|                       | <i>interface-id</i> | The interface id of the dual link backup.                     |
|                       | <b>detail</b>       | Displays the detailed information about the dual link backup. |

**Defaults**

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** N/A.

**Configuration Examples**

```
Ruijie # show interfaces switchport backup detail
Switch Backup Interface Pairs:
Active Interface      Backup Interface      State
-----
Gi0/23                Gi0/24                Active Up/Backup Standby
Interface Pair : Gi0/23, Gi0/24
Preemption Mode : Off
Preemption Delay : 35 seconds
Bandwidth : Gi0/23(1000 Mbits), Gi0/24(1000 Mbits)
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A.    | N/A.        |

**Platform** N/A.  
**Description**

## 1.13 show link state group

Use this command to display the information of a link state track group.

**show link state group**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A.

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** N/A.

**Configuration** The following example displays the link state track group:

**Examples**

```
Ruijie # show link state group
Link State Group:1 Status: Enabled, UP
Upstream Interfaces :Gi0/1(Up)
Downstream Interfaces :Gi0/3(Dwn), Gi0/4(Dwn)
Link State Group:2 Status: Disabled, Down
Upstream Interfaces :
Downstream Interfaces :
(Up):Interface up (Dwn):Interface Down (Dis):Interface disabled
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A.    | N/A.        |

**Platform** N/A.

**Description**

## 1.14 show mac-address-table move update

Use this command to display the statistics about the MAC address updates tranceived on the interface.

**show mac-address-table move update**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** N/A.

```
Ruijie#show mac-address-table move update
Mac address table move update status:
Transit:disable
Receive:disable
Max-update-rate:150
Receive vlan:1-4094

Pair: Ag1,Ag2
Members          Status    Transit Count    Transit VLAN    Last Transit
Time
-----
Ag1              Down     0
Ag2              Down     0
Pair: Ag3,Gi0/6
Members          Status    Transit Count    Transit VLAN    Last Transit
Time
-----
Ag3              Down     0
Gi0/6           Down     0
Pair: Gi0/1,Gi0/2
Members          Status    Transit Count    Transit VLAN    Last Transit
Time
-----
Gi0/1           Up       0
Gi0/2           Standby  0
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A.    | N/A.        |

**Platform Description** N/A.



## 1.15 show mac-address-table update group

Use this command to display the mac-address-table update group information.

**show mac-address-table update group [ detail ]**

| Parameter Description | Parameter     | Description                                                                 |
|-----------------------|---------------|-----------------------------------------------------------------------------|
|                       | <b>detail</b> | Displays the detailed information about the mac-address-table update group. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** N/A.

```

Configuration Ruijie # configure terminal
Examples Ruijie (config)# mac-address-table move update receive
Ruijie (config)# interface range gigabitEthernet 0/3-4
Ruijie (config-if-range)# mac-address-table update group
Ruijie (config-if-range)# end
Ruijie # show mac-address-table update group detail
Mac-address-table Update Group:1
Received mac-address-table update message count:7
Group member Receive Count Last Receive Switch-ID Receive Time
-----
GigabitEthernet 0/3 0 0000.0000.0000
GigabitEthernet 0/4 0 0000.0000.0000
    
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A.    | N/A.        |

**Platform Description** N/A.

## 2 RLDP Commands

### 2.1 rldp detect-interval

Use this command to configure the interval at which the RLDP sends the detection message on the port. Use the **no** form of this command to restore the default value.

**rldp detect-interval** *interval*

**no rldp detect-interval**

| Parameter Description | Parameter       | Description                                     |
|-----------------------|-----------------|-------------------------------------------------|
|                       | <i>interval</i> | Detection interval in the range 2 to 15 seconds |

**Defaults** 3 seconds.

**Command Mode** Global configuration mode.

**Usage Guide** In the environment where STP is enabled, it is recommended that the product of interval multiplying the maximum number of detections is less than the topology convergence time of STP.

**Configuration Examples** The following example shows how to set the detection interval as 5s:

```
Ruijie(config)# rldp detect-interval 5
```

| Related Commands | Command                | Description                            |
|------------------|------------------------|----------------------------------------|
|                  | <b>rldp detect-max</b> | Sets the maximum number of detections. |

**Platform** N/A.

**Description**

### 2.2 rldp detect-max

Use this command to set the maximum number of sending detection packets on the port. If the neighboring port does not respond when this detection number is exceeded, the link is considered faulty. Use the **no** form of this command to restore it to the default value.

**rldp detect-max** *num*

**no rldp detect-max**

| Parameter Description | Parameter  | Description                                       |
|-----------------------|------------|---------------------------------------------------|
|                       | <i>num</i> | Maximum number of detections in the range 2 to 10 |

- Defaults** 2.
- Command Mode** Global configuration mode.
- Usage Guide** This command is used together with the detection interval to specify the maximum number of detections.

**Configuration** The following example shows how to set the maximum number of detections as 5:

**Examples**

```
Ruijie(config)# rldp detect-max 5
```

| Related Commands | Command | Description                 |
|------------------|---------|-----------------------------|
|                  |         | <b>rldp detect-interval</b> |

**Platform** N/A.

**Description**

## 2.3 rldp enable

Use this command to enable RLDP globally. Use the **no** form of this command to disable the function.

**rldp enable**

**no rldp enable**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       |           | N/A.        |

**Defaults** Disabled.

**Command Mode** Global configuration mode.

**Usage Guide** You can enable RLDP on the interface only when the global RLDP is enabled.

**Configuration** The following example shows how to enable RLDP:

**Examples**

```
Ruijie(config)# rldp enable
```

| Related Commands | Command | Description      |
|------------------|---------|------------------|
|                  |         | <b>rldp port</b> |

**Platform** N/A.

## Description

## 2.4 rldp neighbor-negotiation

Use this command to enable RLDP neighbor negotiation. Use the **no** form or **default** form of this command to restore the default setting.

**rldp neighbor-negotiation**  
**no rldp neighbor-negotiation**  
**default rldp neighbor-negotiation**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A.      | N/A.        |

**Defaults** RLDP neighbor negotiation is disabled by default.

**Command** Global configuration mode.

**Mode**

**Usage Guide** With neighbor negotiation enabled, RLDP unidirectional-/bidirectional-link detection starts only after the neighbor negotiation is successful. (Receiving the Prob message from the neighbor indicates the neighbor negotiation is successful.)

**Configuration** The following example shows how to enable RLDP neighbor negotiation:

**Examples**

```
Ruijie#config
Ruijie(config)#rldp neighbor-negotiation
```

| Related Commands | Command          | Description                            |
|------------------|------------------|----------------------------------------|
|                  | <b>rldp port</b> | Enables the RLDP function on the port. |

**Platform** N/A.

**Description**

## 2.5 rldp port

Use this command to enable RLDP on the port and specify detection type and troubleshooting method. Use the **no** form of this command to disable the function.

**rldp port { unidirection-detect | bidirection-detect | loop-detect } { warning | shutdown-svi | shutdown-port | block }**  
**no rldp port { unidirection-detect | bidirection-detect | loop-detect }**

| Parameter | Parameter | Description |
|-----------|-----------|-------------|
|-----------|-----------|-------------|

| Description                |                                             |
|----------------------------|---------------------------------------------|
| <b>unidirection-detect</b> | Sets unidirectional link detection.         |
| <b>bidirection-detect</b>  | Sets bidirectional link detection.          |
| <b>loop-detect</b>         | Sets loop detection type.                   |
| <b>warning</b>             | Warns the user.                             |
| <b>shutdown-svi</b>        | Shutowns the SVI the port belongs to.       |
| <b>shutdown-port</b>       | Shutowns the port.                          |
| <b>block</b>               | Disables learning and forwarding of a port. |

**Defaults** N/A

**Command** Interface configuration mode.

**Mode**

**Usage Guide** The RLDP detection on the port takes effect only when the global RLDP is enabled.

**Configuration Examples** The following example shows how to enable the RLDP detection and specify the failure treatment as **block**.

```
Ruijie(config)# interface GigabitEthernet 2/0/9
Ruijie(config-if-GigabitEthernet 2/0/9)# rldp port loop-detect block
```

| Related Commands | Command            | Description            |
|------------------|--------------------|------------------------|
|                  | <b>rldp enable</b> | Enables RLDP globally. |

**Platform** N/A.

**Description**

## 2.6 rldp reset

Use this command to make all the ports that have been handled using rldp shutdown or disable to perform RLDP detection again.

**rldp reset**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A.      | N/A.        |

**Defaults** N/A.

**Command** Privileged EXEC mode.

**Mode**

**Usage Guide** This command is used to recover the faulty port. The **errdisable recovery** can be also used for the purpose. For details, refer to the *Configuring Interface* chapter.

**Configuration** The example below demonstrates how to use this command:

**Examples** Ruijie# rldp reset

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  |         | rldp enable |

**Platform** N/A.

**Description**

## 2.7 show rldp

Use this command to display the RLDP information.

**show rldp [ interface *interface-id* ]**

| Parameter Description | Parameter | Description         |
|-----------------------|-----------|---------------------|
|                       |           | <i>interface-id</i> |

**Defaults** N/A.

**Command Mode** Privileged EXEC mode.

**Usage Guide** N/A.

**Configuration Examples** N/A.

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  |         | N/A.        |

**Platform** N/A.

**Description**

## 3 VRRP Commands

### 3.1 show vrrp

Use this command to display the VRRP information.

**show** [ **ipv6** ] **vrrp** [ **brief** | *group* ]

| Parameter          | Parameter    | Description                                      |
|--------------------|--------------|--------------------------------------------------|
| <b>Description</b> | <b>ipv6</b>  | (Optional) Applies to IPv6 VRRP.                 |
|                    | <b>brief</b> | (Optional) Displays the brief of the VRRP group. |
|                    | <i>group</i> | Number of the VRRP group to be displayed         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** If no optional parameter is used, the information of all VRRP groups is displayed.

**Configuration Examples** The following example displays the information of all VRRP groups.

```
Ruijie# show vrrp
GigabitEthernet 0/0 - Group 1
State is Backup
Virtual IP address is 192.168.201.1 configured
Virtual MAC address is 0000.5e00.0101
Advertisement interval is 3 sec
Preemption is enabled
min delay is 0 sec
Priority is 100
Master Router is 192.168.201.213 , priority is 120
Master Advertisement interval is 3 sec
Master Down interval is 10.82 sec
GigabitEthernet 0/0 - Group 2
State is Master
Virtual IP address is 192.168.201.2 configured
Virtual MAC address is 0000.5e00.0102
Advertisement interval is 3 sec
Preemption is enabled
min delay is 0 sec
Priority is 120
Master Router is 192.168.201.217 (local), priority is 120
Master Advertisement interval is 3 sec
```

```

Master Down interval is 10.59 sec
Ruijie#show ipv6 vrrp
GigabitEthernet 0/13 - Group 1
  State is Master
  Virtual IPv6 address is as follows:
    FE80::2
    1::2
  Virtual MAC address is 0000.5e00.0201
  Advertisement interval is 1 sec
  Accept_Mode is enabled
  Preemption is enabled
    min delay is 0 sec
  Priority is 100
  Master Router is FE80::1 (local), priority is 100
  Master Advertisement interval is 1 sec
  Master Down interval is 3.60 sec

```

| Related Commands | Command                                                          | Description                                                              |
|------------------|------------------------------------------------------------------|--------------------------------------------------------------------------|
|                  | <code>vrrp group ip <i>ipaddress</i> [ <b>secondary</b> ]</code> | Enables the VRRP function and set the IP address for the virtual device. |

**Platform** N/A

**Description**

## 3.2 show vrrp interface

Use this command to display the information of the VRRP on the interface.

`show [ ipv6 ] vrrp interface type number [ brief ]`

| Parameter          | Parameter           | Description                                                       |
|--------------------|---------------------|-------------------------------------------------------------------|
| <b>Description</b> | <code>ipv6</code>   | (Optional) Applies to IPv6 VRRP.                                  |
|                    | <code>type</code>   | Interface type                                                    |
|                    | <code>number</code> | Interface number                                                  |
|                    | <code>brief</code>  | (Optional) Displays the brief of the VRRP group on the interface. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example displays the VRRP information on Ethernet interface E1/0.

```
Ruijie# show vrrp interface fastethernet 0/0
```



```

FastEthernet 0/0 - Group 1
State is Backup
Virtual IP address is 192.168.201.1 configured
Virtual MAC address is 0000.5e00.0101
Advertisement interval is 3 sec
Preemption is enabled
min delay is 0 sec
Priority is 100
Master Device is 192.168.201.213 , pritority is 120
Master Advertisement interval is 3 sec
Master Down interval is 9 sec
FastEthernet 0/0 - Group 2
State is Master
Virtual IP address is 192.168.201.2 configured
Virtual MAC address is 0000.5e00.0102
Advertisement interval is 3 sec
Preemption is enabled
min delay is 0 sec
Priority is 120
Master Device is 192.168.201.217 (local), priority is 120
Master Advertisement interval is 3 sec
Master Down interval is 9 sec

```

| Related Commands | Command                                       | Description                                                             |
|------------------|-----------------------------------------------|-------------------------------------------------------------------------|
|                  | <b>vrrp group ip ip address [ secondary ]</b> | Enables the VRRP function and set the IP address for the virtual device |

**Platform** N/A  
**Description**

### 3.3 show vrrp packet statistics

Use this command to display the statistics of the VRRP packet transmission.

**show vrrp packet statistics** [ *interface-type interface-number* ]

| Parameter Description | Parameter               | Description               |
|-----------------------|-------------------------|---------------------------|
|                       | <i>interface-type</i>   | Interface type and number |
|                       | <i>interface-number</i> |                           |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** N/A

**Configuration** The following example displays the statistics of VRRP packet transmission on all interfaces.

**Examples**

```
Ruijie# show vrrp packet statistics

Total
  InReceives: 966043 packets, InOctets: 38641824, InErrors: 38826
  OutTransmits: 306079, OutOctets: 7798564
GigabitEthernet 3/0/1
  InReceives: 799665 packets, InOctets: 31986600, InErrors: 19657
  OutTransmits: 272931, OutOctets: 6675320
GigabitEthernet 3/0/2
  InReceives: 0 packets, InOctets: 0, InErrors: 0
  OutTransmits: 681, OutOctets: 16344
```

The following example displays the statistics of VRRP packets on the interface gigabitEthernet 3/0/1.

```
Ruijie#show vrrp packet statistics gigabitEthernet 3/0/1
GigabitEthernet 3/0/1
  InReceives: 799911 packets, InOctets: 31996440, InErrors: 19657
  OutTransmits: 273053, OutOctets: 6677760
```

| Related  | Command | Description |
|----------|---------|-------------|
| Commands | N/A     | N/A         |

**Platform** N/A

**Description**

### 3.4 vrrp accept\_mode

Use this command to enable the packet accepting function on the IPv6 VRRP virtual router.

Use the **no** form of this command to disable this function.

**vrrp ipv6 group accept\_mode**

**no vrrp ipv6 group accept\_mode**


| Parameter   | Parameter | Description       |
|-------------|-----------|-------------------|
| Description | group     | VRRP group number |

**Defaults** The master IPv6 VRRP is not allowed to accept packets whose destination IPv6 address is the IPv6 address of a virtual router. However, the NA and NS packets should be accepted regardless of the configuration of Accept\_Mode. Also, the master IPv6 VRRP virtual router in the owner state will accept and process any packets whose destination IPv6 address is the IPv6 address of a virtual router, regardless of the configuration of Accept\_Mode.

**Command** Interface configuration mode

**Mode**

**Usage Guide** Configuration of the network interface is effective for the master virtual router.

 Only IPv6 VRRP has this configuration mode.

**Configuration** The following example enables the accept mode on the group 1.

**Examples**

```
Ruijie#configure terminal
Ruijie(config)#interface GigabitEthernet 0/0
Ruijie(config-if-GigabitEthernet 0/0)#no switchport //used on the switch.
Ruijie(config-if-GigabitEthernet 0/0)#ipv6 enable
Ruijie(config-if-GigabitEthernet 0/0)#ipv6 address 2001::2/64
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ipv6 FE80::1
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ipv6 2001::1
Ruijie(config-if-GigabitEthernet 0/0)# vrrp ipv6 1 accept_mode
```

**Platform** N/A

**Description**

### 3.5 vrrp authentication

Use this command to enable VRRP authentication.

Use the **no** form of this command to disable this function.

**vrrp group authentication string**

**no vrrp group authentication**

| Parameter          | Parameter     | Description                                                                   |
|--------------------|---------------|-------------------------------------------------------------------------------|
| <b>Description</b> | <i>group</i>  | VRRP group number                                                             |
|                    | <i>string</i> | String for the VRRP group authentication (within 8 bytes, plaintext password) |

**Defaults** This function is disabled by default. Even if the VRRP function is enabled, no authentication password is configured by default.

**Command** Interface configuration mode

**Mode****Usage Guide**

In a VRRP group, the same authentication password should be configured for routers. The plain text authentication password cannot guarantee security but only prevents/prompts wrong VRRP configurations. This command is only applicable to VRRPv2 instead of VRRPv3.

Authentication is abolished for VRRPv3 (IPv4 VRRP and IPv6 VRRP) packets. If VRRPv2 is chosen

for an IPv4 VRRP group, the command is effective; if VRRPv3 is chosen, the command is ineffective.

**Configuration** The following example sets the authentication password for VRRP group 1.

**Examples**

```
Ruijie#configure terminal
Ruijie(config)#interface GigabitEthernet 0/0
Ruijie(config-if-GigabitEthernet 0/0)#no switchport //used on the switch.
Ruijie(config-if-GigabitEthernet 0/0)#ip address 10.0.1.1 255.255.255.0
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ip 10.0.1.20
Ruijie(config-if-GigabitEthernet 0/0)# vrrp 1 authentication x30dn78k
```

**Platform** N/A

**Description**

### 3.6 vrrp bfd (Interface Configuration Mode)

Use this command to enable BFD correlation for the specified IPv4 VRRP group.

Use the **no** form of this command to remove the BFD correlation for the specified IPv4 VRRP group.

**vrrp group bfd ip-address**

**no vrrp group bfd ip-address**

| Parameter   | Parameter         | Description         |
|-------------|-------------------|---------------------|
| Description | <i>group</i>      | VRRP group ID       |
|             | <i>ip-address</i> | Neighbor IP address |

**Defaults** By default, no BFD correlation is configured for the IPv4 VRRP group on the interface.

**Command** Interface configuration mode.

**Mode**

**Usage Guide** After the global BFD correlation for IPv4 VRRP is configured, the BFD correlation configuration for the IPv4 VRRP groups will be removed.

The IP address and BFD session of the interface must be configured before configuring the **vrrp bfd** command.

**Configuration** The following example enables BFD correlation for the VRRP group.

**Examples**

On Switch 1:

```
Ruijie#configure terminal
Ruijie(config)#interface vlan 1
Ruijie(config-if-VLAN 1)#ip address 1.1.1.2 255.255.255.0
Ruijie(config-if-VLAN 1)#bfd interval 50 min_rx 50 multiplier 3
Ruijie(config-if-VLAN 1)#vrrp 1 ip 1.1.1.1
Ruijie(config-if-VLAN 1)#vrrp 1 bfd 1.1.1.3
```

On Switch 2:

```
Ruijie#configure terminal
```

```
Ruijie(config)#interface vlan 1
Ruijie(config-if-VLAN 1)#ip address 1.1.1.3 255.255.255.0
Ruijie(config-if-VLAN 1)#bfd interval 50 min_rx 50 multiplier 3
Ruijie(config-if-VLAN 1)#vrrp 1 ip 1.1.1.1
Ruijie(config-if-VLAN 1)#vrrp 1 bfd 1.1.1.2
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

### 3.7 vrrp bfd (Global Configuration Mode)

Use this command to enable the global BFD correlation for the IPv4 VRRP backup group to detect the master router status.

Use the **no** form of this command to remove the BFD correlation for IPv4 VRRP.

**vrrp bfd** *interface-type interface-number ip-address*

**no vrrp bfd**

| Parameter          | Parameter               | Description                         |
|--------------------|-------------------------|-------------------------------------|
| <b>Description</b> | <i>interface-type</i>   | Interface type and interface number |
|                    | <i>interface-number</i> |                                     |
|                    | <i>ip-address</i>       | Neighbor IP address                 |

**Defaults** By default, the global BFD correlation for IPv4 VRRP is disabled.

**Command Mode** Global configuration mode

**Usage Guide** After the global BFD correlation for IPv4 VRRP is configured, the BFD correlation configuration for the IPv4 VRRP groups will be removed.

The global BFD correlation for IPv4 VRRP configured later will override the earlier configuration.

The IP address and BFD session of the interface must be configured before configuring the vrrp bfd command.

The global IPv4 VRRP BFD session applies to the IPv4 VRRP router which consists of two devices only.

**Configuration Examples** The following example enables global BFD correlation for IPv4 VRRP.

```
Ruijie#configure terminal
Ruijie(config)#interface vlan 1
Ruijie(config-if-VLAN 1)#ip address 192.168.201.11 255.255.255.0
Ruijie(config-if-VLAN 1)#bfd interval 50 min_rx 50 multiplier 3
Ruijie(config-if-VLAN 1)#exit
```

```
Ruijie(config)# vrrp bfd vlan 1 192.168.201.10
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

### 3.8 vrrp delay

Use this command to set the reload latency of the VRRP group on the interface.

Use the **no** form of this command to restore the default setting.

**vrrp delay** { **minimum** *min-seconds* | **reload** *reload-seconds* }

**no vrrp delay**

| Parameter          | Parameter                           | Description                                                                                                                                                                                 |
|--------------------|-------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b> | <b>minimum</b> <i>min-seconds</i>   | When the interface is up, VRRP group shall be reloaded after at least <i>min-seconds</i> .                                                                                                  |
|                    | <b>reload</b> <i>reload-seconds</i> | The reload latency of the VRRP group. If the configured <i>min-seconds</i> is greater than <i>reload-seconds</i> , the actual reload latency of the VRRP group will be <i>min-seconds</i> . |

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** After the delay is configured for a VRRP group on an interface, the VRRP group starts after the delay instead of immediately upon system startup or the interface's resumption, ensuring non-preemption. If the interface receives a VRRP packet during the delay, the delay will be canceled and the VRRP will be started immediately. The two types of delay share a value range of 0 to 60 seconds. This configuration will be effective for both IPv4 and IPv6 VRRP groups of an interface.

**Configuration Examples** The following example sets the VRRP reload latency on E0 to 10 seconds. When E0 is up, VRRP group 1 shall be reloaded in 10 seconds.

```
Ruijie#configure terminal
Ruijie(config)#interface GigabitEthernet 0/0
Ruijie(config-if-GigabitEthernet 0/0)#no switchport //used on the switch.
Ruijie(config-if-GigabitEthernet 0/0)#vrrp delay minimum 10 reload 10
Ruijie(config-if-GigabitEthernet 0/0)#ip address 10.0.1.1 255.255.255.0
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ip 10.0.1.20
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

### 3.9 vrrp description

Use this command to specify a descriptor for the VRRP.

Use the **no** form of this command to restore the default setting.

**vrrp [ ipv6 ] group description text**

**no vrrp [ ipv6 ] group description**

| Parameter Description | Parameter    | Description           |
|-----------------------|--------------|-----------------------|
|                       | <b>ipv6</b>  | Applies to IPv6 VRRP. |
|                       | <i>group</i> | VRRP group number     |
|                       | <i>text</i>  | VRRP group descriptor |

**Defaults** This function is disabled by default. Even if the VRRP function is enabled, no VRRP group descriptor is configured by default.

**Command Mode** Interface configuration mode

**Usage Guide** This command will set the descriptor for the VRRP group to facilitate the identification of the VRRP group.

**Configuration Examples** The following example labels the VRRP group 1 on Ethernet interface E0 as Building A – Marketing and Administration.

```
Ruijie#configure terminal
Ruijie(config)#interface GigabitEthernet 0/0
Ruijie(config-if-GigabitEthernet 0/0)#ip address 10.0.1.1 255.255.255.0
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ip 10.0.1.20
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 description "Building A -
Marketing and Administration"
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ipv6 fe80::1
Ruijie(config-if-GigabitEthernet 0/0)#vrrp ipv6 1 description "Building B -
Marketing and Administration"
```

| Related Commands | Command                                       | Description                                                             |
|------------------|-----------------------------------------------|-------------------------------------------------------------------------|
|                  | <b>vrrp group ip ip-address [ secondary ]</b> | Enables the VRRP function and set the IP address for the virtual device |

**Platform** N/A

## Description

### 3.10 vrrp ip

Use this command to enable VRRP on the interface and specify the related virtual IP address.

Use the **no** form of this command to restore the default setting.

**vrrp group ip** *ipaddress* [ **secondary** ]

**no vrrp group ip** *ipaddress* [ **secondary** ]

| Parameter   | Parameter        | Description                                               |
|-------------|------------------|-----------------------------------------------------------|
| Description | <i>group</i>     | VRRP group number of the virtual device                   |
|             | <i>ipaddress</i> | IP address of the virtual device                          |
|             | <b>secondary</b> | Specifies the secondary IP address of the virtual device. |

**Defaults** This function is disabled by default.

**Command** Interface configuration mode

**Mode**

**Usage Guide** If the **secondary** parameter is not used, the IP address set here will become the master IP address of the virtual device.

**Configuration Examples** The following example enables the VRRP function on Ethernet interface 0. The VRRP group number is 1, primary IP address of the virtual device is 10.0.1.20 and secondary IP address is 10.0.2.20.

```
Ruijie#configure terminal
Ruijie(config)#interface GigabitEthernet 0/0
Ruijie(config-if-GigabitEthernet 0/0)#no switchport //used on the switch.
Ruijie(config-if-GigabitEthernet 0/0)#ip address 10.0.1.1 255.255.255.0
Ruijie(config-if-GigabitEthernet 0/0)#ip address 10.0.2.1 255.255.255.0
secondary
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ip 10.0.1.20
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ip 10.0.2.20 secondary
```

| Related  | Command                                          | Description                      |
|----------|--------------------------------------------------|----------------------------------|
| Commands | <b>show vrrp</b> [ <b>brief</b>   <b>group</b> ] | Displays the VRRP configuration. |

**Platform** N/A

**Description**

### 3.11 vrrp ipv6

Use this command to enable IPv6 VRRP on the interface and specify the related virtual IPv6 address.

Use the **no** form of the command to restore the default setting.



**vrrp group ipv6** *ipv6-address*

**no vrrp group ip** *ipv6-address*

| Parameter   | Parameter           | Description                             |
|-------------|---------------------|-----------------------------------------|
| Description | <i>group</i>        | VRRP group number of the virtual device |
|             | <i>ipv6-address</i> | IPv6 address of the virtual device      |

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** IPv6 VRRP and IPv4 VRRP share group numbers ranging from 1 to 255. One VRRP group number of an interface is applicable to both IPv4 VRRP and IPv6 VRRP at the same time. The first configured address should be the link's local address, which cannot be deleted until the other virtual addresses are deleted.

**Configuration Examples** The following example enables the IPv6 VRRP function on Ethernet interface FastEthernet 0/0 with VRRP group number 1 and virtual IPv6 address FE80::1 and 2001::1.

```
Ruijie#configure terminal
Ruijie(config)#interface GigabitEthernet 0/0
Ruijie(config-if-GigabitEthernet 0/0)#no switchport //used on the switch.
Ruijie(config-if-GigabitEthernet 0/0)#ipv6 enable
Ruijie(config-if-GigabitEthernet 0/0)#ipv6 address 2001::2/64
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ipv6 FE80::1
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ipv6 2001::1
```

| Related Commands | Command                                 | Description                           |
|------------------|-----------------------------------------|---------------------------------------|
|                  | <b>show ipv6 vrrp [ brief   group ]</b> | Displays the IPv6 VRRP configuration. |

**Platform Description** N/A

### 3.12 vrrp preempt

Use this command to set the preemption mode of the VRRP group.

Use the **no** form of this command to restore the default setting.

**vrrp [ ipv6 ] group preempt [ delay seconds ]**

**no vrrp [ ipv6 ] group preempt [ delay ]**

| Parameter   | Parameter    | Description           |
|-------------|--------------|-----------------------|
| Description | <b>ipv6</b>  | Applies to IPv6 VRRP. |
|             | <i>group</i> | VRRP group number     |

|                             |                                                                                                |
|-----------------------------|------------------------------------------------------------------------------------------------|
| <b>delay</b> <i>seconds</i> | (Optional) Specifies the delay before a device declares itself master. The default value is 0. |
|-----------------------------|------------------------------------------------------------------------------------------------|

**Defaults** This function is disabled by default. Once the VRRP function is enabled, the VRRP group will work in the preemption mode by default.

**Command** Interface configuration mode

**Mode**

**Usage Guide** If the VRRP group is working in the preemption mode, once a device finds its priority is higher than the priority of the master, it will become the master device of the VRRP group. If the VRRP group is not working in the preemption mode, even if a device finds its priority is higher than the master's priority, it will not become the master device of the VRRP group. In case the VRRP group is using the Ethernet interface IP address, the setting of the preemption mode does not make sense, because that VRRP group has the highest priority and thus automatically becomes the master device in the VRRP group.

**Configuration Examples** The following example enables IPv4 VRRP on interface GigabitEthernet 0/0. When VRRP group 1 finds its priority (200) is higher than that of the current master device, it will declare its preemption of master after a delay of 15 seconds.

```
Ruijie#configure terminal
Ruijie(config)#interface GigabitEthernet 0/0
Ruijie(config-if-GigabitEthernet 0/0)#no switchport //used on the switch.
Ruijie(config-if-GigabitEthernet 0/0)#ip address 10.0.1.1 255.255.255.0
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ip 10.0.1.20
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 preempt delay 15
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 priority 200
```

The following example enables IPv4 VRRP on interface GigabitEthernet 0/0. When VRRP group 1 finds its priority (200) is higher than that of the current master device, it will declare its preemption of master after a delay of 15 seconds.

```
Ruijie#configure terminal
Ruijie(config)#interface GigabitEthernet 0/0
Ruijie(config-if-GigabitEthernet 0/0)#no switchport //used on the switch.
Ruijie(config-if-GigabitEthernet 0/0)#ipv6 enable
Ruijie(config-if-GigabitEthernet 0/0)#ipv6 address 2001::2/64
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ipv6 FE80::1
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ipv6 2001::1
Ruijie(config-if-GigabitEthernet 0/0)#vrrp ipv6 1 preempt delay 15
Ruijie(config-if-GigabitEthernet 0/0)#vrrp ipv6 1 priority 200
```

**Related Commands**

| Command                                                    | Description                                                              |
|------------------------------------------------------------|--------------------------------------------------------------------------|
| <b>vrrp group ip</b> <i>ipaddress</i> [ <b>secondary</b> ] | Enables the VRRP function and set the IP address for the virtual device. |
| <b>vrrp group priority</b> <i>level</i>                    | Sets the VRRP group priority.                                            |

**Platform** N/A  
**Description**

### 3.13 vrrp priority

Use this command to specify the priority of the VRRP group.

Use the **no** form of this command to restore the default setting.

**vrrp [ ipv6 ] group priority level**

**no vrrp [ ipv6 ] group priority**

| Parameter          | Parameter    | Description                                    |
|--------------------|--------------|------------------------------------------------|
| <b>Description</b> | <b>ipv6</b>  | Specifies the priority of the IPv6 VRRP group. |
|                    | <i>group</i> | VRRP group number                              |
|                    | <i>level</i> | VRRP group priority                            |

**Defaults** This function is disabled by default. Once the VRRP function is enabled, the default priority of the VRRP group is 100.

**Command** Interface configuration mode  
**Mode**

**Usage Guide** This command is used to manually configure the VRRP router priority.

**Configuration** The following example sets the priority of IPv4 VRRP group 1 as 254.

**Examples**

```
Ruijie#configure terminal
Ruijie(config)#interface GigabitEthernet 0/0
Ruijie(config-if-GigabitEthernet 0/0)#no switchport //used on the switch.
Ruijie(config-if-GigabitEthernet 0/0)#ip address 10.0.1.1 255.255.255.0
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ip 10.0.1.20
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 priority 254
```

The following example sets the priority of IPv6 VRRP group 1 as 254.

```
Ruijie#configure terminal
Ruijie(config)#interface GigabitEthernet 0/0
Ruijie(config-if-GigabitEthernet 0/0)#no switchport //used on the switch.
Ruijie(config-if-GigabitEthernet 0/0)#ipv6 enable
Ruijie(config-if-GigabitEthernet 0/0)#ipv6 address 2001::2/64
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ipv6 FE80::1
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ipv6 2001::1
Ruijie(config-if-GigabitEthernet 0/0)#vrrp ipv6 1 priority 254
```

| Related         | Command                                      | Description                              |
|-----------------|----------------------------------------------|------------------------------------------|
| <b>Commands</b> | <b>vrrp group ip ipaddress [ secondary ]</b> | Enables the VRRP function and set the IP |

|                                             |                                       |
|---------------------------------------------|---------------------------------------|
|                                             | address for the virtual device.       |
| <b>vrrp group preempt [ delay seconds ]</b> | Sets the VRRP in the preemption mode. |

**Platform** N/A

**Description**

### 3.14 vrrp timers advertise

Use this command to specify the interval for the master device to send the VRRP advertisement.

Use the **no** form of this command to restore the default setting.

**vrrp [ ipv6 ] group timers advertise { advertise-interval | csec centisecond-interval }**

**no vrrp [ ipv6 ] group timers advertise**

| Parameter          | Parameter                        | Description                                                                                                                                                                                                                                |
|--------------------|----------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Description</b> | <b>ipv6</b>                      | Applies to IPv6 VRRP.                                                                                                                                                                                                                      |
|                    | <i>group</i>                     | VRRP group number                                                                                                                                                                                                                          |
|                    | <i>advertise-interval</i>        | Sets the interval time in seconds between sending VRRP advertisement.                                                                                                                                                                      |
|                    | <b>csec centisecond-interval</b> | Sets the interval time in milliseconds between sending advertisement frames from the master VRRP router in the backup group. The range is from 50 to 99. This value is not set by default.<br>This parameter takes effect only for VRRPv3. |

**Defaults** This function is disabled by default. Once the VRRP function is enabled, the default advertisement interval of the master device is one second.

**Command** Interface configuration mode

**Mode**

**Usage Guide** If the current device becomes the master device in the VRRP group, it will notify its VRRP status, priority and other information by sending the VRRP advertisement in the set interval. Based on the RFC specification, the maximum advertisement interval of the IPv4/IPv6 VRRPv3 group is 40 seconds. The advertisement interval can be configured larger than 40 seconds, but the effective advertisement interval is 40 seconds.

**Configuration** The following example sets the IPv4 VRRP advertisement interval as 4 seconds.

**Examples**

```
Ruijie#configure terminal
Ruijie(config)#interface GigabitEthernet 0/0
Ruijie(config-if-GigabitEthernet 0/0)#no switchport //used on the switch.
Ruijie(config-if-GigabitEthernet 0/0)#ip address 10.0.1.1 255.255.255.0
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ip 10.0.1.20
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 timers advertise 4
```

The following example sets the IPv6 VRRP advertisement interval as 4 seconds.

```
Ruijie#configure terminal
```

```
Ruijie(config)#interface GigabitEthernet 0/0
Ruijie(config-if-GigabitEthernet 0/0)#no switchport //used on the switch.
Ruijie(config-if-GigabitEthernet 0/0)#ipv6 enable
Ruijie(config-if-GigabitEthernet 0/0)#ipv6 address 2001::2/64
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ipv6 FE80::1
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ipv6 2001::1
Ruijie(config-if-GigabitEthernet 0/0)#vrrp ipv6 1 timers advertise 4
```

The following example sets the IPv4 VRRP advertisement interval as 50 centi-seconds.

```
Ruijie#configure terminal
Ruijie(config)#interface GigabitEthernet 0/0
Ruijie(config-if-GigabitEthernet 0/0)#no switchport //used on the switch.
Ruijie(config-if-GigabitEthernet 0/0)#ip address 10.0.1.1 255.255.255.0
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ip 10.0.1.20
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 timers advertise csec 50
```

The following example sets the IPv6 VRRP advertisement interval as 50 centi-seconds.

```
Ruijie#configure terminal
Ruijie(config)#interface GigabitEthernet 0/0
Ruijie(config-if-GigabitEthernet 0/0)#no switchport //used on the switch.
Ruijie(config-if-GigabitEthernet 0/0)#ipv6 enable
Ruijie(config-if-GigabitEthernet 0/0)#ipv6 address 2001::2/64
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ipv6 FE80::1
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ipv6 2001::1
Ruijie(config-if-GigabitEthernet 0/0)#vrrp ipv6 1 timers advertise csec 50
```

#### Related Commands

| Command                                                    | Description                                                              |
|------------------------------------------------------------|--------------------------------------------------------------------------|
| <b>vrrp group ip <i>ipaddress</i> [ <b>secondary</b> ]</b> | Enables the VRRP function and set the IP address for the virtual device. |
| <b>vrrp group timers learn</b>                             | Enables the timer learning function.                                     |

**Platform** N/A  
**Description**

### 3.15 vrrp timers learn

Use this command to enable the timer learning function.

Use the **no** form of this command to restore the default setting.

**vrrp [ *ipv6* ] group timers learn**

**no vrrp [ *ipv6* ] group timers learn**

#### Parameter Description

| Parameter    | Description           |
|--------------|-----------------------|
| <b>ipv6</b>  | Applies to IPv6 VRRP. |
| <b>group</b> | VRRP group number     |

**Defaults** This function is disabled by default. Even if the VRRP function is enabled, the timer learning function

is disabled by default.

**Command** Interface configuration mode

**Mode**

**Usage Guide** Once the timer learning function is enabled, if the current device is a VRRP backup device, it will learn the VRRP advertisement interval from the VRRP advertisement of the master device, with which it calculates the master device's failure interval instead of the VRRP advertisement interval configured locally. This command may synchronize the VRRP advertisement timer with the master device.

**Configuration** The following example enables the timer learning function on the IPv4 VRRP group 1.

**Examples**

```
Ruijie#configure terminal
Ruijie(config)#interface GigabitEthernet 0/0
Ruijie(config-if-GigabitEthernet 0/0)#no switchport //used on the switch.
Ruijie(config-if-GigabitEthernet 0/0)#ip address 10.0.1.1 255.255.255.0
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ip 10.0.1.20
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 timers learn
```

The following example to enables the timer learning function on the IPv6 VRRP group 1.

```
vrrp ipv6 1 timers learn
Ruijie#configure terminal
Ruijie(config)#interface GigabitEthernet 0/0
Ruijie(config-if-GigabitEthernet 0/0)#no switchport //used on the switch.
Ruijie(config-if-GigabitEthernet 0/0)#ipv6 enable
Ruijie(config-if-GigabitEthernet 0/0)#ipv6 address 2001::2/64
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ipv6 FE80::1
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ipv6 2001::1
Ruijie(config-if-GigabitEthernet 0/0)#vrrp ipv6 1 timers learn
```

**Related  
Commands**

| Command                                                    | Description                                                                |
|------------------------------------------------------------|----------------------------------------------------------------------------|
| <b>vrrp group ip</b> <i>ipaddress</i> [ <b>secondary</b> ] | Enables the VRRP function and set the IP address for the virtual device.   |
| <b>vrrp group ipv6</b> <i>ipaddress</i>                    | Enables the VRRP function and set the IPv6 address for the virtual device. |
| <b>vrrp group timers advertise</b> <i>interval</i>         | Sets the IPv4 VRRP advertising interval.                                   |
| <b>vrrp ipv6 group timers advertise</b> <i>interval</i>    | Sets the IPv6 VRRP advertising interval.                                   |

**Platform** N/A

**Description**

### 3.16 vrrp track

Use these commands to enable the IPv4/IPv6 VRRP track in the interface configuration mode. Use the no form of these commands to restore the default setting.

```

vrrp group track { interface-type interface-number | bfd interface-type interface-number
ipv4-address } [ priority ]
vrrp ipv6 group track interface-type interface-number [ priority ]
no vrrp [ ipv6 ] group track interface-type interface-number

```

Use these commands to enable VRRP IPv4/IPv6 address track. Use the **no** form of these commands to restore the default setting.

```

vrrp group track ipv4-address [ interval interval-value ] [ timeout timeout-value ] [ retry retry-value ]
[ priority ]
vrrp ipv6 group track { ipv6-global-address | ipv6-linklocal-address interface-type interface-number }
[ interval interval-value ] [ timeout timeout-value ] [ retry retry-value ] [ priority ]
no vrrp group track ipv4-address
no vrrp ipv6 group track { ipv6-global-address | ipv6-linklocal-address interface-type interface-
number }

```

Use this command to disable the specified neighbor IP address track via BFD.

```

no vrrp group track bfd interface-type interface-number ipv4-address

```

| Parameter                     | Parameter                                                                | Description                                                                                                                                            |
|-------------------------------|--------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|
| Description                   | <i>group</i>                                                             | VRRP group number                                                                                                                                      |
|                               | <i>interface-type</i><br><i>interface-number</i>                         | Type of monitored interface                                                                                                                            |
|                               | <b>bfd</b> <i>interface-type</i><br><i>interface-number ipv4-address</i> | Enables the specified neighbor IP address track via BFD.                                                                                               |
|                               | <i>priority</i>                                                          | VRRP priority change range when the interface or ip address reachability status changes. If this parameter is not selected, the default value is 10.   |
|                               | <b>ipv6</b>                                                              | Applies to IPv6 VRRP.                                                                                                                                  |
|                               | <i>ipv4-address</i>                                                      | Monitored IPv4 address. With BFD configured, it refers to the neighbor IP address.                                                                     |
|                               | <b>interval</b> <i>interval-value</i>                                    | The interval of time to probe whether the monitored ip address is reachable or not. If this parameter is not selected, the default value is 3 seconds. |
|                               | <b>timeout</b> <i>timeout-value</i>                                      | The timeout time of the unreachable monitored ip address. If this parameter is not selected, the default value is 1 seconds.                           |
|                               | <b>retry</b> <i>retry-value</i>                                          | Track retries. If the value is reached, the link is thought unreachable. If this parameter is not configured, the default value is 3.                  |
|                               | <i>ipv6-global-address</i>                                               | Global unicast IPv6 address                                                                                                                            |
| <i>ipv6-linklocal-address</i> | Local link IPv6 address                                                  |                                                                                                                                                        |

#### Defaults

This function is disabled by default. Even if the VRRP function is enabled, no interface or IP address is specified.

**Command** Interface configuration mode  
**Mode**

**Usage Guide**

- i This command can be used to monitor the outlet links. Note that layer-3 routable logical interfaces can be monitored (such as Routed Port, SVI, Loopback and Tunnel).
- i If a host is monitored, specify the IPv4 address for the IPv4 VRRP router or the IPv6 address for the IPv6 VRRP router.
- i If the host IP address is link-local, an interface must be specified.
- i If a VRRP router owns the IP address of the physical interface, the priority is 255. Keep the priority when the monitored IP address or interface is set.

**Configuration Examples** The following example enables the VRRP group 1 to monitor the routed port Fa1/1. If the Fa1/1 link is disconnected, the priority of the VRRP group decreases by 30. When the Fa1/1 link recovers, the priority of VRRP group 1 is restored.

```
Ruijie#configure terminal
Ruijie(config)#interface GigabitEthernet 0/0
Ruijie(config-if-GigabitEthernet 0/0)#no switchport //used on the switch.
Ruijie(config-if-GigabitEthernet 0/0)#ip address 10.0.1.1 255.255.255.0
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ip 10.0.1.20
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 priority 254
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 track GigabitEthernet 1/1 30
```

The following example sets the VRRP to track the specified neighbor IP address 192.168.1.3 through BFD:

```
Ruijie#configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#interface FastEthernet 0/1
Ruijie(config-if)#no switchport //used on the switch.
Ruijie(config-if)#ip address 192.168.1.1 255.255.255.0
Ruijie(config-if)#bfd interval 50 min_rx 50 multiplier 3
Ruijie(config)#interface FastEthernet 0/2
Ruijie(config-if)#no switchport //used on the switch
Ruijie(config-if)#ip address 192.168.201.17 255.255.255.0
Ruijie(config-if)#vrrp 1 priority 120
Ruijie(config-if)#vrrp 1 ip 192.168.201.1
Ruijie(config-if)#vrrp 1 track bfd FastEthernet 0/1 192.168.1.3 30
Ruijie(config-if)#end
```

**Related Commands**

| Command                                            | Description                              |
|----------------------------------------------------|------------------------------------------|
| <code>vrrp group ip ipaddress [ secondary ]</code> | Enables the VRRP function and set the IP |



|                                  |                                 |
|----------------------------------|---------------------------------|
|                                  | address for the virtual device. |
| <b>vrrp group priority level</b> | Sets the VRRP group priority.   |

**Platform** N/A

**Description**

### 3.17 vrrp version

Use this command to configure the version of sending the IPv4 VRRP multicast packets.

For the IPv4 VRRP, there are two versions: VRRPv2 and VRRPv3.

Use the **no** form of this command to restore the default setting.

**vrrp group version { 2 | 3 }**

**no vrrp group version**

| Parameter          | Parameter | Description                                  |
|--------------------|-----------|----------------------------------------------|
| <b>Description</b> | <b>2</b>  | Uses the VRRPv2 version to send the packets. |
|                    | <b>3</b>  | Uses the VRRPv3 version to send the packets. |

**Defaults** The default is VRRPv2.

**Command** Interface configuration mode

**Mode**

**Usage Guide** Considering the compatibility of VRRPv2 and VRRPv3 for the IPv4 VRRP, you can choose the version of VRRP packets based on the actual network environment. VRRPv2 is based on RFC3768 and VRRPv3 is based on RFC 5798.

 This command is applicable to IPv4 VRRP only.

**Configuration Examples** The following example configures the version of sending the IPv4 VRRP packets on the interface gi0/0.

```
Ruijie#configure terminal
Ruijie(config)#interface GigabitEthernet 0/0
Ruijie(config-if-GigabitEthernet 0/0)#no switchport //used on the switch.
Ruijie(config-if-GigabitEthernet 0/0)#ip address 10.0.1.1 255.255.255.0
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ip 10.0.1.20
Ruijie(config-if-GigabitEthernet 0/0)# vrrp 1 version 3
```

**Related Commands**

| Command                                      | Description                                                              |
|----------------------------------------------|--------------------------------------------------------------------------|
| <b>vrrp group ip ipaddress [ secondary ]</b> | Enables the VRRP function and set the IP address for the virtual device. |
| <b>vrrp group timers advertise interval</b>  | Sets the interval of sending the VRRP advertisement.                     |

**Platform** N/A

**Description**

### 3.18 vrrp detection-vlan

Use this command to enable IPv4 VRRP packets to be sent to only the first or a specified Sub VLAN in a Super VLAN interface.

Use the **no** form of this command to enable IPv4 VRRP packets to be sent to all the Sub VLANs in a Super VLAN interface.

**vrrp detection-vlan** {**first-subvlan** | *subvlan-id*}

**no vrrp detection-vlan**

| Parameter          | Parameter            | Description                                                                      |
|--------------------|----------------------|----------------------------------------------------------------------------------|
| <b>Description</b> | <b>first-subvlan</b> | IPv4 VRRP packets are sent to only the first Sub VLAN in a Super VLAN interface. |
|                    | <i>subvlan-id</i>    | IPv4 VRRP packets are sent to a specified Sub VLAN in a Super VLAN interface.    |

**Defaults** By default, IPv4 VRRP packets are sent to only the first Sub VLAN in a Super VLAN interface.

**Command** Interface configuration mode

**Mode**

**Usage Guide** Use this command to configure the mode in which IPv4 VRRP packets are sent to a Super VLAN interface. There are three modes in which IPv4 VRRP packets are sent to a Super VLAN interface: to only the first Sub VLAN, to a specified Sub VLAN, or all Sub VLANs.

 This command is configured on a VLAN interface and applies only to Super VLAN interfaces.

**Configuration** The following example enables IPv4 VRRP packets to be sent to all Sub VLANs in Super VLAN 3.

**Examples**

```
Ruijie#configure terminal
Ruijie(config)# vlan 3
Ruijie(config-vlan)# supervlan
Ruijie(config-vlan)# subvlan 5-10
Ruijie(config-vlan)#exit
Ruijie(config)#interface vlan 3
Ruijie(config-if)# no vrrp detection-vlan
```

| Related Commands | Command        | Description                                                   |
|------------------|----------------|---------------------------------------------------------------|
|                  | <b>vrrp ip</b> | Enables the VRRP function and set the IP address of the VRRP. |

**Platform** N/A

**Description**

## 4 VRRP Plus Commands

### 4.1 show vrrp balance

Use this command to display the VRRP Plus brief or details.

**show vrrp balance** [ **brief** | *group* ]

| Parameter Description | Parameter    | Description                                |
|-----------------------|--------------|--------------------------------------------|
|                       | <b>brief</b> | (Optional) Displays the VRRP Plus brief.   |
|                       | <i>group</i> | (Optional) Displays the VRRP Plus details. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** If no optional parameter is used, the details of all VRRP Plus group are displayed.

**Configuration Examples** The following example displays the details of all VRRP Plus groups.

```
Ruijie#show vrrp balance
VLAN 1 - Group 1
  State is BVG
  Virtual IP address is 192.168.1.54
  Hello time 1 sec, hold time 3 sec
  Load balancing: host-dependent
  Redirect time 300 sec, forwarder time-out 14400 sec
  Weighting 90 (configured 100), thresholds: lower 1, upper 100
  Track object 1, state: down, decrement weight: 10
  There are 2 forwarders
  Forwarder 1 (local)
    MAC address:
      0000.5e00.0101
    Owner ID is 00d0.f822.33ab
  Forwarder 2
    MAC address:
      001a.a916.0201
  Owner ID is 00d0.f822.8800
Ruijie#show ipv6 vrrp balance
VLAN 2 - Group 1
  State is BVG
  Virtual IPv6 address is as follows:
    FE80::8
```

```

2000::8
Hello time 2 sec, hold time 6 sec
Load balancing: weighted
Redirect time 300 sec, forwarder time-out 14400 sec
Weighting 100 (configured 100), thresholds: lower 1, upper 100
There are 2 forwarders
Forwarder 1 (local)
  MAC address:
    0000.5e00.0201
  Owner ID is 00d0.f822.33f5
  Preemption disabled (BVG cannot be preempted)
Forwarder 2
  MAC address:
    1414.4b72.7701
  Owner ID is 00d0.f822.33b9
Preemption enabled

```

The following example shows the brief of the VRRP Plus group.

```

Ruijie# show vrrp balance brief
Interface Grp  State      Group Addr      MAC addr
VLAN 1      1   BVG       192.168.1.1    0000.5e00.0101

```

#### Related Commands

| Command                                                                      | Description                                                       |
|------------------------------------------------------------------------------|-------------------------------------------------------------------|
| <b>vrrp group balance</b>                                                    | Enables the VRRP Plus function.                                   |
| <b>vrrp group load-balancing { host-dependent   round-robin   weighted }</b> | Sets the load balancing policy of the VRRP Plus.                  |
| <b>show vrrp balance interface type number [ brief ]</b>                     | Displays the VRRP Plus running status of the specified interface. |

**Platform** N/A

**Description**

## 4.2 show vrrp balance interface

Use this command to display the actions of the VRRP Plus group on the specified interface.

**show vrrp balance interface type number [ brief ]**

#### Parameter Description

| Parameter                    | Description                                |
|------------------------------|--------------------------------------------|
| <b>interface type number</b> | Specifies the interface type and number.   |
| <b>brief</b>                 | (Optional) Displays the brief information. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** N/A

**Configuration** The following example displays the actions of the VRRP Plus on FastEthernet 0/0.

```

Ruijie# show vrrp balance interface FastEthernet 0/0
FastEthernet 0/0 - Group 1
  State is BVG
  Virtual IP address is 192.168.1.54
  Hello time 1 sec, hold time 3 sec
  Load balancing: host-dependent
  Redirect time 300 sec, forwarder time-out 14400 sec
  Weighting 90 (configured 100), thresholds: lower 1, upper 100
    Track object 1, state: down, decrement weight: 10
  There are 2 forwarders
  Forwarder 1 (local)
    MAC address:
      0000.5e00.0101
    Owner ID is 00d0.f822.33ab
  Forwarder 2
    MAC address:
      001a.a916.0201
    Owner ID is 00d0.f822.8800

```

**Related Commands**

| Command                                                                      | Description                                                       |
|------------------------------------------------------------------------------|-------------------------------------------------------------------|
| <b>vrrp group balance</b>                                                    | Enables the VRRP Plus function.                                   |
| <b>vrrp group load-balancing { host-dependent   round-robin   weighted }</b> | Sets the load balancing policy of the VRRP Plus.                  |
| <b>show vrrp balance interface type number [ brief ]</b>                     | Displays the VRRP Plus running status of the specified interface. |

**Platform** N/A

**Description**

### 4.3 vrrp balance

Use this command to enable the VRRP Plus function.

Use the **no** form of this command to disable this function.

**vrrp group balance**

**no vrrp group balance**

| Parameter<br>Description | Parameter | Description  |
|--------------------------|-----------|--------------|
|                          |           | <i>group</i> |

**Defaults** VRRP Plus is disabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** To enable VRRP Plus, you must configure the VRRP group first.

**Configuration Examples** The following example enables the VRRP Plus function on the Layer 3 interface GigabitEthernet0/0.

```
Ruijie#config
Ruijie(config)#interface GigabitEthernet 0/0
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ip 192.168.1.1
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 balance
```

| Related<br>Commands | Command                            | Description                                                       |
|---------------------|------------------------------------|-------------------------------------------------------------------|
|                     | <b>vrrp load-balancing</b>         | Sets the load balancing policy of the VRRP Plus.                  |
|                     | <b>show vrrp balance</b>           | Displays the VRRP Plus running status.                            |
|                     | <b>show vrrp balance interface</b> | Displays the VRRP Plus running status of the specified interface. |

**Platform Description** N/A

## 4.4 vrrp forwarder preempt

Use this command to enable the forwarding preemption on the VRRP Plus backup group.

Use the **no** form of this command to disable this function.

**vrrp *group* forwarder preempt**

**no vrrp *group* forwarder preempt**

| Parameter<br>Description | Parameter | Description  |
|--------------------------|-----------|--------------|
|                          |           | <i>group</i> |

**Defaults** By default, forwarding preemption is enabled.

**Command Mode** Interface configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example enables the forwarding preemption function of the VRRP Plus backup group on the Layer3 interface GigabitEthernet 0/0.

```
Ruijie#config
Ruijie(config)#interface GigabitEthernet 0/0
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ip 192.168.1.1
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 balance
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 forwarder preempt
```

**Related Commands**

| Command                                                  | Description                                                       |
|----------------------------------------------------------|-------------------------------------------------------------------|
| <b>vrrp group balance</b>                                | Enables the VRRP Plus function.                                   |
| <b>show vrrp balance [ brief   group ]</b>               | Displays the VRRP Plus running status.                            |
| <b>show vrrp balance interface type number [ brief ]</b> | Displays the VRRP Plus running status of the specified interface. |

**Platform** N/A

**Description**

## 4.5 vrrp load-balancing

Use this command to set the VRRP Plus load balancing policy.

Use the **no** form of this command to restore the default setting.

**Vrrp group load-balancing { host-dependent | round-robin | weighted }**

**no vrrp group load-balancing { host-dependent | round-robin | weighted }**

**Parameter Description**

| Parameter             | Description                                                                                                                                           |
|-----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>group</i>          | Specifies the VRRP group ID.                                                                                                                          |
| <b>host-dependent</b> | Sets the host-dependent load balancing policy, so as to use the different virtual MACs to reply the host's ARP request based on different hosts.      |
| <b>round-robin</b>    | Sets the round-robin balancing policy, so as to use the different virtual MACs to reply the host's ARP request in turn, which is the default setting. |
| <b>weighted</b>       | Sets the weight balancing policy, so as to perform the ARP reply based on the device weight of the backup group.                                      |

**Defaults** The default is round-robin.

**Command Mode** Interface configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example sets the load balancing policy of the VRRP Plus group1 on Layer 3 interface GigabitEthernet0/0 as host-dependent.

```
Ruijie# config t
Ruijie(config)# interface GigabitEthernet 0/0
Ruijie(config-if-GigabitEthernet 0/0)# vrrp 1 ip 192.168.1.1
Ruijie(config-if-GigabitEthernet 0/0)# vrrp 1 balance
Ruijie(config-if-GigabitEthernet 0/0)# vrrp 1 load-balancing host-dependent
```

**Related Commands**

| Command                                                  | Description                                                      |
|----------------------------------------------------------|------------------------------------------------------------------|
| <b>vrrp group balance</b>                                | Enables the VRRP Plus function.                                  |
| <b>show vrrp balance [ brief   group ]</b>               | Displays the VRRP Plus running status.                           |
| <b>show vrrp balance interface type number [ brief ]</b> | Displays the VRRP Plus running status o the specified interface. |

**Platform** N/A

**Description**

## 4.6 vrrp timers redirect

Use this command to set the redirection interval and timeout of the proxy virtual MAC address for the VRRP Plus backup group.

Use the **no** form of this command to restore the default value.

**vrrp group timers redirect redirect timeout**

**no vrrp group timers redirect**

**Parameter Description**

| Parameter       | Description                                                                                        |
|-----------------|----------------------------------------------------------------------------------------------------|
| <i>group</i>    | VRRP Plus backup group ID, in the range of 1 to 255.                                               |
| <i>redirect</i> | The redirection time, 300 seconds (namely 5 minutes) by default, in the range of 0 to 3,600.       |
| <i>timeout</i>  | The timeout, 14,400 seconds (namely 4 hours) by default, in the range of (redirect+600) to 64,800. |

**Defaults** The default redirection interval is 300 seconds and redirection timeout is 14,400 seconds.

**Command Mode** Interface configuration mode

**Usage Guide** The VRRP Plus function should be enabled before setting the redirection interval and timeout of the



proxy virtual MAC address for the VRRP Plus backup group.

**Configuration Examples** The following example sets the redirection interval and timeout of the proxy virtual MAC address for the VRRP Plus backup group.

```
Ruijie#config
Ruijie(config)#interface GigabitEthernet 0/0
Ruijie(config-if-GigabitEthernet 0/0)# vrrp 1 ip 192.168.1.1
Ruijie(config-if-GigabitEthernet 0/0)# vrrp 1 balance
Ruijie(config-if-GigabitEthernet 0/0)# vrrp 1 timers redirect 300 6000
```

**Related Commands**

| Command                                                  | Description                                                      |
|----------------------------------------------------------|------------------------------------------------------------------|
| <b>vrrp group balance</b>                                | Enables the VRRP Plus function.                                  |
| <b>show vrrp balance [ brief   group ]</b>               | Displays the VRRP Plus running status.                           |
| <b>show vrrp balance interface type number [ brief ]</b> | Displays the VRRP Plus running status o the specified interface. |

**Platform** N/A

**Description**

## 4.7 vrrp weighting

Use this command to set the weight and threshold of the VRPP Plus backup group.

Use the **no** form of this command to restore the default setting.

**vrrp group weighting maximum [ lower lower ] [ upper upper ]**

**no vrrp group weighting**

**Parameter Description**

| Parameter      | Description                                                     |
|----------------|-----------------------------------------------------------------|
| <i>group</i>   | VRRP Plus backup group ID, in the range of 1 to 255.            |
| <i>maximum</i> | Weight, 100 by default, in the range of 2 to 254.               |
| <i>lower</i>   | Weight lower, 1 by default, in the range of 1 to (maximum-1)    |
| <i>upper</i>   | Weight upper, 100 by default, in the range of lower to maximum. |

**Defaults** VRRP Plus backup group weight: 100

Weight lower: 1

Weight upper: 100

**Command Mode** Interface configuration mode

**Usage Guide** The VRRP Plus function should be enabled before setting the weight and threshold of the VRRP Plus backup group

**Configuration** The following example sets the weight and threshold of the VRRP Plus group1.

**Examples**

```
Ruijie#config t
Ruijie(config)#interface GigabitEthernet 0/0
Ruijie(config-if-GigabitEthernet 0/0)# vrrp 1 ip 192.168.1.1
Ruijie(config-if-GigabitEthernet 0/0)# vrrp 1 balance
Ruijie(config-if-GigabitEthernet 0/0)# vrrp 1 weighting 50 lower 30 upper 50
```

**Related  
Commands**

| Command                                                                | Description                                                       |
|------------------------------------------------------------------------|-------------------------------------------------------------------|
| <b>vrrp <i>group</i> balance</b>                                       | Enables the VRRP Plus function.                                   |
| <b>show vrrp balance [ <i>brief</i>   <i>group</i> ]</b>               | Displays the VRRP Plus running status.                            |
| <b>show vrrp balance interface <i>type number</i> [ <i>brief</i> ]</b> | Displays the VRRP Plus running status of the specified interface. |

**Platform** N/A

**Description**

## 5 BFD Commands

### 5.1 bfd

Use this command to set the BFD session parameters.

Use the **no** form of this command to remove the setting.

**bfd interval** *milliseconds* **min\_rx** *milliseconds* **multiplier** *multiplier-value*

**no bfd interval**

| Parameter Description | Parameter                                 | Description                                                                                                                                        |
|-----------------------|-------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <b>interval</b> <i>milliseconds</i>       | Interval of sending the BFD control messages to the BFD session neighbor.<br><i>milliseconds</i> : The range is from 50 to 10,000 ms.              |
|                       | <b>min_rx</b> <i>milliseconds</i>         | Expected interval of receiving the BFD control messages from the BFD session neighbor.<br><i>milliseconds</i> : The range is from 50 to 10,000 ms. |
|                       | <b>multiplier</b> <i>multiplier-value</i> | Count of BFD control message not received from the peer in the configured interval.<br><i>multiplier-value</i> : The range is from 3 to 50.        |

**Defaults** No BFD session parameter is configured by default.

**Command Mode** Interface configuration mode for single-hop sessions, BFD template mode for multi-hop sessions

**Usage Guide** The express forwarding must be enabled before enabling BFD on the routers. BFD session parameters should be consistent on peers, so that associated protocols will take effect at the same time. If not, one-way forwarding will occur. Set the parameters based on interface bandwidth. If **interval** and **min\_rx** are too short, BFD sessions may occupy much bandwidth and influence data transmission. If multi-hop session parameters need to be configured using a template, configure the template first and then configure BFD multi-hop session parameters.

**Configuration Examples** The following example configures the BFD session parameters on routed port FastEthernet 0/2.

```
Ruijie(config)# interface fastEthernet 0/2
Ruijie(config)# no switchport
Ruijie(config-if)# bfd interval 100 min_rx 100 multiplier 3
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 5.2 bfd bind peer-ip

Use this command to create a BFD session to correlate with an interface.

Use the **no** form of this command to remove this setting.

**bfd bind peer-ip** *ip-address* [ **source-ip** *ip-address* ] **process-pst**

**no bfd bind peer-ip** *ip-address*

| Parameter Description | Parameter                          | Description                                                                                                                                                                         |
|-----------------------|------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <b>peer-ip</b> <i>ip-address</i>   | The peer IP address to be detected, which must be directly connected to the Layer 3 interface.                                                                                      |
|                       | <b>source-ip</b> <i>ip-address</i> | Source IP address for sending the BFD packets, which avoids the packets dropped by the URPF in case that this function is used with other functions such the URPF at the same time. |
|                       | <b>process-pst</b>                 | Correlates BFD for the Layer3 interface.                                                                                                                                            |

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** Note that this command must be configured a Layer 3 interface and the peer IP address detected must be the address directly-connected to the interface.

**Configuration Examples** The following example detects the peer 1.1.1.2 through BFD on the routed port to generate the BFD status of the interface.

```
Ruijie(config)# interface gigabitEthernet 0/2
Ruijie(config-if -GigabitEthernet 0/2)#no sw
Ruijie(config-if -GigabitEthernet 0/2)#ip address 1.1.1.1 255.255.255.0
Ruijie(config-if -GigabitEthernet 0/2)#bfd bind peer-ip 1.1.1.2 source-ip
1.1.1.1 process-pst
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 5.3 bfd cpp

Use this command to enable the BFD protection policy.

Use the **no** form of this command to disable this function.

**bfd cpp**

**no bfd cpp**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** This function is enabled by default.

**Command** Global configuration mode

**Mode**

**Usage Guide** BFD protocol is so sensitive that if the device with BFD function enabled suffers from attack (for example, a large amount of Ping packets attack the device), which lead to the BFD session turbulence, the device can be protected by enabling the BFD protection policy. However, if the BFD function and the BFD protection policy are enabled at the same time, the loss of BFD packets on the attacked device occurs when the packets sent from the last-hop device go through this device, influencing the BFD session establishment between the last-hop device and other devices. This function is valid only for the switches.

**Configuration** The following example enables the BFD protection policy.

**Examples** Ruijie(config)# **bfd cpp**

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 5.4 bfd echo

Use this command to enable echo mode.

Use the **no** form of this command to disable echo mode.

**bfd echo**

**no bfd echo**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|-----------------------|-----------|-------------|

|     |     |
|-----|-----|
| N/A | N/A |
|-----|-----|

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** By default, with BFD session parameter configured, the system enables the echo mode automatically. The minimum sending and receiving interval for the echo packets are the values of the configured **interval** *milliseconds* and **min\_rx** *milliseconds*.  
This command cannot be configured on the AP port.  
Before enabling BFD echo mode, it is necessary to use the **no ip redirects** command to disable the ICMP redirection messages sending on the neighbor device of the BFD session, use the **no ip deny land** to disable the DDOS (Land-based attack prevention) function.  
With both ends of the BFD session enabled, the echo mode takes effect.  
In the process that the forwarding plane of the peer device returns echo packets transmitted by the local end to the local end, the echo packets may be lost due to congestion of the peer device, causing a session detection failure. In this case, configure Quality of Service (QoS) policies to ensure that echo packets are processed preferentially or disable the echo function.  
The echo detection function of BFD does not support multi-hop detection. Ensure that the echo function is disabled when configuring multi-hops.

**Configuration Examples** The following example enables the echo mode on the routed port FastEthernet 0/2:

```
Ruijie(config)# interface fastEthernet 0/2
Ruijie(config)# no switchport
Ruijie(config-if)# bfd echo
```

**Related Commands**

| Command               | Description                           |
|-----------------------|---------------------------------------|
| <b>bfd</b>            | Configures the BFD session parameter. |
| <b>bfd slow-timer</b> | Configures the slow-timer time.       |

**Platform Description** N/A

## 5.5 bfd slow-timer

Use this command to set the slow timer, which is used to send the BFD packets in the BFD asynchronous mode.

Use the **no** form of this command to restore the default setting.

**bfd slow-timer** [ *milliseconds* ]

**no bfd slow-timer**

**Parameter**

| Parameter | Description |
|-----------|-------------|
|-----------|-------------|

|                               |                                                                   |                                                                                  |
|-------------------------------|-------------------------------------------------------------------|----------------------------------------------------------------------------------|
| <b>Description</b>            |                                                                   |                                                                                  |
|                               | <i>milliseconds</i>                                               | BFD slow-timer time. The range is from 1,000 to 30,000. The unit is millisecond. |
| <b>Defaults</b>               | The default slow-timer is 2,000 milliseconds.                     |                                                                                  |
| <b>Command Mode</b>           | Global configuration mode                                         |                                                                                  |
| <b>Usage Guide</b>            | N/A                                                               |                                                                                  |
| <b>Configuration Examples</b> | The following example sets the slow-timer to 14,000 milliseconds. |                                                                                  |
|                               | <pre>Ruijie(config)# bfd slow-timer 14000</pre>                   |                                                                                  |
| <b>Related Commands</b>       | <b>Command</b>                                                    | <b>Description</b>                                                               |
|                               | <b>bfd echo</b>                                                   | Enables the BFD echo function                                                    |
| <b>Platform Description</b>   | N/A                                                               |                                                                                  |

## 5.6 bfd up-dampening

Use this command to set the BFD up-dampening time.

Use the **no** form of this command to restore the default setting.

**bfd up-dampening** [ *milliseconds* ]

**no bfd up-dampening**

|                              |                                                                                                                                                                                                                                                                                                                                                                                                                         |                                                                                                     |
|------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------|
| <b>Parameter Description</b> | <b>Parameter</b>                                                                                                                                                                                                                                                                                                                                                                                                        | <b>Description</b>                                                                                  |
|                              | <i>milliseconds</i>                                                                                                                                                                                                                                                                                                                                                                                                     | (Optional) Sets the BFD up-dampening time. The range is from 0 to 300,000. The unit is millisecond. |
| <b>Defaults</b>              | The default is 0 millisecond, which means that the notification is sent to the related application once the session state is UP.                                                                                                                                                                                                                                                                                        |                                                                                                     |
| <b>Command Mode</b>          | Interface configuration mode for single-hop sessions, BFD template mode for multi-hop sessions                                                                                                                                                                                                                                                                                                                          |                                                                                                     |
| <b>Usage Guide</b>           | <p>This function needs to be enabled only when the link is instable.</p> <p>If a BFD session does not frequently switch over between Down and Up, the enabling of BFD flapping dampening will delay notifying an associated application of BFD Up.</p> <p>If multi-hop session parameters need to be configured using a template, configure the template first and then configure BFD multi-hop session parameters.</p> |                                                                                                     |

**Configuration** The following example sets the BFD up-dampening time to 60,000 milliseconds.

**Examples** Ruijie(config)# bfd up-dampening 60000

**Related  
Commands**

| Command    | Description                           |
|------------|---------------------------------------|
| <b>bfd</b> | Configures the BFD session parameter. |

**Platform** N/A

**Description**

## 5.7 show bfd neighbors

Use this command to display the BFD session parameters.

**show bfd neighbors** [ vrf *vrf-name* ] [ client { ap | bgp | isis | ospf | ospfv3 | rip | vrrp | static-route | pbr | vrrp-balance | pst } ] [ ipv4 *ip-address* | ipv6 *ip-address* ] [ details ]

**Parameter  
Description**

| Parameter                     | Description                                                                 |
|-------------------------------|-----------------------------------------------------------------------------|
| <b>vrf</b> <i>vrf-name</i>    | (Optional) sets the neighbor VRF name.                                      |
| <b>client</b>                 | (Optional) specifies the routing protocol.                                  |
| <b>ap</b>                     | Displays the BFD session configuration for Layer 3 aggregate ports.         |
| <b>bgp</b>                    | Displays the BFD session configuration for BGP.                             |
| <b>isis</b>                   | Displays the BFD session configuration for ISIS.                            |
| <b>ospf</b>                   | Displays the BFD session configuration for OSPF.                            |
| <b>ospfv3</b>                 | Displays the BFD session configuration for OSPFv3.                          |
| <b>rip</b>                    | Displays the BFD session configuration for RIP.                             |
| <b>vrrp</b>                   | Displays the BFD session configuration for VRRP.                            |
| <b>static-route</b>           | Displays the BFD session configuration for the static route.                |
| <b>pbr</b>                    | Displays the BFD session configuration for PBR.                             |
| <b>vrrp-balance</b>           | Displays the BFD session configuration for the VRRP.                        |
| <b>pst</b>                    | Displays the BFD session configuration and the Layer3 interface status.     |
| <b>ipv4</b> <i>ip-address</i> | (Optional) Displays the session information of the specified IPv4 neighbor. |
| <b>ipv6</b> <i>ip-address</i> | (Optional) Displays the session information of the specified IPv6 neighbor. |
| <b>details</b>                | (Optional) Displays the configurations in detail.                           |

**Defaults** N/A

**Command** Privileged EXEC mode

**Mode**



**Usage Guide** In the information displayed by the **show bfd neighbors** command, the OurAddr field means the source address of the session. The "-" is displayed if the source address is not specified, and it occurs in the BFD session for the LSP backward IP correlation.

**Configuration** The following example displays the BFD session configuration.

**Examples**

```
Ruijie# sh bfd neighbors
IPV4 sessions: 1, UP: 1
IPV6 sessions: 0, UP: 0
OurAddr      NeighAddr    LD/RD      RH Holddown(mult) State Int
192.168.24.2 192.168.24.1 8192/8192  Up  0(3)      Up GigabitEthernet 0/1
```

The following example displays the BFD session configuration in detail.

```
Ruijie#sh bfd neighbors
IPV4 sessions: 1, UP: 1
IPV6 sessions: 0, UP: 0
OurAddr      NeighAddr    LD/RD      RH/RS    Holddown(mult) State Int
192.168.24.2 192.168.24.1 8192/8192  Up       0(3 )      Up
GigabitEthernet 0/1
Session state is Up and using echo function with 50 ms interval.
Local Diag:  0,      Demand mode:  0,      Poll bit:  0
MinTxInt: 3000000,      MinRxInt: 3000000,      Multiplier:  3
Received MinRxInt 3000000, Multiplier:  3
Holddown (hits): 9000(0), Hello (hits): 3000(36)
Rx Count: 127, Rx Interval (ms) min/max/avg: 40/999/999
Tx Count: 135, Tx Interval (ms) min/max/avg: 1000/1000/999
Registered protocols: VRRP
Uptime: 0:01:19
Last packet:
Version      :      1          - Diagnostic    : 0
State bit    :      Up        - Demand bit    : 0
Poll bit     :      0          - Final bit     : 0
Multiplier  :      3          - Length        : 24
My Discr     :      8192       - Your Discr    : 8192
Min tx interval : 3000000      - Min rx interval: 3000000
Min Echo interval: 50000
```

The following example displays the BFD session configuration for Layer 3 aggregate ports.

```
Ruijie#show bfd neighbors client ap
IPV4 sessions: 1, UP: 0
IPV6 sessions: 0, UP: 0
OurAddr      NeighAddr    LD/RD      RH/RS    Holddown(mult) State Int
192.168.23.1 192.168.23.2 8192/0     Admin    0(3 )      Down
GigabitEthernet 0/2 (AP 1)
```

**Related**

| Command | Description |
|---------|-------------|
|---------|-------------|

**Commands**

|     |     |
|-----|-----|
|     |     |
| N/A | N/A |

**Platform**

N/A

**Description**

## 6 IP Event Dampening Commands

### 6.1 dampening

Use this command to enable the IP event dampening function on the interface. Use the **no** or **default** form of this command to disable this function.

**dampening** [ *half-life-period* [ *reuse-threshold* *suppress-threshold* *max-suppress* [ **restart** [ *restart-penalty* ] ] ] ] ]

**no dampening**

**default dampening**

| Parameter Description | Parameter                 | Description                                                                                                                             |
|-----------------------|---------------------------|-----------------------------------------------------------------------------------------------------------------------------------------|
|                       | <i>half-life-period</i>   | Configures the half-life period of suppression penalty. The range is from 1 to 30. The unit is seconds. The default value is 5 seconds. |
|                       | <i>reuse-threshold</i>    | Configures the penalty threshold to unsuppress the interface. The range is from 1 to 20,000. The default value is 1,000.                |
|                       | <i>suppress-threshold</i> | Configures the penalty threshold to suppress the interface. The range is from 1 to 20,000. The default value is 2,000.                  |
|                       | <i>max-suppress</i>       | Configures the maximum suppress time. The range is from 1 to 255. The default value is 4 times of the <i>half-life-period</i> .         |
|                       | <b>restart-penalty</b>    | Configures the initial penalty value on the interface. The range is from 1 to 20,000. The default value is 2,000.                       |

**Defaults** IP event dampening is disabled by default.

**Command mode** Interface configuration mode.

**Usage Guide** This function will influence the modules of the directly-connected/host route, static route, dynamic route and VRRP. If one interface meets the configuration condition of this command, which is in the suppression status, the above influenced modules consider the status of this interface as DOWN, so as to delete the corresponding route and not transceive the data packets on this interface. Re-configuring the dampening command on the interface that has been configured this command makes all dampening information on this interface cleared. However, the interface flapping times will be remained unless use the clear counters command to clear the statistical information of the interface.

**Configuration** The following example configures the IP event dampening function.

**Examples**

```
Ruijie(config)#interface gigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)# no switchport
Ruijie(config-if-GigabitEthernet 0/1)# dampening 30 1500 10000 100
```

| Related<br>Commands | Command                         | Description                                         |
|---------------------|---------------------------------|-----------------------------------------------------|
|                     | <b>clear counters</b>           | Clears the interface counters.                      |
|                     | <b>show dampening interface</b> | Displays the statistics of the dampening interface. |
|                     | <b>show interface dampening</b> | Displays details of the dampening interface.        |

**Platform** When a Layer-3 port on a switch is converted to a Layer-2 port (for example, from a routed port to a switch port), the IP Event Dampening configuration on the port will be deleted.

**Description**

## 6.2 show dampening interface

Use this command to show the statistics of the dampening interface.

**show dampening interface**

| Parameter<br>Description | Parameter | Description |
|--------------------------|-----------|-------------|
|                          | N/A       | N/A         |

**Defaults** N/A

**Command mode** Privileged EXEC mode/ global configuration mode/ interface configuration mode

**Usage Guide** N/A

**Configuration** The following example displays the statistics of the dampening interface.

**Examples**

```
Ruijie# show dampening interface
3 interfaces are configured with dampening.
No interface is being suppressed.
```

| Related<br>Commands | Command                         | Description                                               |
|---------------------|---------------------------------|-----------------------------------------------------------|
|                     | <b>dampening</b>                | Enables the IP event dampening function on the interface. |
|                     | <b>clear counters</b>           | Clears the interface counters.                            |
|                     | <b>show interface dampening</b> | Displays details of IP event dampening configuration.     |

**Platform** N/A

**Description**

## 6.3 show interface dampening

Use this command to display the details of IP event dampening configuration.

**show interface** [ *interface-Id* ] **dampening**

| Parameter Description | Parameter           | Description    |
|-----------------------|---------------------|----------------|
|                       | <i>interface-id</i> | Interface name |

**Defaults** N/A

**Command mode** Privileged EXEC mode/ global configuration mode/ interface configuration mode

**Usage Guide** If the interface-id is specified, only the dampening information of this specified interface is displayed.

**Configuration** The following example shows the details of IP event dampening configuration.

```
Ruijie# show interface dampening Ethernet1/0
Flaps Penalty Supp ReuseTm HalfL ReuseV SuppV MaxSTm MaxP Restart
0 0 FALSE 0 5 1000 2000 20 16000 0
```

| Domain  | Description                                   |
|---------|-----------------------------------------------|
| Flaps   | Interface flapping times.                     |
| Penalty | The current penalty value on the interface.   |
| Supp    | Suppressed or not.                            |
| ReuseTm | Time to unsuppress the interface, in seconds. |
| HalfL   | Half-life period, in seconds.                 |
| ReuseV  | Unsuppressed threshold.                       |
| SuppV   | Start suppression threshold.                  |
| MaxSTm  | Maximum suppression time.                     |
| MaxP    | Maximum penalty value.                        |
| Restart | The initial penalty value on the interface.   |

| Related Commands | Command                         | Description                                     |
|------------------|---------------------------------|-------------------------------------------------|
|                  | <b>dampening</b>                | Enables the IP event dampening function.        |
|                  | <b>clear counters</b>           | Clears the interface counters.                  |
|                  | <b>show dampening interface</b> | Displays statistics of the dampening interface. |

**Platform Description** N/A

## 7 VSU Commands

### 7.1 dad relay enable

Use this command to enable the Dual-Active Detection (DAD) relay function.

Use the **no** form of this command to restore the default setting.

**dad relay enable**

**no dad relay enable**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** This command is only supported on the aggregate port (AP).

**Configuration Examples** The following example enables the AP-based DAD relay function.

```
Ruijie(config)#interface aggregateport 1
Ruijie(config-if-AggregatePort 1)#dad relay enable
```

The following example disables the AP-based DAD relay function.

```
Ruijie(config)#interface aggregateport 1
Ruijie(config-if-AggregatePort 1)#no dad relay enable
Ruijie(config-if-AggregatePort 1)#exit
```

| Related Commands | Command                                | Description                                                                         |
|------------------|----------------------------------------|-------------------------------------------------------------------------------------|
|                  | <b>dual-active detection</b>           | Configures DAD.                                                                     |
|                  | <b>dual-active pair interface</b>      | Configures a pair of Bidirectional Forwarding Detection (BFD)-based DAD interfaces. |
|                  | <b>dual-active exclude interface</b>   | Configures an exclude interface of DAD.                                             |
|                  | <b>show switch virtual dual-active</b> | Displays the configuration and status of DAD.                                       |

**Platform** N/A

**Description**

### 7.2 dual-active bfd interface

Use this command to configure a BFD port.

Use the **no** form of this command to remove the setting.

**dual-active bfd interface** *interface-name*

**no dual-active bfd interface** *interface-name*

| Parameter   | Parameter             | Description    |
|-------------|-----------------------|----------------|
| Description | <i>interface-name</i> | Interface name |

**Defaults** N/A

**Command Mode** config-vs-domain configuration mode

**Usage Guide** The BFD port must be a routing port on the peer end.

**Configuration** The following examples configures interface Gi 1/1/1 as a BFD port.

**Examples**

```
Ruijie(config)# interface GigabitEthernet 1/1/1
Ruijie(config-if- GigabitEthernet 1/1/1)# no switchport
Ruijie(config)# interface GigabitEthernet 2/1/1
Ruijie(config-if- GigabitEthernet 2/1/1)# no switchport
Ruijie(config)# switch virtual domain 1
Ruijie(config-vs-domain)# dual-active bfd interface GigabitEthernet 1/1/1
Ruijie(config-vs-domain)# dual-active bfd interface GigabitEthernet 2/1/1
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 7.3 dual-active detection

Use this command to enable DAD.

Use the **no** form of this command to restore the default setting.

**dual-active detection { bfd | aggregateport }**

**no dual-active detection { bfd | aggregateport }**

| Parameter   | Parameter            | Description   |
|-------------|----------------------|---------------|
| Description | <b>bfd</b>           | BFD-based DAD |
|             | <b>aggregateport</b> | AP-based DAD  |

**Defaults** This function is disabled by default.

**Command Mode** config-vs-domain configuration mode

**Usage Guide** Configure this command only in virtual switch unit (VSU) mode.

**Configuration** The following example enables BFD-based DAD.

```
Ruijie(config)# switch virtual domain 1
Ruijie(config-vs-domain)# dual-active detection bfd
```

The following example disables BFD-based DAD.

```
Ruijie(config)# switch virtual domain 1
Ruijie(config-vs-domain)# no dual-active detection bfd
```

The following example enables AP-based DAD.

```
Ruijie(config)# switch virtual domain 1
Ruijie(config-vs-domain)# dual-active detection aggregateport
```

The following example disables AP-based DAD.

```
Ruijie(config)# switch virtual domain 1
Ruijie(config-vs-domain)#no dual-active detection aggregateport
```

**Related  
Commands**

| Command                                | Description                                   |
|----------------------------------------|-----------------------------------------------|
| <b>dual-active pair interface</b>      | Configures a DAD interface.                   |
| <b>dual-active exclude interface</b>   | Configures an exclude interface of DAD.       |
| <b>show switch virtual dual-active</b> | Displays the configuration and status of DAD. |

**Platform** N/A  
**Description**

## 7.4 dual-active exclude interface

Use this command to configure an exclude interface of DAD.

Use the **no** form of this command to remove the exclude interface setting.

**dual-active exclude interface** *interface-name*

**no dual-active exclude interface** *interface-name*

| Parameter          | Parameter             | Description    |
|--------------------|-----------------------|----------------|
| <b>Description</b> | <i>interface-name</i> | Interface name |

**Defaults** N/A

**Command Mode** config-vs-domain configuration mode

**Usage Guide** Configure this command only in VSU mode.  
An exclude interface must be a routing interface instead of a virtual switch link (VSL) interface.  
Multiple exclude interfaces are supported.

**Configuration** The following example configures interface Gi 1/1/3 as an exclude interface of DAD.

```
Ruijie(config)# interface GigabitEthernet 1/0/3
```



```
Ruijie(config-if- GigabitEthernet 1/0/3)# no switchport
Ruijie(config)# switch virtual domain 1
Ruijie(config-vs-domain)# dual-active exclude interface GigabitEthernet
1/0/3
```

| Related Commands | Command                                | Description                                   |
|------------------|----------------------------------------|-----------------------------------------------|
|                  | <b>dual-active detection</b>           | Configures DAD.                               |
|                  | <b>dual-active pair interface</b>      | Configures a DAD interface.                   |
|                  | <b>show switch virtual dual-active</b> | Displays the configuration and status of DAD. |

**Platform**  
**Description** N/A

## 7.5 dual-active interface

Use this command to configure an AP-based DAD interface.

Use the **no** form of this command to remove the setting.

**dual-active interface** *interface-name*

**no dual-active interface**

| Parameter          | Parameter             | Description                                                                       |
|--------------------|-----------------------|-----------------------------------------------------------------------------------|
| <b>Description</b> | <i>interface-name</i> | Interface type and interface number. An AP-based DAD interface must be specified. |

**Defaults** N/A

**Command Mode** config-vs-domain configuration mode

**Usage Guide** Only one AP-based detection interface can be configured. Create an AP-based interface before setting it to a detection interface. The previous detection interface will be overwritten by the current detection interface.

**Configuration** The following example configures AP 1 as the AP-based detection interface.

**Examples**

```
Ruijie(config)# interface aggregateport 1
Ruijie(config-if-AggregatePort 1)#exit
Ruijie(config)# switch virtual domain 1
Ruijie(config-vs-domain)# dual-active interface aggregateport 1
```

| Related Commands | Command                                | Description                                   |
|------------------|----------------------------------------|-----------------------------------------------|
|                  | <b>dual-active detection</b>           | Configures BFD-/AP-based DAD.                 |
|                  | <b>show switch virtual dual-active</b> | Displays the configuration and status of DAD. |

**Platform** N/A

## Description

## 7.6 port-member interface

Use this command to add a VSL-AP member interface.

Use the **no** form of this command to delete a VSL-AP member interface.

**port-member interface** *interface-name*

**no port-member interface** *interface-name*

| Parameter   | Parameter             | Description                                                               |
|-------------|-----------------------|---------------------------------------------------------------------------|
| Description | <i>interface-name</i> | Interface name, for example, GigabitEthernet 0/1 and GigabitEthernet 0/3. |

**Defaults** N/A

**Command Mode** config-vsl-port configuration mode

**Usage Guide** Configure this command in VSU mode or in standalone mode.

**Configuration Examples** The following example adds and deletes a VSL-AP member port in standalone mode.

```
Ruijie(config)# vsl-port
Ruijie(config-vsl-port)# port-member interface GigabitEthernet 0/1
Ruijie(config-vsl-port)# no port-member interface GigabitEthernet 0/2
```

The following example adds and deletes a VSL-AP member port in VSU mode.

```
Ruijie(config)# vsl-port
Ruijie(config-vsl-port)# port-member interface GigabitEthernet 1/0/1
Ruijie(config-vsl-port)# no port-member interface GigabitEthernet 1/0/1
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 7.7 led-blink

Use this command to configure LED blink function.

**led-blink** {enable | disable} [**device** *device\_id*]

| Parameter   | Parameter      | Description             |
|-------------|----------------|-------------------------|
| Description | <b>enable</b>  | Enables this function.  |
|             | <b>disable</b> | Disables this function. |

|                  |           |
|------------------|-----------|
| <i>device_id</i> | Device ID |
|------------------|-----------|

**Defaults** This function is disabled by default.

**Command Mode** Privileged EXEC mode

**Usage Guide** In single-device mode, this function can be only enabled and disabled.  
 In VSU mode, a device can be specified. If not specified, all devices in the VSU will be configured.  
 If running for 30 minutes, this function is disabled automatically even without any operation.  
 The configuration cannot be saved. In case of restart or active/standby switch-over, it will be removed.

**Configuration** The following example enables and disables LED blink function.

**Examples**

```
Ruijie#led-blink enable
Ruijie#led-blink disable
```

The following example enables and disables LED blink function on Device 2.

```
Ruijie#led-blink enable device 2
Ruijie#led-blink disable device 2
```

The following example enables and disables LED blink function in VSU.

```
Ruijie#led-blink enable
Ruijie#led-blink disable
```

**Related**

**Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform**

**Description**

N/A

## 7.8 session

Use this command to perform redirection to a host or a device console.

**session { device *switch\_id* | master }**

**Parameter**

**Description**

| Parameter        | Description                                 |
|------------------|---------------------------------------------|
| <b>device</b>    | Redirects to the member device console.     |
| <i>switch_id</i> | Member device number, varying with products |
| <b>master</b>    | Redirects to the host console.              |

**Defaults**

N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** This command takes effect in VSU mode.

**Configuration Examples** The following example redirects the serial port console of standby device 2 to the master device console.

```
Ruijie-STANDBY#session master
Ruijie#exit
Ruijie-STANDBY#
```

The following example redirects the master device console to the console of standby device 2 and exits.

```
Ruijie#session device 2
Ruijie-STANDBY#exit
Ruijie#
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description**

N/A

## 7.9 show switch id

Use this command to display the device ID.

**show switch id**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration Examples** The following example displays the device ID in the standalone mode.

```
Ruijie#show switch id
Switch ID is 2
```

The following example displays the device ID in the VSU device.

```
Ruijie#show switch id
Switch ID is 1
```

**Related Commands**

| Command                    | Description                                               |
|----------------------------|-----------------------------------------------------------|
| <b>show switch virtual</b> | Displays the domain ID as well as the ID and role of each |

|  |          |
|--|----------|
|  | chassis. |
|--|----------|

**Platform**  
**Description**

N/A

## 7.10 show switch virtual

Use this command to display the domain ID as well as the ID, status and role of the device.

### show switch virtual

| Parameter          | Parameter | Description |
|--------------------|-----------|-------------|
| <b>Description</b> | N/A       | N/A         |

**Defaults**

N/A

**Command Mode**

Privileged EXEC mode

**Usage Guide**

N/A

**Configuration Examples**  
The following example displays the domain ID as well as the ID, status and role of the device in standalone mode.

```
Ruijie# show switch virtual
Current system is running in "STANDALONE" mode.
```

The following example displays the domain ID as well as the ID, status and role of each device in VSU mode.

```
Ruijie#show switch virtual
Switch_id   Domain_id   Priority    Status     Role       Description
-----
--
1(1)        1(1)        100(100)   OK         ACTIVE     switch-1
2(2)        1(1)        100(100)   OK         CANDIDATE  switch-2
3(3)        1(1)        100(100)   OK         STANDBY    switch-3
```

**Related Commands**

| Command                      | Description                                            |
|------------------------------|--------------------------------------------------------|
| <b>switch</b>                | Modifies the device ID in standalone mode.             |
| <b>switch priority</b>       | Configures the device priority.                        |
| <b>switch renumber</b>       | Modifies the device ID in VSU mode.                    |
| <b>switch domain</b>         | Modifies the domain ID of a device in VSU mode.        |
| <b>switch virtual domain</b> | Modifies the domain ID of a device in standalone mode. |

**Platform**  
**Description**

N/A

## 7.11 show switch virtual balance

Use this command to display the load balance configuration in VSU mode.

**show switch virtual balance**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the load balance configuration of the device in VSU mode.

**Examples**

```
Ruijie#show switch virtual balance
Aggregate port LFF: enable
```

| Related Commands | Command                    | Description                                                      |
|------------------|----------------------------|------------------------------------------------------------------|
|                  | <b>show switch virtual</b> | Displays the domain ID as well as the ID and role of the device. |

**Platform** N/A  
**Description**

## 7.12 show switch virtual config

Use this command to display the VSU configuration of the device in standalone or VSU mode.

**show switch virtual config [ *switch\_id* ]**

| Parameter   | Parameter        | Description                                             |
|-------------|------------------|---------------------------------------------------------|
| Description | <i>switch_id</i> | Displays the VSU configuration of the specified device. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the VSU configuration of the device in standalone mode.

**Examples**

```
Ruijie#show switch virtual config
mac: 00d0.f810.3323
```

```
!  
switch virtual domain 1  
!  
switch 1  
switch 1 priority 200  
!  
vsl-port  
port-member interface GigabitEthernet 0/1  
port-member interface GigabitEthernet 0/2  
!  
switch convert mode standalone  
!
```

The following example displays the VSU configuration of the device in VSU mode.

```
Ruijie#show switch virtual config  
switch id: 1 (mac: 00d0.f810.1111)  
!  
switch virtual domain 1  
!  
switch 1  
switch 1 priority 200  
switch 1 description switch1  
!  
vsl-port  
port-member interface GigabitEthernet 0/1  
port-member interface GigabitEthernet 0/2  
!  
Switch convert mode virtual  
!  
switch_id: 2 (mac: 00d0.f810.2222)  
!  
switch virtual domain 1  
!  
switch 2  
switch 2 priority 100  
!  
vsl-port  
port-member interface GigabitEthernet Ethernet 0/1  
port-member interface GigabitEthernet 0/2  
!  
Switch convert mode virtual  
!
```

The following example displays the VSU configuration of the device 1 in VSU mode.

```
Ruijie#show switch virtual config 1
switch_id: 1 (mac: 00d0.f810.1111)
!
switch virtual domain 1
!
switch 1
switch 1 priority 200
switch 1 description switch1
!
vsl-port
port-member interface GigabitEthernet 0/1
port-member interface GigabitEthernet 0/2
!
```

| Related Commands | Command                    | Description                                                        |
|------------------|----------------------------|--------------------------------------------------------------------|
|                  | <b>show switch virtual</b> | Displays the domain ID as well as the ID and role of each chassis. |

**Platform**  
**Description**

N/A

## 7.13 show switch virtual dual-active

Use this command to display the configuration of DAD.

**show switch virtual dual-active { bfd | aggregateport | summary }**

| Parameter Description | Parameter            | Description                     |
|-----------------------|----------------------|---------------------------------|
|                       | <b>bfd</b>           | Configuration of BFD-based DAD  |
|                       | <b>aggregateport</b> | Configuration of AP-based DAD   |
|                       | <b>summary</b>       | Configuration and status of DAD |

**Defaults**

N/A

**Command Mode**

Privileged EXEC mode

**Usage Guide**

N/A

**Configuration**

The following example displays the configuration and status of DAD.

**Examples**

```
Ruijie# show switch virtual dual-active summary
BFD dual-active detection enabled: Yes
Aggregateport dual-active detection enabled: No
Interfaces excluded from shutdown in recovery mode:
GigabitEthernet 1/0/3
```



```
GigabitEthernet 1/0/4
In dual-active recovery mode: No
```

The following example displays the configuration of BFD-based DAD.

```
Ruijie# show switch virtual dual-active bfd
BFD dual-active detection enabled: Yes
BFD dual-active interface configured:
    GigabitEthernet 1/0/1: UP
    GigabitEthernet 2/0/2: UP
```

The following example displays the status of AP-based DAD.

```
Ruijie# show switch virtual dual-active aggregateport
Aggregateport dual-active detection enabled: Yes
Aggregateport dual-active interface configured:
AggregatePort 1: UP
    GigabitEthernet 1/0/1: UP
    GigabitEthernet 2/0/1: UP
    GigabitEthernet 1/0/2: UP
    GigabitEthernet 2/0/2: UP
DAD relay enable AP list:
    AggregatePort 1
```

**Related  
Commands**

| Command                              | Description                      |
|--------------------------------------|----------------------------------|
| <b>dual-active detection</b>         | Enables DAD.                     |
| <b>dual-active pair interface</b>    | Configures a DAD interface.      |
| <b>dual-active exclude interface</b> | Configures an exclude interface. |

**Platform  
Description**

N/A

## 7.14 show switch virtual link

Use this command to display the status of a virtual switch link (VSL).

**show switch virtual link [ port ]**

**Parameter  
Description**

| Parameter   | Description                        |
|-------------|------------------------------------|
| <b>port</b> | Displays the port status of a VSL. |

**Defaults**

N/A

**Command Mode**

Privileged EXEC mode

**Usage Guide**

N/A

**Configuration** The following example displays VSL link information.

**Examples**

```
Ruijie# show switch virtual link
VSL-AP  State  Peer-VSL      Rx      Tx      Uptime
-----
-----
1/1     UP     2/1           100000  100000  1d,4h,29m
2/1     UP     1/1           100000  100000  1d,4h,29m
```

The following example displays VSL port information.

```
Ruijie# show switch virtual link port

switch 1:
Port                AP  State  Peer-port          Rx  Tx
  Uptime
-----
-----
GigabitEthernet 1/0/1  1  OK    GigabitEthernet 2/0/1  9000 9000
  0d,0h,20m
GigabitEthernet 1/0/2  2  OK    GigabitEthernet 2/0/2  9000 9000
  0d,0h,20m

Switch 2:
Port                AP  State  Peer-port          Rx  Tx
  Uptime
-----
-----
GigabitEthernet 2/0/1  1  OK    GigabitEthernet 1/0/1  9000 9000
  0d,0h,20m
GigabitEthernet 2/0/2  2  OK    GigabitEthernet 1/0/2  9000 9000
  0d,0h,20m
```

**Related**

**Commands**

| Command                         | Description                                         |
|---------------------------------|-----------------------------------------------------|
| <b>show switch virtual</b>      | Displays information about the VSU system.          |
| <b>show switch virtual role</b> | Displays the ID, role, and priority of each device. |

**Platform**

**Description**

N/A

## 7.15 show switch virtual role

Use this command to display the ID, role, and priority of each chassis.

**show switch virtual role**

**Parameter**

| Parameter | Description |
|-----------|-------------|
|-----------|-------------|

| <b>Description</b>              | N/A                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |         |             |                        |                                                        |                              |                                                        |                                 |                           |  |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------|-------------|------------------------|--------------------------------------------------------|------------------------------|--------------------------------------------------------|---------------------------------|---------------------------|--|
| <b>Defaults</b>                 | N/A                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |         |             |                        |                                                        |                              |                                                        |                                 |                           |  |
| <b>Command Mode</b>             | Privileged EXEC mode                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |         |             |                        |                                                        |                              |                                                        |                                 |                           |  |
| <b>Usage Guide</b>              | N/A                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |         |             |                        |                                                        |                              |                                                        |                                 |                           |  |
| <b>Configuration Examples</b>   | <p>The following example displays the domain ID as well as the ID, status and role of the device in standalone mode.</p> <pre>Ruijie# show switch virtual Current system is running in "STANDALONE" mode.</pre> <p>The following example displays the domain ID as well as the ID, status and role of each device in VSU mode.</p> <pre>Ruijie#show switch virtual Switch_id      Domain_id      Priority      Status      Role      Description ----- -- 1 (1)          1 (1)          100 (100)    OK          ACTIVE    switch-1 2 (2)          1 (1)          100 (100)    OK          CANDIDATE switch-2 3 (3)          1 (1)          100 (100)    OK          STANDBY   switch-3</pre> |         |             |                        |                                                        |                              |                                                        |                                 |                           |  |
| <b>Related Commands</b>         | <table border="1"> <thead> <tr> <th>Command</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td><b>switch priority</b></td> <td>Configures the priority of a device in the VSU system.</td> </tr> <tr> <td><b>switch virtual domain</b></td> <td>Modifies the domain ID of a device in standalone mode.</td> </tr> <tr> <td><b>show switch virtual link</b></td> <td>Displays VSL information.</td> </tr> </tbody> </table>                                                                                                                                                                                                                                                             | Command | Description | <b>switch priority</b> | Configures the priority of a device in the VSU system. | <b>switch virtual domain</b> | Modifies the domain ID of a device in standalone mode. | <b>show switch virtual link</b> | Displays VSL information. |  |
| Command                         | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |         |             |                        |                                                        |                              |                                                        |                                 |                           |  |
| <b>switch priority</b>          | Configures the priority of a device in the VSU system.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |         |             |                        |                                                        |                              |                                                        |                                 |                           |  |
| <b>switch virtual domain</b>    | Modifies the domain ID of a device in standalone mode.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |         |             |                        |                                                        |                              |                                                        |                                 |                           |  |
| <b>show switch virtual link</b> | Displays VSL information.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |         |             |                        |                                                        |                              |                                                        |                                 |                           |  |
| <b>Platform Description</b>     | N/A                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |         |             |                        |                                                        |                              |                                                        |                                 |                           |  |

## 7.16 show switch virtual topology

Use this command to display the VSU topology connection status.

**show switch virtual topology**

| <b>Parameter Description</b> | <table border="1"> <thead> <tr> <th>Parameter</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>N/A</td> <td>N/A</td> </tr> </tbody> </table> | Parameter | Description | N/A | N/A |
|------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|-----------|-------------|-----|-----|
| Parameter                    | Description                                                                                                                                           |           |             |     |     |
| N/A                          | N/A                                                                                                                                                   |           |             |     |     |
| <b>Defaults</b>              | N/A                                                                                                                                                   |           |             |     |     |
| <b>Command Mode</b>          | Privileged EXEC mode                                                                                                                                  |           |             |     |     |
| <b>Usage Guide</b>           | N/A                                                                                                                                                   |           |             |     |     |

**Configuration** The following example displays the topology status.

**Examples**

```
Ruijie# show switch virtual topology
Introduction: '[num]' means switch num, '(num/num)' means vsl-aggregateport
num.

Chain Topology:
[1] (1/2) --- (2/1) [2]

Switch[1]: ACTIVE, MAC: 00d0.f822.33d6, Description: Switch1
Switch[2]: STANDBY, MAC: 1234.5678.9003, Description: Switch2
```

**Field Description**

| Field         | Description         |
|---------------|---------------------|
| Ring Topology | Topology type.      |
| Switch[-]     | Device description. |

**Related**

**Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform**

**Description**

N/A

## 7.17 switch

Use this command to specify the ID of a device in the VSU system.


Use the **no** form of this command to restore the default setting.

**switch** *switch\_id*

**no switch**

**Parameter**

**Description**

| Parameter        | Description                                                                                                        |
|------------------|--------------------------------------------------------------------------------------------------------------------|
| <i>switch_id</i> | ID of a device in the VSU system                                                                                   |
|                  |  The range depends on products. |

**Defaults**

The default is 1.

**Command Mode**

config-vs-domain configuration mode

**Usage Guide**

The device ID identifies each virtual device member. In VSU mode, the interface name format changes to "switch/slot/port" from "slot/port", in which "switch" is the device ID.

If either chassis are active or if the role of the just started chassis is uncertain and both have the same priority, the chassis with a smaller ID is elected as the active one.

This command can be only used to modify the device ID in standalone mode. In VSU mode, run the **switch renumber** command to modify the device ID. The modified device ID takes effect only

after you restart the device, regardless of in standalone mode or in VSU mode.

**Configuration** The following example sets the ID of the device whose domain ID is 1 to 2 in the VSU system.

**Examples**

```
Ruijie(config)# switch virtual domain 1
Ruijie(config-vs-domain)# switch 2
Ruijie(config-vs-domain)# exit
```

**Related**

**Commands**

| Command                      | Description                                                        |
|------------------------------|--------------------------------------------------------------------|
| <b>switch virtual domain</b> | Modifies the domain ID of a device in standalone mode.             |
| <b>switch priority</b>       | Configures the priority of a device in the VSU system.             |
| <b>show switch virtual</b>   | Displays the domain ID as well as the ID and role of each chassis. |

**Platform**

N/A

**Description**

## 7.18 switch convert mode

Use this command to perform conversion between the standalone mode and the VSU mode.

**switch convert mode { virtual | standalone } [ switch\_id ]**

**Parameter**

**Description**

| Parameter         | Description     |
|-------------------|-----------------|
| <b>virtual</b>    | VSU mode        |
| <b>standalone</b> | Standalone mode |
| <i>switch_id</i>  | Device ID       |

**Defaults**

The device is in standalone mode by default.

**Command Mode**

Privileged EXEC mode

**Usage Guide**

After you run the **switch convert mode virtual** command, the software automatically backs up the configuration file in standalone mode, saves it as a **standalone.text** file, and then deletes the **config.text** file. The software also prompts you whether to use the **virtual\_switch.text** file to overwrite the **config.text** file, write the VSU-related configurations to the **config\_vsu\_dat** file, and then restart the device.

After you run the **switch convert mode standalone** command, the active chassis automatically backs up the configuration file in VSU mode, saves it as a **virtual\_switch.text** file, and then deletes the **config.text** file. The active chassis also prompts you whether to use the **standalone.text** file to overwrite the **config.text** file and restart the device.

The **switch convert mode** command can be used in standalone mode or in VSU mode. In standalone mode, this command is used to switch the mode of the current chassis. In VSU mode, this command is used to switch the mode of the device specified by **switch\_id** if **switch\_id** is available and to switch the mode of the active device if **switch\_id** is not available.

You are advised to first switch the mode of the standby device and then the mode of the active

mode.

**Configuration** The following example converts the device mode from the standalone mode into the VSU mode.

**Examples**

```
Ruijie# switch convert mode virtual
```

The following example switches the modes of the standby device (**switch\_id** set to **2**) and the active device (**switch\_id** set to **1**) from the VSU mode to the standalone mode.

```
Ruijie# switch convert mode standalone 2
Ruijie# switch convert mode standalone 1
```

**Related  
Commands**

| Command                      | Description                                                       |
|------------------------------|-------------------------------------------------------------------|
| <b>switch</b>                | Modify the device ID in standalone mode.                          |
| <b>switch virtual domain</b> | Modify the domain ID of a device in standalone mode.              |
| <b>switch priority</b>       | Configure the priority of a device in the VSU system.             |
| <b>show switch virtual</b>   | Display the domain ID as well as the ID and role of each chassis. |

**Platform  
Description**

N/A

## 7.19 switch crc

Use this command to configure parameters for frame error detection.

Use the **no** form of this command to restore the default setting.

**switch crc errors** *error\_num* **times** *time\_num*

**no switch crc**

**Parameter  
Description**

| Parameter        | Description                                                                                                                                                       |
|------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>error_num</i> | Limits the number of error frames increasing from that in the last detection. If the increased number is greater than <i>error_num</i> , it is taken as an error. |
| <i>time_num</i>  | When the error count exceeds the <i>time_num</i> , the device will take actions (prompting a message or disabling the port).                                      |

**Defaults**

The default *error\_num* is 3.

The default *time\_num* is 10.

**Command Mode**

config-vs-domain configuration mode

**Usage Guide**

N/A

**Configuration**

The following example sets the *error\_time* and *time\_num* parameters to 10 and 5 respectively.

**Examples**

```
Ruijie(config)# switch virtual domain 1
Ruijie(config-vs-domain)#
Ruijie(config-vs-domain)#switch crc errors 10 times 5
```

| Related  | Command | Description |
|----------|---------|-------------|
| Commands | N/A     | N/A         |

Platform  
Description

N/A

## 7.20 switch description

Use this command to configure the description for a VSU switch.

Use the **no** form of this command to remove the setting.

**switch** *switch\_id* **description** *dev-name*

**no switch** *switch\_id* **description**

| Parameter   | Parameter        | Description                                        |
|-------------|------------------|----------------------------------------------------|
| Description | <i>switch_id</i> | Device ID                                          |
|             | <i>dev_name</i>  | Device description, no greater than 32 characters. |

Defaults

N/A

Command Mode

config-vs-domain configuration mode

Usage Guide

This command is configured on a device in whether standalone or VSU mode and takes effect immediately after configuration,

Configuration

The following example configures the description for a VSU switch.

Examples

```
Ruijie(config)# switch virtual domain 1
Ruijie(config-vs-domain)# switch 1 description buildingA
Ruijie(config-vs-domain)# exit
```

| Related  | Command | Description |
|----------|---------|-------------|
| Commands | N/A     | N/A         |

Platform  
Description

N/A


## 7.21 switch domain

Use this command to modify the domain ID of a device in VSU mode.

Use the **no** form of this command to restore the default setting.

**switch** *switch\_id* **domain** *new\_domain\_id*

**no switch** *switch\_id* **domain**

| Parameter   | Parameter            | Description                                                                                                                                                                                                     |
|-------------|----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Description | <i>switch_id</i>     | ID of the running device in VSU mode.<br><br> The range depends on products. For details, see the <i>Configuration Guide</i> . |
|             | <i>new_domain_id</i> | New domain ID, in the range from 1 to 255.                                                                                                                                                                      |

**Defaults** The default *new\_domain\_id* is 100 by default.

**Command Mode** config-vs-domain configuration mode

**Usage Guide** Use this command only in VSU mode. In addition, the setting can take effect only after the device is restarted.

**Configuration Examples** The following example sets the domain ID of device 1 to 10 in VSU mode.

```
Ruijie(config)# switch virtual domain 1
Ruijie(config-vs-domain)# switch 1 domain 10
```

The following example sets the domain ID of device 2 to 10 in VSU mode.

```
Ruijie(config)# switch virtual domain 1
Ruijie(config-vs-domain)# switch 2 domain 10
```

The following example sets the domain ID of device 2 to the default value in VSU mode.

```
Ruijie(config)# switch virtual domain 1
Ruijie(config-vs-domain)# no switch 2 domain
```

| Related Commands | Command                      | Description                                                        |
|------------------|------------------------------|--------------------------------------------------------------------|
|                  | <b>switch virtual domain</b> | Modifies the domain ID in standalone mode.                         |
|                  | <b>show switch virtual</b>   | Displays the domain ID as well as the ID and role of each chassis. |

**Platform Description** N/A


## 7.22 switch priority

Use this command to configure the priority of a device in the VSU system.

Use the **no** form of this command to restore the default setting.

**switch** *switch\_id* **priority** *priority\_num*

**no switch** *switch\_id* **priority**

| Parameter   | Parameter        | Description                                                                                                                                                                      |
|-------------|------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Description | <i>switch_id</i> | ID of a device in the VSU system.<br><br> The range depends on products. For details, see the |



|                     |                                                                |
|---------------------|----------------------------------------------------------------|
|                     | <i>Configuration Guide.</i>                                    |
| <i>priority_num</i> | Priority of a device in the VSU system, ranging from 1 to 255. |

**Defaults** The default *priority\_num* is 100.

**Command Mode** config-vs-domain configuration mode

**Usage Guide** A larger value means a higher priority. The chassis with a higher priority is elected as the active chassis.  
You can use this command in standalone mode or in VSU mode. The modified priority takes effect only after you restart the device.  
In VSU mode, **switch\_id** indicates the ID of the running device. If the ID does not exist, the configuration does not effect.

**Configuration** The following example sets the priority of device 1 to **200**.

**Examples**

```
Ruijie(config)# switch virtual domain 1
Ruijie(config-vs-domain)# switch 1 priority 200
Ruijie(config-vs-domain)# exit
```

The following example sets the priority of device 1 to **200** and restores the priority of device 2 to the default value in VSU mode.

```
Ruijie(config)# switch virtual domain 1
Ruijie(config-vs-domain)# switch 1 priority 200
Ruijie(config-vs-domain)# no switch 2 priority
Ruijie(config-vs-domain)# exit
```

**Related  
Commands**

| Command                    | Description                                                        |
|----------------------------|--------------------------------------------------------------------|
| <b>switch</b>              | Modifies the device ID in standalone mode.                         |
| <b>show switch virtual</b> | Displays the domain ID as well as the ID and role of each chassis. |

**Platform** N/A  
**Description**

## 7.23 switch renumber


Use this command to modify the ID of any device in VSU mode.


Use the **no** form of this command to restore the default setting.

**switch** *switch\_id* **renumber** *new\_switch\_id*

**no switch** *switch\_id*

**Parameter  
Description**

| Parameter        | Description                                                                                                                                                  |
|------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>switch_id</i> | ID of the running device in VSU mode                                                                                                                         |
|                  |  The range depends on products. For details, see the <i>Configuration</i> |

|                      |                                                                                                                                                                   |
|----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                      | <i>Guide.</i>                                                                                                                                                     |
| <i>new_switch_id</i> | ID of the new switch                                                                                                                                              |
|                      |  The range depends on products. For details, see the <i>Configuration Guide.</i> |

**Defaults** N/A

**Command Mode** config-vs-domain configuration mode

**Usage Guide** This command is configured in VSU mode. In addition and takes affect after device restart. The **no** form of this command will restore the switch ID to 1.

**Configuration** The following example modifies the ID of device 1 that is running to 2 in VSU mode.

**Examples**

```
Ruijie(config)# switch virtual domain 1
Ruijie(config-vs-domain)# switch 1 renumber 2
```

The following example restores the ID of device 2 that is running to the default value in VSU mode.

```
Ruijie(config)# switch virtual domain 1
Ruijie(config-vs-domain)# no switch 2
```

**Related  
Commands**

| Command                    | Description                                                        |
|----------------------------|--------------------------------------------------------------------|
| <b>switch</b>              | Modifies the device ID in standalone mode.                         |
| <b>show switch virtual</b> | Displays the domain ID as well as the ID and role of each chassis. |

**Platform  
Description** N/A

## 7.24 switch virtual aggregateport lff enable

Use this command to enable the locally-preferred forwarding function on the AP in VSU mode.

Use the **no** form of this command to disable this function.

**switch virtual aggregateport lff enable**

**no switch virtual aggregateport lff enable**

| Parameter          | Parameter | Description |
|--------------------|-----------|-------------|
| <b>Description</b> | N/A       | N/A         |

**Defaults** This function is enabled by default.

**Command Mode** config-vs-domain configuration mode

**Usage Guide** N/A

**Configuration** The following example enables the locally-preferred forwarding function on the AP in VSU mode.

**Examples**

```
Ruijie(config)# switch virtual domain 1
Ruijie(config-vs-domain)# switch virtual aggregateport lff enable
```

**Related  
Commands**

| Command                            | Description                                  |
|------------------------------------|----------------------------------------------|
| <b>show switch virtual balance</b> | Displays the current traffic balancing mode. |

**Platform  
Description** N/A

## 7.25 switch virtual domain

Use this command to modify the domain ID of a device in standalone mode, or enter config-vs-domain configuration mode in VSU mode.

Use the **no** form of this command to restore the default setting.

**switch virtual domain** *domain\_id*

**no switch virtual domain**

**Parameter  
Description**

| Parameter        | Description                                       |
|------------------|---------------------------------------------------|
| <i>domain_id</i> | Domain ID of the VSU, in the range from 1 to 255. |

**Defaults** The default is 100.

**Command Mode** Global configuration mode

**Usage Guide** Only two devices with the same domain ID can form a virtual device. The domain ID must be unique within the local area network (LAN).

**Configuration** The following example sets the domain ID of the VSU to 1 in standalone mode.

**Examples**

```
Ruijie(config)# switch virtual domain 1
Ruijie(config-vs-domain)#
```

**Related  
Commands**

| Command                    | Description                                                        |
|----------------------------|--------------------------------------------------------------------|
| <b>show switch virtual</b> | Displays the domain ID as well as the ID and role of each chassis. |
| <b>switch domain</b>       | Modifies the domain ID in VSU mode.                                |

**Platform  
Description** N/A

## 7.26 switch virtual ecmp lff enable

Use this command to enable the locally-preferred forwarding function on the ECMP interface in VSU mode.

Use the **no** form of this command to disable this function.

**switch virtual ecmp lff enable**

**no switch virtual ecmp lff enable**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** This function is enabled by default.

**Command Mode** config-vs-domain configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example enables the locally-preferred forwarding function on the ECMP interface in VSU mode.

```
Ruijie(config)# switch virtual domain 1
Ruijie(config-vs-domain)#switch virtual ecmp lff enable
```

| Related Commands | Command                            | Description                             |
|------------------|------------------------------------|-----------------------------------------|
|                  | <b>show switch virtual balance</b> | Displays the current load balance mode. |

**Platform Description** N/A

## 7.27 vsl-port

Use this command to enter VSL-PORT mode

**vsl-port**

| Parameter   | Parameter | Description |
|-------------|-----------|-------------|
| Description | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** This command is configured on a device in whether standalone mode or VSU mode.

**Configuration** The following example enters VSL-AP configuration mode on a device in standalone mode.

**Examples**

```
Ruijie(config)# vsl-port  
Ruijie(config-vsl-port)#
```

The following example enters VSL-APPORT configuration mode on a device in VSU mode.

```
Ruijie(config)# vsl-port  
Ruijie(config-vsl-port)#
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform  
Description**

N/A

## 8 RNS &Track Commands

### 8.1 delay

Use this command to specify a period of time after which the tracked object status will change if the interface status changes.

Use the **no** form of this command to restore the default setting.

**delay** { **up** *seconds* [ **down** *seconds* ] | [ **up** *seconds* ] **down** *seconds* }

**no delay**

| Parameter Description | Parameter                  | Description                                                                         |
|-----------------------|----------------------------|-------------------------------------------------------------------------------------|
|                       | <b>up</b> <i>seconds</i>   | Sets the delay time from down to up in the range from 0 to 180. The unit is second. |
|                       | <b>down</b> <i>seconds</i> | Sets the delay time from up to down in the range from 0 to 180. The unit is second. |

**Defaults** There is no delay by default.

**Command Mode** Track configuration mode

**Usage Guide** The continual oscillation of the tracked object status may cause the client of this tracked object changing also. This command can be used to delay advertising the change of the tracked object status. For example, the status of a tracked object changes from up to down, if the delay down 180 is configured, the down status will be advertised after 180 seconds. If the tracked object status changes to the up again in this period, it won't be advertised. For the client of the tracked object, the status of the tracked object is always up.

**Configuration Examples** The following example sets the delay time to 30 seconds when the tracked object changes to up from down.

```
Ruijie(config)# track 5 rns 10
Ruijie(config-track)# delay up 30
Ruijie(config-track)# end
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 8.2 dns

Use this command to set an IP RNS object to send the DNS packets and to enter the IP RNS DNS mode.

**dns** {*destination-hostname* **name-server** *a.b.c.d* [ **source-ipaddr** *ip-address* ] [**out-interface** *type num* [ **next-hop** *A.B.C.D* ] ] | **oob** *destination-hostname* **name-server** *a.b.c.d* [ **source-ipaddr** *ip-address* ] **via** *type num* **next-hop** *A.B.C.D*}

| Parameter Description | Parameter                            | Description                                                                                  |
|-----------------------|--------------------------------------|----------------------------------------------------------------------------------------------|
|                       | <i>destination-hostname</i>          | Sets the destination IP address or the destination host domain name.                         |
|                       | <b>oob</b>                           | Enables management port detection.                                                           |
|                       | <i>a.b.c.d</i>                       | Sets the IP address for the DNS server.                                                      |
|                       | <i>ip-address</i>                    | Indicates the source IP address of RNS packets.                                              |
|                       | <b>out-interface</b> <i>type num</i> | Specifies the egress interface (non-management port) for RNS packets.                        |
|                       | <b>via</b> <i>type num</i>           | Specifies the management port as the egress interface (non-management port) for RNS packets. |
|                       | <i>A.B.C.D</i>                       | Specifies the next-hop IP address for RNS packets.                                           |

**Defaults** N/A

**Command Mode** IP RNS configuration mode

**Usage Guide** Use this command to set an IP RNS object to send the DNS packets and to enter the IP RNS DNS mode. If you want to change the probe type, you should delete the probe first by using the **no ip rns** command and then perform new configuration.

**Configuration Examples** The following example sets the IP RMS object to send the DNS packets.

```
Ruijie(config)# ip rns 1
Ruijie(config-ip-rns)# dns www.ruijie.com.cn name-server 61.154.22.41
Ruijie(config-ip-rns-dns)# exit
Ruijie(config)# ip rns schedule 1 start-time now
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 8.3 frequency

Use this command to set the interval of sending the packets, which must be no smaller than the timeout time.

Use the **no** form of this command to restore the default setting.

**frequency** *milliseconds*

**no frequency**

| Parameter Description | Parameter           | Description                                                                                                |
|-----------------------|---------------------|------------------------------------------------------------------------------------------------------------|
|                       | <i>milliseconds</i> | Sets the interval of sending the packets, in the range from 10 to 604,800,000 in the unit of milliseconds. |

**Defaults** The default is 60 seconds.

**Command** IP RNS ICMP echo configuration mode

**Mode** IP RNS DNS configuration mode

IP RNS TCP configuration mode

**Usage Guide** Use this command to set the interval of sending the ICMP echo or DNS packets, which must accord with the following formula to ensure accuracy:

**frequency** *milliseconds* > **timeout** *milliseconds* >= **threshold** *milliseconds*

**Configuration** The following example configures an ICMP echo probe whose destination address is 192.168.21.1.

**Examples** The frequency, timeout time and threshold are set to 30,000, 8,000 and 6,000 milliseconds respectively.

```
Ruijie(config-ip-rns)#icmp-echo 192.168.21.1
Ruijie(config-ip-rns-icmp-echo)#frequency 30000
Ruijie(config-ip-rns-icmp-echo)#timeout 8000
Ruijie(config-ip-rns-icmp-echo)#threshold 6000
```

| Related Commands | Command        | Description                                      |
|------------------|----------------|--------------------------------------------------|
|                  | <b>timeout</b> | Defines the timeout time of sending the packets. |

**Platform** N/A

**Description**

## 8.4 icmp-echo

Use this command to configure an ICMP echo RNS probe.

**icmp-echo** { *destination-ip-address* | *destination-hostname* [ **name-server** *ip-address* ] }



```
[ source-ipaddr ip-address ] [out-interface type num [ next-hop A.B.C.D ] ] | oob
{ destination-ip-address | destination-hostname [ name-server ip-address ] } [ source-ipaddr
ip-address ] via type num next-hop A.B.C.D
```

| Parameter Description | Parameter                              | Description                                                                                                      |
|-----------------------|----------------------------------------|------------------------------------------------------------------------------------------------------------------|
|                       | <i>destination-hostname</i>            | Sets the destination IP address for the ICMP echo packets.                                                       |
|                       | <b>oob</b>                             | Enables management port detection.                                                                               |
|                       | <i>destination-hostname</i>            | Sets the destination host name within 127 characters. The exceeding characters are truncated automatically.      |
|                       | <b>name-server</b> <i>ip-address</i>   | Sets the domain name server. The default domain name server is configured via the <b>ip name-server</b> command. |
|                       | <b>source-ipaddr</b> <i>ip-address</i> | Sets the source IP address for the ICMP echo packets.                                                            |
|                       | <b>out-interface</b> <i>type num</i>   | Sets the egress port(non-management) for the probe packet.                                                       |
|                       | <b>via</b> <i>type num</i>             | Specifies the management port as the egress interface (non-management port) for probe packets.                   |
|                       | <b>next-hop</b> <i>A.B.C.D</i>         | Sets the next hop IP address.                                                                                    |

**Defaults** N/A

**Command Mode** IP RNS configuration mode

**Usage Guide** This command is used to enable the IP RNS object to send ICMP echo packets containing the specified destination IP address. The default payload size of an ICMP echo packet is 36 bytes. The **request-data-size** command is used to modify the packet size.

You can modify the probe parameter after specifying the type of the IP RNS probe (such as ICMP echo probe). If you want to change the probe type, you should delete the probe first by using the **no ip rns** command and then perform new configuration.

**Configuration Examples** The following example enables the IP RNS object to send the ICMP echo packets containing the destination IP address 10.1.1.1.

```
Ruijie(config)# ip rns 1
Ruijie(config-ip-rns)# icmp-echo 10.1.1.1
Ruijie(config-ip-rns-icmp-echo)# exit
Ruijie(config)# ip rns schedule 1 start-time now life forever
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 8.5 ip rns

Use this command to define an IP RNS operation object and to enter the IP RNS configuration mode.

Use the **no** form of this command to delete an IP RNS operation object.

```
ip rns operation-number [{dns destination-hostname name-server ip-address | icmp-echo
destination-ip-address | tcp-connect destination-ip-address port-number} [frequency seconds]
[timeout milliseconds] [threshold milliseconds]] ]
```

```
no ip rns operation-number
```

| Parameter Description | Parameter                                                                      | Description                                                                                                                                                                                                                                                                                |
|-----------------------|--------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <i>operation-number</i>                                                        | Sets the IP RNS operation object number, in the range from 1 to 500.                                                                                                                                                                                                                       |
|                       | <b>dns</b> <i>destination-hostname</i><br><b>name-server</b> <i>ip-address</i> | Brief DNS detection configuration.<br><i>destination-hostname</i> : Indicates the destination host name. A maximum of 127 characters can be entered. Characters out of this limit will be truncated.<br><b>name-server</b> <i>ip-address</i> : Indicates the IP address of the DNS server. |
|                       | <b>icmp-echo</b><br><i>destination-ip-address</i>                              | Brief ICMP-echo detection configuration.<br><i>destination-ip-address</i> : Indicates the destination IP address.                                                                                                                                                                          |
|                       | <b>tcp-connect</b><br><i>destination-ip-address</i><br><i>port-number</i>      | Brief TCP-connect detection configuration.<br><i>destination-ip-address</i> : Indicates the destination IP address.<br><i>port-number</i> : Indicates the TCP port to be detected.                                                                                                         |
|                       | <b>frequency</b> <i>seconds</i>                                                | Sets the detection interval. For details, see the <b>frequency</b> command.                                                                                                                                                                                                                |
|                       | <b>timeout</b> <i>milliseconds</i>                                             | Sets the timeout time for one IP RNS detection operation. For details, see the <b>timeout</b> command.                                                                                                                                                                                     |
|                       | <b>threshold</b> <i>milliseconds</i>                                           | Sets the upper threshold for one IP RNS detection operation. For details, see the <b>threshold</b> command.                                                                                                                                                                                |

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** Currently, the RNS supports only IPv4-related tests, but not IPv6-related tests. At most 500 tests can be configured, depending on the performance of devices. The test function is only a value-added function. When a large number of tests are configured and consume a lot of system resources, the test function may be temporary disabled to ensure normal operation of core services, such as route forwarding.

Detailed configuration (executing mandatory items of **ip rns** *operation-number*): Run this command and enter the IP-RNS configuration mode. In this mode, you can define various test types. If the test type is not configured, the RNS test is not created. After configuring an RNS test, you must run the **ip rns schedule** command to configure its schedule parameters; otherwise, the test cannot be conducted.

After configuring the type of an RNS test, you can run the **ip rns** command to enter the mode of the

test type. To modify the type of an RNS instance, you need to first delete the RNS instance by running the **no ip rns** command in global configuration mode.

**Configuration** The following example defines the IP RNS object 1.

**Examples**

```
Ruijie(config)# ip rns 1
Ruijie(config-ip-rns)# icmp-echo 10.1.1.1
Ruijie(config-ip-rns-icmp-echo)# threshold 10000
Ruijie(config-ip-rns-icmp-echo)# timeout 20000
Ruijie(config-ip-rns-icmp-echo)# frequency 30000
Ruijie(config-ip-rns-icmp-echo)# exit
Ruijie(config)# ip rns schedule 1 start-time now life forever
```

**Related  
Commands**

| Command                       | Description                                         |
|-------------------------------|-----------------------------------------------------|
| <b>show ip rns statistics</b> | Displays the statistical data on the IP RNS object. |

**Platform** N/A

**Description**

## 8.6 ip rns reaction-configuration

Use this command to configure proactive threshold monitoring and trigger for the IP RNS probe.

Use the **no** form of this command to restore the default setting.

**ip rns reaction-configuration** *operation-number* **react** *monitored-element* [ **action-type** *option* ] [ **threshold-type** { **average** [ *number-of-measurements* ] | **consecutive** [ *occurrences* ] | **immediate** | **never** | **xofy** [ *x-value y-value* ] } ] [ **threshold-value** *upper-threshold lower-threshold* ]  
**no ip rns reaction-configuration** *operation-number* [ **react** *monitored-element* ]

**Parameter  
Description**

| Parameter                        | Description                                                                                                                                                                                                                                                                                                                                                                                                                     |
|----------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>operation-number</i>          | Operation index, in the range from 1 to 500.                                                                                                                                                                                                                                                                                                                                                                                    |
| <i>monitored-element</i>         | <ul style="list-style-type: none"> <li>Monitored element. The available parameters are listed as follows:</li> <li><b>allfail</b>: Failed to monitor all elements. The default action-type is <b>track</b>. This parameter is applied on the track module for communication.</li> <li><b>rtt</b>: Packet round trip time (RTT) exceeds the threshold range.</li> <li><b>•timeout</b>: Timeout in whatever direction.</li> </ul> |
| <b>action-type</b> <i>option</i> | <ul style="list-style-type: none"> <li>The available parameters include:</li> <li><b>none</b>: No action, which is the default setting</li> <li><b>trigger</b>: Only supports the <b>trigger</b> action.</li> </ul>                                                                                                                                                                                                             |

|                                                                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|----------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                            | <ul style="list-style-type: none"> <li><b>track</b>: Only supports the <b>track</b> action. Only when <b>monitored-element is allfail is this parameter supported, which is available exclusively.</b></li> </ul>                                                                                                                                                                                                                                   |
| <b>average</b><br>[ <i>number-of-measurements</i> ]                        | Triggers operation when the average value of <b>number-of-measurements</b> consecutive times exceeds the threshold range. For example, <i>number-of-measurements</i> is set to three. Upper and lower thresholds are 5000 and 4000 respectively. <b>The average value for three consecutive measurements 6000. 6000. 5000 is (6000+6000+5000)/3=5667, exceeding the upper threshold 5000. The valid range is from 1 to 16 and the default is 5.</b> |
| <b>consecutive</b> [ <i>occurrences</i> ]                                  | Triggers operation when the value of monitored element exceeds the threshold range for <i>occurrences</i> consecutive times. The valid range is from 1 to 16. The default is 5.                                                                                                                                                                                                                                                                     |
| <b>immediate</b>                                                           | Triggers operation immediately when the value of monitored element exceeds the threshold range.                                                                                                                                                                                                                                                                                                                                                     |
| <b>never</b>                                                               | Never triggers operation.                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>xofy</b> [ x-value y-value ]                                            | X probes among the latest Y ones exceed the threshold range. The valid X range is from 1 to 16 and the default is 5. The valid Y range is from 1 to 16 and the default is 5.                                                                                                                                                                                                                                                                        |
| <b>threshold-value</b><br><i>upper-threshold</i><br><i>lower-threshold</i> | Configures upper and lower thresholds.<br>When <i>monitored-element</i> is <b>rtt</b> , this parameter indicates time, in the range from 0 to 60,000 milliseconds. See <b>Usage Guide</b> for the default setting.<br>When react type is timeout, you don't need to configure this parameter.                                                                                                                                                       |

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** One IP RNS object can be configured with multiple thresholds monitoring, each for one element. Monitored elements that are supported vary with different probe types.

| monitored-element | icmp-echo | dns | tcp-connect |
|-------------------|-----------|-----|-------------|
| timeout           | ✓         | ✓   | ✓           |
| rtt               | ✓         | ✓   | ✓           |

The default thresholds for monitored elements are listed as follows:

| Monitored Element | Upper Threshold | Lower Threshold |
|-------------------|-----------------|-----------------|
| timeout           | -               | -               |
| rtt               | 5000 ms         | 0 ms            |

**Configuration** The following example configures RNS1 and its threshold monitoring.

```
Examples Ruijie(config)# ip rns 1
Ruijie(config-ip-rns)# icmp-echo 192.168.23.1
```

```
Ruijie(config-ip-rns-icmp-echo)# exit
Ruijie(config)# ip rns schedule 1 start-time now life forever
Ruijie(config)# ip rns reaction-configuration 1 react timeout threshold-type
immediate action-type triggerOnly
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform**

N/A

**Description**

## 8.7 ip rns reaction-trigger

Use this command to enable the IP RNS probe which exceeds the monitoring threshold to trigger another IP RNS probe which is in the pending state.

Use the **no** form of this command to restore the default setting.

**ip rns reaction-trigger** *operation-number target-operation*

**no ip rns reaction-trigger** *operation-number target-operation*

**Parameter  
Description**

| Parameter               | Description                                             |
|-------------------------|---------------------------------------------------------|
| <i>operation-number</i> | The source operation number, in the range from 1 to 500 |
| <i>target-operation</i> | The target operation number, in the range from 1 to 500 |

**Defaults**

N/A

**Command  
Mode**

Global configuration mode

**Usage Guide**

The trigger function is applied in network fault diagnosis scenario

**Configuration**

The following example enables IP RNS1 to trigger IP RNS 2.

**Examples**

```
Ruijie(config)# ip rns 1
Ruijie(config-ip-rns)# icmp-echo www.google.com
Ruijie(config-ip-rns-icmp-echo)# exit
Ruijie(config)# ip rns schedule 1 start-time now life forever
Ruijie(config)# ip rns reaction-configuration 1 react timeout threshold-type
immediate action-type trigger
Ruijie(config)# ip rns 2
Ruijie(config-ip-rns)# dns www.baidu.com name-server 8.8.8.8
Ruijie(config-ip-rns-dns)# exit
Ruijie(config)# ip rns reaction-trigger 1 2
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 8.8 ip rns reset

Use this command to clear all IP RNS configuration.

**ip rns reset**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** This command is used to clear all IP RNS configuration. This command is used only in extreme cases (for example, RNS probe configuration is wrong).

**Configuration Examples** The following example clears all IP RNS configuration.

```
Ruijie(config)# ip rns reset
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 8.9 ip rns restart

Use this command to restart the IP RNS probe.

**ip rns restart operation-number**

| Parameter Description | Parameter               | Description                                                          |
|-----------------------|-------------------------|----------------------------------------------------------------------|
|                       | <i>operation-number</i> | Sets the IP RNS operation object number, in the range from 1 to 500. |

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** This command is used to restart the IP RNS probe whose schedule is in the pending state. This command is invalid for the IP RNS probe not configured with the scheduling policy.

**Configuration** The following example restarts IP RNS 1.

**Examples** Ruijie(config)# ip rns restart 1

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 8.10 ip rns schedule

Use this command to configure the scheduling strategy, start time and survival time for the IP RNS probe. Use the **no** form of this command to restore the default setting.

**ip rns schedule** operation-number [ **life** { **forever** | *seconds* } ] [ **start-time** { *hh:mm* [ *:ss* ] [ *month day* | *day month* ] } | **pending** | **now** | **after** *hh:mm:ss* } ] [ **recurring** ]

**no ip rns schedule** operation-number

| Parameter Description | Parameter                    | Description                                                                                                                 |
|-----------------------|------------------------------|-----------------------------------------------------------------------------------------------------------------------------|
|                       | <i>operation-number</i>      | RNS operation index, in the range from 1 to 500                                                                             |
|                       | <b>life forever</b>          | The RNS operation is valid forever.                                                                                         |
|                       | <b>life</b> <i>seconds</i>   | The RNS survival time, measured in seconds                                                                                  |
|                       | <i>hh:mm</i> [ <i>:ss</i> ]  | Defines the time when the operation starts,                                                                                 |
|                       | <i>month</i>                 | The month when the operation starts, in the range from January (Jan.) to December (Dec.). The default is the current month. |
|                       | <i>day</i>                   | The day when the operation starts, in the range from 1 to 31. The default is the current day.                               |
|                       | <b>pending</b>               | The start time is pending.                                                                                                  |
|                       | <b>now</b>                   | The operation starts right now.                                                                                             |
|                       | <b>after</b> <i>hh:mm:ss</i> | The operation starts after hh hours, mm minutes and ss seconds.                                                             |
|                       | <b>recurring</b>             | The operation starts automatically as scheduled every day.                                                                  |

**Defaults** The IP RNS probe is in the pending state by default. In other words, the probe is not performed unless it is triggered by another RNS probe.

**Command** Global configuration mode  
**Mode**

**Usage Guide** The **ip rns schedule** command is used to configure the IP RNS probe with scheduling policy. Once the scheduling policy is configured, the RNS probe cannot be modified. You can modify the RNS probe after deleting the schedule with the **no ip rns schedule** command.  
 Life {seconds} refers to the survival time of the IP RNS probe. The probe will end after the survival time.

**Configuration** The following example configures the RNS probe with scheduling policy.

**Examples**

```
Ruijie(config)# ip rns 1
Ruijie(config-ip-rns)# icmp-echo 10.1.1.1
Ruijie(config-ip-rns-icmp-echo)# exit
Ruijie(config)# ip rns schedule 1 start-time now life forever
```

Once the scheduling policy is configured, the RNS probe cannot be modified. The RNS probe can be modified after the schedule is deleted.

```
Ruijie(config)# ip rns 1
Entry already running and cannot be modified
    (only can delete (no) and start over)
    (check to see if the probe has finished exiting)
Ruijie(config)# no ip rns schedule 1
Ruijie(config)# ip rns 1
Ruijie(config-ip-rns-icmp-echo)# exit
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 8.11 object

Use this command to add a tracked object to the object track list.

Use the **no** form of this command to delete a traced object.

**object** *object-number* [ **not** ]

**no object** *object-number*

**Parameter Description**

| Parameter            | Description                                       |
|----------------------|---------------------------------------------------|
| <i>object-number</i> | Tracked object number, in the range from 1 to 700 |

**Defaults** No tracked object is configured by default.



**Command** Track configuration mode  
**Mode**

**Usage Guide** This command is used to add a tracked object to the object track list. The number of tracked objects is only restricted by the track list capacity.

**object** *object-number*: The tracked object must be in the up state for the track list to be in the up state.

**object** *object-number* not: track: The tracked object must be in the up state for the track list to be in the up state,

- This command is configured only in track configuration mode for the track list.
- The object cannot track itself.
- The objects cannot track each other. For example, if A tracks B, B cannot track A. Otherwise, both A and B are in oscillation.

**Configuration Examples** The following example adds tracked object 4 to the object track list. When object 1 is in the up state, 2 down, 3 up, object 4 is in the up state.

```
Ruijie(config)# track 4 list boolean and
Ruijie(config-track)# object 1
Ruijie(config-track)# object 2 not
Ruijie(config-track)# object 3
Ruijie(config-track)# end
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 8.12 request-data-size

Use the following example to set the protocol payload size of IP RNS probe packet.

Use the **no** form of this command to restore the default setting.

**request-data-size** *bytes*

**no request-data-size**

**Parameter Description**

| Parameter    | Description                                                                                  |
|--------------|----------------------------------------------------------------------------------------------|
| <i>bytes</i> | The number of payload bytes. The minimum/maximum number of bytes varies with the probe type. |

**Defaults** The default is the minimum payload byte, which varies with the probe type.

**Command Mode** IP RNS ICMP echo configuration mode

**Usage Guide** This command is used to fill bytes in the probe packet to probe for the bigger packet.

| Probe Type | Range        | Default |
|------------|--------------|---------|
| icmp-echo  | [ 36, 1472 ] | 36      |

**Configuration** The following example sets the protocol payload size of the IP RNS probe packet to 50.

**Examples**

```
Ruijie(config)# ip rns 1
Ruijie(config-ip-rns)# icmp-echo 10.1.1.1
Ruijie(config-ip-rns-icmp-echo)# request-data-size 50
Ruijie(config-ip-rns-icmp-echo)# exit
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A

## 8.13 show ip rns collection-statistics

Use this command to display statistics about the RNS probe.

**show ip rns collection-statistics** [ *operation-number* ]

**Parameter Description**

| Parameter               | Description                                                                                                          |
|-------------------------|----------------------------------------------------------------------------------------------------------------------|
| <i>operation-number</i> | Sets the IP RNS operation object number, in the range from 1 to 500.<br>The default is all IP RNS operation objects. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** This command is used to display statistics about an IP RNS probe.

**Configuration** The following example displays statistics about the all RNS probes.

**Examples**

```
Ruijie#show ip rns collection-statistics 1
Entry number: 1
Start Time Index: *2014-03-20 19:53:51
Number of successful operations: 919
```

```

Number of operations over threshold: 0
Number of failed operations due to a Disconnect: 0
Number of failed operations due to a Timeout: 2
Number of failed operations due to a Busy: 0
Number of failed operations due to a No Connection: 0
Number of failed operations due to an Internal Error: 2
Number of failed operations due to a Sequence Error: 0
Number of failed operations due to a Verify Error: 0
RTT Values:
RTTAvg: 18      RTTMin: 16      RTTMax: 37
NumOfRTT: 919  RTTSum: 16654    RTTSum2: 302786

```

| Field                                                 | Description                                            |
|-------------------------------------------------------|--------------------------------------------------------|
| Entry number                                          | IP RNS operation index                                 |
| Start Time Index:                                     | Schedule start time                                    |
| Number of successful operations:                      | Number of successful operation.                        |
| Number of operations over threshold:                  | Number of threshold violation                          |
| Number of failed operations due to a Disconnect:      | Number of operation failure due to disconnection       |
| Number of failed operations due to a Timeout:         | Number of operation failure due to timeout             |
| Number of failed operations due to a Busy:            | Number of operation failure since the peer end is busy |
| Number of failed operations due to a No Connection:   | Number of operation failure due to no connection       |
| Number of failed operations due to an Internal Error: | Number of operation failure due to internal error      |
| Number of failed operations due to a Sequence Error:  | Number of operation failure due to sequence error      |
| Number of failed operations due to a Verify Error:    | Number of operation failure due to verification error  |
| RTT Values                                            | RTT value                                              |
| RTTAvg:                                               | Average RTT value                                      |
| RTTMin:                                               | Minimum RTT value                                      |
| RTTMax:                                               | Maximum RTT value                                      |
| NumOfRTT:                                             | Number of counting RTT value                           |
| RTTSum:                                               | Sum of RTT value                                       |
| RTTSum2:                                              | Sum of squares of RTT value                            |

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform  
Description**

N/A

## 8.14 show ip rns configuration

Use this command to display the RNS instance configuration.

**show ip rns configuration** [ *operation-number* ]

| Parameter Description | Parameter               | Description                                               |
|-----------------------|-------------------------|-----------------------------------------------------------|
|                       | <i>operation-number</i> | Sets the RNS instance number, in the range from 1 to 500. |

**Command Mode** Privileged EXEC mode

**Usage Guide** This command is used to display the RNS instance configuration. The configuration varies with different packet types.

**Configuration** The following example displays the RNS 1 configuration.

### Examples

```
Ruijie# show ip rns configuration 1
Entry number: 1
Tag: ruijie555
Type of operation to perform: icmp-echo
Operation timeout (milliseconds): 5000
Operation frequency (milliseconds): 10000
Threshold (milliseconds): 5000
Recurring (Starting Everyday): FALSE
Life (seconds): 3500
Next Scheduled Start Time:Start Time already passed
Target address/Source address: 2.2.2.3/0.0.0.0
Request size (ARR data portion): 36
```

| Field                              | Description                     |
|------------------------------------|---------------------------------|
| Entry number                       | IP RNS operation index          |
| Tag                                | Instance tag.                   |
| Type of operation to perform       | Operation type.                 |
| Operation timeout (milliseconds)   | Operation timeout.              |
| Operation frequency (milliseconds) | Operation frequency.            |
| Threshold (milliseconds)           | Threshold.                      |
| Recurring (Starting Everyday)      | The operation starts every day. |
| Life (seconds)                     | Life time                       |
| Next Scheduled Start Time          | Next scheduled start time.      |
| Target address/Source address      | Target address/Source address   |
| Request size (ARR data portion)    | Request packet size.            |

| Related Commands | Command | Description |
|------------------|---------|-------------|
|------------------|---------|-------------|

|     |     |
|-----|-----|
| N/A | N/A |
|-----|-----|

**Platform** N/A

**Description**

## 8.15 show ip rns operational-state

Use this command to display operational state.

**show ip rns operational-state** [ *operation-number* ]

| Parameter Description | Parameter               | Description                                                                                                    |
|-----------------------|-------------------------|----------------------------------------------------------------------------------------------------------------|
|                       | <i>operation-number</i> | Sets the IP RNS operation object number, in the range from 1 to 500. The default is all RNS operation objects. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** This command is used to display the state information about an RNS probe.

**Configuration** The following example displays the state information about all RNS probes.

### Examples

```
Ruijie# show ip rns operational-state
Entry number: 1
Modification time: *2014-01-10 10:26:14
Current seconds left in Life: Forever
Operational state of entry: Active
Number of Octets Used by this Entry: 2272
Number of operations attempted: 232
Number of operations skipped: 0
Connection loss occurred: FALSE
Timeout occurred: FALSE
Over thresholds occurred: FALSE
Latest RTT (milliseconds): 4
Latest operation start time: 2014-01-10 10:26:55
Latest operation return code: OK
```

| Field                               | Description                                                                                 |
|-------------------------------------|---------------------------------------------------------------------------------------------|
| Entry number                        | IP RNS operation index                                                                      |
| Modification time                   | Probe result recounting time (every time schedule is enabled, the result is counted again). |
| Number of Octets Used by this Entry | Number of octets contained in the probe packet.                                             |
| Number of operations attempted      | Number of attempted operation.                                                              |

|                              |                                                      |
|------------------------------|------------------------------------------------------|
| Number of operations skipped | Number of failed operation.                          |
| Current seconds left in Life | Probes for the left life.                            |
| Operational state of entry   | Probes for the operational state (Active/Disactive). |
| Connection loss occurred     | Connection loss occurred.                            |
| Timeout occurred             | Send request timeout occurred.                       |
| Over thresholds occurred     | Threshold violation occurred.                        |
| Latest RTT (milliseconds)    | Latest RTT.                                          |
| Latest operation start time  | Latest operation start time.                         |
| Latest operation return code | Latest operation return code.                        |

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A  
**Description**

## 8.16 show ip rns reaction-configuration

Use this command to display the proactive threshold monitoring information of an IP RNS probe.

**show ip rns reaction-trigger** [ *operation-number* ]

**Parameter Description**

| Parameter               | Description                                                                                                   |
|-------------------------|---------------------------------------------------------------------------------------------------------------|
| <i>operation-number</i> | The number of IP RNS operation objects, in the range from 1 to 500. The default is all RNS operation objects. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** This command is used to display the proactive threshold monitoring information of an IP RNS probe.

**Configuration Examples** The following example displays the proactive threshold monitoring information of all IP RNS probes.

```
Ruijie#show ip rns reaction-configuration
Entry number: 1
Reaction: rtt
Threshold Type: Never
Rising (milliseconds): 5000
Falling (milliseconds): 3000
Threshold Count: 5
```

```

Threshold Count2: 5
Action Type: trigger
Reaction: timeout
Threshold Type: Never
Threshold Count: 5
Threshold Count2: 5
Action Type: trigger
    
```

| Field                  | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Entry number           | IP RNS operation index                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Reaction               | Monitored object                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Threshold Type         | The available parameters are listed as follows:<br><b>never</b> : Never triggers operation.<br><b>consecutive</b> : Triggers operation when the value of monitored element exceeds the threshold range for <i>occurrences</i> consecutive times.<br><b>average</b> : Triggers operation when the average value of <b>number-of-measurements consecutive times</b> exceeds the threshold range.<br><b>immediate</b> : Triggers operation immediately when the value of monitored element exceeds the threshold range.<br><b>xofy</b> : X probes among the latest Y ones exceed the threshold range. |
| Rising (milliseconds)  | Upper threshold                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Falling (milliseconds) | Lower threshold                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Threshold Count        | The parameter refers to the x value when the threshold-type is <b>xofy</b> or the average count when the threshold-type is <b>average</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Threshold Count2       | The parameter refers to the y value when the threshold-type is <b>xofy</b> or the consecutive count when the threshold-type is <b>consecutive</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Action Type            | Action type                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description**

N/A

## 8.17 show ip rns reaction-trigger

Use this command to display the reaction trigger information for all RNS objects.

**show ip rns reaction-trigger** [ *operation-number* ]

| Parameter Description | Parameter               | Description                                                                                                     |
|-----------------------|-------------------------|-----------------------------------------------------------------------------------------------------------------|
|                       | <i>operation-number</i> | The number of IP RNS operation object, in the range from 1 to 500.<br>The default is all RNS operation objects. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** This command is used to display the reaction trigger information for all RNS objects.

**Configuration** The following example displays the reaction trigger information for all RNS objects.

### Examples

```
Ruijie#show ip rns reaction-trigger
Entry number: 1
Target rns index: 2
Status of Entry (SNMP RowStatus): active
Operational State: pending
```

| Field                            | Description            |
|----------------------------------|------------------------|
| Entry number                     | RNS index              |
| Target rns index                 | Target RNS index       |
| Status of Entry (SNMP RowStatus) | Status of RNS entry    |
| Operational State                | Reaction-trigger state |

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 8.18 show ip rns statistics

Use this command to display the RNS object statistics.

**show ip rns statistics** [ *operation-number* ]

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|-----------------------|-----------|-------------|



|                         |                                                                     |
|-------------------------|---------------------------------------------------------------------|
| <i>operation-number</i> | Sets the IP RNS operation object number, in the range from 1 to 500 |
|-------------------------|---------------------------------------------------------------------|

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** The statistics vary with different packet types.

**Configuration** The following example displays the RNS object statistics.

**Examples**

```
Ruijie#show ip rns statistics 1
Round trip time(RTT) Index 1
Operation time to live: Forever
Latest RTT: 1 ms
Latest operation start time: 2014-01-20 10:21:38
Latest operation return code: OK
Number of successes: 386
Number of failures: 12
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A

## 8.19 show track

Use this command to display statistics of the tracked object.

**show track** [ *track-number* ]

**Parameter Description**

| Parameter           | Description                                                 |
|---------------------|-------------------------------------------------------------|
| <i>track-number</i> | Sets the tracked object number, in the range from 1 to 700. |

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays statistics of all tracked objects.

**Examples**

```
Ruijie#show track
Track 1
  Reliable Network Service 5
  The state is Up
    1 change, current state last: 120 secs
  Delay up 30 secs, down 50 secs
Track 3
  Interface FastEthernet 1/0
  The state is Down, delayed Up (5 secs remaining)
    3 change, current state last: 300 secs
  Delay up 60 secs, down 60 secs
Track 4
  List boolean and
  Object 1
  Object 2 not
  The state is Up
    1 change, current state last: 100 secs
  Delay up 0 secs, down 0 secs
```

| Field                                        | Description                                                         |
|----------------------------------------------|---------------------------------------------------------------------|
| Track x                                      | Tracked object ID                                                   |
| Reliable Network Service x                   | Tracked RNS object                                                  |
| The state is x                               | Tracked object state                                                |
| x change                                     | Tracked object change count                                         |
| current state last: x secs                   | The time for which the current state lasts                          |
| Delay up x secs, down x secs                 | The delay state of the tracked object                               |
| Interface x x                                | Tracked interface                                                   |
| The state is x, delayed y (c secs remaining) | The tracked object state is x, and will turn to y in c seconds.     |
| List boolean and                             | The Boolean expression enables calculation by using "and" operator. |
| Object x                                     | Object x is in the up state.                                        |
| Object x not                                 | Object x is in the down state.                                      |

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description**

N/A

## 8.20 tag

Use this command to set the tag for IP RNS probe.

Use the **no** form of this command to restore the default setting.

**tag** *text*

**no tag**

| Parameter Description | Parameter   | Description                                                                        |
|-----------------------|-------------|------------------------------------------------------------------------------------|
|                       | <i>text</i> | Sets the tag for IP RNS probe, which is composed of up to 79 printable characters. |

**Defaults** N/A

**Command** IP RNS DNS configuration mode

**Mode** IP RNS ICMP echo configuration mode

**Usage Guide** Tag is used to identify the probe. When the tag exceeds 79 characters, the surplus characters are truncated.

**Configuration** The following example sets the tag for IP RNS probe to telecom gateway.

### Examples

```
Ruijie(config)# ip rns 1
Ruijie(config-ip-rns)# icmp-echo 10.1.1.1
Ruijie(config-ip-rns-icmp-echo)# tag telecom_gateway
Ruijie(config-ip-rns-icmp-echo)# exit
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A

**Description**

## 8.21 tcp-connect

Use this command to configure TCP connectivity probe.

**tcp-connect** { *destination-ip-address* | *destination-hostname* [ **name-server** *ip-address* ] }  
*port-number*

| Parameter Description | Parameter                     | Description             |
|-----------------------|-------------------------------|-------------------------|
|                       | <i>destination-ip-address</i> | Destination IP address  |
|                       | <i>destination-hostname</i>   | Destination domain name |

|                                      |                              |
|--------------------------------------|------------------------------|
| <b>name-server</b> <i>ip-address</i> | IP address of the DNS server |
| <i>port-number</i>                   | TCP port number              |

**Defaults** N/A

**Command Mode** IP RNS configuration mode

**Usage Guide** TCP connectivity probe detects the connection with the TCP server.  
If no peer TCP server exist, enable the IP RNS server function on peer Ruijie devices.

**Configuration** The following example configures TCP connectivity probe.

**Examples**

```
Ruijie(config)# ip rns 1
Ruijie(config)# tcp-connect www.ruijie.net name-server 8.8.8.8 999
Ruijie(config-ip-rns-tcp-connect)# exit
Ruijie(config)# ip rns schedule 1 start-time now life forever
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A

## 8.22 threshold

Use this command to configure the upper threshold value for IP RNS probe.

Use the **no** form of this command to restore the default setting.

**threshold** *milliseconds*

**no threshold**

**Parameter Description**

| Parameter           | Description                                                                                |
|---------------------|--------------------------------------------------------------------------------------------|
| <i>milliseconds</i> | Sets the upper threshold value, in the range from 0 to 60,000 in the unit of milliseconds. |

**Defaults** The default is 5,000 milliseconds.

**Command Mode** IP RNS DNS configuration mode  
**Mode** IP RNS ICMP echo configuration mode  
IP RNS TCP configuration mode

**Usage Guide** The threshold value must be no greater than the timeout value. See **Usage Guide** of the **frequency** command for the relationship among timeout, frequency and threshold.

**Configuration** The following example sets the upper threshold value for IP RNS probe to 8,000 milliseconds.

**Examples**

```
Ruijie(config)# ip rns 1
Ruijie(config-ip-rns)# icmp-echo 10.1.1.1
Ruijie(config-ip-rns-icmp-echo)# threshold 8000
Ruijie(config-ip-rns-icmp-echo)# exit
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 8.23 timeout

Use this command to set the timeout time of an IP RNS probe.

Use the **no** form of this command to restore the default setting.

**timeout** *milliseconds*

**no timeout**

**Parameter  
Description**

| Parameter           | Description                                                                                                                |
|---------------------|----------------------------------------------------------------------------------------------------------------------------|
| <i>milliseconds</i> | Sets the timeout time, in the range from 10 to 604,800,000 in the unit of milliseconds. The default is 5,000 milliseconds. |

**Defaults**

The default timeout of an IP RNS probe varies with the detection type, which can be displayed by using **show ip rns configuration** command.

**Command** IP RNS ICMP echo configuration mode

**Mode** IP RNS DNS configuration mode

IP RNS TCP configuration mode

**Usage Guide**

The timeout value must be no smaller than the threshold value. See **Usage Guide** of the **frequency** command for the relationship among timeout, frequency and threshold.

**Configuration** The following example sets the timeout time of an IP RNS probe to 10,000 milliseconds.

**Examples**

```
Ruijie(config)# ip rns 1
Ruijie(config-ip-rns)# icmp-echo 10.1.1.1
Ruijie(config-ip-rns-icmp-echo)# timeout 10000
Ruijie(config-ip-rns-icmp-echo)# exit
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
|---------|-------------|

|                                      |                                           |
|--------------------------------------|-------------------------------------------|
| <b>frequency</b> <i>milliseconds</i> | Sets the interval of sending the packets. |
|--------------------------------------|-------------------------------------------|

**Platform** N/A

**Description**

## 8.24 tos

Use this command to set the Type of Service (ToS) field in the IPv4 header of an IP RNS probe packet.

Use the **no** form of this command to restore the default setting.

**tos** *number*

**no tos**

**Parameter Description**

| Parameter     | Description                                                                                  |
|---------------|----------------------------------------------------------------------------------------------|
| <i>number</i> | Sets the ToS field in the IPv4 header of an IP RNS probe packet, in the range from 0 to 255. |

**Defaults** The default is 0.

**Command** IP RNS DNS configuration mode

**Mode** IP RNS ICMP echo configuration mode

IP RNS TCP configuration mode

**Usage Guide** ToS is an 8-bit field of an IPv4 packet. ToS can be used to set probe packet priority. Different ToS corresponds to different priority.

**Configuration Examples** The following example sets the ToS field in the IPv4 header of an IP RNS probe packet to 128.

```
Ruijie(config)# ip rns 1
Ruijie(config-ip-rns)# icmp-echo 10.1.1.1
Ruijie(config-ip-rns-icmp-echo)# tos 128
Ruijie(config-ip-rns-icmp-echo)# exit
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 8.25 track interface line-protocol

Use this command to configure a tracked object to track the interface status and enter the track mode.

Use the **no** form of this command to delete a tracked object.

**track** *object-number* **interface** *interface-type* *interface-number* **line-protocol**

**no track** *object-number*

| Parameter Description | Parameter                                        | Description                                               |
|-----------------------|--------------------------------------------------|-----------------------------------------------------------|
|                       | <i>object-number</i>                             | Sets the tracked object number, in the range of 1 to 700. |
|                       | <i>interface-type</i><br><i>interface-number</i> | Sets the interface type and the interface number.         |

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** This command is used to configure a tracked object to track the link state of the interface. If the link state of the interface is up, the state of the corresponding tracked object is up too.

**Configuration Examples** The following example configures the object "track 3" to track the link state of ethernet 0/1.

```
Ruijie(config)# track 3 interface ethernet 0/1 line-protocol
```

| Related Commands | Command           | Description                                                                 |
|------------------|-------------------|-----------------------------------------------------------------------------|
|                  | <b>track rns</b>  | Configures a tracked object to track the operating status of an rns object. |
|                  | <b>show track</b> | Displays the tracked object related information.                            |

**Platform** N/A

**Description**

## 8.26 track list

Use this command to configure a tracked list object and specify the state of the tracked list based on a Boolean calculation.

Use the **no** form of this command to restore the default setting.

**track** *object-number* **list boolean { and | or }**

**no track** *object-number*

| Parameter Description | Parameter            | Description                                                        |
|-----------------------|----------------------|--------------------------------------------------------------------|
|                       | <i>object-number</i> | Sets the number of the tracked object, in the range from 1 to 700. |

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** This command is used to configure a tracked list object and specify the state of the tracked list based on a Boolean calculation

- **track *object-number* list boolean and:** Configure a tracked list with a Boolean expression using “AND” operator.
- **track *object-number* list boolean or:** Configure a tracked list with a Boolean expression using “OR” operator.

**Configuration Examples** The following example configures tracked list object “4” and specifies the state of the tracked list based on a Boolean calculation using operator “AND”.

```
Ruijie(config)# track 4 list boolean and
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A

## 8.27 track rns

Use this command to configure a tracked object to track the operating status of an RNS object and enter the track mode.

Use the **no** form of this command is used to delete a tracked object.

**track *object-number* rns *entry-number***

**no track *object-number***

**Parameter Description**

| Parameter            | Description                                                 |
|----------------------|-------------------------------------------------------------|
| <i>object-number</i> | Sets the tracked object number, in the range from 1 to 700. |
| <i>entry-number</i>  | Sets the RNS object number, in the range from 1 to 500.     |

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** The RNS object status is determined by whether the response packets are received. If so, the RNS object status is up and the status of the corresponding tracked object that tracks this RNS is also up.

**Configuration** The following example configures the object “track 5” to track the RNS instance “rns 7”.



**Examples** `Ruijie(config)# track 5 rns 7`

**Related Commands**

| Command                                   | Description                                                  |
|-------------------------------------------|--------------------------------------------------------------|
| <b>track interface line-protocol</b>      | Tracks the status of one interface and enter the track mode. |
| <b>show track</b> [ <i>track-number</i> ] | Displays the tracked object related information.             |

**Platform** N/A

**Description**

## 8.28 track rns-list

Use this command to configure a tracked object to track the detection result of an RNS list instance.

Use the **no** form of this command to delete a tracked object.

**track** *object-number* **rns-list** *men-list* { **and** | **or** }

**no track** *object-number*

**Parameter Description**

| Parameter            | Description                                                                                                                                                                                                                                                                                               |
|----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>object-number</i> | Indicates the number of the tracked object. The value ranges from 1 to 700.                                                                                                                                                                                                                               |
| <i>men-list</i>      | Indicates the RNS list to be tracked. The value can be an RNS detection instance or a range of RNS detection instances. The instance range begins with a smaller RNS ID, ends with a larger RNS ID and is separated with an en dash (–), for example, 10–20. The value of an RNS ID ranges from 1 to 500. |

**Defaults** N/A

**Command Mode** Global configuration mode

**Default Level** 1

**Usage Guide** This command is used to configure a tracked object and specify the status of an RNS list based on a Boolean calculation.

- **track** *object-number* **rns-list** *men-list* **and**: Configures a tracked object to track the status of a tracked list with a Boolean expression using the "AND" operator.
- **track** *object-number* **rns-list** *men-list* **or**: Configures a tracked object to track the status of an RNS list with a Boolean expression using the "OR" operator.

**Configuration Examples** The following example configures tracked object numbered 5 to track RNS instances numbered 1, 2–5, and 8.

```
Ruijie(config)# track 5 rns-list 1,2-5,8 and
```

|                             |                                                                                                                                                                                                                                                                                                                                                                                            |
|-----------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Verification</b>         | Run the <b>show track</b> command to display statistics of the tracked object.                                                                                                                                                                                                                                                                                                             |
| <b>Prompts</b>              | <p>1. If resources on the device are insufficient when a tracked object is configured, an error will be displayed.</p> <pre>Failed to create track obj, no resource.</pre> <p>2. If the <b>no track</b> command is executed to delete a specified tracked object but this object does not exist on the device, an error will be displayed.</p> <pre>the track object does not exist.</pre> |
| <b>Common Errors</b>        | 1. A tracked object is configured to track an RNS list but the relevant RNS instance is not configured.                                                                                                                                                                                                                                                                                    |
| <b>Platform Description</b> | N/A                                                                                                                                                                                                                                                                                                                                                                                        |

## 8.29 vrf

Use this command to set the VRF where the IP RNS probe resides.

Use the **no** form of this command to restore the default setting.

**vrf** *vrf-name*

**no vrf**

| Parameter Description | Parameter       | Description        |
|-----------------------|-----------------|--------------------|
|                       | <i>vrf-name</i> | Sets the VRF name. |

**Defaults** N/A

**Command** IP RNS ICMP echo configuration mode

**Mode** IP RNS DNS configuration mode

IP RNS TCP configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example sets the VRF where the IP RNS probe resides to VPN1.

```
Ruijie(config)# ip rns 1
Ruijie(config-ip-rns)# icmp-echo 192.168.23.1
Ruijie(config-ip-rns-icmp-echo)# vrf VPN1
Ruijie(config-ip-rns-icmp-echo)# exit
Ruijie(config)# ip rns schedule 1 start-time now life forever
```

| Related Commands | Command                              | Description                               |
|------------------|--------------------------------------|-------------------------------------------|
|                  | <b>frequency</b> <i>milliseconds</i> | Sets the interval of sending the packets. |

|                    |     |
|--------------------|-----|
| <b>Platform</b>    | N/A |
| <b>Description</b> |     |



## Network Management & Monitoring Commands

---

1. SNMP Commands
2. RMON Commands
3. NTP Commands
4. SNTP Commands
5. SPAN-RSPAN Commands
6. ERSPAN Commands
7. sFlow Commands

# 1 SNMP Commands

## 1.1 clear snmp locked-ip

Use this command to clear the source IP addresses which are locked after continuous SNMP authentication failures.

**clear snmp locked-ip** [ **ipv4** *ipv4-address* | **ipv6** *ipv6-address* ]

| Parameter Description | Parameter                       | Description                      |
|-----------------------|---------------------------------|----------------------------------|
|                       | <b>ipv4</b> <i>ipv4-address</i> | Clears a specified IPv4 address. |
|                       | <b>ipv6</b> <i>ipv6-address</i> | Clears a specified IPv6 address. |

**Defaults** N/A

**Command mode** Privileged EXEC mode.

**Usage Guide** Use this command to clear the source IP addresses which are locked after continuous SNMP authentication failures. You can clear the whole source IP address table or a specific source IP address.

After the source IP addresses locked are cleared, the SNMP packets with these source IP addresses could be authenticated again.

**Configuration Examples** The following example clears the whole source IP address table locked after continuous SNMP authentication failures.

```
Ruijie#clear snmp locked-ip
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 1.2 no snmp-server

Use this command to disable the SNMP agent function.

**no snmp-server**

| Parameter | Parameter | Description |
|-----------|-----------|-------------|
|-----------|-----------|-------------|

|                    |     |     |
|--------------------|-----|-----|
| <b>Description</b> |     |     |
|                    | N/A | N/A |

**Defaults** SNMP agent is enabled by default.

**Command mode** Global configuration mode.

**Usage Guide** This command disables the SNMP agent services of all versions supported on the device.

**Configuration** The following example disables the SNMP agent.

**Examples** Ruijie(config)# **no snmp-server**

| <b>Related Commands</b> | Command | Description |
|-------------------------|---------|-------------|
|                         | N/A     | N/A         |

**Platform** N/A

**Description**

## 1.3 show snmp

Use this command to display the SNMP configuration.

**show snmp [ mib | user | view | group | host | locked-ip | process-mib-time ]**

| <b>Parameter Description</b> | Parameter               | Description                                                                            |
|------------------------------|-------------------------|----------------------------------------------------------------------------------------|
|                              | <b>mib</b>              | Displays the SNMP MIBs supported.                                                      |
|                              | <b>user</b>             | Displays the SNMP user information.                                                    |
|                              | <b>view</b>             | Displays the SNMP view information.                                                    |
|                              | <b>group</b>            | Displays the SNMP user group information.                                              |
|                              | <b>host</b>             | Displays the explicit host configuration.                                              |
|                              | <b>locked-ip</b>        | Displays the source IP addresses locked after continuous SNMP authentication failures. |
|                              | <b>process-mib-time</b> | Displays the MIB node requiring the longest processing time.                           |

**Defaults** N/A

**Command mode** Privileged EXEC mode.

**Usage Guide** N/A

**Configuration** The example below displays the SNMP configuration:

```

Examples Ruijie# show snmp
Chassis: 60FF60
0 SNMP packets input
    0 Bad SNMP version errors
    0 Unknown community name
    0 Illegal operation for community name supplied
    0 Encoding errors
    0 Number of requested variables
    0 Number of altered variables
    0 Get-request PDUs
    0 Get-next PDUs
    0 Set-request PDUs
0 SNMP packets output
    0 Too big errors (Maximum packet size 1472)
    0 No such name errors
    0 Bad values errors
    0 General errors
    0 Response PDUs
    0 Trap PDUs
SNMP global trap: disabled
SNMP logging: disabled
SNMP agent: enabled
    
```

**Related Commands**

| Command                       | Description                                |
|-------------------------------|--------------------------------------------|
| <b>snmp-server chassis-id</b> | Specifies the SNMP system sequence number. |

**Platform** N/A  
**Description**

### 1.4 snmp trap link-status

Use this command to enable the interface to send link traps. Use the **no** form of this command to disable the interface to send link traps.

- snmp trap link-status**
- no snmp trap link-status**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** Sending link traps on the interface is enabled by default. If the interface link status changes, SNMP link traps will be sent.

**Command mode** Interface configuration mode

**Usage Guide** This command can be configured on the Ethernet interface, aggregate ports and SVI interfaces.

**Configuration** The following example disables the interface to send link traps.

**Examples**

```
Ruijie(config)# interface gigabitEthernet 1/1
Ruijie(config-if-GigabitEthernet 1/1)# no snmp trap link-status
```

The following example enables the interface to send link traps.

```
Ruijie(config)# interface gigabitEthernet 1/1
Ruijie(config-if-GigabitEthernet 1/1)# snmp trap link-status
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description** N/A

## 1.5 snmp-server authentication attempt

Use this command to configure the maximum number of continuous SNMP authentication failures, and specified the action policy for the authentication failure. Use the **no** form of this command to remove the limit of continuous SNMP authentication failures and the related action policies.

**snmp-server authentication attempt *times* exceed { lock | lock-time *minutes* | unlock }**

**no snmp-server authentication attempt *times* exceed { lock | lock-time *minutes* | unlock }**

**Parameter Description**

| Parameter                       | Description                                                                                                                                                    |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>times</i>                    | The maximum number of continuous SNMP authentication failures. The range is from 1 to 10.                                                                      |
| <b>exceed</b>                   | Indicates the action policy in the case that the maximum number of continuous SNMP authentication failures is exceeded.                                        |
| <b>lock</b>                     | Indicates that the source IP address is permanently locked to be authenticated and can be unlocked only by the administrator's manual configuration.           |
| <b>lock-time <i>minutes</i></b> | Indicates that the source IP address is locked for a period of time. The <i>minutes</i> indicates the lock time, ranging from 1 to 65,535. The unit is minute. |
| <b>unlock</b>                   | Indicates that no action policy is configured for the authentication failed user, that is, the SNMP authentication for this user is allowed.                   |



- Defaults** SNMP attack prevention is disabled by default.
- Command mode** Global configuration mode
- Usage Guide** The IP address of the SNMP authentication failed user is added to the blacklist. When the maximum number of continuous SNMP authentication failures is exceeded, the system will perform the related authentication limit actions according the configured policy.:
1. For the permanently locked IP addresses: The source IP addresses can be authenticated only after the administrator unlock them manually.
  2. For the IP addresses locked for a period time: The source IP addresses can be authenticated only after the lock time expires or the administrator unlock them manually.
  3. For the unlocked IP addresses: The source IP address can pass the authentication as long as the correct community (for SNMPv1 and SNMPv2) or username (for SNMPv3) is used.

**Configuration Examples** The following example configures the maximum number of continuous SNMP authentication failures to 4, and sets the IP address lock time to 30 seconds.

```
Ruijie(config)# snmp-server authentication attempt 4 exceed lock-time 30
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

## 1.6 snmp-server chassis-id

Use this command to specify the SNMP chassis ID. Use the **no** form of this command to restore the default chassis ID.

**snmp-server chassis-id text**

**no snmp-server chassis-id**

| Parameter Description | Parameter   | Description |
|-----------------------|-------------|-------------|
|                       | <i>text</i> |             |

**Defaults** The default is 60FF60.

**Command mode** Global configuration mode.

**Usage Guide** The SNMP chassis ID is generally the serial number of the device to facilitate identification. The SNMP chassis ID can be displayed through the **show snmp** command.

**Configuration** The following example specifies the SNMP chassis ID as 123456:

**Examples** Ruijie(config)# **snmp-server chassis-id** 123456

| Related Commands | Command | Description      |
|------------------|---------|------------------|
|                  |         | <b>show snmp</b> |

**Platform** N/A

**Description**

## 1.7 snmp-server community

Use this command to specify the SNMP community access string. Use the **no** form of this command to remove the SNMP community access string.

**snmp-server community** [ 0 | 7 ] *string* [ **view** *view-name* ] [ [ **ro** | **rw** ] [ **host** *ipaddr* ] [ **ipv6** *ipv6-aclname* ] [ *aclnum* ] [ *aclname* ]  
**no snmp-server community** [ 0 | 7 ] *string*

| Parameter Description | Parameter           | Description                                                                                                               |
|-----------------------|---------------------|---------------------------------------------------------------------------------------------------------------------------|
|                       |                     | 0                                                                                                                         |
|                       | 7                   | Indicates that the community string is in ciphertext.                                                                     |
|                       | <i>string</i>       | Community string, which is the communication password between the NMS and the SNMP agent                                  |
|                       | <i>view-name</i>    | View name                                                                                                                 |
|                       | <b>ro</b>           | Indicates that the NMS can only read the variables of the MIB.                                                            |
|                       | <b>rw</b>           | Indicates that the NMS can read and write the variables of the MIB.                                                       |
|                       | <i>aclnum</i>       | Access list number (1 to 199, and 1300 to 2699), which specifies the IPV4 addresses that are permitted to access the MIB. |
|                       | <i>aclname</i>      | Access list name, which specifies the IPV4 addresses that are permitted to access the MIB.                                |
|                       | <i>ipv6-aclname</i> | IPv6 access list name, which specifies the IPv6 addresses that are permitted to access the MIB.                           |
|                       | <i>ipaddr</i>       | Specifies the IP address of the NMS to access the MIB.                                                                    |

**Defaults** All communities are read only by default.

**Command mode** Global configuration mode.

**Usage Guide** This command is an essential command to enable the SNMP agent function, such as specifying the community attribute and IP addresses of NMS to access the MIB.

To disable the SNMP agent function, use the **no snmp-server** command.

**Configuration Examples** The following example defines a SNMP community access string named public, which can be read-only.

```
Ruijie(config)# snmp-server community public ro
```

| Related Commands | Command | Description        |
|------------------|---------|--------------------|
|                  |         | <b>access-list</b> |

**Platform Description** N/A

## 1.8 snmp-server contact

Use this command to specify the system contact string. Use the **no** form of this command to remove the system contact string.

**snmp-server contact text**

**no snmp-server contact**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       |           | <i>text</i> |

**Defaults** No system contact string is set by default.

**Command mode** Global configuration mode.

**Usage Guide** N/A

**Configuration Examples** The following example specifies the SNMP system contract i-net800@i-net.com.cn:

```
Ruijie(config)# snmp-server contact i-net800@i-net.com.cn
```

| Related Commands | Command                 | Description                       |
|------------------|-------------------------|-----------------------------------|
|                  | <b>show snmp-server</b> | Displays the SNMP configuration.  |
|                  | <b>no snmp-server</b>   | Disables the SNMP agent function. |

**Platform Description** N/A

## 1.9 snmp-server enable secret-dictionary-check

Use this command to enable the secret dictionary check for the **community** and **user** fields. Use the **no** form of this command to disable the secret dictionary check.

**snmp-server enable secret-dictionary-check**

**no snmp-server enable secret-dictionary-check**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** Secret dictionary check for the **community** and **user** fields is disabled by default.

**Command mode** Global configuration mode.

**Usage Guide** This command must be used together with the **password policy** command.

**Configuration** The following example enables the secret dictionary check for the **community** field.

### Examples

```
Ruijie(config)# password policy min-size 6
Ruijie(config)# snmp-server enable secret-dictionary-check
Ruijie(config)#snmp-server community abc12
% The community(abc12) is a weak community!
```

| Related Commands | Command                 | Description                                            |
|------------------|-------------------------|--------------------------------------------------------|
|                  | <b>snmp-server host</b> | Specifies the SNMP host to send the SNMP trap message. |

**Platform** N/A  
**Description**

## 1.10 snmp-server enable traps

Use this command to enable the SNMP agent to send the SNMP trap message to NMS. Use the **no** form of this command to disable the SNMP agent to send the SNMP trap message to NMS.

**snmp-server enable traps [ notification-type ]**

**no snmp-server enable traps**

| Parameter Description | Parameter                | Description                                                     |
|-----------------------|--------------------------|-----------------------------------------------------------------|
|                       | <i>notification-type</i> | Specifies the type of trap messages.<br>snmp: SNMP trap message |

|  |                                                                                                                                                                                                                                                             |
|--|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | bgp: BGP trap message.<br>bridge: Bridge trap message.<br>isis: ISIS trap message.<br>mac-notification: MAC trap message.<br>ospf: OSPF trap message.<br>urpf: uRPF trap message.<br>vrrp: VRRP trap message.<br>web-auth: Web authentication trap message. |
|--|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

**Defaults** Sending trap message to the NMS is disabled by default.

**Command mode** Global configuration mode.

**Usage Guide** This command must be used together with the **snmp-server host** command to send the trap message. Specifying no trap type indicates all trap messages are sent.

**Configuration** The following example enables the SNMP agent to send the SNMP trap message.

**Examples**

```
Ruijie(config)# snmp-server enable traps snmp
Ruijie(config)# snmp-server host 192.168.12.219 public snmp
```

**Related Commands**

| Command                 | Description                                            |
|-------------------------|--------------------------------------------------------|
| <b>snmp-server host</b> | Specifies the SNMP host to send the SNMP trap message. |

**Platform** N/A

**Description**

## 1.11 snmp-server flow-control

Use this command to configure the SNMP flow control. Use the **no** form of this command to restore the default setting.

**snmp-server flow-control pps [ count ]**

**no snmp-server flow-control pps**

**Parameter Description**

| Parameter    | Description                                                                            |
|--------------|----------------------------------------------------------------------------------------|
| <i>count</i> | Indicates the number of SNMP requests processed per second, ranging from 50 to 65,535. |

**Defaults** The default count is 300.

**Command** Global configuration mode.

**mode****Usage Guide** N/A**Configuration** The following example configures the number of SNMP requests processed per second to 200.**Examples**

```
Ruijie(config)# snmp-server flow-control pps 200
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A**Description**

## 1.12 snmp-server group

Use this command to configure a new SNMP group. Use the **no** form of this command to remove a specified SNMP group.

```
snmp-server group groupname { v1 | v2c | v3 { auth | noauth | priv } } [ read readview ] [ write writeview ] [ access { [ ipv6 ipv6_aclname | aclnum | aclname } ]
no snmp-server group groupname { v1 | v2c | v3 { auth | noauth | priv } }
```

**Parameter  
Description**

| Parameter                          | Description                                                                                                             |
|------------------------------------|-------------------------------------------------------------------------------------------------------------------------|
| <b>v1</b>   <b>v2c</b>   <b>v3</b> | Specifies the SNMP version                                                                                              |
| <b>auth</b>                        | Specifies authentication of a packet without encrypting it. This applies to SNMPv3 only.                                |
| <b>noauth</b>                      | Specifies no authentication a packet. This applies to SNMPv3 only.                                                      |
| <b>priv</b>                        | Specifies authentication of a packet with encryption. This applies to SNMPv3 only.                                      |
| <i>readview</i>                    | Specifies a read-only view for the SNMP group. This view enables you to view only the contents of the agent.            |
| <i>writeview</i>                   | Specifies a write view for the SNMP group. This view enables you to enter data and configure the contents of the agent. |
| <i>aclnum</i>                      | Access list number, which specifies the IPV4 addresses that are permitted to access the MIB.                            |
| <i>aclname</i>                     | Name of the access list, which specifies the IPV4 addresses that are permitted to access the MIB.                       |
| <i>ipv6_aclname</i>                | Name of the IPv6 access list, which specifies the IPv6 addresses that are permitted to access the MIB.                  |

**Defaults** No SNMP groups are configured by default.

**Command** Global configuration mode.  
**mode**

**Usage Guide** N/A

**Configuration** The following example configures a new SNMP group.

**Examples**

```
Ruijie(config)# snmp-server group mib2user v3 priv read mib2
```

**Related  
Commands**

| Command                | Description                            |
|------------------------|----------------------------------------|
| <b>show snmp group</b> | Displays the SNMP group configuration. |

**Platform** N/A

**Description**

## 1.13 snmp-server host

Use this command to specify the SNMP host (NMS) to send the trap message. Use the **no** form of this command to remove the specified SNMP host.

**snmp-server host** [ **oob** ] { *host-addr* | **ipv6** *ipv6-addr* } [ **vrf** *vrfname* ] [ **traps** | **informs** ] [ **version** { **1** | **2c** | **3** [ **auth** | **noauth** | **priv** ] ] *community-string* [ **udp-port** *port-num* ] [ **via** *mgmt-name* ] [ *notification-type* ]

**no snmp-server host** [ **oob** ] { *host-addr* | **ipv6** *ipv6-addr* } [ **vrf** *vrfname* ] [ **traps** | **informs** ] [ **version** { **1** | **2c** | **3** { **auth** | **noauth** | **priv** } ] *community-string* [ **udp-port** *port-num* ] [ **via** *mgmt-name* ]

**Parameter  
Description**

| Parameter                                 | Description                                                                                                                                                                                           |
|-------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>oob</b>                                | Indicates the out of band communication, that is, the trap messages are sent to the alarm server through the MGMT port. This option is available only when the device is equipped with the MGMT port. |
| <i>host-addr</i>                          | SNMP host address                                                                                                                                                                                     |
| <i>ipv6-addr</i>                          | SNMP host address(ipv6)                                                                                                                                                                               |
| <i>vrfname</i>                            | Set the name of vrf forwarding table                                                                                                                                                                  |
| <b>trap</b>   <b>informs</b>              | Enables the host to send the SNMP notification as traps or informs.                                                                                                                                   |
| <b>version</b>                            | SNMP version: V1, V2C or V3                                                                                                                                                                           |
| <b>auth</b>   <b>noauth</b>   <b>priv</b> | Security level of SNMPv3 users                                                                                                                                                                        |
| <i>community-string</i>                   | Community string or username (SNMPv3 version)                                                                                                                                                         |
| <i>port-num</i>                           | Port of the SNMP host                                                                                                                                                                                 |
| <b>via</b> <i>mgmt-name</i>               | Specifies the MGMT port.                                                                                                                                                                              |
| <i>notification-type</i>                  | The type of the SNMP trap message, such as <b>snmp</b> .<br>If no type of the SNMP trap message is specified, all types of the SNMP trap message will be included.                                    |

**Defaults** No SNMP host is specified by default.

**Command mode** Global configuration mode.

**Usage Guide** This command must be used together with the **snmp-server enable traps** command to send the SNMP trap messages to NMS.

Multiple SNMP hosts can be configured to receive the SNMP trap messages. One host can use different combinations of the types of the SNMP trap message, but the last configuration for the same host will overwrite the previous configurations. In other words, to send different SNMP trap messages to the same host, different combination of SNMP trap messages can be configured.

The **via** parameter can take effect only when the **oob** parameter is configured.

The **vrf** parameter cannot be used together with the **oob** parameter.

**Configuration** The following example specifies an SNMP host to receive the SNMP event trap:

**Examples** Ruijie(config)# **snmp-server host 192.168.12.219 public snmp**

**Related Commands**

| Command                         | Description                                           |
|---------------------------------|-------------------------------------------------------|
| <b>snmp-server enable traps</b> | Enables the SNMP agent to send the SNMP trap message. |

**Platform** N/A

**Description**

## 1.14 snmp-server inform

Use this command to configure the resend times for inform requests and the inform request timeout. Use the **no** form of this command to restore the default settings.

**snmp-server inform [ retries *retry-time* | timeout *time* ]**

**no snmp-server inform**

**Parameter Description**

| Parameter        | Description                                                            |
|------------------|------------------------------------------------------------------------|
| <i>retry-num</i> | Specifies the resend times for inform requests, ranging from 0 to 255. |
| <i>time</i>      | Specifies the inform request timeout, ranging from 0 to 21,474,836.    |

**Defaults** The default *retry-num* is 3, and the default **timeout** *time* is 15 seconds.

**Command mode** Global configuration mode.

**Usage Guide** N/A



**Configuration** The following example configures the resend times of inform requests to 5.

**Examples**

```
Ruijie(config)# snmp-server inform retries 5
```

The following example configures the inform request timeout to 20 seconds.

```
Ruijie(config)# snmp-server inform timeout 20
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 1.15 snmp-server location

Use this command to set the system location string. Use the **no** form of this command to remove the system location string.

**snmp-server location** *text*

**no snmp-server location**

**Parameter  
Description**

| Parameter   | Description                                            |
|-------------|--------------------------------------------------------|
| <i>text</i> | String that describes the system location information. |

**Defaults** No system location string is set by default.

**Command mode** Global configuration mode.

**Usage Guide** N/A

**Configuration** The following example sets the system location information:

**Examples**

```
Ruijie(config)# snmp-server location start-technology-city 4F of A Buliding
```

**Related  
Commands**

| Command                    | Description                          |
|----------------------------|--------------------------------------|
| <b>snmp-server contact</b> | Sets the system contact information. |

**Platform** N/A

**Description**

## 1.16 snmp-server logging

Use this command to enable the system to log the GET, GET-NETX and SET operations of NMS.

Use the **no** form of this command to disable the SNMP logging function.

**snmp-server logging { get-operation | set-operation }**

**no snmp-server logging { get-operation | set-operation }**

| Parameter Description | Parameter            | Description                                           |
|-----------------------|----------------------|-------------------------------------------------------|
|                       | <b>get-operation</b> | Logging function for the GET and GET-NEXT operations. |
|                       | <b>set-operation</b> | Logging function for the SET operation.               |

**Defaults** The SNMP logging function is disabled by default.

**Command mode** Global configuration mode.

**Usage Guide** This command is used to enable the logging function for the GET, GET-NETX and SET operations of NMS.

With the **get-operation** enabled, the SNMP agent logs the IP address of NMS, operation type and operation node OID during the GET and GET-NEXT operations.

With the **set-operation** enabled, the SNMP agent logs the IP address of NMS, operation type and operation node OID and related values during the SET operation.

A larger number of logs may affect the device performance. Under normal condition, it is recommended to disable the SNMP logging function.

**Configuration Examples** The following example enables the logging function for the GET and SET operations:

```
Ruijie(config)#snmp-server logging get-operation
Ruijie(config)#snmp-server logging set-operation
```

The operation logs are displayed as below:

```
Ruijie#*Feb 7 15:31:16: %SNMP-6-GET_OPER: NMS source-ip(13.12.11.7)
operation(GET) object(id=1.3.6.1.2.1.1.5.0)
```

```
Ruijie#*Feb 7 15:32:16:%SNMP-6-GETN_OPER: NMS source-ip(13.12.11.7)
operation(GET-NEXT) object(id=1.3.6.1.2.1.1.5.0)
```

```
Ruijie#*Feb 7 15:33:23: %SNMP-6-SET_OPER: NMS source-ip(13.12.11.7)
operation(SET) object(id=1.3.6.1.2.1.1.5.0, value=ruijie)
```

The following example disables the logging function for the GET and SET operations:

```
Ruijie(config)#no snmp-server logging get-operation
Ruijie(config)#no snmp-server logging set-operation
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 1.17 snmp-server net-id

Use this command to configure the network element coding information of the device. Use the **no** form of this command to remove the network element coding information.

**snmp-server net-id** *text*

**no snmp-server net-id**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       |           | <i>text</i> |

**Defaults** No network element coding information is configured by default.

**Command mode** Global configuration mode.

**Usage Guide** N/A

**Configuration** The following example configures the network element coding text to FZ\_CDMA\_MSC1.

**Examples**

```
Ruijie(config)# snmp-server net-id FZ_CDMA_MSC1
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 1.18 snmp-server packetsize

Use this command to specify the largest size of the SNMP packet. Use the **no** form of this command to restore the default value.

**snmp-server packetsize** *byte-count*

**no snmp-server packetsize**

**Parameter  
Description**

| Parameter         | Description                                        |
|-------------------|----------------------------------------------------|
| <i>byte-count</i> | Packet size. The range is from 484 to 17,876 bytes |

**Defaults** The default is 1,472 bytes.

**Command mode** Global configuration mode.

**Usage Guide** The following example specifies the largest size of SNMP packet as 1,492 bytes:

```
Ruijie(config)# snmp-server packetsize 1492
```

**Configuration Examples** N/A

**Related  
Commands**

| Command                         | Description                                                        |
|---------------------------------|--------------------------------------------------------------------|
| <b>snmp-server queue-length</b> | Specifies the length of the message queue for each SNMP trap host. |

**Platform  
Description** N/A

## 1.19 snmp-server queue-length

Use this command to specify the length of the message queue for each SNMP trap host. Use the **no** form of this command to restore the default value.

**snmp-server queue-length** *length*

**no snmp-server queue-length**

**Parameter  
Description**

| Parameter     | Description                                |
|---------------|--------------------------------------------|
| <i>length</i> | Queue length. The range is from 1 to 1000. |

**Defaults** The default is 10.

**Command mode** Global configuration mode.

**Usage Guide** Use this command to adjust the length of message queue for each SNMP trap host for the purposes of controlling the speed of sending the SNMP trap messages.

**Configuration** The following example specifies the length of message queue as 100.

**Examples**

```
Ruijie(config)# snmp-server queue-length 100
```

**Related  
Commands**

| Command                             | Description                                    |
|-------------------------------------|------------------------------------------------|
| <code>snmp-server packetsize</code> | Specifies the largest size of the SNMP packet. |

**Platform** N/A

**Description**

## 1.20 snmp-server system-shutdown

Use this command to enable the SNMP message reload function. Use the **no** form of this command to disable the SNMP message reload function.

**snmp-server system-shutdown**

**no snmp-server system-shutdown**

**Parameter  
Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** The SNMP message reload function is disabled by default.

**Command  
mode** Global configuration mode.

**Usage Guide** Use this command to enable the SNMP message reload function which may enable the system to send the device reload traps to the NMS before the device is reloaded or rebooted.

**Configuration** The following example enables the SNMP message reload function:

**Examples**

```
Ruijie(config)# snmp-server system-shutdown
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 1.21 snmp-server trap-format private

Use this command to configure the SNMP traps with private fields. Use the **no** form of this command to restore the default trap format.

**snmp-server trap-format private**  
**no snmp-server trap-format private**

**Parameter  
Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults**

The private field is not carried in the SNMP trap by default.

**Command  
mode**

Global configuration mode.

**Usage Guide**

Use this command to configure the SNMP trap format with the private field. Currently, the supported data in the private field is alarm occurrence time. For the specific data type and range of each field, refer to RUIJIE-TRAP-FORMAT-MIB.mib file.

This command does not work if the traps are sent with SNMPv1.

**Configuration**

The following example configures the SNMP trap format with the private field.

**Examples**

```
Ruijie(config)# snmp-server trap-format private
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform**

N/A

**Description**

## 1.22 snmp-server trap-source

Use this command to specify the source interface of the SNMP trap message. Use the **no** form of this command to restore the default value.

**snmp-server trap-source interface**  
**no snmp-server trap-source**

**Parameter  
Description**

| Parameter        | Description                                               |
|------------------|-----------------------------------------------------------|
| <i>interface</i> | Specifies the source interface of the SNMP trap messages. |

**Defaults**

By default, the IP address of the interface from which the SNMP packet is sent is just the source address.

**Command**

Global configuration mode.

**mode**

**Usage Guide** For easy management and identification, you can use this command to fix a local IP address as the SNMP source address.

**Configuration Examples** The following example specifies the IP address of Ethernet interface 0/1 as the source address of the SNMP trap message:

```
Ruijie(config)# snmp-server trap-source fastethernet 0/1
```

**Related Commands**

| Command                         | Description                                                    |
|---------------------------------|----------------------------------------------------------------|
| <b>snmp-server enable traps</b> | Enables t the SNMP agent to send the SNMP trap message to NMS. |
| <b>snmp-server host</b>         | Specifies the NMS host to send the SNMP trap message.          |

**Platform** N/A

**Description**

## 1.23 snmp-server trap-timeout

Use this command to define the retransmission timeout time of the SNMP trap message. Use the **no** form of this command to restore the default value.

**snmp-server trap-timeout** *seconds*

**no snmp-server trap-timeout**

**Parameter Description**

| Parameter      | Description                                                                              |
|----------------|------------------------------------------------------------------------------------------|
| <i>seconds</i> | Timeout ( in seconds) of retransmit the SNMP trap message. The range is from 1 to 1,000. |

**Defaults** The default is 30 seconds.

**Command mode** Global configuration mode.

**Usage Guide** N/A

**Configuration Examples** The following example specifies the timeout period as 60 seconds.

```
Ruijie(config)# snmp-server trap-timeout 60
```

**Related Commands**

| Command                         | Description                                   |
|---------------------------------|-----------------------------------------------|
| <b>snmp-server queue-length</b> | Specifies the length of message queue for the |

|                                |                                                        |
|--------------------------------|--------------------------------------------------------|
|                                | SNMP trap host.                                        |
| <b>snmp-server host</b>        | Specifies the NMS host to send the SNMP trap message.  |
| <b>snmp-server trap-source</b> | Specifies the source address of the SNMP trap message. |

**Platform** N/A

**Description**

## 1.24 snmp-server udp-port

Use this command to specify a port to receive SNMP packets. Use the **no** form of this command to restore the default setting.

**snmp-server udp port** *port-number*

**no snmp-server udp port**

**Parameter  
Description**

| Parameter          | Description                                   |
|--------------------|-----------------------------------------------|
| <i>port-number</i> | Specifies a port to receive the SNMP packets. |

**Defaults** The default is 161.

**Command mode** Global configuration mode.

**Usage Guide** N/A

**Configuration Examples** The following example specifies port 15000 to receive the SNMP packets.

```
Ruijie(config)# snmp-server udp-port 15000
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A



## Description

## 1.25 snmp-server user

Use this command to configure a new user to an SNMP group. Use the **no** form of this command to remove a user from an SNMP group.

```
snmp-server user username groupname { v1 | v2c | v3 [ encrypted ] [ auth { md5 | sha }
auth-password ] [ priv des56 priv-password ] } [ access { [ ipv6 ipv6_aclname ] [ aclnum |
aclname } ] ]
```

```
no snmp-server user username groupname { v1 | v2c | v3 }
```

Parameter  
Description

| Parameter                          | Description                                                                                                                                                                                                                                                                                                                                                          |
|------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>username</i>                    | Name of the user on the host that connects to the agent.                                                                                                                                                                                                                                                                                                             |
| <i>groupname</i>                   | Name of the group to which the user belongs.                                                                                                                                                                                                                                                                                                                         |
| <b>v1</b>   <b>v2c</b>   <b>v3</b> | Specifies the SNMP version. But only SNMPv3 supports the following security parameters.                                                                                                                                                                                                                                                                              |
| <b>encrypted</b>                   | Specifies whether the password appears in cipher text. In cipher text format, you need to enter continuous hexadecimal numeric characters. Note that the authentication password of MD5 has a length of 16 bytes, while that of SHA has a length of 20 bytes. Two characters make a byte. The encrypted key can be used only by the local SNMP engine on the switch. |
| <b>auth</b>                        | Specifies which authentication level should be used.                                                                                                                                                                                                                                                                                                                 |
| <i>auth-password</i>               | Password string (no more than 32 characters) used by the authentication protocol. The system will change the password to the corresponding authentication key.                                                                                                                                                                                                       |
| <b>priv</b>                        | Encryption mode. <i>des56</i> refers to 56-bit DES encryption protocol. <i>priv-password</i> : password string (no more than 32 characters) used for encryption. The system will change the password to the corresponding encryption key.                                                                                                                            |
| <b>md5</b>                         | Enables the MD5 authentication protocol. While the <b>sha</b> enables the SHA authentication protocol.                                                                                                                                                                                                                                                               |
| <i>aclnumber</i>                   | Access list number, which specifies the IPV4 addresses that are permitted to access the MIB.                                                                                                                                                                                                                                                                         |
| <i>aclname</i>                     | Name of the access list, which specifies the IPV4 addresses that are permitted to access the MIB.                                                                                                                                                                                                                                                                    |
| <i>ipv6_aclname</i>                | Name of the IPv6 access list, which specifies the IPv6 addresses that are permitted to access the MIB.                                                                                                                                                                                                                                                               |

## Defaults

N/A

**Command mode** Global configuration mode.

**Usage Guide** N/A

**Configuration** The following example configures an SNMPv3 user with MD5 authentication and DES encryption:

**Examples**

```
Ruijie(config)# snmp-server user user-2 mib2user v3 auth md5 authpassstr priv
des56 despassstr
```

**Related Commands**

| Command               | Description                           |
|-----------------------|---------------------------------------|
| <b>show snmp user</b> | Displays the SNMP user configuration. |

**Platform** N/A

**Description**

## 1.26 snmp-server view

Use this command to configure an SNMP view. Use the **no** form of this command to remove an SNMP view.

**snmp-server view** *view-name* *oid-tree* { **include** | **exclude** }

**no snmp-server view** *view-name* [ *oid-tree* ]

**Parameter Description**

| Parameter        | Description                                             |
|------------------|---------------------------------------------------------|
| <i>view-name</i> | View name                                               |
| <i>oid-tree</i>  | Specifies the MIB object to associate with the view.    |
| <b>include</b>   | Includes the sub trees of the MIB object in the view.   |
| <b>exclude</b>   | Excludes the sub trees of the MIB object from the view. |

**Defaults** By default, a view is set to access all MIB objects.

**Command mode** Global configuration mode.

**Usage Guide** N/A

**Configuration** The following example sets a view that includes all MIB-2 sub-trees (oid is 1.3.6.1).

**Examples**

```
Ruijie(config)# snmp-server view mib2 1.3.6.1 include
```

**Related Commands**

| Command               | Description                           |
|-----------------------|---------------------------------------|
| <b>show snmp view</b> | Displays the SNMP view configuration. |

|                    |     |
|--------------------|-----|
| <b>Platform</b>    | N/A |
| <b>Description</b> |     |

## 2 RMON Commands

### 2.1 rmon alarm

Use this command to monitor a MIB variable. Use the **no** form of this command to remove the alarm entry.

**rmon alarm** *number variable interval* {**absolute** | **delta** } **rising-threshold** *value* [*event-number*]  
**falling-threshold** *value* [*event-number*] [**owner** *ownername*]

**no rmon alarm** *number*

#### Parameter description

| Parameter                                | Description                                                                                                                                                                                                      |
|------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>number</i>                            | Alarm number. The value ranges from 1-65,535.                                                                                                                                                                    |
| <i>variable</i>                          | Alarm variable. The value is a character string consisting of 1 to 255 characters in OID dotted format (the format is entry.integer.instance or a leaf node named .instance, for example. 1.3.6.1.2.1.2.1.10.1). |
| <i>interval</i>                          | Sampling interval. The value ranges from 1 to 2,147,483,647 in the unit of second.                                                                                                                               |
| <b>absolute</b>                          | Absolute sampling. In this mode, when the sampling time arrives, the system directly invokes the variable value.                                                                                                 |
| <b>delta</b>                             | Delta sampling. In this mode, when the sampling time arrives, the system invokes the delta value of the variable within the sampling interval.                                                                   |
| <b>rising-threshold</b><br><i>value</i>  | Rising threshold and the corresponding event number when the threshold is reached. The threshold ranges from -2,147,483,648 to +2,147,483,647.                                                                   |
| <i>event-number</i>                      | The event number ranges from 1 to 65,535.                                                                                                                                                                        |
| <b>falling-threshold</b><br><i>value</i> | Falling threshold and the corresponding event number when the threshold is reached. The threshold ranges from -2,147,483,648 to +2,147,483,647.                                                                  |
| <b>owner</b><br><i>ownername</i>         | Owner of an entry. The value is a character string consisting of 1 to 63 characters that are case sensitive.                                                                                                     |

**Default** N/A.

**Command mode** Global configuration mode.

#### Usage guidelines

The RGOS allows you to modify the configured history information of the Ethernet network, including variable, absolute/delta, owner, rising-threshold/falling-threshold, and the corresponding events. However, the modification does not take effect immediately until the system triggers the monitoring event at the next time.

#### Examples

The example below monitors the MIB variable instance ifInNUcastPkts.6.

```
Ruijie(config)# rmon alarm 10 1.3.6.1.2.1.2.2.1.12.6 30 delta
```

```
rising-threshold 20 1 falling-threshold 10 1 owner zhangsan
```

**Related commands**

| Command                                                                                                                                                  | Description               |
|----------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------|
| <b>rmon event</b> <i>number</i> [ <b>log</b> ] [ <b>trap</b> <i>community</i> ]<br><b>description</b> <i>string</i> [ <b>owner</b> <i>owner-string</i> ] | Adds an event definition. |

## 2.2 rmon collection history

Use this command to enable history statistics on the Ethernet interface. Use the **no** form of this command to remove the history entry.

**rmon collection history** *index* [**owner** *ownername*] [**buckets** *bucket-number*] [**interval** *seconds*]

**no rmon collection history** *index*

**Parameter description**

| Parameter                              | Description                                                                                                                               |
|----------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|
| <i>index</i>                           | Index of a history entry. The value ranges from 1 to 65,535.                                                                              |
| <b>owner</b><br><i>ownername</i>       | Owner of an entry. The value is a character string consisting of 1 to 63 characters that are case sensitive.                              |
| <b>buckets</b><br><i>bucket-number</i> | Capacity of a history entry (that is, the maximum number of history entries). The value ranges from 1 to 65,535. The default value is 10. |
| <b>interval</b><br><i>seconds</i>      | Statistics period. The unit is second. The value ranges from 1 to 3,600. The default value is 1,800 seconds.                              |

**Default** N/A.

**Command mode** Interface configuration mode.

**Usage guidelines** The configured history control entry parameters cannot be modified. And the history entry can be removed from the interface where the entry configured.

The example below enables log statistics on interface GigabitEthernet 0/1.

**Examples**

```
Ruijie# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#interface gigabitEthernet 0/1
Ruijie(config-GigabitEthernet0/1)#rmon collection history 1 owner UserA
buckets 5 interval 60
```

**Related commands**

| Command                                                                         | Description                                         |
|---------------------------------------------------------------------------------|-----------------------------------------------------|
| <b>rmon collection stats</b> <i>index</i><br>[ <b>owner</b> <i>owner-name</i> ] | Adds a statistical entry on the Ethernet interface. |

## 2.3 rmon collection stats

Use this command to monitor an Ethernet interface. Use the **no** form of this command to remove the configuration.

**rmon collection stats** *index* [**owner** *owner-string*]

**no rmon collection stats** *index*

| Parameter description | Parameter                     | Description                                                                                                                            |
|-----------------------|-------------------------------|----------------------------------------------------------------------------------------------------------------------------------------|
|                       | <i>index</i>                  | Index of the statistic table. The value ranges from 1 to 65,535.                                                                       |
|                       | <b>owner</b> <i>ownername</i> | Owner of an entry. The value is a character string consisting of 1 to 63 characters that are case sensitive and do not contain spaces. |

**Default** N/A.

**Command mode** Interface configuration mode.

**Usage guidelines** N/A.

The example below enables monitoring the statistics of interface GigabitEthernet 0/1.

### Examples

```
Ruijie# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#interface gigabitEthernet 0/1
Ruijie(config-GigabitEthernet0/1)# rmon collection stats 1 owner UserA
```

### Related commands

| Command                                                                                                                                                      | Description                   |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------|
| <b>rmon collection history</b> <i>index</i> [ <b>owner</b> <i>owner-name</i> ]<br>[ <b>buckets</b> <i>bucket-number</i> ] [ <b>interval</b> <i>seconds</i> ] | Adds a history control entry. |

## 2.4 rmon event

Use this command to define an event. Use the **no** form of this command to remove the event entry.

**rmon event** *number* [**log**] [**trap** *community*] [*description-string*] [**description** *description-string*] [**owner** *owner-name*]

**no rmon event** *number*

| Parameter description | Parameter                    | Description                                                                                                    |
|-----------------------|------------------------------|----------------------------------------------------------------------------------------------------------------|
|                       | <i>number</i>                | Event number. The value ranges from 1 to 65,535.                                                               |
|                       | <b>log</b>                   | (Optional) Log event. When a log event is triggered, the system records a log.                                 |
|                       | <b>trap</b> <i>community</i> | (Optional) Trap event. When a trap event is triggered, the system sends trap with the group named "community". |

|                                                 |                                                                                                                         |
|-------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|
| <b>description</b><br><i>description-string</i> | (Optional) Description of the event. The value is a character string consisting of 1 to 127 characters.                 |
| <b>owner</b><br><i>owner-name</i>               | (Optional) Owner of an entry. The value is a character string consisting of 1 to 63 characters that are case sensitive. |

**Default** N/A.

**Command mode** Global configuration mode.

**Usage guidelines** N/A.

**Examples**

The example below defines the event actions: log event and send trap message.

```
Ruijie#configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#rmon event 1 log trap public description "ifInNUcastPkts
is abnormal" owner UserA
```

|                         | Command                                                                                                                                                              | Description          |
|-------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------|
| <b>Related commands</b> | <b>rmon alarm</b> <i>number variable interval {absolute   delta } rising-threshold value [event-number] falling-threshold value [event-number] [owner ownername]</i> | Adds an alarm entry. |

## 2.5 show rmon

**Default** Use this command to display the RMON configuration.  
**show rmo**

**Default** N/A.

**Command mode** Privileged EXEC mode.

**Usage guidelines** N/A.

**Examples**

The example below displays the RMON configuration.

```
Ruijie#show rmon
ether statistic table:
    index = 1
    interface = GigabitEthernet 0/1
    owner = admin
    status = 0
    dropEvents = 61
    octets = 170647461
```

```
pkts = 580375
broadcastPkts = 2135
multiPkts = 3615
crcAlignErrors = 0
underSizePkts = 0
overSizePkts = 0
fragments = 0
jabbers = 0
collisions = 0
packets64Octets = 3254668
packets65To127Octets = 1833370
packets128To255Octets = 2098146
packets256To511Octets = 126716
packets512To1023Octets = 363621
packets1024To1518Octets = 1077865
```

rmon history control table:

```
index = 1
interface = GigabitEthernet 0/1
bucketsRequested = 5
bucketsGranted = 5
interval = 60
owner = UserA
stats = 1
```

rmon history table:

```
index = 1
sampleIndex = 2485
intervalStart = 7d:22h:56m:38s
dropEvents = 0
octets = 5840
pkts = 27
broadcastPkts = 0
multiPkts = 0
crcAlignErrors = 0
underSizePkts = 0
overSizePkts = 0
fragments = 0
jabbers = 0
collisions = 0
utilization = 0
```

rmon alarm table:

```
index: 1
interval: 60
```



```

oid = 1.3.6.1.2.1.2.2.1.12.6
sampleType: 2
alarmValue: 0
startupAlarm: 3
risingThreshold: 20
fallingThreshold: 10
risingEventIndex: 1
fallingEventIndex: 1
owner: UserA
status: 1

rmon event table:
    index = 1
    description = ifInNUcastPkts is abnormal
    type = 4
    community = public
    lastTimeSent = 0d:0h:0m:0s
    owner =UserA
    status = 1

rmon log table:
    eventIndex = 1
    index = 1
    logTime = 6 d:19 h:21 m:48 s
    logDescription = ifInNUcastPkts is abnormal
    
```

**Related commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

## 2.6 show rmon alarm

**Default** Use this command to display the RMON alarm table.

**show rmon alarm**

**Default** N/A.

**Command mode** Privileged EXEC mode.

**Usage guidelines** N/A.

The example below displays the RMON alarm table.

**Examples**

```

Ruijie#show rmon alarm
rmon alarm table:
    
```

```

index: 1
interval: 60
oid = 1.3.6.1.2.1.2.2.1.12.6
sampleType: 2
alarmValue: 0
startupAlarm: 3
risingThreshold: 20
fallingThreshold: 10
risingEventIndex: 1
fallingEventIndex: 1
owner: UserA
status: 1
    
```

**Related commands**

| Command                                                                                                                                                                                                                                              | Description          |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------|
| <b>rmon alarm</b> <i>number variable</i><br><i>interval {absolute   delta }</i><br><b>rising-threshold</b> <i>value</i><br><i>[event-number]</i> <b>falling-threshold</b> <i>value</i><br><i>[event-number]</i> [ <b>owner</b><br><i>ownername</i> ] | Adds an alarm entry. |

## 2.7 show rmon event

Use this command to display the event configuration.

**show rmon event**

**Default** N/A.

**Command mode** Privileged EXEC mode.

**Usage guidelines** N/A.

The example below displays the event configuration.

**Examples**

```

Ruijie#show rmon event
rmon event table:
    index = 1
    description = ifInNUcastPkts is abnormal
    type = 4
    community = public
    lastTimeSent = 0d:0h:0m:0s
    owner =UserA
    status = 1
    
```

```
rmon log table:
    eventIndex = 1
    index = 1
    logTime = 6d:19h:21m:48s
    logDescription = ifInNUcastPkts is abnormal
```

**Related commands**

| Command                                                                                                                                                            | Description          |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------|
| <b>rmon event</b> <i>number</i> [ <b>log</b> ] [ <b>trap</b> <i>community</i> ] [ <b>description</b> <i>description-string</i> ] [ <b>owner</b> <i>ownername</i> ] | Adds an event entry. |

## 2.8 show rmon history

Use this command to display the history information.

**show rmon history**

**Default** N/A.

**Command mode** Privileged EXEC mode.

**Usage guidelines** N/A.

The example below displays the history information.

```
Ruijie#show rmon history
rmon history control table:
    index = 1
    interface = GigabitEthernet 0/1
    bucketsRequested = 5
    bucketsGranted = 5
    interval = 60
    owner = UserA
    stats = 1

rmon history table:
    index = 1
    sampleIndex = 2485
    intervalStart = 7d:22h:56m:38s
    dropEvents = 0
    octets = 5840
    pkts = 27
    broadcastPkts = 0
    multiPkts = 0
    crcAlignErrors = 0
    underSizePkts = 0
```

**Examples**

```

overSizePkts = 0
fragments = 0
jabbers = 0
collisions = 0
utilization = 0
    
```

**Related commands**

| Command                                                                                                                                                   | Description                   |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------|
| <b>rmon collection history</b> <i>index</i><br>[owner <i>ownername</i> ] [ <b>buckets</b><br><i>bucket-number</i> ] [ <b>interval</b><br><i>seconds</i> ] | Adds a history control entry. |

## 2.9 show rmon statistics

Use this command to display the RMON statistics.

**show rmon statistics**

**Default**

N/A.

**Command mode**

Privileged EXEC mode.

**Usage guidelines**

The example below displays the RMON statistics.

**Examples**

```

Ruijie#show rmon statistics
ether statistic table:
    index = 1
    interface = GigabitEthernet 0/1
    owner = admin
    status = 0
    dropEvents = 61
    octets = 170647461
    pkts = 580375
    broadcastPkts = 2135
    multiPkts = 3615
    crcAlignErrors = 0
    underSizePkts = 0
    overSizePkts = 0
    fragments = 0
    jabbers = 0
    collisions = 0
    packets64Octets = 3254668
    packets65To127Octets = 1833370
    
```

```
packets128To255Octets = 2098146
packets256To511Octets = 126716
packets512To1023Octets = 363621
packets1024To1518Octets = 1077865
```

**Related  
commands**

| Command                                                                        | Description               |
|--------------------------------------------------------------------------------|---------------------------|
| <b>rmon collection stats</b> <i>index</i> [ <b>owner</b> <i>owner-string</i> ] | Adds a statistical entry. |

## 3 NTP Commands

### 3.1 no ntp

Use this command to disable Network Time Protocol (NTP), and clear all NTP configuration.

**no ntp**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** NTP is disabled by default.

**Command mode** Global configuration mode.

**Usage Guide** By default, NTP is disabled. However, once the NTP server or the NTP primary clock is configured, the NTP service will be enabled.

**Configuration Examples** The following example disables NTP.

```
Ruijie(config)#no ntp
```

| Related Commands | Command    | Description              |
|------------------|------------|--------------------------|
|                  | ntp server | Specifies an NTP server. |

**Platform Description** N/A

### 3.2 ntp access-group

Use this command to configure an access group to control NTP access. Use the **no** form of this command to remove the peer access group.

**ntp access-group** { **peer** | **serve** | **serve-only** | **query-only** } *access-list-number* | *access-list-name*  
**no ntp access-group** { **peer** | **serve** | **serve-only** | **query-only** } *access-list-number* | *access-list-name*

| Parameter Description | Parameter | Description                                                                                                                           |
|-----------------------|-----------|---------------------------------------------------------------------------------------------------------------------------------------|
|                       | peer      | Allows the device to receive time requests and NTP control queries to synchronize itself to the servers specified in the access list. |

|                           |                                                                                                                                                                          |
|---------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>serve</b>              | Allows the device to receive time requests and NTP control queries from the servers specified in the access list but not to synchronize itself to the specified servers. |
| <b>serve-only</b>         | Allows the device to receive only time requests from the servers specified in the access list.                                                                           |
| <b>query-only</b>         | Allows the device to receive only NTP control queries from servers specified in the access list.                                                                         |
| <i>access-list-number</i> | Access control list number, ranging from 1 to 99 and 1300 to 1999.                                                                                                       |
| <i>access-list-name</i>   | Access control list name.                                                                                                                                                |


**Defaults** No access rule to control NTP access is configured by default, namely, NTP access is granted to all devices.

**Command mode** Global configuration mode.

**Usage Guide** Use this command to configure an access group to control NTP access, providing a minimal security measures (more secure way is to use the NTP authentication mechanism).

The NTP service enables the access group options to be scanned in the following order, from least restrictive to most restrictive: **peer**, **serve**, **serve-only**, **query-only**.

If you do not configure any access groups, NTP access is granted to all devices. However, once you configure the access rule, NTP access is granted only to the devices specified in the access list.

 NTP control query is not supported in the current system. Although it matches with the order in accordance with the above rules, the related requests about the control and query are not supported.

**Configuration Examples** The following example shows how to allow the device to only receive time requests from the device of 192.168.1.1.

```
Ruijie(config)# access-list 1 permit 192.168.1.1
Ruijie(config)# ntp access-group serve-only 1
```

**Related Commands**

| Command               | Description                        |
|-----------------------|------------------------------------|
| <b>ip access-list</b> | Creates an IP access control list. |

**Platform** N/A  
**Description**

### 3.3 ntp authenticate

Use this command to enable NTP authentication. Use the **no** form of this command to disable NTP

authentication.

**ntp authenticate**

**no ntp authenticate**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** Disabled.

**Command mode** Global configuration mode.

**Usage Guide** If NTP authentication is disabled, the synchronization communication is not encrypted. To enable encrypted communication on the server, enable the NTP authentication and configure other keys globally.

NTP authentication is implemented through the trusted key specified by the **ntp authentication-key** and **ntp trusted-key** commands.

**Configuration Examples** After an authentication key is configured and specified as the global trusted key, enable NTP authentication.

```
Ruijie(config)#ntp authentication-key 6 md5 woooooop
Ruijie(config)#ntp trusted-key 6
Ruijie(config)#ntp authenticate
```

| Related Commands | Command                       | Description                         |
|------------------|-------------------------------|-------------------------------------|
|                  | <b>ntp authentication-key</b> | Sets the global authentication key. |
|                  | <b>ntp trusted-key</b>        | Configures the global trusted key.  |

**Platform Description** N/A

### 3.4 ntp authentication-key

Use this command to configure an NTP authentication key. Use the **no** form of this command to remove the NTP authentication key.

**ntp authentication-key** *key-id* **md5** *key-string* [*enc-type*]

**no ntp authentication-key** *key-id*

| Parameter Description | Parameter         | Description                           |
|-----------------------|-------------------|---------------------------------------|
|                       | <i>key-id</i>     | Key ID, ranging from 1 to 4294967295. |
|                       | <i>key-string</i> | Key string                            |



|                 |                                                                                                                                                                      |
|-----------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                 | An encrypted key supports up to 64 bytes of length, while a non-encrypted key supports up to 31 bytes.                                                               |
| <i>enc-type</i> | (Optional) Whether this key is encrypted, where, 0 indicates the key is not encrypted, 7 indicates the key is encrypted simply. The key is not encrypted by default. |

**Defaults** NTP authentication key is not configured by default.

**Command mode** Global configuration mode.

**Usage Guide** Use this command to configure an NTP authentication key and enables the **md5** algorithm for authentication. Each key presents a unique key ID, which can be configured as a trusted key using the **ntp trusted-key** command..

You can configure up to 1024 NTP authentication keys. However, each server can support only one key.

**Configuration** The following example configures an NTP authentication key.

**Examples**

```
Ruijie(config)#ntp authentication-key 6 md5 woooooop
```

**Related Commands**

| Command                 | Description                    |
|-------------------------|--------------------------------|
| <b>ntp authenticate</b> | Enables NTP authentication.    |
| <b>ntp trusted-key</b>  | Configures an NTP trusted key. |
| <b>ntp server</b>       | Specifies an NTP server.       |

**Platform** N/A

**Description**

### 3.5 ntp disable

Use this command to disable the device to receive NTP packets on the specified interface.

**ntp disable**

**Parameter Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** All NTP packets can be received by default.

**Command mode** Interface configuration mode.

**Usage Guide** The NTP message received on any interface can be provided to the client to carry out the clock

adjustment. The function can be set to shield the NTP message received from the corresponding interface.

By default, the device receives NTP packets on all interfaces, and adjust clock for the client. You can use this command to disable the device to receive NTP packets on the specified interface.

 This command is configured only the interface that can receive and send IP packets.

**Configuration** The following example disables the device to receive the NTP packets.

**Examples** Ruijie(config-if)# no ntp disable

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform  
Description** N/A

### 3.6 ntp interval

Use this command to set the interval for time synchronization between the NTP client and the NTP server. Use the **no** form of this command to restore the default time synchronization interval.

**ntp interval** *seconds*

**no ntp interval**

**Parameter  
Description**


| Parameter      | Description                                                                               |
|----------------|-------------------------------------------------------------------------------------------|
| <i>seconds</i> | Sets the time synchronization interval in seconds. The value ranges from 10 to 2,592,000. |

**Defaults** The default value is 64.

**Command  
Mode** Global configuration mode

**Default Level** 14

**Usage Guide**

 The configuration does not take effect immediately. For immediate validation, enable NTP and then set the interval. If the NTP client has never synchronized the time successfully, it rapidly synchronizes the time at an interval of 5s. Then, it synchronizes time at the preset interval after the first successful time synchronization.

**Configuration** The following example configures the NTP time synchronization interval to 3,600 seconds.

**Examples** Ruijie(config)# ntp interval 3600

## 3.7 ntp master

Use this command to configure the device to act as an authoritative NTP server, synchronizing time to other devices. Use the **no** form of this command to remove the device as an authoritative NTP server.

**ntp master** [ *stratum* ]


**no ntp master**


| Parameter Description | Parameter      | Description                                                 |
|-----------------------|----------------|-------------------------------------------------------------|
|                       | <i>stratum</i> | Stratum level. The range is from 1 to 15. The default is 8. |

**Defaults** N/A

**Command mode** Global configuration mode.

**Usage Guide** In general, the local device synchronizes time from the external time source directly or indirectly. However, if the time synchronization fails due to network connection trouble, you can use this command to configure the local device to act as an authoritative NTP server to synchronize time to other devices. Once configured, the device will not perform time synchronization with the time source which is of a higher stratum.

 Configuring the device to act as an authoritative NTP server (in particular, specify a lower stratum level), may be likely to overwrite the effective time. If multiple devices in the same network are configured with this command, the time synchronization may be instable due to the time difference between the devices.

 Before configuring this command, you need to manually correct the system clock to avoid too much bias if the device has never performed time synchronization with the external clock source.

**Configuration Examples** The following example configures the device to act as an authoritative NTP server, and sets the stratum level to 12:

```
Ruijie(config)# ntp master 12
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform Description** N/A

### 3.8 ntp server

Use this command to specify a NTP server for the NTP client. Use the **no** form of this command to delete the specified NTP server.

```
ntp server [ oob | vrf vrf-name ] { ip-addr | domain | ip domain | ipv6 domain } [ version version ]
[ source if-name ] [ key keyid ] [ prefer ] [ via mgmt-name ]
no ntp server ip-addr
```

#### Parameter Description

| Parameter                  | Description                                                                                                                                    |
|----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>oob</b>                 | (Optional) Accesses the NTP server from the MGMT interface. By default, this option is disabled.                                               |
| <b>vrf</b> <i>vrf-name</i> | Specifies the virtual routing and forwarding (VRF) name. By default, this parameter is disabled.                                               |
| <i>ip-addr</i>             | Sets the IP address of the NTP server. The address can be in IPv4 or IPv6 format.                                                              |
| <i>domain</i>              | Sets the domain name of the NTP server, supporting IPv4 and IPv6.                                                                              |
| <i>version</i>             | (Optional) Specifies the NTP version (1-3). The default is NTPv3.                                                                              |
| <i>if-name</i>             | (Optional) Specifies the source interface from which the NTP message is sent (L3 interface).                                                   |
| <i>keyid</i>               | (Optional) Specifies the encryption key adopted when communication with the corresponding server. The key ID range is from 1 to 4,294,967,295. |
| <b>prefer</b>              | (Optional) Specifies the given NTP server as the preferred one.                                                                                |
| <i>mgmt-name</i>           | (Optional) Specifies the egress MGMT interface for the packets in oob mode.                                                                    |


**Defaults** No NTP server is configured by default.

**Command mode** Global configuration mode.

**Usage Guide** At present, RGOS system only supports clients other than servers. Up to 20 servers can be synchronized.

To carry out the encrypted communication with the server, set the global encryption key and global trusted key firstly, and then specify the corresponding key as the trusted key of the server to launch the encrypted communication of the server. It requires the server presents identical global encryption key and global trust key to complete the encrypted communication with the server.

In the same condition (for instance, precision), the prefer clock is used for synchronization.

 The source interface of NTP packets must be configured with the IP address and can be communicated with the peer.

**Configuration** The following example configures an NTP server.

**Examples** For IPv4: `Ruijie(config)# ntp server 192.168.210.222`  
 For IPv6: `Ruijie(config)# ntp server 10::2`

**Related  
Commands**

| Command             | Description   |
|---------------------|---------------|
| <code>no ntp</code> | Disables NTP. |

**Platform** N/A  
**Description**

### 3.9 ntp trusted-key

Use this command to set a global trusted key. Use the **no** form of this command to remove the global trusted key.

**ntp trusted-key** *key-id*  
**no ntp trusted-key** *key-id*

**Parameter  
Description**

| Parameter     | Description                                          |
|---------------|------------------------------------------------------|
| <i>key-id</i> | Global trusted key ID, ranging from 1 to 4294967295. |

**Defaults** N/A

**Command  
mode** Global configuration mode.

**Usage Guide** The NTP communication parties must use the same trusted key. The key is identified by ID and is not transmitted to improve security.

**Configuration** The following example configures an authentication key and sets it as a trusted key.

**Examples** `Ruijie(config)#ntp authentication-key 6 md5 woooooop`  
`Ruijie(config)#ntp trusted-key 6`  
`Ruijie(config)#ntp server 192.168.210.222 key 6`

**Related  
Commands**

| Command                             | Description                           |
|-------------------------------------|---------------------------------------|
| <code>ntp authenticate</code>       | Enables NTP authentication.           |
| <code>ntp authentication-key</code> | Configures an NTP authentication key. |
| <code>ntp server</code>             | Configures an NTP server.             |

**Platform** N/A  
**Description**

### 3.10 ntp update-calendar

Use this command to enable the NTP client to periodically update the device clock with the time synchronized from the external source clock. Use the **no** form of this command to remove this function.

**ntp update-calendar**

**no ntp update-calendar**

| Parameter<br>Description | Parameter | Description |
|--------------------------|-----------|-------------|
|                          |           | N/A         |

**Defaults** By default, update the calendar periodically is not configured.

**Command mode** Global configuration mode.

**Usage Guide** By default, the NTP update-calendar is not configured. After configuration, the NTP client updates the calendar at the same time when the time synchronization of external time source is successful. It is recommended to enable this function for keeping the accurate calendar.

**Configuration** The following example configures the NTP update calendar periodically.

**Examples** Ruijie(config)# ntp update-calendar

| Related<br>Commands | Command | Description |
|---------------------|---------|-------------|
|                     |         | N/A         |

**Platform** N/A

**Description**

### 3.11 show ntp server

Use this command to display the NTP server configuration.

**show ntp server**

| Parameter<br>Description | Parameter | Description |
|--------------------------|-----------|-------------|
|                          |           | N/A         |

**Defaults** N/A

**Command** Privileged EXEC mode, global configuration mode, interface configuration mode, VLAN configuration

**mode** mode

**Usage Guide** N/A

**Configuration** The following example displays the NTP server.

**Examples**

```
Ruijie# show ntp server
ntp-server          source      keyid      prefer  version
-----
-----
10::2              None       None       FALSE   3
192.168.210.222   None       None       FALSE   3
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform** N/A

**Description**

## 3.12 show ntp status

Use this command to display the NTP configuration.

**show ntp status**

**Parameter  
Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** N/A

**Command mode** Privileged EXEC mode, global configuration mode, interface configuration mode, VLAN configuration mode

**Usage Guide** Use this command to display the NTP configuration. No configuration is displayed before the synchronization server is configured for the first time.

**Configuration** The following example displays the NTP configuration.

**Examples**

```
Ruijie# show ntp status
Clock is synchronized, stratum 8, reference is 127.127.1.1
nominal freq is 250.0000 Hz, actual freq is 250.0000 Hz, precision is 2**24
reference time is D4BD819B.433892EE (01:27:55.000 UTC )
clock offset is 0.00000 sec, root delay is 0.00000 sec
root dispersion is 0.00002 msec, peer dispersion is 0.00002 msec
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform  
Description**

N/A



## 4 SNTP Commands

### 4.1 show sntp

Use this command to display the SNTP configuration.

**show sntp**

**Parameter  
Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults**

**Command  
mode**

Privileged EXEC mode, global configuration mode, interface configuration mode.

**Usage Guide**

N/A

**Configuration**

The following example displays the SNTP configuration.

**Examples**

```
Ruijie# show sntp
SNTP state      : Enable
SNTP server     : 192.168.4.12
SNTP sync interval : 60
Time zone      : +8
```

**Related  
Commands**

| Command            | Description   |
|--------------------|---------------|
| <b>sntp enable</b> | Enables SNTP. |

**Platform**

N/A

**Description**

### 4.2 sntp enable

Use this command to enable the SNTP function. Use the **no** form of this command to restore the default value.

**sntp enable**

**no sntp enable**

**Parameter  
Description**

| Parameter | Description |
|-----------|-------------|
| N/A       | N/A         |

**Defaults** SNTP is disabled by default.

**Command mode** Global configuration mode.

**Usage Guide** N/A

**Configuration** The following example enables SNTP.

**Examples**

```
Ruijie(config)# sntp enable
```

**Related Commands**

| Command          | Description                      |
|------------------|----------------------------------|
| <b>show sntp</b> | Displays the SNTP configuration. |

**Platform Description** N/A

### 4.3 sntp interval

Use this command to set the interval for the SNTP client to synchronize its clock with the NTP/SNTP server. Use the **no** form of this command to restore the default synchronization interval.

**sntp interval** *seconds*

**no sntp interval**

**Parameter Description**

| Parameter      | Description                                                                       |
|----------------|-----------------------------------------------------------------------------------|
| <i>seconds</i> | Synchronization interval. The unit is second, and the range is from 60 to 65,535. |

**Defaults** The default synchronization interval is 1,800 seconds.

**Command mode** Global configuration mode.

**Usage Guide** To make the synchronization interval configuration effective, run the **sntp enable** command.

**Configuration** The following example configures the synchronization interval to 3,600 seconds.

**Examples**

```
Ruijie(config)# sntp interval 3600
```

**Related Commands**

| Command            | Description                      |
|--------------------|----------------------------------|
| <b>sntp enable</b> | Enables SNTP.                    |
| <b>show sntp</b>   | Displays the SNTP configuration. |

**Platform** N/A  
**Description**

## 4.4 sntp server

Use this command to specify an SNTP server. Use the **no** form of this command to remove the SNTP server.

**sntp server** [ **oob** ] { *ip-address* | *domain* } [ **via** *mgmt-name* ] [ **source** *source-ip-address* ]  
**no sntp server**

| Parameter Description | Parameter                | Description                                                                 |
|-----------------------|--------------------------|-----------------------------------------------------------------------------|
|                       | <i>ip-address</i>        | IP address of the SNTP server.                                              |
|                       | <b>oob</b>               | (Optional) Accesses the SNTP server from the MGMT interface.                |
|                       | <i>domain</i>            | Specifies the domain name of the SNTP server.                               |
|                       | <i>source-ip-address</i> | (Optional) Indicates the specified source IP address.                       |
|                       | <i>mgmt-name</i>         | (Optional) Specifies the egress MGMT interface for the packets in oob mode. |

**Defaults** No SNTP server is configured by default.

**Command mode** Global configuration mode.

**Usage Guide** As SNTP is fully compatible with NTP, the SNTP server can be used as an NTP server in Internet.

**Configuration** The following example specifies an SNTP server in Internet.

**Examples** Ruijie(config)# sntp server 192.168.4.12

| Related Commands | Command            | Description                      |
|------------------|--------------------|----------------------------------|
|                  | <b>show sntp</b>   | Displays the SNTP configuration. |
|                  | <b>sntp enable</b> | Enables SNTP.                    |

**Platform** N/A  
**Description**

## 5 SPAN-RSPAN Commands

### 5.1 mac-loopback

Use this command to enable MAC loopback. Use the **no** form of this command to disable MAC loopback.

**mac-loopback**

**no mac-loopback**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** MAC loopback is disabled by default.

**Command mode** Interface configuration mode.

**Usage Guide** The MAC loopback feature must be enabled on the interfaces for purposes of local one-to-many mirroring. (Please enable the MAC loopback feature on the down interface, and do not add other configurations to the interface.)

**Configuration Examples** The following example configures a remote VLAN.

```
Ruijie(config)#vlan 100
Ruijie(config-vlan)#remote-span
Ruijie(config-vlan)#exit
```

The following example configures a session and specifies the mirrored port.

```
Ruijie(config)#monitor session 1 remote-source
Ruijie(config)#monitor session 1 source interface gigabitEthernet 4/1 both
```

The following example configures the mirroring port, and enables MAC loopback on the port.

```
Ruijie(config)#monitor session 1 destination remote vlan 100 interface
gigabitEthernet 4/2 switch
Ruijie(config)#interface gigabitEthernet 4/2
Ruijie(config-if-GigabitEthernet 4/2)#switchport access vlan 100
Ruijie(config-if-GigabitEthernet 4/2)#mac-loopback
```

The following example adds interfaces GigabitEthernet 4/3-4 to the remote VLAN.

```
Ruijie(config)#interface range gigabitEthernet 4/3-4
Ruijie(config-if-range)#switchport access vlan 100
```

| Related Commands | Command | Description |
|------------------|---------|-------------|
|                  | N/A     | N/A         |

**Platform** N/A  
**Description**

## 5.2 monitor session

Use this command to configure the SPAN session and specify the source port (monitored port).

**monitor session** *session-num* **source interface** *interface-id* [ **both** | **rx** | **tx** ]

Use this command to configure the SPAN session mirroring only the traffic permitted by the access list

**monitor session** *session-num* **source interface** *interface-id* **rx acl** *acl-name*

Use this command to configure the SPAN session and specify the destination port (monitoring port).

**monitor session** *session-num* **destination interface** *interface-id* [**switch** ]

Use this command to configure the SPAN session monitoring the CPU packets.

**monitor session** *session-num* **source interface** *interface-id* **tx cpu**

Use this command to configure the remote SPAN session ID on the source device..

**monitor session** *session-num* **remote-source**

Use this command to configure the remote SPAN session ID on the destination device.

**monitor session** *session-num* **remote-destination**

Use this command to configure the remote SPAN session and specify the remote SPAN destination VLAN.

**monitor session** *session-num* **destination remote vlan** *remote-vlan-id* **interface** *interface-id*  
 [ **switch** ]

Use this command to configure the SPAN session and specify the source VLAN to monitor. Note that the source VLAN should not be a remote VLAN.

**monitor session** *session-num* **source vlan** *vlan-id* [ **rx** ]

Use this command to limit the SPAN source traffic to specific VLANs.

**monitor session** *session-num* **filter vlan** *vlan-id-list*

Use this command to remove the specified SPAN session, or remove the source port or destination port of the specified SPAN session.

**no monitor session** *session-num* [ **source interface** *interface-id* | **destination interface**

*interface-id* ]

Use this command to remove the specified remote SPAN session, or remove the destination port of the remote SPAN session.

**no monitor session** *session-num* [ **destination remote vlan** *remote-vlan-id* **interface** *interface-id* ]

Use this command to remove the specified remote SPAN session, or remove the destination port of the remote SPAN session.

**default monitor session** *session-num* [ **destination remote vlan** *remote-vlan-id* **interface** *interface-id* ]

Use this command to remove the specified SPAN session, or remove the source port or destination port of the SPAN session.

**default monitor session** *session-num* { **source interface** *interface-id* | **destination interface** *interface-id* }

**Parameter  
Description**

| Parameter                  | Description                                                                           |
|----------------------------|---------------------------------------------------------------------------------------|
| <i>session_number</i>      | SPAN session number                                                                   |
| <i>interface-id</i>        | Interface name                                                                        |
| <b>acl</b> <i>acl-name</i> | Access list name                                                                      |
| <i>remote-vlan-id</i>      | Remote VLAN ID                                                                        |
| <i>vlan-id</i>             | VLAN ID (remote VLAN excluded)                                                        |
| <i>vlan-id-list</i>        | VLAN list (remote VLAN excluded)                                                      |
| <b>rx</b>                  | Monitors the only received traffic.                                                   |
| <b>tx</b>                  | Monitors the only transmitted traffic.                                                |
| <b>both</b>                | Monitors both received and transmitted traffic. This is the default.                  |
| <b>switch</b>              | Enables switching on the destination port. Switching function is disabled by default. |
| <b>cpu</b>                 | Monitors the CPU packets. This is disabled by default.                                |

**Defaults** Port monitoring is disabled by default.

**Command mode** Global configuration mode.

**Usage Guide** Use this command to configure SPAN or remote SPAN, and specify the source port or destination port.

If the **both**, **rx** or **tx** is not specified for the source port, the **both** parameter is the default.

Configuring an access list for the source port indicates that only the traffic permitted by the access list is monitored.

The **switch** feature is disabled on the destination port.

CPU packet monitoring, which is enabled through the **cpu** parameter, is disabled by default.

**Configuration** The following example configures the source port and destination port of the SPAN session.

**Examples**

```
Ruijie(config)# monitor session 1 source interface gigabitEthernet 0/1
Ruijie(config)# monitor session 1 destination interface gigabitEthernet 0/2
```

The following example configures the SPAN session mirroring only the traffic permitted by the access list.

```
Ruijie(config)# monitor session 3 source interface gigabitEthernet 0/3 rx acl
90
```

The following example configures a remote SPAN session.

```
Ruijie(config)# monitor session 10 remote-source
```

The following example configures the destination port of the remote SPAN session.

```
Ruijie(config)# monitor session 4 destination remote vlan 10 interface
gigabitEthernet 0/5
```

The following example configures the source VLAN of the SPAN session.

```
Ruijie(config)# monitor session 1 source vlan 1
```

The following example removes the SPAN session.

```
Ruijie(config)# no monitor session 1
```

The following example removes the source port and destination port of the SPAN session.

```
Ruijie(config)# no monitor session 1 source interface gigabitEthernet 0/18
Ruijie(config)# no monitor session 1 destination interface gigabitEthernet
0/18
```

The following example configures the SPAN session monitoring only the traffic sent from CPU.

```
Ruijie(config)# monitor session 3 source interface gigabitEthernet 0/3 tx cpu
```

The following example configures the SPAN session monitoring traffic, including the traffic sent from CPU.

```
Ruijie(config)# monitor session 3 source interface gigabitEthernet 0/3 tx cpu
Ruijie(config)# monitor session 3 source interface gigabitEthernet 0/3 tx
```

**Related Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform Description**

N/A

## 5.3 remote-span

Use this command to configure a remote SPAN VLAN in VLAN configuration mode. Use the **no** form of this command to disable the remote SPAN VLAN.

**remote-span**

**no remote-span**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|                       | N/A       | N/A         |

**Defaults** Remote SPAN VLAN is disabled by default.

**Command mode** VLAN configuration mode.

**Usage Guide** N/A

**Configuration Examples** The following example configures a remote SPAN VLAN.

```
Ruijie(config)# vlan 100
Ruijie(config-vlan)# remote-span
```

| Related Commands | Command          | Description                  |
|------------------|------------------|------------------------------|
|                  | <b>show vlan</b> | Displays VLAN configuration. |

**Platform Description** N/A

## 5.4 show monitor

Use this command to display the SPAN configurations.

**show monitor** [ **session** *session\_number* ]

| Parameter Description | Parameter             | Description                          |
|-----------------------|-----------------------|--------------------------------------|
|                       | <i>session_number</i> | Displays the specified SPAN session. |

**Defaults** N/A

**Command mode** Privileged EXEC mode, global configuration mode and interface configuration mode



**Usage Guide** N/A

**Configuration** This following example displays all SPAN sessions.

**Examples**

```
Ruijie(config)# show monitor
sess-num: 2
span-type: LOCAL_SPAN
src-intf:
TenGigabitEthernet 0/5      frame-type Both
dest-intf:
TenGigabitEthernet 0/6
sess-num: 1
span-type: LOCAL_SPAN
src-intf:
TenGigabitEthernet 0/3      frame-type Both
dest-intf:
```

The following example displays SPAN session 1.

```
Ruijie(config)# show monitor session 1
sess-num: 1
span-type: LOCAL_SPAN
src-intf:
TenGigabitEthernet 0/3      frame-type Both
dest-intf:
TenGigabitEthernet 0/4
```

**Related  
Commands**

| Command | Description |
|---------|-------------|
| N/A     | N/A         |

**Platform  
Description** N/A

## 6 sFlow Commands

### 6.1 sflow agent

Use this command to configure the address of the sFlow Agent.

```
sflow agent { address { ip-address | ipv6 ipv6-address } } | { interface { interface-name | ipv6 interface-name } }
```

Use this command to delete the address of the sFlow Agent.

```
no sflow agent { address | interface }
```

Use this command to restore the default setting.

```
default sflow agent { address | interface }
```

#### Parameter Description

| Parameter                         | Description                                   |
|-----------------------------------|-----------------------------------------------|
| <b>address</b>                    | Configures the IP address of the sFlow Agent. |
| <i>ip-address</i>                 | sFlow Agent IPv4 address.                     |
| <b>ipv6</b> <i>ipv6-address</i>   | sFlow Agent IPv6 address.                     |
| <b>interface</b>                  | Configures the interface of the sFlow Agent.  |
| <i>interface-name</i>             | Interface of IPv4 address.                    |
| <b>ipv6</b> <i>interface-name</i> | Interface of IPv6 address.                    |

#### Defaults

**Command Mode** Global configuration mode

**Default Level** 14

**Usage Guide** This command is used to configure the Agent IP address field in the output sFlow datagram. The datagram not configured with this field cannot be output. The sFlow Agent address shall be a host address. When a non-host address (for example, a multicast or broadcast address) is configured as the sFlow Agent address, a message indicating configuration failure is displayed. It is recommended that the IP address of the sFlow Agent device be configured as the sFlow Agent address.

**Configuration Examples** The following example configures 192.168.2.1 as the sFlow Agent address.

```
Examples Ruijie(config)# sflow agent address 192.168.2.1
```

**Verification** Use the show sflow command to display the sFlow configuration.

**Prompt** Prompt an error message when the address is invalid.

**Messages**      `invalid host address.`

**Common Errors**      N/A

**Platforms**      N/A

## 6.2 sflow collector *collector-id* destination

Use this command to configure the address of the sFlow Collector.

```
sflow collector collector-id destination { ip-address | ipv6 ipv6_address } udp-port [ vrf vrf-name ] |
[ description collector-name ]
```

Use this command to delete the address of the sFlow Collector.

```
no sflow collector collector-id destination { ip-address | ipv6 ipv6_address } udp-port [ vrf vrf-name ]
[ description collector-name ]
```

Use this command to delete the address of the sFlow Collector.

```
default sflow collector collector-id destination { ip-address | ipv6 ipv6_address } udp-port [ vrf
vrf-name ] | [ description collector-name ]
```

### Parameter Description

| Parameter                                | Description                                         |
|------------------------------------------|-----------------------------------------------------|
| <i>collector-id</i>                      | sFlow Collector ID. The range is from 1 to 2.       |
| <i>ip-address</i>                        | sFlow Collector IPv4 address                        |
| <b>ipv6</b> <i>ipv6-address</i>          | sFlow Collector IPv6 address                        |
| <i>udp-port</i>                          | sFlow Collector listening port number               |
| <b>vrf</b> <i>vrf-name</i>               | VRF instance name. It is not configured by default. |
| <b>description</b> <i>collector-name</i> | Description of the sFlow Collector.                 |

### Defaults

**Command**      Global configuration mode

**Mode**

**Default Level**      14

**Usage Guide**      This command is used to configure the sFlow Collector address. The sFlow Collector address shall be a host address. When a non-host address (for example, a multicast or broadcast address) is configured as the sFlow Collector address, a message indicating configuration failure is displayed. The sFlow Collector monitors the sFlow datagram on the specified port. When the vrf parameter is configured, the corresponding VRF instance must exist. When you remove the a VRF instance, the sFlow Collector address will be removed if this VRF instance is also configured for an sFlow Collector address.

**Configuration** The following example configures 192.168.1.100 as the address of sFlow Collector 1, 6343 as the port number and vpn 1 as the VRF instance.

**Examples**

```
Ruijie(config)# sflow collector 1 destination 192.168.2.100 6343 vrf vpn1
```

**Verification** Use the **show sflow** command to display the sFlow Collector.

**Prompt** Prompt an error message when the address is invalid.

**Messages**

```
invalid host address.
```

```
No VPN exists.
```

```
vpn is not exist
```

**Common Errors** N/A

**Platforms** N/A

### 6.3 sflow collector *collector-id* max-datagram-size

Use this command to configure the maximum length of the output sFlow datagram.

**sflow collector *collector-id* max-datagram-size *datagram-size***

Use this command to restore the default maximum length of the output sFlow datagram.

**no sflow collector *collector-id* max-datagram-size**

Use this command to restore the default maximum length of the output sFlow datagram.

**default sflow collector *collector-id* max-datagram-size**

**Parameter Description**

| Parameter                                        | Description                                                                      |
|--------------------------------------------------|----------------------------------------------------------------------------------|
| <i>collector-id</i>                              | sFlow Collector ID. The range is from 1 to 2.                                    |
| <b>max-datagram-size</b><br><i>datagram-size</i> | The maximum length of the output sFlow datagram. The range is from 200 to 9,000. |

**Defaults** The default maximum length of the output sFlow datagram is 1,400.

**Command Mode** Global configuration mode

**Default Level** 14

**Usage Guide** N/A

**Configuration** The following example configures 1,000 as the maximum length of the output sFlow datagram for sFlow

|                        |                                                                                               |
|------------------------|-----------------------------------------------------------------------------------------------|
| <b>Examples</b>        | Collector.<br><pre>Ruijie(config)# sflow collector 1 max-datagram-size 1000</pre>             |
| <b>Verification</b>    | Use the <b>show sflow</b> command to display the maximum length of the output sFlow datagram. |
| <b>Prompt Messages</b> | N/A                                                                                           |
| <b>Common Errors</b>   | N/A                                                                                           |
| <b>Platforms</b>       | N/A                                                                                           |

## 6.4 sflow counter collector

Use this command to enable the sFlow Agent to send counter samples to the sFlow Collector.

**sflow counter collector** *collector-id*

Use this command to disable the sFlow Agent to send counter samples to the sFlow Collector.

**no sflow counter collector**

Use this command to disable the sFlow Agent to send counter samples to the sFlow Collector.

**default sflow counter collector**

| Parameter Description | Parameter           | Description                                   |
|-----------------------|---------------------|-----------------------------------------------|
|                       | <i>collector-id</i> | sFlow Collector ID. The range is from 1 to 2. |

### Defaults

|                               |                                                                                                                                                                                                             |
|-------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Command Mode</b>           | Interface configuration mode                                                                                                                                                                                |
| <b>Default Level</b>          | 14                                                                                                                                                                                                          |
| <b>Usage Guide</b>            | This command can be used for physical ports, SVI ports and sub routed ports and aggregate ports. sFlow datagrams can be output only when an IP address is configured for the corresponding sFlow Collector. |
| <b>Configuration Examples</b> | The following example enables interface TenGigabitEthernet 0/5 to send counter samples to sFlow Collector 2.<br><pre>Ruijie(config-if-TenGigabitEthernet 0/5)# sflow counter collector 2</pre>              |
| <b>Verification</b>           | Use the <b>show sflow</b> command to display the sFlow counter sampling configuration.                                                                                                                      |

|                        |     |
|------------------------|-----|
| <b>Prompt Messages</b> | N/A |
| <b>Common Errors</b>   | N/A |
| <b>Platforms</b>       | N/A |

## 6.5 sflow counter interval

Use this command to configure the sFlow counter sampling interval.

**sflow counter interval** *seconds*

Use this command to restore the default sFlow counter sampling interval.

**no sflow counter interval**

Use this command to restore the default sFlow counter sampling interval.

**default sflow counter interval**

| Parameter Description | Parameter      | Description                                                                                |
|-----------------------|----------------|--------------------------------------------------------------------------------------------|
|                       | <i>seconds</i> | sFlow counter sampling interval. The range is form 3 to 2,147,483,647. The unit is second. |

**Defaults** The default sFlow counter sampling interval is 30 seconds.

**Command Mode** Global configuration mode

**Default Level** 14

**Usage Guide** This command is used to configure the global sFlow counter sampling interval, and sFlow Counter sampling of all interfaces uses this sampling interval.

**Configuration Examples** The following example configures the sFlow counter sampling interval to 60 seconds.

```
Ruijie(config)# sflow counter interval 60
```

**Verification** Use the **show sflow** command to display the sFlow counter sampling interval.

**Prompt Messages** N/A

**Common** N/A

**Errors****Platforms** N/A**6.6 sflow enable**

Use this command to enable flow sampling and counter sampling on the interface.

**sflow enable [ ingress | egress ]**

Use this command to disable flow sampling and counter sampling on the interface.

**no sflow enable**

Use this command to disable flow sampling and counter sampling on the interface.

**default sflow enable**

| Parameter Description | Parameter      | Description                                  |
|-----------------------|----------------|----------------------------------------------|
|                       | <b>ingress</b> | Enables sFlow sampling in ingress direction. |
|                       | <b>egress</b>  | Enables sFlow sampling in egress direction.  |

**Defaults** The sFlow sampling function on an interface is disabled by default.

**Command Mode** Interface configuration mode

**Default Level** 14

**Usage Guide** If the direction parameter is not specified, sampling on both directions are enabled. The SVI ports and sub routed ports support only the **ingress** parameter. The ACL should be configured and applied on the interface before the flow sampling based on ACL matching is enabled.

**Configuration Examples** The following example enables the sFlow sampling on interface TenGigabitEthernet 0/5.

```
Ruijie(config-if-TenGigabitEthernet 0/5)# sflow enable
```

**Verification** Use the **show sflow** command to display the status of the sFlow sampling function.

**Prompt Messages** N/A

**Common Errors** N/A

**Platforms** N/A

## 6.7 sflow flow collector

Use this command to enable the sFlow Agent to send flow samples to the sFlow Collector.

**sflow flow collector** *collector-id*

Use this command to disable the sFlow Agent to send flow samples to the sFlow Collector.

**no sflow flow collector**

Use this command to disable the sFlow Agent to send flow samples to the sFlow Collector.

**default sflow flow collector**

| Parameter Description | Parameter           | Description                                   |
|-----------------------|---------------------|-----------------------------------------------|
|                       | <i>collector-id</i> | sFlow Collector ID. The range is from 1 to 2. |

### Defaults

**Command Mode** Interface configuration mode

**Default Level** 14

**Usage Guide** This command can be used for physical ports, SVI ports, sub routed ports and aggregate ports. sFlow datagrams can be output only when an IP address is configured for the corresponding sFlow Collector.

**Configuration Examples** The following example enables interface TenGigabitEthernet 0/5 to send flow samples to sFlow Collector 2.

```
Ruijie(config-if-TenGigabitEthernet 0/5)# sflow flow collector 2
```

**Verification** Use the **show sflow** command to display the sFlow flow sampling configuration.

**Prompt Messages** N/A

**Common Errors** N/A

**Platforms** N/A

## 6.8 sflow flow max-header

Use this command to configure the maximum length of the packet header copied during flow sampling.



**sflow flow max-header** *length*

Use this command to restore the default maximum length of the packet header copied during flow sampling.

**no sflow flow max-header**

Use this command to restore the default maximum length of the packet header copied during flow sampling.

**default sflow flow max-header**

| <b>Parameter Description</b>  | Parameter                                                                                                                                                          | Description                                                                                      |
|-------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------|
|                               | <i>length</i>                                                                                                                                                      | Maximum length of the packet header to be copied. The range is from 18 to 256. The unit is byte. |
| <b>Defaults</b>               | The default length is 64 bytes.                                                                                                                                    |                                                                                                  |
| <b>Command Mode</b>           | Global configuration mode                                                                                                                                          |                                                                                                  |
| <b>Default Level</b>          | 14                                                                                                                                                                 |                                                                                                  |
| <b>Usage Guide</b>            | Configure the maximum number of bytes of the packet content copied from the header of the original packet. The copied content is recorded in the generated sample. |                                                                                                  |
| <b>Configuration Examples</b> | The following example sets the maximum length of the packet header copied during sFlow flow sampling to 128 bytes.                                                 |                                                                                                  |
|                               | <pre>Ruijie(config)# sflow flow max-header 128</pre>                                                                                                               |                                                                                                  |
| <b>Verification</b>           | Use the <b>show sflow</b> command to display the maximum length of the packet header copied during sFlow flow sampling.                                            |                                                                                                  |
| <b>Prompt Messages</b>        | N/A                                                                                                                                                                |                                                                                                  |
| <b>Common Errors</b>          | N/A                                                                                                                                                                |                                                                                                  |
| <b>Platforms</b>              | N/A                                                                                                                                                                |                                                                                                  |

## 6.9 sflow sampling-rate

Use this command to configure the sampling rate of sFlow flow sampling.

**sflow sampling-rate** *rate*

Use this command to restore the default the sampling rate of sFlow flow sampling.

**no sflow sampling-rate**

Use this command to restore the default sampling rate of sFlow flow sampling.

**default sflow sampling-rate**

| Parameter Description | Parameter   | Description                                                                                                                                                 |
|-----------------------|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <i>rate</i> | Sampling rate of sFlow sampling. One packet is sampled from every <i>n</i> packets ( <i>n</i> equals the value of rate). The range is from 4,096 to 65,535. |

**Defaults** The default sFlow flow sampling rate is 8,192.

**Command Mode** Global configuration mode

**Default Level** 14

**Usage Guide** This command is used to configure the global sampling rate of sFlow flow sampling, and sFlow flow sampling of all interfaces uses this sampling rate.

**Configuration** The following example sets the sFlow flow sampling rate to 4,096.

**Examples**

```
Ruijie(config)# sflow sampling-rate 4096
```

**Verification** Use the **show sflow** command to display the sFlow flow sampling rate.

**Prompt Messages** N/A

**Common Errors** N/A

**Platforms** N/A

## 6.10 sflow source

Use this command to configure the source address of the output packets.

**sflow source { address { *ip-address* | ipv6 *ipv6-address* } } | { interface { *interface-name* | ipv6 *interface-name* } }**

Use this command to remove the source address of the output packets.

**no sflow source { address | interface }**

Use this command to restore the default source address of the output packets.

**default sflow source { address | interface }**

| Parameter Description | Parameter                         | Description                                              |
|-----------------------|-----------------------------------|----------------------------------------------------------|
|                       | <b>address</b>                    | Configures the source IP address of sFlow output packets |
|                       | <i>ip-address</i>                 | sFlow Source IPv4 address                                |
|                       | <b>ipv6</b> <i>ipv6-address</i>   | sFlow Source IPv6 address                                |
|                       | <b>interface</b>                  | Configures the source interface of sFlow output packets  |
|                       | <i>interface-name</i>             | sFlow Source interface (configured with an IPv4 address) |
|                       | <b>ipv6</b> <i>interface-name</i> | sFlow Source interface (configured with an IPv6 address) |

**Defaults** The default sFlow Source address is the local device IP address which is used to ping the destination IP

**Command Mode** Global configuration mode

**Default Level** 14

**Usage Guide** This command is used to configure the source IP address of the output packets. If a source interface is specified, the primary address of the interface will be the source IP address of the outputs packets. If the source interface is not specified or the IP address of the source interface is unreachable, for example, the interface is shutdown, the default source address will be used.

**Configuration Examples** The following example configures the source address of the sFlow output packets as 192.168.2.1.

```
Ruijie(config)# sflow source address 192.168.2.1
```

**Verification** Use the **show sflow** command to display the status of the sFlow sampling function.

**Prompt Messages** N/A

**Common Errors** N/A

**Platforms** N/A

## 6.11 show sflow

Use this command to display the sFlow configuration.

**show sflow**

| Parameter Description | Parameter | Description |
|-----------------------|-----------|-------------|
|-----------------------|-----------|-------------|

|     |     |
|-----|-----|
| N/A | N/A |
|-----|-----|

**Command Mode** Privileged EXEC mode/global configuration mode/interface configuration mode

**Default Level** 14

**Usage Guide** N/A

**Configuration Examples** The following example displays the sFlow configuration.

```
Ruijie(config)#show sflow
sFlow datagram version 5
Global information:
Agent IP: 10.10.10.10
sflow counter interval:30
sflow flow max-header:64
sflow sampling-rate:8192
Collector information:
ID  IP                               Port Size VPN
1   192.168.2.100                     6343 1400
2   NULL                               0    1400
Port information
Interface                               CID  FID  Enable
TenGigabitEthernet 0/1                 0    1    Y
TenGigabitEthernet 0/2                 0    1    N
```

Field Description:

| Field                  | Description                                                                                                                     |
|------------------------|---------------------------------------------------------------------------------------------------------------------------------|
| sFlow datagram version | sFlow datagram version.<br>Currently, Ruijie supports V5 only.                                                                  |
| Agent IP               | IP address of the sFlow Agent. It can be configured by using the sflow Agent address {ip-address   ipv6 ipv6-address } command. |
| sflow counter interval | Counter sampling interval                                                                                                       |
| sflow flow max-header  | The maximum length of bytes of the packet header to be copied                                                                   |
| sflow sampling-rate    | Flow sampling rate                                                                                                              |
| ID                     | sFlow Collector ID                                                                                                              |
| IP                     | The IP address of the sFlow Collector to receive sFlow datagram                                                                 |
| Port                   | Port No. of the sFlow Collector to receive sFlow datagram                                                                       |
| Size                   | The maximum length of the output sFlow datagram                                                                                 |
| VPN                    | VPN instance name of sFlow Collector                                                                                            |
| Interface              | An interface configured with sFlow function                                                                                     |
| CID                    | The destination sFlow Collector ID to which the sFlow Agent sends the counter samples.                                          |
| FID                    | The destination sFlow Collector ID to which the sFlow Agent sends the flow samples.                                             |

|        |                                           |
|--------|-------------------------------------------|
| Enable | The status of the sFlow sampling function |
|--------|-------------------------------------------|

**Prompt  
Messages**

N/A

**Platforms**

N/A