


IP Phone Accessory

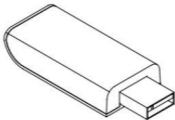

WFBT62 User Guide

Introduction

- Connect your IP phone to a Bluetooth headset
- Connect your IP phone to a wireless network
- Use one dongle for either of the two functions (Bluetooth and Wi-Fi), can't use both simultaneously

Assembling the WFBT62

Insert the WFBT62 to the USB port on the IP phone.

Connecting to the Wireless Network

1. Assemble the WFBT62 and LCD screen prompts “WiFi and Bluetooth Adapter Work As”, select **Wi-Fi**.
2. Press **Enter** soft key or Navigate as follows: **Menu** → **USB** → **Wi-Fi and Bluetooth Adapter** → **Wi-Fi**. Select **Manual mode** then press **Enter** soft key.
3. Turn on WiFi, phone will save and scan automatically.
4. Select **X Available Network(s)**. Select desired wireless network and then press **Connect** soft key.
5. (Optional.) Enter its password in the Password field.
6. Press **Connect** soft key. Once the connection completes successfully, the icon ✓ appears.

Connecting to the Bluetooth Headset

1. Turn on the Bluetooth headset and turn on pairing mode.
2. Assemble the WFBT62 and LCD screen prompts "WiFi and Bluetooth Adapter Work As", select **Bluetooth**.
3. Press **Save** soft key then press **Enter** soft key or Navigate as follows: **Menu** → **USB** → **Wi-Fi and Bluetooth Adapter** → **Bluetooth** after pressing **Back** soft key.
4. Turn on and press **Save** soft key and **Scan** soft key, phone will start searching for Bluetooth headsets.
5. Choose desired Bluetooth Device from list and press **Connect** soft key. If the Bluetooth Device is connected/paired successfully, you will see "Connect Success!" and successfully connected icon ✓.